

Outside unit Multi Connection Piping Kit Installation Manual

BHP26MA56 • 84

Component parts ■ This kit contains the following parts.

▶ Do not throw away any of the accessories until installation is complete. ▶

Table listing component parts for BHP26MA56 and BHP26MA84, including gas-side joints, liquid-side joints, and various reducers.


Selection Procedure

Table for selecting parts based on number of indoor units and field supply parts.

Installation examples




▶▶ To the piping installer

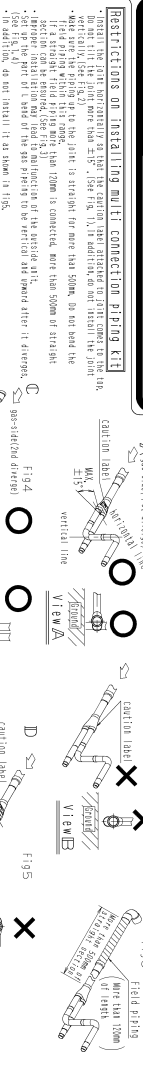

Restrictions on piping between outside units


1. Set it up to become the horizontal or uphill so that 1. gas pipe can collect in piping as for the piping between outside units.

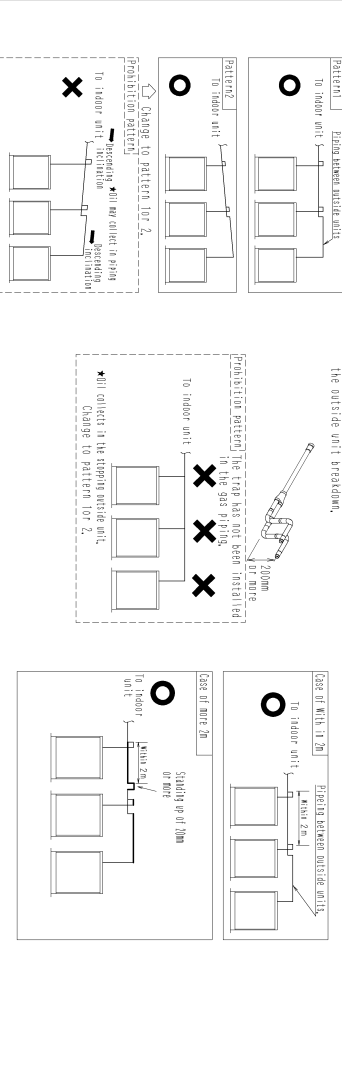

BHP26MA56 Installation Instructions

⚠ Caution

There are some restrictions on the interconnecting piping between the outside units. See the installation manual attached to the outside unit.

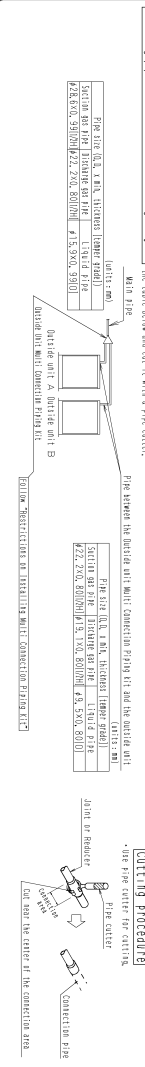


1 Installation examples Procedure for upper connection



1-1 Connection of gas and liquid pipes

Please be sure to read Restrictions on installing multi connection piping kit and Restriction on piping between outside units.

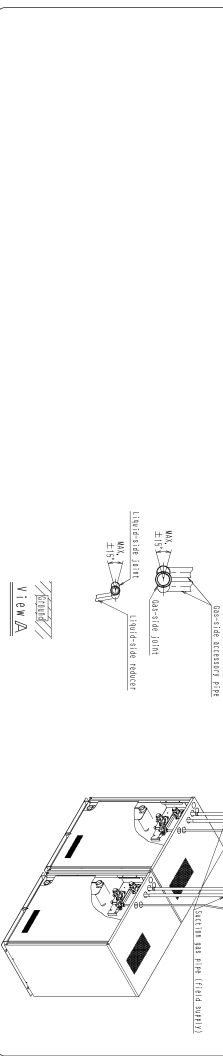

2 The work after the kit is connected

Connection of piping between the outside unit and the indoor unit


Air tight test



BHP26MA84 Installation Instructions

⚠ Caution


There are some restrictions on the interconnecting piping between the outside units. See the installation manual attached to the outside unit.

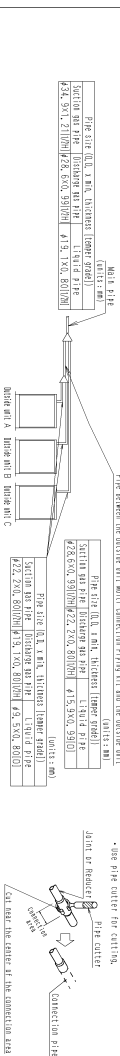

1 Installation examples Procedure for upper connection

1-1 Connection of gas and liquid pipes

Please be sure to read Restrictions on installing multi connection piping kit and Restriction on piping between outside units.

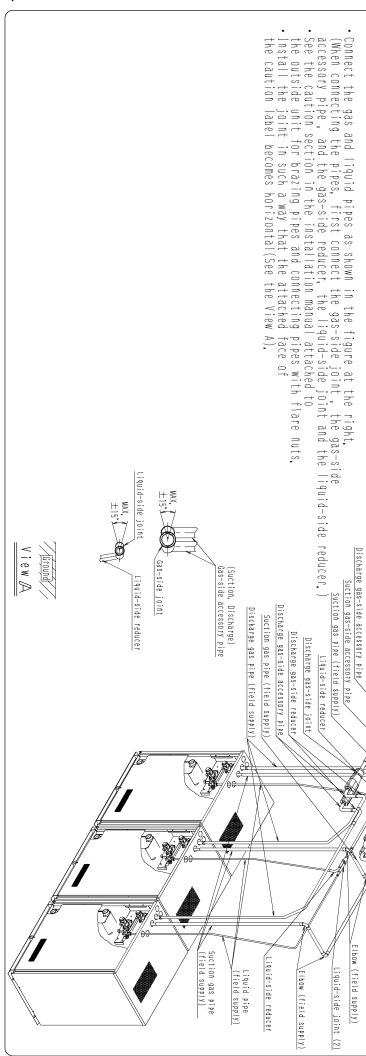

2 The work after the kit is connected

Connection of piping between the outside unit and the indoor unit

Air tight test

