
To fan coil

Socket S21

#### Constant on/off contact, "auto restart"

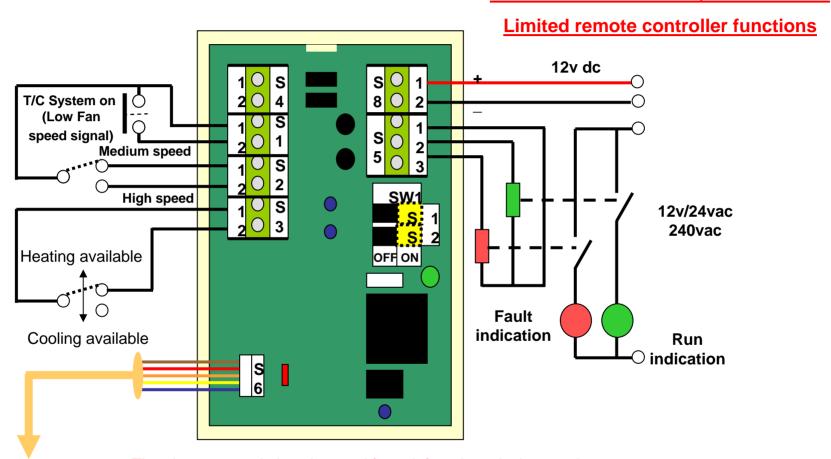


The above example is to be used for volt free time clock control constant contact, a remote Heat / cool input is required, and a remote Fan speed input.

The remote controller is now purely available for temperature adjustment and air flow direction, no other functions are available

To fan coil Socket S21


### Pulsed on/off contact, "auto restart", with

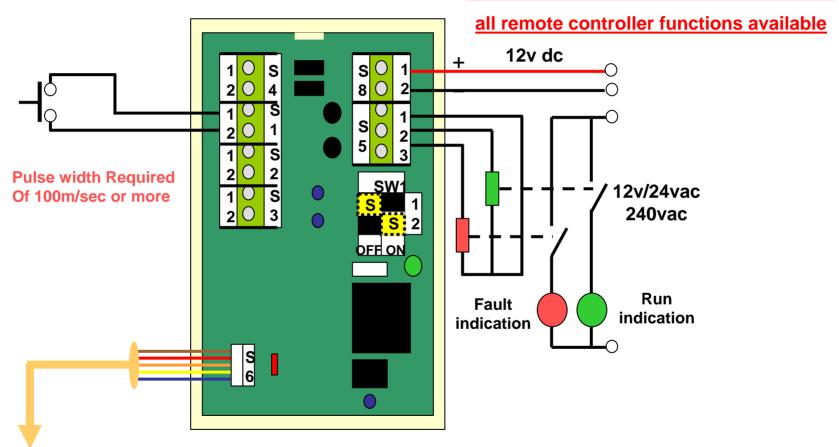

The above example is to be used for volt free time clock control pulsed contact

Socket S21


Pulsed on/off contact, "No auto restart", with

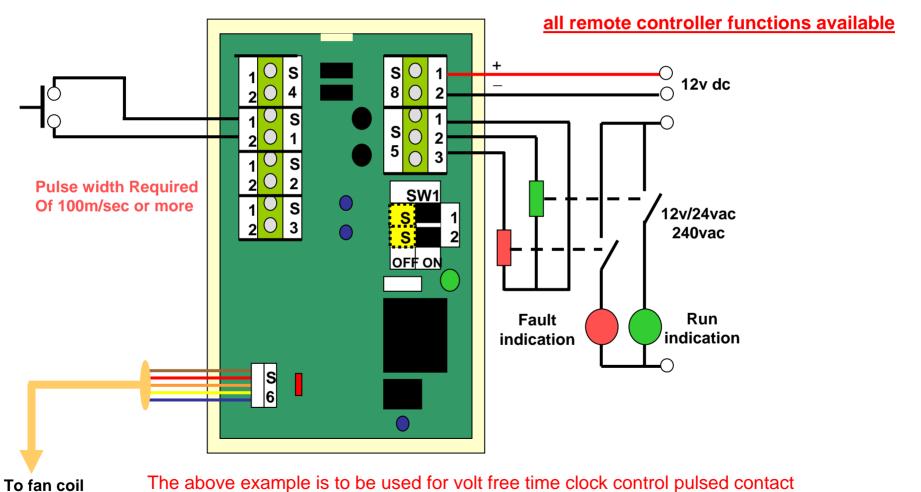

To fan coil

Socket S21


### **Constant contact from time clock**

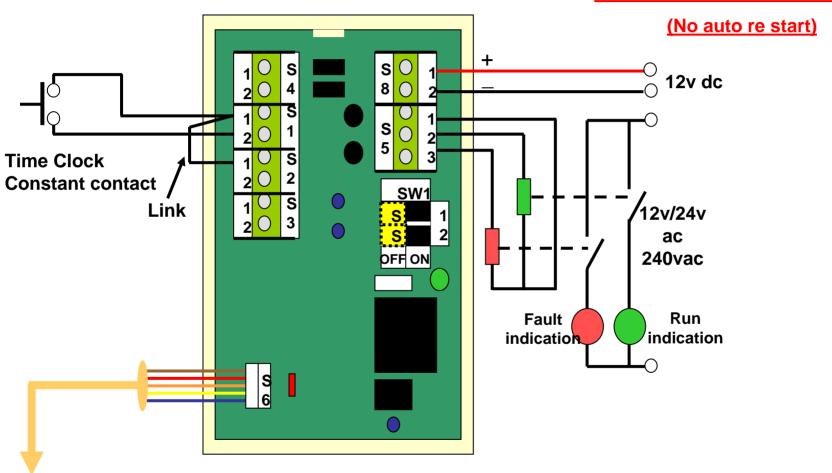

The above example is to be used for volt free time clock control constant contact

To fan coil Socket S21

### **Constant contact from time clock**

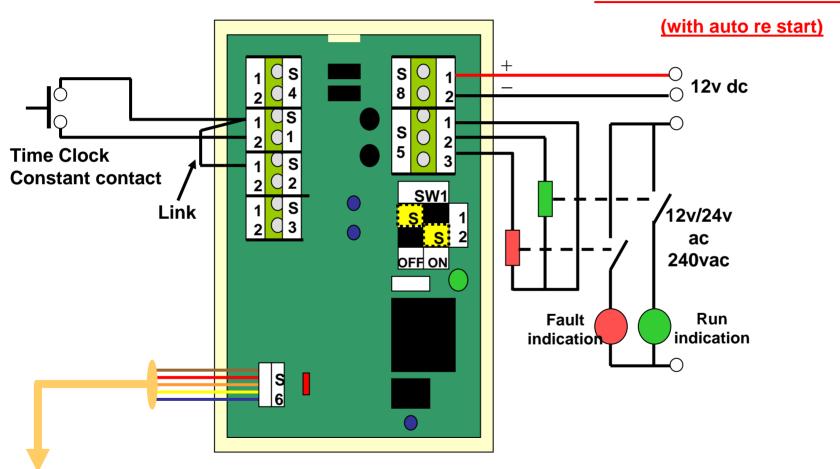

The above example is to be used for volt free time clock control constant contact