


Checking Attachments

Power Proportional Distribution Card includes the following attachments.

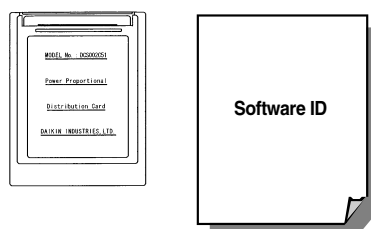

EM04A056

How to Connect

To activate the power proportional distribution function, it is necessary to set the program by use of the attached PCMCIA card and carry out a trial operation. Before use, consult your supplier.

EM04A056

28.3 DCS004A51 — Web Software


Functions and Outline

Using this software enables you to operate and monitor air conditioners linked to the intelligent Touch Controller on the Windows PC, which is connected with the intelligent Touch Controller and the Ethernet communication (LAN).

- * The intelligent Touch Controller functions as a Web server to visit the Website of the intelligent Touch Controller through the Internet Explorer, which is incorporated in the PC like as its standard software, thus making it possible to operate and monitor the air conditioners.

Furthermore, through the use of a mail server, if a malfunction occurs in any of the air conditioners which are linked to the intelligent Touch Controller, it will be able to transmit mails to a pre-assigned address to alert you to the malfunction.

For further information, contact our sales representatives.

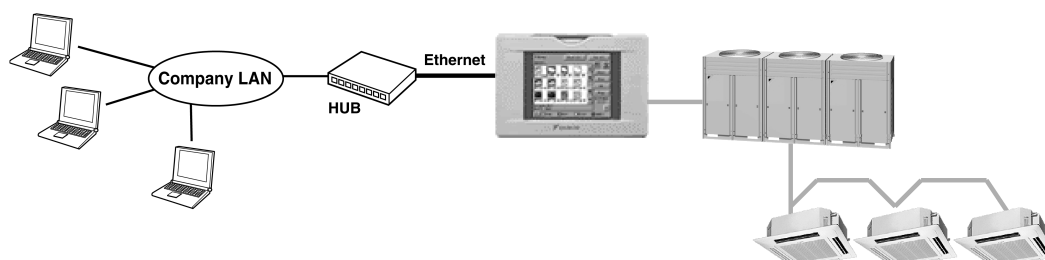

Web Interface of the intelligent Touch Controller**Permissions: Privileges Given to Each Login Name**

There are two categories of login users: General User who can perform basic operations via the web interface and Administrator who can setup the system and change system settings.

Two Display Modes

You can select the display mode from two modes during login process: the Basic mode which provides a simple and easy-to-use interface and the Advanced mode which allows you to use advanced setting options.

Start/Stop Operation

You can start or stop all the devices in a group, a zone, or multiple zones at a time.

Advanced Settings for Air Conditioners

You can set temperature, operation modes, direction of air flow, air volume, and remote controller mode of all devices in a group, a zone, or multiple zones.

Various Operation Modes

You can operate devices from a web interface, the intelligent Touch Controller console, or a local remote controller. Also the Administrator can permit or prohibit remote controller operations of devices in a specified group or zone using the web interface.

User Administration

The Administrator can register or delete General Users, who can operate air conditioners via the web interface, and set/change his/her own password and General Users' password.

Scheduling Function

The Administrator can precisely schedule operations for a specific group or zone of devices. Weekly schedule and 10 extra schedules can be created.

EM04A057