


USER GUIDE FOR THE DAIKIN CONTROLLER BRC1D527

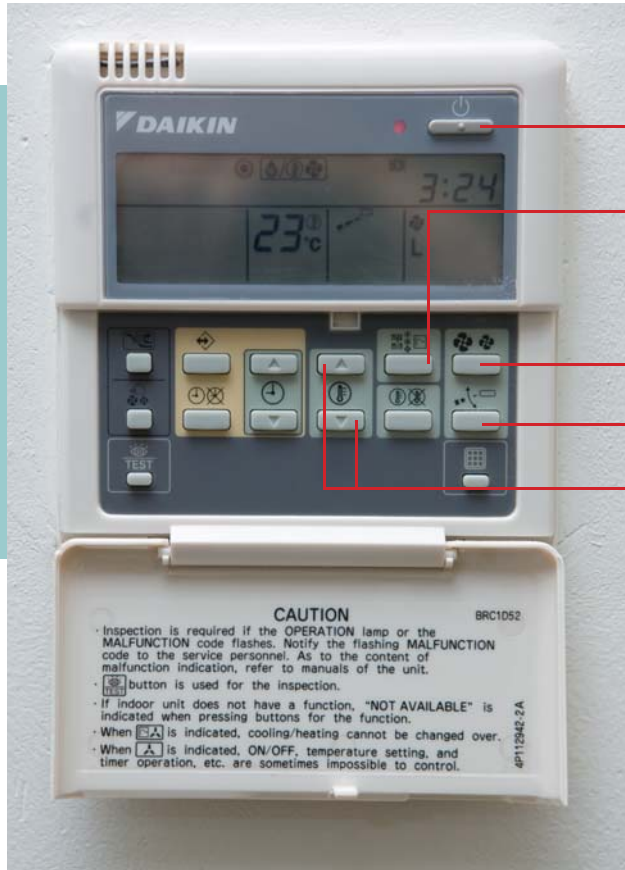

On / Off button



Automatic mode



Heating only mode



Cooling only mode



Fan only mode



FAN SPEED

Speed up or slow down the fan when not in automatic mode.



SWING LOUVRE (cassettes and wall mounts only)

Set the air flow direction to an angle of your choice/set the louvres to swing to and fro



TEMPERATURE

Raise or lower the temperature

Using your Daikin remote controller is simple, the only buttons you need are shown above. All others are for your service or maintenance engineer.

Look for the little icon on the screen when you change a setting.

If you set the system to your preferences and put it in 'Automatic' all you need to do is turn it on and off. If it has a time clock controlling it, it needs no further setting.

If the controller is on but the screen is blank, check the fuse or call your service company for help. If your unit fails to operate call your service company.