


**DAIKIN**




## **QUICK REFERENCE**

# Remote controller


**BRC1E51**

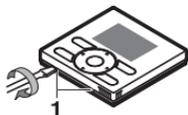


1

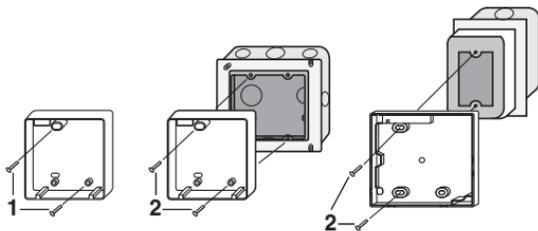


2

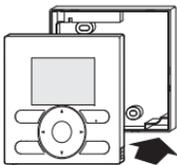



3

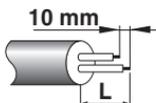

4

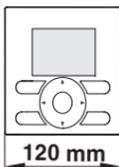



5

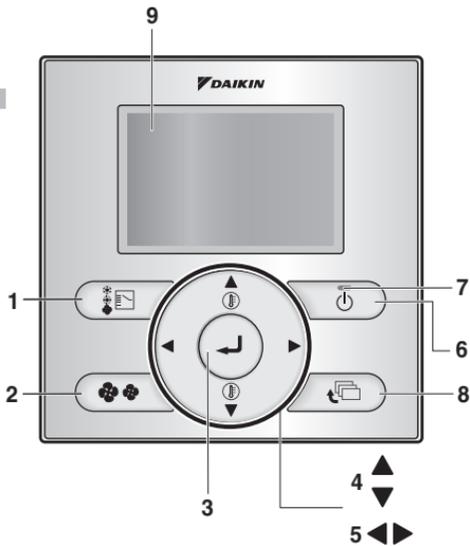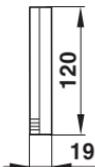

6



7

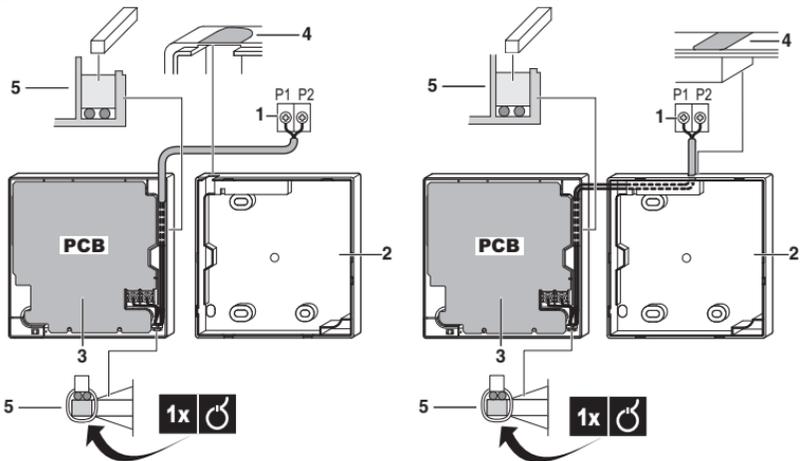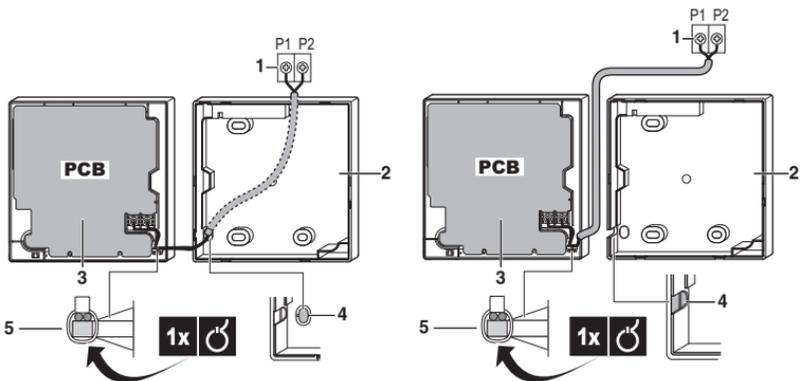

---

**INSTALLATION**

---

For the Operation part of this Quick reference refer to page 12.

The English text is the original instruction. Other languages are translations of the original instructions. Refer to the installation cd for more detailed information.

**Contents**

page

1. Safety Precautions.....	1
2. The kit includes the following parts: .....	2
3. Remove the upper part of remote controller .....	3
4. Fasten the remote controller .....	3
5. Wire the indoor unit.....	3
6. Reattach the upper part of the remote controller ..	4
7. Power on .....	4
8. Permission level function.....	5
9. Field settings .....	5
10. Test operation method (SkyAir only) .....	8
11. Checking of error records.....	9
12. Registration method of the service contact.....	10
13. Clock setting.....	10
14. Language changeover .....	11

---

**1. Safety Precautions**

---



**NOTE** Read this manual attentively before starting up or installing the unit. Also see the installation manual of the outdoor and indoor unit.

---

Please read these "Safety Precautions" carefully before installing the remote controller equipment.

Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment or personal injury.

If unsure of installation procedures or use, always contact your dealer for advice and information.

Do **NOT** install the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.



When the remote controller thermo function is used, select the installation location considering it should be a place:

- where the average temperature in the room can be detected,
- that is not exposed to direct sunlight,
- that is not near a heat source,
- that is not affected by outside air or air draught due to e.g. door opening/closing,
- where the display is kept clean.
- where the front is kept clear.
- where the temperature is between -10°C and 50°C.
- where the relative humidity is maximum 95%.



Do **NOT** install the remote controller:

- Near machinery emitting electromagnetic radiation. Electromagnetic radiation may disturb the operation of the control system and result in a malfunction of the unit.
- In moist areas or places where it may be exposed to water. If water enters the remote controller, electric shocks may be caused and the inner electronics may fail.





After finishing installation:

- conduct a trial operation to check for faults,
- explain the customer how to operate the remote controller, using the Operation part of this Quick Reference,
- ask the customer to store the cd and the quick reference for future reference. The cd contains detailed installation and operation information.

## Warning

Consult your local dealer regarding relocation and reinstallation of the remote controller. Improper installation work may result in electric shocks, leaks or fire.

## 2. The kit includes the following parts:

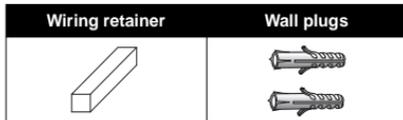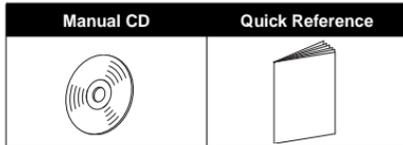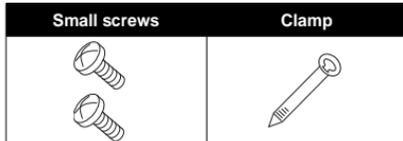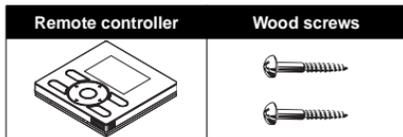

### 3. Remove the upper part of remote controller (Refer to figure 1)

Insert a minus screwdriver into the slots (1) in the lower part of the remote controller (2 places), and remove the upper part of the remote controller.



The PCB is mounted in the upper part of the remote controller. Be careful not to damage the board with the minus screwdriver.

### 4. Fasten the remote controller (Refer to figure 2)

- 1 for exposed mounting, fasten with the two included wood screws ( $\varnothing 3.5 \times 32$ ) and plugs.
- 2 for flush-mounting, fasten with the two included machine screws (M4x16).

For the field supplied switch box, use optional accessory KJB111A or KJB211A.

#### NOTE



Put on a flat surface. Be careful not to distort the shape of the lower part of the remote controller by overtightening the mounting screws.

### 5. Wire the indoor unit (Refer to figure 8)

Wired from the rear (Refer to figure 8.1).

Wired from the left (Refer to figure 8.2).

Wired from the top (Refer to figure 8.3).

Wired from the top center (Refer to figure 8.4).

- 1 indoor unit
- 2 lower part of the remote controller
- 3 upper part of the remote controller

4 notch the part for the wiring to pass through with nippers, etc.

5 secure the wiring to the uppercase using the wiring retainer and clamp.

Connect the terminals on the remote controller (P1, P2), and the terminals of the indoor unit (P1, P2). (P1 and P2 do not have polarity.)

#### NOTE



When wiring, run the wiring away from the power supply wiring in order to avoid receiving electric noise (external noise).

### Wiring specifications

Wiring type	Size	Max total length
Sheathed vinyl cord or cable	0.75–1.25 mm <sup>2</sup>	500 m

#### NOTE



1. Peel the sheath for the part that has to pass through the inside of the remote controller case (L). Refer to figure 4 and the table below. It is important to keep double isolation up through the notch of the remote controller case.
2. For easy wiring, it's better to keep ca. 10 mm difference between the length of the two wires.

Wiring outlet	L
Top outlet	Ca. 150 mm
Top center outlet	Ca. 200 mm

## 6. Reattach the upper part of the remote controller



Be careful not to pinch the wiring when attaching.

Refer to figure 3:

Align the upper case with the tabs of the lower case (6 points), inset and install the upper case.

First begin fitting from the clips at the bottom.


### NOTE



1. The switch box and wiring for connection are not included.
2. Do not directly touch the PCB with your hand.

## 7. Power on


- 1 Put on the power.
- 2 **Connection under check Please wait for a moment** is displayed.

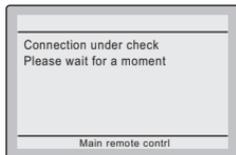


- 3 After a few seconds, the basic screen is displayed.

## If controlling one indoor unit or one group of indoor units with two remote controllers

- 1 Put on the power for both remote controllers.
- 2 Determine which one is the sub/main remote controller.
- 3 When **Error code:U5 - Connection under check Please wait for a moment** is displayed on both remote controllers, push and hold the  button of the sub remote controller for 4 seconds.

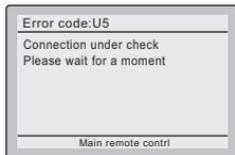

- 4 The sub remote controller now displays **Sub remote contrl.**

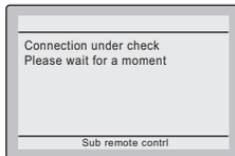

- NOTE** The main remote controller still displays **Main remote contrl.**



- 5 After a few seconds, the basic screen is displayed.

## 8. Permission level function

- If required, you can limit the user action by restricting the number of operable buttons. (Refer to the chapter "Field settings" on page 5).

Level	Operable buttons
1	All
2	<ul style="list-style-type: none"><li>• Up/down button</li><li>• On/off button</li><li>• Operation mode selector button</li></ul>
3	<ul style="list-style-type: none"><li>• On/off button</li></ul>

**NOTE** When pushing a non-operable button, the



key icon will be displayed.

- For switching between level 1 permission and the selected level in service, proceed as follows (refer to figure 7):


- 1 Keep the ► button pressed,
- 2 and push the 3 other indicated keys simultaneously while keeping the ► button pressed.

- If you want to limit the user action on the remote controller to be defined as "sub", start with only connecting this controller to the unit. Make sure that this controller is set to "main" (factory set) first, change the permission level to the setting you prefer and only then set the remote controller to "sub" (Refer to the chapter "Field settings" on page 5).

You can now proceed with connecting the remote controller to be defined as "main".

## 9. Field settings


If optional accessories are mounted on the indoor unit, the indoor unit setting may have to be changed. Refer to the instruction manual for each optional accessory.

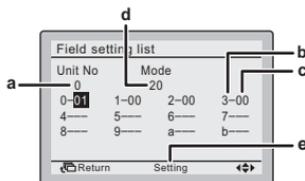

- a Unit No
- b First Code No
- c Second Code No
- d Mode
- e Field set mode

### Procedure

- 1 Press and hold the  button for four seconds to enter the **Field setting** menu.
- 2 Use the ▼▲ buttons to select **Field setting list** and push the  button.

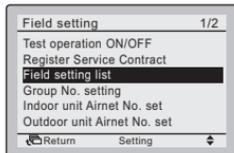



Mode Note 1	FIRST CODE NO.	Description of setting		SECOND CODE NO. Note 2					
				01	02	03	04		
10(20)	0	Filter Contamination - Heavy/Light (Setting for spacing time of display time to clean air filter) (Setting for when filter contamination is heavy, and spacing time of display time to clean air filter is to be halved)	Ultra long life filter	Light	Approx. 10,000 hrs.	Heavy	Approx. 5,000 hrs.	—	—
			Long life filter		Approx. 2,500 hrs.		Approx. 1,250 hrs.		
			Standard filter		Approx. 200 hrs.		Approx. 100 hrs.		
	1	Long-life filter type (setting of filter sign indication time). (Change setting when ultra-long filter is installed)	Long-life filter	Ultra-long life filter	—	—			
2	Thermostat sensor in remote controller	Use	Not use	—	—				
3	Spacing time of display time to clean air filter count (setting for when the filter sign is not to be displayed)	Display	Do not display	—	—				
11(21)	0	Setting number of connected Sky Air simultaneous operation system indoor units (setting for simultaneous operations system)	Pair	Twin	Triple	Double twin			
12(22)	1	ON/OFF input from outside (setting for when forced ON/OFF is to be operated from outside).	Forced OFF	ON/OFF operation	—	—			
	2	Thermostat differential changeover (setting for when using remote sensor).	1°C	0.5°C	—	—			
13(23)	0	High air outlet velocity (for high ceiling applications).	≤2.7 m	>2.7≤3.0 m	>3.0≤3.5 m	—			
	1	Selection of air flow direction (setting for when a blocking pad kit has been installed).	4-way flow	3-way flow	2-way flow	—			
	3	Selection of air flow function (setting for when using a decoration panel for outlet).	Equipped	Not equipped	—	—			
	4	Air flow direction range setting.	Upper	Normal	Lower	—			
	6	Setting the external static pressure (setting according to the connected duct resistance)	Normal	High static pressure	Low static pressure	—			
15(25)	3	Drain pump operation with humidifying.	Equipped	Not equipped	—	—			

Mode Note 1	FIRST CODE NO.	Description of setting	SECOND CODE NO. Note 2			
			01	02	03	04
1c	1	Thermostat sensor in remote controller (for limit operation and Home leave function only)	Not use	Use	—	—
	3	Permission level setting	Level 2	Level 3	—	—
1e	2	Home leave function	Not permitted	Permitted	—	—

**NOTE** 1. Second code No. at factory shipment is set to "01". However in the following cases it is set to "02".




- Airflow direction range (except round flow cassette)
  - Thermostat sensor in remote controller (SkyAir only)
  - Thermostat sensor in remote controller for limit operation and Home leave function only
2. Any function that is not available on the indoor unit is not displayed.

## 10. Test operation method (SkyAir only)


For the Test Operation procedure, please refer to the Installation Manual of the unit.

### 10.1 How to activate test operation

- 1 Press and hold the  button for four seconds to enter the **Field setting** menu.
- 2 Use the   buttons to select **Test operation ON/OFF** and push the  button.

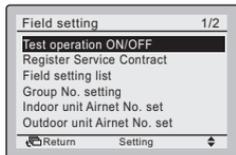

- 3 **Test operation** is displayed on the bottom of the screen.

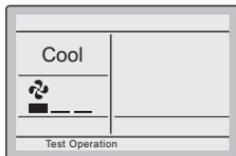


- 4 Push the  button within 10 seconds to start the test operation.

### 10.2 How to check air flow direction

- 1 Push the  button to enter the **Main Menu**.

- 2 Use the **▼▲** buttons to select **Airflow direction** and push the **↵** button.

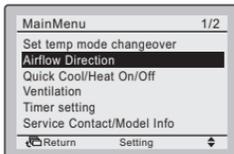


- 3 Check that the air flow direction is actuated according to the setting and push the **↵** button.




### 10.3 How to deactivate test operation

- 1 Press and hold the **☰** button for four seconds to enter the **Field setting** menu.
- 2 Use the **▼▲** buttons to select **Test operation ON/OFF** in the menu and push the **↵** button.

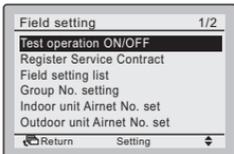

## 11. Checking of error records


- 1 Press and hold the **☰** button for four seconds to enter the **Field setting** menu.
- 2 Use the **▼▲** buttons to select **Error record** and push the **↵** button.

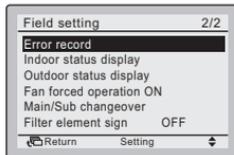

- 3 Use the **▼▲** buttons to select **Remote controller record** and push the **↵** button.




- 4 The 10 latest errors and their Unit No. are displayed in order.

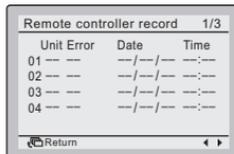

## 12. Registration method of the service contact

- 1 Press and hold the  button for four seconds to enter the **Field setting** menu.
- 2 Use the  buttons to select **Register Service Contract** and push the  button.

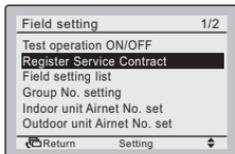

- 3 Use the  buttons to select **Register Service Contract** and push the  button.



- 4 Use the  and  buttons to enter the telephone number.




- 5 Push the  button to display the confirmation screen.
- 6 Use the  buttons to select **Yes** and push the  button.


**NOTE** To check the registered service contact, push the  button and select **Service Contact/Model Info** in the **MainMenu**.

## 13. Clock setting

- 1 Push the  button to enter the **MainMenu**.
- 2 Use the  buttons to select **Clock setting** and push the  button.

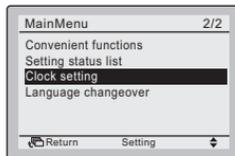

- 3 Use the  and  buttons to select and set **Year, Month, Day, and time**.

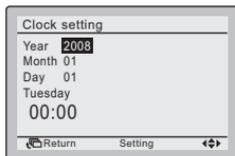

- 4 Push the  button to display the confirmation screen.
- 5 Use the  buttons to select **Yes** and push the  button.



---

## OPERATION

---

The English text is the original instruction. Other languages are translations of the original instructions.

Refer to the operation cd for more detailed information.

### Contents

	<u>page</u>
1. Safety Precautions .....	12
3. Name and function of switches .....	13
4. Name and function of icons .....	14
5. Description of the operation modes .....	16
6. Basic operation method .....	17
7. Description of the items in the main menu .....	18
8. Main menu structure .....	19
9. Limit operation .....	21
10. Airflow direction setting .....	21
11. Quick cooling/heating ON/OFF (SkyAir only)....	21
12. Ventilation setting .....	21
13. Timer setting .....	22
14. Service contact/model information .....	25
15. Convenient functions .....	25
16. Setting status list .....	26
17. Clock setting .....	26
18. Language changeover .....	26
19. Error code display .....	26

---

## 1. Safety Precautions

---

**NOTE** Also see operation manual attached to the outdoor and indoor unit.



Please read these “Safety Precautions” carefully before installing air conditioning equipment and be sure to install it correctly.

Failure to follow these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.



Do **NOT** play with the unit or its remote controller. Accidental operation by a child may result in impairment of bodily functions and harm health.



Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer or authorized contactor for internal inspections and adjustments.



To avoid electric shocks, do not operate with wet hands.

---

## Warning

- Do **NOT** modify or repair the remote controller. This may result in electric shocks or fire. Consult your Daikin dealer.
- Do **NOT** relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.
- Do **NOT** use flammable materials (e.g. hairspray or insecticide) near the product. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause crack damage to the product, electric shocks, or fire.

## 2. Features and functions

The BRC1E51 is a state of the art remote controller that offers full control over your installation.

### 1 BASIC REMOTE CONTROLLER

The basic remote controller functions are:

- ON/OFF,
- operation mode change-over,
- temperature adjustment,
- air volume adjustment
- air flow direction adjustment.

### 2 CLOCK FUNCTION

The clock functions are:

- 24 hours real time clock,
- automatic daylight saving time.

### 3 SCHEDULE TIMER FUNCTION

The schedule timer functions are:

- a maximum of 5 actions can be programmed for each day of the week,
- schedule timer can be enabled/disabled at any time,
- linked to a set temperature or a LIMIT operation or an OFF operation,

- "last command" overrides previous command until next scheduled command.

### 4 LIMIT OPERATION

Limit operation provides thermostat control within the range of the set minimum and maximum temperature. The minimum temperature setting will trigger heating, the maximum temperature setting will trigger cooling.

### 5 HOME LEAVE

The home leave function prevents the room temperature from dropping when the occupants are out for a longer period. If the room temperature drops below 10°C, heating is started automatically. As soon as 15°C is reached, the controller returns to its original status.

### 6 BUTTON PERMISSION LEVEL

Three hierarchical permission levels can be set to limit the user action.

### 7 DETAILED DISPLAY POSSIBILITY

Additionally possible to display the outdoor temperature or room temperature.

## 3. Name and function of switches

(Refer to figure 6)

### 1 OPERATION MODE SELECTOR BUTTON

Push this button to select the operation mode of your preference.

### 2 FAN SPEED CONTROL BUTTON

Push this button to select the high or low fan speed.

### 3 MENU/ENTER BUTTON

This button is used to enter the main menu or the selected setting item.

#### 4 UP/DOWN BUTTON

These buttons are used to raise/lower the set temperature, to highlight the next item on the upper/lower side or to change the selected item.

#### 5 RIGHT/LEFT BUTTON

These buttons are used to highlight the next item on the right/left-hand side or to enable the home leave settings (when kept pressed for four seconds).

#### 6 ON/OFF BUTTON

Push the ON/OFF button to start or stop the system.

**NOTE** This is the only button that works when the backlight is not lit. All other buttons only work when the backlight is lit.

#### 7 OPERATION LAMP

The operation lamp lights up during operation or blinks if a malfunction occurs.

#### 8 CANCEL BUTTON

Push this button to return to the previous screen.


#### 9 LCD (with backlight)

When pushing any operation button, the backlight will be lit for approximately 30 seconds. When one indoor unit is controlled by two remote controllers, the backlight of the remote controller operated earlier than the other one will be lit.


## 4. Name and function of icons

To change between the Standard display and the Detailed display refer to the chapter "How to select the display" on page 25.

#### Standard display

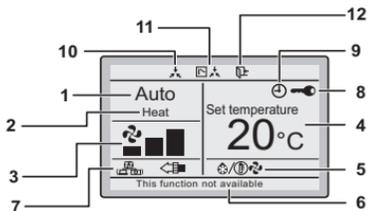

#### Detailed display

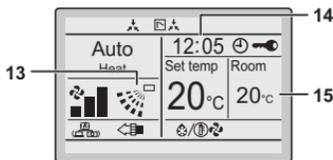

#### 1 OPERATION MODE

This indicates the current operation mode (**Cool, Heat, Vent, Fan, Dry, or Auto**).

#### 2 AUTOMATIC OPERATION MODE

This indicates the current automatic operation mode (**Cool or Heat**).

### 3 FAN SPEED

This indicates the fan speed that is set for the air conditioner. If the air conditioner does not have fan speed control function, the fan speed will not be displayed.

### 4 SET TEMPERATURE DISPLAY

This indicates the temperature that is set for the air conditioner.

### 5 DEFROST/HOT START

This icon indicates that the defrost/hot start mode is active.

### 6 MESSAGE

Following messages can be displayed:

#### **This function is not available**

Is displayed for a few seconds when an operation button is pushed and the function is not available on the indoor unit (for a number of indoor units, the message will only appear if none of the units has this function).

#### **Error: Press Menu Button**

#### **Warning: Press Menu Button**

Is displayed when error or warning is detected.

#### **Quick Cool/Heat (SkyAir only)**

Indicates that the quick cooling/heating function is turned ON.

#### **Clean the filter**

#### **Clean the element**

#### **Clean the filter and element**

Indicates that the filter or element should be cleaned.

### 7 VENTILATION/CLEANING

■ Ventilation mode icons    indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).

■ AIR Cleaning unit icon  indicates that the air cleaning unit (option) is operational.

### 8 DISPLAY

Indicates that the key lock is set or a permission level is set.

### 9 DISPLAY

Indicates that schedule timer or OFF reminder timer is enabled.

### DISPLAY

Indicates that the clock needs to be set. The schedule timer function will not work until the clock is set.

### 10 EXTERNAL CONTROL ICON

This icon indicates that another controller with higher priority is controlling or disabling your installation.

### 11 CHANGEOVER UNDER CENTRALISED CONTROL ICON

This icon indicates that the changeover of the installation is under centralised control assigned to another indoor unit or optional cool/heat selector connected to the outdoor unit (= master remote controller).

### 12 HOME LEAVE ICON

The home leave icon shows the status of the home leave function.

ON	Leave home is enabled
FLASHING	Leave home is active
OFF	Leave home is disabled

### 13 AIRFLOW DIRECTION

Is displayed when the airflow direction and swing are set.

### 14 CLOCK (24 Hours real time clock)

Is displayed when the clock is set. If the clock is not set, -:- is displayed.

### 15 DETAILED SELECTION

Is displayed when the detailed display items are selected.

## 5. Description of the operation modes

### 1 FAN ONLY OPERATION

In this mode, air only circulates without heating or cooling.

### 2 DRY OPERATION

In this mode, the air humidity will be lowered with a minimal temperature decrease.

The temperature and fan speed are controlled automatically and cannot be controlled by the remote controller.

Dry operation will not function if the room temperature is too low.

### 3 AUTOMATIC OPERATION

In this mode, the controller will automatically switch between heating and cooling as required by the setpoint.

### 4 COOLING OPERATION

In this mode, cooling will be activated as required by the setpoint or limit operation.

### 5 HEATING OPERATION

In this mode, heating will be activated as required by the setpoint or limit operation.

### Hot start (heat pump types only)

At the start of a heating operation, the indoor fan is stopped until a certain indoor heat exchanger temperature is reached and  is displayed. This prevents cold air from leaving the indoor unit.

### Defrost (heat pump types only)

In heating operation, freezing of the outdoor heat exchanger may occur. If so, the heating capacity of the system lowers and the system goes into defrost operation. The indoor unit fan stops and  is displayed. After maximum 10 minutes of defrost operation, the system returns to heating operation again.

### 6 VENTILATION (HRV only)

The ventilation mode operates the HRV; refer to the HRV manual for more details.


### 7 LIMIT OPERATION $\text{min } ^\circ\text{C}$ & $\text{max } ^\circ\text{C}$

Limit operation is an additional mode that enables to keep the room temperature within certain limits. The  $\text{min } ^\circ\text{C}$  &  $\text{max } ^\circ\text{C}$  icons are displayed to confirm the activation of the limit operation (Not available for cooling-only installations).

### 8 HOME LEAVE

HOME LEAVE is a feature that enables to keep the room temperature above 10°C when the occupants are out. This function will switch on heating if the installation is switched off.

## 6. Basic operation method

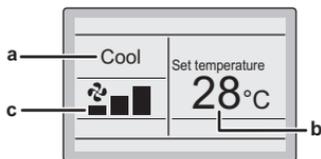

- a Operation mode
  - b Temperature
  - c Fan speed
- 1 Push the  button several times until the desired operation mode **Cool**, **Heat**, **Vent**, **Fan**, **Dry**, or **Auto** is selected.
  - 2 Push the  button. The operation lamp will light and the system starts operating.
  - 3 Use the  buttons to set the temperature.

**NOTE** When in **Fan**, **Dry**, or **Vent** mode, the temperature can not be set.



- 4 Push the  button to select the desired fan speed from Low, Middle, or High.




**NOTE** When in **Dry** or **Vent** mode, the fan speed can not be set.



- 5 Push the  button. The operation lamp will turn off and the system stops operating.

### Additional features of the controller:

- 1 HOME LEAVE
- 1 Push and hold the  or  button for four seconds to enable the Home leave mode. The Home leave icon is displayed.

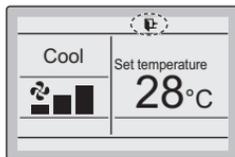


**NOTE** Redo this procedure to disable the Home leave mode.



## 2 KEY LOCK

- 1 Push the  button for four seconds to enable the key lock mode. The key lock icon is displayed.

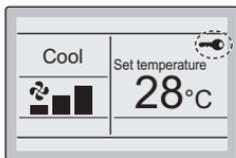

- 2 To cancel the key lock mode, push the  button for four seconds. The key lock icon disappears.

## 7. Description of the items in the main menu

### 1 SET TEMP MODE CHANGEOVER

This allows you to choose between normal set temperature and limit operation.

### 2 AIRFLOW DIRECTION

Is used to set the airflow direction. The airflow direction blades are automatically operated up and down (left and right).

### 3 QUICK COOLING/HEATING ON/OFF

Is used to quickly set the room temperature to a comfortable temperature.

### 4 VENTILATION

Is used to set the ventilation rate and the ventilation mode (HRV only).

## 5 TIMER SETTING

### Schedule Timer

This allows you to set the operation start/stop time for any day of the week. It is possible to set up to 5 actions per day. Both operation modes (normal operation and limit operation) can be selected. Additionally the holiday settings can be set.

### OFF Reminder Timer

This allows you to set each operation period of the system in a range of 30 - 180 minutes. The system is turned off automatically after the selected time (each time the system is activated).

6 SERVICE CONTACT/MODEL INFORMATION  
Is used to display the service contact and the model information.

### 7 CONVENIENT FUNCTIONS

This allows you to set the LCD contrast. You can also switch between standard and detailed display. When detailed display is selected, the detailed display settings can be changed.

### 8 SETTING STATUS LIST

This shows a list of the current settings for the available items.


### 9 CLOCK SETTING


This allows you to set the date and time.

### 10 LANGUAGE CHANGEOVER


This allows you to set the displayed language.

## 8. Main menu structure

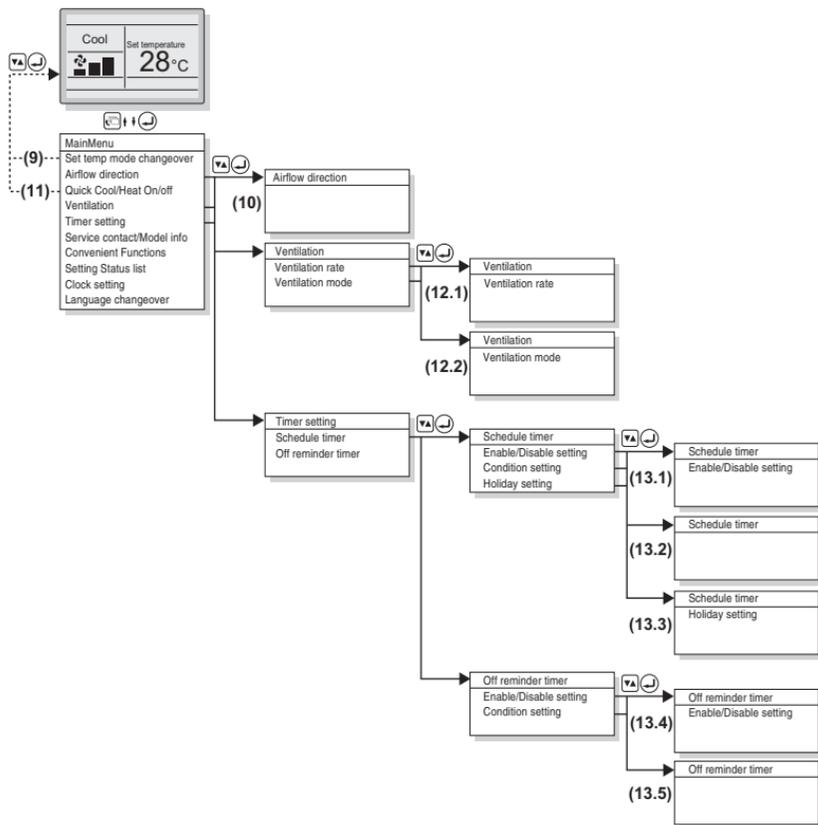

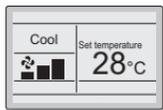


- MainMenu**
- Set temp mode changeover
  - Airflow direction
  - Quick Cool/Heat On/off
  - Ventilation
  - Timer setting
  - Service contact/Model info
  - Convenient Functions
  - Setting Status list
  - Clock setting
  - Language changeover

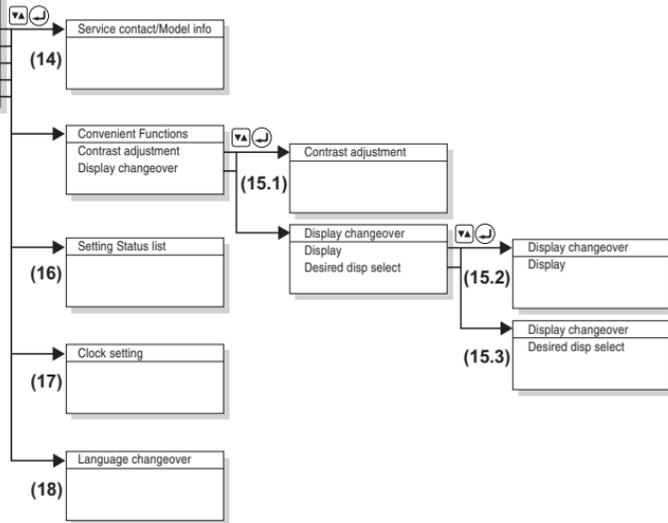


## 9. Limit operation

- 1 Display the **MainMenu**. Proceed step (9) to display the basic screen with limit operation temperatures (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the **▼▲** buttons to change the set temperature.
- 3 Push the **◀▶** buttons to toggle between **min** and **max** temperature.

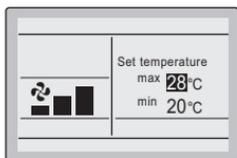

## 10. Airflow direction setting


- 1 Display the **Airflow Direction** setting screen (10) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the **◀▶** buttons to change the setting to 90 or 180 degrees swing angle.
- 3 Use the **▼▲** buttons to change the setting to **Swing, Pos. 0, Pos. 1, Pos. 2, Pos. 3, and Pos. 4.**

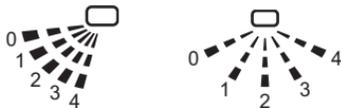

- 4 Push the **↵** button to confirm the setting. Basic screen is displayed.

## 11. Quick cooling/heating ON/OFF (SkyAir only)

- 1 Display the **MainMenu** and proceed step (11) to display the basic screen (Refer to the chapter "Main menu structure" on page 19).
- 2 **Quick Cool/Heat** will appear on the basic screen when the Quick Cool/Heat function is turned ON.

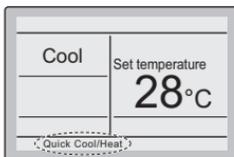

**NOTE** Redo this procedure to turn Quick Cool/Heat function off.




## 12. Ventilation setting

Only in case HRV is connected. Refer to the HRV manuals for more information.

### 12.1 How to change the ventilation rate

- 1 Display the **Ventilation rate** settings screen (12.1) (Refer to the chapter "Main menu structure" on page 19).


- Use the **▼▲** buttons to change the setting to **Low** or **High**.

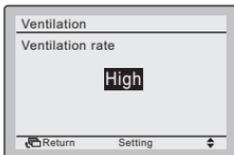

- Push the **↵** button to confirm the setting. Basic screen is displayed.

### 12.2 How to change the ventilation mode

- Display the **Ventilation mode** settings screen (12.2) (Refer to the chapter "Main menu structure" on page 19).
- Use the **▼▲** buttons to change the setting to **Bypass**, **Heat exchange**, or **Automatic**.

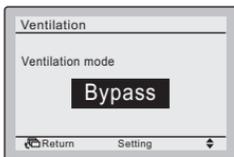

- Push the **↵** button to confirm the setting. Basic screen is displayed.

## 13. Timer setting

### 13.1 How to enable/disable the schedule timer

- Display the **Enable/Disable setting** screen (13.1) (Refer to the chapter "Main menu structure" on page 19).


- Use the **▼▲** buttons to change the setting to **Enable** or **Disable**.




- Push the **↵** button to display the confirmation screen.
- Use the **◀▶** buttons to select **Yes** and push the **↵** button.

### 13.2 How to use the condition setting

- Display the Condition setting screen (13.2) (Refer to the chapter "Main menu structure" on page 19).
- Use the **▼▲** buttons to set the day (1).
- Use the **◀▶** buttons to highlight the Operation **Time** and the **▼▲** buttons to set the desired Operation **Time** (2).

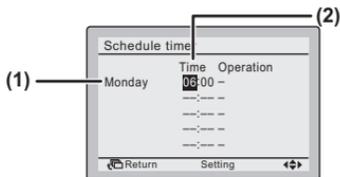

- 4 Use the ◀▶ buttons to highlight the **Operation** and the ▼▲ buttons to select the desired **Operation**.

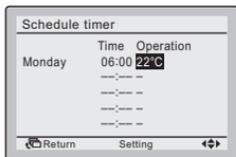


**NOTE** There are 4 types of operations:




1. Switch on the installation at a scheduled time, in combination with a set point.
2. Switch on the installation at a scheduled time, in limit operation.
3. Switch off the installation at a scheduled time.
4. In this case the status remains unchanged.

- 5 When the selected operation is a set point (1), push the ↵ button and use the ▼▲ buttons to change the set temperature. Push the ↵ button to confirm the set temperature.

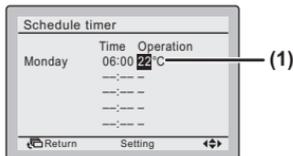

- 6 When the selected operation is a limit operation (2), push the ↵ button and use the ◀▶ buttons to toggle between the minimum and maximum temperature to be set. Use the ▼▲ buttons to change the set temperature. Push the ↵ button to confirm the set temperature.

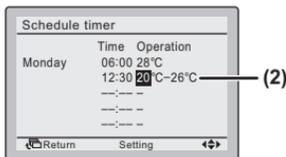


- 7 To set a different day of the week, use the ◀▶ buttons to highlight the day. Use the ▼▲ buttons to change the day.
- 8 To copy all actions of the day previously set, push the  button.

**NOTE** Actions will only be copied when the day is highlighted.



- 9 When the entire schedule timer settings are completed, highlight an item that is not an operation.

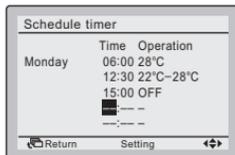


- 10 Push the  button to display the confirmation screen.
- 11 Use the   buttons to select **Yes** and push the  button.

### 13.3 How to use the holiday setting

The schedule timer will be disabled for the days that have been set as holiday.

- 1 Display the **Holiday setting** screen (13.3) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the   buttons to select the desired day. Push the   buttons to display  to set the holiday.

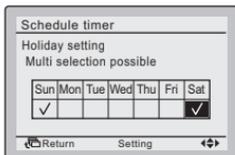


- 3 Push the  button to display the confirmation screen.
- 4 Use the   buttons to select **Yes** and push the  button.

### 13.4 How to enable/disable the OFF reminder timer

- 1 Display the **Enable/Disable setting** screen (13.4) (Refer to the chapter "Main menu structure" on page 19).


- 2 Use the   buttons to change the setting to **Enable** or **Disable**.

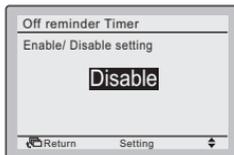

- 3 Push the  button to display the confirmation screen.
- 4 Use the   buttons to select **Yes** and push the  button.

### 13.5 How to use the condition setting


- 5 Display the Condition setting screen (13.5) (Refer to the chapter "Main menu structure" on page 19).
- 6 Use the   buttons to set the time from operation start until the unit automatically stops.

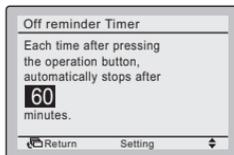

- 7 Push the  button to display the confirmation screen.
- 8 Use the   buttons to select **Yes** and push the  button.

## 14. Service contact/model information

- 1 Display the **Service Contact/Model Info** screen (14) (Refer to the chapter "Main menu structure" on page 19).
- 2 The phone number for the **Contact address** will appear at the top of the screen. The model info of the **Indoor unit** and **Outdoor unit** of your product will appear on the bottom of the screen.

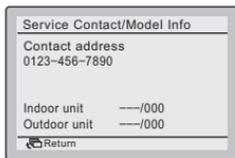


- 3 Push the  button to return to the **MainMenu**.

## 15. Convenient functions

### 15.1 How to adjust the contrast of the LCD


- 1 Display the **Contrast adjustment** settings screen (15.1) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the  buttons to change the contrast of the LCD.

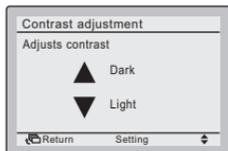

- 3 Push the  button to confirm the setting. Basic screen is displayed.

### 15.2 How to select the display


- 1 Display the **Display** settings screen (15.2) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the  buttons to change the setting to **Standard** or **Details**.

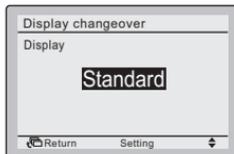

- 3 Push the  button to confirm the setting. Basic screen is displayed.

### 15.3 How to select the detailed display selection


- 1 Display the **Desired disp select** settings screen (15.3) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the  buttons to change the setting to **None**, **Outdoor temperature**, **Room temperature** or **System**.

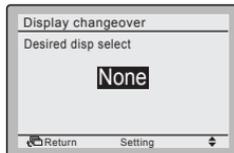

- 3 Push the  button to confirm the setting. Basic screen is displayed.

## 16. Setting status list


- 1 Display the **Setting status list** screen (16) (Refer to the chapter "Main menu structure" on page 19).
- 2 A list of the current setting status is displayed.

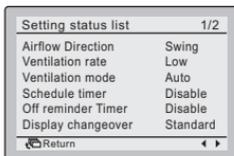

- 3 Push the  button to return to the **MainMenu**.

## 17. Clock setting


- 1 Display the **Clock setting** screen (17) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the   buttons to select and the   buttons to set **Year**, **Month**, **Day**, and time.

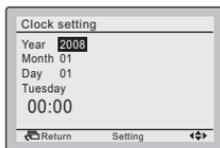

- 3 Push the  button to display the confirmation screen.
- 4 Use the   buttons to select **Yes** and push the  button.

## 18. Language changeover


- 1 Display the **Language changeover** screen (18) (Refer to the chapter "Main menu structure" on page 19).
- 2 Use the   buttons to select the language.

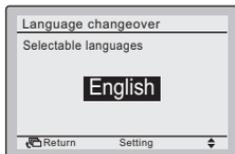

- 3 Push the  button to confirm the setting. Basic screen is displayed.

## 19. Error code display

- 1 If an error occurs, **Error: Press Menu Button** or **Warning: Press Menu Button** will blink in the basic screen.

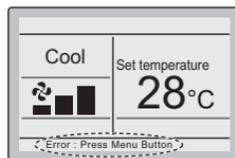

- 2 Push the  button. The error code will blink and the **Contact address** and model info will be displayed.

**Contents**

	page
1. Safety Precautions.....	27
2. Filter sign resetting.....	27

**1. Safety Precautions**

Wipe the LCD and other surface parts of the remote controller with a dry cloth when they become dirty.

If the dirt on the surface can not be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth then.

---

**NOTE** Do not use any paint thinner, organic solvent, or strong acid.



Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.




Be sure to stop the operation of the air conditioner and turn off the power supply breaker at the time of maintenance. Failure to do so may result in electric shocks or injury.


---

**2. Filter sign resetting**


- 1 When one of the following messages (**Clean the filter**, **Clean the filter and element**, or **Clean the element**) appears on the bottom of the basic screen, the filter has to be cleaned.

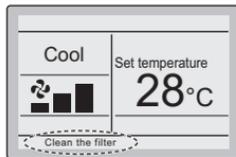

- 2 After the filter or element is washed, cleaned, or replaced, push the  button to enter the **MainMenu**.
- 3 Use the   buttons to select **Filter Sign Reset** and push the  button to reset the filter sign.

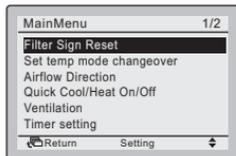

## NOTES

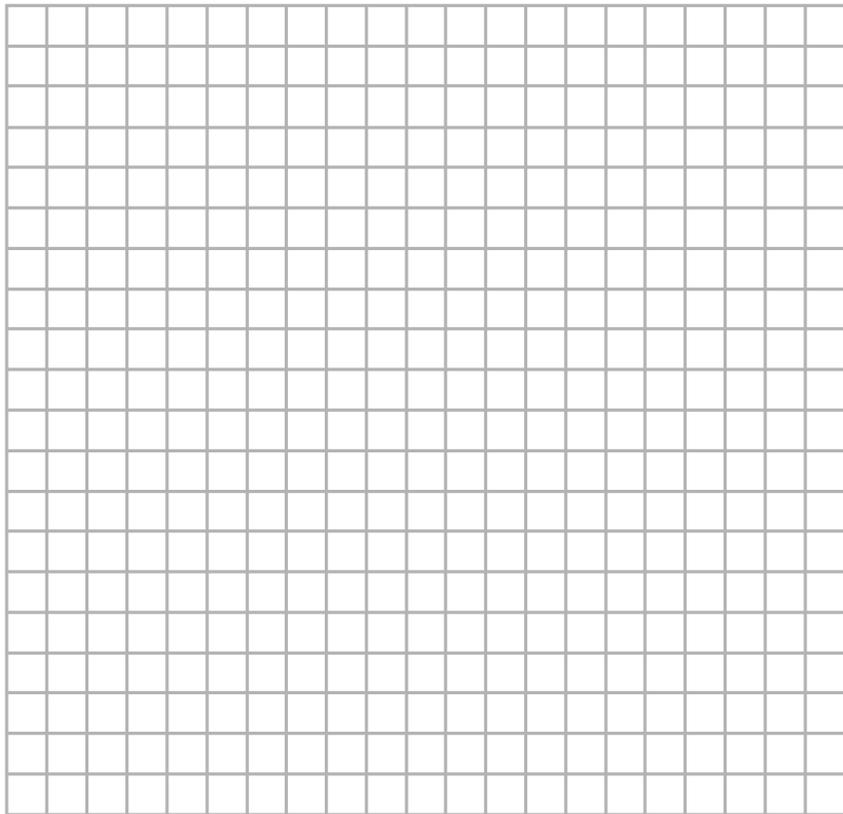



\*4PW52905-1 00000008\*

Copyright © Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4PW52905-1