

DAIKIN



DAIKIN ROOM AIR CONDITIONER

INSTALLATION MANUAL

R32 Split Series

INVERTER

MODELS

CTXM15M2V1B

FTXM20M2V1B

FTXM25M2V1B

FTXM35M2V1B

FTXM42M2V1B

FTXM50M2V1B

FTXM60M2V1B

FTXM71M2V1B

ATXM20M2V1B

ATXM25M2V1B

ATXM35M2V1B

ATXM50M2V1B

CE - DECLARATION-OF-CONFORMITY
 CE - KONFORMITÄTSEKRLÄRUNG
 CE - DECLARATION-DE-CONFORMITE
 CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
 CE - DICHIARAZIONE-DI-CONFORMITA
 CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
 CE - ЗАЯВЛЕНИЕ-О-СОТВЕТСТВИИ
 CE - OVERENSSTEMMESESERKLÆRING
 CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELE

CE - ERKLÆRING OM-SAMSVAR
 CE - ILMOITUS-YHDENMUKAISUUDESTA
 CE - PROHLÁŠENÍ-O-SHODĚ

CE - IZJAVA-O-USKLADENOSTI
 CE - MEGFELELŐSÉGI-NYILATKOZAT
 CE - DEKLARACJA-ZGODNOŚCI
 CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
 CE - VASTAVUSDEKLARATSIOON
 CE - ДЕКЛАРАЦИЯ-ЗА-СЪОТВЕТСТВИЕ

CE - ATTIKTIKES-DEKLARACIJA
 CE - ATBILSTĪBAS-DEKLARĀCIJA
 CE - VYHLÁSENIE-ZHODY
 CE - UYGUNLUK-BEYANI

Daikin Industries Czech Republic s.r.o.

01 a declares under its sole responsibility that the air conditioning models to which this declaration relates:

02 d erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:

03 f déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

04 I verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:

05 e declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:

06 i dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

07 g δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών αντισκευών στο οποία αναφέρεται η παρούσα δήλωση:

08 p declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

09 я заявляю, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:

10 q erklærer under endesansvar, at klimaanlægmodellerne, som denne deklaration vedrører:

11 s deklarerer i egenskap av huvudsansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:

12 n erklærer et fullstendig ansvar for at de luftkondisjoneringsmodeller som berøres av denne deklarasjon, innebærer at:

13 j ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoitamat ilmastointilaitteiden mallit:

14 c prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:

15 y izjavljuje pod isključivo odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi:

16 h telesa felesőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:

17 m deklaruje na własną i wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:

18 r deklarár pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație:

19 o z vsod odgovornosti izjavlja, da so modeli klimatskih naprav, na katere se izjava nanaša:

20 x kinnitab oma täielikul vastutusel, et käesoleva deklaratsiooni alla kuuluvad kliimaseadmete mudelid:

21 b декларира на своя отговорност, че моделите климатична инсталация, за които се отнася тази декларация:

22 t visiška savo atsakomybę skelbia, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma šį deklaracija:

23 v ar plinu atbildību apliecinā, ka tālāk uzskaitīto modeļu gaisa kondicionētāji, uz kuriem attiecas šī deklarācija:

24 k vyhlásuje na vlastnú zodpovednosť, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:

25 w tamamen kendi sorumluluğunda olmak üzere bu bildiriin ilgili olduđu klima modellerinin aşıđıdaki gibi olduđunu beyan eder:

FTXM20M2V1B, FTXM25M2V1B, FTXM35M2V1B, FTXM42M2V1B, CTXM15M2V1B, ATXM20M2V1B, ATXM25M2V1B, ATXM35M2V1B,

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

02 der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformés à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

06 sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:

09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:

12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning av at disse brukes i henhold til våre instruksjoner:

13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niiltä käytetään ohjeidemme mukaisesti:

14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:

15 u skladu sa slijedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

16 megfelelnek az alábbi szabvány(ok)nak vagy egyéb iránymű dokumentum(ok)nak, ha azokat előírás szerint használják:

17 spełniają wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:

18 sunt în conformitate cu următorul (următoarele) standard(e) sau al(e) document(e) normativ(e), cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:

19 skladni z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:

20 on vastavuses järgmis(yle) standardi(te)ga või teiste normatiivsete dokumentidega, kui neid kasutatakse vastavalt meie juhenditele:

21 съответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции:

22 atitinka žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:

23 tad, ja lietišķi atbilstoši ražotāja norādījumiem, atbilst sekojošiem standartiem un citiem normatīviem dokumentiem:

24 sú v zhode s nasledovnou(y) normou(ami) alebo iným(i) normatívnym(i) dokumentom(ami), za predpokladu, že sa používajú v súlade s našim návodom:

25 üritün, talimatlanmiza göre kullanılması koşulluyla aşıđıdaki standartlar ve norm belirlen belgelerle uyumludur:

EN60335-2-40,

01 following the provisions of: 10 under iagttagelse af bestemmelserne i: 19 ob upoštevanju določb:

02 gemäß den Vorschriften der: 20 enligt villkoren i: 20 vastavalt nõuetele:

03 conformément aux stipulations des: 12 gitt i henhold til bestemmelsene i: 21 следвайки клаузите на:

04 overeenkomstig de bepalingen van: 13 noudattaa määräyksiä: 22 laikantis nuostaty, pateikiamų:

05 siguiendo las disposiciones de: 14 za dodržení ustanovení předpisu: 23 ievērojot prasības, kas noteiktas:

06 secondo le prescrizioni per: 15 prema odredbama: 24 održavajući ustanovenia:

07 με τηρήσει των διατάξεων των: 16 kõveti al(z): 25 bunun koşullarına uygun olarak:

08 de acordo com o previsto em: 17 zgodnie z postanowieniami Dyrektyw: 25 bunin koşullarına uygun olarak:

09 в соответствии с положениями: 18 In urma prevederilor:

01 Note * as set out in <A> and judged positively by according to the Certificata <C>.

02 Hinweis * wie in <A> aufgeführt und von positiv beurteilt gemäß Zertifikat <C>.

03 Remarque * tel que défini dans <A> et évalué positivement par conformément au Certificat <C>.

04 Bemerk * zoals vermeld in <A> en positief beoordeeld door overeenkomstig Certificat <C>.

05 Nota * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>.

06 Nota * delineato nel <A> e giudicato positivamente da secondo il Certificato <C>.

07 Σημείωση * όπως καθορίζεται στο <A> και κρίνεται θετικά από σύμφωνα με το Πιστοποιητικό <C>.

08 Nota * tal como estabelecido em <A> e com o parecer positivo de de acordo com o Certificado <C>.

09 Примечание * как указано в <A> и в соответствии с положительным решением согласно Свидетельству <C>.

10 Bemærk * som anført i <A> og positivt vurderet af i henhold til Certificat <C>.

11 Information * enligt <A> och godkänns av enligt Certifikatet <C>.

12 Merk * som det fremkommer i <A> og gjennom positiv bedømmelse av ifølge Sertifikat <C>.

13 Huom * joltka on esitetty asiakirjassa <A> ja joltka on hyväksynyt Sertifikaatin <C> mukaisesti.

14 Poznámka * jak bylo uvedeno v <A> a pozitivně zjištěno v souladu s osvědčením <C>.

15 Napomena * kako je izloženo u <A> i pozitivno ocijenjeno od strane prema Certifikatu <C>.

16 Megjegyzés * a(z) <A> alapján, a(z) igazolta a megfelelést, a(z) <C> tanúsítvány szerint.

17 Uwaga * zgodnie z dokumentacją <A>, pozytywną opinią i Świadectwem <C>.

18 Notá * aša cum este stabilit în <A> și apreciat pozitiv de în conformitate cu Certificatul <C>.

19 Opomba * kot je določeno v <A> in odobreno s strani v skladu s osvědčením <C>.

20 Märkus * nagu on näidatud dokumendis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>.

01 Directives, as amended.

02 Direktiven, gemäß Änderung.

03 Directives, telles que modifiées.

04 Richtlijnen, zoals geamendeerd.

05 Directivas, según lo enmendado.

06 Direttive, come da modifica.

07 Οδηγίες, όπως έχουν τροποποιηθεί.

08 Directivas, conforme alteração em.

09 Директиви со всеми поправками.

10 Direktiver, med senere ændringer.

11 Direktiv, med företagna ändringar.

12 Direktiver, med foretatte ændringer.

13 Direktiivejä, sellaisina kuin ne ovat muuttetuina.

14 v platném znění.

15 Smjernice, kako je izmijenjeno.

16 irányel(ek) és módosításai(ak) rendelkezéseit.

17 z pőzniejszymi poprawkami.

18 Directivelor, cu amendamentele respective.

19 Direktive z vsemi spremembami.

20 Direktiivid koos muudatustega.

21 Директиви, с техните изменения.

22 Direktiivose su parildumais.

23 Direktiivs un to papildinājums.

24 Smernice, v platnom znění.

25 Deģistīrlīmī hallerīyle Yönetmelikler.

**Low Voltage 2006/95/EC
 Machinery 2006/42/EC **
 Electromagnetic Compatibility 2004/108/EC ***

<A>	DAIKIN.TCF.032C10/10-2015
	DEKRA (NB0344)
<C>	2159619.0551-EMC

- 01** DICz*** is authorised to compile the Technical Construction File.
- 02** DICz*** hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
- 03** DICz*** est autorisé à compiler le Dossier de Construction Technique.
- 04** DICz*** is bevoegd om het Technisch Constructiedossier samen te stellen.
- 05** DICz*** está autorizado a compilar el Archivo de Construcción Técnica.
- 06** DICz*** è autorizzata a redigere il File Tecnico di Costruzione.

- 07** H DICz*** είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.
- 08** A DICz*** está autorizada a compilar a documentação técnica de fabrico.
- 09** Компания DICz*** уполномочена составить Комплект технической документации.
- 10** DICz*** er autoriseret til at udarbejde de tekniske konstruktionsdata.
- 11** DICz*** är myndigade att sammanställa den tekniska konstruktionsfilen.
- 12** DICz*** har tillatelse til å kompilere den Tekniske konstruksjonsfilen.

- 13** DICz*** on valtuutettu laatimaan Teknisen asiakirjan.
- 14** Společnost DICz*** má oprávnění ke kompilaci souboru technické konstrukce.
- 15** DICz*** je ovlašten za izradu Datoteke o tehničkoj konstrukciji.
- 16** A DICz*** jogsull a mőszaki konstrukciós dokumentáció összeállítására.
- 17** DICz*** ma upowaznienie do zbierania i opracowywania dokumentacji konstrukcyjnej.
- 18** DICz*** este autorizat să compileze Dosarul tehnic de construcție.

- 19** DICz*** je pooblašćen za sestavo datoteke s tehnično mapo.
- 20** DICz*** on volituid koostama tehnilist dokumentatsiooni.
- 21** DICz*** e otorizirana da sastavi Akta za tehnička konstrukcija.
- 22** DICz*** yra įgaliota sudaryti šį techninės konstrukcijos failą.
- 23** DICz*** ir autorizēts sastādīt tehniko dokumentāciju.
- 24** Spoločnosť DICz*** je oprávnená vytvorit súbor technickej konstrukcie.
- 25** DICz*** Teknik Yapı Dosyasını derlemeye yetkilidir.

***DICz = Daikin Industries Czech Republic s.r.o.

3P394245-14F



[Handwritten signature]

Tetsuya Baba
 Managing Director
 Pilsen, 1st of Dec. 2015

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.
 U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,
 Czech Republic

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSEKRLÄRUNG
CE - DECLARACION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - OVERENSSTEMMELSESEKRLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUUDESTA
CE - PROHLÁŠENÍ-O-SHODĚ

CE - IZJAVA-O-USKLADENOSTI
CE - MEGFELELŐSÉGI-NYILATKOZAT
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARATSIOON
CE - ДЕКЛАРАЦИЯ-ЗА-СЪОТВЕТСТВИЕ

CE - ATTIKTIKES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE-ZHODY
CE - UYGUNLUK-BEYANI

Daikin Industries Czech Republic s.r.o.

01 a declares under its sole responsibility that the air conditioning models to which this declaration relates:

02 d erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:

03 f déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

04 I verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:

05 e declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:

06 i dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

07 g δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών ανωκευών στο οποία αναφέρεται η παρούσα δήλωση:

08 p declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

FTXM50M2V1B, FTXM60M2V1B, FTXM71M2V1B, ATXM50M2V1B,

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

02 der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

06 sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

EN60335-2-40,

01 following the provisions of:

10 under iagttagelse af bestemmelserne i:

19 ob upoštevanju določb:

02 gemäß den Vorschriften der:

11 enligt villkoren i:

20 vastavalt nõuetele:

03 conformément aux stipulations des:

12 gitt i henhold til bestemmelserne i:

21 следвайки клаузите на:

04 overeenkomstig de bepalingen van:

13 noudattaa määräyksiä:

22 laikantis nuostaty, pateikiamy;

05 siguiendo las disposiciones de:

14 za dodržení ustanovení předpisu:

23 ievērojot prasības, kas noteiktas:

06 secondo le prescrizioni per:

15 prema odredbama:

24 održavajući ustanovenia:

07 με τηρήσει των διατάξεων των:

16 követi az(z):

25 bunun koşullarına uygun olarak:

08 de acordo com o previsto em:

17 zgodnie z postanowieniami Dyrektyw:

09 в соответствии с положениями:

18 In urma prevederilor:

01 Note * as set out in <A> and judged positively by according to the Certificata <C>

06 Nota * delineato nel <A> e giudicato positivamente da secondo il Certificato <C>

11 Information * enligt <A> och godkännts av enligt Certifikatet <C>

16 Megjegyzés * a(z) <A> alapján, a(z) igazolta a megfélelést, a(z) <C> tanúsítvány szerinti.

21 Забелешка * както е изложено в <A> и оценено положително от съгласно Сертификата <C>

26 Pastaba * kaip nustatyta <A> ir kaip teigiamai nuspresta pagal Serifikatą <C>

31 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

02 Hinweis * wie in <A> aufgeführt und von positiv beurteilt gemäß Zertifikat <C>

07 Σημείωση * όπως κατοριζεται στο <A> και κρινηται θετικα από το σύμφωνα με το Πιστοποιητικό <C>

12 Merk * som det fremkommer i <A> og gjennom positiv bedømmelse av ifølge Serifikat <C>

17 Uwaga * zgodnie z dokumentacją <A>, pozytywną opinią i Świadectwem <C>

22 Pastaba * kaip nustatyta <A> ir kaip teigiamai nuspresta pagal Serifikatą <C>

27 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

03 Remarque * tel que défini dans <A> et évalué positivement par conformément au Certificat <C>

08 Nota * tal como estabelecido em <A> e com o parecer positivo de de acordo com o Certificado <C>

13 Huom * joltka on esitetty asiakirjassa <A> ja joltka on hyväksynyt Serifikatoin <C> mukaisesti.

18 Notá * aša cum este stabilit în <A> și apreciat pozitiv de în conformitate cu Certificatul <C>

23 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

28 Pastaba * kaip nustatyta <A> ir kaip teigiamai nuspresta pagal Serifikatą <C>

29 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

04 Bemerk * zoals vermeld in <A> en positief beoordeeld door overeenkomstig Certificat <C>

09 Примечание * как указано в <A> и в соответствии с положительным решением согласно Свидетельству <C>

14 Poznámka * jak bylo uvedeno v <A> a pozitivně zjištěno v souladu s osvědčením <C>

19 Opomba * kot je določeno v <A> in odobreno s strani v skladu s osvědčením <C>

24 Poznámka * ako bolo uvedené v <A> a pozitívne zistené v súlade s osvědčením <C>

29 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

30 Pastaba * kaip nustatyta <A> ir kaip teigiamai nuspresta pagal Serifikatą <C>

05 Nota * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>

10 Bemærk * som anført i <A> og positivt vurderet af i henhold til Certifikat <C>

15 Napomena * kako je izloženo u <A> i pozitivno ocijenjeno od strane prema Certifikatu <C>

20 Märkus * nagu on näidatud dokumendis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>

25 Not * <A> da beirtilidigi gibi ve <C> Serifikasina göre tarafindan olumlu olarak deđerlendirildi gibi.

30 Pastaba * kaip nustatyta <A> ir kaip teigiamai nuspresta pagal Serifikatą <C>

31 Piezīmes * kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C>

01** DICz*** is authorised to compile the Technical Construction File.

07** H DICz*** είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.

13** DICz*** on valtuutettu laatimaan Teknisen asiakirjan.

19** DICz*** je pooblaščen za sestavo datoteke s tehnično mapo.

02** DICz*** hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.

08** A DICz*** está autorizada a compilar a documentação técnica de fabrico.

14** Společnost DICz*** má oprávnění ke kompilaci souboru technické konstrukce.

20** DICz*** on volituid koostama tehnilist dokumentatsiooni.

03** DICz*** est autorisé à compiler le Dossier de Construction Technique.

09** Компания DICz*** уполномочена составить Комплект технической документации.

15** DICz*** je ovlašten za izradu Datoteke o tehničkoj konstrukciji.

21** DICz*** e otorizirana da sastavi Akta za tehnichecka konstrukcija.

04** DICz*** is bevoegd om het Technisch Constructiedossier samen te stellen.

10** DICz*** er autoriseret til at udarbejde de tekniske konstruktionsdata.

16** A DICz*** jogosult a műszaki konstrukciós dokumentáció összeállítására.

22** DICz*** yra įgaliota sudaryti šį techninės konstrukcijos failą.

05** DICz*** está autorizado a compilar el Archivo de Construcción Técnica.

11** DICz*** är myndigade att sammanställa den tekniska konstruktionsfilen.

17** DICz*** ma upowaznienie do zbierania i opracowywania dokumentacji konstrukcyjnej.

23** DICz*** ir autorizēts sastādīt tehniko dokumentāciju.

06** DICz*** e autorizzata a redigere il File Tecnico di Costruzione.

12** DICz*** har tillatelse til a kompilere den Tekniske konstruktionsfilen.

18** DICz*** este autorizat să compileze Dosarul tehnic de construcție.

24** Spoločnosť DICz*** je oprávnená vytvoriť súbor technickej konstrukcie.

***DICz = Daikin Industries Czech Republic s.r.o.

3P394245-15F



Tetsuya Baba

Tetsuya Baba
Managing Director
Pilsen, 1st of Feb. 2016

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.
U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,
Czech Republic

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:

09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:

12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse bruges i henhold til våre instrukser:

13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niiltä käytetään ohjeidemme mukaisesti:

14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:

15 u skladu sa slijedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

**Low Voltage 2006/95/EC
Machinery 2006/42/EC **
Electromagnetic Compatibility 2004/108/EC ***

<A>	DAIKIN.TCF.032C11/12-2015
	DEKRA (NB0344)
<C>	2159619.0551-EMC

Safety Precautions

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with R32.
--	--	--	------------------------------------

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices

WARNING.....Failure to follow these instructions properly may result in personal injury or loss of life.

CAUTION.....Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- The safety marks shown in this manual have the following meanings:

Be sure to follow the instructions.	Be sure to establish an earth connection.	Never attempt.
-------------------------------------	---	----------------

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.

WARNING	
<ul style="list-style-type: none"> • Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire. 	
<ul style="list-style-type: none"> • Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire. 	
<ul style="list-style-type: none"> • Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire. 	
<ul style="list-style-type: none"> • Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury. 	
<ul style="list-style-type: none"> • Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire. 	
<ul style="list-style-type: none"> • Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire. 	
<ul style="list-style-type: none"> • Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire. 	
<ul style="list-style-type: none"> • When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals. 	
<ul style="list-style-type: none"> • If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard. 	
<ul style="list-style-type: none"> • If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire. 	
<ul style="list-style-type: none"> • After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker. 	
<ul style="list-style-type: none"> • When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R32). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury. 	
<ul style="list-style-type: none"> • During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury. 	
<ul style="list-style-type: none"> • During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury. 	
<ul style="list-style-type: none"> • Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks. 	
<ul style="list-style-type: none"> • Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire. 	

⚠ CAUTION

- Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out. ⊘
- Only qualified personnel can handle, fill, purge and dispose of the refrigerant.
- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.
- Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.
- Sound pressure level is less than 70 dB(A).

Accessories

Indoor unit (A)–(H)

(A) Mounting plate	1	(D) Remote controller holder	1	(G) Operation manual	1
(B) Titanium apatite photocatalytic air-purifying filter	2	(E) Dry battery AAA. LR03 (alkaline)	2	(H) Installation manual	1
(C) Wireless remote controller	1	(F) Indoor unit fixing screw (M4 × 12L)	2		

Choosing an Installation Site

Before choosing the installation site, obtain user approval.

1. Indoor unit

- The indoor unit should be sited in a place where:
 - 1) the restrictions on installation specified in the indoor unit installation drawings are met,
 - 2) both air inlet and air outlet have clear paths met,
 - 3) the unit is not in the path of direct sunlight,
 - 4) the unit is away from the source of heat or steam,
 - 5) there is no source of machine oil vapour (this may shorten indoor unit life),
 - 6) cool (warm) air is circulated throughout the room,
 - 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote controller range,
 - 8) the unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound),
 - 9) install at the recommended height (1.8m),
 - 10) no laundry equipment is located,
 - 11) the appliance shall be stored so as to prevent mechanical damage from occurring.

2. Wireless remote controller

- Turn on all the fluorescent lamps in the room, if any, and find the site where remote controller signals are properly received by the indoor unit (within 7m).

Preparation before Installation


1. Removing and installing front panel

• Removal method

- 1) Place your fingers in the indentations on the main unit (one each on the left and right sides), and open the front panel until it stops.
- 2) Continue to open the front panel further while sliding the panel to the right and pulling it toward you in order to disengage the front panel shaft on the left side. To disengage the front panel shaft on the right side, slide the panel to the left while pulling it toward you.

• Installation method


Align the tabs of the front panel with the grooves, and push all the way in. Then close slowly. Push the centre of the lower surface panel firmly to engage the tabs.

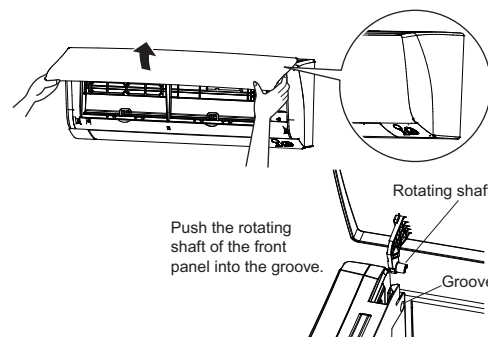

2. Removing and installing the front grille

• Removal method

- 1) Remove the front panel to remove the air filter.
- 2) Remove service lid (see page 4).
- 3) Remove the tape and loosen the wire.
- 4) Remove the 2 screws / 3 screws from the front grille.
- 5) In front of the ○○○ mark of the front grille, there are 3 upper hooks. Lightly pull the front grille toward you with one hand, and push down on the hooks with the fingers of your other hand.

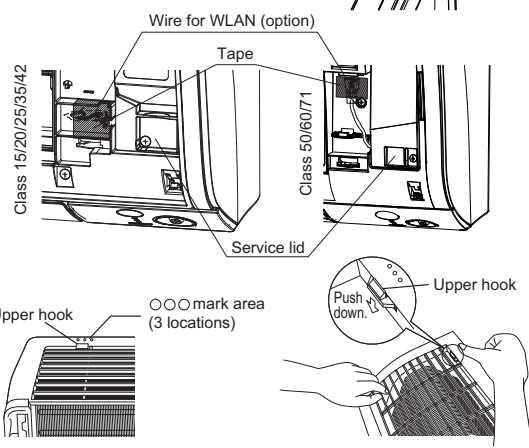

When there is no work space because the unit is close to ceiling


! CAUTION

- Be sure to wear protection gloves.

Place both hands under the centre of the front grille, and while pushing up, pull it toward you.

• Installation method

- 1) Install the front grille and firmly engage the upper hooks (3 locations).
- 2) Install 2 screws / 3 screws of the front grille.
- 3) Install the air filter and then mount the front panel.


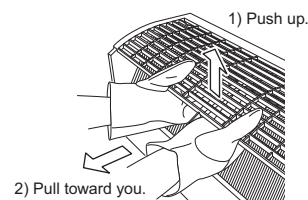


3. How to set the different addresses

When 2 indoor units are installed in one room, the 2 wireless remote controllers can be set for different addresses. Change the address setting of one of the two units.


When cutting the jumper be careful not to damage any of the surrounding parts.

- 1) Remove the battery cover on the remote controller and cut the address jumper.
 - 2) Press **TEMP** (up arrow), **TEMP** (down arrow), and **Mode** at the same time.
 - 3) Press **TEMP** (up arrow), select **⌘**, press **Mode**.
- (The indoor unit OPERATION lamp will blink for about 1 minute.)
- 4) Press the indoor unit ON/OFF switch while the OPERATION lamp is blinking.

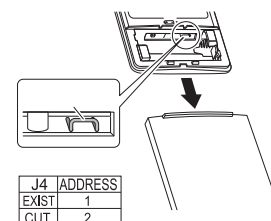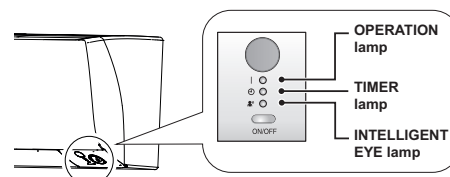

- If setting could not be carried out completely while the OPERATION lamp was blinking, carry out the setting process once again from the beginning.
- After setting is complete, pressing **Mode** for about 5 seconds will cause the remote controller to return to the previous display.


Indoor Unit Installation Drawings

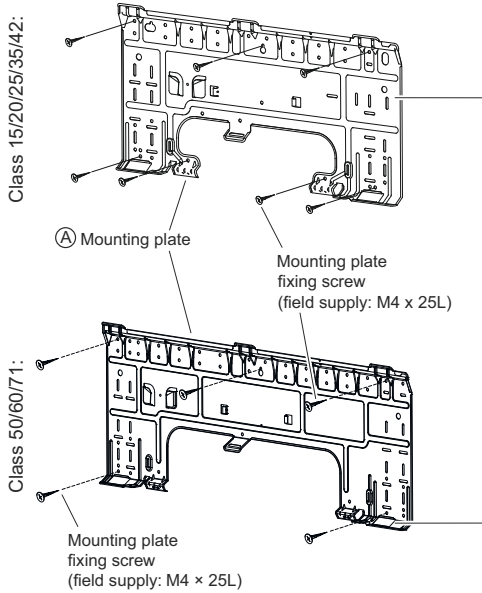

The (A) mounting plate should be installed on a wall which must be strong enough to support the weight of the unit.

■ How to attach the indoor unit
 Hook the claws of the bottom frame to the mounting plate. If the claws are difficult to hook, remove the front grille.

■ How to remove the indoor unit
 Push up the marked area (at the lower part of the front grille) to release the claws. If it is difficult to release, remove the front grille.

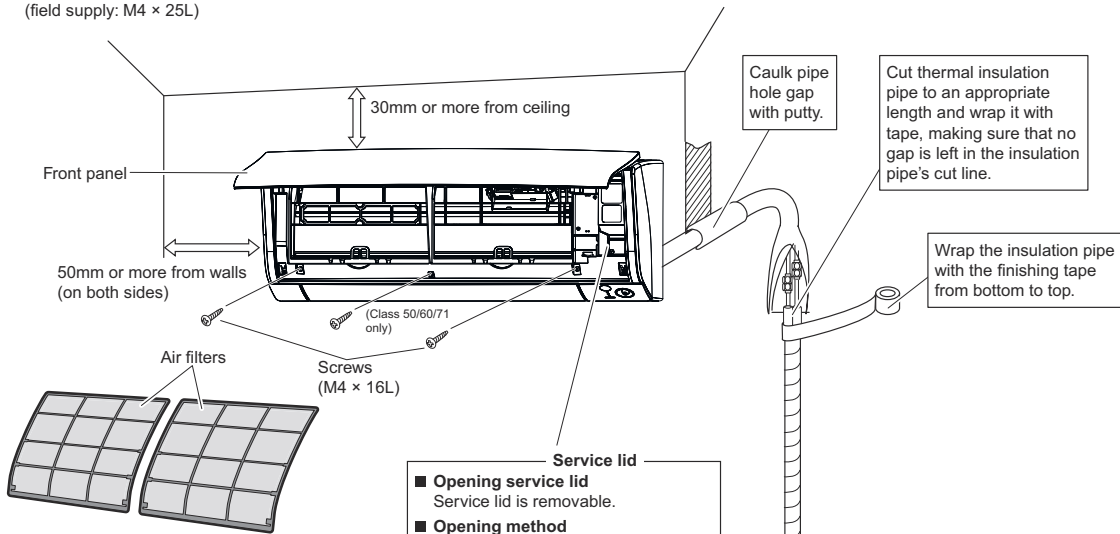

Service lid

■ Opening service lid
 Service lid is removable.

■ Opening method
 1) Remove the service lid screw.
 2) Pull out the service lid diagonally down in the direction of the arrow.
 3) Pull down.

(B) Titanium apatite photocatalytic air-purifying filter (2)

Class 15/20/25/35/42:
Titanium apatite photocatalytic air-purifying filter

Class 50/60/71:
Titanium apatite photocatalytic air-purifying filter

(C) Wireless remote controller

Before screwing the remote controller holder to the wall, make sure that control signals are properly received by indoor unit.

(D) Remote controller holder

Fixing screw for remote controller holder (field supply: M3 x 20L)

⚠ WARNING


- Use only Daikin optional parts approved for this model.

Indoor Unit Installation

1. Installing the mounting plate


- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
- Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
 - Secure the mounting plate to the wall with screws.

Recommended mounting plate retention spots and dimensions

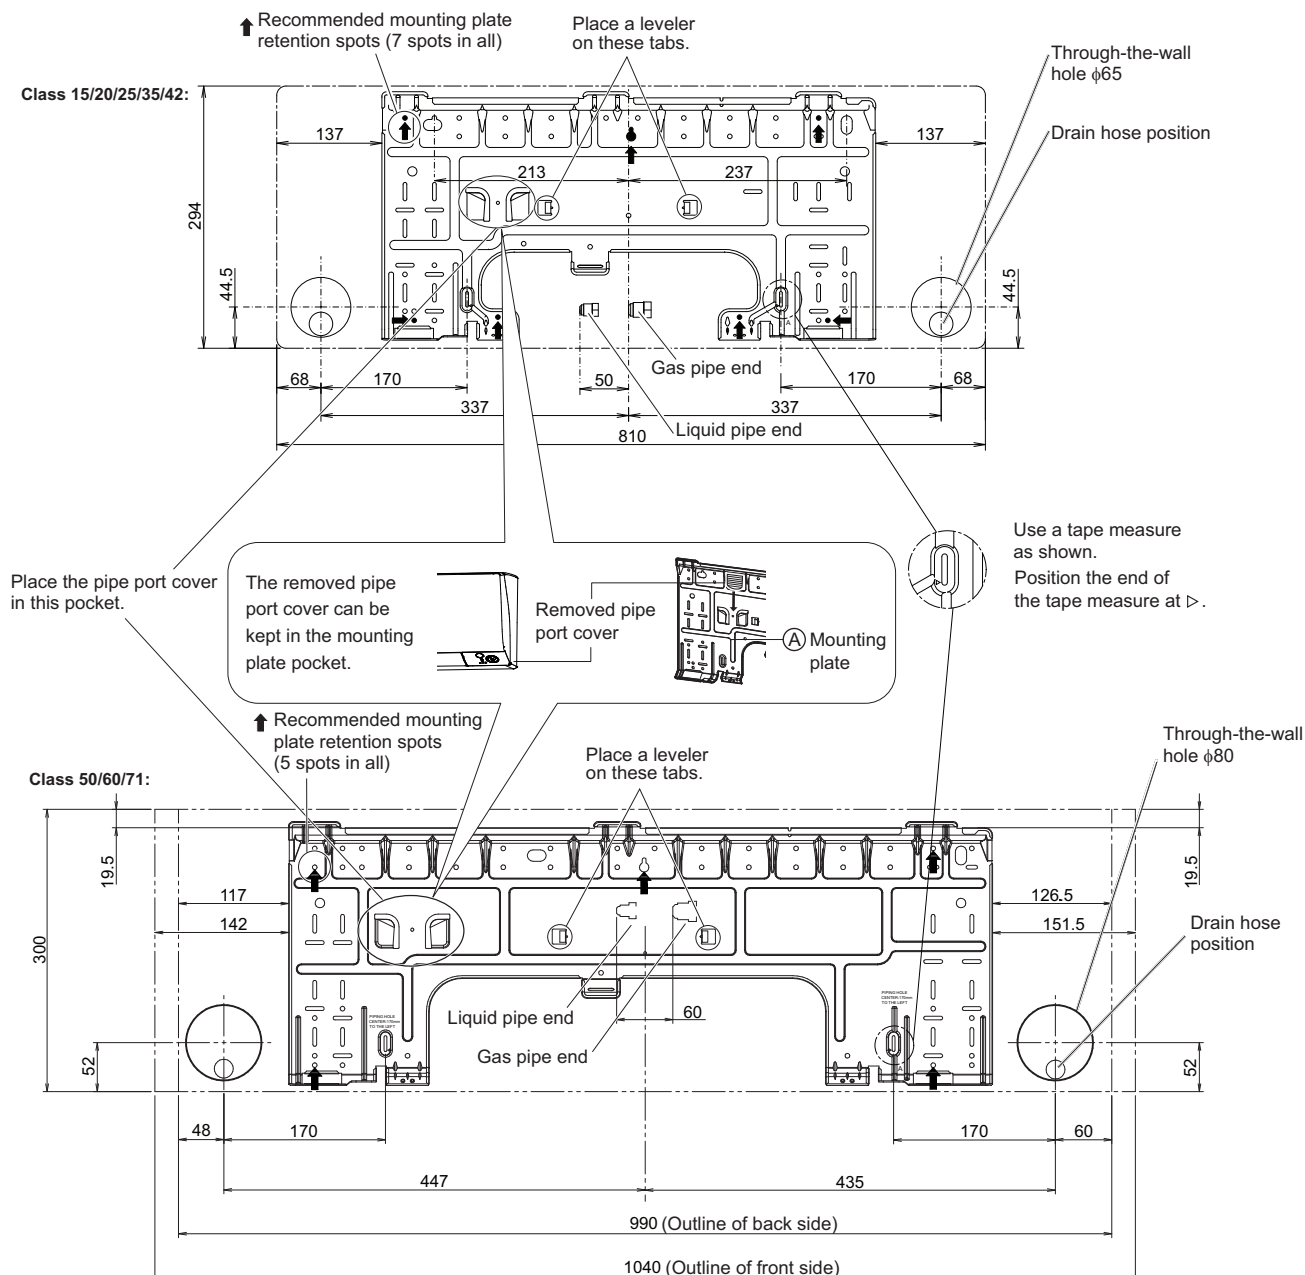

2. Boring a wall hole and installing wall embedded pipe

- For walls containing metal frame or metal board, be sure to use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.
 - Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
- Bore a feed-through hole of 65/80mm in the wall so it has a down slope toward the outside.
 - Insert a wall pipe into the hole.
 - Insert a wall cover into wall pipe.

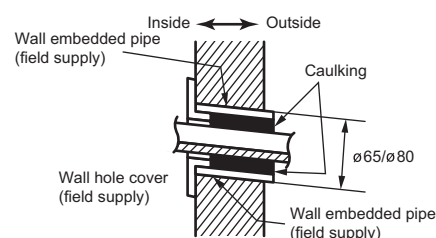


4) After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

Indoor Unit Installation

3. Installing the indoor unit


- In the case of bending or curing refrigerant pipes, keep the following precautions in mind. Abnormal sound may be generated if improper work is conducted.

- Do not strongly press the refrigerant pipes onto the bottom frame.

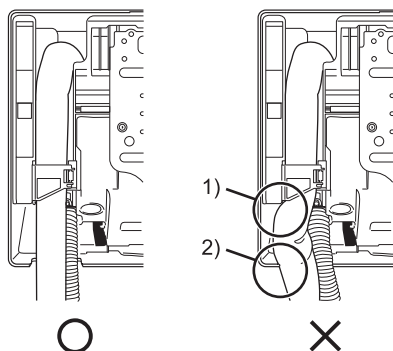

- Do not strongly press the refrigerant pipes on the front grille, either.
 - Remove the pipe port cover as shown below.

- Cut off the pipe port cover from inside the front grille using a coping saw. Apply the blade of the coping saw to the notch, and cut off the pipe port cover along the slit.
- After cutting off the pipe port cover, perform filing. Remove the burrs along the cut section using a half round needle file.

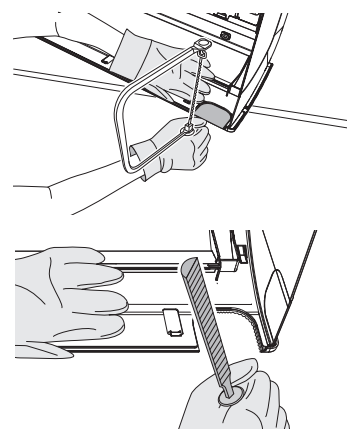


⚠ CAUTION


- If the pipe port cover is cut off using nippers, the front grille will be damaged. Please do not use nippers.
- Wear gloves during the pipe port cover removal.

3-1. Right-side, right-back, or right-bottom piping



- Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- Wrap the refrigerant pipes and drain hose together with insulation tape.

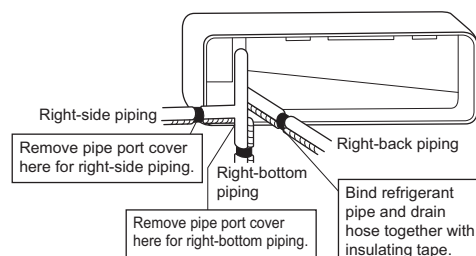

- Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on the mounting plate hooks by using the Δ markings at the top of the indoor unit as a guide.

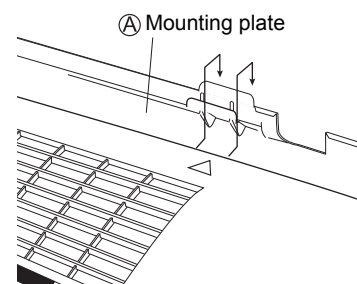

- Open the front panel, then open the service lid. (Refer to preparation before installation.)
- Pass the inter-unit wire from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward for easier work in advance. (If the inter-unit wire ends are to be stripped first, bundle wire ends with adhesive tape.)
- Press the bottom frame of the indoor unit with both hands to set it on the mounting plate hooks. Make sure the wires do not catch on the edge of the indoor unit.

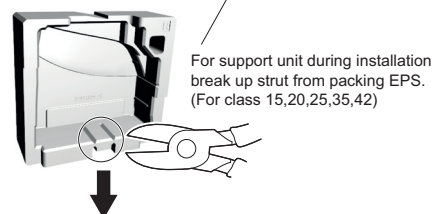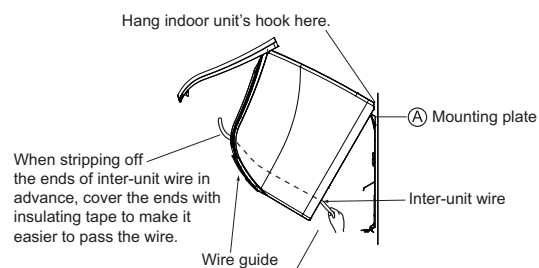

Indoor Unit Installation

3-2. Left-side, left-back, or left-bottom piping


How to replace the drain plug and drain hose

• Replacing onto the left side


- 1) Remove the insulation fixing screw on the right and remove the drain hose.
- 2) Remove the drain plug on the left side and attach it to the right side.
- 3) Insert the drain hose and tighten with included insulation fixing screw.
* (Forgetting to tighten this may cause water leakages.)

Drain hose attachment position

* The drain hose is on the back of the unit.

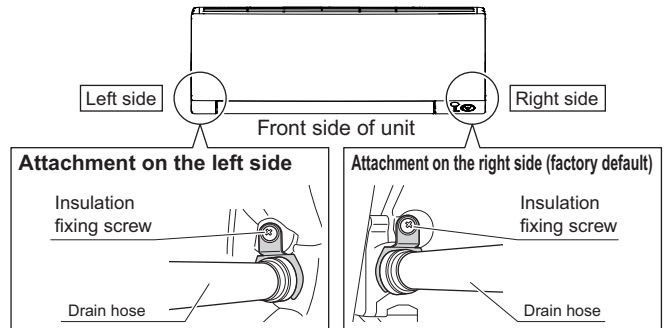


- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.

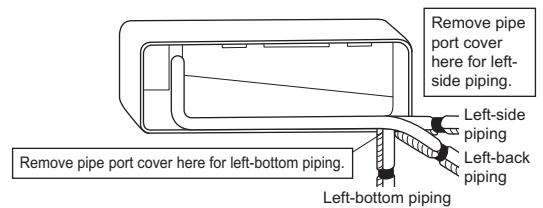


- 2) Be sure to connect the drain hose to the drain port in place of a drain plug.


How to set drain plug

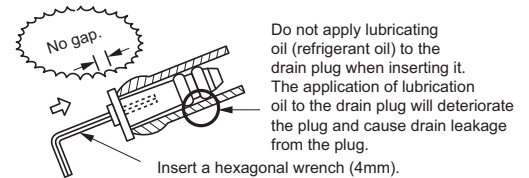

- 3) Shape the refrigerant pipes along the pipe path marking on the mounting plate.
- 4) Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on mounting plate hooks, using the Δ markings at the top of the indoor unit as a guide.
- 5) Pull in the inter-unit wire.
- 6) Connect the inter-unit pipes.

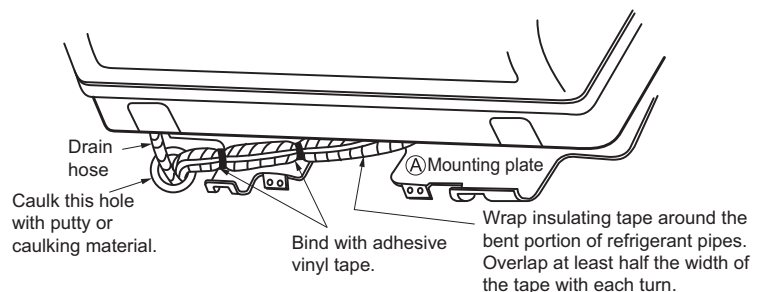


- 7) Wrap the refrigerant pipes and drain hose together with insulation tape as shown in the figure on the right (in case of setting the drain hose through the back of the indoor unit).
- 8) While exercising care so that the inter-unit wire does not catch indoor unit, press the bottom edge of indoor unit with both hands until it is firmly caught by the mounting plate hooks. Secure indoor unit to the mounting plate with indoor unit fixing screws (M4 × 12L).

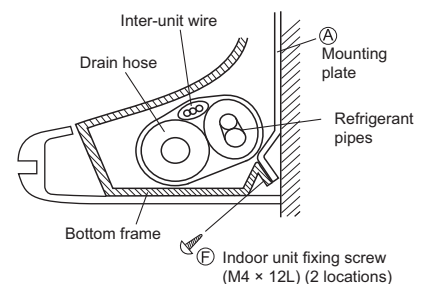

3-3. Wall embedded piping

Follow the instructions given under left-side, left-back, or left-bottom piping.

- 1) Insert the drain hose to this depth so it won't be pulled out of the drain pipe.

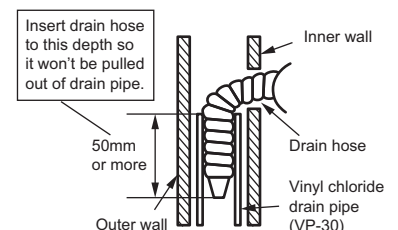

Indoor Unit Installation

Wiring diagram

For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol ^{****} in the part code.

	: CONNECTION		: PROTECTIVE EARTH (SCREW)
	: CONNECTOR		: RECTIFIER
	: EARTH		: RELAY CONNECTOR
	: FIELD WIRING		: SHORT CIRCUIT CONNECTOR
	: INDOOR UNIT		: TERMINAL
	: OUTDOOR UNIT		: TERMINAL STRIP
	: PROTECTIVE EARTH		: WIRE CLAMP
BLK : BLACK	GRN : GREEN	PNK : PINK	WHT : WHITE
BLU : BLUE	GRY : GREY	PRP, PPL : PURPLE	YLW : YELLOW
BRN : BROWN	ORG : ORANGE	RED : RED	
A*P	: PRINTED CIRCUIT BOARD	PTC*	: THERMISTOR PTC
BS*	: PUSH BUTTON ON / OFF, OPERATION SWITCH	Q*	: INSULATED GATE BIPOLAR TRANSISTOR (IGBT)
BZ, H*O	: BUZZER	Q*DI	: EARTH LEAK CIRCUIT BREAKER
C*	: CAPACITOR	Q*L	: OVERLOAD PROTECTOR
CN*, E*AC*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, X*A	: CONNECTION, CONNECTOR	Q*M	: THERMO SWITCH
D*, V*D	: DIODE	R*	: RESISTOR
DB*	: DIODE BRIDGE	R*T	: THERMISTOR
DS*	: DIP SWITCH	RC	: RECEIVER
E*H	: HEATER	S*C	: LIMIT SWITCH
F*U, FU* (FOR CHARACTERISTICS REFER TO PCB INSIDE YOUR UNIT)	: FUSE	S*L	: FLOAT SWITCH
FG*	: CONNECTOR (FRAME GROUND)	S*NPH	: PRESSURE SENSOR (HIGH)
H*	: HARNESS	S*NPL	: PRESSURE SENSOR (LOW)
H*P, LED*, V*L	: PILOT LAMP, LIGHT EMITTING DIODE	S*PH, HPS*	: PRESSURE SWITCH (HIGH)
HAP	: LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*PL	: PRESSURE SWITCH (LOW)
IES	: INTELLIGENT EYE SENSOR	S*T	: THERMOSTAT
IPM*	: INTELLIGENT POWER MODULE	S*W, SW*	: OPERATION SWITCH
K*R, KCR, KFR, KHuR	: MAGNETIC RELAY	SA*	: SURGE ARRESTOR
L	: LIVE	SR*, WLU	: SIGNAL RECEIVER
L*	: COIL	SS*	: SELECTOR SWITCH
L*R	: REACTOR	SHEET METAL	: TERMINAL STRIP FIXED PLATE
M*	: STEPPER MOTOR	T*R	: TRANSFORMER
M*C	: COMPRESSOR MOTOR	TC, TRC	: TRANSMITTER
M*F	: FAN MOTOR	V*, R*V	: VARISTOR
M*P	: DRAIN PUMP MOTOR	V*R	: DIODE BRIDGE
M*S	: SWING MOTOR	WRC	: WIRELESS REMOTE CONTROLLER
MR*, MRCW*, MRM*, MRN*	: MAGNETIC RELAY	X*	: TERMINAL
N	: NEUTRAL	X*M	: TERMINAL STRIP (BLOCK)
PAM	: PULSE-AMPLITUDE MODULATION	Y*E	: ELECTRONIC EXPANSION VALVE COIL
PCB*	: PRINTED CIRCUIT BOARD	Y*R, Y*S	: REVERSING SOLENOID VALVE COIL
PM*	: POWER MODULE	Z*C	: FERRITE CORE
PS	: SWITCHING POWER SUPPLY	ZF, Z*F	: NOISE FILTER

CAUTION

When the main power is turned off and then back on again, operation will resume automatically.

HIGH VOLTAGE – be sure to discharge the capacitor completely before repair work.



Risk of failure or water leakage!

Do not wash the inside of the air conditioner by yourself.

Indoor Unit Installation

4. Wiring

- 1) Strip wire ends (15mm).
- 2) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 3) Connect the earth wires to the corresponding terminals.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) Shape the wires so that the service lid fits securely, then close service lid.

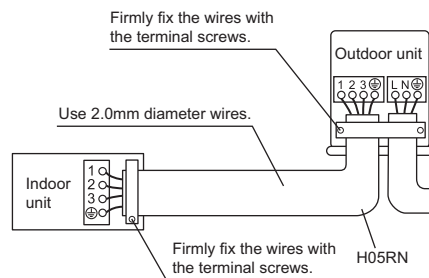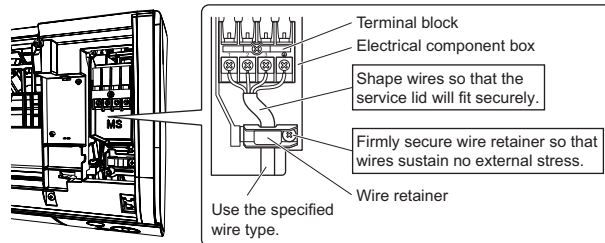


! WARNING


- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

5. Drain piping


- 1) Connect the drain hose, as described right.
- 2) Remove the air filters and pour some water into the drain pan to check the water flows smoothly.

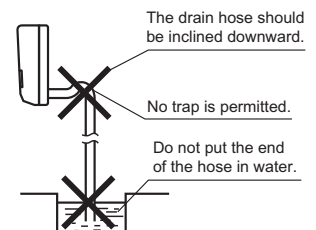


- 3) If drain hose extension or embedded drain piping is required, use appropriate parts that match the hose front end. [Figure of hose front end]

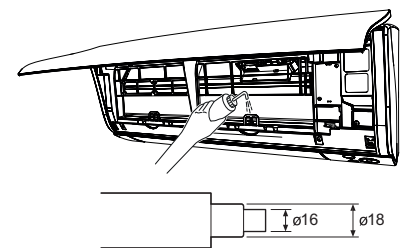

- 4) When extending the drain hose, use a commercially available extension hose with an inner diameter of 16mm. Be sure to thermally insulate the indoor section of the extension hose.

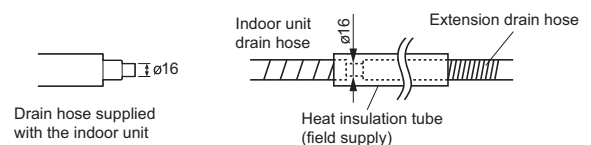


- 5) When connecting a rigid polyvinyl chloride pipe (nominal diameter 13mm) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (nominal diameter 13mm) as a joint.

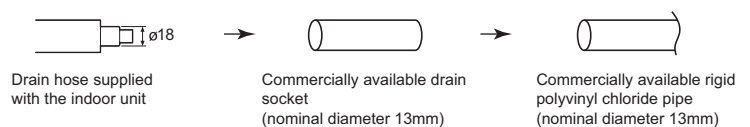

Indoor Unit Installation

6. Wireless adapter (option)

Preparation of wire for WLAN adaptor connection

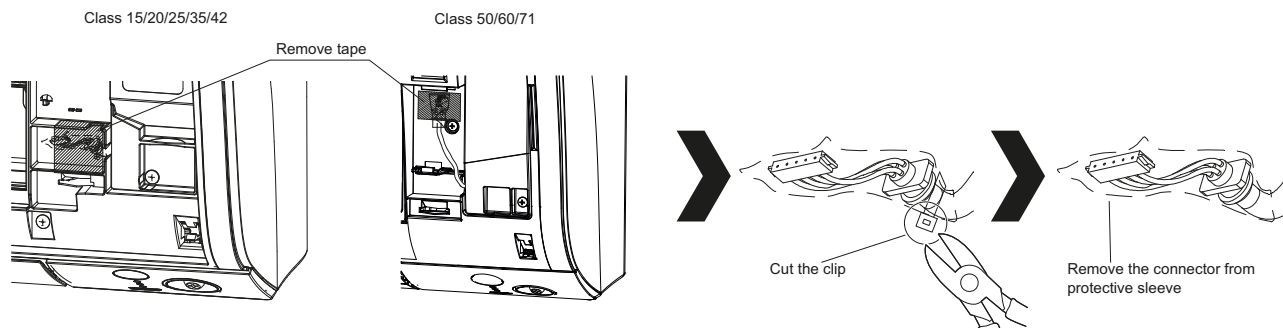


- For connection of wire with WLAN adapter - see WLAN option kit Installation manual.

Class 15, 20, 25, 35, 42

Installing:

- Place the wireless adapter against the hooks (1).
- Lock the adapter by pressing it down (2).

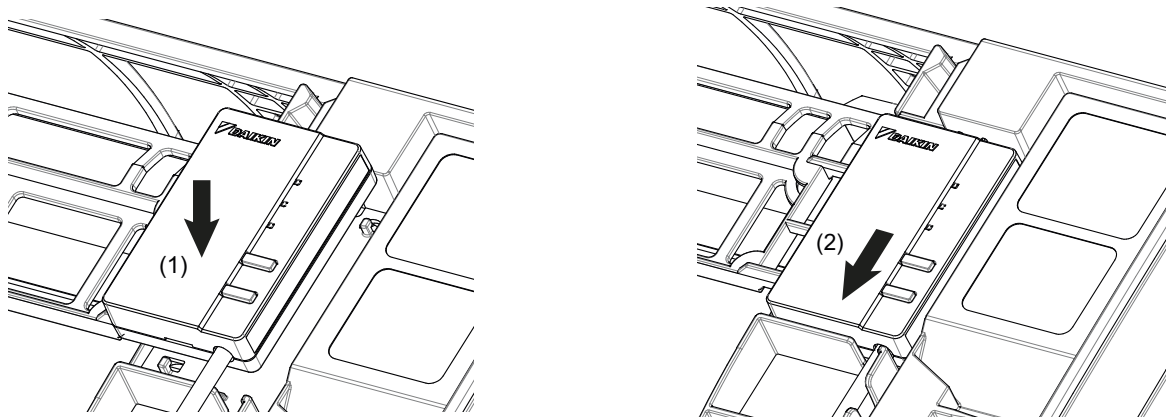

Removing: the reverse process of installing.


Class 50, 60, 71

Installing:

- Place the wireless adapter into the holder (1).
- Fix the adapter in the holder by pressing down on it (2).

Removing:


- Bend one clamp of the holder with the finger to release the wireless adapter (1).
- Remove it from the holder (2).

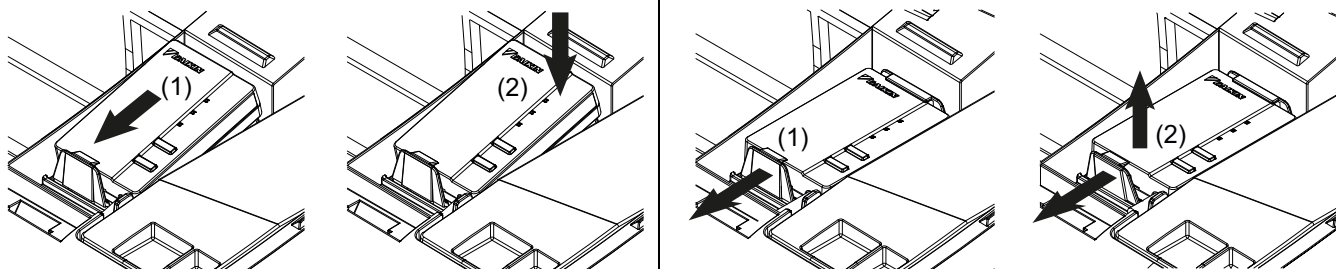

Refrigerant Piping Work

1. Flaring the pipe end

 
- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.



Flaring

Set exactly at the position shown below.

A	Flare tool for R32	Conventional flare tool	
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
A	0-0.5mm	1.0-1.5mm	1.5-2.0mm

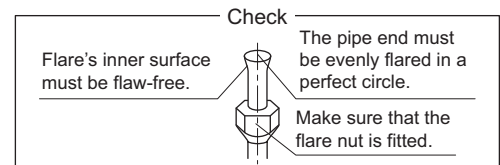

⚠ WARNING


- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R32 unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.

2. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R32)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.


Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

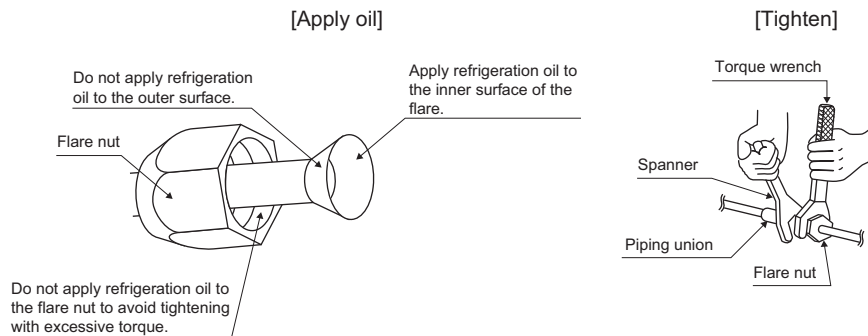

Flare nut tightening torque			
Gas side			Liquid side
15, 20, 25, 35 class	42, 50, 60 class	71 class	
3/8 inch	1/2 inch	5/8 inch	1/4 inch
32.7-39.9N • m (330-407kgf • cm)	49.5-60.3N • m (505-615kgf • cm)	61.8-75.4N • m (630-770kgf • cm)	14.2-17.2N • m (144-175kgf • cm)

2-1. Caution on piping handling

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.

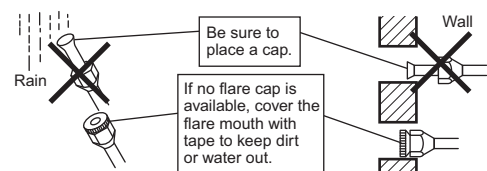

Refrigerant Piping Work

2-2. Selection of copper and heat insulation materials


- When using commercial copper pipes and fittings, observe the following:

1) Insulation material: Polyethylene foam
 Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)
 Refrigerant gas pipe's surface temperature reaches 110°C max.
 Choose heat insulation materials that will withstand this temperature.

2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side			Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
15,20,25,35 class	42,50,60 class	71 class	O.D. 6.4mm	I.D. 12-15mm	I.D. 8-10mm
O.D. 9.5mm	O.D. 12.7mm	O.D. 15.9mm			
Minimum bend radius				Thickness 10mm min.	
30mm or more					
Thickness 0.8mm (C1220T-O)					

3) Use separate thermal insulation for gas and liquid refrigerant pipes.

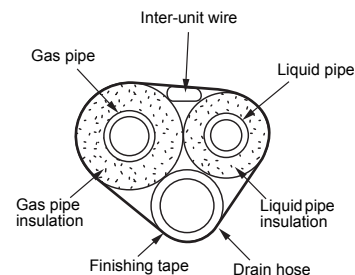

Trial Operation and Testing

1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

1) Trial operation may be disabled in either mode depending on the room temperature.

Use the remote controller for trial operation as described below.

2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).

3) For protection, the system disables restart operation for 3 minutes after it is turned off.

1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.

- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.

- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial operation from remote controller

1) Press "ON/OFF" button to turn on the system.

2) Press "TEMP" button (2 locations) and "MODE" button at the same time.

3) Press "TEMP" button and select "7".

4) Press "MODE" button.

5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press "ON/OFF" button.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	No operation	

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2015 Daikin

ERC

3P393185-7L 2015.12