


**DAIKIN**

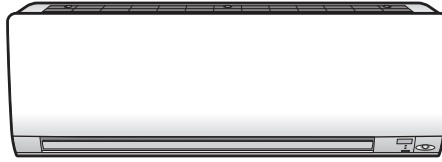

DAIKIN ROOM AIR CONDITIONER

---

# INSTALLATION MANUAL

R410A Split Series



## **MODELS**

---

FTXS35K2V1B

FTXS42K2V1B

FTXS50K2V1B

ATXS35K2V1B

ATXS50K2V1B

FTXS35K3V1B

FTXS42K3V1B

FTXS50K3V1B

ATXS35K3V1B

ATXS50K3V1B





CE - DECLARATION-OF-COMFORMITY  
CE - KONFORMITÄTSEKHLÄRUNG  
CE - DICHIARAZIONE-DI-CONFORMITA  
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ  
CE - CONFORMITÄTSEKHLÄRUNG

### DAIKIN INDUSTRIES, LTD.

- 01 (66) declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 02 (67) erklärt auf seine alleinige Verantwortung das die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 03 (68) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 04 (69) verklaart hierbij op zijn eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 05 (70) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 06 (71) δηλώνει υπό την αποκλειστική του ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
- 07 (72) объявляет на своем ответственности, что модели кондиционеров воздуха, к которым относится настоящее заявление:
- 08 (73) заявляет, исключительной под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:

### FTXS35K2V1B, FTXS42K2V1B, FTXS50K2V1B

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

- 02 (den folgenden Normen) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, dass sie gemäß unseren Anweisungen eingesetzt werden:
- 03 sont conformes à la(s) norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
- 04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
- 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
- 06 sono conformi all(i) seguente(i) standard(i) o altro(i) document(o) i, a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
- 07 είναι σύμφωνα με τις ακόλουθες(ες) προδιαγραφές(ες) ή άλλα έγγραφα(τα) κανονιστικά, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
- 08 following the provisions of:
- 09 gemäß den Vorschriften der:
- 10 conformément aux stipulations des:
- 11 overeenkomstig de bepalingen van:
- 12 siguiendo las disposiciones de:
- 13 secondo le prescrizioni per:
- 14 με τις προδιαγραφές των:
- 15 в соответствии с положениями:
- 16 in urma prevederilor:
- 17 zgodnie z postanowieniami Dyrektyw:
- 18 as set out in <> and judged positively by <>
- 19 enigi Certifikat <>
- 20 merk \* som det fremkommer i <> og gjennom positiv bedømmelse av <> tilgitt Sertifika <>
- 21 Huom \* mikä esitetään asiakirjassa <> ja joka on hyväksytty Sertifikaatit <> mukaisesti.
- 22 Poznámka \* jak bylo uvedeno i <> a pozitivně zjištěno <> v souladu s osvědčením <>
- 23 Napomena \* kako je izloženo u <> pozitivno ocijenjeno od strane <> prema Certifikatu <>
- 24 i henhold til Certifikat <>
- 25 H \* Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsfiler.
- 26 \*\* Kompanija Daikin Europe N.V. yuznavaoena sobremno komentir tehničkih dokumentacija.
- 27 \*\* Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsfiler.
- 28 \*\* Daikin Europe N.V. er autorizzata a compilare el Archivio de Construcción Técnica.
- 29 \*\* Daikin Europe N.V. er autorizzata a redigere i File Tecnico di Costruzione.

CE - DECLARAÇÃO-DE-CONFORMIDADE  
CE - ЗАЯВЛЕНИЕ-О-СОТВЕТСТВИИ  
CE - OVERENSTEMMELSESERKLÆRING  
CE - FÖRSÄKRAN-OM-ÖVERENSTEMMELSE

### DAIKIN INDUSTRIES, LTD.

- 10 (86) erklærer under eneansvar, at klimaenergimodelerne, som denne deklaration vedrører:
- 11 (87) deklarerar i egenansvar, att luftkonditioneringsmodellerna som berörs av denna deklaration innefattar att:
- 12 (88) erklærer et fuldstændigt ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration, imødebar at:
- 13 (89) ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittautua mallit:
- 14 (90) prohláší ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
- 15 (91) δηλώνει υπό εκτελεστική ευθύνη μου, ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
- 16 (92) объявляет на вшаю и полную ответственность, что модели кондиционеров, к которым относится настоящее заявление:
- 17 (93) заявляет, исключительной под свое ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:
- 18 (94) declara pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație:
- 19 (95) erklærer under eneansvar, at klimaenergimodelerne, som denne deklaration vedrører:
- 20 (96) deklarerar i egenansvar, att luftkonditioneringsmodellerna som berörs av denna deklaration innefattar att:
- 21 (97) erklærer et fuldstændigt ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration, imødebar at:
- 22 (98) ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittautua mallit:
- 23 (99) prohláší ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
- 24 (100) δηλώνει υπό εκτελεστική ευθύνη μου, ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
- 25 (101) объявляет на вшаю и полную ответственность, что модели кондиционеров, к которым относится настоящее заявление:
- 26 (102) заявляет, исключительной под свое ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:

CE - ERKLÆRING OM-SAMSVAR  
CE - ILMOITUS-YHDENMUKAISUDESTA  
CE - DEKLARACJA-ZGODNOŚCI  
CE - DECLARAȚIE-DE-CONFORTITATE

### DAIKIN INDUSTRIES, LTD.

- 19 (103) z svo odgovornostjo izjavlja, da so modeli klimatskih naprav, na katere se zjaja naračajo:
- 20 (104) kmitabo ona tabellei vastutusele, et klassove deklaratsion ali kuuluvad klimaseadmete mudelid:
- 21 (105) deklarerar på eget ansvar, att klassens va deklarationsmodellerna som omfattas av denna deklaration, imødebar att:
- 22 (106) yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittautua mallit:
- 23 (107) prohláší ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
- 24 (108) δηλώνει υπό εκτελεστική ευθύνη μου, ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
- 25 (109) объявляет на вшаю и полную ответственность, что модели кондиционеров, к которым относится настоящее заявление:
- 26 (110) заявляет, исключительной под свое ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:

CE - IZJAVA O SKLADNOSTI  
CE - VASTAVUSDEKLARACIJA  
CE - ATBILSTĪBAS-DEKLARĀCIJA  
CE - VYHLÁŠENIE-ZHODY  
CE - UYGUNLUK-BEYANI

### DAIKIN INDUSTRIES, LTD.

- 19 (111) z svo odgovornostjo izjavlja, da so modeli klimatskih naprav, na katere se zjaja naračajo:
- 20 (112) kmitabo ona tabellei vastutusele, et klassove deklaratsion ali kuuluvad klimaseadmete mudelid:
- 21 (113) deklarerar på eget ansvar, att klassens va deklarationsmodellerna som omfattas av denna deklaration, imødebar att:
- 22 (114) yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittautua mallit:
- 23 (115) prohláší ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
- 24 (116) δηλώνει υπό εκτελεστική ευθύνη μου, ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
- 25 (117) объявляет на вшаю и полную ответственность, что модели кондиционеров, к которым относится настоящее заявление:
- 26 (118) заявляет, исключительной под свое ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:

- 09 соответствует следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
- 10 overholder følgende standard(er) eller andre relevante retningslinje dokument(er), forudsat at disse anvendes i henhold til vore instrukser:
- 11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
- 12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse bruges i henhold til våre instruksjoner:
- 13 seuraavat seuraavien standardien ja muiden ohjeistusten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:
- 14 za predložku, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
- 15 u skladu sa sledećim standardom(im) ili drugim normativnim dokumentom(im), uz ujet da se oni koriste u skladu s našim uputstava:

### Low Voltage 2006/95/EC Machinery 2006/42/EC \*\* Electromagnetic Compatibility 2004/108/EC \*

- 16 Megnyitás \* az <> alapján, az <> igazolta a megjelölt, az <> tanúsítvány szerint
- 17 Uwaga \* zgodnie z dokumentacją <> pozytywną opinią <> Szwajcercem <>
- 18 Note \* apa como este estábil in <> s atõistõisi <> pozitõivam väärtõjumam saadaga ar sertifikaat <>
- 19 Opomba \* kolje doðečeno i <> a pozitivno zjãšeno <> v skladu s certifikatom <>
- 20 Märkus \* nagu on näidatud dokumentis <> ja heakis kiidatud <> järg vastavalt sertifikaadile <>
- 21 Zabeleška \* kako je odobreno s <> a ocenjeno pozitivno od <> nacionalno Certifikata <>
- 22 Pasaba \* kap mudiayta <> in kap legiamia mudiayta <> pagal Sertifikaat <>
- 23 Pozmes \* ako bilo uvedeno i <> a pozitivno zãšeno <> v skladu s osvedenim <>
- 24 Poznámka \* ako bolo uvedeno i <> a pozitivne zãšeno <> v skladu s certifikatom <>
- 25 Not \* nagu on näidatud dokumentis <> ja heakis kiidatud <> järg vastavalt sertifikaadile <>

- 13 \*\* Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsfiler.
- 14 \*\* Společnost Daikin Europe N.V. má oprávnění ke kompilaci souboru technické dokumentace.
- 15 \*\* Daikin Europe N.V. je autoriseret til at udarbejde de tekniske konstruktionsfiler.
- 16 \*\* A Daikin Europe N.V. jogosult a mûszaki konstrukciós dokumentáció összeállítására.
- 17 \*\* Daikin Europe N.V. má oprávnění do zberania i opracovávaní dokumentácie konštrukčnej.
- 18 \*\* Daikin Europe N.V. este autorizat să compileze Dosarul tehnic de construcție.

16 megjelöltek az alábbi szabvány(ok)/nek vagy egyéb irányított dokumentum(ok)/nak, ha azokat előírás szerint használták:

- 17 megfelel a következő normák vagy más dokumentumok normalizációs, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
- 18 sunt în conformitate cu următorii (următoarele) standarde (sau alte) documente (normative), cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
- 19 skladni z naslednjih standardov in drugih normativnih dokumentov, pri uporabi, če se uporabljajo v skladu z našimi navodili:
- 20 on vastastis järgmistele standarditele/või teistele normatiivsetele dokumentidele, kui need kasutatakse vastavalt meie juhenditele:
- 21 соответствует нашим стандартам или другим нормативным документам, при условии, что они используются в соответствии с нашими инструкциями:
- 22 allinva žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
- 23 tad, je leždi atbilstošai raščijajai norūdinėjim, atbisk sekjosištem standartem in citim normatiivim dokumentim:
- 24 su v skladu s naslednjimi (nimi) normami (ali) inimi (normativnimi) dokumenti(ami), za predpokaž, že sa používajú v súlade s našimi navodmi:
- 25 inünin, taimitatmatza grea kuliamatza kasulujia asgijadeki standartar ve norm beifinen begeberia ymudimur:

- 10 Direktive, as amended.
- 11 Direktiv, med senere ændringer.
- 12 Direktiv, med foretagne ændringer.
- 13 Direktive, med foretagne ændringer.
- 14 Richtlijn, zoals geamendard.
- 15 Direktive, según lo emendado.
- 16 Snjmenice, kako je izmjenjeno.
- 17 izmenjenih (ek) is modifikacij popravljeni.
- 18 Direktivar, cu amendamentele respective.
- 19 Direktive z vsemi spremembami.
- 20 Direktiv kojos modifikavus.
- 21 Директиви, с ревизије измјенјени.
- 22 Direktiveose su poprijavimas.
- 23 Direktivās un to papildinājums.
- 24 Snemnice, u planom izmenj.
- 25 Değişilmiş halleriyle Yönetmelikler.

<A>	DAIKIN.TCF.015 P9/09-2012
<B>	DEKRA Certification B.V. (NB0344)
<C>	74736-KRQ/EMC97-4957



Daikin Europe N.V., Zandvoordestraat 300, B-8400 Oostende Belgium

Shinri Sada  
Manager Quality Control Department

2012.10.11

**DAIKIN INDUSTRIES, LTD.**  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

- 19 \*\* Daikin Europe N.V. je pooblaščen za sestavo datoteke s tehnično mapo.
- 20 \*\* Daikin Europe N.V. on volituid kostiana tehnilist dokumentatsionni.
- 21 \*\* Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsfiler.
- 22 \*\* Daikin Europe N.V. yra įgaliota sudaryti šį techninės konstrukcijos failą.
- 23 \*\* Daikin Europe N.V. er autorizat să compileze dosarul tehnic de construcție.
- 24 \*\* Spoločnosť Daikin Europe N.V. je oprávnená vypracovať súbor technickej konštrukcie.
- 25 \*\* Daikin Europe N.V. Teknik Yapı Dosyasını derlemeye yetkilidir.




# Safety Precautions

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices





 **WARNING.....Failure to follow these instructions properly may result in personal injury or loss of life.**

 **CAUTION.....Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.**

- The safety marks shown in this manual have the following meanings:


 Be sure to follow the instructions.	 Be sure to establish an earth connection.	 Never attempt.
---	---	--

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.

 <b>WARNING</b>	
<ul style="list-style-type: none"> <li>• Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.</li> </ul>	
<ul style="list-style-type: none"> <li>• Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.</li> </ul>	
<ul style="list-style-type: none"> <li>• If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.</li> </ul>	
<ul style="list-style-type: none"> <li>• If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire.</li> </ul>	
<ul style="list-style-type: none"> <li>• After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.</li> </ul>	
<ul style="list-style-type: none"> <li>• When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R410A). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.</li> </ul>	
<ul style="list-style-type: none"> <li>• During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.</li> </ul>	
<ul style="list-style-type: none"> <li>• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.</li> </ul>	
<ul style="list-style-type: none"> <li>• Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.</li> </ul>	
<ul style="list-style-type: none"> <li>• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.</li> </ul>	

# Safety Precautions

## ⚠ CAUTION

- Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out. 
- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.
- Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.
- Sound pressure level is less than 70 dB(A).

# Accessories

## Indoor unit (A)–(H)

(A) Mounting plate	1	(D) Remote controller holder	1	(G) Operation manual	1
(B) Titanium apatite deodorizing filter	2	(E) Dry battery AAA. LR03 (alkaline)	2	(H) Installation manual	1
(C) Wireless remote controller	1	(F) Indoor unit fixing screw (M4 × 12L)	2		

# Choosing an Installation Site

Before choosing the installation site, obtain user approval.

## 1. Indoor unit

- The indoor unit should be sited in a place where:
  - 1) the restrictions on installation specified in the indoor unit installation drawings are met,
  - 2) both air inlet and air outlet have clear paths met,
  - 3) the unit is not in the path of direct sunlight,
  - 4) the unit is away from the source of heat or steam,
  - 5) there is no source of machine oil vapour (this may shorten indoor unit life),
  - 6) cool (warm) air is circulated throughout the room,
  - 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote controller range,
  - 8) the unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound),
  - 9) no laundry equipment is located.

## 2. Wireless remote controller

- Turn on all the fluorescent lamps in the room, if any, and find the site where remote controller signals are properly received by the indoor unit (within 7m).

# Preparation before Installation





## 1. Removing and installing the front panel

### • Removal method

- 1) Place your fingers in the indentations on the main unit (one each on the left and right sides), and open the front panel until it stops.
- 2) Continue to open the front panel further while sliding the panel to the right and pulling it toward you in order to disengage the front panel shaft on the left side. To disengage the front panel shaft on the right side, slide the panel to the left while pulling it toward you.

### • Installation method

Align the tabs of the front panel with the grooves, and push all the way in. Then close slowly. Push the centre of the lower surface panel firmly to engage the tabs.

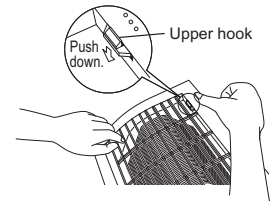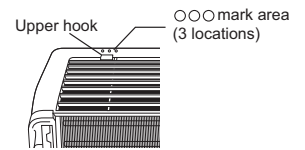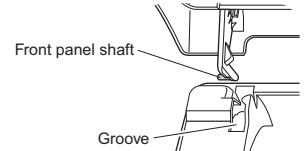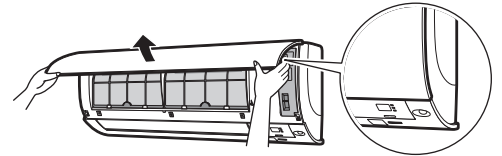

## 2. Removing and installing the front grille

### • Removal method

- 1) Remove the front panel to remove the air filter.
- 2) Remove the 3 screws from the front grille.
- 3) In front of the OOO mark of the front grille, there are 3 upper hooks. Lightly pull the front grille toward you with one hand, and push down on the hooks with the fingers of your other hand.

## When there is no work space because the unit is close to ceiling


### ⚠ CAUTION

- Be sure to wear protection gloves.

Place both hands under the centre of the front grille, and while pushing up, pull it toward you.

### • Installation method



- 1) Install the front grille and firmly engage the upper hooks (3 locations).
- 2) Install 3 screws of the front grille.
- 3) Install the air filter and then mount the front panel.

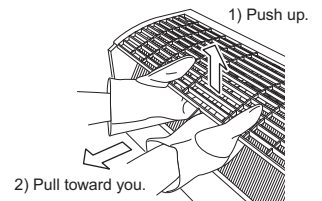

## 3. How to set the different addresses



When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.

- 1) Remove the metal plate electrical wiring cover. (Refer to the **Removal/attachment methods of metal plate electrical wiring covers.**)
  - 2) Cut the address jumper (JA) on the printed circuit board.
  - 3) Cut the address jumper (J4) in the remote controller.
- Be careful not to cut jumper (J8).

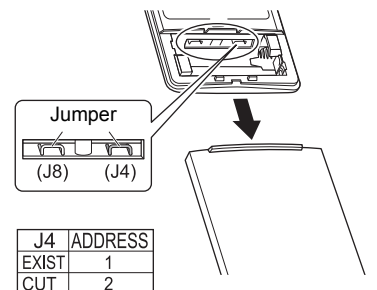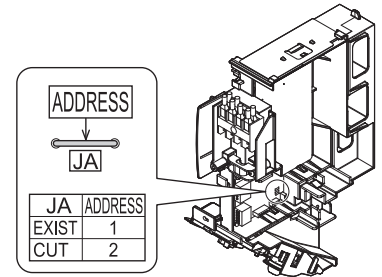


# Indoor Unit Installation Drawings

- How to attach the indoor unit**  
 Hook the claws of the bottom frame to the mounting plate.  
 If the claws are difficult to hook, remove the front grille.
- How to remove the indoor unit**  
 Push up the lower part of the front grille to release the claws.  
 If they are difficult to release, remove the front grille.

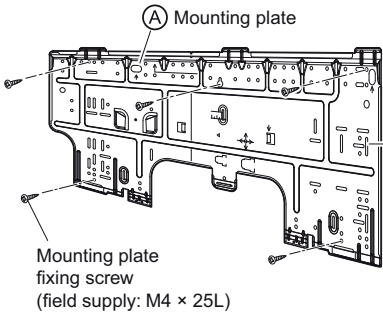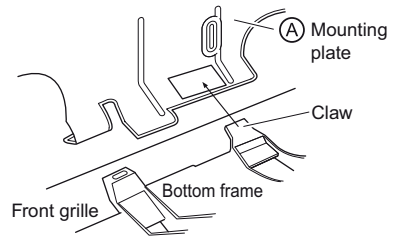


The mounting plate should be installed on a wall which can support the weight of the indoor unit.

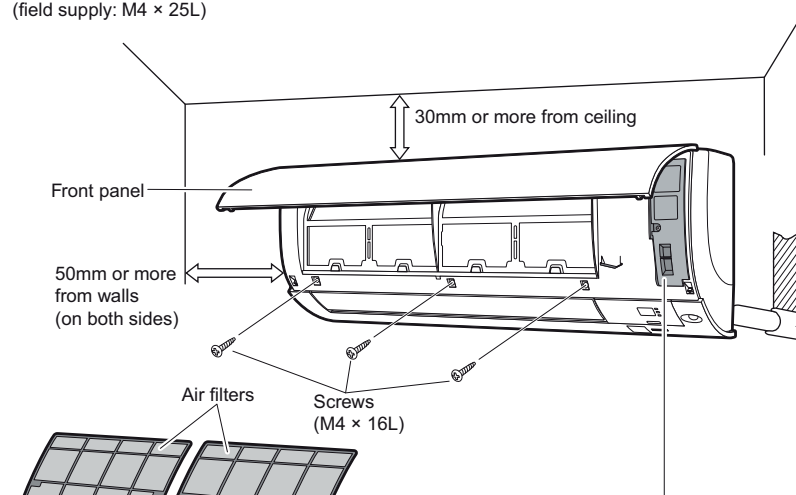

Cut thermal insulation pipe to an appropriate length and wrap it with tape, making sure that no gap is left in the insulation pipe's cut line.

Wrap the insulation pipe with the finishing tape from bottom to top.

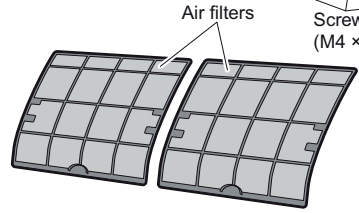

**Service lid**

- Opening the service lid**  
 The service lid is removable.
- Opening method**
  - 1) Remove the service lid screw.
  - 2) Pull out the service lid diagonally down in the direction of the arrow.
  - 3) Pull down.

**B) Titanium apatite deodorizing filter (2 pcs)**

**C) Wireless remote controller**

Before screwing the remote controller holder to the wall, make sure that control signals are properly received by indoor unit.




# Indoor Unit Installation

## 1. Installing the mounting plate


- The mounting plate should be installed on a wall which can support the weight of the indoor unit.
- Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
  - Secure the mounting plate to the wall with screws.

### Recommended mounting plate retention spots and dimensions

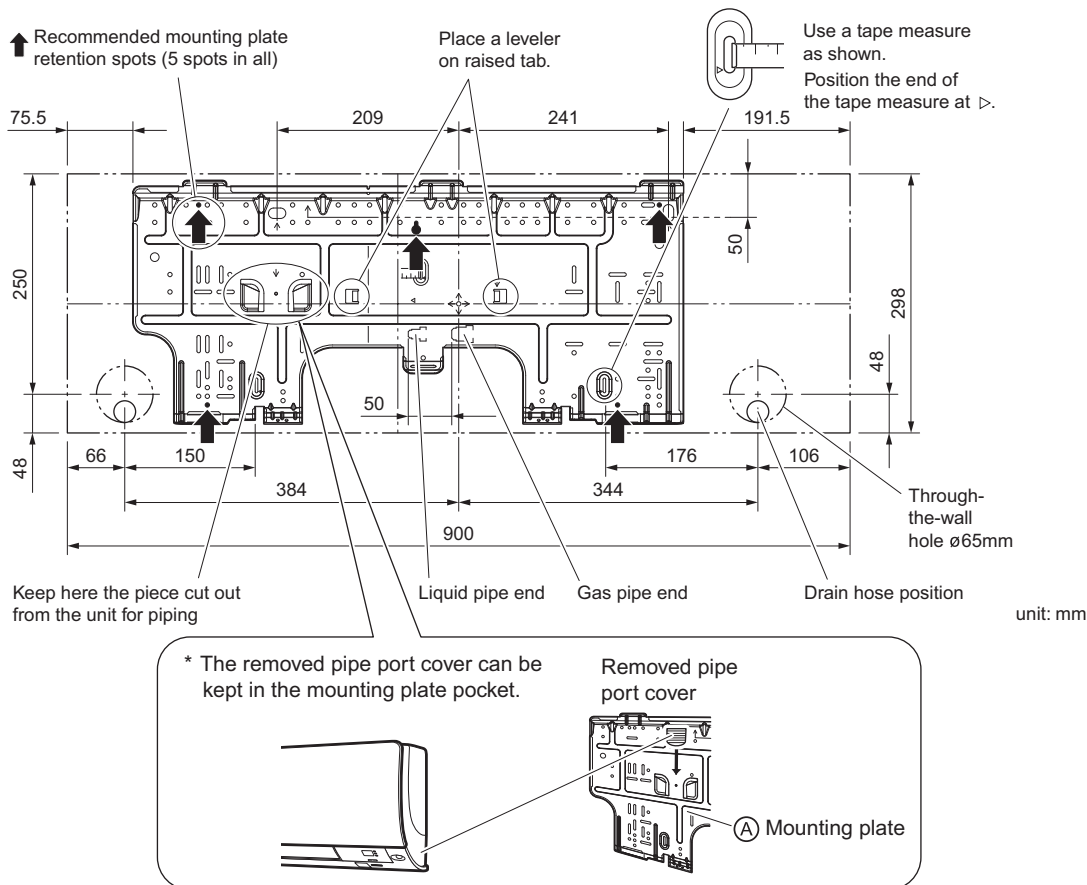


## 2. Boring a wall hole and installing wall embedded pipe

- For walls containing metal frame or metal board, be sure to use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.
  - Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
- Bore a feed-through hole of 65mm in the wall so it has a down slope toward the outside.
  - Insert a wall pipe into the hole.
  - Insert a wall cover into wall pipe.
  - After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

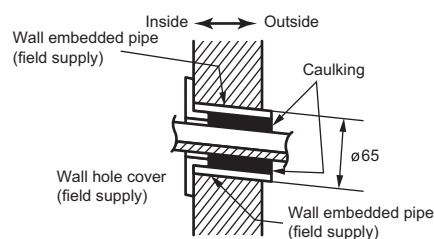


## 3. Installing the indoor unit

- In the case of bending or curing refrigerant pipes, keep the following precautions in mind.  
Abnormal sound may be generated if improper work is conducted.
- Do not strongly press the refrigerant pipes onto the bottom frame.
  - Do not strongly press the refrigerant pipes on the front grille, either.

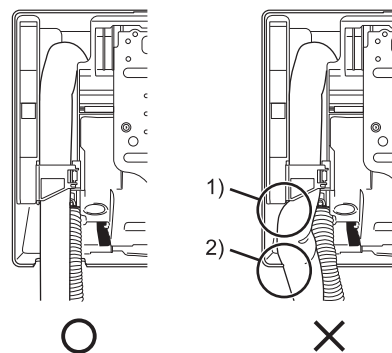

# Indoor Unit Installation

- Remove the pipe port cover as shown below.
- 1) Cut off the pipe port cover from inside the front grille using a coping saw. Apply the blade of the coping saw to the notch, and cut off the pipe port cover along the uneven inner surface.
  - 2) After cutting off the pipe port cover, perform filing. Remove the burrs along the cut section using a half round needle file.

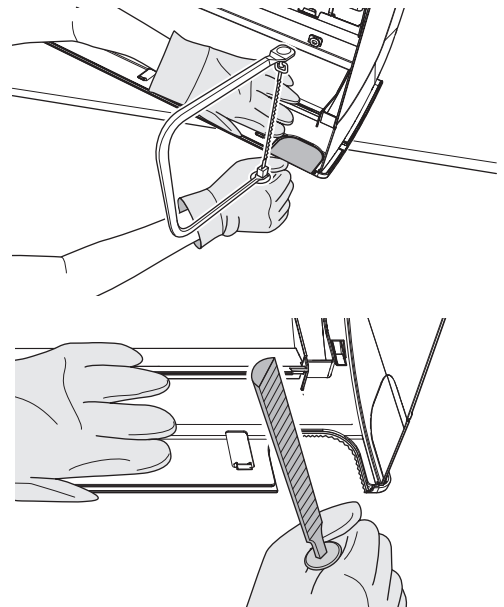


## ⚠ CAUTION


- If the pipe port cover is cut off using nippers, the front grille will be damaged. Please do not use nippers.
- Wear gloves during the pipe port cover removal.

### 3-1. Right-side, right-back, or right-bottom piping


- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 2) Wrap the refrigerant pipes and drain hose together with insulation tape.

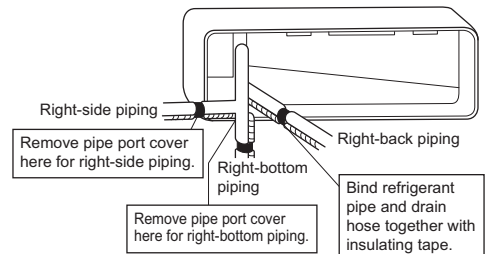

- 3) Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on the mounting plate hooks by using the △ markings at the top of the indoor unit as a guide.

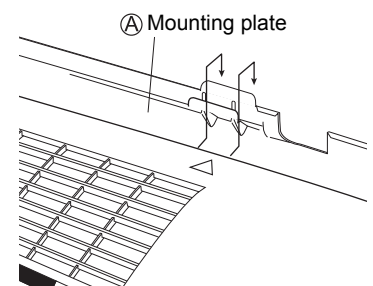

- 4) Open the front panel, then open the service lid. (Refer to preparation before installation.)
- 5) Pass the inter-unit wire from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward for easier work in advance. (If the inter-unit wire ends are to be stripped first, bundle wire ends with adhesive tape.)
- 6) Press the bottom frame of the indoor unit with both hands to set it on the mounting plate hooks. Make sure the wires do not catch on the edge of the indoor unit.

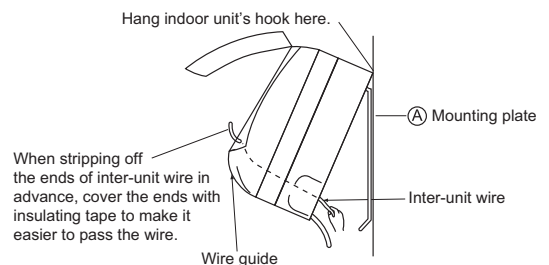

# Indoor Unit Installation


## 3-2. Left-side, left-back, or left-bottom piping

### How to replace the drain plug and drain hose

- **Replacing onto the left side**
  - 1) Remove the insulation fixing screw on the right and remove the drain hose.
  - 2) Remove the drain plug on the left side and attach it to the right side.
  - 3) Insert the drain hose and tighten with included insulation fixing screw.
    - \* (Forgetting to tighten this may cause water leakages.)


**Drain hose attachment position**  
\* The drain hose is on the back of the unit.

- 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.

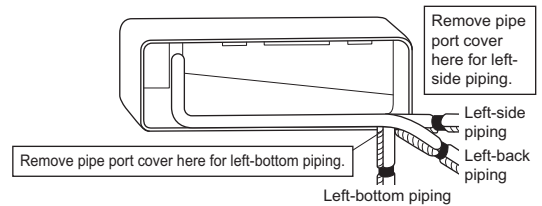


- 2) Be sure to connect the drain hose to the drain port in place of a drain plug.


### How to set drain plug

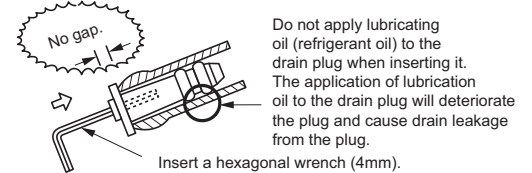

- 3) Shape the refrigerant pipes along the pipe path marking on the mounting plate.
- 4) Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on mounting plate hooks, using the  $\Delta$  markings at the top of the indoor unit as a guide.
- 5) Pull in the inter-unit wire.
- 6) Connect the inter-unit pipes.

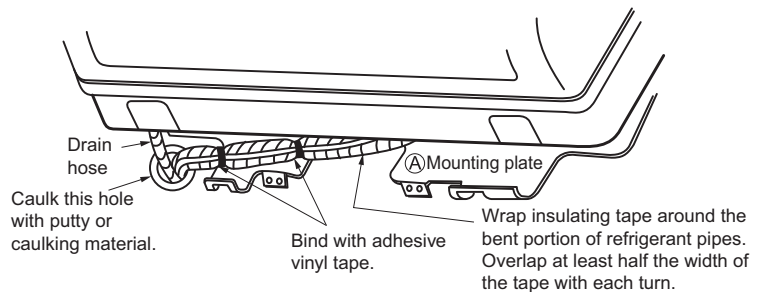


- 7) Wrap the refrigerant pipes and drain hose together with insulation tape as shown in the figure on the right (in case of setting the drain hose through the back of the indoor unit).
- 8) While exercising care so that the inter-unit wire does not catch indoor unit, press the bottom edge of indoor unit with both hands until it is firmly caught by the mounting plate hooks. Secure indoor unit to the mounting plate with indoor unit fixing screws (M4 × 12L).

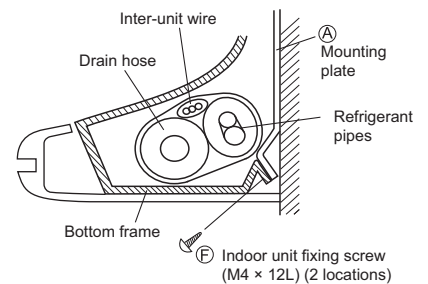





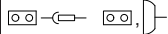


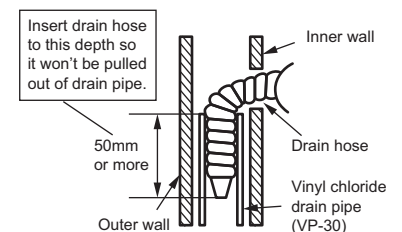





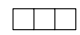


## 3-3. Wall embedded piping

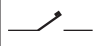Follow the instructions given under left-side, left-back, or left-bottom piping.

- 1) Insert the drain hose to this depth so it won't be pulled out of the drain pipe.

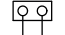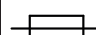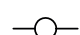

# Wiring diagram

Unified Wiring Diagram Legend			
For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol <sup>****</sup> in the part code.			
	: CIRCUIT BREAKER		: PROTECTIVE EARTH
	: CONNECTION		: PROTECTIVE EARTH (SCREW)
	: CONNECTOR		: RECTIFIER
	: EARTH		: RELAY CONNECTOR
	: FIELD WIRING		: SHORT CIRCUIT CONNECTOR
	: FUSE		: TERMINAL
	: INDOOR UNIT		: TERMINAL STRIP
	: OUTDOOR UNIT		: WIRE CLAMP
BLK : BLACK	GRN : GREEN	PNK : PINK	WHT : WHITE
BLU : BLUE	GRY : GREY	PRP, PPL : PURPLE	YLW : YELLOW
BRN : BROWN	ORG : ORANGE	RED : RED	
A*P : PRINTED CIRCUIT BOARD	PS : SWITCHING POWER SUPPLY		
BS* : PUSH BUTTON ON / OFF, OPERATION SWITCH	PTC* : THERMISTOR PTC		
BZ, H*O : BUZZER	Q* : INSULATED GATE BIPOLAR TRANSISTOR (IGBT)		
C* : CAPACITOR	Q*DI : EARTH LEAK CIRCUIT BREAKER		
AC*, CN*, E*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A : CONNECTION, CONNECTOR	Q*L : OVERLOAD PROTECTOR		
D*, V*D : DIODE	Q*M : THERMO SWITCH		
DB* : DIODE BRIDGE	R* : RESISTOR		
DS* : DIP SWITCH	R*T : THERMISTOR		
E*H : HEATER	RC : RECEIVER		
F*U, FU* (FOR CHARACTERISTICS REFER TO PCB INSIDE YOUR UNIT) : FUSE	S*C : LIMIT SWITCH		
FG* : CONNECTOR (FRAME GROUND)	S*L : FLOAT SWITCH		
H* : HARNESS	S*NPH : PRESSURE SENSOR (HIGH)		
H*P, LED*, V*L : PILOT LAMP, LIGHT EMITTING DIODE	S*NPL : PRESSURE SENSOR (LOW)		
HAP : LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*PH, HPS* : PRESSURE SWITCH (HIGH)		
HIGH VOLTAGE : HIGH VOLTAGE	S*PL : PRESSURE SWITCH (LOW)		
IES : INTELLIGENT EYE SENSOR	S*T : THERMOSTAT		
IPM* : INTELLIGENT POWER MODULE	S*W, SW* : OPERATION SWITCH		
K*R, KCR, KFR, KHuR : MAGNETIC RELAY	SA* : SURGE ARRESTOR		
L : LIVE	SR*, WLU : SIGNAL RECEIVER		
L* : COIL	SS* : SELECTOR SWITCH		
L*R : REACTOR	SHEET METAL : TERMINAL STRIP FIXED PLATE		
M* : STEPPER MOTOR	T*R : TRANSFORMER		
M*C : COMPRESSOR MOTOR	TC, TRC : TRANSMITTER		
M*F : FAN MOTOR	V*, R*V : VARISTOR		
M*P : DRAIN PUMP MOTOR	V*R : DIODE BRIDGE		
M*S : SWING MOTOR	WRC : WIRELESS REMOTE CONTROLLER		
MR*, MRCW*, MRM*, MRN* : MAGNETIC RELAY	X* : TERMINAL		
N : NEUTRAL	X*M : TERMINAL STRIP (BLOCK)		
n = * : NUMBER OF PASSES THROUGH FERRITE CORE	Y*E : ELECTRONIC EXPANSION VALVE COIL		
PAM : PULSE-AMPLITUDE MODULATION	Y*R, Y*S : REVERSING SOLENOID VALVE COIL		
PCB* : PRINTED CIRCUIT BOARD	Z*C : FERRITE CORE		
PM* : POWER MODULE	ZF, Z*F : NOISE FILTER		

## CAUTION

Note that operation will restart automatically if the main power supply is turned off and then back on again.

HIGH VOLTAGE – be sure to discharge the capacitor completely before repair work.



Risk of failure or water leakage!

Do not wash the inside of the air conditioner by yourself.

# Indoor Unit Installation

## 4. Wiring

- 1) Strip wire ends (15mm).
- 2) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 3) Connect the earth wires to the corresponding terminals.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) Shape the wires so that the service lid fits securely, then close service lid.

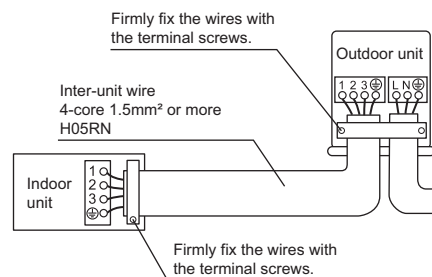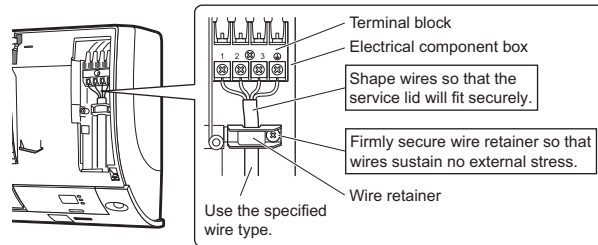


### ⚠ WARNING

- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

## 5. When connecting to an HA system.

(Wired remote controller, central remote controller etc.)


- 1) Remove the metal plate electrical wiring cover.  
(Refer to the **Removal/attachment methods of metal plate electrical wiring covers.**)
- 2) Snap off the claw.
- 3) Attach the connection cord to the S21 connector and pull the harness out through the notched part in the figure.
- 4) Replace the electrical wiring cover as it was, and pull the harness around, as shown in the figure.

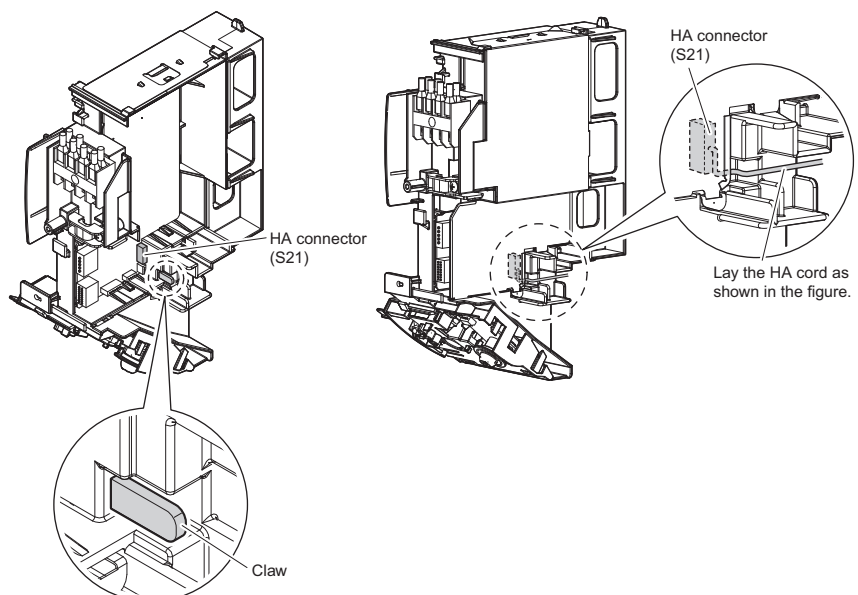

# Indoor Unit Installation

## • Removal methods of metal plate electrical wiring covers


- 1) Remove the front grille.
- 2) Remove the electrical wiring box. (1 screw)
- 3) Raise the 2 upper parts of the metal plate electrical wiring cover, pull the parts forward, and remove the 3 tabs.
- 4) Slide the metal plate electrical wiring cover upward and remove the 2 tabs on the lower side.

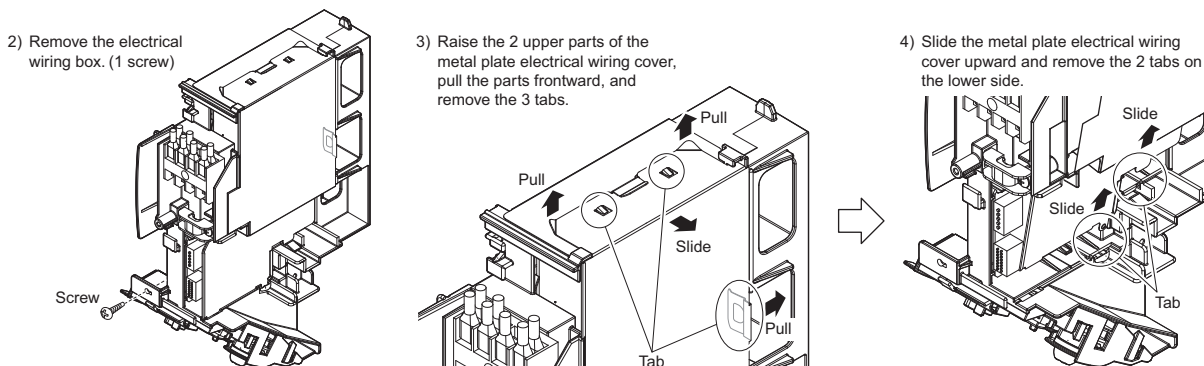


## • Attachment methods of metal plate electrical wiring covers

Attach the metal plate electrical wiring covers as shown below.

- 1) Lean the metal plate electrical wiring cover as shown in the figure and attach tab (1) on the lower side to the electrical wiring box.
- 2) Attach tab (2) on the lower side of the metal plate electrical wiring cover.

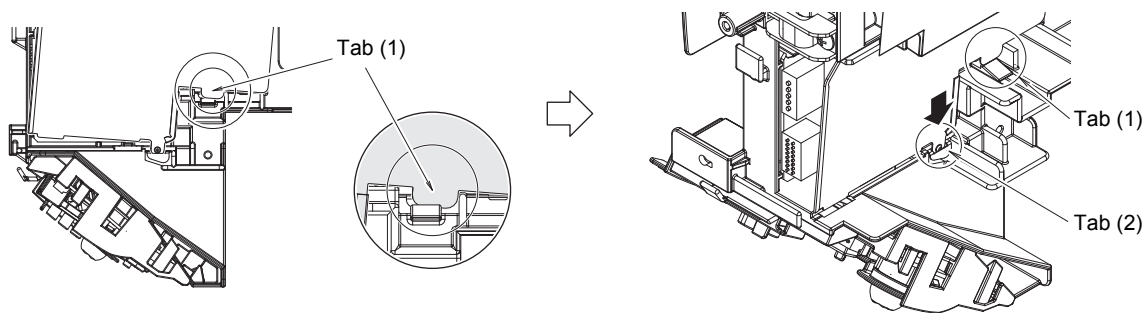


- 3) Push in the upper part of the metal plate electrical wiring cover and attach the 3 tabs.

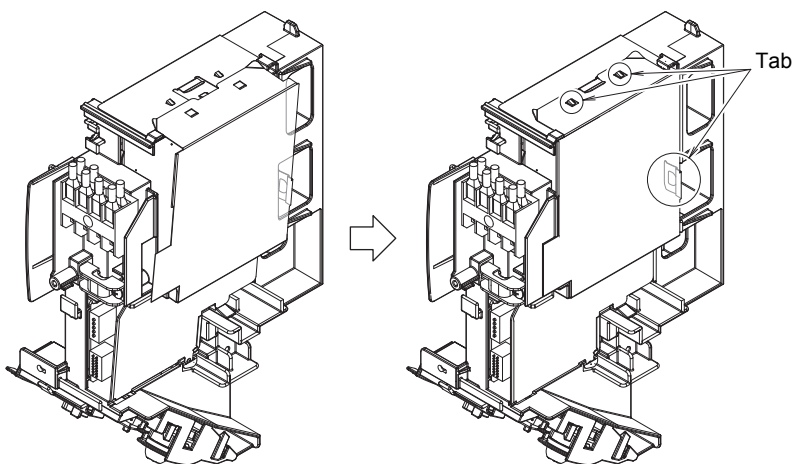


# Indoor Unit Installation

## 6. Drain piping


1) Connect the drain hose, as described right.

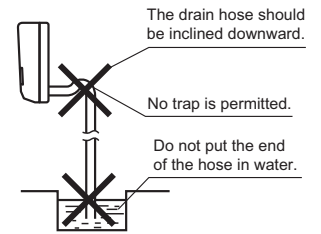


2) Remove the air filters and pour some water into the drain pan to check the water flows smoothly.

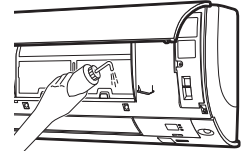

 
3) If drain hose extension or embedded drain piping is required, use appropriate parts that match the hose front end. [Figure of hose front end]



4) When extending the drain hose, use a commercially available extension hose with an inner diameter of 16mm. Be sure to thermally insulate the indoor section of the extension hose.

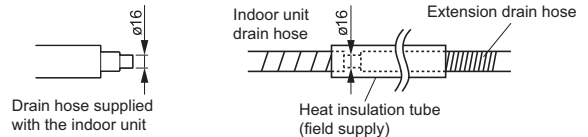

5) When connecting a rigid polyvinyl chloride pipe (nominal diameter 13mm) directly to the drain hose attached to the indoor unit as with embedded piping work, use any commercially available drain socket (nominal diameter 13mm) as a joint.

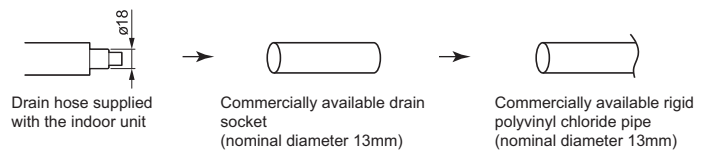

# Refrigerant Piping Work


## 1. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.



Set exactly at the position shown below.

A	Flaring	
	Flare tool for R410A	Conventional flare tool
	Clutch-type	(Rigid-type) (Imperial-type)
	0-0.5mm	1.0-1.5mm 1.5-2.0mm

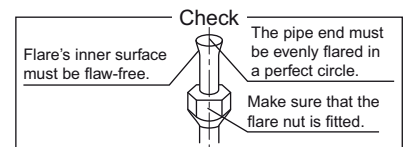

### ⚠ WARNING

- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R410A unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.


# Refrigerant Piping Work

## 2. Refrigerant piping

### ⚠ CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.


Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

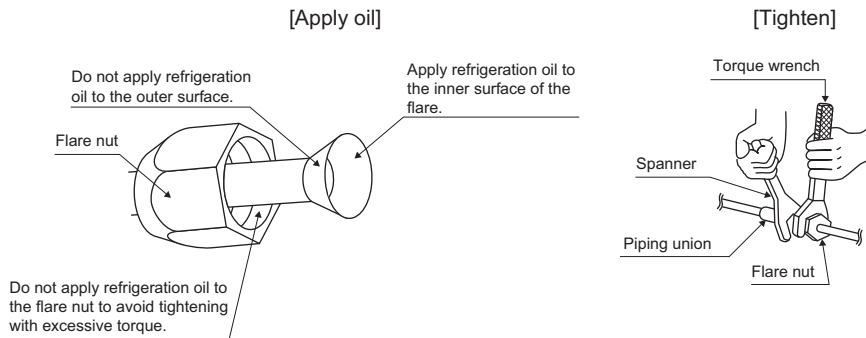

Flare nut tightening torque		
Gas side		Liquid side
35, 42 class	50 class	1/4 inch
3/8 inch	1/2 inch	
32.7-39.9N • m (330-407kgf • cm)	49.5-60.3N • m (505-615kgf • cm)	14.2-17.2N • m (144-175kgf • cm)


### 2-1. Caution on piping handling

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.

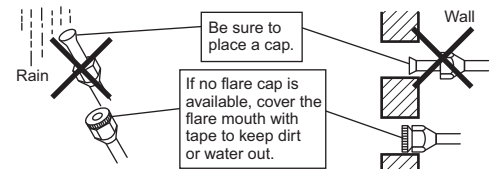

### 2-2. Selection of copper and heat insulation materials

- When using commercial copper pipes and fittings, observe the following:
  - 1) Insulation material: Polyethylene foam  
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)  
Refrigerant gas pipe's surface temperature reaches 110°C max.  
Choose heat insulation materials that will withstand this temperature.

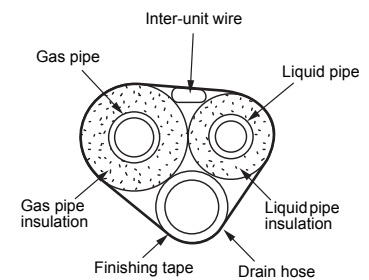

- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side		Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
35,42 class	50 class	O.D. 6.4mm	I.D. 12-15mm	I.D. 8-10mm
O.D. 9.5mm	O.D. 12.7mm			
Minimum bend radius			Thickness 10mm Min.	
30mm or more				
Thickness 0.8mm (C1220T-O)				

- 3) Use separate thermal insulation for gas and liquid refrigerant pipes.



# Trial Operation and Testing

## 1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
  - 1) Trial operation may be disabled in either mode depending on the room temperature. Use the remote controller for trial operation as described below.
  - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
  - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.

1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.

- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.


### Trial operation from remote controller

- 1) Press "ON/OFF" button to turn on the system.
- 2) Press "TEMP" button (2 locations) and "MODE" button at the same time.
- 3) Press "TEMP" button and select "7".
- 4) Press "MODE" button.
- 5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press "ON/OFF" button.

## 2. Test items

Test items	Symptom (diagnostic display on RC)	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	
☀ will appear when the MODE button is pressed.*	No heating	

\* If the ☀ is not displayed, make sure not to cut the switching jumper (J8) for cooling operation when cutting the address jumper. If it has been cut, replace the remote controller.

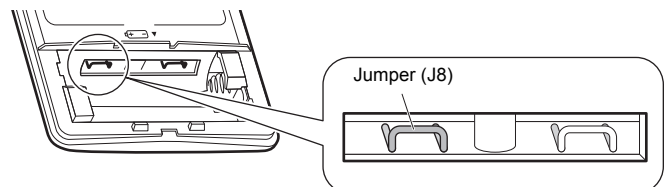

**DAIKIN INDUSTRIES, LTD.**

Head office:  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:  
JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan  
[http://www.daikin.com/global\\_ac/](http://www.daikin.com/global_ac/)

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

Copyright 2013 Daikin