

---


***VRV* SYSTEM      Air Conditioner**

---

**MODELS**

Wall-mounted type

<b>FXYA20KJV1</b>	<b>FXYAP20KV1</b>
<b>FXYA25K-VE(C) • JV1</b>	<b>FXYAP25KV1</b>
<b>FXYA32K-VE(C) • JV1</b>	<b>FXYAP32KV1</b>
<b>FXYA40K-VE(C) • JV1</b>	<b>FXYAP40KV1</b>
<b>FXYA50K-VE(C) • JV1</b>	<b>FXYAP50KV1</b>
<b>FXYA63K-VE(C) • JV1</b>	<b>FXYAP63KV1</b>

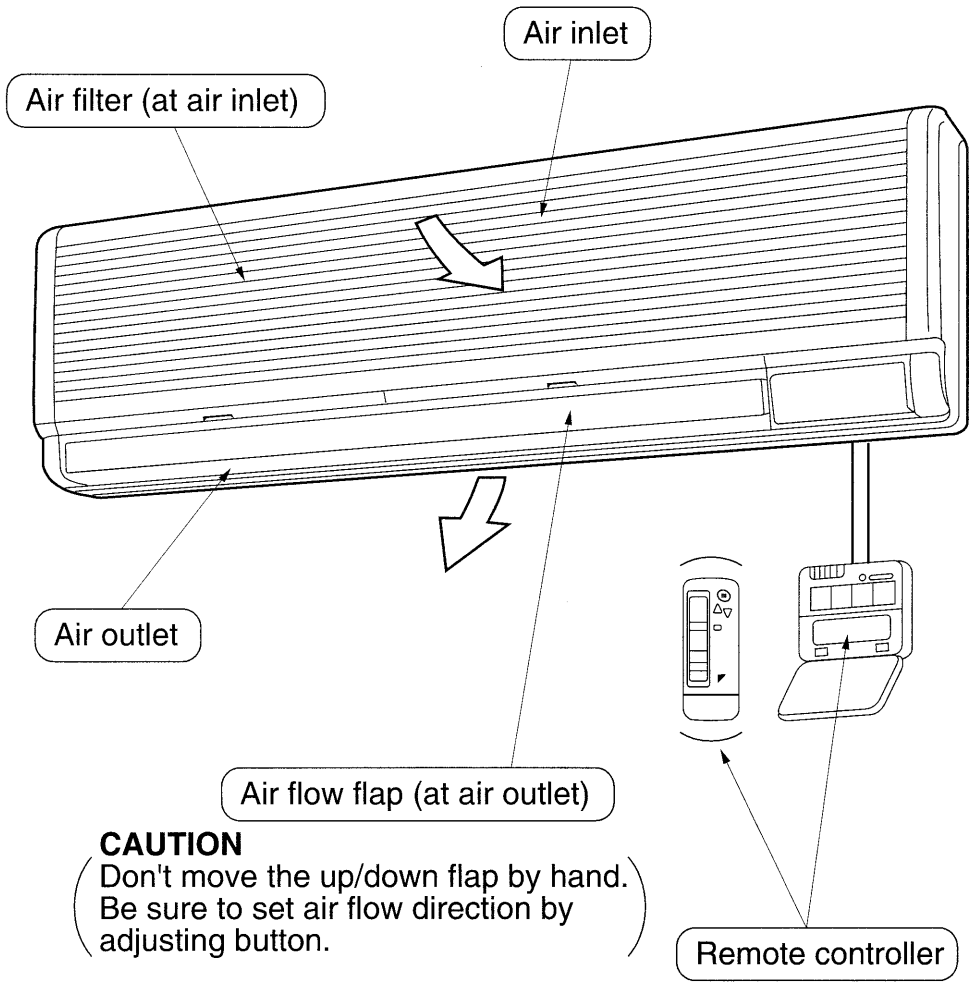


Thank you for purchasing this Daikin air conditioner. Carefully read this operation manual before using the air conditioner. It will tell you how to use the unit properly and help you if any trouble occurs. This manual explains about the indoor unit only. Use it along with the operation manual for the outdoor unit. After reading the manual, file it away for future reference.

## MAINTENANCE
 
### IMPORTANT!

- ONLY A QUALIFIED SERVICE PERSON IS ALLOWED TO PERFORM MAINTENANCE
- BEFORE OBTAINING ACCESS TO TERMINAL DEVICES, ALL POWER SUPPLY CIRCUITS MUST BE INTERRUPTED
- DO NOT USE WATER OR AIR OF 50°C OR HIGHER FOR CLEANING AIR FILTERS AND OUTSIDE PANELS

### HOW TO CLEAN THE AIR FILTER


Clean the air filter when the display shows “” (TIME TO CLEAN AIR FILTER)

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.

(As a yardstick for regulating yourself, consider cleaning the filter once every two weeks.)

#### 1. Remove the air filter.


Pull the handle in the direction of the arrow.

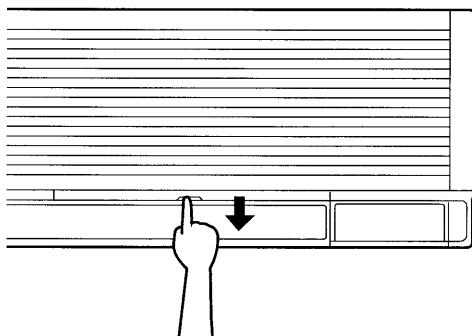

#### 2. Clean the air filter.

Use vacuum cleaner (A) or wash the air filter with water (B).

(A) Using a vacuum cleaner

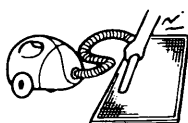

#### (B) Washing with water




To clean the air filter, wash with a soft bristle brush and neutral detergent.

Remove water and dry in the shade.

#### 3. Reset the air filter in place.

After cleaning the filter, do not forget to put it back the way it was before.

#### 4. Press the FILTER RESET button on the remote controller.

The display “” (TIME TO CLEAN AIR FILTER) vanishes.

(For details, see the operation manual for the outdoor unit.)

#### Note

- Do not remove the air filter except when cleaning. Unnecessary handling may damage the filter.

### HOW TO CLEAN AIR OUTLET AND OUTSIDE PANELS

1. Clean with soft cloth.
2. When it is difficult to remove stains, use water or neutral detergent.

#### Notes

- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.
- Clean the air inlet grille when it is shut.

**DAIKIN INDUSTRIES, LTD.**

Head office:  
Umeda Center Bldg., 4-12, Nakazaki-Nishi 2 chome,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:  
Shinjuku Sumitomo Bldg., 6-1 Nishi-Shinjuku  
2-chome, Shinjuku-ku, Tokyo, 163-0290 Japan

**DAIKIN EUROPE NV**

Zandvoordestraat 300, B-8400 Oostende, Belgium