




















DAIKIN



INSTALLATION AND OPERATION MANUAL

***VRV* System air conditioners**

FXMQ50P7VEB9
FXMQ63P7VEB9
FXMQ80P7VEB9
FXMQ100P7VEB9
FXMQ125P7VEB9

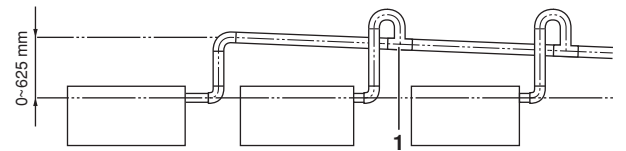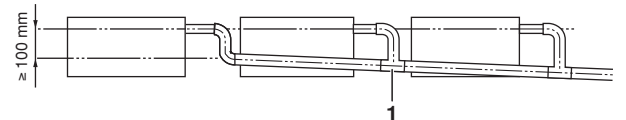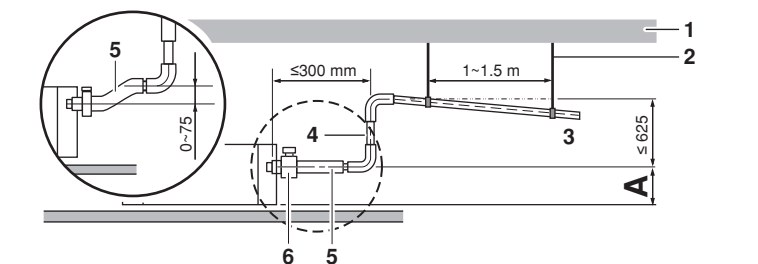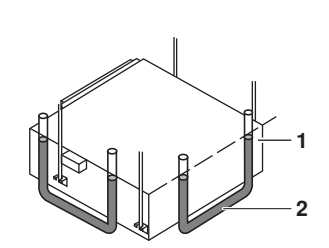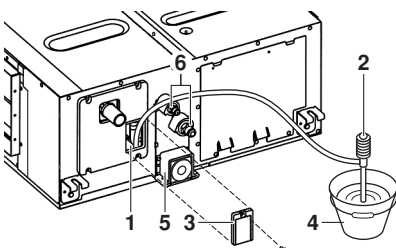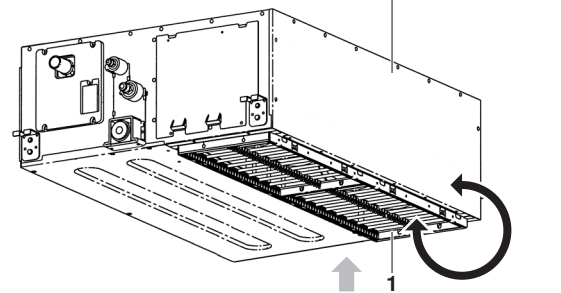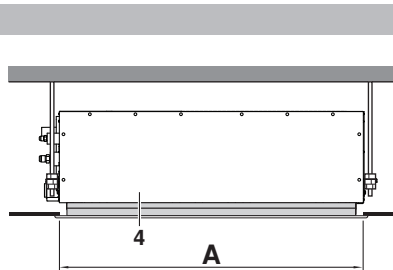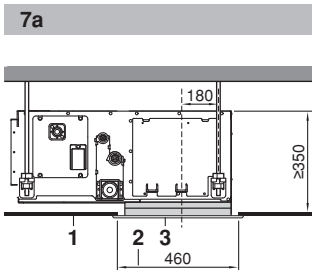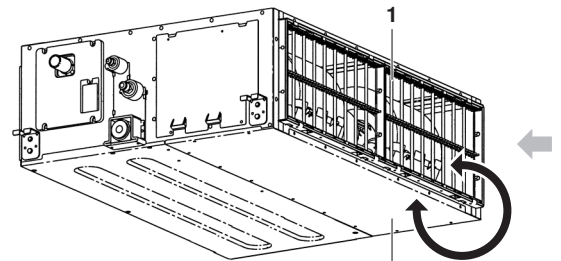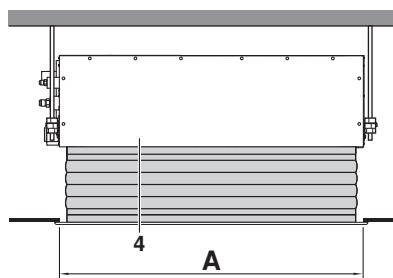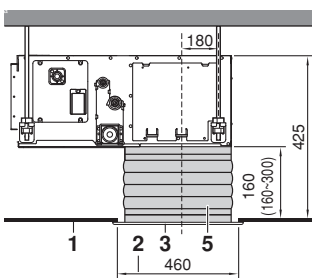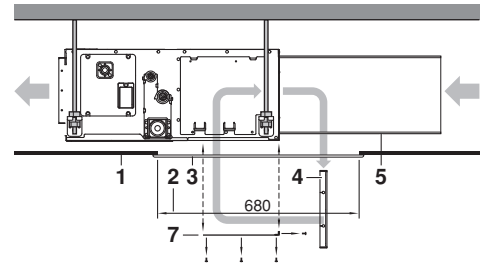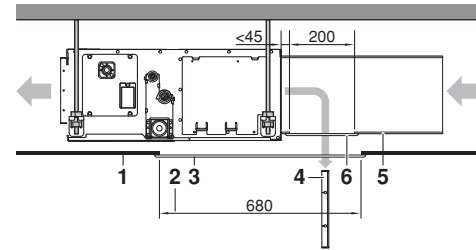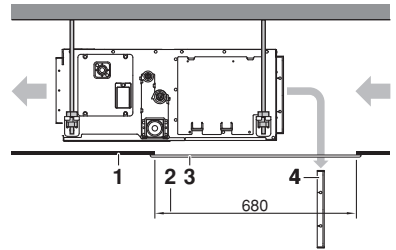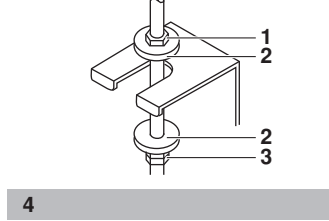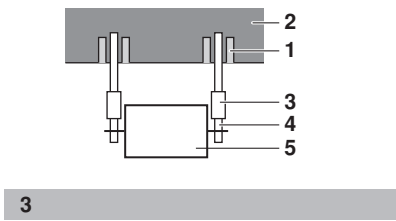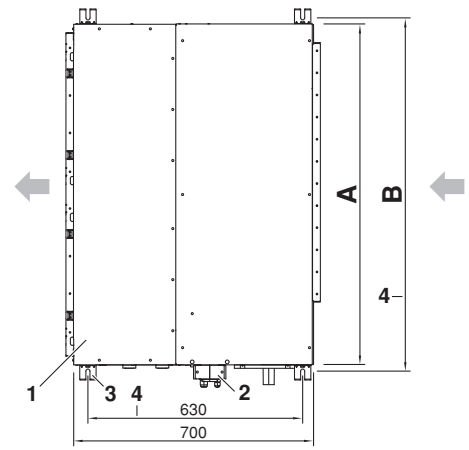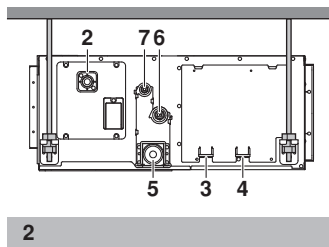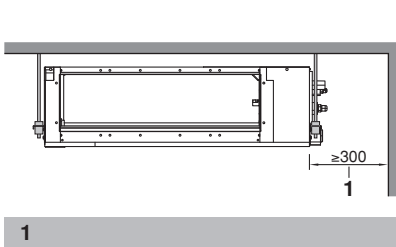

CE - DECLARATION-OF-COMFORMITY
CE - KONFORMITÄTSPRÄKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHARAZIONE-DE-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАРЯВЛЕНИЕ-О-СОТВЕТСТВИИ
CE - ОПЫДЕЛСЯСЕРКЛЕРИНГ
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMMELSE

CE - ERKLÄRUNG OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUDECLARATIOON
CE - DEKLARACIJA-ZA-SOBTVEJTBVIE
CE - ATTIKITES-DEKLARACIJA
CE - ATBILSTIBAS-DEKLARACIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMULULUK-BEYANI

Daikin Europe N.V.

- 01 06B declares under its sole responsibility that the air conditioning models to which this declaration relates;
- 02 06D erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
- 03 06E déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;
- 04 06L verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
- 05 06E declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;
- 06 06I δηλώνει στα αποκλειστικά της ευθύνη ότι τα ονόματα των κλιματιστικών μονοκλιματικών ονομαστικά αυτής της δήλωσης;
- 07 06C δηλώνει στα αποκλειστικά της ευθύνη ότι τα ονόματα των κλιματιστικών μονοκλιματικών ονομαστικά αυτής της δήλωσης;
- 08 06D déclare sous sa seule responsabilité que ces modèles de air conditionné a que esta declaración se réfère.

FXMQ50P7VEB9, FXMQ63P7VEB9, FXMQ80P7VEB9, FXMQ100P7VEB9, FXMQ125P7VEB9,

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
- 02 06D den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/sprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen/angegeben eingesetzt werden;
- 03 sont conformes à l(e) ou aux norm(e)s ou autre(s) document(s) normal(is) pour autant qu'ils soient utilisés conformément à nos instructions;
- 04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies;
- 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normal(is), siempre que sean utilizados de acuerdo con nuestras instrucciones;
- 06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni;
- 07 эти модели соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям;
- 08 este în conformitate cu următoarele standarde sau alte documente normative, în condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre;
- 09 skladen z naslednjih standardov in drugih normativnih dokumentov, ob predpostavki, da se uporabljajo v skladu z našimi navodili;
- 10 under iagttagelse at bestemmelse i:
- 11 enligt vilkoren i:
- 12 gilt i henhold til bestemmelserne i:
- 13 onnaltaihen määrätksissä:
- 14 overeenkomstig de bepalingen van:
- 15 segundo las disposiciones de:
- 16 prema odredbama:
- 17 kvoeti aiči:
- 18 в соответствии с положениями:
- 19 ob upoštevanju določb:
- 20 vastavalt nõuetele:
- 21 enligt kraven i:
- 22 iakttagelse av föreskrifterna i:
- 23 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse bruges i henhold til våre instruksjoner.
- 24 održavajući ustanovljeni:
- 25 unun kəsalımlama uşun olarak:

EN60335-2-40,

- 01 following the provisions of:
- 02 conformément aux stipulations des:
- 03 overeenkomstig de bepalingen van:
- 04 secondo le prescrizioni per:
- 05 по условиям применения:
- 06 under iagttagelse af bestemmelserne i:
- 07 enligt vilkoren i:
- 08 i henhold til bestemmelserne i:
- 09 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse bruges i henhold til våre instruksjoner.
- 10 under iagttagelse af bestemmelserne i:
- 11 enligt vilkoren i:
- 12 i henhold til bestemmelserne i:
- 13 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse brukes i henhold til våre instruksjoner.
- 14 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning av at disse brukes i henhold til våre instruksjoner.
- 15 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning av at disse brukes i henhold til våre instruksjoner.
- 16 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning av at disse brukes i henhold til våre instruksjoner.
- 17 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning av at disse brukes i henhold til våre instruksjoner.
- 18 i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning av at disse brukes i henhold til våre instruksjoner.

- 09 06B заявляет, исключительнo под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящая заявленoе;
- 10 06D erklærer under eneansvar, at klimaanleggsmodellene, som denne deklarasjon vedrører;
- 11 06E déclare à responsabilité exclusive que les appareils d'air conditionné visés par la présente déclaration;
- 12 06L verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
- 13 06E declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;
- 14 06I δηλώνει στα αποκλειστικά της ευθύνη ότι τα ονόματα των κλιματιστικών μονοκλιματικών ονομαστικά αυτής της δήλωσης;
- 15 06C δηλώνει στα αποκλειστικά της ευθύνη ότι τα ονόματα των κλιματιστικών μονοκλιματικών ονομαστικά αυτής της δήλωσης;
- 16 06D déclare sous sa seule responsabilité que ces modèles de air conditionné a que esta déclaration se réfère.

- 08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normal(is), desde que estes sejam utilizados de acordo com as nossas instruções;
- 09 соотвeствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям;
- 10 overholder følgende standard(er) eller andetlænde rettgivende dokument(er), brudtset at disse anvendes i henhold til vore instruksjoner.
- 11 respektive utingsning är utförd i överensstämmelse med och tilljer följande standard(er) eller andra normgivande dokument, under förutsättning at användning sker i överensstämmelse med våra instruktioer.
- 12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning af at disse brukes i henhold til våre instruksjoner.
- 13 vastanaat searvaaten standarden ja muiden opeelisten dokumentien vaatimaks eedatühten, etä nää tähtvetaän ohjeidemme mukaisesti;
- 14 za preopklad, že jsou využívány v souladu s našimi pokyny, odpovídá následujícím normám nebo normativním dokumentům;
- 15 u skladu sa slijedećim standardom(na) ili drugim normativnim dokumentom(na), uz uvjet da se oni koriste u skladu s našim uputama;

Low Voltage 2014/35/EU Machinery 2006/42/EC Electromagnetic Compatibility 2014/30/EU

- 11 Information * enligt <A> och godkända av enligt Certifikat <C> *
- 12 Merk * som del i dokument <A> og gennemgået og gennemgået <C> *
- 13 Huom * jotka on esitetty asiakirjassa <A> ja jotka on hyväksynyt Sertifikaatti <C> mukaisesti.
- 14 Poznámka * jak bylo uvedeno <A> a pozinně zjiřeno v souladu s osvědčením <C> *
- 15 Napomena * kako je izloženo u <A> pozitivno ocijenjeno od strane prema Certifikatu <C> *
- 16 Megjegyzés * a) <A> alapján, a)z igazolta a megjelölt, a)z <C> tanúsítvány szerint.
- 17 Uwaga * zgodnie z dokumentacją <A>, pozytywną opinię wydał i świadectwo <C> *
- 18 Note * äga cum este stabil în <A> și apreciat pozitiv în în conformitate cu Certificatul <C> *
- 19 Opomba * kolje doobojeno v <A> in odobreno s strani v skladu s osvedčenjem <C> *
- 20 Märkus * nagu on näidatud dokumentis <A> ja heakis kiidatud järg vastavalt sertifikaatile <C> *

- 13** Daikin Europe N.V. on valitud loomatu laimain Tehtisen asajänän.
- 14** Společnost Daikin Europe N.V. má oprávnění ke kompazit soboru technické konstrukce.
- 15** Daikin Europe N.V. er autoriseret at kompazit tekniske konstruktionsfilen.
- 16** A Daikin Europe N.V. jógsultti a mészak konstrukciós dokumentáció összejállítására.
- 17** Daikin Europe N.V. má oprávnění do zberania a porozovovania dokumentácií konstrukciójnej.
- 18** Daikin Europe N.V. este autorizat să completeze Dosari tehnici de construcție.

Shigeki Morita
Director

Ostend, 2nd of November, 2016



- 17 06L deklaruje na vlastní výkřazna odpovědnost, že modely klimatizačorů, kýchých oduky nímejša deklaracija;
- 18 06D decia på proprie răspundere că aparatele de aer condiționat la care se referă această declarație;
- 19 06E z svo odgovornosti izjavljaj, da so modeli klimatskih naprav, na katere se izjava nanaša;
- 20 06L kmitab oia iaeliku vastutusele, et käesoleva deklaratsiooni alla kuuluvad klimaseadmed müüdi;
- 21 06E deklara på egen ansvarsvor, at modellerne klimatiske installationer, som er omfattet af denne deklarasjon;
- 22 06L västas savo atsakomybe šleba, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma ši deklaracija;
- 23 06L västas svoju odgovornost, že leto klimatizované modely, na ktoré sa vzťahuje toto vyhlásenie;
- 24 06D vyhlásuje na vlastní zodpovednosť, že leto klimatizované modely, na ktoré sa vzťahuje toto vyhlásenie;
- 25 06B lamamen kendi sorumluluğunda olmaks üzere bu bildirim için oduğu klima modellerinin aşağıdaki standartlara ve norm belirlen begetele uyumludur.

- 16 megjelöltek az alábbi szabvány(ok)nak vagy egyéb irányított dokumentum(ok)nak, ha azokat előírás szerinti használatuk;
- 17 spremlaja wymogi następných norm i iných dokumentov normalizačnych, pod vaučiením že užývane są zgodnie z następujimi instrukcjami;
- 18 sunt în conformitate cu următoarele standarde (sau alte) documente (normative), cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre;
- 19 skladen z naslednjih standardov in drugih normativnih dokumentov, ob predpostavki, da se uporabljajo v skladu z našimi navodili;
- 20 on vastavusse järgmise standard(e)ga või teiste normatiivse dokumenteidega, kui neid kasutatakse vastavalt meie juhendile;
- 21 соотвeтствует на следующие стандарты или другие нормативные документы, при условии, что они используются в соответствии с нашими инструкциями;
- 22 alinka žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus;
- 23 lad, ja letoči atbilstošijie norādījumiem, atbilst sekojošiem standartiem, un citiem normatīviem dokumentiem;
- 24 su v yzhodě s nasledujícím(n) normo(n)mi) alebo jinými (normativními) dokumento(n)mi), za předpokladu, že se používají v sdule s našimi návody;
- 25 ünün, ilatmatlamıza göre kullanılması koşulluça aşağıdaki standartlar ve norm belirlen begetele uyumludur.

- 10 Direktiver, med senere ændringer.
- 11 Direktiv, med foregående ændringer.
- 12 Direktiv, med betaltede ændringer.
- 13 Direktive, salaisina kuin ne ovat muutteluna.
- 14 v platnem zřetě.
- 15 Smjerica, kako je izmijenjeno.
- 16 irányelv(ek) és módosítások rendelkezései.
- 17 z późniejszych poprawkami.
- 18 Directive, cu amendamentele respective.
- 19 Direktive, med senere ændringer.
- 20 Direktiv, med foregående ændringer.
- 21 Direktiv, med betaltede ændringer.
- 22 Direktive, salaisina kuin ne ovat muutteluna.
- 23 Direktive, salaisina kuin ne ovat muutteluna.
- 24 Smjerica, kako je izmijenjeno.
- 25 Degisdirimis hallitelylle Forenemelkter.

- 21 Zabavka * kako je izloženo v <A> u ocjeno pozitivno od ocijeno Certifikata <C> *
- 22 Pasaba * kaip nustatyta <A> ir kaip įteigiami išspreia pagal Sertifikaatą <C> *
- 23 Pezimes * kā norādīts <A> ir pozitīviem vērtējumiem saskaņā ar sertifikātu <C> *
- 24 Poznámka * ako bolo uvedené v <A> s pozitívne zistené v sdule s osvedčením <C> *
- 25 Not * <A> da beirigtigt gbi ve <C> Sertifikaama göre tarindan olumlu deęerlendirildiği gibi.

<A>	DAIKIN.TCF.024G12/07-2016
	TUV (NB1856)
<C>	0510260101

DAIKIN EUROPE N.V.
Zandvoordestraat 300, B-8400 Oostende, Belgium

3P468238-4

CONTENTS

	Page
Before installation.....	1
Important information regarding the refrigerant used.....	2
Selecting installation site.....	2
Preparations before installation.....	3
Indoor unit installation.....	4
Refrigerant piping work.....	4
Drain piping work.....	5
Electric wiring work.....	6
Wiring example and how to set the remote controller.....	7
Wiring example.....	8
Field setting.....	8
Installation of the decoration panel.....	10
Test operation.....	10
Maintenance.....	10
Disposal requirements.....	11
Wiring diagram.....	12



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

The English text is the original instruction. Other languages are translations of the original instructions.



Installation must be done by a licensed technician. The choice of materials and installation must comply with the applicable national and international regulations.

BEFORE INSTALLATION


 
 
 
 
 
 
 
- Leave the unit inside its packaging until you reach the installation site. Where unpacking is unavoidable, use a sling of soft material or protective plates together with a rope when lifting, this to avoid damage or scratches to the unit.
- Refer to the installation manual of the outdoor unit for items not described in this manual.
- Caution concerning refrigerant series R410A:
The connectable outdoor units must be designed exclusively for R410A.
- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.

Precautions

- Do not install or operate the unit in rooms mentioned below.
 - Places with mineral oil, or filled with oil vapour or spray like in kitchens. (Plastic parts may deteriorate.)
 - Where corrosive gas like sulphurous gas exists. (Copper tubing and brazed spots may corrode.)
 - Where volatile flammable gas like thinner or gasoline is used.
 - Where machines generating electromagnetic waves exist. (Control system may malfunction.)
 - Where the air contains high levels of salt such as air near the ocean and where voltage fluctuates a lot (e.g. in factories). Also in vehicles or vessels.
- Do not install accessories on the casing directly. Drilling holes in the casing may damage electrical wires and consequently cause fire.
- This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Accessories

Check if the following accessories are included with your unit.

 Metal clamp 1 piece	 Drain hose 1 piece	 Washer for hanging bracket 8 pieces	 1 2 Medium sealing pad 2 pieces
 Large sealing pad 1 piece	Insulation for fitting  for gas pipe 1 piece		 for liquid pipe 1 piece
Other: installation and operation manual			 Screws for duct flanges 1 set 16 pieces

Screws for fixing panels are attached to the air inlet panel.

Optional accessories

- There are two types of remote controllers: wired and wireless. Select a remote controller according to customer request and install in an appropriate place. Refer to catalogues and technical literature for selecting a suitable remote controller.
- When installing bottom suction: air inlet panel and canvas connection for the air inlet panel.

For the following items, take special care during construction and check after installation is finished

Tick ✓ when checked	
<input type="checkbox"/>	Is the indoor unit fixed firmly? The unit may drop, vibrate or make noise.
<input type="checkbox"/>	Is the gas leak test finished? It may result in insufficient cooling or heating.
<input type="checkbox"/>	Is the unit fully insulated and checked for air leaks? Condensate water may drip.
<input type="checkbox"/>	Does drainage flow smoothly? Condensate water may drip.
<input type="checkbox"/>	Does the power supply voltage correspond to that shown on the name plate? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Are wiring and piping correct? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Is the unit safely grounded? Dangerous at electric leakage.
<input type="checkbox"/>	Is the wiring size according to specifications? The unit may malfunction or components may burn out.
<input type="checkbox"/>	Is nothing blocking the air outlet or inlet of either the indoor or outdoor units? It may result in insufficient cooling or heating.
<input type="checkbox"/>	Are refrigerant piping length and additional refrigerant charge noted down? The refrigerant charge in the system might not be clear.
<input type="checkbox"/>	Are the air filters fixed properly (when installing with rear duct)? Maintenance of the air filters can be impossible.
<input type="checkbox"/>	Is the external static pressure set? It may result in insufficient cooling or heating.

Notes to the installer

- Read this manual carefully to ensure correct installation. Be sure to instruct the customer how to properly operate the system and show him/her the enclosed operation manual.
- Explain to the customer what system is installed on the site. Be sure to fill out the appropriate installation specifications in the chapter "What to do before operation" of the outdoor unit operation manual.

IMPORTANT INFORMATION REGARDING THE REFRIGERANT USED

This product contains fluorinated greenhouse gases.

Refrigerant type: R410A

GWP⁽¹⁾ value: 2087.5

⁽¹⁾ GWP = global warming potential

Periodical inspections for refrigerant leaks may be required depending on European or local legislation. Please contact your local dealer for more information.

SELECTING INSTALLATION SITE

(See figure 1 and figure 2)

- 1 Select an installation site where the following conditions are fulfilled and that meets your customer's approval.
 - Where optimum air distribution can be ensured.
 - Where nothing blocks air passage.
 - Where condensate water can be properly drained.
 - Where the false ceiling is not noticeably on an incline.
 - Where sufficient clearance for maintenance and service can be ensured.
 - Where there is no risk of flammable gas leaking.
 - The equipment is not intended for use in a potentially explosive atmosphere.
 - Where piping between indoor and outdoor units is possible within the allowable limit. (Refer to the installation manual of the outdoor unit.)
 - Keep indoor unit, outdoor unit, power supply wiring and transmission wiring at least 1 meter away from televisions and radios. This is to prevent image interference and noise in those electrical appliances. (Noise may be generated depending on the conditions under which the electric wave is generated, even if 1 meter is kept.)
 - When installing the wireless remote controller kit, the distance between wireless remote controller and indoor unit might be shorter if there are fluorescent lights who are electrically started in the room. The indoor unit must be installed as far as possible away from fluorescent lights.
 - Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- 2 Ensure that a protective guard is installed on air suction and air outlet side to prevent that the fan blades or heat exchanger be touched.
The protection must comply with relevant European and national regulations.
- 3 Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the indoor unit. If there is a risk, reinforce the ceiling before installing the unit.

- 1 Service space
- 2 Drain pipe
- 3 Power supply wiring port
- 4 Transmission wiring port
- 5 Maintenance drain outlet
- 6 Gas pipe
- 7 Liquid pipe

PREPARATIONS BEFORE INSTALLATION

- 1 Relation of ceiling opening to unit and suspension bolt position. (See figure 5)

Model	A (mm)	B (mm)
20~32	550	586
40	700	738
50~80	1000	1038
100+125	1400	1438

- 1 Indoor unit
- 2 Pipe
- 3 Suspension bolt pitch (x4)
- 4 Suspension bolt pitch distance

For installation, choose one of the possibilities as listed further.

Standard rear suction (See figure 6a)


- 1 Ceiling surface
- 2 Ceiling opening
- 3 Service access panel (optional accessory)
- 4 Air filter
- 5 Air inlet duct
- 6 Duct service opening
- 7 Interchangeable plate

Installation with rear duct and duct service opening (See figure 6b)

Installation with rear duct, no duct service opening (See figure 6c)


NOTE Before installation of the unit (in case of installation with duct, but no duct service opening): modify the position of the air filters.

- 1 Remove the air filter(s) at the outside of the unit
- 2 Remove the interchangeable plate
- 3 Install the air filter(s) from the inside of the unit
- 4 Reinstall the interchangeable plate

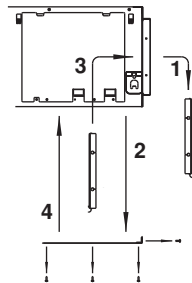

NOTE When installing an air inlet duct, select fixing screws that shall stick out maximum 5 mm at the inside of the flange to protect the air filter from damage during maintenance of the filter.

- 1 Air inlet duct
- 2 Inside of the flange
- 3 Fixing screw

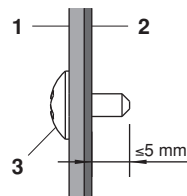

Mounting the air inlet panel with a canvas connection (See figure 7a)

Mounting the air inlet panel directly (See figure 7b)

- 1 Ceiling surface
- 2 Ceiling opening
- 3 Air inlet panel (Optional accessory)
- 4 Indoor unit (Back side)
- 5 Canvas connection for air inlet panel (Optional accessory)

Model	A (mm)
20~32	610
40	760
50~80	1060
100+125	1460

Bottom suction (See figure 7c)

NOTE The unit can be used with bottom suction by replacing the interchangeable plate by the air filter holding plate.

- 1 Air filter holding plate with air filter(s)
- 2 Interchangeable plate

NOTE For other installation than standard installation, contact your Daikin dealer for details.

- 2 The fan speed for this indoor unit is preset to provide standard external static pressure.
- 3 Install the suspension bolts. (Use M10 size bolt for the suspension bolt.) Use anchors for existing ceilings, and a sunken insert, sunken anchors or other field supplied parts for new ceilings to reinforce the ceiling in order to bear the weight of the unit.

Installation example

(See figure 3)

- 1 Anchor
- 2 Ceiling slab
- 3 Long nut or turn-buckle
- 4 Suspension bolt
- 5 Indoor unit

NOTE All the above parts are field supplied.

INDOOR UNIT INSTALLATION

When installing optional accessories (except for the air inlet panel), read also the installation manual of the optional accessories. Depending on the field conditions, it may be easier to install optional accessories before the indoor unit is installed.

- 1 Install the indoor unit temporarily.
 - Attach the hanger bracket to the suspension bolt. Be sure to fix it securely by using a nut and washer from the upper and lower sides of the hanger bracket. (See figure 4)
 - 1 Nut (field supply)
 - 2 Washer for hanger bracket (supplied with the unit)
 - 3 Tighten (double nut)
- 2 Check if the unit is horizontally levelled.
 - Do not install the unit tilted. The indoor unit is equipped with a built-in drain pump and float switch. (If the unit is tilted against condensate flow, the float switch may malfunction and cause water to drip.)
 - Check if the unit is levelled at all four corners with a water level or a water-filled vinyl tube as shown in figure 9.
 - 1 Water level
 - 2 Vinyl tube
- 3 Tighten the upper nut.

REFRIGERANT PIPING WORK

For refrigerant piping of outdoor unit, refer to the installation manual supplied with the outdoor unit.


Before rigging tubes, check which type of refrigerant is used.



All field piping must be provided by a licensed refrigeration technician and must comply with the relevant local and national codes.

- Use a pipe cutter and flare suitable for the used refrigerant.
- To prevent dust, moisture or other foreign matter from infiltrating the tube, either pinch the end, or cover it with tape.
- Use copper alloy seamless pipes (ISO 1337).
- The outdoor unit is charged with refrigerant.
- To prevent water leakage, execute heat insulation work completely on both sides of the gas and liquid piping. When using a heat pump, the temperature of the gas piping can reach up to approximately 120°C, use insulation which is sufficiently heat resistant.
- Be sure to use both a spanner and torque wrench together when connecting or disconnecting pipes to/from the unit.

- 1 Torque wrench
- 2 Spanner
- 3 Piping union
- 4 Flare nut

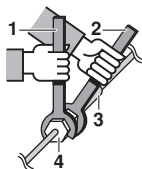


- Do not mix anything other than the specified refrigerant, such as air, etc..., inside the refrigerant circuit.
- Use annealed material only for flare connections.

- Refer to Table 1 for the dimensions of flare nut spaces and the appropriate tightening torque. (Overtightening may damage the flare and cause leaks.)

Table 1


Pipe gauge (mm)	Tightening torque (N·m)	Flare dimension A (mm)	Flare shape
Ø6.4	15~17	8.7~9.1	
Ø9.5	33~39	12.8~13.2	
Ø12.7	50~60	16.2~16.6	
Ø15.9	63~75	19.3~19.7	

 - When connecting the flare nut, coat the flare inner surface with ether oil or ester oil and initially tighten 3 or 4 turns by hand before tightening firmly.



- If the refrigerant gas leaks during the work, ventilate the area. A toxic gas is emitted by the refrigerant gas being exposed to a fire.
- Make sure there is no refrigerant gas leak. A toxic gas may be released by the refrigerant gas leaking indoor and being exposed to flames from an area heater, cooking stove, etc.
- Finally, insulate as shown in the figures below.

Piping insulation procedure

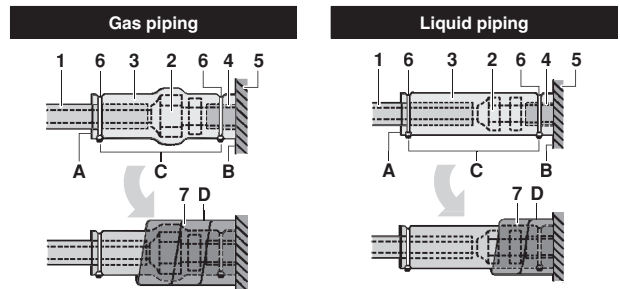


- 1 Piping insulation material (field supply)
 - 2 Flare nut connection
 - 3 Insulation for fitting (delivered with the unit)
 - 4 Piping insulation material (main unit)
 - 5 Main unit
 - 6 Clamp (field supply)
 - 7 Medium 1 sealing pad for gas piping (delivered with the unit)
Medium 2 sealing pad for liquid piping (delivered with the unit)
- A Turn seams up
B Attach to base
C Tighten the part other than the piping insulation material
D Wrap over from the base of the unit to the top of the flare nut connection



For local insulation, be sure to insulate local piping all the way into the pipe connections inside the unit. Exposed piping may cause condensation or may cause burns when touched.

Cautions for brazing

- Be sure to carry out a nitrogen blow when brazing. Brazing without carrying out nitrogen replacement or releasing nitrogen into the piping will create large quantities of oxidized film on the inside of the pipes, adversely affecting valves and compressors in the refrigerating system and preventing normal operation.
- When brazing while inserting nitrogen into the piping, nitrogen must be set to 0.02 MPa with a pressure-reducing valve (=just enough so that it can be felt on the skin).

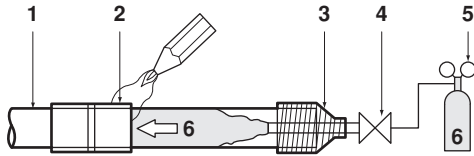

- 1 Refrigerant piping
- 2 Part to be brazed
- 3 Taping
- 4 Hands valve
- 5 Pressure-reducing valve
- 6 Nitrogen

- Wrap the supplied large sealing pad over the metal clamp and drain hose to insulate and fix it with clamps.
- Insulate the complete drain piping inside the building (field supply).
- If the drain hose cannot be sufficiently set on a slope, fit the hose with drain raising piping (field supply).

How to perform drain piping (See figure 10)


- 1 Ceiling slab
- 2 Hanger bracket
- 3 Adjustable range
- 4 Drain raising pipe
- 5 Drain hose (supplied with the unit)
- 6 Clamp metal (supplied with the unit)

- 1 Connect the drain hose to the drain raising pipes, and insulate them.
- 2 Connect the drain hose to the drain outlet on the indoor unit, and tighten it with the clamp.

Installation	A (mm)
Rear suction installation	231
When canvas duct is installed	350-530
When air inlet panel is directly installed	231

DRAIN PIPING WORK


Rig the drain piping as shown in the figure and take measures against condensation. Improperly rigged piping could lead to leaks and eventually wet furniture and belongings.

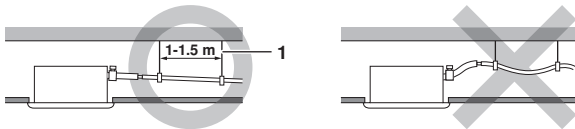

- 1 Hanging bar

Install the drain pipes.

- Keep piping as short as possible and slope it downwards at a gradient of at least 1/100 so that air may not remain trapped inside the pipe.
- Keep pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 25 mm nominal diameter and 32 mm outer diameter).
- Push the supplied drain hose as far as possible over the drain socket.
- Tighten the metal clamp until the screw head is less than 4 mm from the metal clamp part as indicated in the illustration.

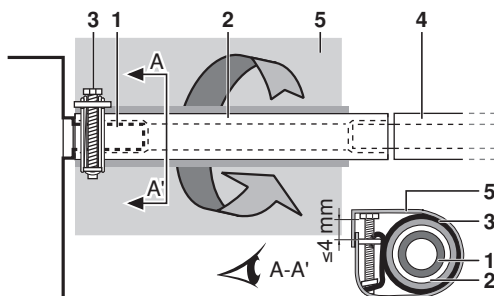

- 1 Drain socket (attached to the unit)
- 2 Drain hose (supplied with the unit)
- 3 Metal clamp (supplied with the unit)
- 4 Drain piping (field supply)
- 5 Large sealing pad (supplied with the unit)

Precautions

- Install the drain raising pipes at a height of less than 625 mm.
- Install the drain raising pipes at a right angle to the indoor unit and no more than 300 mm from the unit.
- To prevent air bubbles, install the drain hose level or slightly tilted up (≤ 75 mm).

NOTE



The incline of attached drain hose should be 75 mm or less so that the drain socket does not have to withstand additional force.

To ensure a downward slope of 1:100, install hanging bars every 1 to 1.5 m.

When unifying multiple drain pipes, install the pipes as shown in figure 11. Select converging drain pipes whose gauge is suitable for the operating capacity of the unit.

- 1 T-joint converging drain pipes

Testing of drain piping

After piping work is finished, check if drainage flows smoothly.

- Add approximately 1 l of water gradually through the air discharge outlet. Check for water leaks. Method of adding water. See figure 8.

- 1 Water inlet
- 2 Portable pump
- 3 Water inlet cover
- 4 Bucket (adding water through water inlet)
- 5 Drain outlet for maintenance (with rubber drain plug)
- 6 Refrigerant pipes




Caution for drain socket

Do not remove the drain pipe plug. Water might leak out.


The drain outlet is only used to discharge water if the drain pump is not used or before maintenance. Gently put in and out the drain plug. Excessive force may deform the drain socket of the drain pan.

- Pulling out the plug

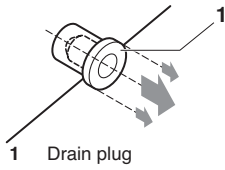

Do not wiggle the plug up and down

- Pushing in the plug

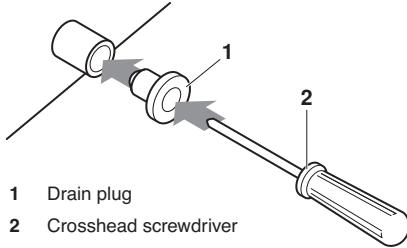

Set the plug and push it by using a crosshead screwdriver

First perform electric wiring work as instructed in "Electric wiring work" on page 6 and how to set the remote controller as explained in "Wiring example and how to set the remote controller" on page 7.






When electric wiring work is finished

Check drainage flow during COOL running, explained in "Test operation" on page 10.

When electric wiring work is not finished

Remove the switch box cover and connect the single-phase power supply and the remote controller to the terminals. (Refer to "Electric wiring work" on page 6 for switch box attachment/detachment.) (Refer to figure 12 and figure 14)

 
- 1 Switch box cover
- 2 Transmission wiring port
- 3 Power supply wiring port
- 4 Wiring diagram
- 5 Switch box
- 6 Plastic clamp
- 7 Remote controller wiring
- 8 Terminal board for unit transmission wiring
- 9 Power supply wiring
- 10 Indoor PC board 1
- 11 Power supply terminal board
- 12 Transmission wiring between units
- 13 Indoor PC board 2
- 14 Indoor PC board 3 (only for 50~125 units)

Next, press the inspection/test operation button  on the remote controller. The unit will engage the test operation mode. Press the operation mode selector button  until selecting fan operation . Then, press the on/off button . The indoor unit fan and drain pump will start up. Check that the water has drained from the unit. Press  to go back to the first mode.

ELECTRIC WIRING WORK

General instructions

- All field supplied parts and materials and electric works must conform to local codes.
- Use copper wire only.
- Follow the "Wiring diagram" attached to the unit body to wire the outdoor unit, indoor units and the remote controller. For details on hooking up the remote controller, refer to the "Installation manual of the remote controller".
- All wiring must be performed by an authorized electrician.
- Attach the earth leakage circuit breaker and fuse to the power supply line.
- A main switch or other means for disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance with relevant local and national legislation. Note that the operation will restart automatically if the main power supply is turned off and then turned back on again.
- This system consists of multiple indoor units. Mark each indoor unit as unit A, unit B..., and be sure the terminal block wiring to the outdoor unit and BS unit are properly matched. If wiring and piping between the outdoor unit and an indoor unit are mismatched, the system may cause a malfunction.
- Be sure to ground the air conditioner.
- Do not connect the ground wire to:
 - gas pipes: might cause explosions or fire if gas leaks.
 - telephone ground wires or lightning rods: might cause abnormally high electric potential in the ground during lightning storms.
 - plumbing pipes: no grounding effect if hard vinyl piping is used.
- Make sure electrical wires are stripped equally.



Electrical characteristics

Model	Hz	Volts	Voltage range	Power supply	
				MCA	MFA
20	50/60	220-240/220	±10%	0.6	16 A
25				0.6	
32				0.6	
40				1.6	
50				1.4	
63				1.4	
80				1.7	
100				2.3	
125				2.9	

MCA: Min. circuit Amps (A)

MFA: Max. Fuse Amps (A)



NOTE For details, refer to "Electrical data" in the technical data book.

Specifications for field supplied fuses and wire

Power supply wiring			
Model	Field fuses	Wire	Size
20~125	16 A	H05VV-U3G	Local codes

Model	Wire	Size
20~125	Sheathed wire (2)	0.75-1.25 mm ²

NOTE For details, refer to "Wiring example" on page 8.



Allowable length of transmission wiring between indoor and outdoor units, and between the indoor unit and the remote controller is as follows:

1. Outdoor unit - indoor unit: max. 1000 m (total wiring length: 2000 m)
2. Indoor unit - remote controller: max 500 m

WIRING EXAMPLE AND HOW TO SET THE REMOTE CONTROLLER

How to connect wiring

 
Remove the switch box cover as shown in figure 12, and make the connections.

- 1 Switch box cover
- 2 Transmission wiring port
- 3 Power supply wiring port
- 4 Wiring diagram
- 5 Switch box

PRECAUTIONS

- 1 Observe the notes mentioned below when wiring to the power supply terminal board.

- Use a round crimp-style terminal for insulation sleeve for connection to the terminal block for wiring the units. When none are available, follow the instructions below.



- 1 Round crimp-style terminal
- 2 Attach insulation sleeve
- 3 Wiring

- Do not connect wires of different gauge to the same power supply terminal. (Looseness in the connection may cause overheating.)

- When connecting wires of the same gauge, connect them according to the figure.



Use the specified electric wire. Connect the wire securely to the terminal. Lock the wire down without applying excessive force to the terminal. Use torques according to the table below.

Tightening torque (N·m)	
Terminal block for unit transmission and remote controller	0.9
Terminal block for power supply	1.2

- When attaching the control box lid, make sure not to pinch any wires.
 - After all wiring connections are done, fill in any gaps in the casing wiring holes with putty or insulation material (field supply) thus to prevent small animals or dirt from entering the unit from outside and causing short circuits in the control box.
- 2 Keep total current of crossover wiring between indoor units less than 12 A. Branch the line outside the terminal board of the unit in accordance with electrical equipment standards, when using two power wiring of a gauge greater than 2 mm² (Ø1.6).
The branch must be sheathed in order to provide an equal or greater degree of insulation as power supply wiring itself.
 - 3 Do not connect wires of different gauge to the same grounding terminal. Looseness in the connection may deteriorate the protection.
 - 4 Remote controller cords and wires connecting the units should be located at least 50 mm away from power supply wiring. Not following this guideline may result in malfunction due to electrical noise.
 - 5 For the remote controller wiring, refer to the "Installation manual of the remote controller" supplied with the remote controller.
 - 6 Never connect the power supply wiring to the terminal board for transmission wiring. This mistake could damage the entire system.
 - 7 Use only specified wires and tightly connect wires to the terminals. Be careful that wires do not place external stress on the terminals. Keep wiring in neat order so that they do not obstruct other equipment such as popping open the switch box cover. Make sure the cover closes tight. Incomplete connections could result in overheating, and in the worse case, electric shock or fire.

WIRING EXAMPLE

Fit the power supply wiring of each unit with a switch and fuse as shown in figure 16.

- 1 Power supply
- 2 Main switch
- 3 Power supply wiring
- 4 Transmission wiring
- 5 Switch
- 6 Fuse
- 7 BS unit REYQ only
- 8 Indoor unit
- 9 Remote controller

Complete system example (3 systems)

When using 1 remote controller for 1 indoor unit (Normal operation) (See figure 15)

For group control or use with 2 remote controllers (See figure 17)

When including BS unit (See figure 13)

- 1 Outdoor unit
- 2 Indoor unit
- 3 Remote controller (optional accessories)
- 4 Most downstream indoor unit
- 5 For use with 2 remote controllers
- 6 BS unit

NOTE



It is not necessary to designate an indoor unit address when using group control. The address is automatically set when the power is activated.

PRECAUTIONS

- A single switch can be used to supply power to units on the same system. However, branch switches and branch circuit breakers must be selected carefully.
- For a group control remote controller, choose the remote controller that suits the indoor unit which has the most functions.
- Do not ground the equipment on gas pipes, water pipes, lightning rods or crossground with telephones. Improper grounding could result in electric shock.

FIELD SETTING

Field setting must be made on the remote controller in function of the installation condition.

- Setting can be made by changing the "Mode number", "First code No." and "Second code No.".
- For setting and operation, refer to the "Field settings" in the installation manual of the remote controller.

Summary of field settings

Mode No. (Note 1)	First code No.	Description of setting	Second code No. (Note 2)					
			01	02	03	04		
0	Filter contamination - Heavy/Light = Setting to define time between 2 filter cleaning display indications. (When contamination is high, setting can be changed to half the time inbetween 2 filter cleaning display indications.)	Ultra-long-life filter	±10,000 hrs.	±5,000 hrs.	-	-		
		Long-life filter	±2,500 hrs.	±1,250 hrs.				
		Standard filter	±200 hrs.	±100 hrs.				
	10 (20)	2	Thermostat sensor selection	Use both the unit sensor (or remote sensor if installed) AND the remote controller sensor. (See note 5+6)	Use unit sensor only (or remote sensor if installed). (See note 5+6)	Use remote controller sensor only. (See note 5+6)	-	
			3	Setting for display of time between 2 filter cleaning display indications	Display	Do not display	-	-
			6	Thermostat sensor in group control	Use unit sensor only (or remote sensor if installed). (See note 6)	Use both the unit sensor (or remote sensor if installed) AND the remote controller sensor. (See note 4+5+6)	-	-
12 (22)	0	Output signal X1-X2 of the optional KRP1B PCB kit	Thermostat-on + compressor run	-	Operation	Mal-function		
		1	ON/OFF input from outside (T1/T2 input) = Setting when forced ON/OFF is to be operated from outside.	Forced OFF	ON/OFF operation	-	-	
		3	Fan setting during thermostat OFF at heating operation	LL	Set speed	OFF (See note 3)	-	
		4	Differential automatic changeover	0°C	1°C	2°C	3°C (See note 7)	
		5	Auto-restart after power failure	Disabled	Enabled	-	-	
15 (25)	3	Drain pump operation + humidifier interlock	Equipped	Not equipped	-	-		

Note 1: Setting is carried out in the group mode, however, if the mode number inside parentheses is selected, indoor units can also be set individually.

Note 2: Factory settings of the Second code No. are marked in grey backgrounds.

Note 3: Only use in combination with optional remote sensor or when setting 10-2-03 is used.

Note 4: If group control is selected and remote control sensor is to be used, then set 10-6-02 & 10-2-03.

Note 5: If setting 10-6-02 + 10-2-01 or 10-2-02 or 10-2-03 are set at the same time, then setting 10-2-01, 10-2-02 or 10-2-03 have priority.

Note 6: If setting 10-6-01 + 10-2-01 or 10-2-02 or 10-2-03 are set at the same time, then setting for group connection, 10-6-01 has priority and for individual connection, 10-2-01, 10-2-02 or 10-2-03 have priority.

Note 7: More settings for Differential automatic change over temperatures are:

05	4°C
06	5°C
07	6°C
08	7°C

External static pressure settings

Settings for external static pressure can be achieved in 2 ways:

Using the airflow automatic adjustment function

Airflow automatic adjustment is the volume of blow-off air that has been automatically adjusted to the rated quantity.

- 1 Make sure the test run is done with a dry coil.
If the coil is not dry, run the unit for 2 hours with fan only to dry the coil.
- 2 Check if the power supply wiring to the air conditioning unit is completed along with the duct installation.
If a closing damper is installed in the air conditioning unit, make sure that it is open.
Also check if the air filter is properly attached into the air passage on the air suction side of the air conditioning unit.
- 3 If there is more than one air inlet and outlet, adjust the dampers so that the airflow rate of each air inlet and outlet is conform with the designed airflow rate.
Make sure the air conditioning unit is in fan operation mode. Press and set the airflow adjustment button on the remote controller to change the airflow rate to H or L.
- 4 Setting the airflow automatic adjustment settings.

When the air conditioning unit is running in fan operation mode perform the next steps:

- stop the air conditioning unit,
- go to field setting mode,
- select mode No. 21 (or 11 in case of group setting),
- set the first code No. to "7",
- set the second code No. to "03".

Return to normal operating mode after setting these settings and press the ON/OFF operation button. The operation lamp will light up and the air conditioning unit will start the fan operation for airflow automatic adjustment.



Do not adjust the dampers during fan operation for airflow automatic adjustment.

After 1 to 8 minutes, the air conditioning unit stops operating automatically when the fan operation for airflow automatic adjustment has been carried out, the operation lamp will be off.

Mode No.	First code No.	Second code No.	Setting content
11 (21)	7	01	Airflow adjustment is OFF
		02	Completion of airflow adjustment
		03	Start of airflow adjustment

- 5 When the air conditioning unit has stopped, check on an indoor unit if the second code No. of mode No. 21 is set to "02".

If the air conditioning unit does not stop operating or the second code No. is not "02", repeat step 4.

If the outdoor unit is not turned on, the display on the remote controller will show "U4" or "UH" (refer to "Test operation" on page 10). However, you can continue setting this function because these messages are only applicable to outdoor units.

After setting this function, be sure to turn on the outdoor unit before performing the test operation on the outdoor unit.

If any other error display occurs on the display of the remote controller, refer to "Test operation" on page 10 and the operation manual of the outdoor unit. Check the defective point.



- If there is no change after airflow adjustment in the ventilation paths, be sure to perform setting the automatic airflow adjustment again.
- Contact your dealer if there is no change after performing airflow adjustment in the ventilation paths, after performing the test operation of the outdoor unit or when the air conditioning unit is moved to another location.
- If booster fans, an outdoor air processing unit or HRV via duct are used, do not use automatic airflow adjustment control with a remote controller.
- If the ventilation paths have been changed, perform the setting of the airflow automatic adjustment again as described above from step 3 onwards.

Using the remote controller

Check on an indoor unit if the second code of mode No. 21 is set to "01" (= factory setting). Change the second code according to the external static pressure of the duct to be connected as shown in table 2.

NOTE



The second code No. is set to "02 (FXMQ20~32) / 07 (FXMQ40~125)" by default.

Table 2

Mode No.	First code No.	Second code No.	External static pressure (Pa)									
			Model									
			20	25	32	40	50	63	80	100	125	
13 (23)	6	01	30	30	30	30	—	—	—	—	—	
		02	50	50	50	50	50	50	50	50	50	
		03	60	60	60	60	60	60	60	60	60	
		04	70	70	70	70	70	70	70	70	70	
		05	80	80	80	80	80	80	80	80	80	
		06	90	90	90	90	90	90	90	90	90	
		07	100	100	100	100	100	100	100	100	100	
		08	—	—	—	110	110	110	110	110	110	
		09	—	—	—	120	120	120	120	120	120	
		10	—	—	—	130	130	130	130	130	130	
		11	—	—	—	140	140	140	140	140	140	
		12	—	—	—	150	150	150	150	150	150	
		13	—	—	—	160	160	160	160	160	160	
		14	—	—	—	—	180	180	180	180	180	
		15	—	—	—	—	200	200	200	200	200	

Control by 2 Remote Controllers (Controlling 1 indoor unit by 2 remote controllers)

When using 2 remote controllers, one must be set to "MAIN" and the other to "SUB".

MAIN/SUB CHANGEOVER


- Insert a wedge-head screwdriver into the recess between the upper and lower part of the remote controller and, working from the 2 positions, pry off the upper part. (See figure 18) (The remote controller PC board is attached to the upper part of the remote controller.)
- Turn the main/sub changeover switch on one of the two remote controller PC boards to "S". (See figure 19) (Leave the switch of the other remote controller set to "M".)

- 1 Remote controller PC board
- 2 Factory setting
- 3 Only one remote controller needs to be changed

Computerised control (forced off and on/off operation)

- Wire specifications and how to perform wiring
 - Connect input from outside to terminals T1 and T2 of the terminal board (remote controller to transmission wiring).

Wire specification	Sheathed vinyl cord or cable (2 wire)
Gauge	0.75-1.25 mm ²
Length	Max. 100 m
External terminal	Contact that can ensure the minimum applicable load of 15 V DC, 10 mA

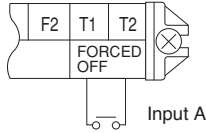

2 Actuation

- The following table explains "forced off" and "on/off operations" in response to input A.

Forced off	on/off operation
Input "on" stops operation	input off → on: turns on the unit (impossible by remote controllers)
Input "off" enables control	input on → off: turns off the unit by remote controller

3 How to select forced off and on/off operation

- Turn the power on and then use the remote controller to select operation.
- Set the remote controller to the field set mode. For details, refer to the chapter "How to set in the field", in the remote controller manual.
- When in the field set mode, select mode No. 12, then set the first code No. to "1". Then set second code (position) No. to "01" for forced off and to "02" for on/off operation. (forced off at factory set.) (See figure 20)

- Second code No.
- Mode No.
- First code No.
- Field set mode

Centralized control

For centralized control, it is necessary to designate the group No. For details, refer to the manual of each optional controller for centralized control.

INSTALLATION OF THE DECORATION PANEL

Refer to the installation manual attached to the decoration panel.

After installing the decoration panel, ensure that there is no space between the unit body and decoration panel.

TEST OPERATION

Refer to the installation manual of the outdoor unit.

The operation lamp of the remote controller will flash when an error occurs. Check the error code on the liquid crystal display to identify the trouble.

Error code	Meaning
ⒶⒷ	Error in power supply to indoor unit
ⒸⒹ	Transmission error between fan driver PCB and controller PCB of the indoor unit
ⒸⒺ	Improper combination of fan driver PCB of the indoor unit or setting failure in control PCB type
ⒸⒻ	Test operation of the indoor unit has not been finished

If any of the items in following table are displayed on the remote controller, there may be a problem with the wiring or power, so check the wiring again.

Error code	Meaning
Ⓐ	There is a short circuit at the forced off terminals (T1, T2)
ⒸⒼ or ⒸⒽ	<ul style="list-style-type: none"> The power on the outdoor unit is off The outdoor unit has not been wired for power supply Incorrect transmission of forced off wiring
no display	<ul style="list-style-type: none"> The power on the indoor unit is off The indoor unit has not been wired for power supply Incorrect transmission wiring, forced off wiring or remote controller wiring

MAINTENANCE



Caution

- Only a qualified service person is allowed to perform maintenance.
- Before obtaining access to terminal devices, all power supply circuits must be interrupted.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels.
- When cleaning the heat exchanger, be sure to remove the switchbox, fan motor, auxiliary electric heater and drain pump. Water or detergent may deteriorate the insulation of electronic components and result in burn-out of these components.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

How to clean the air filter


Clean the air filter when the display shows "ⒸⒼ" (TIME TO CLEAN AIR FILTER).

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.


If the dirt becomes impossible to clean, change the air filter. (Air filter for exchange is optional.)

- Open the suction grille. (Only for bottom suction.)

Slide both knobs simultaneously as shown and then pull them downward.

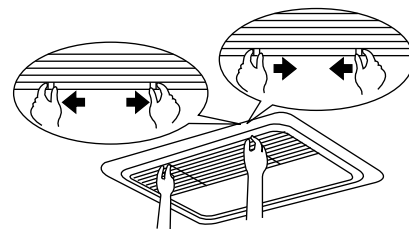


If chains are present, unhook the chains.

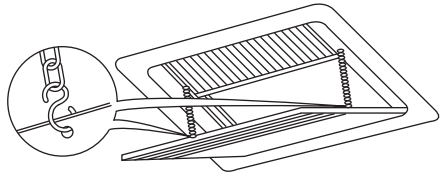


2 Remove the air filters.

Remove the air filters by pulling their cloth upward (rear suction) or backward (bottom suction).

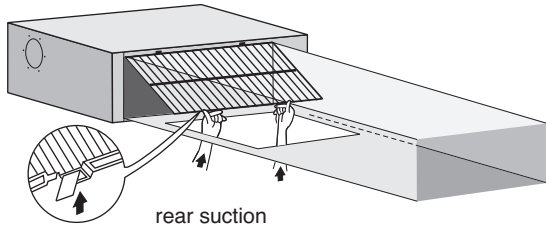

rear suction

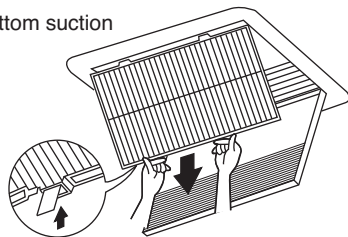


bottom suction

3 Clean the air filter.

Use vacuum cleaner (A) or wash the air filter with water (B).


(A) Using a vacuum cleaner

 (B) Washing with water




When the air filter is very dirty, use soft brush and neutral detergent.
Remove water and dry in the shade.

4 Fix the air filter.

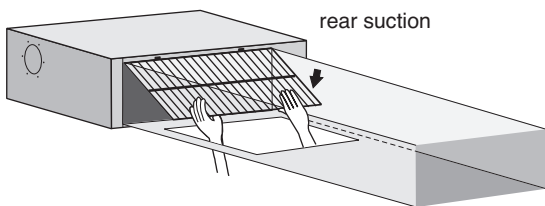

rear suction

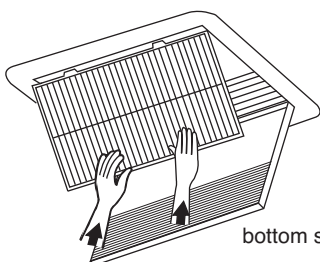

bottom suction

Align the two hanger brackets and push the two clips in their place (pull the cloth if necessary).
Confirm that four hangers are fixed.

- 5 Shut the air inlet grille. (Only for bottom suction.)
Refer to item no. 1.
- 6 After turning on the power, press FILTER SIGN RESET button.
The "TIME TO CLEAN AIR FILTER" display is turned off.

How to clean air outlet and outside panels

- Clean with soft cloth.
- When it is difficult to remove stains, use water of neutral detergent.
- Clean the air inlet grille when it is shut.

NOTE



Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discolouring or warping.

Do not let the indoor unit get wet. It may cause an electric shock or a fire.

Start up after a long stop

Confirm the following:

- Check that the air inlet and outlet are not blocked. Remove any obstacle.
- Check if the earth is connected.

Clean the air filter and outside panels.

- After cleaning the air filter, make sure to attach it.

Turn on the main power supply switch.

- The control panel display lights when the power is turned on.
- To protect the unit, turn on the main power switch at least 6 hours before operation.

What to do when stopping the system for a long period

Turn on FAN OPERATION for half a day and dry the unit.

- Refer to the operation manual of the outdoor unit.

Cut off the power supply.

- When the main power switch is turned on, some wattage is being consumed even if the system is not operating.
- The remote controller display is turned off when the main power switch is turned off.

DISPOSAL REQUIREMENTS

Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.

WIRING DIAGRAM

	: FIELD WIRING
	: CONNECTOR
	: WIRE CLAMP
	: PROTECTIVE EARTH (SCREW)
L	: LIVE
N	: NEUTRAL

BLK	: BLACK	ORG	: ORANGE
BLU	: BLUE	PNK	: PINK
BRN	: BROWN	RED	: RED
GRN	: GREEN	WHT	: WHITE
GRY	: GREY	YLW	: YELLOW

A1P	PRINTED CIRCUIT BOARD
A2P	PRINTED CIRCUIT BOARD (FAN)
A3P	PRINTED CIRCUIT BOARD (CAPACITOR) (only for 50~125 units)
C1,C2,C3	CAPACITOR
F1U	FUSE (T, 3.15 A, 250 V)
F2U	FUSE (T, 5 A, 250 V)
F3U,F4U	FUSE (T, 6.3 A, 250 V)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR - GREEN)
KPR,K1R	MAGNETIC RELAY
L1R	REACTOR
M1F	MOTOR (FAN)
M1P	MOTOR (DRAIN PUMP)
PS	SWITCHING POWER SUPPLY
Q1DI	EARTH LEAK DETECTOR
R1	RESISTOR (CURRENT LIMITING)
R2	CURRENT SENSING DEVICE
R3,R4	RESISTOR (ELECTRIC DISCHARGE)
R1T	THERMISTOR (SUCTION AIR)
R2T	THERMISTOR (LIQUID)

R3T	THERMISTOR (GAS)
R5T	THERMISTOR NTC (CURRENT LIMITING)
S1L	FLOAT SWITCH
V1R	DIODE BRIDGE
V2R	POWER MODULE
X1M	TERMINAL STRIP (POWER SUPPLY)
X2M	TERMINAL STRIP (CONTROL)
Y1E	ELECTRONIC EXPANSION VALVE
Z1C,Z2C	NOISE FILTER (FERRITE CORE)
Z1F	NOISE FILTER

CONNECTOR OPTIONAL ACCESSORY

X28A	CONNECTOR (POWER SUPPLY FOR WIRING)
X33A	CONNECTOR (FOR WIRING)
X35A	CONNECTOR (ADAPTOR)
X38A	CONNECTOR (FOR WIRING)

WIRED REMOTE CONTROLLER



R1T	THERMISTOR (AIR)
SS1	SELECTOR SWITCH (MAIN/SUB)



WIRED REMOTE CONTROLLER	:
(OPTIONAL ACCESSORY)	:
SWITCH BOX (INDOOR)	:
TRANSMISSION WIRING	:
CENTRAL REMOTE CONTROLLER	:
INPUT FROM OUTSIDE	:



NOTE




1. USE COPPER CONDUCTORS ONLY.
2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
3. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED "OFF" OR "ON/OFF" CONTROL OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. SEE INSTALLATION MANUAL FOR MORE DETAILS.

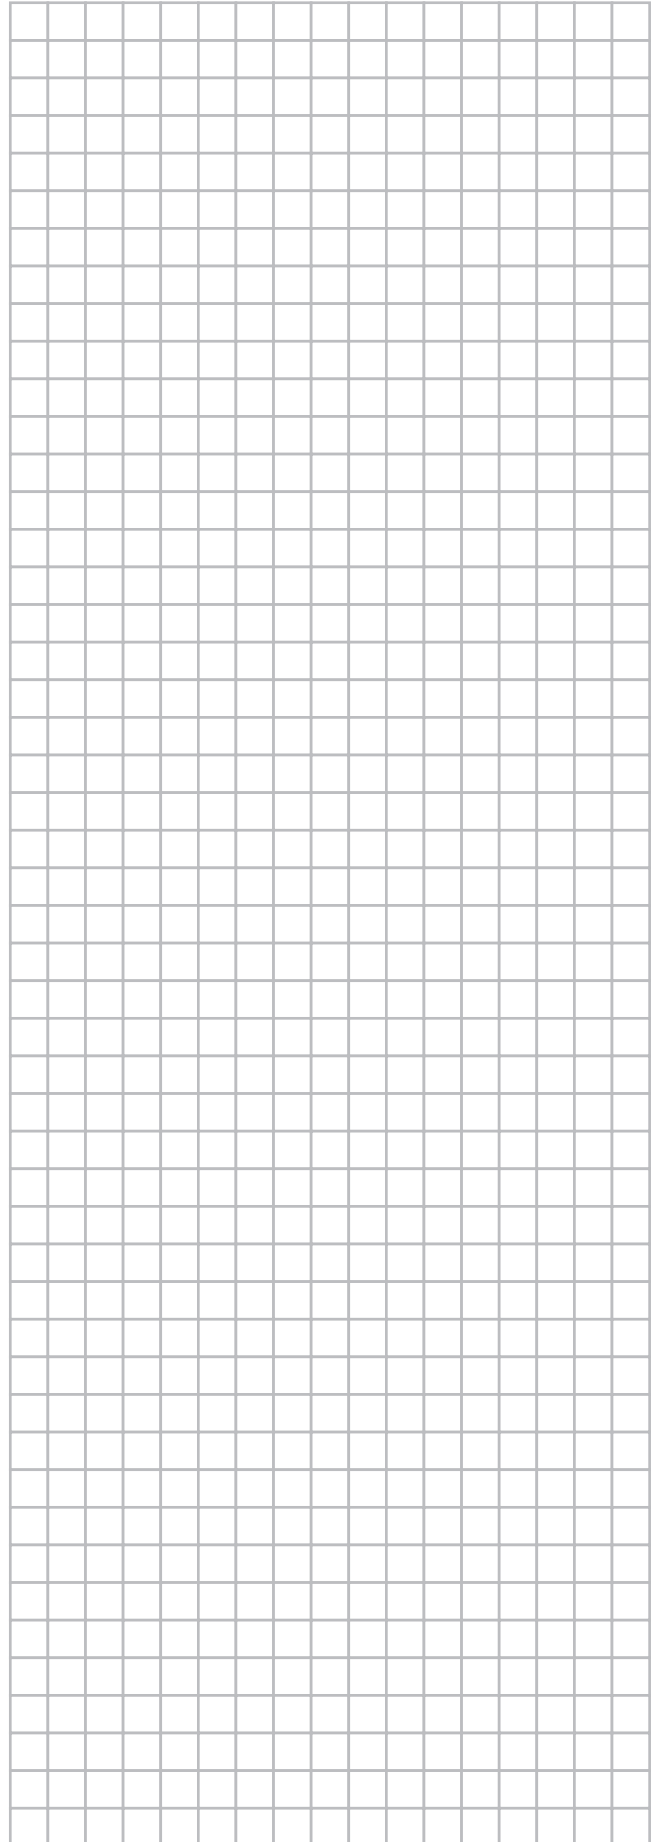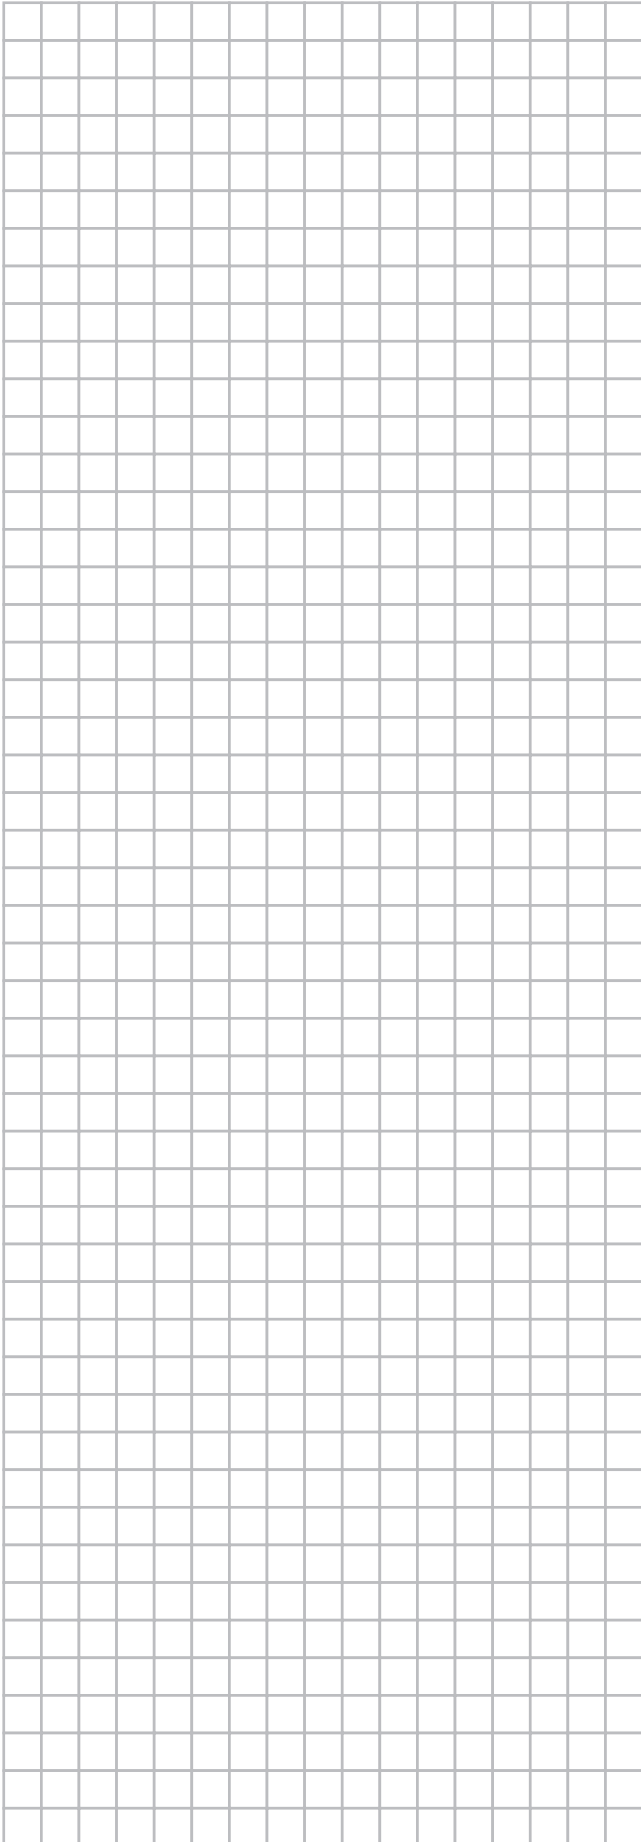


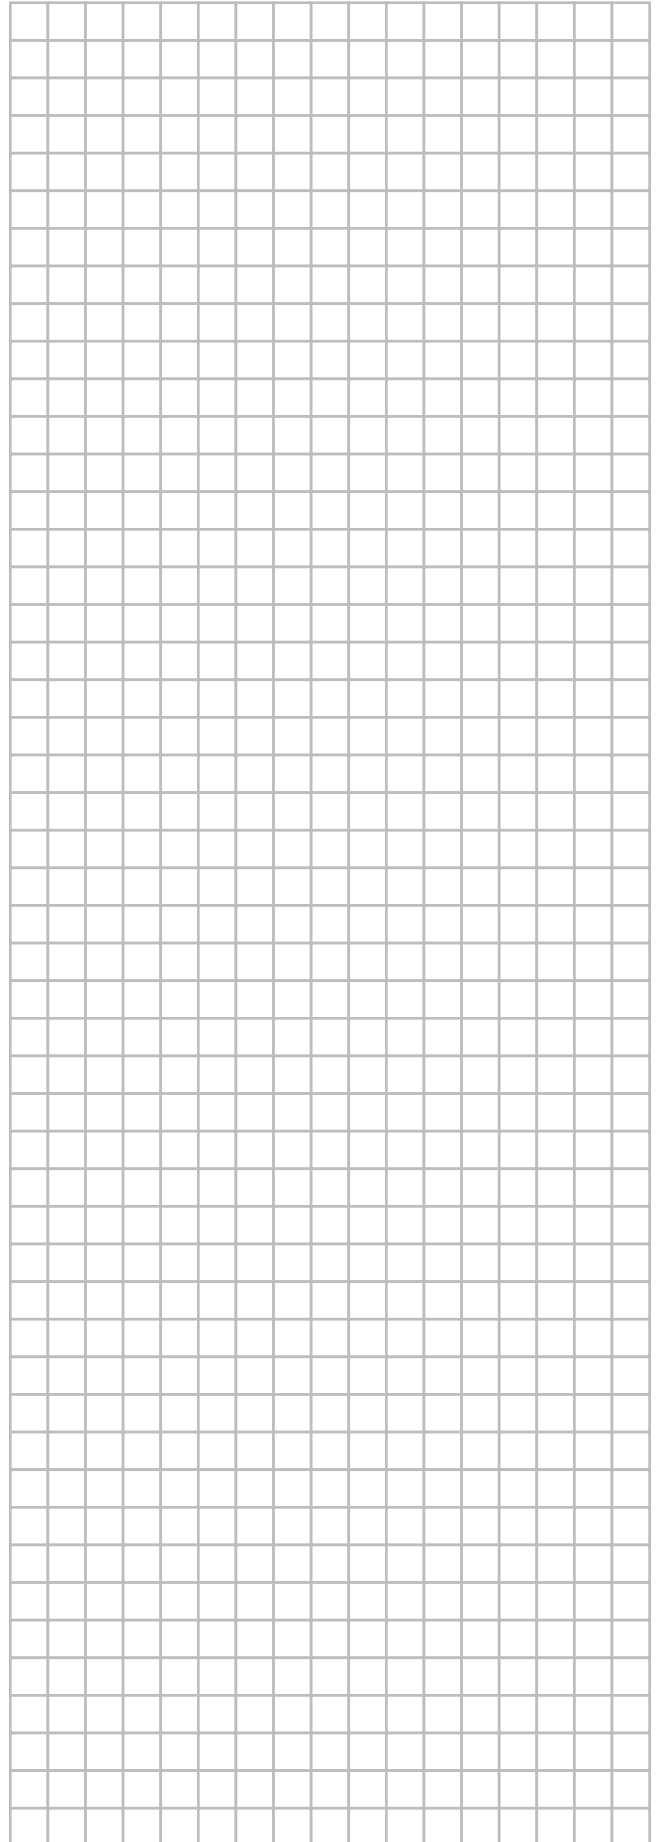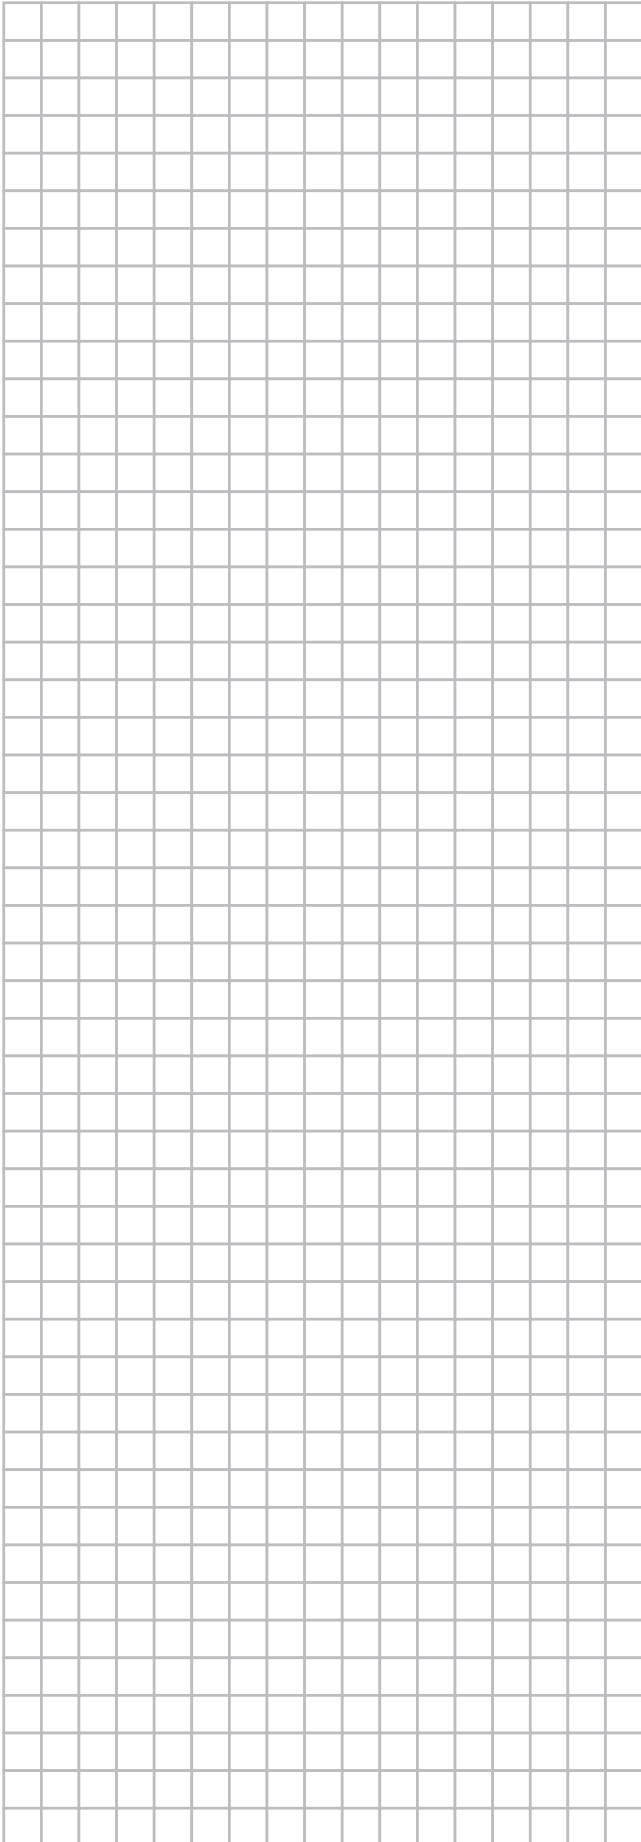

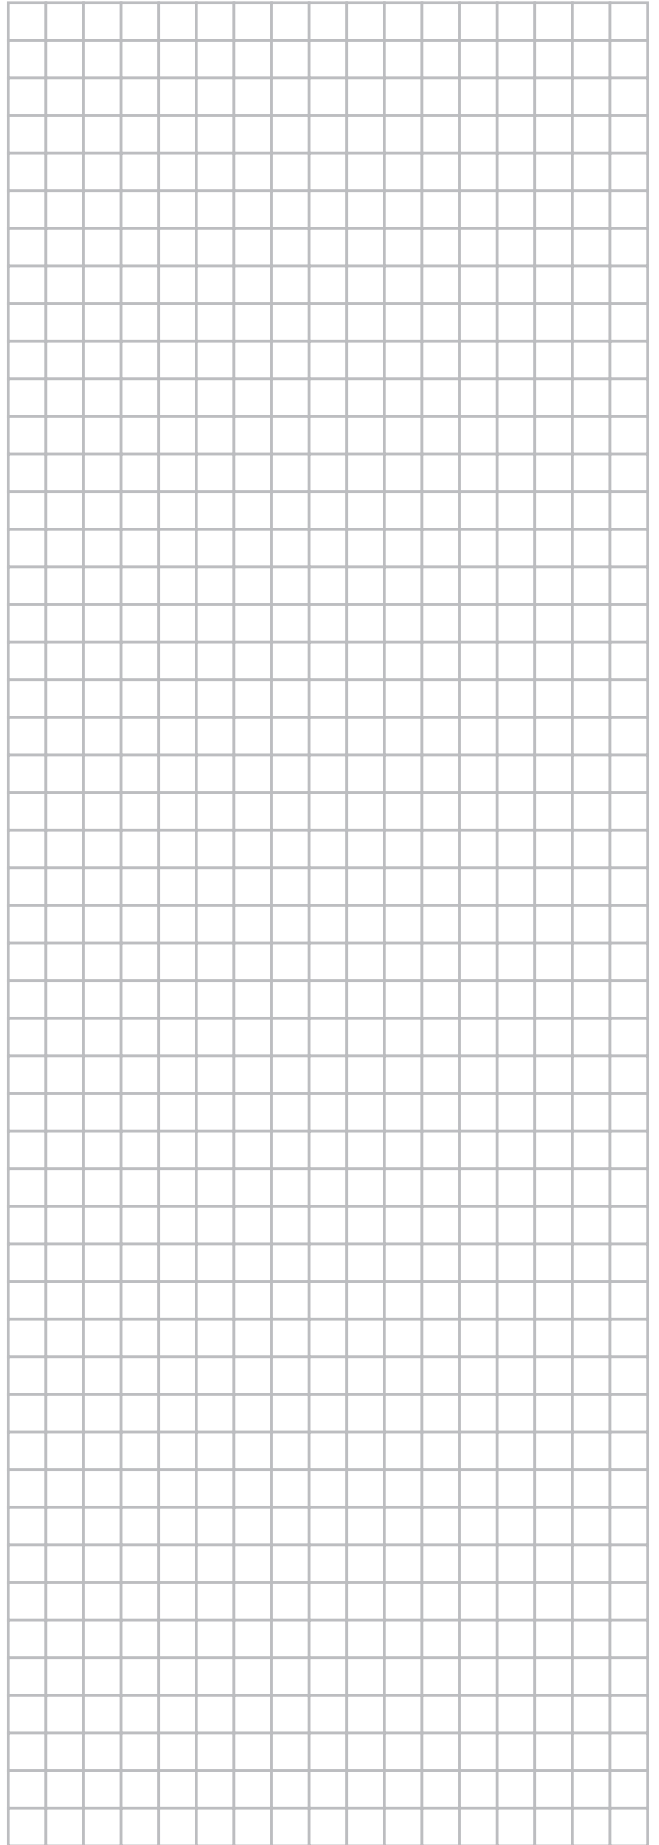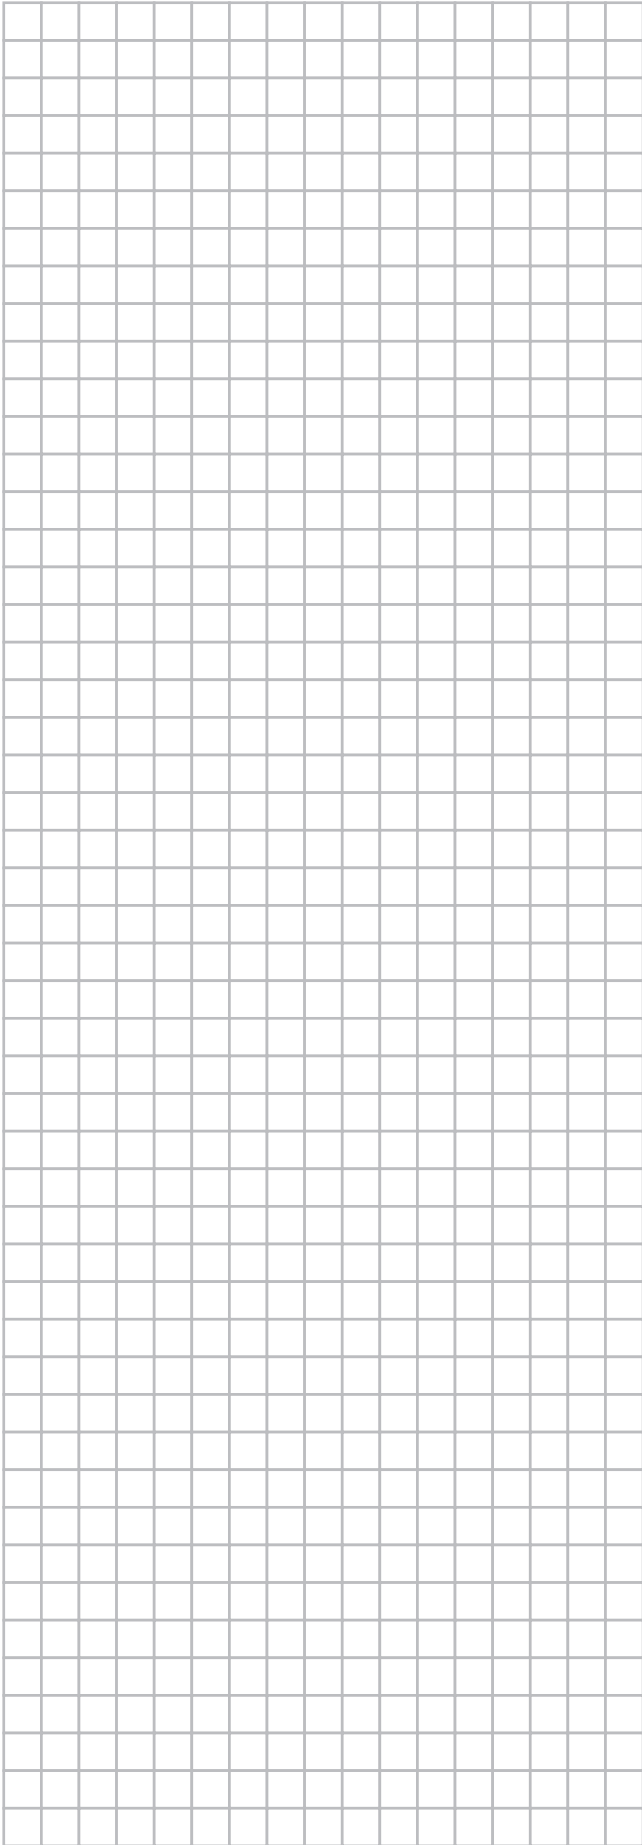


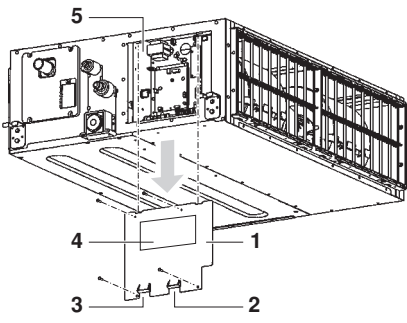


12

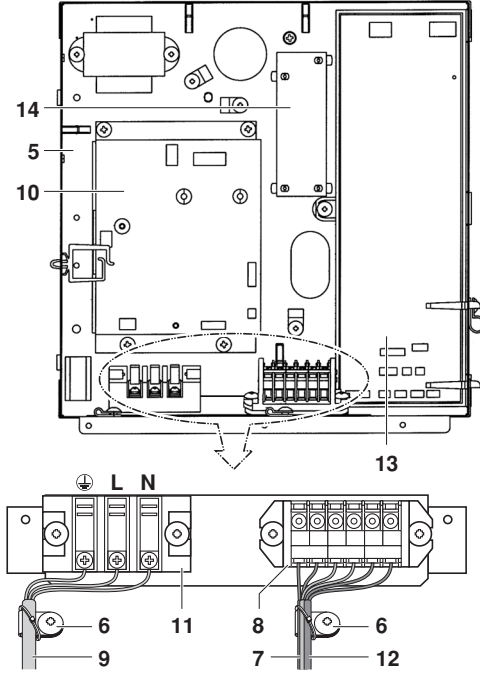


14

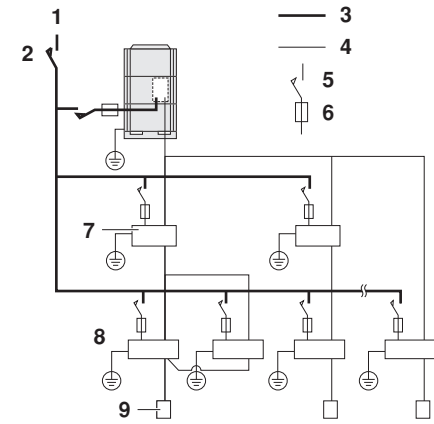


16

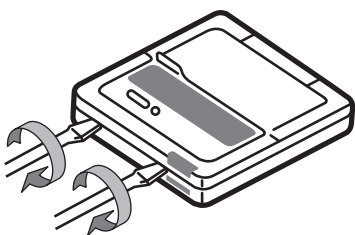


18

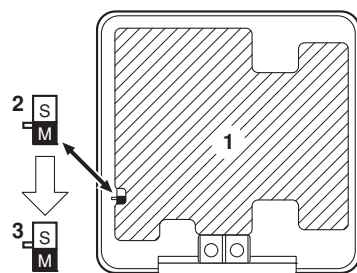


19

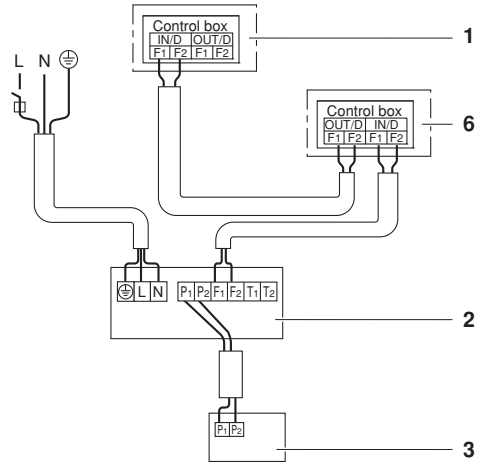


13

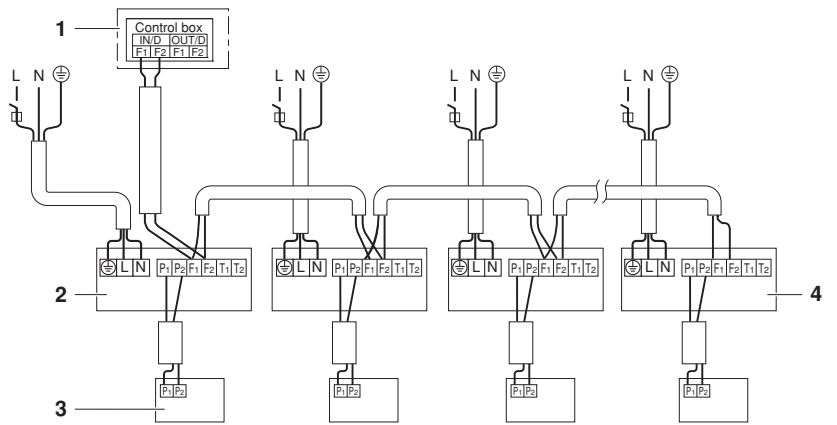

15

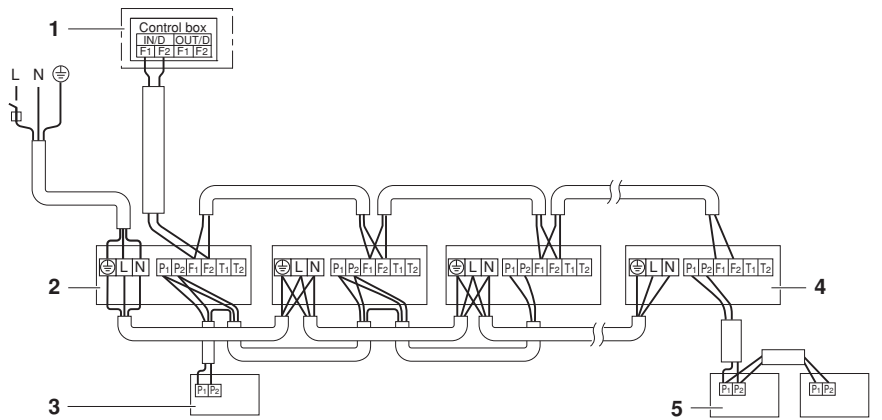

17

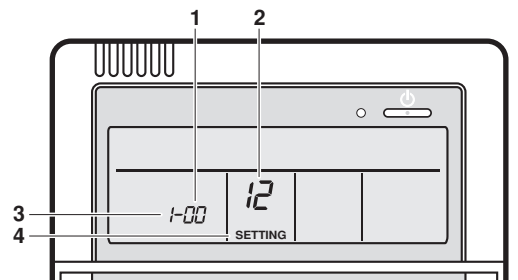

20

ERC

Copyright 2016 © Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3P468515-4 12.2016