

# Service Manual

# SUPER MULTI *NX*

## E-Series / F-Series / G-Series



**[Applied Models]**

- Inverter Multi : Cooling Only
- Inverter Multi : Heat Pump

# SUPER MULTI NX

## E-Series

## F-Series

## G-Series

### ●Cooling Only

#### Indoor Unit

FTXS20G2V1B  
 FTXS25G2V1B  
 FTXS35G2V1B  
 FTXS42G2V1B  
 FTXS50G2V1B  
 FTXS20J2V1B  
 FTXS25J2V1B  
 FTXS35J2V1B  
 FTXS42J2V1B  
 FTXS50J2V1B  
 FTXS60GV1B  
 FTXS71GV1B

FVXS25FV1B  
 FVXS35FV1B  
 FVXS50FV1B  
 FLKS25BAVMB  
 FLKS35BAVMB  
 FLKS50BAVMB  
 FLKS60BAVMB  
 FDKS25EAVMB  
 FDKS35EAVMB  
 FDKS50CVMB  
 FDKS60CVMB

FFQ25B8V1B  
 FFQ35B8V1B  
 FFQ50B8V1B  
 FFQ60B8V1B  
 FCQ35C7VEB  
 FCQ50C7VEB  
 FCQ60C7VEB  
 FCQ35C8VEB  
 FCQ50C8VEB  
 FCQ60C8VEB

FDBQ25B8V1  
 FBQ35C7VEB  
 FBQ50C7VEB  
 FBQ60C7VEB  
 FHQ35BVV1B  
 FHQ50BVV1B  
 FHQ60BVV1B

#### Outdoor Unit

3MKS50E3V1B  
 4MKS58E3V1B  
 4MKS75F2V1B

5MKS90E2V3B

## ●Heat Pump

### Indoor Unit

FTXG25JV1BW  
 FTXG25JV1BS  
 FTXG35JV1BW  
 FTXG35JV1BS  
 CTXG50JV1BW  
 CTXG50JV1BS  
 FTXS20G2V1B  
 FTXS25G2V1B  
 FTXS35G2V1B  
 FTXS42G2V1B  
 FTXS50G2V1B  
 FTXS20J2V1B  
 FTXS25J2V1B  
 FTXS35J2V1B  
 FTXS42J2V1B  
 FTXS50J2V1B  
 ATXS20G2V1B  
 ATXS25G2V1B  
 ATXS35G2V1B  
 ATXS42G2V1B  
 ATXS50G2V1B  
 FTXS60GV1B  
 FTXS71GV1B

FVXS25FV1B  
 FVXS35FV1B  
 FVXS50FV1B  
 FLXS25BAVMB  
 FLXS35BAVMB  
 FLXS50BAVMB  
 FLXS60BAVMB  
 FDXS25EAVMB  
 FDXS35EAVMB  
 FDXS50CVMB  
 FDXS60CVMB

FFQ25B8V1B  
 FFQ35B8V1B  
 FFQ50B8V1B  
 FFQ60B8V1B  
 FCQ35C7VEB  
 FCQ50C7VEB  
 FCQ60C7VEB  
 FCQ35C8VEB  
 FCQ50C8VEB  
 FCQ60C8VEB

FDBQ25B8V1  
 FBQ35C7VEB  
 FBQ50C7VEB  
 FBQ60C7VEB  
 FHQ35BVV1B  
 FHQ50BVV1B  
 FHQ60BVV1B

### Outdoor Unit

3MXS52E3V1B  
 3MXS68G2V1B  
 4MXS68F2V1B

4MXS80E2V3B  
 5MXS90E2V3B

3AMX52E3V1B

4AMX80E2V3B

1. Introduction .....	vii
1.1 Safety Cautions .....	vii
1.2 Used Icons .....	xi

## **Part 1 List of Functions ..... 1**

1. Functions.....	2
1.1 Cooling Only - Indoor Unit .....	2
1.2 Cooling Only - Outdoor Unit .....	8
1.3 Heat Pump - Indoor Unit.....	9
1.4 Heat Pump - Outdoor Unit.....	16

## **Part 2 Specifications ..... 17**

1. Specifications .....	18
1.1 Cooling Only - Indoor Unit .....	18
1.2 Cooling Only - Outdoor Unit .....	29
1.3 Heat Pump - Indoor Unit.....	31
1.4 Heat Pump - Outdoor Unit.....	45

## **Part 3 Printed Circuit Board Connector Wiring Diagram ..... 49**

1. Indoor Unit.....	50
1.1 Wall Mounted Type .....	50
1.2 Floor Standing Type .....	59
1.3 Floor / Ceiling Suspended Dual Type.....	61
1.4 Duct Connected Type.....	63
1.5 Ceiling Mounted Cassette Type .....	65
1.6 Ceiling Mounted Built-in Type .....	69
1.7 Ceiling Suspended Type .....	74
2. Remote Controller .....	76
2.1 Wired Remote Controller .....	76
2.2 Wireless Remote Controller .....	78
3. Outdoor Unit.....	80

## **Part 4 Function and Control..... 83**

1. Function of Indoor Unit (RA Models).....	84
1.1 Temperature Control .....	84
1.2 Frequency Principle.....	84
1.3 Operation Starting Control.....	86
1.4 Airflow Direction Control.....	87
1.5 Fan Speed Control for Indoor Units.....	89
1.6 Program Dry Operation .....	90
1.7 Automatic Operation.....	91
1.8 Thermostat Control.....	92
1.9 NIGHT SET Mode .....	94
1.10 ECONO Operation .....	95
1.11 HOME LEAVE Operation .....	96
1.12 2-Area INTELLIGENT EYE Operation .....	97
1.13 INTELLIGENT EYE Operation .....	99
1.14 Inverter POWERFUL Operation .....	100
1.15 Other Functions.....	102



2.	Function of Indoor Unit (SA Models) .....	104
2.1	Drain Pump Control.....	104
2.2	Thermostat Sensor in Remote Controller.....	106
2.3	Freeze Prevention Control .....	108
2.4	Hot Start Control (In Heating Operation Only).....	109
3.	Function of Thermistor .....	110
4.	Control Specification .....	112
4.1	Mode Hierarchy .....	112
4.2	Frequency Control.....	113
4.3	Controls at Mode Changing / Start-up.....	116
4.4	Discharge Pipe Temperature Control.....	117
4.5	Input Current Control.....	118
4.6	Freeze-up Protection Control .....	118
4.7	Heating Peak-cut Control .....	119
4.8	Outdoor Fan Control.....	119
4.9	Liquid Compression Protection Function.....	120
4.10	Defrost Control .....	120
4.11	Low Hz High Pressure Limit .....	121
4.12	Electronic Expansion Valve Control .....	121
4.13	Malfunctions .....	126

## **Part 5 Operation Manual ..... 128**

1.	System Configuration.....	129
2.	RA Indoor Unit.....	130
2.1	FTXG, CTXG Series - ARC466A1 .....	130
2.2	FTXS, FVXS Series - ARC452A1, A3.....	154
2.3	ATXS, FLK(X)S, FDK(X)S Series - ARC433B67, B68, B69, B76 .....	190
3.	SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	212
3.1	BRC1D528 .....	212
3.2	BRC1E51A7 .....	227
3.3	BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66.....	272

## **Part 6 Service Diagnosis..... 284**

1.	Troubleshooting with LED .....	286
1.1	Indoor Unit.....	286
1.2	Outdoor Unit.....	288
2.	Problem Symptoms and Measures .....	289
3.	Service Check Function .....	290
3.1	RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	290
3.2	SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	299
4.	Code Indication on Remote Controller .....	306
4.1	RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series.....	306
4.2	SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	306
4.3	Outdoor Unit.....	307
5.	Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series.....	308
5.1	Indoor Unit PCB Abnormality .....	308
5.2	Freeze-up Protection Control or Heating Peak-cut Control.....	309

5.3	Fan Motor or Related Abnormality .....	311
5.4	Thermistor or Related Abnormality (Indoor Unit).....	314
5.5	Front Panel Open / Close Fault (FTXG and CTXG Series).....	315
5.6	Signal Transmission Error (between Indoor Unit and Outdoor Unit) ....	316
5.7	Unspecified Voltage (between Indoor Unit and Outdoor Unit) .....	318
6.	Troubleshooting for SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series .....	319
6.1	Indoor Unit PCB Abnormality .....	319
6.2	Drain Water Level System Abnormality.....	320
6.3	Fan Motor or Related Abnormality .....	322
6.4	Swing Motor Lock (FHQ Series).....	324
6.5	Drain System Abnormality.....	325
6.6	Thermistor or Related Abnormality.....	326
6.7	Remote Controller Thermistor Abnormality .....	328
6.8	Signal Transmission Error (between Indoor Unit and Remote Controller).....	329
6.9	Signal Transmission Error (between MAIN Remote Controller and SUB Remote Controller).....	330
6.10	Field Setting Abnormality .....	331
7.	Troubleshooting for Outdoor Unit.....	333
7.1	Anti-icing Function.....	333
7.2	Outdoor Unit PCB Abnormality.....	335
7.3	OL Activation (Compressor Overload) .....	336
7.4	Compressor Lock .....	337
7.5	DC Fan Lock .....	338
7.6	Input Overcurrent Detection .....	339
7.7	Discharge Pipe Temperature Control.....	340
7.8	High Pressure Control in Cooling .....	341
7.9	Compressor Sensor System Abnormality .....	343
7.10	Position Sensor Abnormality .....	345
7.11	CT or Related Abnormality .....	347
7.12	Thermistor or Related Abnormality (Outdoor Unit).....	349
7.13	Electrical Box Temperature Rise.....	351
7.14	Radiation Fin Temperature Rise .....	353
7.15	Output Overcurrent Detection .....	355
7.16	Refrigerant Shortage.....	357
7.17	Low-voltage Detection or Over-voltage Detection.....	359
7.18	Signal Transmission Error (on Outdoor Unit PCB).....	360
7.19	Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units).....	361
8.	Check.....	362
8.1	Thermistor Resistance Check .....	362
8.2	Fan Motor Connector Check .....	363
8.3	Hall IC Check .....	363
8.4	Power Supply Waveform Check.....	363
8.5	Electronic Expansion Valve Check.....	364
8.6	Four Way Valve Performance Check.....	365
8.7	Inverter Unit Refrigerant System Check.....	365
8.8	“Inverter Checker” Check .....	366
8.9	Rotation Pulse Check on the Outdoor Unit PCB.....	367
8.10	Installation Condition Check.....	368
8.11	Discharge Pressure Check.....	368

8.12 Outdoor Fan System Check .....	369
8.13 Capacitor Voltage Check.....	369
8.14 Power Module Check .....	369

## **Part 7 Removal Procedure..... 370**

1. Outdoor Unit - 50~75 Class.....	371
1.1 Removal of Outer Panels .....	371
1.2 Removal of Electrical Box .....	375
1.3 Removal of PCBs .....	383
1.4 Removal of Outdoor Fan / Fan Motor.....	388
1.5 Removal of Sound Blankets .....	390
1.6 Removal of Coils / Thermistors .....	394
1.7 Removal of Distributor.....	397
1.8 Removal of Four Way Valve.....	398
1.9 Removal of Compressor.....	399
2. Outdoor Unit - 80/90 Class.....	401
2.1 Removal of Outer Panels .....	401
2.2 Removal of Electrical Box .....	417
2.3 Removal of PCBs .....	423
2.4 Removal of Fan Motor.....	427
2.5 Removal of Coils / Thermistors .....	428
2.6 Removal of Sound Blankets .....	434
2.7 Removal of Compressor.....	437

## **Part 8 Trial Operation and Field Settings..... 438**

1. Pump Down Operation.....	439
2. Forced Operation .....	440
3. Wiring Error Check Function .....	441
4. Trial Operation .....	443
4.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	443
4.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	445
5. Field Settings .....	447
5.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	447
5.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	451
5.3 Outdoor Unit.....	459
6. Application of Silicon Grease to a Power Transistor and a Diode Bridge .....	462





## **Part 9 Appendix..... 463**

1. Piping Diagrams.....	464
1.1 Indoor Unit.....	464
1.2 Outdoor Unit.....	470
2. Wiring Diagrams.....	475
2.1 Indoor Unit.....	475
2.2 Outdoor Unit.....	483








# 1. Introduction




## 1.1 Safety Cautions









### Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
  - △ This symbol indicates the item for which caution must be exercised.  
The pictogram shows the item to which attention must be paid.
  - This symbol indicates the prohibited action.  
The prohibited item or action is shown in the illustration or near the symbol.
  - This symbol indicates the action that must be taken, or the instruction.  
The instruction is shown in the illustration or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.












### 1.1.1 Cautions Regarding Safety of Workers






 <b>Warning</b>	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for repair. Working on the equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas is discharged during the repair work, do not touch the discharged refrigerant gas. The refrigerant gas may cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas may generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor may cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment may cause an electrical shock or fire.	







 <b>Warning</b>	
Be sure to wear a safety helmet, gloves, and a safety belt when working at a high place (more than 2 m). Insufficient safety measures may cause a fall accident.	
In case of R-410A refrigerant models, be sure to use pipes, flare nuts and tools for the exclusive use of the R-410A refrigerant. The use of materials for R-22 refrigerant models may cause a serious accident such as a damage of refrigerant cycle as well as an equipment failure.	






 <b>Caution</b>	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water may cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	

## 1.1.2 Cautions Regarding Safety of Users

 <b>Warning</b>	
<p>Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.</p>	
<p>If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.</p>	
<p>Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.</p>	
<p>When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not damage or modify the power cable. Damaged or modified power cable may cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable may damage the cable.</p>	
<p>Do not mix air or gas other than the specified refrigerant (R-410A / R-22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.</p>	
<p>If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leaking point cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.</p>	
<p>When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment may fall and cause injury.</p>	





 <b>Warning</b>	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug has dust or loose connection, it may cause an electrical shock or fire.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation may cause the equipment to fall, resulting in injury.	For unitary type only 
Be sure to install the product securely in the installation frame mounted on the window frame. If the unit is not securely mounted, it may fall and cause injury.	For unitary type only 
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 <b>Caution</b>	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If the combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding may cause an electrical shock.	

 <b>Caution</b>	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage may cause the water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water may enter the room and wet the furniture and floor.	For unitary type only  

## 1.2 Used Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.



# Part 1

# List of Functions

1. Functions.....	2
1.1 Cooling Only - Indoor Unit .....	2
1.2 Cooling Only - Outdoor Unit .....	8
1.3 Heat Pump - Indoor Unit.....	9
1.4 Heat Pump - Outdoor Unit.....	16

# 1. Functions

## 1.1 Cooling Only - Indoor Unit

Category	Functions	FTXS20/25/35/42/50G2V1B FTXS20/25/35/42/50J2V1B		Category	Functions	FTXS20/25/35/42/50G2V1B FTXS20/25/35/42/50J2V1B	
		FTXS60/71GV1B				FTXS60/71GV1B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	●	●
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	●	●
Compressor	Oval Scroll Compressor	—	—	Timer	Wipe-Clean Flat Panel	●	●
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Worry Free "Reliability & Durability"	WEEKLY TIMER Operation	●	●
	Power-Airflow Dual Flaps	●	●		24-Hour ON/OFF TIMER	●	●
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●
	Wide-Angle Louvers	●	●		Auto-Restart (after Power Failure)	●	●
	Vertical Auto-Swing (Up and Down)	●	●		Self-Diagnosis (Digital, LED) Display	●	●
	Horizontal Auto-Swing (Right and Left)	●	●		Wiring Error Check Function	—	—
	3-D Airflow	●	●		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
	COMFORT AIRFLOW Operation	●	●		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●
Comfort Control	Auto Fan Speed	●	●	H/P, C/O Compatible Indoor Unit		●	●
	Indoor Unit Quiet Operation	●	●	Flexible Power Supply Correspondence		—	—
	NIGHT QUIET Mode (Automatic)	—	—	High Ceiling Application		—	—
	OUTDOOR UNIT QUIET Operation (Manual)	●	●	Chargeless		—	—
	2-Area INTELLIGENT EYE Operation	●	—	Either Side Drain (Right or Left)		●	●
	INTELLIGENT EYE Operation	—	●	Power Selection		—	—
	Quick Warming Function (Preheating Operation)	—	—	Remote Control		5-Room Centralized Controller (Option)	●
	Hot-Start Function	—	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●	●
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		●	●	
Operation	Automatic Operation	—	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●
	Program Dry Operation	●	●		Wireless	●	●
	Fan Only	●	●		Wired (Option)	●	●
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	●	●				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	●	●				
	Indoor Unit ON/OFF Button	●	●				
	Signal Receiving Sign	●	●				
	R/C with Back Light	—	—				
Temperature Display	—	—					

**Note:** ● : Holding Functions  
— : No Functions

Category	Functions	FVXS25/35/50FV1B	Category	Functions	FVXS25/35/50FV1B
Basic Function	Inverter (with Inverter Power Control)	●	Health & Clean	Air-Purifying Filter	—
	Operation Limit for Cooling (°CDB)	—		Photocatalytic Deodorizing Filter	—
	Operation Limit for Heating (°CWB)	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—
	PAM Control	—		Titanium Apatite Photocatalytic Air-Purifying Filter	●
	Standby Electricity Saving	—		Air Filter (Prefilter)	●
Compressor	Oval Scroll Compressor	—	Wipe-Clean Flat Panel	●	
	Swing Compressor	—	Washable Grille	—	
	Rotary Compressor	—	MOLD PROOF Operation	—	
	Reluctance DC Motor	—	Good-Sleep Cooling Operation	—	
Comfortable Airflow	Power-Airflow Flap	—	Timer	WEEKLY TIMER Operation	●
	Power-Airflow Dual Flaps	—		24-Hour ON/OFF TIMER	●
	Power-Airflow Diffuser	—		NIGHT SET Mode	●
	Wide-Angle Louvers	●	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●
	Vertical Auto-Swing (Up and Down)	●		Self-Diagnosis (Digital, LED) Display	●
	Horizontal Auto-Swing (Right and Left)	—		Wiring Error Check Function	—
	3-D Airflow	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—
	COMFORT AIRFLOW Operation	—		Multi-Split / Split Type Compatible Indoor Unit	●
Comfort Control	Auto Fan Speed	●	Flexibility	H/P, C/O Compatible Indoor Unit	●
	Indoor Unit Quiet Operation	●		Flexible Power Supply Correspondence	—
	NIGHT QUIET Mode (Automatic)	—		High Ceiling Application	—
	OUTDOOR UNIT QUIET Operation (Manual)	●		Chargeless	—
	2-Area INTELLIGENT EYE Operation	—	Remote Control	Either Side Drain (Right or Left)	—
	INTELLIGENT EYE Operation	—		Power Selection	—
	Quick Warming Function (Preheating Operation)	—		5-Room Centralized Controller (Option)	●
	Hot-Start Function	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●
	Automatic Defrosting	—		Remote Control Adaptor (Normal Open Contact) (Option)	●
Operation	Automatic Operation	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●
	Program Dry Operation	●		Wireless	●
	Fan Only	●		Wired (Option)	—
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—			
	Inverter POWERFUL Operation	●			
	Priority-Room Setting	—			
	COOL / HEAT Mode Lock	—			
	HOME LEAVE Operation	—			
	ECONO Operation	●			
	Indoor Unit ON/OFF Button	●			
	Signal Receiving Sign	●			
	R/C with Back Light	●			
Temperature Display	—				

**Note:** ● : Holding Functions  
— : No Functions

Category	Functions			Category	Functions		
		FLKS25/35/50/60BAVMB	FDKS25/35EAVMB FDKS50/60CVMB			FLKS25/35/50/60BAVMB	FDKS25/35EAVMB FDKS50/60CVMB
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	●	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	●	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Air Filter (Pre-filter)	●	●
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	—	—	
	Swing Compressor	—	—	Washable Grille	—	—	
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—	
	Reluctance DC Motor	—	—	Good-Sleep Cooling Operation	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	—	—
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	●	●
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●
	Wide-Angle Louvers	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●
	Vertical Auto-Swing (Up and Down)	●	—		Self-Diagnosis (Digital, LED) Display	●	●
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
	COMFORT AIRFLOW Operation	—	—		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●
Comfort Control	Auto Fan Speed	●	●	H/P, C/O Compatible Indoor Unit		—	—
	Indoor Unit Quiet Operation	●	●	Flexible Power Supply Correspondence		●	●
	NIGHT QUIET Mode (Automatic)	—	—	High Ceiling Application		—	—
	OUTDOOR UNIT QUIET Operation (Manual)	●	●	Chargeless		—	—
	2-Area INTELLIGENT EYE Operation	—	—	Either Side Drain (Right or Left)		—	—
	INTELLIGENT EYE Operation	—	—	Power Selection		—	—
	Quick Warming Function (Preheating Operation)	—	—	Remote Control		5-Room Centralized Controller (Option)	●
	Hot-Start Function	—	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●	●
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		●	●	
Operation	Automatic Operation	—	—		DIII-NET Compatible (Adaptor) (Option)	●	●
	Program Dry Operation	●	●	Remote Controller	Wireless	●	●
	Fan Only	●	●		Wired (Option)	—	●
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	●	●				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	●	●				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	●	●				
	Signal Receiving Sign	●	●				
	R/C with Back Light	—	—				
Temperature Display	—	—					

**Note:** ● : Holding Functions  
 — : No Functions

Category	Functions	FFQ25/35/50/60B8V1B	Category	Functions	FFQ25/35/50/60B8V1B
Basic Function	Inverter (with Inverter Power Control)	●	Health & Clean	Air-Purifying Filter	—
	Operation Limit for Cooling (°CDB)	—		Photocatalytic Deodorizing Filter	—
	Operation Limit for Heating (°CWB)	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—
	PAM Control	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—
	Standby Electricity Saving	—		Longlife Filter	●
Compressor	Oval Scroll Compressor	—	Wipe-Clean Flat Panel	—	
	Swing Compressor	—	Washable Grille	●	
	Rotary Compressor	—	Filter Cleaning Indicator	●	
	Reluctance DC Motor	—	MOLD PROOF Operation	—	
Comfortable Airflow	Power-Airflow Flap	—	Good-Sleep Cooling Operation	—	
	Power-Airflow Dual Flaps	—	Timer	Schedule timer Operation	● ★2
	Power-Airflow Diffuser	—		72-Hour ON/OFF TIMER	● ★1
	Wide-Angle Louvers	—	NIGHT SET Mode	—	
	Vertical Auto-Swing (Up and Down)	●	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●
	Horizontal Auto-Swing (Right and Left)	—		Self-Diagnosis (Digital, LED) Display	●
	3-D Airflow	—		Wiring Error Check Function	—
	COMFORT AIRFLOW Operation	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—
Comfort Control	Auto Fan Speed	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●
	Indoor Unit Quiet Operation	—		H/P, C/O Compatible Indoor Unit	●
	NIGHT QUIET Mode (Automatic)	—		Flexible Power Supply Correspondence	—
	OUTDOOR UNIT QUIET Operation (Manual)	—		High Ceiling Application	—
	2-Area INTELLIGENT EYE Operation	—	Chargeless	—	
	INTELLIGENT EYE Operation	—	Either Side Drain (Right or Left)	—	
	Quick Warming Function (Preheating Operation)	—	Power Selection	—	
	Hot-Start Function	—	Remote Control	5-Room Centralized Controller (Option)	—
	Automatic Defrosting	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—
Operation	Automatic Operation	—		Remote Control Adaptor (Normal Open Contact) (Option)	—
	Program Dry Operation	●	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●
	Fan Only	●		Wireless (Option)	●
	Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	Wired (Option)	●
		Inverter POWERFUL Operation	—		
		Priority-Room Setting	—		
		COOL / HEAT Mode Lock	—		
		HOME LEAVE Operation	—		
		ECONO Operation	—		
Indoor Unit ON/OFF Button		● ★1			
Signal Receiving Sign		● ★1			
Temperature Display		—			

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller

Category	Functions	FCQ35/50/60C7VEB	FCQ35/50/60C8VEB	Category	Functions	FCQ35/50/60C7VEB	FCQ35/50/60C8VEB	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
	Standby Electricity Saving	—	—		Longlife Filter	●	●	
Compressor	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	—	—	
	Swing Compressor	—	—		Washable Grille	●	●	
	Rotary Compressor	—	—		Filter Cleaning Indicator	●	●	
	Reluctance DC Motor	—	—		Auto-Cleaning Cassette	—	● ★3	
Comfortable Airflow	Power-Airflow Flap	—	—		MOLD PROOF Operation	—	—	
	Power-Airflow Dual Flaps	—	—	Good-Sleep Cooling Operation	—	—		
	Power-Airflow Diffuser	—	—	Timer	Schedule timer Operation	● ★2	● ★2	
	Wide-Angle Louvers	—	—		72-Hour ON/OFF TIMER	● ★1	● ★1	
	Vertical Auto-Swing (Up and Down)	●	●		NIGHT SET Mode	—	—	
	Horizontal Auto-Swing (Right and Left)	—	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●
	3-D Airflow	—	—	Self-Diagnosis (Digital, LED) Display		●	●	
COMFORT AIRFLOW Operation	—	—	Wiring Error Check Function	—		—		
Comfort Control	Auto Fan Speed	—	—	Anti-Corrosion Treatment of Outdoor Heat Exchanger		—	—	
	Indoor Unit Quiet Operation	—	—	Flexibility		Multi-Split / Split Type Compatible Indoor Unit	●	●
	NIGHT QUIET Mode (Automatic)	—	—			H/P, C/O Compatible Indoor Unit	●	●
	OUTDOOR UNIT QUIET Operation (Manual)	—	—			Flexible Power Supply Correspondence	—	—
	2-Area INTELLIGENT EYE Operation	—	—			High Ceiling Application	—	●
	INTELLIGENT EYE Operation	—	—	Chargeless	—	—		
	Quick Warming Function (Preheating Operation)	—	—	Operation	Automatic Operation	—	—	
	Hot-Start Function	—	—	Program Dry Operation	●	●		
Automatic Defrosting	—	—	Fan Only	●	●			
Operation	Automatic Operation	—	—	Remote Control	5-Room Centralized Controller (Option)	—	—	
	Program Dry Operation	●	●		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—	—	
	Fan Only	●	●		Remote Control Adaptor (Normal Open Contact) (Option)	—	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●	
	Inverter POWERFUL Operation	—	—		Wireless (Option)	●	●	
	Priority-Room Setting	—	—		Wired (Option)	●	●	
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	● ★1	● ★1					
	Signal Receiving Sign	● ★1	● ★1					
	Temperature Display	—	—					

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller  
★3: with decoration panel BYCQ140CGW1

Category	Functions	FDBQ25B8V1 FBQ35/50/60C7VEB	FHQ35/50/60BVV1B	Category	Functions	FDBQ25B8V1 FBQ35/50/60C7VEB	FHQ35/50/60BVV1B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
Compressor	Standby Electricity Saving	—	—		Longlife Filter	●	●	
	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	—	—	
	Swing Compressor	—	—		Washable Grille	—	●	
	Rotary Compressor	—	—		Filter Cleaning Indicator	●	●	
Comfortable Airflow	Reluctance DC Motor	—	—		MOLD PROOF Operation	—	—	
	Power-Airflow Flap	—	—		Good-Sleep Cooling Operation	—	—	
	Power-Airflow Dual Flaps	—	—	Timer	Schedule timer Operation	● ★2	● ★2	
	Power-Airflow Diffuser	—	—		72-Hour ON/OFF TIMER	—	● ★1	
	Wide-Angle Louvers	—	—		NIGHT SET Mode	—	—	
	Vertical Auto-Swing (Up and Down)	—	●	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●	
	Horizontal Auto-Swing (Right and Left)	—	—		Self-Diagnosis (Digital, LED) Display	●	●	
	3-D Airflow	—	—		Wiring Error Check Function	—	—	
COMFORT AIRFLOW Operation	—	—	Anti-Corrosion Treatment of Outdoor Heat Exchanger		—	—		
Comfort Control	Auto Fan Speed	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	●	
	Indoor Unit Quiet Operation	—	—		H/P, C/O Compatible Indoor Unit	●	●	
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Power Supply Correspondence	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	—	—		High Ceiling Application	—	●	
	2-Area INTELLIGENT EYE Operation	—	—		Chargeless	—	—	
	INTELLIGENT EYE Operation	—	—		Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	—	—		Power Selection	—	—	
	Hot-Start Function	—	—		Remote Control	5-Room Centralized Controller (Option)	—	—
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—		—		
Operation	Automatic Operation	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		—	—	
	Program Dry Operation	●	●	DIII-NET Compatible (Adaptor) (Option)		●	●	
	Fan Only	●	●	Remote Controller	Wireless (Option)	—	●	
	Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—		—	Wired (Option)	●	●
		Inverter POWERFUL Operation	—		—			
		Priority-Room Setting	—		—			
		COOL / HEAT Mode Lock	—	—				
		HOME LEAVE Operation	—	—				
ECONO Operation		—	—					
Indoor Unit ON/OFF Button		—	● ★1					
Signal Receiving Sign		—	● ★1					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller

## 1.2 Cooling Only - Outdoor Unit

Category	Functions	3MKS50E3V1B, 4MKS75F2V1B	5MKS90E2V3B	Category	Functions	3MKS50E3V1B, 4MKS75F2V1B	5MKS90E2V3B
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	-10 ~46	10 ~46		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	●	●		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	—	—
Compressor	Oval Scroll Compressor	—	—	Timer	Wipe-Clean Flat Panel	—	—
	Swing Compressor	●	●		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	●	●		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Worry Free "Reliability & Durability"	WEEKLY TIMER Operation	—	—
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	—	—
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	—	—
	Wide-Angle Louvers	—	—		Auto-Restart (after Power Failure)	—	—
	Vertical Auto-Swing (Up and Down)	—	—		Self-Diagnosis (Digital, LED) Display	●	●
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	●	●
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	●	●
COMFORT AIRFLOW Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	—	
Comfort Control	Auto Fan Speed	—		—	H/P, C/O Compatible Indoor Unit	—	—
	Indoor Unit Quiet Operation	—		—	Flexible Power Supply Correspondence	—	—
	NIGHT QUIET Mode (Automatic)	●		●	High Ceiling Application	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	●	65 m
	2-Area INTELLIGENT EYE Operation	—		—	Either Side Drain (Right or Left)	—	—
	INTELLIGENT EYE Operation	—		—	Power Selection	—	—
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Room Centralized Controller (Option)	—
	Hot-Start Function	—	—	Remote Control Adaptor (Normal Open Pulse Contact) (Option)		—	—
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)	—		—	
Operation	Automatic Operation	—	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	—	—
	Program Dry Operation	—	—		Wireless (Option)	—	—
	Fan Only	—	—		Wired	—	—
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller			
	Inverter POWERFUL Operation	—	—				
	Priority-Room Setting	●	●				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	—	—				
	Signal Receiving Sign	—	—				
	R/C with Back Light	—	—				
Temperature Display	—	—					

**Note:** ● : Holding Functions  
— : No Functions



## 1.3 Heat Pump - Indoor Unit

Category	Functions			Category	Functions		
		FTXG25/35JV1BW(S)	CTXG50JV1BW(S)			FTXG25/35JV1BW(S)	CTXG50JV1BW(S)
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	●	●
	Standby Electricity Saving	—	—		Air Filter (Pre-filter)	●	●
Compressor	Oval Scroll Compressor	—	—	Timer	Wipe-Clean Flat Panel	●	●
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Worry Free "Reliability & Durability"	WEEKLY TIMER Operation	●	●
	Power-Airflow Dual Flaps	●	●		24-Hour ON/OFF TIMER	●	●
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●
	Wide-Angle Louvers	●	●	Flexibility	Auto-Restart (after Power Failure)	●	●
	Vertical Auto-Swing (Up and Down)	●	●		Self-Diagnosis (Digital, LED) Display	●	●
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
COMFORT AIRFLOW Operation	●	●	Remote Control	Multi-Split / Split Type Compatible Indoor Unit	●	—	
Comfort Control	Auto Fan Speed	●		●	H/P, C/O Compatible Indoor Unit	—	—
	Indoor Unit Quiet Operation	●		●	Flexible Power Supply Correspondence	—	—
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	—	—
	INTELLIGENT EYE Operation	●		●	Either Side Drain (Right or Left)	●	●
	2-Area INTELLIGENT EYE Operation	—		—	Power Selection	—	—
	Quick Warming Function (Preheating Operation)	—		—	Remote Controller	5-Room Centralized Controller (Option)	●
	Hot-Start Function	●	●	Remote Control Adaptor (Normal Open Pulse Contact) (Option)		●	●
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)	●		●	
Operation	Automatic Operation	●	●	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●
	Program Dry Operation	●	●		Wireless	●	●
	Fan Only	●	●		Wired (Option)	●	●
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	●	●				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	●	●				
	Indoor Unit ON/OFF Button	●	●				
	Signal Receiving Sign	●	●				
	Multi-Colored Indicator Lamp (Multi-Monitor Lamp)	●	●				
	R/C with Back Light	●	●				
Temperature Display	—	—					

**Note:** ● : Holding Functions  
— : No Functions

Category	Functions	FTXS20/25/35/42/50G2V1B FTXS20/25/35/42/50J2V1B	ATXS20/25/35/42/50G2V1B	Category	Functions	FTXS20/25/35/42/50G2V1B FTXS20/25/35/42/50J2V1B	ATXS20/25/35/42/50G2V1B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	●	●	
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	●	●	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	●	●		
	Swing Compressor	—	—	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	—	—	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	●	—	
	Power-Airflow Dual Flaps	●	●		24-Hour ON/OFF TIMER	●	●	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●	
	Wide-Angle Louvers	●	●	Worry Free “Reliability & Durability”	Auto-Restart (after Power Failure)	●	●	
	Vertical Auto-Swing (Up and Down)	●	●		Self-Diagnosis (Digital, LED) Display	●	●	
	Horizontal Auto-Swing (Right and Left)	●	●		Wiring Error Check Function	—	—	
	3-D Airflow	●	●		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—	
COMFORT AIRFLOW Operation	●	●	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	●		
Comfort Control	Auto Fan Speed	●		●	H/P, C/O Compatible Indoor Unit	●	—	
	Indoor Unit Quiet Operation	●		●	Flexible Power Supply Correspondence	—	—	
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	—	—	
	2-Area INTELLIGENT EYE Operation	●		—	Either Side Drain (Right or Left)	●	●	
	INTELLIGENT EYE Operation	—		●	Power Selection	—	—	
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Room Centralized Controller (Option)	●	●
	Hot-Start Function	●		●		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●	●
	Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		●	●	
Operation	Automatic Operation	●	●	Remote Controller	Wireless	●	●	
	Program Dry Operation	●	●		Wired (Option)	●	●	
	Fan Only	●	●					
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	●	●					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	●	●					
	Indoor Unit ON/OFF Button	●	●					
	Signal Receiving Sign	●	●					
	R/C with Back Light	—	—					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
— : No Functions

Category	Functions	FTXS60/71 GV1B	FVXS25/35/50FV1B	Category	Functions	FTXS60/71 GV1B	FVXS25/35/50FV1B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	●	●	
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	●	●	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	●	●		
	Swing Compressor	—	—	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	—	—	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	●	●	
	Power-Airflow Dual Flaps	●	—		24-Hour ON/OFF TIMER	●	●	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●	
	Wide-Angle Louvers	●	●	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●	
	Vertical Auto-Swing (Up and Down)	●	●		Self-Diagnosis (Digital, LED) Display	●	●	
	Horizontal Auto-Swing (Right and Left)	●	—		Wiring Error Check Function	—	—	
	3-D Airflow	●	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—	
COMFORT AIRFLOW Operation	●	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	●		
Comfort Control	Auto Fan Speed	●		●	H/P, C/O Compatible Indoor Unit	●	●	
	Indoor Unit Quiet Operation	●		●	Flexible Power Supply Correspondence	—	—	
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	—	—	
	2-Area INTELLIGENT EYE Operation	—		—	Either Side Drain (Right or Left)	●	—	
	INTELLIGENT EYE Operation	●		—	Power Selection	—	—	
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Room Centralized Controller (Option)	●	●
	Hot-Start Function	●		●		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●	●
	Automatic Defrosting	—		—		Remote Control Adaptor (Normal Open Contact) (Option)	●	●
	Operation	Automatic Operation	●	●	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●
Program Dry Operation		●	●	Wireless		●	●	
Fan Only		●	●	Wired (Option)	●	—		
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	●	●					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	●	●					
	Indoor Unit ON/OFF Button	●	●					
	Signal Receiving Sign	●	●					
	R/C with Back Light	—	●					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
— : No Functions

Category	Functions			Category	Functions			
		FLXS25/35/50/60BAVMB	FDXS25/35EAVMB FDXS50/60CVMB			FLXS25/35/50/60BAVMB	FDXS25/35EAVMB FDXS50/60CVMB	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	●	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	●	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	●	●	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	—	—		
	Swing Compressor	—	—	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	—	—	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	—	—	
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	●	●	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	●	●	
	Wide-Angle Louvers	—	—	Worry Free “Reliability & Durability”	Auto-Restart (after Power Failure)	●	●	
	Vertical Auto-Swing (Up and Down)	●	—		Self-Diagnosis (Digital, LED) Display	●	●	
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—	
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—	
COMFORT AIRFLOW Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	●		
Comfort Control	Auto Fan Speed	●		●	H/P, C/O Compatible Indoor Unit	—	—	
	Indoor Unit Quiet Operation	●		●	Flexible Power Supply Correspondence	●	●	
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	—	—	
	2-Area INTELLIGENT EYE Operation	—		—	Either Side Drain (Right or Left)	—	—	
	INTELLIGENT EYE Operation	—		—	Power Selection	—	—	
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Room Centralized Controller (Option)	●	●
	Hot-Start Function	●		●		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	●	●
	Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		●	●	
Operation	Automatic Operation	●	●	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●	
	Program Dry Operation	●	●		Wireless	●	●	
	Fan Only	●	●		Wired (Option)	—	●	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller				
	Inverter POWERFUL Operation	●	●					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	●	●					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	●	●					
	Signal Receiving Sign	●	●					
	R/C with Back Light	—	—					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
 — : No Functions

Category	Functions	FFQ25/35/50/60B8V1B	Category	Functions	FFQ25/35/50/60B8V1B	
Basic Function	Inverter (with Inverter Power Control)	●	Health & Clean	Air-Purifying Filter	—	
	Operation Limit for Cooling (°CDB)	—		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	
	PAM Control	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	
	Standby Electricity Saving	—		Longlife Filter	●	
Compressor	Oval Scroll Compressor	—		Wipe-Clean Flat Panel	—	
	Swing Compressor	—		Washable Grille	●	
	Rotary Compressor	—		Filter Cleaning Indicator	●	
	Reluctance DC Motor	—		MOLD PROOF Operation	—	
Comfortable Airflow	Power-Airflow Flap	—		Good-Sleep Cooling Operation	—	
	Power-Airflow Dual Flaps	—		Timer	Schedule timer Operation	● ★2
	Power-Airflow Diffuser	—			72-Hour ON/OFF TIMER	● ★1
	Wide-Angle Louvers	—			NIGHT SET Mode	—
	Vertical Auto-Swing (Up and Down)	●		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●
	Horizontal Auto-Swing (Right and Left)	—			Self-Diagnosis (Digital, LED) Display	●
	3-D Airflow	—			Wiring Error Check Function	—
	COMFORT AIRFLOW Operation	—			Anti-Corrosion Treatment of Outdoor Heat Exchanger	—
Comfort Control	Auto Fan Speed	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	
	Indoor Unit Quiet Operation	—		H/P, C/O Compatible Indoor Unit	●	
	NIGHT QUIET Mode (Automatic)	—		Flexible Power Supply Correspondence	—	
	OUTDOOR UNIT QUIET Operation (Manual)	—		High Ceiling Application	—	
	2-Area INTELLIGENT EYE Operation	—		Chargeless	—	
	INTELLIGENT EYE Operation	—		Either Side Drain (Right or Left)	—	
	Quick Warming Function (Preheating Operation)	—		Power Selection	—	
	Hot-Start Function	●		Remote Control	5-Room Centralized Controller (Option)	—
Automatic Defrosting	—	Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—			
Operation	Automatic Operation	●	Remote Control Adaptor (Normal Open Contact) (Option)		—	
	Program Dry Operation	●	DIII-NET Compatible (Adaptor) (Option)	●		
	Fan Only	●	Remote Controller	Wireless (Option)	●	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—		Wired (Option)	●	
	Inverter POWERFUL Operation	—				
	Priority-Room Setting	—				
	COOL / HEAT Mode Lock	—				
	HOME LEAVE Operation	—				
	ECONO Operation	—				
	Indoor Unit ON/OFF Button	● ★1				
	Signal Receiving Sign	● ★1				
Temperature Display	—					

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller

Category	Functions	FCQ35/50/60C7VEB	FCQ35/50/60C8VEB	Category	Functions	FCQ35/50/60C7VEB	FCQ35/50/60C8VEB	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
	Standby Electricity Saving	—	—		Longlife Filter	●	●	
Compressor	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	—	—	
	Swing Compressor	—	—		Washable Grille	●	●	
	Rotary Compressor	—	—		Filter Cleaning Indicator	●	●	
	Reluctance DC Motor	—	—		Auto-Cleaning Cassette	—	● ★3	
Comfortable Airflow	Power-Airflow Flap	—	—		MOLD PROOF Operation	—	—	
	Power-Airflow Dual Flaps	—	—	Good-Sleep Cooling Operation	—	—		
	Power-Airflow Diffuser	—	—	Timer	Schedule timer Operation	● ★2	● ★2	
	Wide-Angle Louvers	—	—		72-Hour ON/OFF TIMER	● ★1	● ★1	
	Vertical Auto-Swing (Up and Down)	●	●		NIGHT SET Mode	—	—	
	Horizontal Auto-Swing (Right and Left)	—	—		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●
	3-D Airflow	—	—	Self-Diagnosis (Digital, LED) Display		●	●	
	COMFORT AIRFLOW Operation	—	—	Wiring Error Check Function		—	—	
Comfort Control	Auto Fan Speed	—	—	Anti-Corrosion Treatment of Outdoor Heat Exchanger		—	—	
	Indoor Unit Quiet Operation	—	—	Flexibility		Multi-Split / Split Type Compatible Indoor Unit	●	●
	NIGHT QUIET Mode (Automatic)	—	—			H/P, C/O Compatible Indoor Unit	●	●
	OUTDOOR UNIT QUIET Operation (Manual)	—	—			Flexible Power Supply Correspondence	—	—
	2-Area INTELLIGENT EYE Operation	—	—			High Ceiling Application	—	●
	INTELLIGENT EYE Operation	—	—	Chargeless	—	—		
	Quick Warming Function (Preheating Operation)	—	—	Either Side Drain (Right or Left)	—	—		
	Hot-Start Function	●	●	Power Selection	—	—		
Automatic Defrosting	—	—	Remote Control	5-Room Centralized Controller (Option)	—	—		
Operation	Automatic Operation	●		●	Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—	—	
	Program Dry Operation	●	●	Remote Control Adaptor (Normal Open Contact) (Option)	—	—		
Lifestyle Convenience	Fan Only	●	●	DIII-NET Compatible (Adaptor) (Option)	●	●		
	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	Wireless (Option)	●	●	
		Inverter POWERFUL Operation	—		—	Wired (Option)	●	●
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	● ★1	● ★1					
	Signal Receiving Sign	● ★1	● ★1					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller  
★3: with decoration panel BYCQ140CGW1

Category	Functions			Category	Functions			
		FDBQ25B8V1 FBQ35/50/60C7VEB	FHQ35/50/60BVV1B			FDBQ25B8V1 FBQ35/50/60C7VEB	FHQ35/50/60BVV1B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
	Standby Electricity Saving	—	—		Longlife Filter	●	●	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	—	—		
	Swing Compressor	—	—	Washable Grille	—	●		
	Rotary Compressor	—	—	Filter Cleaning Indicator	●	●		
	Reluctance DC Motor	—	—	MOLD PROOF Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Good-Sleep Cooling Operation	—	—		
	Power-Airflow Dual Flaps	—	—	Timer	Schedule timer Operation	●	●★2	
	Power-Airflow Diffuser	—	—		72-Hour ON/OFF TIMER	—	●★1	
	Wide-Angle Louvers	—	—		NIGHT SET Mode	—	—	
	Vertical Auto-Swing (Up and Down)	—	●	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	●	●	
	Horizontal Auto-Swing (Right and Left)	—	—		Self-Diagnosis (Digital, LED) Display	●	●	
	3-D Airflow	—	—		Wiring Error Check Function	—	—	
	COMFORT AIRFLOW Operation	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—	
Comfort Control	Auto Fan Speed	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	●	●	
	Indoor Unit Quiet Operation	—	—		H/P, C/O Compatible Indoor Unit	●	●	
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Power Supply Correspondence	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	—	—		High Ceiling Application	—	●	
	2-Area INTELLIGENT EYE Operation	—	—		Chargeless	—	—	
	INTELLIGENT EYE Operation	—	—		Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	—	—		Power Selection	—	—	
	Hot-Start Function	●	●		Remote Control	5-Room Centralized Controller (Option)	—	—
	Automatic Defrosting	—	—			Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—	—
			Remote Control Adaptor (Normal Open Contact) (Option)	—		—		
Operation	Automatic Operation	●	●	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	●	●	
	Program Dry Operation	●	●		Wireless (Option)	—	●	
	Fan Only	●	●		Wired (Option)	●	●	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	—	—					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	—	●★1					
	Signal Receiving Sign	—	●★1					
Temperature Display	—	—						

**Note:** ● : Holding Functions  
— : No Functions

★1: with wireless remote controller  
★2: with wired remote controller

# 1.4 Heat Pump - Outdoor Unit

Category	Functions	3MXS52E3V1B, 3MXS68G2V1B 4MXS68F2V1B, 3AMXS52E3V1B	4MXS80E2V3B, 5MXS90E2V3B 4AMXS80E2V3B	Category	Functions	3MXS52E3V1B, 3MXS68G2V1B 4MXS68F2V1B, 3AMXS52E3V1B	4MXS80E2V3B, 5MXS90E2V3B 4AMXS80E2V3B	
Basic Function	Inverter (with Inverter Power Control)	●	●	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	-15 ~15.5	-15 ~15.5		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	●	●		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	—	—	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	—	—		
	Swing Compressor	●	●	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	●	●	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	—	—	
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	—	—	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	—	—	
	Wide-Angle Louvers	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	—	—	
	Vertical Auto-Swing (Up and Down)	—	—		Self-Diagnosis (Digital, LED) Display	●	●	
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	●	●	
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	●	●	
COMFORT AIRFLOW Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	—		
Comfort Control	Auto Fan Speed	—		—	H/P, C/O Compatible Indoor Unit	—	—	
	Indoor Unit Quiet Operation	—		—	Flexible Power Supply Correspondence	—	—	
	NIGHT QUIET Mode (Automatic)	●		●	High Ceiling Application	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	●		●	Chargeless	30 m	30 m	
	2-Area INTELLIGENT EYE Operation	—		—	Either Side Drain (Right or Left)	—	—	
	INTELLIGENT EYE Operation	—		—	Power Selection	—	—	
	Quick Warming Function (Preheating Operation)	●		●	Remote Control	5-Room Centralized Controller (Option)	—	—
	Hot-Start Function	—		—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—	—
	Automatic Defrosting	●	●	Remote Control Adaptor (Normal Open Contact) (Option)		—	—	
Operation	Automatic Operation	—	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	—	—	
	Program Dry Operation	—	—		Wireless (Option)	—	—	
	Fan Only	—	—	Wired	—	—		
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	—	—					
	Priority-Room Setting	●	●					
	COOL / HEAT Mode Lock	●	●					
	HOME LEAVE Operation	—	—					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	—	—					
	Signal Receiving Sign	—	—					
R/C with Back Light	—	—						
Temperature Display	—	—						

**Note:** ● : Holding Functions  
 — : No Functions



# Part 2

# Specifications

1. Specifications .....	18
1.1 Cooling Only - Indoor Unit .....	18
1.2 Cooling Only - Outdoor Unit .....	29
1.3 Heat Pump - Indoor Unit.....	31
1.4 Heat Pump - Outdoor Unit.....	45

# 1. Specifications

## 1.1 Cooling Only - Indoor Unit

### Wall Mounted Type

50 Hz, 220 - 230 - 240 V

Model			FTXS20G2V1B	FTXS25G2V1B
Rated Capacity			2.0 kW Class	2.5 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	9.4 (332)	9.1 (321)
	M		7.4 (262)	7.1 (252)
	L		5.5 (193)	5.2 (182)
	SL		4.0 (141)	3.7 (130)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)	A		0.09 - 0.08 - 0.08	0.09 - 0.08 - 0.08
Power Consumption (Rated)	W		18 - 18 - 18	18 - 18 - 18
Power Factor (Rated)	%		90.9 - 97.8 - 93.8	90.9 - 97.8 - 93.8
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)	mm		295 × 800 × 215	295 × 800 × 215
Packaged Dimensions (H × W × D)	mm		274 × 870 × 366	274 × 870 × 366
Weight (Mass)	kg		9	9
Gross Weight (Gross Mass)	kg		13	13
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 25 / 22	38 / 32 / 25 / 22
Sound Power		dB(A)	54	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D066471	3D066472

Model			FTXS35G2V1B	FTXS42G2V1B
Rated Capacity			3.5 kW Class	4.2 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.4 (367)	9.1 (321)
	M		7.7 (270)	7.7 (273)
	L		4.8 (170)	6.3 (221)
	SL		3.5 (125)	5.4 (190)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)	A		0.12 - 0.12 - 0.11	0.11 - 0.11 - 0.10
Power Consumption (Rated)	W		26 - 26 - 26	24 - 24 - 24
Power Factor (Rated)	%		98.5 - 94.2 - 98.5	99.2 - 94.9 - 100.0
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)	mm		295 × 800 × 215	295 × 800 × 215
Packaged Dimensions (H × W × D)	mm		274 × 870 × 366	274 × 870 × 366
Weight (Mass)	kg		10	10
Gross Weight (Gross Mass)	kg		13	13
Operation Sound	H / M / L / SL	dB(A)	42 / 34 / 26 / 23	42 / 38 / 33 / 30
Sound Power		dB(A)	58	58
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D066474	3D059730

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

## 50 Hz, 220 - 230 - 240 V

Model			FTXS50G2V1B	FTXS20J2V1B
Rated Capacity			5.0 kW Class	2.0 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.2 (360)	9.4 (332)
	M		8.6 (305)	7.4 (261)
	L		7.0 (246)	5.5 (194)
	SL		6.0 (212)	4.1 (145)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.12 - 0.12 - 0.11	0.09 - 0.08 - 0.08
Power Consumption (Rated)		W	26 - 26 - 26	18 - 18 - 18
Power Factor (Rated)		%	98.5 - 94.2 - 98.5	90.9 - 97.8 - 93.8
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	295 x 800 x 215	295 x 800 x 215
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366	289 x 870 x 366
Weight (Mass)		kg	10	9
Gross Weight (Gross Mass)		kg	13	13
Operation Sound	H / M / L / SL	dB(A)	43 / 39 / 34 / 31	38 / 32 / 25 / 22
Sound Power		dB(A)	59	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 12.7	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D059731	3D070569A

Model			FTXS25J2V1B	FTXS35J2V1B
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.8 (381)	11.4 (403)
	M		7.9 (279)	8.7 (307)
	L		5.2 (184)	5.8 (205)
	SL		3.7 (131)	4.4 (155)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.09 - 0.08 - 0.08	0.12 - 0.12 - 0.11
Power Consumption (Rated)		W	18 - 18 - 18	26 - 26 - 26
Power Factor (Rated)		%	90.9 - 97.8 - 93.8	98.5 - 94.2 - 98.5
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	295 x 800 x 215	295 x 800 x 215
Packaged Dimensions (H x W x D)		mm	289 x 870 x 366	289 x 870 x 366
Weight (Mass)		kg	9	10
Gross Weight (Gross Mass)		kg	13	14
Operation Sound	H / M / L / SL	dB(A)	41 / 33 / 25 / 22	45 / 37 / 29 / 23
Sound Power		dB(A)	57	61
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D070570A	3D070571A

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50 Hz, 220 - 230 - 240 V

Model			FTXS42J2V1B	FTXS50J2V1B
Rated Capacity			4.2 kW Class	5.0 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	11.3 (399)	11.6 (410)
	M		9.0 (318)	9.2 (325)
	L		6.8 (240)	7.0 (247)
	SL		5.9 (208)	6.0 (212)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.11 - 0.11 - 0.11	0.12 - 0.12 - 0.11
Power Consumption (Rated)		W	24 - 24 - 24	26 - 26 - 26
Power Factor (Rated)		%	99.2 - 94.9 - 90.9	98.5 - 94.2 - 98.5
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	295 x 800 x 215	295 x 800 x 215
Packaged Dimensions (H x W x D)		mm	289 x 870 x 366	289 x 870 x 366
Weight (Mass)		kg	10	10
Gross Weight (Gross Mass)		kg	14	14
Operation Sound	H / M / L / SL	dB(A)	45 / 39 / 33 / 30	46 / 40 / 34 / 31
Sound Power		dB(A)	61	62
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 12.7
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D070572A	3D070573A

Model			FTXS60GV1B	FTXS71GV1B
Rated Capacity			6.0 kW Class	7.1 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	16.0 (565)	17.2 (607)
	M		13.5 (477)	14.5 (512)
	L		11.3 (399)	11.5 (406)
	SL		10.1 (357)	10.5 (371)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	43	43
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.19 - 0.18 - 0.17	0.21 - 0.20 - 0.19
Power Consumption (Rated)		W	40 - 40 - 40	45 - 45 - 45
Power Factor (Rated)		%	95.7 - 96.6 - 98.0	97.4 - 97.8 - 98.7
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	290 x 1,050 x 250	290 x 1,050 x 250
Packaged Dimensions (H x W x D)		mm	361 x 1,145 x 364	361 x 1,145 x 364
Weight (Mass)		kg	12	12
Gross Weight (Gross Mass)		kg	18	18
Operation Sound	H / M / L / SL	dB(A)	45 / 41 / 36 / 33	46 / 42 / 37 / 34
Sound Power		dB(A)	61	62
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 12.7	φ 15.9
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D065735A	3D065737A

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

## Floor Standing Type

50 Hz, 220 - 230 - 240 V

Model			FVXS25FV1B	FVXS35FV1B
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	8.2 (290)	8.5 (300)
	M		6.5 (230)	6.7 (237)
	L		4.8 (169)	4.9 (173)
	SL		4.1 (145)	4.5 (159)
Fan	Type		Turbo Fan	Turbo Fan
	Motor Output	W	48	48
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.14 - 0.13 - 0.12	0.14 - 0.13 - 0.12
Power Consumption (Rated)		W	15 - 15 - 15	15 - 15 - 15
Power Factor (Rated)		%	48.7 - 50.2 - 52.1	48.7 - 50.2 - 52.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	696 x 786 x 286
Weight (Mass)		kg	14	14
Gross Weight (Gross Mass)		kg	18	18
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 26 / 23	39 / 33 / 27 / 24
Sound Power		dB(A)	54	55
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 20.0	φ 20.0
Drawing No.			3D071664	3D071665

Model			FVXS50FV1B
Rated Capacity			5.0 kW Class
Front Panel Color			White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.7 (378)
	M		9.2 (325)
	L		7.8 (275)
	SL		6.6 (233)
Fan	Type		Turbo Fan
	Motor Output	W	48
	Speed	Steps	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.18 - 0.17 - 0.16
Power Consumption (Rated)		W	27 - 27 - 27
Power Factor (Rated)		%	68.1 - 69.1 - 70.3
Temperature Control			Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286
Weight (Mass)		kg	14
Gross Weight (Gross Mass)		kg	18
Operation Sound	H / M / L / SL	dB(A)	44 / 40 / 36 / 32
Sound Power		dB(A)	56
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	φ 20.0
Drawing No.			3D071666

## Conversion Formulae

kcal/h = kW × 860  
 Btu/h = kW × 3412  
 cfm = m<sup>3</sup>/min × 35.3

Floor / Ceiling Suspended Dual Type

50 Hz, 220 - 230 - 240 V

Model			FLKS25BAVMB	FLKS35BAVMB
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			Almond White	Almond White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	7.6 (268)	8.6 (304)
	M		6.8 (240)	7.6 (268)
	L		6.0 (212)	6.6 (233)
	SL		5.2 (184)	5.6 (198)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	34	34
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.33 - 0.32 - 0.31	0.38 - 0.36 - 0.35
Power Consumption (Rated)		W	70 - 70 - 70	78 - 78 - 78
Power Factor (Rated)		%	96.4 - 95.1 - 94.1	93.3 - 94.2 - 92.9
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	490 x 1,050 x 200	490 x 1,050 x 200
Packaged Dimensions (H x W x D)		mm	280 x 1,100 x 566	280 x 1,100 x 566
Weight (Mass)		kg	16	16
Gross Weight (Gross Mass)		kg	22	22
Operation Sound	H / M / L / SL	dB(A)	37 / 34 / 31 / 28	38 / 35 / 32 / 29
Sound Power		dB(A)	53	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D071658	3D071659

50 Hz, 220 - 230 - 240 V

50 Hz, 230 V

Model			FLKS50BAVMB	FLKS60BAVMB
Rated Capacity			5.0 W Class	6.0 kW Class
Front Panel Color			Almond White	Almond White
Airflow Rates	H	m <sup>3</sup> /min (cfm)	11.4 (403)	12.0 (424)
	M		10.0 (353)	10.7 (378)
	L		8.5 (300)	9.3 (328)
	SL		7.5 (265)	8.3 (293)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	34	34
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.48 - 0.45 - 0.43	0.45
Power Consumption (Rated)		W	96 - 96 - 96	98
Power Factor (Rated)		%	90.9 - 92.8 - 93.0	94.7
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	490 x 1,050 x 200	490 x 1,050 x 200
Packaged Dimensions (H x W x D)		mm	280 x 1,100 x 566	280 x 1,100 x 566
Weight (Mass)		kg	17	17
Gross Weight (Gross Mass)		kg	24	24
Operation Sound	H / M / L / SL	dB(A)	47 / 43 / 39 / 36	48 / 45 / 41 / 39
Sound Power		dB(A)	63	64
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 12.7	φ 12.7
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D071660	3D050881

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

## Duct Connected Type

50 Hz, 230 V

Model			FDKS25EAVMB	FDKS35EAVMB
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			—	—
Airflow Rates	H	m <sup>3</sup> /min (cfm)	8.7 (307)	8.7 (307)
	M		8.0 (282)	8.0 (282)
	L		7.3 (258)	7.3 (258)
	SL		6.2 (219)	6.2 (219)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	62	62
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.48	0.48
Power Consumption (Rated)		W	71	71
Power Factor (Rated)		%	64.3	64.3
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)		mm	200 × 700 × 620	200 × 700 × 620
Packaged Dimensions (H × W × D)		mm	274 × 906 × 751	274 × 906 × 751
Weight (Mass)		kg	21	21
Gross Weight (Gross Mass)		kg	29	29
Operation Sound	H / M / L / SL	dB(A)	35 / 33 / 31 / 29	35 / 33 / 31 / 29
Sound Power		dB(A)	53	53
External Static Pressure		Pa	30	30
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.			3D060036	3D060037

Model			FDKS50CVMB	FDKS60CVMB
Rated Capacity			5.0 kW Class	6.0 kW Class
Front Panel Color			—	—
Airflow Rates	H	m <sup>3</sup> /min (cfm)	12.0 (424)	16.0 (565)
	M		11.0 (388)	14.8 (523)
	L		10.0 (353)	13.5 (477)
	SL		8.4 (297)	11.2 (395)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	130	130
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.64	0.74
Power Consumption (Rated)		W	140	160
Power Factor (Rated)		%	95.1	94.0
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)		mm	200 × 900 × 620	200 × 1,100 × 620
Packaged Dimensions (H × W × D)		mm	266 × 1,106 × 751	266 × 1,306 × 751
Weight (Mass)		kg	27	30
Gross Weight (Gross Mass)		kg	34	37
Operation Sound	H / M / L / SL	dB(A)	37 / 35 / 33 / 31	38 / 36 / 34 / 32
Sound Power		dB(A)	55	56
External Static Pressure		Pa	40	40
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 12.7	φ 12.7
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.			3D060040	3D065479

## Conversion Formulae

kcal/h = kW × 860  
 Btu/h = kW × 3412  
 cfm = m<sup>3</sup>/min × 35.3

**Ceiling Mounted Cassette Type**

**50 Hz, 230 V**

Model			FFQ25B8V1B	FFQ35B8V1B
Rated Capacity			2.5 kW Class	3.5 kW Class
Decoration Panel	Color		White	
	Dimensions (H × W × D) mm		55 × 700 × 700	55 × 700 × 700
Airflow Rates	H	m <sup>3</sup> /min (cfm)	9.0 (318)	10.0 (353)
	M		—	—
	L		6.5 (230)	6.5 (230)
	SL		—	—
Fan	Type		Turbo Fan	
	Motor Output	W	55	
	Speed	Steps	2 Steps	
Air Direction Control			Horizontal, Downward	
Air Filter			—	
Running Current (Rated)	A	0.37		0.40
Power Consumption (Rated)	W	73		84
Power Factor (Rated)	%	85.8		91.3
Temperature Control			Microcomputer Control	
Dimensions (H × W × D) ★	mm	260 (286) × 575 × 575		260 (286) × 575 × 575
Packaged Dimensions (H × W × D)	mm	370 × 687 × 674		370 × 687 × 674
Weight (Mass)	kg	17.5		17.5
Gross Weight (Gross Mass)	kg	21		21
Operation Sound	H / L	dB(A)	29.5 / 24.5	
Sound Power		dB(A)	46.5	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 9.5	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060406	

Model			FFQ50B8V1B	FFQ60B8V1B
Rated Capacity			5.0 kW Class	6.0 kW Class
Decoration Panel	Color		White	
	Dimensions (H × W × D) mm		55 × 700 × 700	55 × 700 × 700
Airflow Rates	H	m <sup>3</sup> /min (cfm)	12.0 (424)	15.5 (530)
	M		—	—
	L		8.0 (283)	10.0 (353)
	SL		—	—
Fan	Type		Turbo Fan	
	Motor Output	W	55	
	Speed	Steps	2 Steps	
Air Direction Control			Horizontal, Downward	
Air Filter			—	
Running Current (Rated)	A	0.49		0.61
Power Consumption (Rated)	W	97		120
Power Factor (Rated)	%	86.1		85.5
Temperature Control			Microcomputer Control	
Dimensions (H × W × D) ★	mm	260 (286) × 575 × 575		260 (286) × 575 × 575
Packaged Dimensions (H × W × D)	mm	370 × 687 × 674		370 × 687 × 674
Weight (Mass)	kg	17.5		17.5
Gross Weight (Gross Mass)	kg	21		21
Operation Sound	H / L	dB(A)	36.0 / 27.0	
Sound Power		dB(A)	53.0	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060410	

★ ( ) : dimension including control box

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3



50 Hz, 220 - 230 - 240 V / 60 Hz, 220 V

Model			FCQ35C7VEB	FCQ50C7VEB
Rated Capacity			3.5 kW Class	5.0 kW Class
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950	
	Weight	kg	5.5	
Airflow Rates	H	m <sup>3</sup> /min	10.5	
	L		8.5	
Fan	Type		Turbo Fan	
	Motor Output	W	56	
	Speed	Steps	2 Steps	
Air Filter			Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882	
Weight (Mass)		kg	19	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / L	dB(A)	31 / 27	
Sound Power	H	dB(A)	49	
Heat Insulation			Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)	
	Gas	mm	φ 9.52 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	

Model			FCQ60C7VEB
Rated Capacity			6.0 kW Class
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W
	Color		Pure White
	Dimensions (H x W x D)	mm	50 x 950 x 950
	Weight	kg	5.5
Airflow Rates	H	m <sup>3</sup> /min	13.5
	L		8.5
Fan	Type		Turbo Fan
	Motor Output	W	56
	Speed	Steps	2 Steps
Air Filter			Resin net with mold resistance
Dimensions (H x W x D)		mm	204 x 840 x 840
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882
Weight (Mass)		kg	19
Gross Weight (Gross Mass)		kg	24
Operation Sound	H / L	dB(A)	33 / 28
Sound Power	H	dB(A)	51
Heat Insulation			Foamed polystyrene / Foamed polyethylene
Piping Connection	Liquid	mm	φ 6.35 (Flare)
	Gas	mm	φ 12.7 (Flare)
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

50 Hz, 220 - 230 - 240 V / 60 Hz, 220 V

Model			FCQ35C8VEB	FCQ50C8VEB
Rated Capacity			3.5 kW Class	5.0 kW Class
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950	
	Weight	kg	5.5	
Decoration Panel (auto-cleaning)	Model		BYCQ140CGW1	
	Color		Pure White	
	Dimensions (H x W x D)	mm	130 x 950 x 950	
	Weight	kg	5.5	
Airflow Rates	H	m <sup>3</sup> /min	10.5	
	L		8.5	
Fan	Type		Turbo Fan	
	Motor Output	W	56	
	Speed	Steps	2 Steps	
Air Filter			Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882	
Weight (Mass)		kg	19	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / L	dB(A)	31 / 27	
Sound Power	H	dB(A)	49	
Heat Insulation			Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)	
	Gas	mm	φ 9.52 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	

Model			FCQ60C8VEB	
Rated Capacity			6.0 kW Class	
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950	
	Weight	kg	5.5	
Decoration Panel (auto-cleaning)	Model		BYCQ140CGW1	
	Color		Pure White	
	Dimensions (H x W x D)	mm	130 x 950 x 950	
	Weight	kg	5.5	
Airflow Rates	H	m <sup>3</sup> /min	13.5	
	L		8.5	
Fan	Type		Turbo Fan	
	Motor Output	W	56	
	Speed	Steps	2 Steps	
Air Filter			Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882	
Weight (Mass)		kg	19	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / L	dB(A)	33 / 28	
Sound Power	H	dB(A)	51	
Heat Insulation			Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)	
	Gas	mm	φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

## Ceiling Mounted Built-in Type

50 Hz, 220 - 230 - 240 V /  
60 Hz, 220 V

50 Hz, 230 V

Model			FDBQ25B8V1	FBQ35C7VEB
Rated Capacity			2.5 kW Class	3.5 kW Class
Decoration Panel	Color		—	White
	Dimensions (H x W x D)		—	55 x 800 x 500
Airflow Rates	H	m <sup>3</sup> /min	6.5	16.0
	L		5.2	11.0
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	10	140
	Speed	Steps	2 Steps	2 Steps
Air Filter			Resin net with mold resistance	Resin net with mold resistance
Dimensions (H x W x D)		mm	230 x 652 x 502	300 x 700 x 700
Packaged Dimensions (H x W x D)		mm	301 x 753 x 584	325 x 920 x 900
Weight (Mass)		kg	17	25
Gross Weight (Gross Mass)		kg	18	28
Operation Sound	H / L	dB(A)	35 / 28	37 / 29
Sound Power	H / L	dB(A)	55 / 49	63 / —
Heat Insulation			—	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.35	φ 6.35 (Flare)
	Gas	mm	φ 9.52	φ 9.52 (Flare)
	Drain	mm	O.D. φ 27.2	VP25 (O.D. φ 32 / I.D. φ 25)

Model			FBQ50C7VEB	FBQ60C7VEB
Rated Capacity			5.0 kW Class	6.0 kW Class
Decoration Panel	Color		White	White
	Dimensions (H x W x D)		55 x 800 x 500	55 x 1,100 x 500
Airflow Rates	H	m <sup>3</sup> /min	16.0	18.0
	L		11.0	15.0
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output	W	140	350
	Speed	Steps	2 Steps	2 Steps
Air Filter			Resin net with mold resistance	Resin net with mold resistance
Dimensions (H x W x D)		mm	300 x 700 x 700	300 x 1,000 x 700
Packaged Dimensions (H x W x D)		mm	355 x 920 x 900	355 x 1,220 x 900
Weight (Mass)		kg	25	34
Gross Weight (Gross Mass)		kg	28	41
Operation Sound	H / L	dB(A)	37 / 29	37 / 29
Sound Power	H / L	dB(A)	63 / —	57 / —
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.35 (Flare)	φ 6.35 (Flare)
	Gas	mm	φ 12.7 (Flare)	φ 12.7 (Flare)
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	VP25 (O.D. φ 32 / I.D. φ 25)

## Conversion Formulae

kcal/h = kW × 860  
 Btu/h = kW × 3412  
 cfm = m<sup>3</sup>/min × 35.3

**Ceiling Suspended Type**

**50 Hz, 220 - 230 - 240 V**

Model			FHQ35BVV1B	FHQ50BVV1B
Rated Capacity			3.5 kW Class	5.0 kW Class
Panel Color			White	White
Airflow Rates	H	m <sup>3</sup> /min	13.0 (459)	13.0 (459)
	L		10.0 (353)	10.0 (353)
Fan	Type		Sirocco Fan	Sirocco Fan
	Motor Output		W	62
	Speed	Steps	2 Steps	2 Steps
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	195 x 960 x 680	195 x 960 x 680
Packaged Dimensions (H x W x D)		mm	279 x 1,046 x 818	279 x 1,046 x 818
Weight (Mass)		kg	24	25
Gross Weight (Gross Mass)		kg	31	32
Operation Sound	H / L	dB(A)	37 / 32	38 / 33
Sound Power		dB(A)	53	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 12.7
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.			3D060041	3D060042

Model			FHQ60BVV1B	
Rated Capacity			6.0 kW Class	
Panel Color			White	
Airflow Rates	H	m <sup>3</sup> /min	17.0 (600)	
	L		13.0 (459)	
Fan	Type		Sirocco Fan	
	Motor Output		W	
	Speed	Steps	2 Steps	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable	
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	195 x 1,160 x 680	
Packaged Dimensions (H x W x D)		mm	279 x 1,246 x 818	
Weight (Mass)		kg	27	
Gross Weight (Gross Mass)		kg	35	
Operation Sound	H / L	dB(A)	39 / 33	
Sound Power		dB(A)	55	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D065478	

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

## 1.2 Cooling Only - Outdoor Unit

50 Hz, 230 V

Model			3MKS50E3V1B	4MKS58E3V1B	
Casing Color			Ivory White	Ivory White	
Compressor	Type	Hermetically Sealed Swing Type			
	Model	2YC36BXD			
Motor Output	W	1,100			
	Model	FVC50K			
Refrigerant Oil	Charge	L	0.65		
	Type	R-410A			
Refrigerant	Charge	kg	2.0		
	H	m <sup>3</sup> /min	45		
L	45				
Airflow Rates	H	cfm	1,589		
	L		1,589		
Fan	Type	Propeller			
	Motor Output	W	53		
	Running Current	A	H: 0.33 / L: 0.33		
	Power Consumption	W	H: 43 / L: 43		
Starting Current	A	5.3		6.7	
Dimensions (H x W x D)	mm	735 x 936 x 300		735 x 936 x 300	
Packaged Dimensions (H x W x D)	mm	797 x 992 x 390		797 x 992 x 390	
Weight (Mass)	kg	49		49	
Gross Weight (Gross Mass)	kg	56		56	
Operation Sound	dB(A)	46		46	
Sound Power	dB(A)	59		59	
Piping Connection	Liquid	mm	φ 6.4 x 3		φ 6.4 x 4
	Gas	mm	φ 9.5 x 3		φ 9.5 x 2, φ 12.7 x 2
	Drain	mm	φ 18.0		φ 18.0
Heat Insulation	Both Liquid and Gas Pipes			Both Liquid and Gas Pipes	
No. of Wiring Connection	3 for Power Supply, 4 for Interunit Wiring			3 for Power Supply, 4 for Interunit Wiring	
Max. Interunit Piping Length	m	50 (for Total of Each Room)		50 (for Total of Each Room)	
	m	25 (for One Room)		25 (for One Room)	
Amount of Additional Charge	g/m	Chargeless		Chargeless	
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)	
	m	15 (between Indoor Units)		15 (between Indoor Units)	
Drawing No.	3D054330#1		3D054329#1		

**Note:** The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor : 27°CDB / 19°CWB Outdoor : 35°CDB	7.5 m

Conversion Formulae
kcal/h = kW x 860 Btu/h = kW x 3412 cfm = m <sup>3</sup> /min x 35.3

50 Hz, 230 V

Model			4MKS75F2V1B	5MKS90E2V3B
Casing Color			Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type		
	Model	2YC45DXD		
	Motor Output	W	1,380	1,920
Refrigerant Oil	Model	FVC50K		
	Charge	L	0.65	0.75
Refrigerant	Type	R-410A		
	Charge	kg	2.3	2.95
Airflow Rates	H	m <sup>3</sup> /min	52.7	54.5
	M		49.4	—
	L		43.5	46
	H	cfm	1,861	1,924
	M		1,744	—
	L		1,536	1,624
Fan	Type	Propeller		
	Motor Output	W	53	66
	Running Current	A	H: 0.20 / M: 0.16 / L: 0.10	H: 0.97 / L: 0.69
	Power Consumption	W	H: 70 / M: 58 / L: 36	H: 86 / L: 55
Starting Current	A	6.2	11.4	
Dimensions (H × W × D)	mm	735 × 936 × 300	770 × 900 × 320	
Packaged Dimensions (H × W × D)	mm	797 × 992 × 390	900 × 925 × 390	
Weight (Mass)	kg	57	69	
Gross Weight (Gross Mass)	kg	61	78	
Operation Sound	dB(A)	48	48	
Sound Power	dB(A)	61	62	
Piping Connection	Liquid	mm	φ 6.4 × 4	φ 6.4 × 5
	Gas	mm	φ 9.5 × 2, φ 12.7 × 1, φ 15.9 × 1	φ 9.5 × 2, φ 12.7 × 1, φ 15.9 × 2
	Drain	mm	φ 18.0	φ 25.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
No. of Wiring Connection			3 for Power Supply, 4 for Interunit Wiring	3 for Power Supply, 4 for Interunit Wiring
Max. Interunit Piping Length	m	60 (for Total of Each Room)		
	m	25 (for One Room)		
Amount of Additional Charge	g/m	Chargeless		
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		
	m	15 (between Indoor Units)		
Drawing No.			3D056453	3D063120

**Note:** The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	5 m

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m <sup>3</sup> /min × 35.3

# 1.3 Heat Pump - Indoor Unit

## Wall Mounted Type

50 Hz, 220 - 230 - 240 V

Model			FTXG25JV1BW		FTXG25JV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		2.5 kW Class	
Front Panel Color			White		Silver	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	8.8 (311)	9.6 (339)	8.8 (311)	9.6 (339)
	M		6.8 (240)	7.9 (279)	6.8 (240)	7.9 (279)
	L		4.7 (166)	6.2 (219)	4.7 (166)	6.2 (219)
	SL		3.8 (134)	5.4 (191)	3.8 (134)	5.4 (191)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	29		29	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.09 - 0.08 - 0.08	0.12 - 0.11 - 0.11	0.09 - 0.08 - 0.08	0.12 - 0.11 - 0.11
Power Consumption (Rated)		W	18 - 18 - 18	24 - 24 - 24	18 - 18 - 18	24 - 24 - 24
Power Factor (Rated)		%	90.9 - 97.8 - 93.8	90.9 - 94.9 - 90.9	90.9 - 97.8 - 93.8	90.9 - 94.9 - 90.9
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	295 x 915 x 155		295 x 915 x 155	
Packaged Dimensions (H x W x D)		mm	285 x 1,003 x 377		285 x 1,003 x 377	
Weight (Mass)		kg	11		11	
Gross Weight (Gross Mass)		kg	15		16	
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 25 / 22	39 / 34 / 28 / 25	38 / 32 / 25 / 22	39 / 34 / 28 / 25
Sound Power		dB(A)	54	55	54	55
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 16.0 or φ 18.0		φ 16.0 or φ 18.0	
Drawing No.			3D066165A		3D066436A	

Model			FTXG35JV1BW		FTXG35JV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		3.5 kW Class	
Front Panel Color			White		Silver	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.1 (357)	10.8 (381)	10.1 (357)	10.8 (381)
	M		7.3 (258)	8.6 (304)	7.3 (258)	8.6 (304)
	L		4.6 (162)	6.4 (226)	4.6 (162)	6.4 (226)
	SL		3.9 (138)	5.6 (198)	3.9 (138)	5.6 (198)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	29		29	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.13 - 0.12 - 0.12	0.16 - 0.15 - 0.14	0.13 - 0.12 - 0.12	0.16 - 0.15 - 0.14
Power Consumption (Rated)		W	26 - 26 - 26	32 - 32 - 32	26 - 26 - 26	32 - 32 - 32
Power Factor (Rated)		%	90.9 - 94.2 - 90.3	90.9 - 92.8 - 95.2	90.9 - 94.2 - 90.3	90.9 - 92.8 - 95.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	295 x 915 x 155		295 x 915 x 155	
Packaged Dimensions (H x W x D)		mm	285 x 1,003 x 377		285 x 1,003 x 377	
Weight (Mass)		kg	11		11	
Gross Weight (Gross Mass)		kg	15		16	
Operation Sound	H / M / L / SL	dB(A)	42 / 34 / 26 / 23	42 / 36 / 29 / 26	42 / 34 / 26 / 23	42 / 36 / 29 / 26
Sound Power		dB(A)	58	58	58	58
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 16.0 or φ 18.0		φ 16.0 or φ 18.0	
Drawing No.			3D066437A		3D066438A	

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50 Hz, 220 - 230 - 240 V

Model			CTXG50JV1BW		CTXG50JV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		5.0 kW Class	
Front Panel Color			White		Silver	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.5 (371)	11.4 (402)	10.5 (371)	11.4 (402)
	M		8.7 (307)	9.8 (346)	8.7 (307)	9.8 (346)
	L		6.9 (244)	8.1 (286)	6.9 (244)	8.1 (286)
	SL		5.9 (208)	7.1 (251)	5.9 (208)	7.1 (251)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	29		29	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.16 - 0.15 - 0.14	0.19 - 0.18 - 0.17	0.16 - 0.15 - 0.14	0.19 - 0.18 - 0.17	
Power Consumption (Rated)	W	32 - 32 - 32	38 - 38 - 38	32 - 32 - 32	38 - 38 - 38	
Power Factor (Rated)	%	90.9 - 92.8 - 95.2	90.9 - 91.8 - 93.1	90.9 - 92.8 - 95.2	90.9 - 91.8 - 93.1	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm	295 x 915 x 155		295 x 915 x 155		
Packaged Dimensions (H x W x D)	mm	285 x 1,003 x 377		285 x 1,003 x 377		
Weight (Mass)	kg	11		11		
Gross Weight (Gross Mass)	kg	15		15		
Operation Sound	H / M / L / SL	dB(A)	44 / 41 / 35 / 32	44 / 41 / 35 / 32	44 / 41 / 35 / 32	
Sound Power	dB(A)	60	60	60	60	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 12.7	
	Drain	mm	φ 16.0 or φ 18.0		φ 16.0 or φ 18.0	
Drawing No.			3D066439B		3D066440B	

Model			FTXS20G2V1B		FTXS25G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.0 kW Class		2.5 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	9.4 (332)	9.9 (350)	9.1 (321)	9.8 (346)
	M		7.4 (262)	8.2 (290)	7.1 (252)	7.9 (280)
	L		5.5 (193)	6.5 (228)	5.2 (182)	6.2 (217)
	SL		4.0 (141)	5.5 (193)	3.7 (130)	5.2 (183)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	
Power Consumption (Rated)	W	18 - 18 - 18	21 - 21 - 21	18 - 18 - 18	21 - 21 - 21	
Power Factor (Rated)	%	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm	295 x 800 x 215		295 x 800 x 215		
Packaged Dimensions (H x W x D)	mm	274 x 870 x 366		274 x 870 x 366		
Weight (Mass)	kg	9		9		
Gross Weight (Gross Mass)	kg	13		13		
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 25 / 22	38 / 33 / 28 / 25	38 / 32 / 25 / 22	
Sound Power	dB(A)	54	54	54	55	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D066468		3D066469	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3



## 50 Hz, 220 - 230 - 240 V

Model			FTXS35G2V1B		FTXS42G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		4.2 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.4 (367)	10.6 (374)	9.1 (321)	11.2 (395)
	M		7.7 (270)	8.5 (302)	7.7 (273)	9.4 (333)
	L		4.8 (170)	6.4 (226)	6.3 (221)	7.7 (271)
	SL		3.5 (125)	5.4 (191)	5.4 (190)	6.8 (240)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.12 - 0.12 - 0.11	0.13 - 0.13 - 0.12	0.11 - 0.11 - 0.10	0.14 - 0.14 - 0.13
Power Consumption (Rated)	W		26 - 26 - 26	28 - 28 - 28	24 - 24 - 24	30 - 30 - 30
Power Factor (Rated)	%		98.5 - 94.2 - 98.5	97.9 - 93.6 - 97.2	99.2 - 94.9 - 100.0	97.4 - 93.2 - 96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)	mm		274 x 870 x 366		274 x 870 x 366	
Weight (Mass)	kg		10		10	
Gross Weight (Gross Mass)	kg		13		13	
Operation Sound	H / M / L / SL	dB(A)	42 / 34 / 26 / 23	42 / 36 / 29 / 26	42 / 38 / 33 / 30	42 / 38 / 33 / 30
Sound Power		dB(A)	58	58	58	58
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D066470		3D059725	

Model			FTXS50G2V1B		FTXS20J2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		2.0 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.2 (360)	11.0 (388)	9.4 (332)	9.9 (350)
	M		8.6 (305)	9.3 (330)	7.4 (261)	8.2 (290)
	L		7.0 (246)	7.6 (267)	5.5 (194)	6.6 (233)
	SL		6.0 (212)	6.7 (236)	4.1 (145)	6.2 (219)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.12 - 0.12 - 0.11	0.15 - 0.14 - 0.14	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09
Power Consumption (Rated)	W		26 - 26 - 26	32 - 32 - 32	18 - 18 - 18	21 - 21 - 21
Power Factor (Rated)	%		98.5 - 94.2 - 98.5	97.0 - 99.4 - 95.2	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)	mm		274 x 870 x 366		289 x 870 x 366	
Weight (Mass)	kg		10		9	
Gross Weight (Gross Mass)	kg		13		13	
Operation Sound	H / M / L / SL	dB(A)	43 / 39 / 34 / 31	44 / 39 / 34 / 31	38 / 32 / 25 / 22	38 / 33 / 28 / 25
Sound Power		dB(A)	59	60	54	54
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D059726		3D070564A	

## Conversion Formulae

kcal/h = kW × 860  
 Btu/h = kW × 3412  
 cfm = m<sup>3</sup>/min × 35.3

50 Hz, 220 - 230 - 240 V

Model			FTXS25J2V1B		FTXS35J2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.8 (381)	11.9 (420)	11.4 (403)	12.4 (438)
	M		7.9 (279)	9.1 (321)	8.7 (307)	9.5 (335)
	L		5.2 (184)	6.4 (226)	5.8 (205)	6.8 (240)
	SL		3.7 (131)	5.9 (208)	4.4 (155)	6.0 (212)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	0.12 - 0.12 - 0.11	0.13 - 0.13 - 0.12
Power Consumption (Rated)	W		18 - 18 - 18	21 - 21 - 21	26 - 26 - 26	28 - 28 - 28
Power Factor (Rated)	%		90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	98.5 - 94.2 - 98.5	97.9 - 93.6 - 97.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)	mm		289 x 870 x 366		289 x 870 x 366	
Weight (Mass)	kg		9		10	
Gross Weight (Gross Mass)	kg		13		14	
Operation Sound	H / M / L / SL	dB(A)	41 / 33 / 25 / 22	42 / 35 / 28 / 25	45 / 37 / 29 / 23	45 / 39 / 29 / 26
Sound Power		dB(A)	57	58	61	61
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D070565A		3D070566A	

Model			FTXS42J2V1B		FTXS50J2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			4.2 kW Class		5.0 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	11.3 (399)	12.2 (431)	11.6 (410)	12.1 (427)
	M		9.0 (318)	9.7 (343)	9.2 (325)	9.8 (346)
	L		6.8 (240)	7.3 (258)	7.0 (247)	7.6 (268)
	SL		5.9 (208)	6.4 (228)	6.0 (212)	6.7 (237)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.11 - 0.11 - 0.11	0.14 - 0.14 - 0.13	0.12 - 0.12 - 0.11	0.15 - 0.14 - 0.14
Power Consumption (Rated)	W		24 - 24 - 24	30 - 30 - 30	26 - 26 - 26	32 - 32 - 32
Power Factor (Rated)	%		99.2 - 94.9 - 90.9	97.4 - 93.2 - 96.2	98.5 - 94.2 - 98.5	97.0 - 99.4 - 95.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)	mm		289 x 870 x 366		289 x 870 x 366	
Weight (Mass)	kg		10		10	
Gross Weight (Gross Mass)	kg		14		14	
Operation Sound	H / M / L / SL	dB(A)	45 / 39 / 33 / 30	45 / 39 / 33 / 30	46 / 40 / 34 / 31	47 / 41 / 34 / 31
Sound Power		dB(A)	61	61	62	63
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D070567A		3D070568A	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

50 Hz, 220 - 230 - 240 V

Model			ATXS20G2V1B		ATXS25G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.0 kW Class		2.5 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	9.4 (332)	9.9 (350)	9.1 (321)	9.8 (346)
	M		7.4 (262)	8.2 (290)	7.1 (252)	7.9 (280)
	L		5.5 (193)	6.5 (228)	5.2 (182)	6.2 (217)
	SL		4.0 (141)	5.5 (193)	3.7 (130)	5.2 (183)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09
Power Consumption (Rated)		W	18 - 18 - 18	21 - 21 - 21	18 - 18 - 18	21 - 21 - 21
Power Factor		%	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366		274 x 870 x 366	
Weight (Mass)		kg	9		9	
Gross Weight (Gross Mass)		kg	13		13	
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 25 / 22	38 / 33 / 28 / 25	38 / 32 / 25 / 22	39 / 34 / 28 / 25
Sound Power	H	dB(A)	54	54	54	55
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D066475		3D066476	

Model			ATXS35G2V1B		ATXS42G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		4.2 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.4 (367)	10.6 (374)	9.1 (321)	11.2 (395)
	M		7.7 (270)	8.5 (302)	7.7 (273)	9.4 (333)
	L		4.8 (170)	6.4 (226)	6.3 (221)	7.7 (271)
	SL		3.5 (125)	5.4 (191)	5.4 (190)	6.8 (240)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.12 - 0.12 - 0.11	0.13 - 0.13 - 0.12	0.11 - 0.11 - 0.10	0.14 - 0.14 - 0.13
Power Consumption (Rated)		W	26 - 26 - 26	28 - 28 - 28	24 - 24 - 24	30 - 30 - 30
Power Factor		%	98.5 - 94.2 - 98.5	97.9 - 93.6 - 97.2	99.2 - 94.9 - 100.0	97.4 - 93.2 - 96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	295 x 800 x 215		295 x 800 x 215	
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366		274 x 870 x 366	
Weight (Mass)		kg	10		10	
Gross Weight (Gross Mass)		kg	13		13	
Operation Sound	H / M / L / SL	dB(A)	42 / 34 / 26 / 23	42 / 36 / 29 / 26	42 / 38 / 33 / 30	42 / 38 / 33 / 30
Sound Power	H	dB(A)	58	58	58	58
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Drawing No.			3D066477		3D059735	

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

50 Hz, 220 - 230 - 240 V

Model			ATXS50G2V1B			
			Cooling		Heating	
Rated Capacity			5.0 kW Class			
Front Panel Color			White			
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.2 (360)		11.0 (388)	
	M		8.6 (305)		9.3 (330)	
	L		7.0 (246)		7.6 (267)	
	SL		6.0 (212)		6.7 (236)	
Fan	Type	Cross Flow Fan				
	Motor Output	W	23			
	Speed	Steps	5 Steps, Quiet, Auto			
Air Direction Control			Right, Left, Horizontal, Downward			
Air Filter			Removable / Washable / Mildew Proof			
Running Current (Rated)		A	0.12 - 0.12 - 0.11		0.15 - 0.14 - 0.14	
Power Consumption (Rated)		W	26 - 26 - 26		32 - 32 - 32	
Power Factor		%	98.5 - 94.2 - 98.5		97.0 - 99.4 - 95.2	
Temperature Control			Microcomputer Control			
Dimensions (H x W x D)		mm	295 x 800 x 215			
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366			
Weight (Mass)		kg	10			
Gross Weight (Gross Mass)		kg	13			
Operation Sound	H / M / L / SL	dB(A)	43 / 39 / 34 / 31		44 / 39 / 34 / 31	
Sound Power	H	dB(A)	59		60	
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4			
	Gas	mm	φ12.7			
	Drain	mm	φ18.0			
Drawing No.			3D059736			

Model			FTXS60GV1B		FTXS71GV1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			6.0 kW Class		7.1 kW Class	
Front Panel Color			White		White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	16.0 (565)	17.2 (607)	17.2 (607)	19.5 (689)
	M		13.5 (477)	14.9 (526)	14.5 (512)	16.7 (590)
	L		11.3 (399)	12.6 (445)	11.5 (406)	14.2 (501)
	SL		10.1 (357)	11.3 (399)	10.5 (371)	12.6 (445)
Fan	Type	Cross Flow Fan				
	Motor Output	W	43			
	Speed	Steps	5 Steps, Quiet, Auto			
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.19 - 0.18 - 0.17	0.21 - 0.20 - 0.19	0.21 - 0.20 - 0.19	0.28 - 0.27 - 0.26
Power Consumption (Rated)		W	40 - 40 - 40	45 - 45 - 45	45 - 45 - 45	60 - 60 - 60
Power Factor (Rated)		%	95.7 - 96.6 - 98.0	97.4 - 97.8 - 98.7	97.4 - 97.8 - 98.7	97.4 - 96.6 - 96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	290 x 1,050 x 250		290 x 1,050 x 250	
Packaged Dimensions (H x W x D)		mm	361 x 1,145 x 364		361 x 1,145 x 364	
Weight (Mass)		kg	12		12	
Gross Weight (Gross Mass)		kg	18		18	
Operation Sound	H / M / L / SL	dB(A)	45 / 41 / 36 / 33	44 / 40 / 35 / 32	46 / 42 / 37 / 34	46 / 42 / 37 / 34
Sound Power		dB(A)	61	60	62	62
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 15.9	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D065512A		3D065513A	

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

Floor Standing Type

50 Hz, 220 - 230 - 240 V

Model			FVXS25FV1B		FVXS35FV1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			White			
Airflow Rates	H	m <sup>3</sup> /min (cfm)	8.2 (290)	8.8 (311)	8.5 (300)	9.4 (332)
	M		6.5 (230)	6.9 (244)	6.7 (237)	7.3 (258)
	L		4.8 (169)	5.0 (177)	4.9 (173)	5.2 (184)
	SL		4.1 (145)	4.4 (155)	4.5 (159)	4.7 (166)
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	48		48	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13	0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13
Power Consumption (Rated)	W		15 - 15 - 15	17 - 17 - 17	15 - 15 - 15	17 - 17 - 17
Power Factor (Rated)	%		48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5	48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		600 x 700 x 210		600 x 700 x 210	
Packaged Dimensions (H x W x D)	mm		696 x 786 x 286		696 x 786 x 286	
Weight (Mass)	kg		14		14	
Gross Weight (Gross Mass)	kg		18		18	
Operation Sound	H / M / L / SL	dB(A)	38 / 32 / 26 / 23	38 / 32 / 26 / 23	39 / 33 / 27 / 24	39 / 33 / 27 / 24
Sound Power		dB(A)	54	54	55	55
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20.0		φ 20.0	
Drawing No.			3D071661		3D071662	

Model			FVXS50FV1B	
			Cooling	Heating
Rated Capacity			5.0 kW Class	
Front Panel Color			White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	10.7 (378)	11.8 (417)
	M		9.2 (325)	10.1 (357)
	L		7.8 (275)	8.5 (300)
	SL		6.6 (233)	7.1 (251)
Fan	Type		Turbo Fan	
	Motor Output	W	48	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.18 - 0.17 - 0.16	0.20 - 0.19 - 0.18
Power Consumption (Rated)	W		27 - 27 - 27	34 - 34 - 34
Power Factor (Rated)	%		68.1 - 69.1 - 70.3	77.3 - 77.8 - 78.7
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)	mm		600 x 700 x 210	
Packaged Dimensions (H x W x D)	mm		696 x 786 x 286	
Weight (Mass)	kg		14	
Gross Weight (Gross Mass)	kg		18	
Operation Sound	H / M / L / SL	dB(A)	44 / 40 / 36 / 32	45 / 40 / 36 / 32
Sound Power		dB(A)	56	57
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 20.0	
Drawing No.			3D071663	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

Floor / Ceiling Suspended Dual Type

50 Hz, 220 - 230 - 240 V

Model			FLXS25BAVMB		FLXS35BAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			Almond White		Almond White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	7.6 (268)	9.2 (325)	8.6 (304)	9.8 (346)
	M		6.8 (240)	8.3 (293)	7.6 (268)	8.9 (314)
	L		6.0 (212)	7.4 (261)	6.6 (233)	8.0 (282)
	SL		5.2 (184)	6.6 (233)	5.6 (198)	7.2 (254)
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	34		34	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.33 - 0.32 - 0.31	0.36 - 0.34 - 0.33	0.38 - 0.36 - 0.35	0.38 - 0.36 - 0.35
Power Consumption (Rated)	W		70 - 70 - 70	74 - 74 - 74	78 - 78 - 78	78 - 78 - 78
Power Factor (Rated)	%		96.4 - 95.1 - 94.1	93.4 - 94.6 - 93.4	93.3 - 94.2 - 92.9	93.3 - 94.2 - 92.9
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		490 x 1,050 x 200		490 x 1,050 x 200	
Packaged Dimensions (H x W x D)	mm		280 x 1,100 x 566		280 x 1,100 x 566	
Weight (Mass)	kg		16		16	
Gross Weight (Gross Mass)	kg		22		22	
Operation Sound	H / M / L / SL	dB(A)	37 / 34 / 31 / 28	37 / 34 / 31 / 29	38 / 35 / 32 / 29	39 / 36 / 33 / 30
Sound Power		dB(A)	53	53	54	55
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D059564		3D059567	

50 Hz, 220 - 230 - 240 V

50 Hz, 230 V

Model			FLXS50BAVMB		FLXS60BAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		6.0 kW Class	
Front Panel Color			Almond White		Almond White	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	11.4 (403)	12.1 (427)	12.0 (424)	12.8 (452)
	M		10.0 (353)	9.8 (346)	10.7 (378)	10.6 (374)
	L		8.5 (300)	7.5 (265)	9.3 (328)	8.4 (297)
	SL		7.5 (265)	6.8 (240)	8.3 (293)	7.5 (265)
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	34		34	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.48 - 0.45 - 0.43	0.47 - 0.45 - 0.44	0.47	0.45
Power Consumption (Rated)	W		96 - 96 - 96	96 - 96 - 96	98	96
Power Factor (Rated)	%		90.9 - 92.8 - 93.0	92.8 - 92.8 - 90.9	90.7	92.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		490 x 1,050 x 200		490 x 1,050 x 200	
Packaged Dimensions (H x W x D)	mm		280 x 1,100 x 566		280 x 1,100 x 566	
Weight (Mass)	kg		17		17	
Gross Weight (Gross Mass)	kg		24		24	
Operation Sound	H / M / L / SL	dB(A)	47 / 43 / 39 / 36	46 / 41 / 35 / 33	48 / 45 / 41 / 39	47 / 42 / 37 / 34
Sound Power		dB(A)	63	62	64	63
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D071657		3D050882	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

## Duct Connected Type

50 Hz, 230 V

Model			FDXS25EAVMB		FDXS35EAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			—		—	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	8.7 (307)	8.7 (307)	8.7 (307)	8.7 (307)
	M		8.0 (282)	8.0 (282)	8.0 (282)	8.0 (282)
	L		7.3 (258)	7.3 (258)	7.3 (258)	7.3 (258)
	SL		6.2 (219)	6.2 (219)	6.2 (219)	6.2 (219)
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	62		62	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.48	0.48	0.48	0.48
Power Consumption (Rated)		W	71	71	71	71
Power Factor (Rated)		%	64.3	64.3	64.3	64.3
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H × W × D)		mm	200 × 700 × 620		200 × 700 × 620	
Packaged Dimensions (H × W × D)		mm	274 × 906 × 751		274 × 906 × 751	
Weight (Mass)		kg	21		21	
Gross Weight (Gross Mass)		kg	29		29	
Operation Sound	H / M / L / SL	dB(A)	35 / 33 / 31 / 29	35 / 33 / 31 / 29	35 / 33 / 31 / 29	35 / 33 / 31 / 29
Sound Power		dB(A)	53	53	53	53
External Static Pressure		Pa	30		30	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)		VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060029		3D060030	

Model			FDXS50CVMB		FDXS60CVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		6.0 kW Class	
Front Panel Color			—		—	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	12.0 (424)	12.0 (424)	16.0 (565)	16.0 (565)
	M		11.0 (388)	11.0 (388)	14.8 (523)	14.8 (523)
	L		10.0 (353)	10.0 (353)	13.5 (477)	13.5 (477)
	SL		8.4 (297)	8.4 (297)	11.2 (395)	11.2 (395)
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	130		130	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.64	0.64	0.74	0.74
Power Consumption (Rated)		W	140	140	160	160
Power Factor (Rated)		%	95.1	95.1	94.0	94.0
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H × W × D)		mm	200 × 900 × 620		200 × 1,100 × 620	
Packaged Dimensions (H × W × D)		mm	266 × 1,106 × 751		266 × 1,306 × 751	
Weight (Mass)		kg	27		30	
Gross Weight (Gross Mass)		kg	34		37	
Operation Sound	H / M / L / SL	dB(A)	37 / 35 / 33 / 31	37 / 35 / 33 / 31	38 / 36 / 34 / 32	38 / 36 / 34 / 32
Sound Power		dB(A)	55	55	56	56
External Static Pressure		Pa	40		40	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)		VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060033		3D065477	

## Conversion Formulae

kcal/h = kW × 860  
 Btu/h = kW × 3412  
 cfm = m<sup>3</sup>/min × 35.3

Ceiling Mounted Cassette Type

50 Hz, 230 V

Model			FFQ25B8V1B		FFQ35B8V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Decoration Panel	Color		White		White	
	Dimensions (H x W x D)	mm	55 x 700 x 700		55 x 700 x 700	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	9.0 (318)	9.0 (318)	10.0 (353)	10.0 (353)
	M		—	—	—	—
	L		6.5 (230)	6.5 (230)	6.5 (230)	6.5 (230)
	SL		—	—	—	—
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	55		55	
	Speed	Steps	2 Steps		2 Steps	
Air Direction Control			Horizontal, Downward		Horizontal, Downward	
Air Filter			—		—	
Running Current (Rated)	A		0.37	0.32	0.40	0.36
Power Consumption (Rated)	W		73	64	84	76
Power Factor (Rated)	%		85.8	87.0	91.3	91.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D) ★	mm		260 (286) x 575 x 575		260 (286) x 575 x 575	
Packaged Dimensions (H x W x D)	mm		370 x 687 x 674		370 x 687 x 674	
Weight (Mass)	kg		17.5		17.5	
Gross Weight (Gross Mass)	kg		21		21	
Operation Sound	H / L	dB(A)	29.5 / 24.5		32.0 / 25.0	
Sound Power		dB(A)	46.5		49.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	VP20 (O.D φ 26 / I.D φ 20)		VP20 (O.D φ 26 / I.D φ 20)	
Drawing No.			3D060405		3D060407	

Model			FFQ50B8V1B		FFQ60B8V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		6.0 kW Class	
Decoration Panel	Color		White		White	
	Dimensions (H x W x D)	mm	55 x 700 x 700		55 x 700 x 700	
Airflow Rates	H	m <sup>3</sup> /min (cfm)	12.0 (424)	12.0 (424)	15.0 (530)	15.0 (530)
	M		—	—	—	—
	L		8.0 (283)	8.0 (283)	10.0 (353)	10.0 (353)
	SL		—	—	—	—
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	55		55	
	Speed	Steps	2 Steps		2 Steps	
Air Direction Control			Horizontal, Downward		Horizontal, Downward	
Air Filter			—		—	
Running Current (Rated)	A		0.49	0.45	0.61	0.56
Power Consumption (Rated)	W		97	89	120	111
Power Factor (Rated)	%		86.1	86.0	85.5	86.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D) ★	mm		260 (286) x 575 x 575		260 (286) x 575 x 575	
Packaged Dimensions (H x W x D)	mm		370 x 687 x 674		370 x 687 x 674	
Weight (Mass)	kg		17.5		17.5	
Gross Weight (Gross Mass)	kg		21		21	
Operation Sound	H / L	dB(A)	36.0 / 27.0		41.0 / 32.0	
Sound Power		dB(A)	53.0		58.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 12.7		φ 12.7	
	Drain	mm	VP20 (O.D φ 26 / I.D φ 20)		VP20 (O.D φ 26 / I.D φ 20)	
Drawing No.			3D060409		3D040436	

Note: ★ ( ) : dimension including control box

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3



50 Hz, 220 - 230 - 240 V / 60 Hz, 220 V

Model			FCQ35C7VEB		FCQ50C7VEB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		5.0 kW Class	
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950		50 x 950 x 950	
	Weight	kg	5.5		5.5	
Airflow Rates	H	m³/min	10.5	12.5	12.5	12.5
	L		8.5	10.0	8.5	8.5
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	56		56	
	Speed	Steps	2 Steps		2 Steps	
Air Filter			Resin net with mold resistance		Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840		204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882		220 x 882 x 882	
Weight (Mass)		kg	19		19	
Gross Weight (Gross Mass)		kg	24		24	
Operation Sound	H / L	dB(A)	31 / 27		31 / 27	
Sound Power	H	dB(A)	49	—	49	—
Heat Insulation			Foamed polystyrene / Foamed polyethylene		Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)		φ 6.35 (Flare)	
	Gas	mm	φ 9.52 (Flare)		φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)		VP25 (O.D. φ 32 / I.D. φ 25)	

Model			FCQ60C7VEB	
			Cooling	Heating
Rated Capacity			6.0 kW Class	
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950	
	Weight	kg	5.5	
Airflow Rates	H	m³/min	13.5	13.5
	L		8.5	8.5
Fan	Type		Turbo Fan	
	Motor Output	W	56	
	Speed	Steps	2 Steps	
Air Filter			Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882	
Weight (Mass)		kg	19	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / L	dB(A)	33 / 28	
Sound Power	H	dB(A)	51	—
Heat Insulation			Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)	
	Gas	mm	φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	

<p>Conversion Formulae</p> <p>kcal/h = kW x 860</p> <p>Btu/h = kW x 3412</p> <p>cfm = m³/min x 35.3</p>
---

50 Hz, 220 - 230 - 240 V / 60 Hz, 220 V

Model			FCQ35C8VEB		FCQ50C8VEB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		5.0 kW Class	
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950		50 x 950 x 950	
	Weight	kg	5.5		5.5	
Decoration Panel (auto-cleaning)	Model		BYCQ140CGW1		BYCQ140CGW1	
	Color		Pure White		Pure White	
	Dimensions (H x W x D)	mm	130 x 950 x 950		130 x 950 x 950	
	Weight	kg	5.5		5.5	
Airflow Rates	H	m³/min	10.5	12.5	12.5	12.5
	L		8.5	10.0	8.5	8.5
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	56		56	
	Speed	Steps	2 Steps		2 Steps	
Air Filter			Resin net with mold resistance		Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840		204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882		220 x 882 x 882	
Weight (Mass)		kg	19		19	
Gross Weight (Gross Mass)		kg	24		24	
Operation Sound	H / L	dB(A)	31 / 27		31 / 27	
Sound Power	H	dB(A)	49	—	49	—
Heat Insulation			Foamed polystyrene / Foamed polyethylene		Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)		φ 6.35 (Flare)	
	Gas	mm	φ 9.52 (Flare)		φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)		VP25 (O.D. φ 32 / I.D. φ 25)	

Model			FCQ60C8VEB	
			Cooling	Heating
Rated Capacity			6.0 kW Class	
Decoration Panel	Model		BYCQ140CW1 / BYCQ140CW1W	
	Color		Pure White	
	Dimensions (H x W x D)	mm	50 x 950 x 950	
	Weight	kg	5.5	
Decoration Panel (auto-cleaning)	Model		BYCQ140CGW1	
	Color		Pure White	
	Dimensions (H x W x D)	mm	130 x 950 x 950	
	Weight	kg	5.5	
Airflow Rates	H	m³/min	13.5	13.5
	L		8.5	8.5
Fan	Type		Turbo Fan	
	Motor Output	W	56	
	Speed	Steps	2 Steps	
Air Filter			Resin net with mold resistance	
Dimensions (H x W x D)		mm	204 x 840 x 840	
Packaged Dimensions (H x W x D)		mm	220 x 882 x 882	
Weight (Mass)		kg	19	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / L	dB(A)	33 / 28	
Sound Power	H	dB(A)	51	—
Heat Insulation			Foamed polystyrene / Foamed polyethylene	
Piping Connection	Liquid	mm	φ 6.35 (Flare)	
	Gas	mm	φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)	

<p>Conversion Formulae</p> <p>kcal/h = kW × 860</p> <p>Btu/h = kW × 3412</p> <p>cfm = m³/min × 35.3</p>
---

## Ceiling Mounted Built-in Type

50 Hz, 220 - 230 - 240 V /  
50 Hz, 230 V  
60 Hz, 220 V

Model			FDBQ25B8V1		FBQ35C7VEB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Decoration Panel	Color		—		White	
	Dimensions (H × W × D)		—		55 × 800 × 500	
Airflow Rates	H	m <sup>3</sup> /min	6.5	6.95	16.0	
	L		5.2	5.2	11.0	
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	10		140	
	Speed	Steps	2 Steps		2 Steps	
Air Filter			Resin net with mold resistance		Resin net with mold resistance	
Dimensions (H × W × D)		mm	230 × 652 × 502		300 × 700 × 700	
Packaged Dimensions (H × W × D)		mm	301 × 753 × 584		325 × 920 × 900	
Weight (Mass)		kg	17		25	
Gross Weight (Gross Mass)		kg	18		28	
Operation Sound	H / L	dB(A)	35 / 28	35 / 29	37 / 29	
Sound Power	H / L	dB(A)	55 / 49		63 / —	
Heat Insulation			—		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.35		φ 6.35 (Flare)	
	Gas	mm	φ 9.52		φ 9.52 (Flare)	
	Drain	mm	O.D. φ 27.2		VP25 (O.D. φ 32 / I.D. φ 25)	

Model			FBQ50C7VEB		FBQ60C7VEB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			5.0 kW Class		6.0 kW Class	
Decoration Panel	Color		White		White	
	Dimensions (H × W × D)		55 × 800 × 500		55 × 1,100 × 500	
Airflow Rates	H	m <sup>3</sup> /min	16.0	18.0	18.0	
	L		11.0	15.0	15.0	
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	140		350	
	Speed	Steps	2 Steps		2 Steps	
Air Filter			Resin net with mold resistance		Resin net with mold resistance	
Dimensions (H × W × D)		mm	300 × 700 × 700		300 × 1,000 × 700	
Packaged Dimensions (H × W × D)		mm	355 × 920 × 920		355 × 1,220 × 900	
Weight (Mass)		kg	25		34	
Gross Weight (Gross Mass)		kg	28		41	
Operation Sound	H / L	dB(A)	37 / 29		37 / 29	
Sound Power	H / L	dB(A)	63 / —		57 / —	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.35 (Flare)		φ 6.35 (Flare)	
	Gas	mm	φ 12.7 (Flare)		φ 12.7 (Flare)	
	Drain	mm	VP25 (O.D. φ 32 / I.D. φ 25)		VP25 (O.D. φ 32 / I.D. φ 25)	

## Conversion Formulae

kcal/h = kW × 860  
Btu/h = kW × 3412  
cfm = m<sup>3</sup>/min × 35.3

Ceiling Suspended Type

50 Hz, 220 - 230 - 240 V

Model	FHQ35BVV1B			FHQ50BVV1B		
	Cooling		Heating	Cooling		Heating
Rated Capacity	3.5 kW Class			5.0 kW Class		
Panel Color	White			White		
Airflow Rates	H	m <sup>3</sup> /min	13.0 (459)	13.0 (459)	13.0 (459)	13.0 (459)
	L		10.0 (353)	10.0 (353)	10.0 (353)	10.0 (353)
Fan	Type		Sirocco Fan		Sirocco Fan	
	Motor Output	W	62		62	
	Speed	Steps	2 Steps		2 Steps	
Air Direction Control	Right, Left, Horizontal, Downward			Right, Left, Horizontal, Downward		
Air Filter	Removable / Washable / Mildew Proof			Removable / Washable		
Temperature Control	Microcomputer Control			Microcomputer Control		
Dimensions (H x W x D)	mm	195 x 960 x 680			195 x 960 x 680	
Packaged Dimensions (H x W x D)	mm	279 x 1,046 x 818			279 x 1,046 x 818	
Weight (Mass)	kg	24			25	
Gross Weight (Gross Mass)	kg	31			32	
Operation Sound	H / L	dB(A)	37 / 32		38 / 33	
Sound Power		dB(A)	53			54
Heat Insulation	Both Liquid and Gas Pipes			Both Liquid and Gas Pipes		
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)		VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.	3D0660034			3D060035		

Model	FHQ60BVV1B		
	Cooling		Heating
Rated Capacity	6.0 kW Class		
Panel Color	White		
Airflow Rates	H	m <sup>3</sup> /min	17.0 (600)
	L		13.0 (459)
Fan	Type		Sirocco Fan
	Motor Output	W	62
	Speed	Steps	2 Steps
Air Direction Control	Right, Left, Horizontal, Downward		
Air Filter	Removable / Washable		
Temperature Control	Microcomputer Control		
Dimensions (H x W x D)	mm	195 x 1,160 x 680	
Packaged Dimensions (H x W x D)	mm	279 x 1,246 x 818	
Weight (Mass)	kg	27	
Gross Weight (Gross Mass)	kg	35	
Operation Sound	H / L	dB(A)	39 / 33
Sound Power		dB(A)	55
Heat Insulation	Both Liquid and Gas Pipes		
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.	3D065476		

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m <sup>3</sup> /min x 35.3

# 1.4 Heat Pump - Outdoor Unit

50 Hz, 230 V

Model		3MXS52E3V1B	
		Cooling	Heating
Casing Color		Ivory White	
Compressor	Type	Hermetically Sealed Swing Type	
	Model	2YC36BXD	
	Motor Output	W	1,100
Refrigerant Oil	Model	FVC50K	
	Charge	L	0.65
Refrigerant	Type	R-410A	
	Charge	kg	2.0
Airflow Rates	H	m <sup>3</sup> /min	45
	L		45
	H	cfm	1,589
	L		1,589
Fan	Type	Propeller	
	Motor Output	W	53
	Running Current	A	H: 0.33 / L: 0.29
	Power Consumption	W	H: 43 / L: 34
Starting Current		A	6.2
Dimensions (H × W × D)		mm	735 × 936 × 300
Packaged Dimensions (H × W × D)		mm	797 × 992 × 390
Weight (Mass)		kg	49
Gross Weight (Gross Mass)		kg	56
Operation Sound		dB(A)	46
Sound Power		dB(A)	59
Piping Connection	Liquid	mm	φ 6.4 × 3
	Gas	mm	φ 9.5 × 2; φ 12.7 × 1
	Drain	mm	φ 18.0
Heat Insulation		Both Liquid and Gas Pipes	
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring	
Max. Interunit Piping Length	m	50 (for Total of Each Room)	
	m	25 (for One Room)	
Amount of Additional Charge		g/m	20 (30m or more)
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)	
	m	7.5 (between Indoor Units)	
Drawing No.		3D054327#1	

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	7.5 m

Conversion Formulae

kcal/h = kW × 860  
Btu/h = kW × 3412  
cfm = m<sup>3</sup>/min × 35.3

50 Hz, 230 V

Model		3MXS68G2V1B				4MXS68F2V1B			
		Cooling		Heating		Cooling		Heating	
Casing Color		Ivory White				Ivory White			
Compressor	Type	Hermetically Sealed Swing Type				Hermetically Sealed Swing Type			
	Model	2YC45DXD				2YC45DXD			
	Motor Output	W	1,380		1,380		1,380		
Refrigerant Oil	Model	FVC50K				FVC50K			
	Charge	L	0.65		0.65		0.65		
Refrigerant	Type	R-410A				R-410A			
	Charge	kg	2.59		2.6		2.6		
Airflow Rates	m <sup>3</sup> /min	H	52.7	46.4	52.7	46.4	52.7	46.4	
		M	49.4	44.5	49.4	44.5	49.4	44.5	
		L	43.5	16.3	43.5	16.3	43.5	16.3	
	cfm	H	1,861	1,638	1,861	1,638	1,861	1,638	
		M	1,744	1,571	1,744	1,571	1,744	1,571	
		L	1,536	576	1,536	576	1,536	576	
Fan	Type	Propeller				Propeller			
	Motor Output	W	53		53		53		
	Running Current	A	H: 0.20 / M: 0.16 / L: 0.10	H: 0.16 / M: 0.14 / L: 0.03	H: 0.20 / M: 0.16 / L: 0.10	H: 0.16 / M: 0.14 / L: 0.03	H: 0.20 / M: 0.16 / L: 0.10	H: 0.16 / M: 0.14 / L: 0.03	
	Power Consumption	W	H: 70 / M: 58 / L: 36	H: 55 / M: 48 / L: 10	H: 70 / M: 58 / L: 36	H: 55 / M: 48 / L: 10	H: 70 / M: 58 / L: 36	H: 55 / M: 48 / L: 10	
Starting Current	A	6.2		6.2		6.2			
Dimensions (H × W × D)	mm	735 × 936 × 300				735 × 936 × 300			
Packaged Dimensions (H × W × D)	mm	797 × 992 × 390				797 × 992 × 390			
Weight (Mass)	kg	58				58			
Gross Weight (Gross Mass)	kg	63				63			
Operation Sound	dB(A)	48	49	48	49	48	49	48	49
Sound Power	dB(A)	61	—	61	—	61	—	61	—
Piping Connection	Liquid	mm	φ 6.4 × 3		φ 6.4 × 4		φ 6.4 × 4		
	Gas	mm	φ 9.5 × 1, φ 12.7 × 2		φ 9.5 × 2, φ 12.7 × 2		φ 9.5 × 2, φ 12.7 × 2		
	Drain	mm	φ 18.0		φ 18.0		φ 18.0		
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes				
No. of Wiring Connection	3 for Power Supply, 4 for Interunit Wiring				3 for Power Supply, 4 for Interunit Wiring				
Max. Interunit Piping Length	m	50 (for Total of Each Room)		60 (for Total of Each Room)		60 (for Total of Each Room)			
	m	25 (for One Room)		25 (for One Room)		25 (for One Room)			
Amount of Additional Charge	g/m	20 (30m or more)		20 (30m or more)		20 (30m or more)			
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)			
	m	7.5 (between Indoor Units)		7.5 (between Indoor Units)		7.5 (between Indoor Units)			
Drawing No.	3D058720A				3D056404				

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	5 m

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m <sup>3</sup> /min × 35.3

50 Hz, 230 V

Model		4MXS80E2V3B				5MXS90E2V3B			
		Cooling		Heating		Cooling		Heating	
Casing Color		Ivory White				Ivory White			
Compressor	Type	Hermetically Sealed Swing Type				Hermetically Sealed Swing Type			
	Model	2YC63BXD				2YC63BXD			
	Motor Output	W	1,920		1,920				
Refrigerant Oil	Model	FVC50K				FVC50K			
	Charge	L	0.75		0.75				
Refrigerant	Type	R-410A				R-410A			
	Charge	kg	2.99		2.99				
Airflow Rates	H	m <sup>3</sup> /min	54.5	46.0	57.1	52.5			
	M		—		54.5	—			
	L		46	14.7	46.0	14.7			
	H	cfm	1,924	1,624	2,016	1,854			
	M		—		1,924	—			
	L		1,624	519	1,624	519			
Fan	Type	Propeller				Propeller			
	Motor Output	W	66		66				
	Running Current	A	H: 0.97 / L: 0.69	H: 0.69 / L: 0.05	H: 1.02 / M: 0.97 / L: 0.69	H: 0.90 / L: 0.05			
	Power Consumption	W	H: 86 / L: 55	H: 55 / L: 9	H: 95 / M: 86 / L: 55	H: 78 / L: 9			
Starting Current	A	9.7		11.8					
Dimensions (H × W × D)	mm	770 × 900 × 320				770 × 900 × 320			
Packaged Dimensions (H × W × D)	mm	900 × 925 × 390				900 × 925 × 390			
Weight (Mass)	kg	72		73					
Gross Weight (Gross Mass)	kg	80		80					
Operation Sound	dB(A)	48	49	52	52				
Sound Power	dB(A)	60	—	66	—				
Piping Connection	Liquid	mm	φ 6.4 × 4		φ 6.4 × 5				
	Gas	mm	φ 9.5 × 1, φ 12.7 × 1, φ 15.9 × 2		φ 9.5 × 2, φ 12.7 × 1, φ 15.9 × 2				
	Drain	mm	φ 25.0		φ 25.0				
Heat Insulation	Both Liquid and Gas Pipes				Both Liquid and Gas Pipes				
No. of Wiring Connection	3 for Power Supply, 4 for Interunit Wiring				3 for Power Supply, 4 for Interunit Wiring				
Max. Interunit Piping Length	m	70 (for Total of Each Room)		75 (for Total of Each Room)					
	m	25 (for One Room)		25 (for One Room)					
Amount of Additional Charge	g/m	20 (30m or more)		20 (30m or more)					
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)					
	m	7.5 (between Indoor Units)		7.5 (between Indoor Units)					
Drawing No.	3D063118				3D063119				

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	7.5 m

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m <sup>3</sup> /min × 35.3

50 Hz, 230 V

Model		3AMX52E3V1B		4AMX80E2V3B		
		Cooling	Heating	Cooling	Heating	
Casing Color		Ivory White		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	2YC36BXD		2YC63BXD		
	Motor Output	W	1,100	1,920		
Refrigerant Oil	Model	FVC50K		FVC50K		
	Charge	L	0.65	0.75		
Refrigerant	Type	R-410A		R-410A		
	Charge	kg	2.0	2.99		
Airflow Rates	H	m <sup>3</sup> /min	45	45	54.5	46.0
	L		45	41	46	14.7
	H	cfm	1,589	1,589	1,924	1,624
	L		1,589	1,448	1,624	519
Fan	Type	Propeller		Propeller		
	Motor Output	W	53	66		
	Running Current	A	H: 0.33 / L: 0.29	H: 0.97 / L: 0.69	H: 0.69 / L: 0.05	
	Power Consumption	W	H: 43 / L: 34	H: 86 / L: 55	H: 55 / L: 9	
Starting Current	A	6.2		9.7		
Dimensions (H x W x D)	mm	735 x 936 x 300		770 x 900 x 320		
Packaged Dimensions (H x W x D)	mm	992 x 390 x 797		900 x 925 x 390		
Weight (Mass)	kg	49		72		
Gross Weight (Gross Mass)	kg	56		80		
Operation Sound	dB(A)	46	47	48	49	
Sound Power	dB(A)	59	60	60	—	
Piping Connection	Liquid	mm	φ 6.4 x 3		φ 6.4 x 4	
	Gas	mm	φ 9.5 x 2, φ 12.7 x 1		φ 9.5 x 1, φ 12.7 x 1, φ 15.9 x 2	
	Drain	mm	φ 18.0		φ 25.0	
Heat Insulation	Both Liquid and Gas Pipes		Both Liquid and Gas Pipes			
No. of Wiring Connection	3 for Power Supply, 4 for Interunit Wiring		3 for Power Supply, 4 for Interunit Wiring			
Max. Interunit Piping Length	m	50 (for Total of Each Room)		70 (for Total of Each Room)		
	m	25 (for One Room)		25 (for One Room)		
Amount of Additional Charge	g/m	20 (30m or more)		20 (30m or more)		
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)		
	m	7.5 (between Indoor Units)		7.5 (between Indoor Units)		
Drawing No.	3D054331#1		3D063118			

**Note:** The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	7.5 m

Conversion Formulae
kcal/h = kW x 860 Btu/h = kW x 3412 cfm = m <sup>3</sup> /min x 35.3



# Part 3

# Printed Circuit Board

# Connector Wiring Diagram

1. Indoor Unit.....	50
1.1 Wall Mounted Type .....	50
1.2 Floor Standing Type .....	59
1.3 Floor / Ceiling Suspended Dual Type.....	61
1.4 Duct Connected Type.....	63
1.5 Ceiling Mounted Cassette Type .....	65
1.6 Ceiling Mounted Built-in Type .....	69
1.7 Ceiling Suspended Type .....	74
2. Remote Controller .....	76
2.1 Wired Remote Controller.....	76
2.2 Wireless Remote Controller .....	78
3. Outdoor Unit.....	80

# 1. Indoor Unit

## 1.1 Wall Mounted Type

### 1.1.1 FTXG25/35JV1BW(S), CTXG50JV1BW(S)

#### Connectors and Other Parts

#### [A1P]: Control PCB

- |                      |  |
|----------------------|--|
| 1) S21               | Connector for centralized control (HA)                                 |
| 2) S25               | Connector for INTELLIGENT EYE sensor PCB                               |
| 3) S32               | Indoor heat exchanger thermistor                                       |
| 4) S41               | Connector for swing motors   |
| 5) S42               | Connector for reduction motor (front panel mechanism) and limit switch |
| 6) S46               | Connector for signal receiver / display PCB                            |
| 7) S200              | Connector for fan motor  |
| 8) H1, H2, H3,<br>FG | Connector for terminal board   |
| 9) JB                | Fan speed setting when compressor stops for thermostat OFF             |
| JC                   | Power failure recovery function (auto-restart)                         |
|                      | * Refer to page 450 for detail.  |
| 10) LED A            | LED for service monitor (green)  |
| 11) F1U              | Fuse (3.15 A, 250 V)   |
| 12) V1               | Varistor   |

#### [A2P]: Signal Receiver / Display PCB


- |        |   |
|--------|---|
| 1) S51 | Connector for control PCB                 |
| 2) S52 | Connector for room temperature thermistor |
| 3) S1W | Forced operation ON/OFF button            |
| 4) H1P | LED for operation (multi-color)           |
| 5) H2P | LED for INTELLIGENT EYE (green)           |
| 6) JA  | Address setting jumper                    |
|        | * Refer to page 447 for detail.           |

#### [A3P]: INTELLIGENT EYE Sensor PCB

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|


PCB Detail

[A1P]: Control PCB

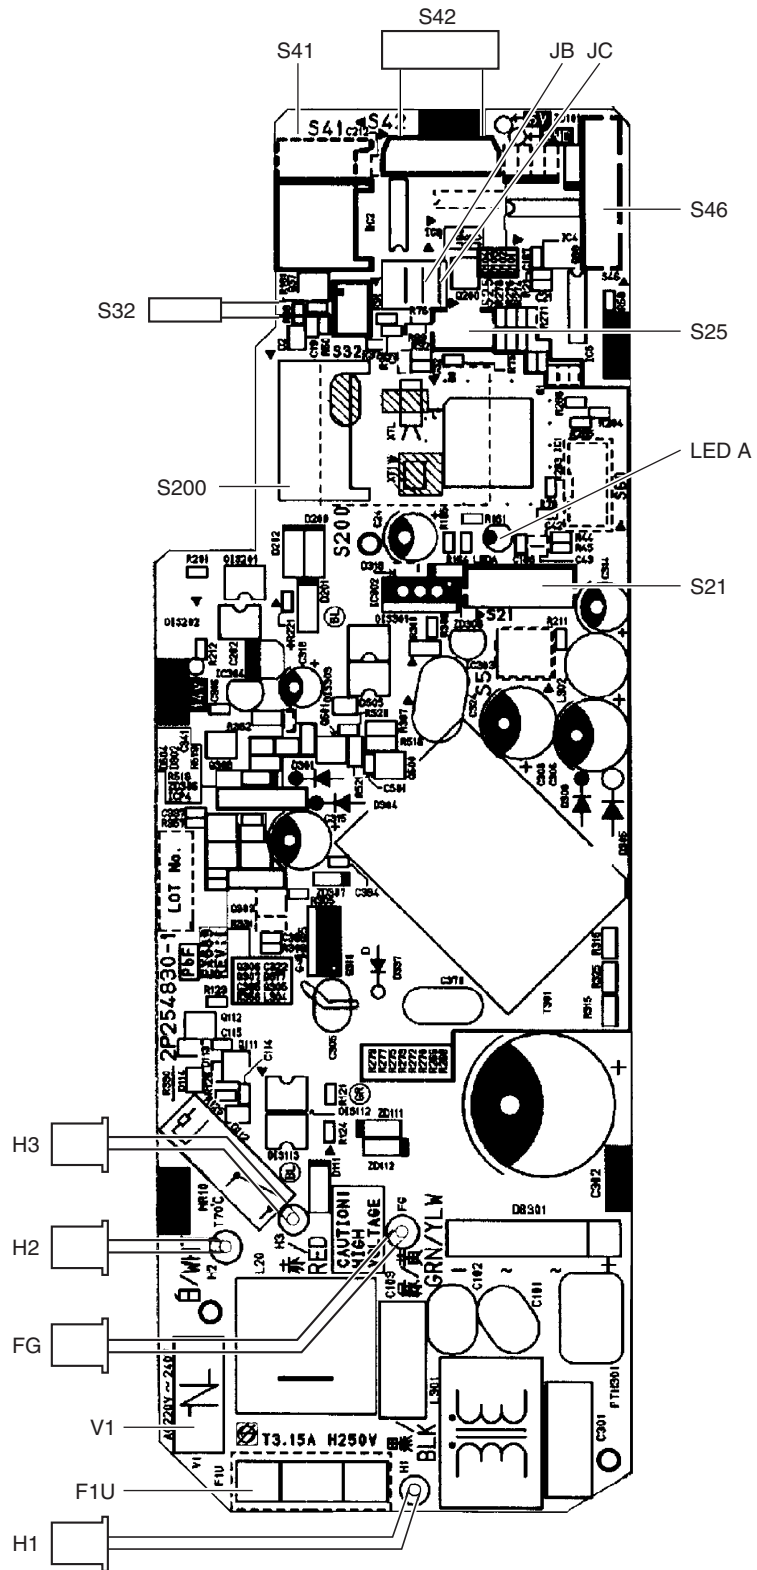


2P254830-1

[A2P]: Signal Receiver / Display PCB

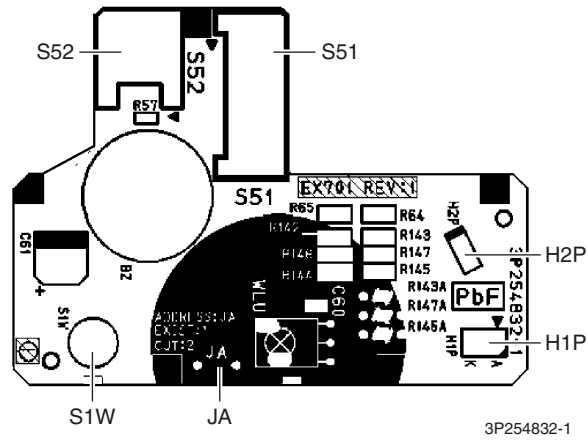

[A3P]: INTELLIGENT EYE Sensor PCB

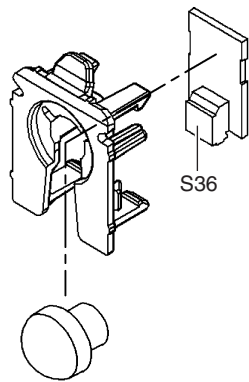

3P255914-1

## 1.1.2 FTXS20/25/35/42/50G2V1B, FTXS20/25/35/42/50J2V1B, ATXS20/25/35/42/50G2V1B

### Connectors and Other Parts

#### PCB (1): Control PCB

- |                      |   |
|----------------------|---|
| 1) S1                | Connector for DC fan motor  |
| 2) S21               | Connector for centralized control (HA)  |
| 3) S25               | Connector for INTELLIGENT EYE sensor PCB  |
| 4) S32               | Indoor heat exchanger thermistor  |
| 5) S41               | Connector for swing motors  |
| 6) S46               | Connector for display PCB   |
| 7) S47               | Connector for signal receiver PCB   |
| 8) H1, H2, H3,<br>FG | Connector for terminal board  |
| 9) JA                | Address setting jumper<br>* Refer to page 447 for detail.                         |
| JB                   | Fan speed setting when compressor stops for thermostat OFF                        |
| JC                   | Power failure recovery function (auto-restart)<br>* Refer to page 450 for detail. |
| 10) LED A            | LED for service monitor (green)   |
| 11) FU1 (F1U)        | Fuse (3.15 A, 250 V)  |
| 12) V1               | Varistor  |

#### PCB (2): Signal Receiver PCB

- |        |                           |
|--------|---------------------------|
| 1) S48 | Connector for control PCB |
|--------|---------------------------|

#### PCB (3): Display PCB


- |               |                                 |
|---------------|---------------------------------|
| 1) S49        | Connector for control PCB       |
| 2) SW1        | Forced operation ON/OFF button  |
| 3) LED1 (H1P) | LED for operation (green)       |
| 4) LED2 (H2P) | LED for timer (yellow)          |
| 5) LED3 (H3P) | LED for INTELLIGENT EYE (green) |
| 6) RTH1 (R1T) | Room temperature thermistor     |

#### PCB (4): INTELLIGENT EYE Sensor PCB

- |        |                           |
|--------|---------------------------|
| 1) S26 | Connector for control PCB |
|--------|---------------------------|


PCB Detail

PCB (1): Control PCB

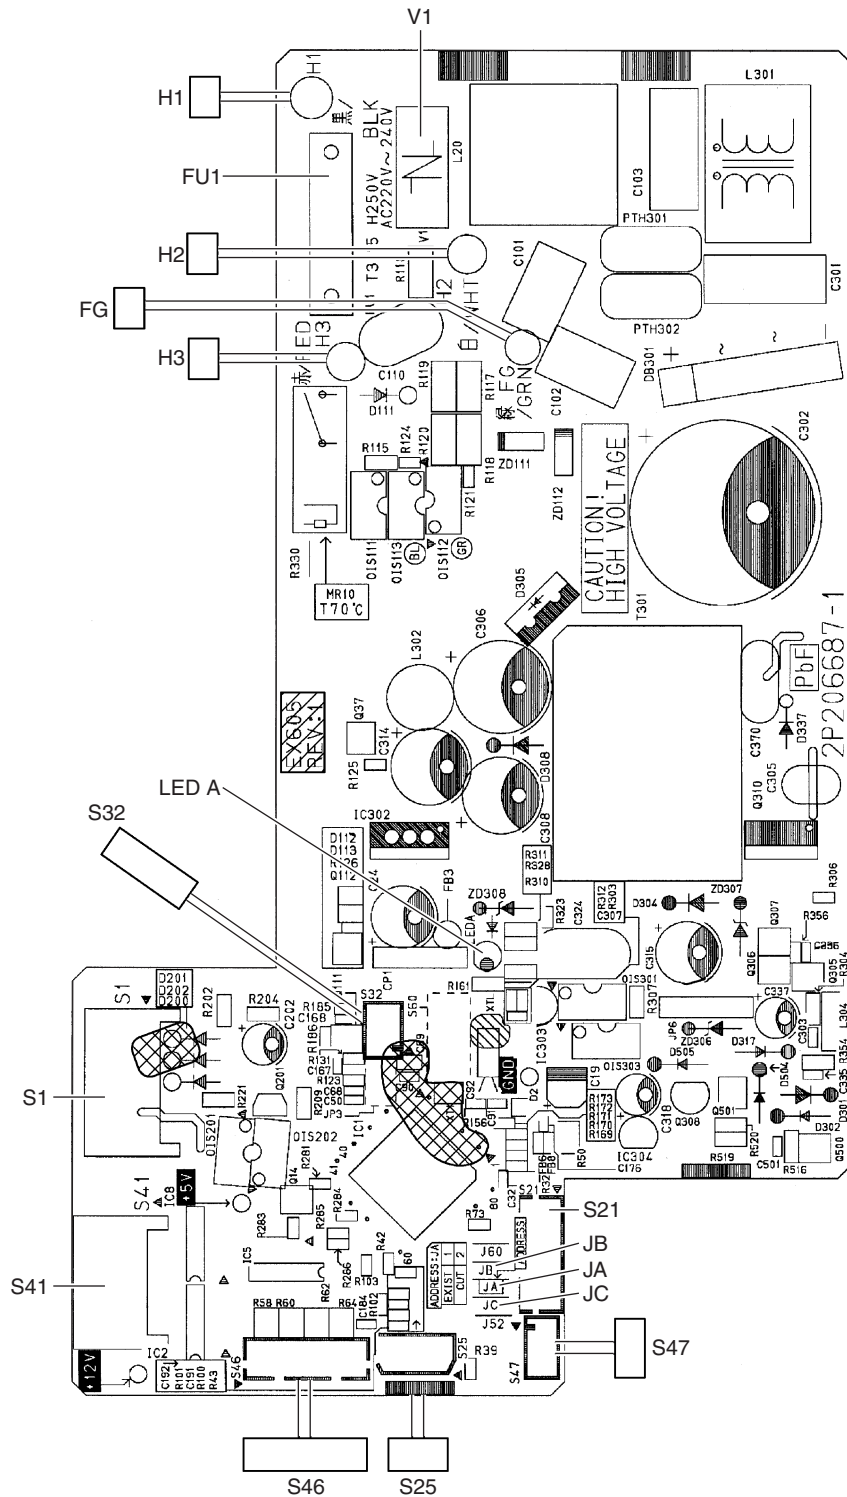


2P206687-1

**PCB (2): Signal Receiver PCB**

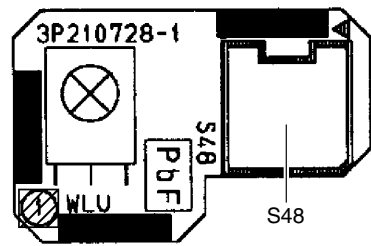


3P210728-1

**PCB (3): Display PCB**

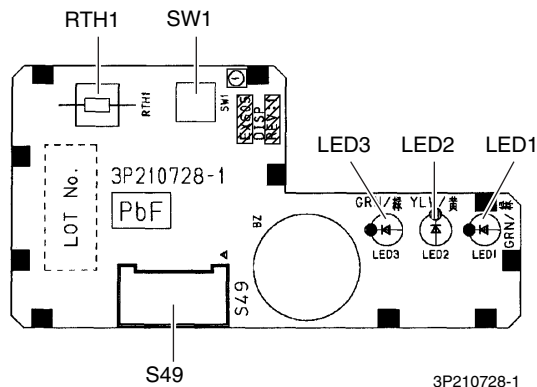

3P210728-1

**PCB (4): INTELLIGENT EYE Sensor PCB**

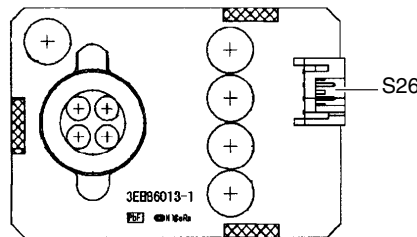

3EB86013-1

### 1.1.3 FTXS60/71GV1B

#### Connectors and Other Parts

#### PCB (1): Control PCB

- |                      |   |
|----------------------|---|
| 1) S1                | Connector for DC fan motor  |
| 2) S21               | Connector for centralized control (HA)  |
| 3) S25               | Connector for INTELLIGENT EYE sensor PCB  |
| 4) S32               | Connector for indoor heat exchanger thermistor                                    |
| 5) S41               | Connector for swing motors  |
| 6) S46               | Connector for display PCB   |
| 7) S47               | Connector for signal receiver PCB   |
| 8) H1, H2, H3,<br>FG | Connector for terminal board  |
| 9) V1                | Varistor  |
| 10) JA               | Address setting jumper<br>* Refer to page 447 for detail.                         |
| JB                   | Fan speed setting when compressor stops for thermostat OFF                        |
| JC                   | Power failure recovery function (auto-restart)<br>* Refer to page 450 for detail. |
| 11) LED A            | LED for service monitor (green)   |
| 12) FU1 (F1U)        | Fuse (3.15 A, 250 V)  |

#### PCB (2): Signal Receiver PCB

- |        |                           |
|--------|---------------------------|
| 1) S48 | Connector for control PCB |
|--------|---------------------------|

#### PCB (3): Display PCB

- |               |                                 |
|---------------|---------------------------------|
| 1) S49        | Connector for control PCB       |
| 2) SW1        | Forced operation ON/OFF button  |
| 3) LED1 (H1P) | LED for operation (green)       |
| 4) LED2 (H2P) | LED for timer (yellow)          |
| 5) LED3 (H3P) | LED for INTELLIGENT EYE (green) |
| 6) RTH1 (R1T) | Room temperature thermistor     |


#### PCB (4): INTELLIGENT EYE Sensor PCB

- |        |                           |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|




PCB Detail

PCB (1): Control PCB

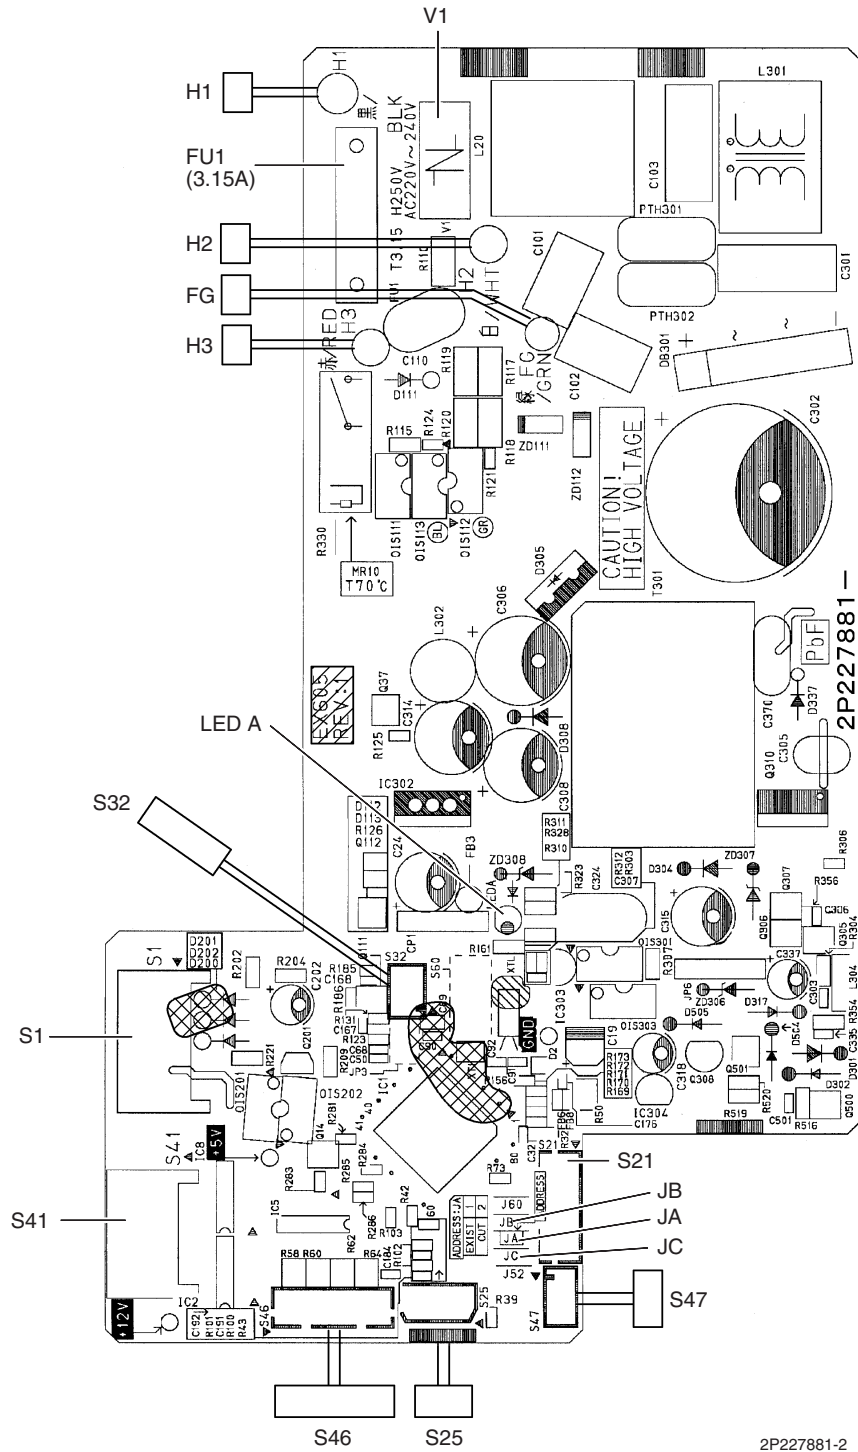


**PCB (2): Signal Receiver PCB**

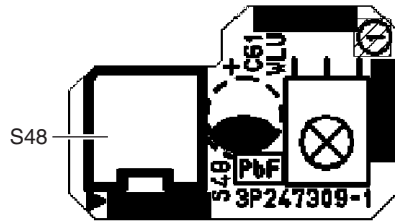

3P247309-1


**PCB (3): Display PCB**

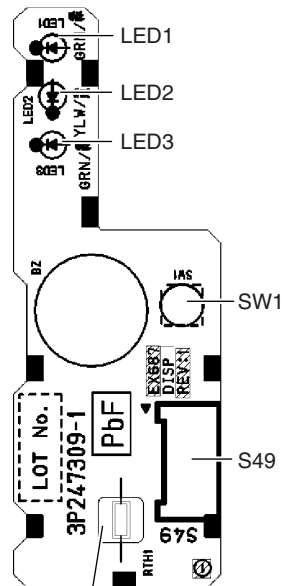

RTH1

3P247309-1

**PCB (4): INTELLIGENT EYE Sensor PCB**

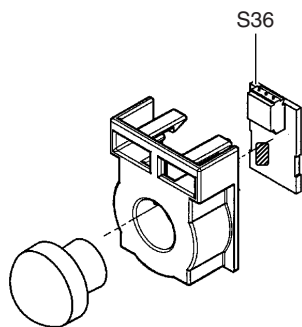

3P227885-1

## 1.2 Floor Standing Type

### 1.2.1 FVXS25/35/50FV1B

#### Connectors and Other Parts

#### PCB (1): Sensor PCB

- |               |                             |
|---------------|-----------------------------|
| 1) S49        | Connector for control PCB   |
| 2) RTH2 (R1T) | Room temperature thermistor |

#### PCB (2): Control PCB

- |               |  |
|---------------|--|
| 1) S1         | Connector for fan motor                                    |
| 2) S21        | Connector for centralized control (HA)                     |
| 3) S26        | Connector for service PCB                                  |
| 4) S32        | Indoor heat exchanger thermistor                           |
| 5) S41        | Connector for lower air outlet motor                       |
| 6) S42        | Connector for swing motor                                  |
| 7) S46        | Connector for display PCB                                  |
| 8) S48        | Connector for sensor PCB                                   |
| 9) H1, H2, H3 | Connector for terminal board                               |
| 10) E1        | Terminal for earth   |
| 11) V1, V2    | Varistor   |
| 12) JA        | Address setting jumper                                     |
|               | * Refer to page 447 for detail.                            |
| JB            | Fan speed setting when compressor stops for thermostat OFF |
| JC            | Power failure recovery function                            |
|               | * Refer to page 450 for detail.                            |
| 13) FU1 (F1U) | Fuse (3.15A, 250V)   |
| 14) LED A     | LED for service monitor (green)                            |

#### PCB (3): Service PCB


- |                      |   |
|----------------------|---|
| 1) S27               | Connector for control PCB               |
| 2) SW2-4<br>(S2W(4)) | Switch for upward airflow limit setting |
|                      | * Refer to page 450 for detail.         |
| 3) SW4 (S4W)         | Switch for air outlet selection         |
|                      | * Refer to page 161, 171 for detail.    |

#### PCB (4): Display PCB

- |               |                                |
|---------------|--------------------------------|
| 1) S47        | Connector for control PCB      |
| 2) SW1 (S1W)  | Forced operation ON/OFF button |
| 3) LED1 (H1P) | LED for operation (green)      |
| 4) LED2 (H2P) | LED for timer (yellow)         |


PCB Detail

PCB (1): Sensor PCB

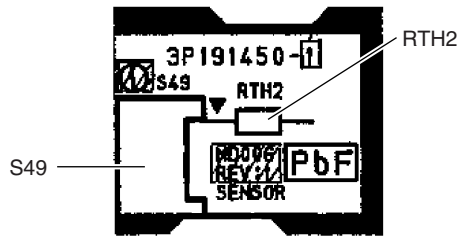


3P191450-1

PCB (2): Control PCB

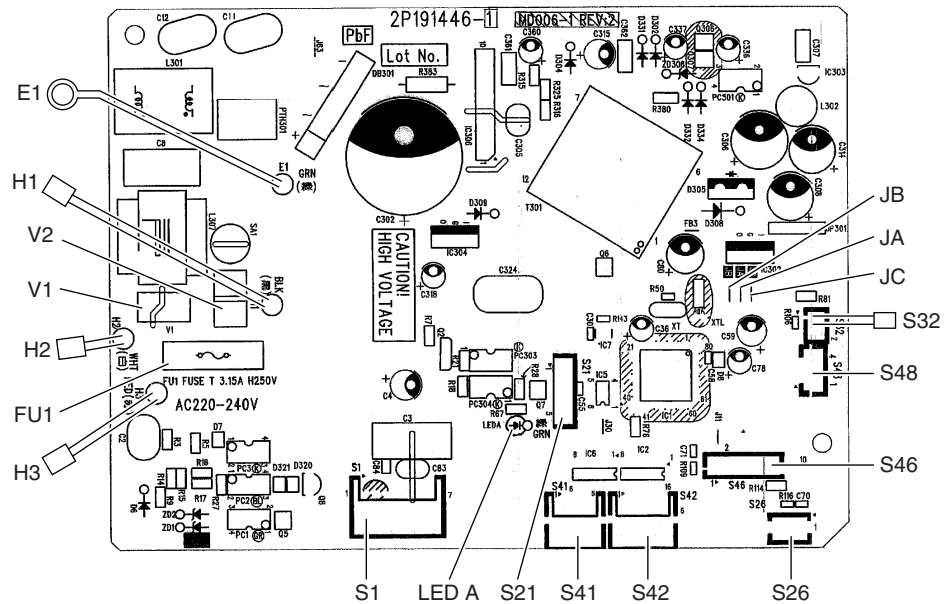


2P191446-1

PCB (3): Service PCB

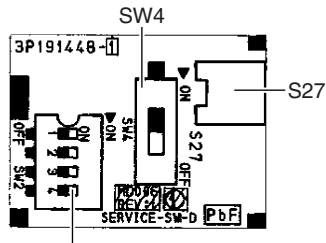

3P191448-1

PCB (4): Display PCB

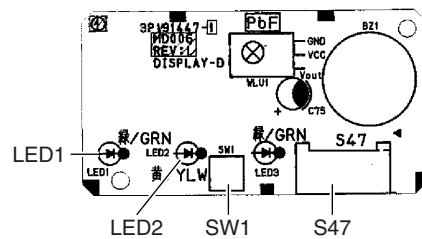

3P191447-1

★ LED3 does not function.

## 1.3 Floor / Ceiling Suspended Dual Type

### 1.3.1 FLK(X)S25/35/50/60BAVMB

#### Connectors and Other Parts

#### PCB (1): Control PCB

- |           |  |
|-----------|--|
| 1) S6     | Connector for swing motor (horizontal swing)   |
| 2) S7     | Connector for AC fan motor   |
| 3) S21    | Connector for centralized control (HA)   |
| 4) S24    | Connector for display PCB  |
| 5) S26    | Connector for signal receiver PCB  |
| 6) S32    | Connector for indoor heat exchanger thermistor                                       |
| 7) S37    | Connector for power supply PCB   |
| 8) JA     | Address setting jumper<br>* Refer to page 447 for detail.                            |
| JB        | Fan speed setting when compressor stops for thermostat OFF                           |
| JC        | Power failure recovery function<br>* Refer to page 450 for detail.                   |
| 9) SW2    | Select switch for installation (ceiling or floor)<br>* Refer to page 450 for detail. |
| 10) LED A | LED for service monitor (green)  |

#### PCB (2): Power Supply PCB

- |               |                              |
|---------------|------------------------------|
| 1) S36        | Connector for control PCB    |
| 2) H1, H2, H3 | Connector for terminal board |
| 3) H4, H5, H6 | Connector for AC fan motor   |
| 4) V1         | Varistor                     |
| 5) FU1        | Fuse (3.15A, 250V)           |

#### PCB (3): Display PCB


- |               |                                    |
|---------------|------------------------------------|
| 1) S25        | Connector for control PCB          |
| 2) LED1 (H1P) | LED for operation (green)          |
| 3) LED2 (H2P) | LED for timer (yellow)             |
| 4) LED3 (H3P) | LED for HOME LEAVE operation (red) |

#### PCB (4): Signal Receiver PCB

- |              |                                |
|--------------|--------------------------------|
| 1) S27       | Connector for control PCB      |
| 2) S31 (RTH) | Room temperature thermistor    |
| 3) SW1 (S1W) | Forced operation ON/OFF button |


PCB Detail

PCB (1): Control PCB

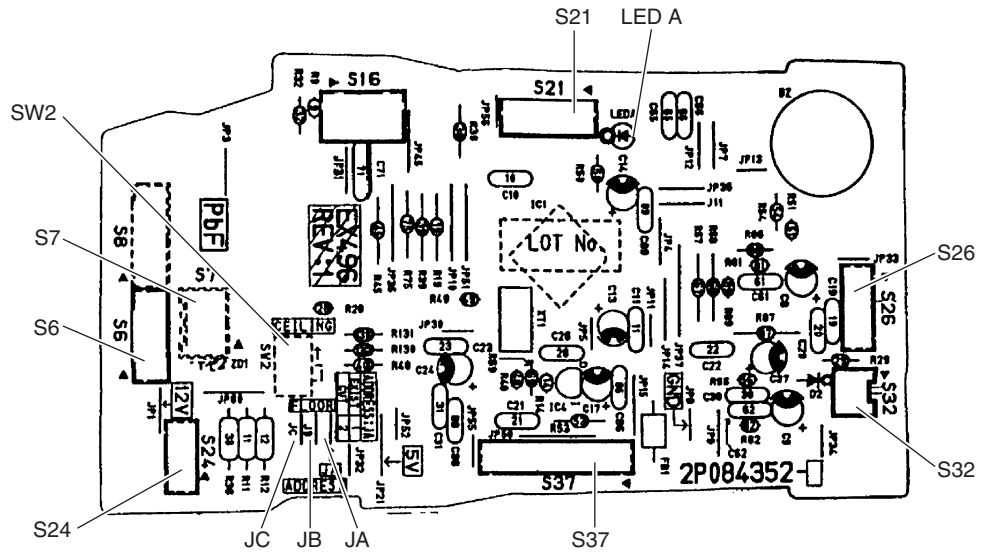


2P084352-3

PCB (2): Power Supply PCB

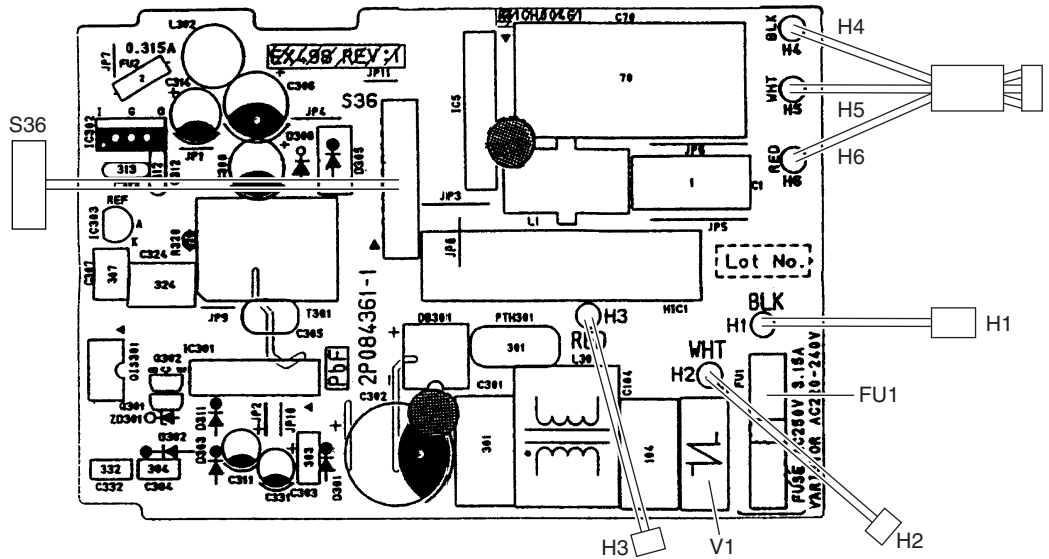


2P084361-1

PCB (3): Display PCB

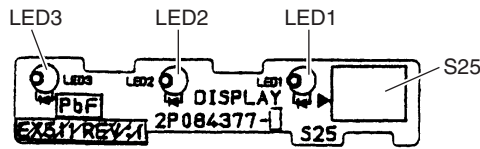

2P084377-5

PCB (4): Signal Receiver PCB

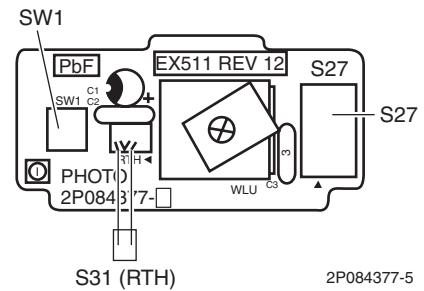

2P084377-5

## 1.4 Duct Connected Type

### 1.4.1 FDK(X)S25/35EAVMB, FDK(X)S50/60CVMB

#### Connectors and Other Parts

#### PCB (1): Control PCB


- |                       |   |
|-----------------------|---|
| 1) S1                 | Connector for AC fan motor  |
| 2) S7                 | Connector for AC fan motor (Hall IC)  |
| 3) S21                | Connector for centralized control (HA)  |
| 4) S26                | Connector for display PCB   |
| 5) S32                | Connector for indoor heat exchanger thermistor                                  |
| 6) H1, H2, H3,<br>GND | Connector for terminal board  |
| 7) JA                 | Address setting jumper<br>* Refer to page 447 for detail.                       |
| JB                    | Fan speed setting when compressor stops for thermostat OFF                      |
| JC                    | Power failure recovery function (auto-restart)<br>Refer to page 450 for detail. |
| 8) LED A              | LED for service monitor (green)   |
| 9) FU1 (F1U)          | Fuse (3.15A, 250V)  |
| 10) V1 (V1TR)         | Varistor  |

#### PCB (2): Display PCB


- |               |                                    |
|---------------|------------------------------------|
| 1) S1         | Connector for control PCB          |
| 2) SW1 (S1W)  | Forced operation ON/OFF button     |
| 3) LED1 (H1P) | LED for HOME LEAVE operation (red) |
| 4) LED2 (H2P) | LED for timer (yellow)             |
| 5) LED3 (H3P) | LED for operation (green)          |
| 6) RTH1 (R1T) | Room temperature thermistor        |

PCB Detail

PCB (1): Control PCB

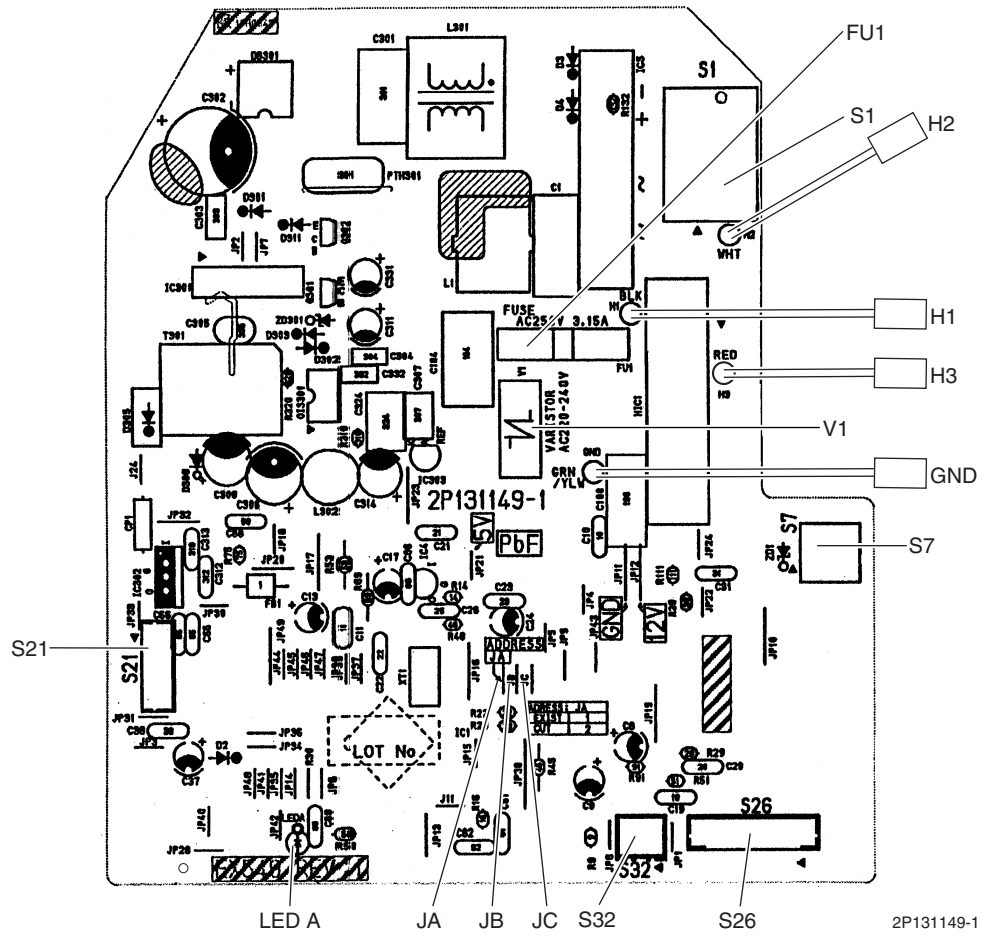

PCB (2): Display PCB

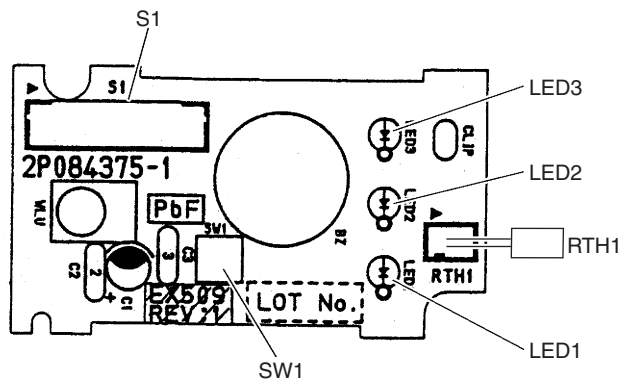



## 1.5 Ceiling Mounted Cassette Type

### 1.5.1 FFQ25/35/50/60B8V1B


#### Connectors and Other Parts

#### [A1P]: Control PCB

- |                |  |
|----------------|--|
| 1) X5A         | Connector for terminal board (for wired remote controller)                         |
| 2) X10A, X11A  | Connector for transformer  |
| 3) X15A        | Connector for float switch   |
| 4) X17A, X18A  | Connector for indoor heat exchanger thermistor                                     |
| 5) X19A        | Connector for room temperature thermistor  |
| 6) X20A        | Connector for fan motor  |
| 7) X24A        | Connector for signal receiver PCB<br>(when the wireless remote controller is used) |
| 8) X25A        | Connector for drain pump motor   |
| 9) X27A        | Connector for terminal board (for inter-unit wiring)                               |
| 10) X33A       | Connector for wiring adaptor PCB (option)  |
| 11) X35A       | Connector for group control adaptor (option)                                       |
| 12) X36A       | Connector for swing motor  |
| 13) X40A       | Connector for ON/OFF input from outside (option)                                   |
| 14) X60A, X61A | Connector for interface adaptor (option)   |
| 15) HAP        | LED for service monitor (green)  |

PCB Detail

[A1P]: Control PCB

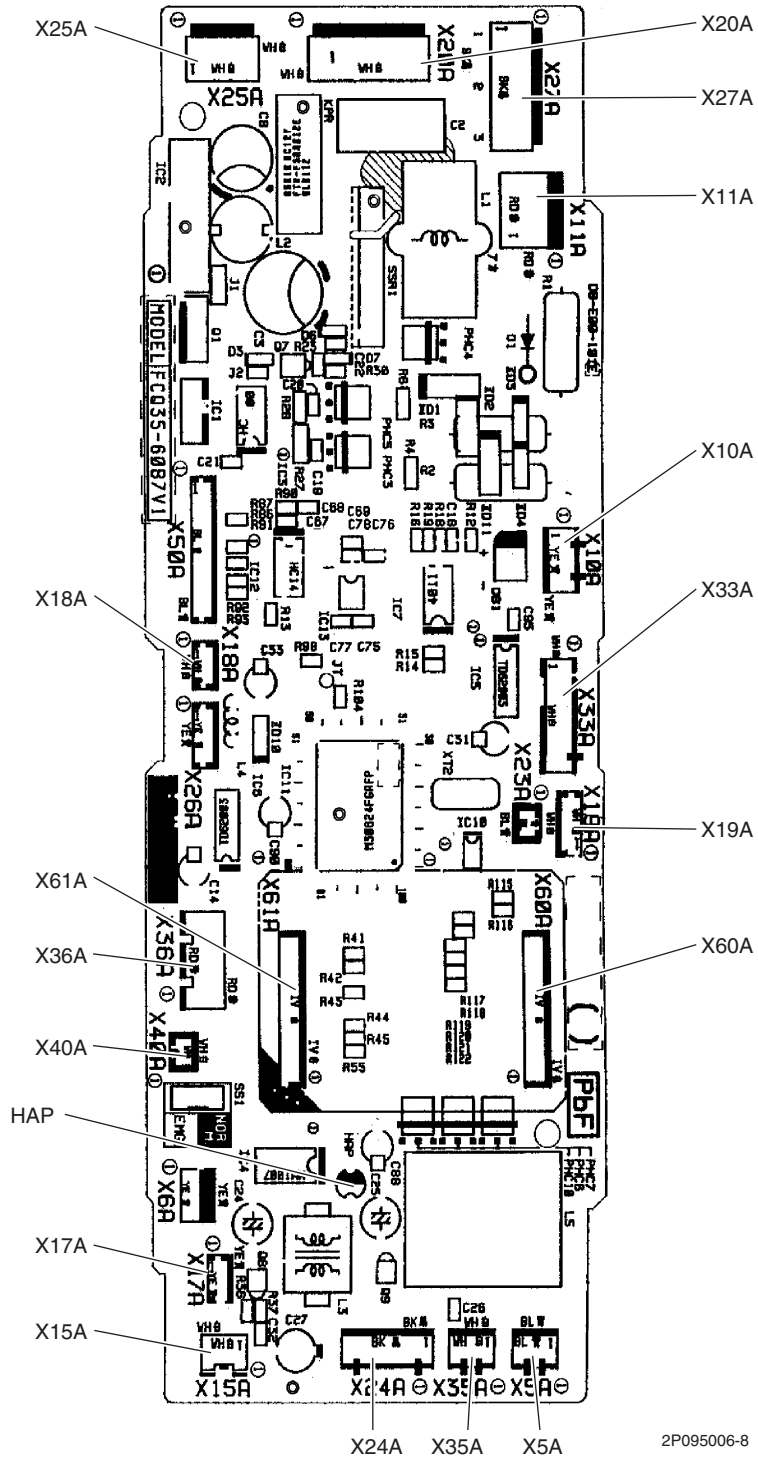

2P095006-8

## 1.5.2 FCQ35/50/60C7VEB, FCQ35/50/60C8VEB

---

### Connectors and Other Parts

#### [A1P]: Control PCB


- |               |  |
|---------------|--|
| 1) X15A       | Connector for float switch   |
| 2) X16A       | Connector for sensor PCB   |
| 3) X17A, X18A | Connector for indoor heat exchanger thermistor                                     |
| 4) X20A       | Connector for fan motor  |
| 5) X24A       | Connector for signal receiver PCB<br>(when the wireless remote controller is used) |
| 6) X25A       | Connector for drain pump motor   |
| 7) X27A       | Connector for terminal board (for inter-unit wiring)                               |
| 8) X30A       | Connector for terminal board (for wired remote controller)                         |
| 9) X33A       | Connector for wiring adaptor PCB (option)  |
| 10) X35A      | Connector for group control adaptor (option)                                       |
| 11) X36A      | Connector for swing motor  |
| 12) X70A      | Connector for auto-cleaning panel (FCQ35/50/60C8VEB models only)                   |
| 13) HAP       | LED for service monitor (green)  |
| 14) SS1       | Selector switch for emergency  |

#### [A2P]: Sensor PCB


- |        |                             |
|--------|-----------------------------|
| 1) CN1 | Connector for control PCB   |
| 2) R1T | Room temperature thermistor |

PCB Detail

[A1P]: Control PCB

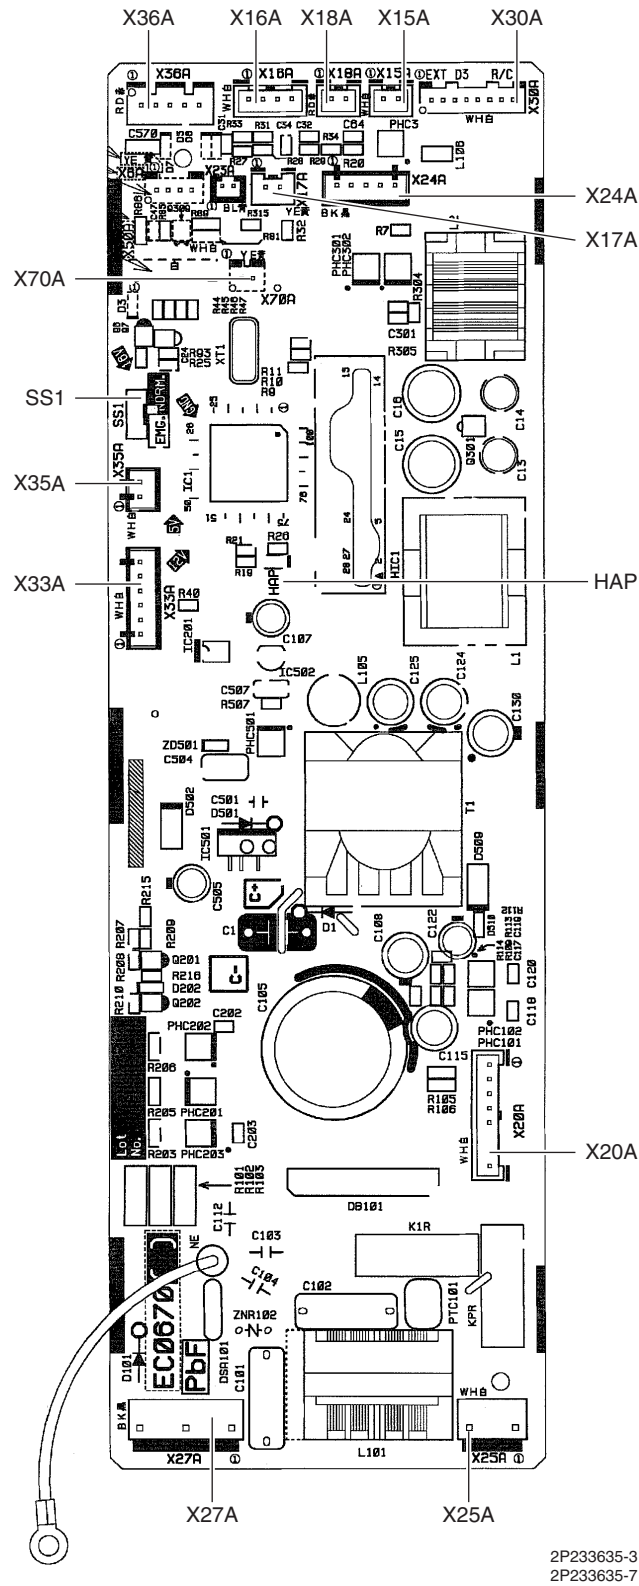

[A2P]: Sensor PCB

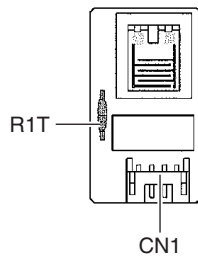

## 1.6 Ceiling Mounted Built-in Type

### 1.6.1 FDBQ25B8V1

---


#### Connectors and Other Parts

#### [A1P]: Control PCB

- |                |  |
|----------------|--|
| 1) X5A         | Connector for terminal board (for wired remote controller) |
| 2) X10A, X11A  | Connector for transformer                                  |
| 3) X15A        | Connector for float switch                                 |
| 4) X17A        | Connector for indoor heat exchanger thermistor             |
| 5) X18A        | Connector for liquid pipe thermistor                       |
| 6) X19A        | Connector for room temperature thermistor                  |
| 7) X21A        | Connector for fan motor                                    |
| 8) X25A        | Connector for drain pump motor                             |
| 9) X27A        | Connector for terminal board (for inter-unit wiring)       |
| 10) X33A       | Connector for wiring adaptor PCB (option)                  |
| 11) X35A       | Connector for group control adaptor (option)               |
| 12) X40A       | Connector for ON/OFF input from outside (option)           |
| 13) X60A, X61A | Connector for interface adaptor (option)                   |
| 14) HAP        | LED for service monitor (green)                            |
| 15) SS1        | Selector switch for emergency                              |

PCB Detail

[A1P]: Control PCB

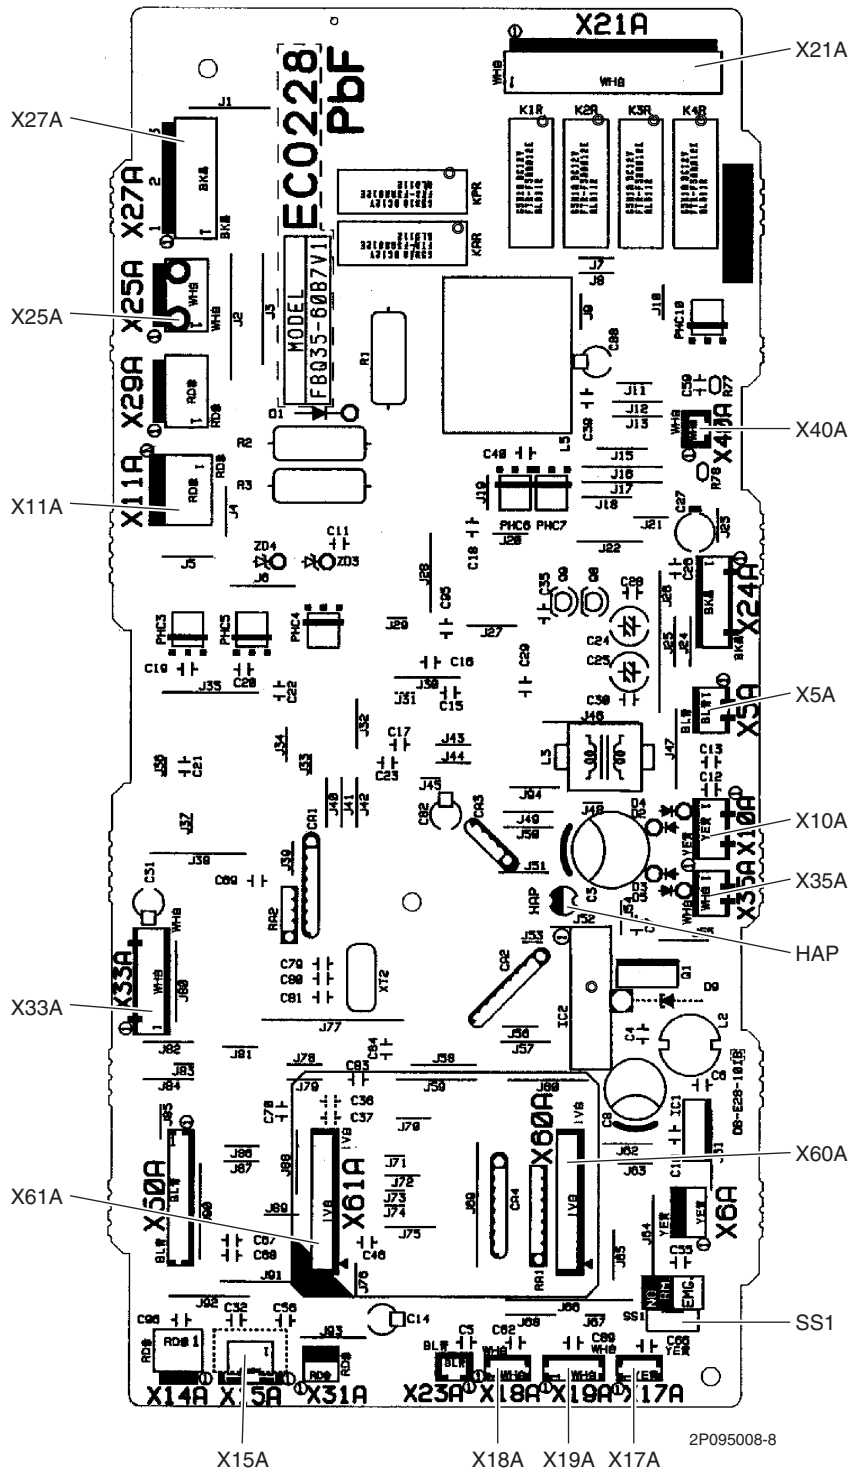

## 1.6.2 FBQ35/50/60C7VEB

### Connectors and Other Parts

#### [A1P]: Control PCB

- |          |  |
|----------|--|
| 1) X15A  | Connector for float switch                                 |
| 2) X16A  | Connector for room temperature thermistor                  |
| 3) X17A  | Connector for gas pipe thermistor                          |
| 4) X18A  | Connector for liquid pipe thermistor                       |
| 5) X25A  | Connector for drain pump motor                             |
| 6) X27A  | Connector for terminal board (for inter-unit wiring)       |
| 7) X28A  | Connector for power supply wiring                          |
| 8) X30A  | Connector for terminal board (for wired remote controller) |
| 9) X33A  | Connector for wiring adaptor PCB (option)                  |
| 10) X35A | Connector for group control adaptor (option)               |
| 11) X70A | Connector for fan PCB                                      |
| 12) X85A | Connector for multi zoning                                 |
| 13) HAP  | LED for service monitor (green)                            |
| 14) SS1  | Selector switch for emergency                              |


#### [A2P]: Fan PCB (for FBQ35/50C7VEB)

- |         |   |
|---------|---|
| 1) X3A  | Connector for control PCB                   |
| 2) X6A  | Connector for reactor                       |
| 3) X8A  | Connector for fan motor                     |
| 4) X10A | Connector for terminal board (power supply) |
| 5) F2U  | Fuse (5 A, 250 V)                           |
| 6) F4U  | Fuse (6.3 A, 250 V)                         |
| 7) HAP  | LED for service monitor (green)             |

#### [A2P]: Fan PCB (for FBQ60C7VEB)

- |             |   |
|-------------|---|
| 1) X1A, X2A | Connector for fan motor                     |
| 2) X3A      | Connector for control PCB                   |
| 3) X6A      | Connector for reactor                       |
| 4) X9A      | Connector for capacitor PCB                 |
| 5) X10A     | Connector for terminal board (power supply) |
| 6) F3U      | Fuse (6.3 A, 250 V)                         |
| 7) HAP      | LED for service monitor (green)             |


#### [A3P]: Capacitor PCB (FBQ60C7VEB only)

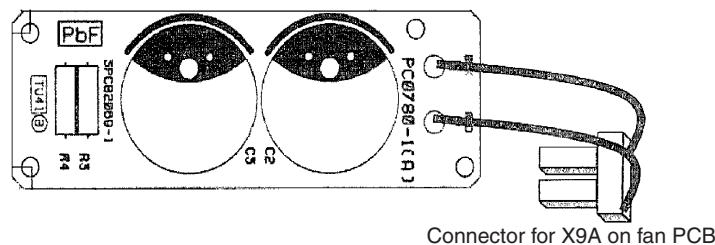

3P217472-1


PCB Detail

[A1P]: Control PCB

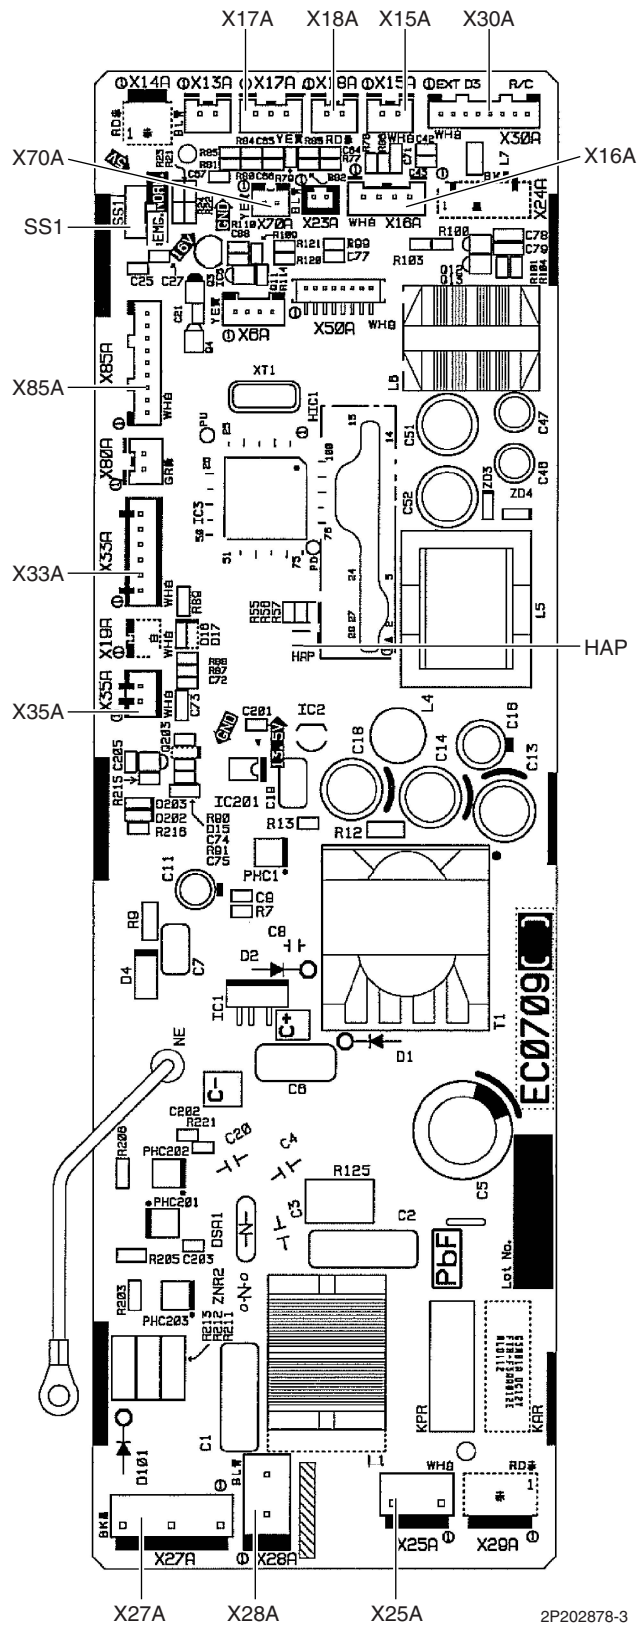




[A2P]: Fan PCB (for FBQ35/50C7VEB)

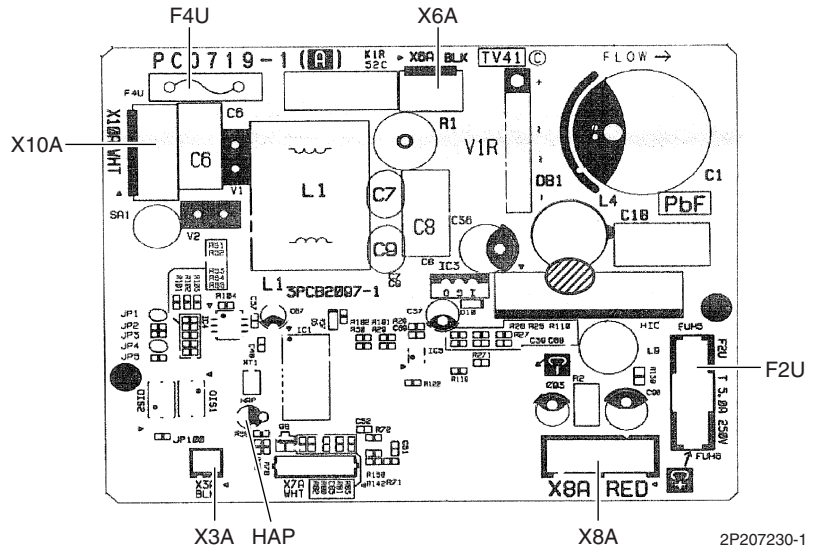

[A2P]: Fan PCB (for FBQ60C7VEB)

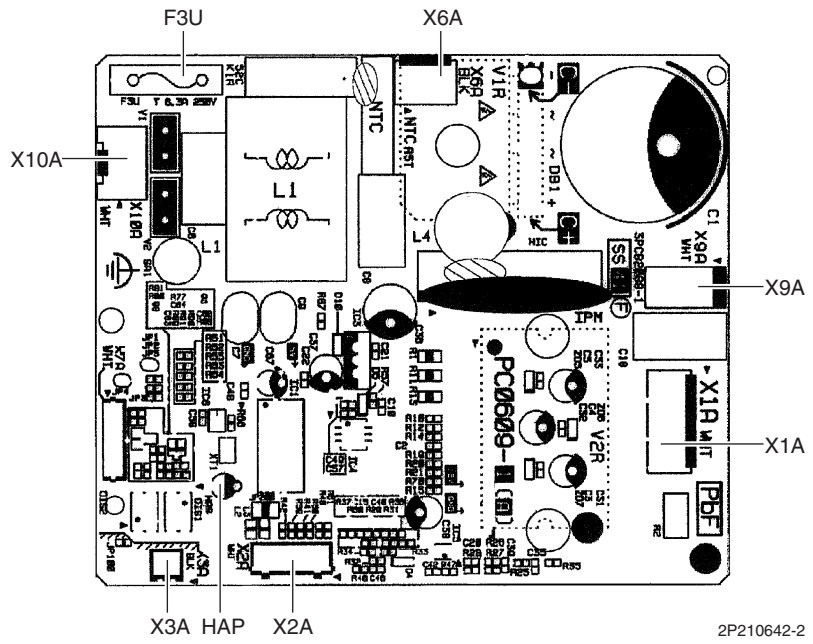

## 1.7 Ceiling Suspended Type

### 1.7.1 FHQ35/50/60BVV1B


#### Connectors and Other Parts

#### [A1P]: Control PCB

- |                |  |
|----------------|--|
| 1) X5A         | Connector for terminal board (for wired remote controller)                         |
| 2) X10A, X11A  | Connector for transformer  |
| 3) X14A        | Connector for limit switch (for swing flap)  |
| 4) X15A        | Connector for float switch (option)  |
| 5) X17A, X18A  | Connector for indoor heat exchanger thermistor                                     |
| 6) X19A        | Connector for room temperature thermistor  |
| 7) X20A, X26A  | Connector for fan motor  |
| 8) X24A        | Connector for signal receiver PCB<br>(when the wireless remote controller is used) |
| 9) X25A        | Connector for drain pump motor (option)  |
| 10) X27A       | Connector for terminal board (for inter-unit wiring)                               |
| 11) X29A       | Connector for swing motor  |
| 12) X33A       | Connector for wiring adaptor PCB (option)  |
| 13) X35A       | Connector for group control adaptor (option)                                       |
| 14) X40A       | Connector for ON/OFF input from outside (option)                                   |
| 15) X60A, X61A | Connector for interface adaptor (option)   |
| 16) HAP        | LED for service monitor (green)  |

PCB Detail

[A1P]: Control PCB

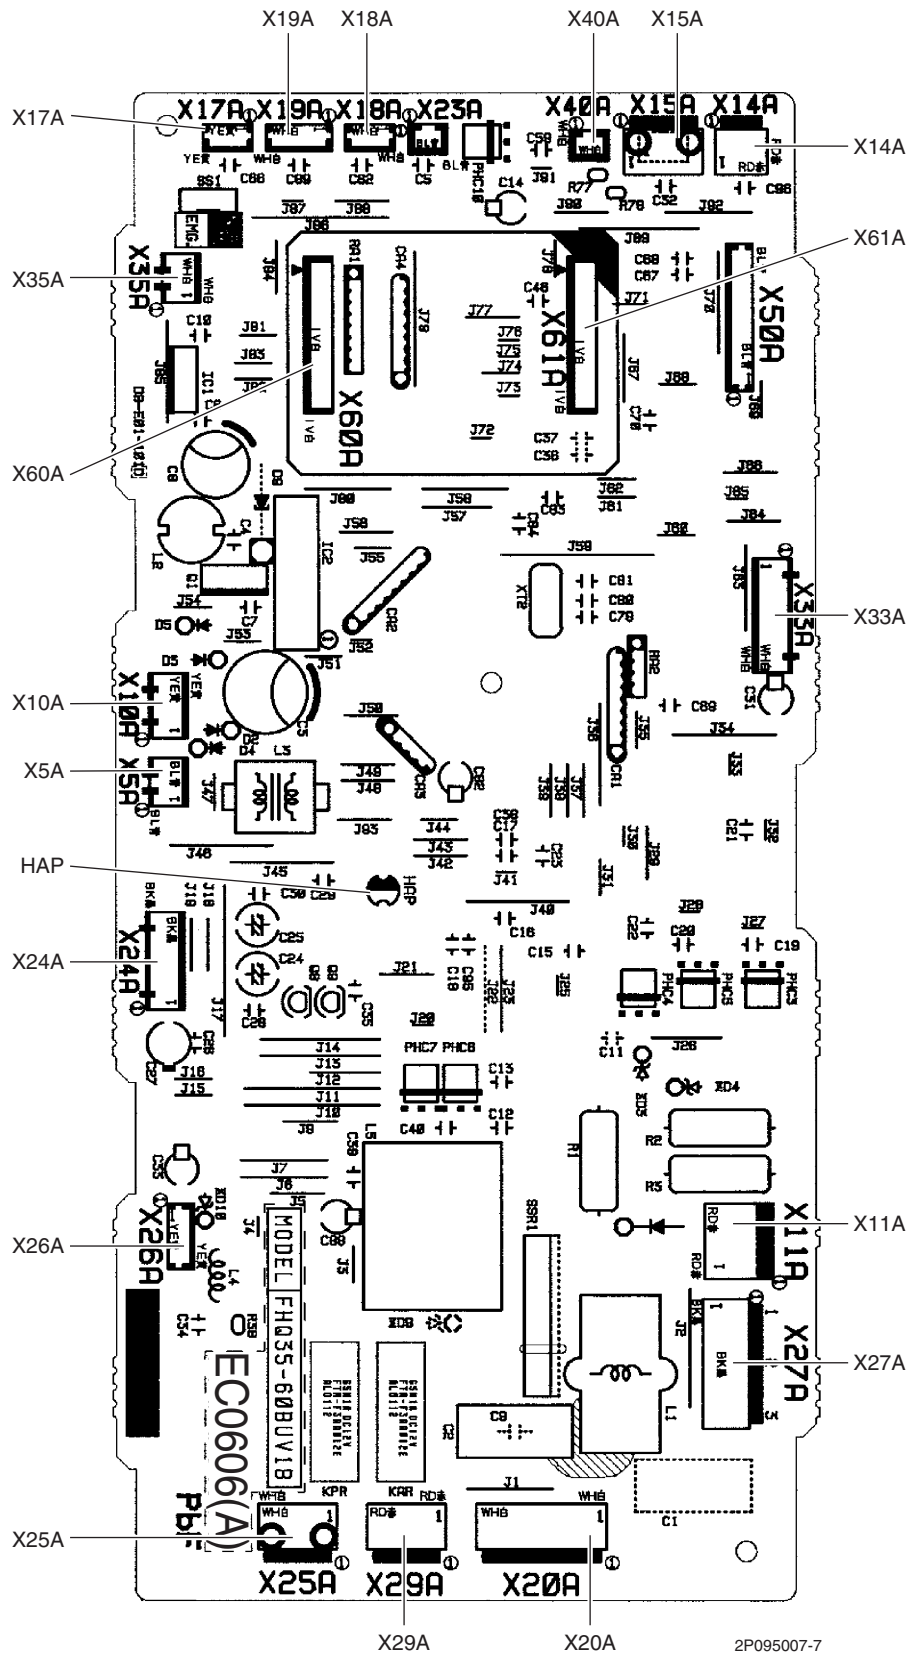

## 2. Remote Controller


### 2.1 Wired Remote Controller

#### 2.1.1 BRC1D528

**Connectors and Other Parts**

- 1) P1, P2 Terminal for indoor unit
  - 2) R1T Room temperature thermistor
  - 3) SS1 MAIN / SUB setting switch
- \* Refer to page 455 for detail.

**PCB Detail**

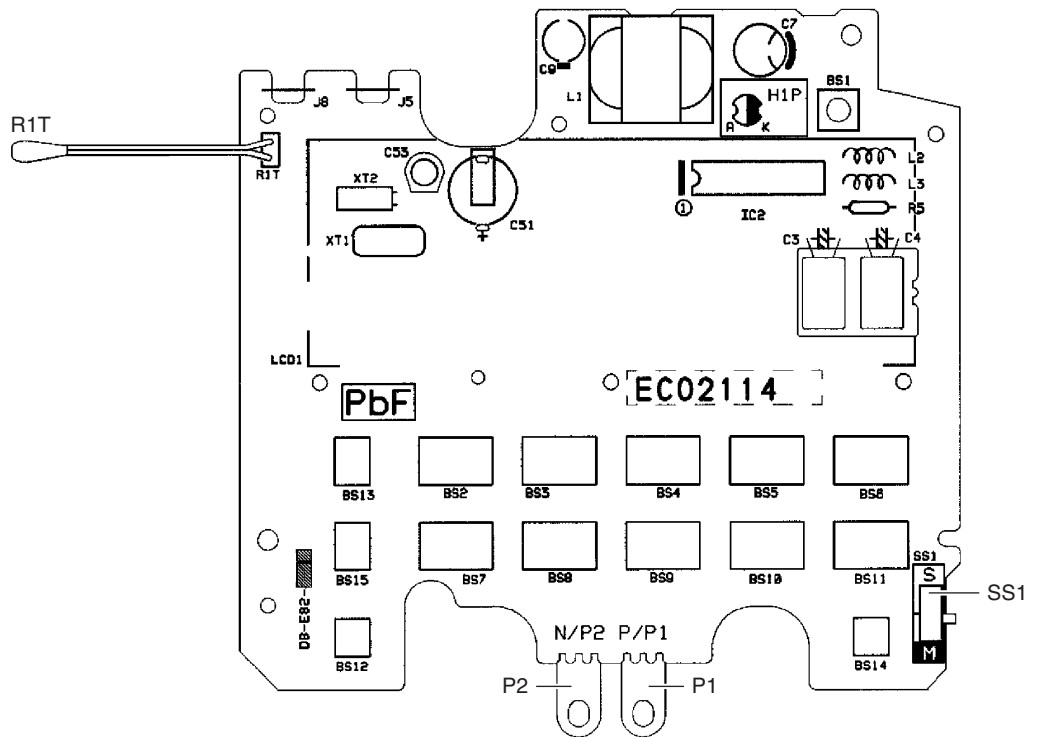


2P113638-2

## 2.1.2 BRC1E51A7

### Connectors and Other Parts

- |           |                             |
|-----------|-----------------------------|
| 1) P1, P2 | Terminal for indoor unit    |
| 2) R1T    | Room temperature thermistor |

### PCB Detail

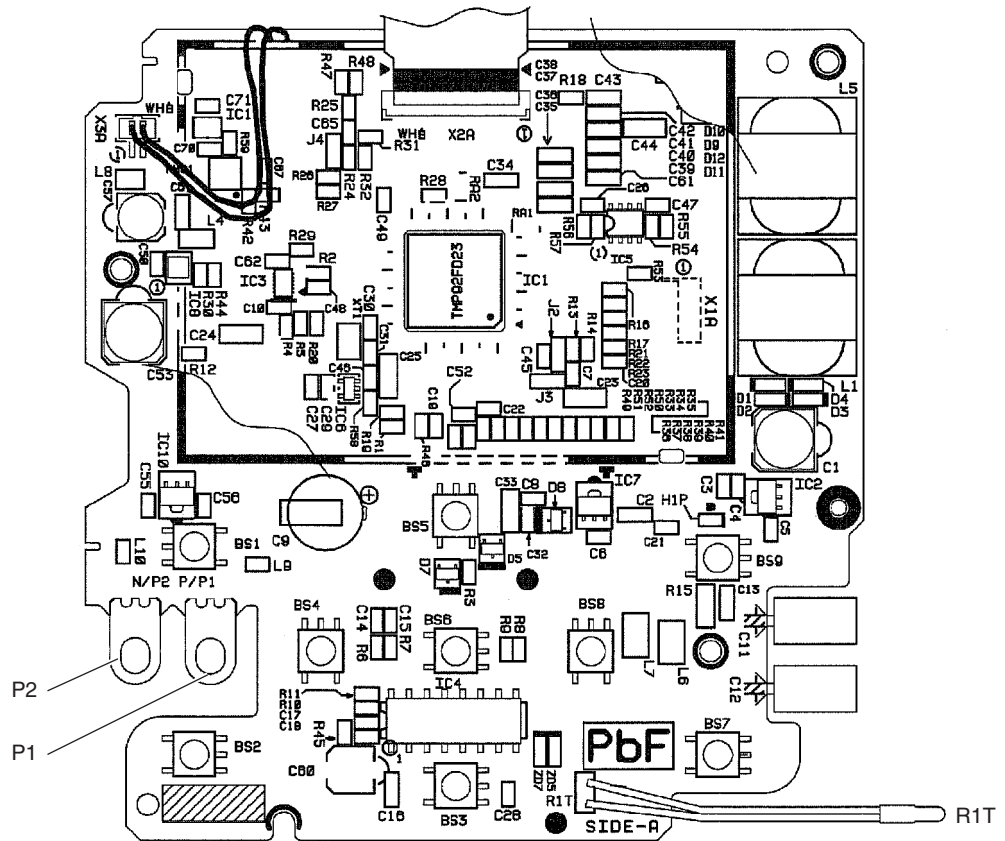

2P243326-1

## 2.2 Wireless Remote Controller

### 2.2.1 BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66

---

**Connectors and  
Other Parts****[A3P]: Signal Receiver PCB**


- |        |                           |
|--------|---------------------------|
| 1) X1A | Connector for display PCB |
| 2) X2A | Connector for control PCB |
| 3) SS1 | MAIN / SUB setting switch |
| SS2    | Address setting switch    |
- \* Refer to page 456 for detail.

**[A4P]: Display PCB**


- |               |                                    |
|---------------|------------------------------------|
| 1) X1A        | Connector for signal receiver PCB  |
| 2) BS1        | Forced operation ON/OFF button     |
| 3) LED1 (H1P) | LED for operation (red)            |
| 4) LED2 (H2P) | LED for timer (green)              |
| 5) LED3 (H3P) | LED for filter cleaning sign (red) |
| 6) LED4 (H4P) | LED for defrost operation (orange) |

PCB Detail

[A3P]: Signal Receiver PCB

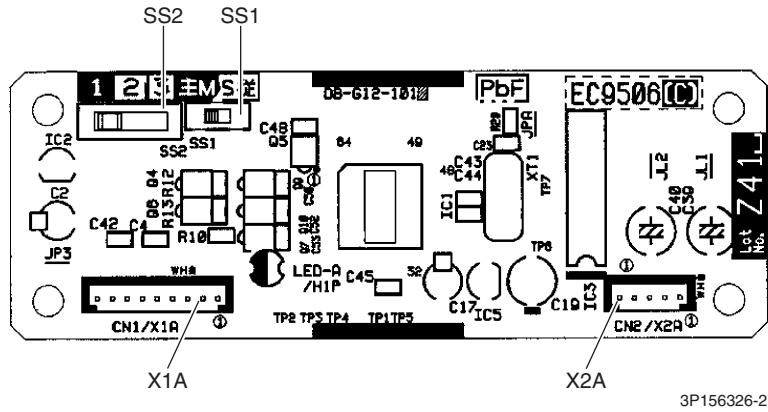


[A4P]: Display PCB (BRC7E530W/531W)

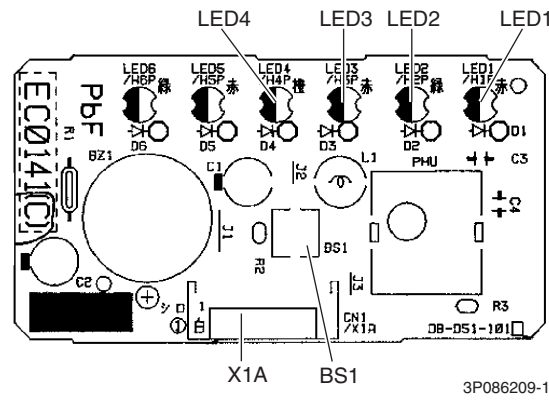


★ LED5 and LED6 do not function.

[A4P]: Display PCB (BRC7F532F/533F)

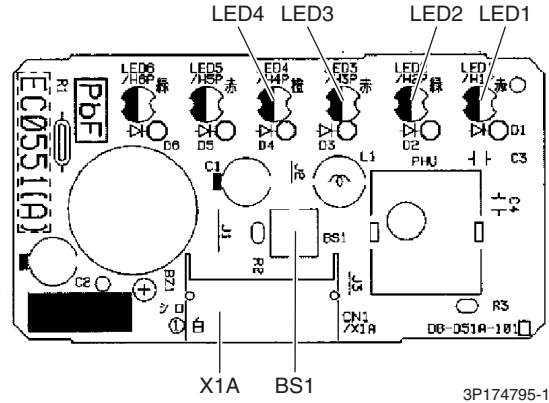

★ LED5 and LED6 do not function.

[A4P]: Display PCB (BRC7EA63W/66)

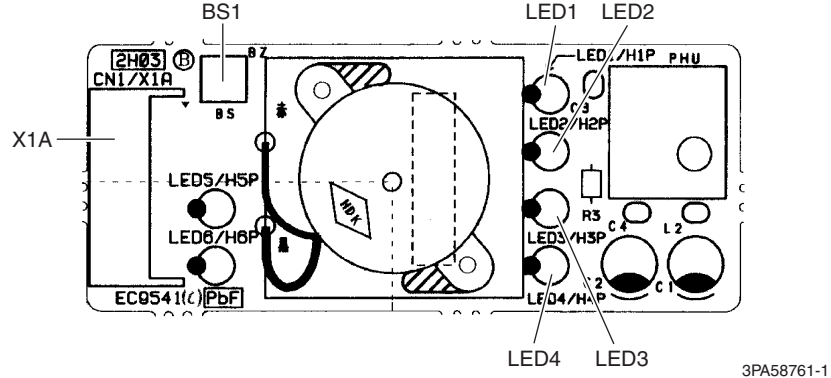

★ LED5 and LED6 do not function.

### 3. Outdoor Unit

#### Connectors and Other Parts

#### PCB (1): Main PCB

1) S10	Connector for terminal board (indoor - outdoor transmission)
2) S15	Connector for COOL / HEAT mode lock * Refer to page 460 for detail.
3) S20 (white)	Connector for electronic expansion valve coil A port
4) S21 (red)	Connector for electronic expansion valve coil B port
5) S22 (blue)	Connector for electronic expansion valve coil C port
6) S23 (yellow)	Connector for electronic expansion valve coil D port (for 4 rooms)
7) S24 (green)	Connector for electronic expansion valve coil E port (for 5 rooms)
8) S40	Connector for overload protector
9) S51, S101	Connector for service monitor PCB
10) S70	Connector for outdoor fan motor
11) S80	Connector for four way valve coil
12) S90	Connector for thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe temperature)
13) S92	Connector for gas pipe thermistor
14) S93	Connector for liquid pipe thermistor
15) AC1, AC2	Connector for terminal board (power supply)
16) HR1, HR2	Connector for reactor
17) E1, E2	Connector for earth
18) U, V, W	Connector for compressor
19) FU1	Fuse (30 A, 250 V)
20) FU2, FU3	Fuse (3.15 A, 250 V)
21) V2, V3, V5	Varistor
V6, V11	(for 50 - 58 class)
V9, V100	(for 68 - 90 class)


#### PCB (2): Service Monitor PCB

1) S52, S102	Connector for main PCB
2) LED A	LED for service monitor (green)
3) LED1 - LED4	LED for service monitor (red)
4) LED 5	LED for service monitor (red) (for 5 rooms)
5) SW1	Forced operation ON/OFF switch * Refer to page 440 for detail.
6) SW2	Operation mode switch * Refer to page 440 for detail.
7) SW3	Wiring error check switch * Refer to page 441 for detail.
8) SW4	Priority room setting switch * Refer to page 459 for detail.
9) SW5	NIGHT QUIET mode setting switch * Refer to page 461 for detail.




PCB Detail

PCB (1): Main PCB (50/52/58 class)

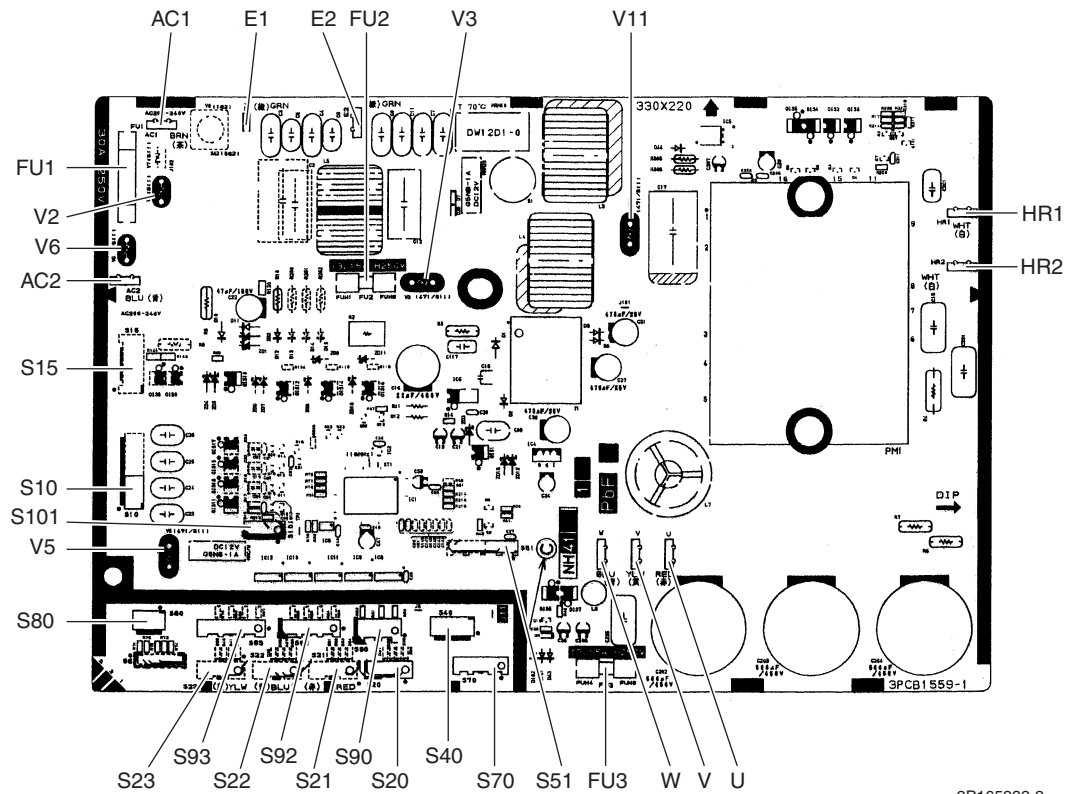


2P165232-2  
2P165232-4

PCB (1): Main PCB (68/75 class)

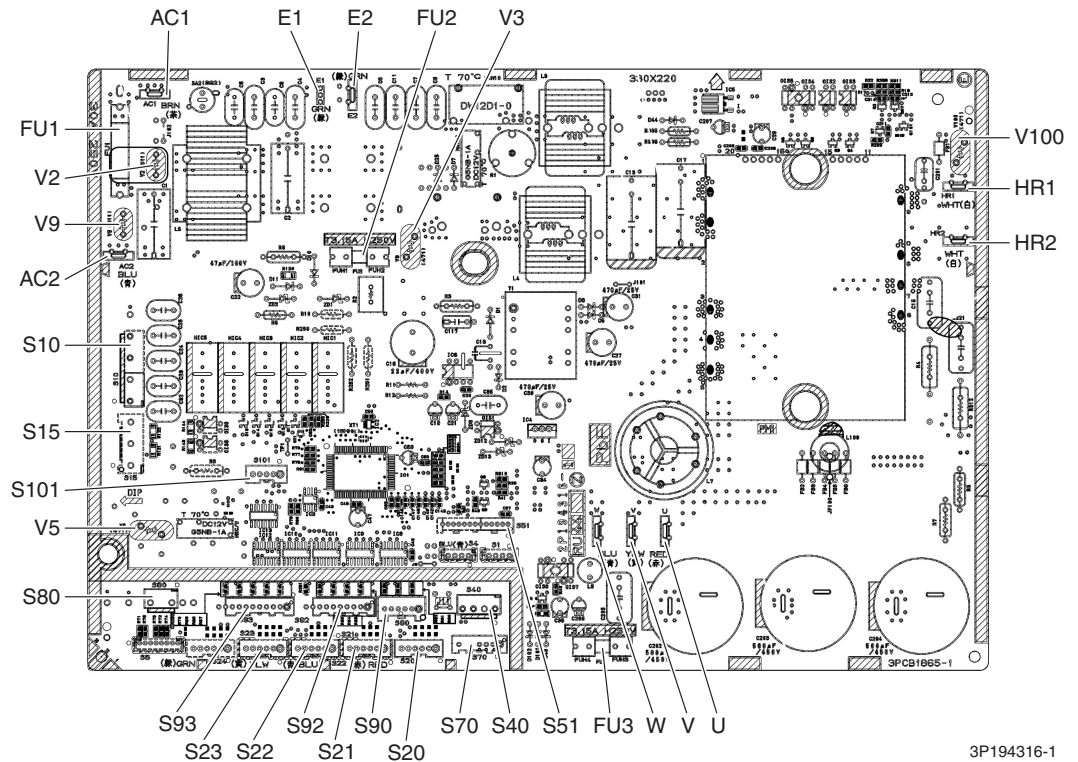


3P194316-1  
3P194316-2

**PCB (1): Main PCB (80/90 class)**

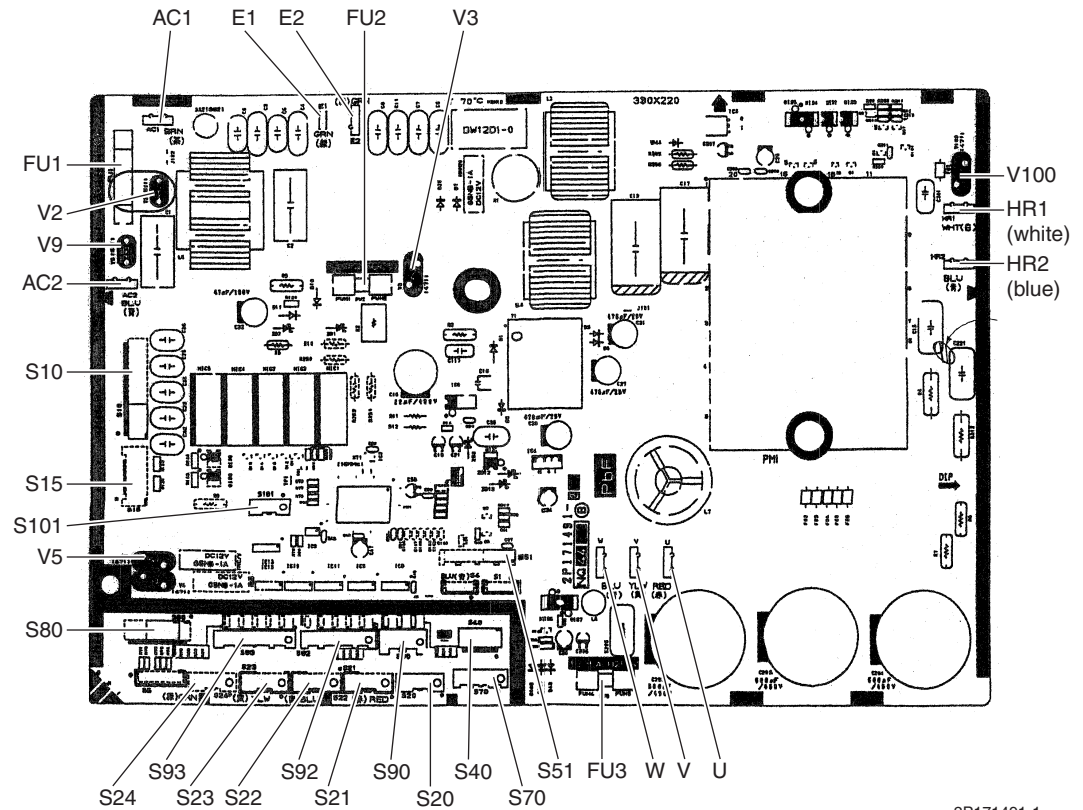


2P171491-1  
2P171491-2

**PCB (2): Service Monitor PCB (for 3 or 4 rooms)**

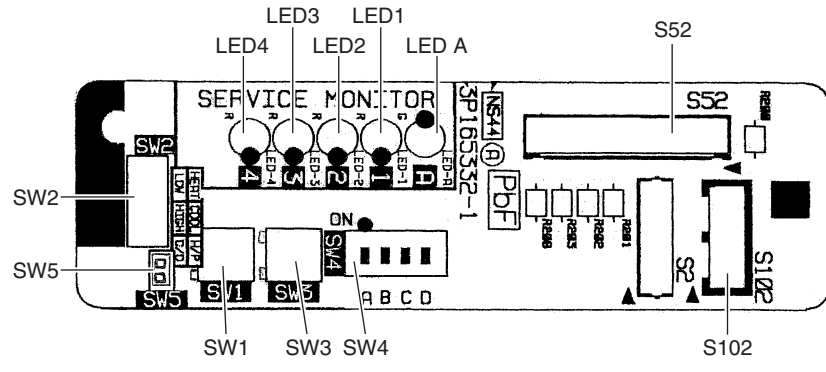

3P165332-1

**PCB (2): Service Monitor PCB (for 5 rooms)**

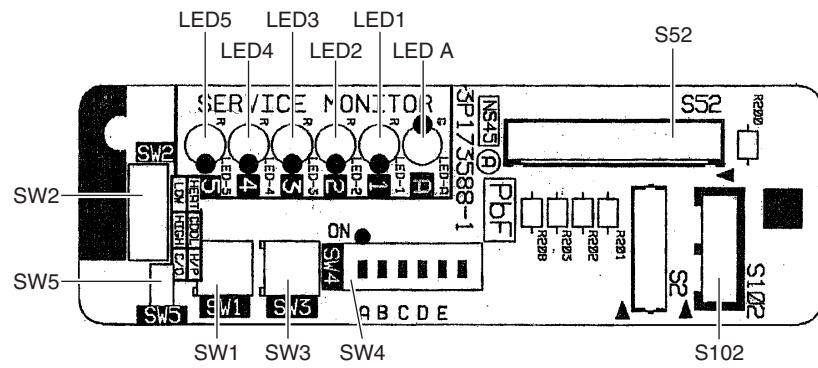

3P173588-1

# Part 4

## Function and Control

1. Function of Indoor Unit (RA Models).....	84
1.1 Temperature Control .....	84
1.2 Frequency Principle.....	84
1.3 Operation Starting Control.....	86
1.4 Airflow Direction Control.....	87
1.5 Fan Speed Control for Indoor Units.....	89
1.6 Program Dry Operation .....	90
1.7 Automatic Operation.....	91
1.8 Thermostat Control.....	92
1.9 NIGHT SET Mode .....	94
1.10 ECONO Operation .....	95
1.11 HOME LEAVE Operation .....	96
1.12 2-Area INTELLIGENT EYE Operation .....	97
1.13 INTELLIGENT EYE Operation .....	99
1.14 Inverter POWERFUL Operation .....	100
1.15 Other Functions.....	102
2. Function of Indoor Unit (SA Models) .....	104
2.1 Drain Pump Control.....	104
2.2 Thermostat Sensor in Remote Controller.....	106
2.3 Freeze Prevention Control .....	108
2.4 Hot Start Control (In Heating Operation Only).....	109
3. Function of Thermistor .....	110
4. Control Specification .....	112
4.1 Mode Hierarchy .....	112
4.2 Frequency Control.....	113
4.3 Controls at Mode Changing / Start-up.....	116
4.4 Discharge Pipe Temperature Control.....	117
4.5 Input Current Control.....	118
4.6 Freeze-up Protection Control .....	118
4.7 Heating Peak-cut Control .....	119
4.8 Outdoor Fan Control.....	119
4.9 Liquid Compression Protection Function.....	120
4.10 Defrost Control .....	120
4.11 Low Hz High Pressure Limit .....	121
4.12 Electronic Expansion Valve Control .....	121
4.13 Malfunctions .....	126


# 1. Function of Indoor Unit (RA Models)

## 1.1 Temperature Control

### Definitions of Temperatures

The definitions of temperatures are classified as following.

- ◆ Room temperature: temperature of lower part of the room
- ◆ Set temperature: temperature set by remote controller
- ◆ Room thermistor temperature: temperature detected by room temperature thermistor
- ◆ Target temperature: temperature determined by microcomputer

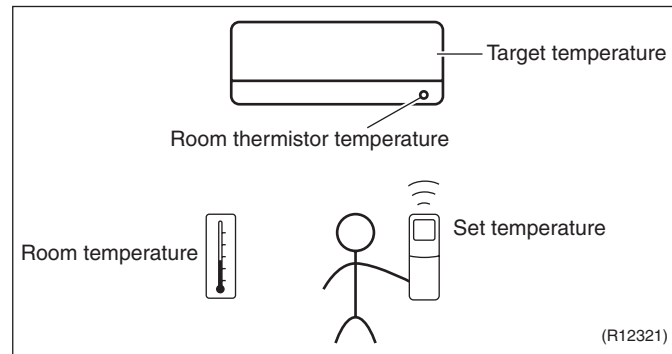

★ The illustration is for wall mounted type as representative.

### Temperature Control

The temperature of the room is detected by the room temperature thermistor. However, there is difference between the “temperature detected by room temperature thermistor” and the “temperature of lower part of the room”, depending on the type of the indoor unit or installation condition. Practically, the temperature control is done by the “target temperature appropriately adjusted for the indoor unit” and the “temperature detected by room temperature thermistor”.

## 1.2 Frequency Principle

### Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room thermistor temperature and the target temperature

### Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling operation


### Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> <li>■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit.</li> <li>■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.</li> </ul>

## Drawing of Inverter

The following drawing shows a schematic view of the inverter principle:

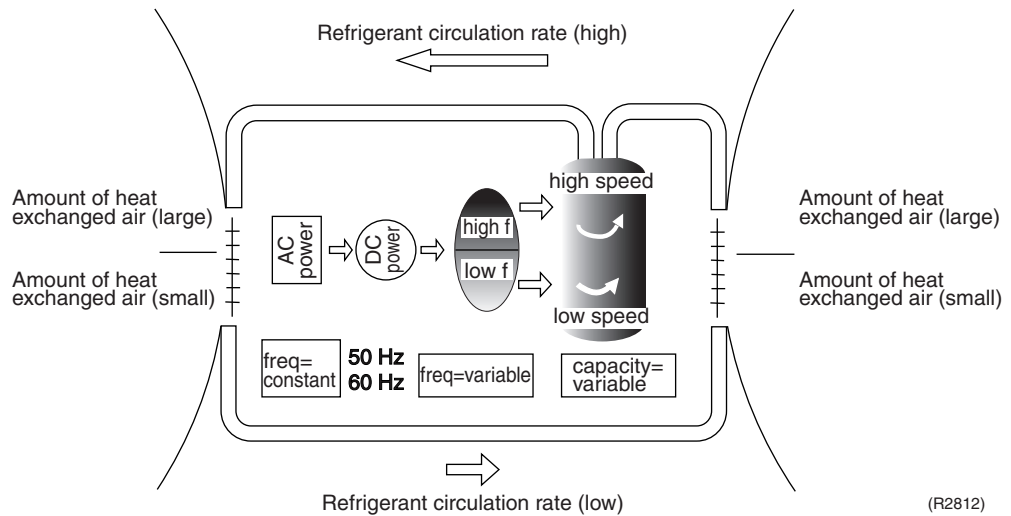

## Inverter Features

The inverter provides the following features:

- The regulating capacity can be changed according to the changes in the outdoor temperature and cooling / heating load.
- Quick heating and quick cooling  
The compressor rotational speed is increased when starting the heating (or cooling). This enables to reach the set temperature quickly.
- Even during extreme cold weather, high capacity is achieved. It is maintained even when the outdoor temperature is 2°C.
- Comfortable air conditioning  
A fine adjustment is integrated to keep the room temperature constant.
- Energy saving heating and cooling  
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

## Frequency Limits

The following functions regulate the minimum and maximum frequency:

Frequency	Functions
Low	<ul style="list-style-type: none"> <li>■ Four way valve operation compensation. Refer to page 116.</li> </ul>
High	<ul style="list-style-type: none"> <li>■ Compressor protection function. Refer to page 117.</li> <li>■ Discharge pipe temperature control. Refer to page 117.</li> <li>■ Input current control. Refer to page 118.</li> <li>■ Freeze-up protection control. Refer to page 118.</li> <li>■ Heating peak-cut control. Refer to page 119.</li> <li>■ Defrost control. Refer to page 120.</li> </ul>

## Forced Operation

Refer to page 440 for detail.


# 1.3 Operation Starting Control

## Wall Mounted Type: FTXG and CTXG Series


The system carries out the following control at the beginning to conduct every functional parts properly.

1. Opening the front panel fully
2. Output of the  $\Delta D$  signal after the front panel starts moving
3. Opening the flap fully after the front panel opens fully
4. Making the fan rotate when the flap passes over the fan-banned area

### Control Flow

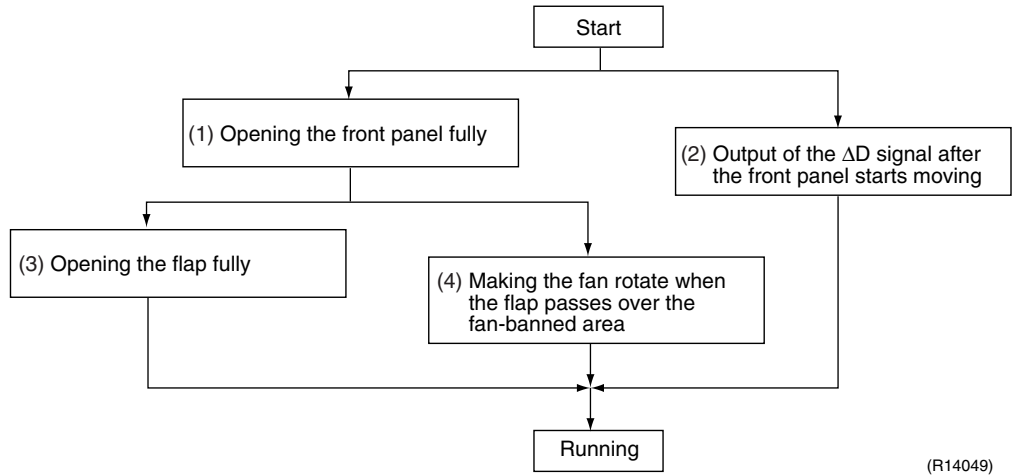

### Timing Chart

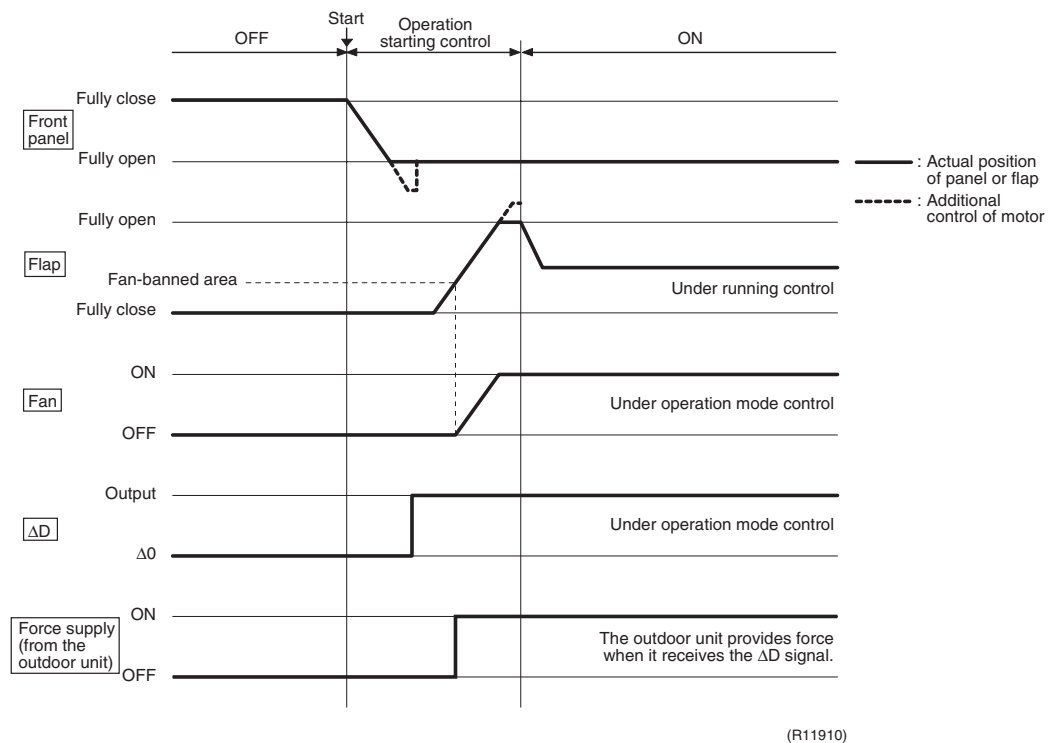

# 1.4 Airflow Direction Control

## Power-Airflow Dual Flaps

The large flaps send a large volume of air downward to the floor. The flap provides an optimum control in cooling, dry, and heating mode.

### Cooling / Dry Mode

During cooling or dry mode, the flaps retract into the indoor unit. Then, cool air can be blown far and pervaded all over the room.

### Heating Mode

During heating mode, the large flaps direct airflow downward to spread the warm air to the entire room.













## Wide-Angle Louvers

The louvers, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.





## Auto-Swing

The following table explains the auto-swing process for cooling, dry, heating, and fan:





### Wall Mounted Type

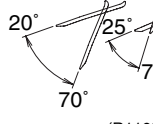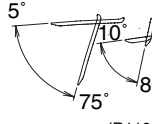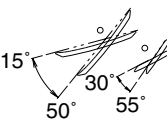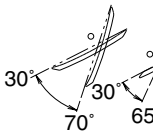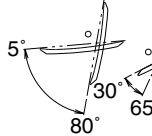Series	Vertical Swing (up and down)			Horizontal Swing (right and left)	
	Cooling / Dry	Heating	Fan		
FTXG CTXG	 (R11662)	 (R11664)	 (R11663)	—	
FTXS ATXS 20-50 Class	 (R12182)	 (R11402)	 (R11403)	 (R11404)	
FTXS 60/71 Class	 (R2814)	 (R2815)	 (R2813)	 (R2816)	 (R2817)

### Floor Standing Type

	Vertical Swing (up and down)	
	Cooling / Dry	Heating
Upward airflow limit OFF	 (R6831)	 (R6829)
Upward airflow limit ON	 (R6832)	 (R6830)

**Floor / Ceiling Suspended Dual Type**

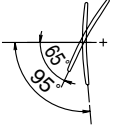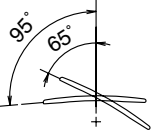	Vertical Swing (up and down)	
	Cooling / Dry / Fan	Heating
Ceiling	 (R2964)	 (R2963)
Floor	 (R2967)	 (R2966)


**3-D Airflow**

**Wall Mounted Type: FTXS and ATXS Series**

Alternative repetition of vertical and horizontal swing motions enables uniform air-conditioning of the entire room. This function is effective for starting the air conditioner.

When the horizontal swing and vertical swing are both set to auto mode, the airflow becomes 3-D airflow. The horizontal and vertical swing motions are alternated and the airflow direction changes in the order shown in the following diagram.



- (1): The vertical blades (louvers) move from the right to the left.
- (2): The horizontal blades (flaps) move downward.
- (3): The vertical blades (louvers) move from the left to the right.
- (4): The horizontal blades (flaps) move upward.

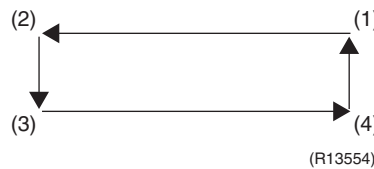

**COMFORT AIRFLOW Operation**

**Wall Mounted Type**

The vertical swing flap is controlled not to blow the air directly on the person in the room.

Cooling / Dry	Heating
 (R11665)	 (R12181)

	A	B
FTXG, CTXG	5°	75°
FTXS, ATXS 20-50 class	5°	80°
FTXS 60/71 class	5°	55°



# 1.5 Fan Speed Control for Indoor Units

## Outline

Phase control and fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H, and HH. The airflow rate can be automatically controlled depending on the difference between the room thermistor temperature and the target temperature. This is done through phase control and Hall IC control.



For more information about Hall IC, refer to the troubleshooting for fan motor on page 311, 313.

## Automatic Fan Speed Control

In automatic fan speed operation, the step "SL" is not available.


Step	Wall Mounted Type Floor Standing Type		Floor / Ceiling Suspended Dual Type Duct Connected Type	
	Cooling	Heating	Cooling	Heating
LLL	↕  (R11681)	↕  (R6834)	↕  (R6833)	↕  (R6834)
LL				
L				
ML				
M				
MH				
H				
HH (POWERFUL)				

↕ = The airflow rate is automatically controlled within this range when the FAN setting button is set to automatic.

### <Cooling>

The following drawing explains the principle of fan speed control for cooling.


#### Wall Mounted Type, Floor Standing Type

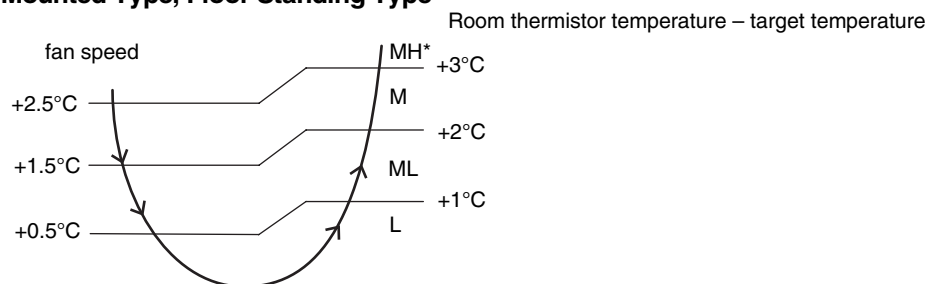

(R12317)

\*In automatic fan speed operation, upper limit is at M tap in 30 minutes from the operation start.

#### Floor / Ceiling Suspended Dual Type, Duct Connected Type

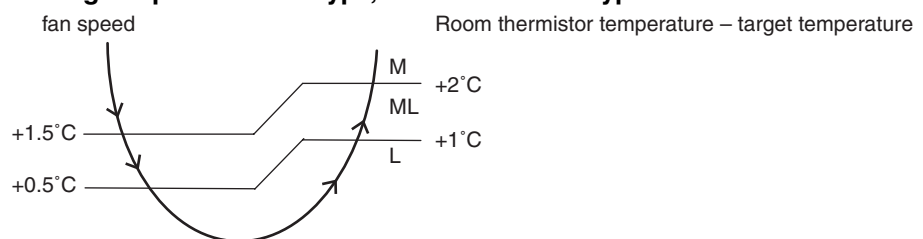

(R12390)

### <Heating>

On heating mode, the fan speed is regulated according to the indoor heat exchanger temperature and the difference between the room thermistor temperature and the target temperature.



**Note:**

1. During POWERFUL operation, fan rotates at H tap + 40 ~ 90 rpm.
2. Fan stops during defrost operation.

**COMFORT  
AIRFLOW  
Operation**

**Wall Mounted Type**

- The fan speed is controlled automatically within the following steps.  
Cooling: L tap – MH tap (same as AUTOMATIC)  
Heating: ML tap – M tap ~ MH tap (depending on the model)
- The latest command has the priority between POWERFUL and COMFORT AIRFLOW.

## 1.6 Program Dry Operation


**Outline**

Program dry operation removes humidity while preventing the room temperature from lowering. Since the microcomputer controls both the temperature and airflow rate, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

**Detail**

The microcomputer automatically sets the temperature and airflow rate. The difference between the room thermistor temperature at start-up and the target temperature is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room thermistor temperature at start-up	Target temperature X	Thermostat OFF point Y	Thermostat ON point Z
24°C or more	Room thermistor temperature at start-up	X – 2.5°C	X – 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
23.5°C ∴ 18°C		X – 2.0°C	X – 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
17.5°C ∴		18°C	X – 2.0°C

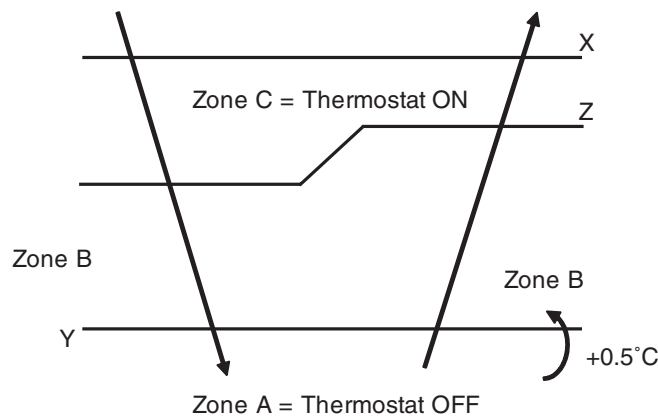

(R11581)

## 1.7 Automatic Operation

### Outline

#### Automatic Cooling / Heating Function

When the AUTO mode is selected with the remote controller, the microcomputer automatically determines the operation mode as cooling or heating according to the room temperature and the set temperature at start-up, and automatically operates in that mode.

The unit automatically switches the operation mode to maintain the room temperature at the set temperature.

### Detail

Ts: set temperature (set by remote controller)

Tt: target temperature (determined by microcomputer)

Tr: room thermistor temperature (detected by room temperature thermistor)

C: correction value

- The set temperature (Ts) determines the target temperature (Tt).  
(Ts = 18 ~ 30°C).
- The target temperature (Tt) is calculated as;  

$$Tt = Ts + C$$
 where C is the correction value.  

$$C = 0^{\circ}\text{C}$$
- Thermostat ON/OFF point and mode switching point are as follows.  
 Tr means the room thermistor temperature.
  - Heating → Cooling switching point:  

$$Tr \geq Tt + 3.0^{\circ}\text{C}$$
 (wall mounted type: FTXG and CTXG series, FTXS series 60/71 class)  


$$Tr \geq Tt + 2.5^{\circ}\text{C}$$
 (other models)
  - Cooling → Heating switching point:  

$$Tr < Tt - 2.5^{\circ}\text{C}$$
  - Thermostat ON/OFF point is the same as the ON/OFF point of cooling or heating operation.
- During initial operation  

$$Tr \geq Ts:$$
 Cooling operation  

$$Tr < Ts:$$
 Heating operation

#### Wall Mounted Type: FTXG and CTXG Series, FTXS Series 60/71 Class

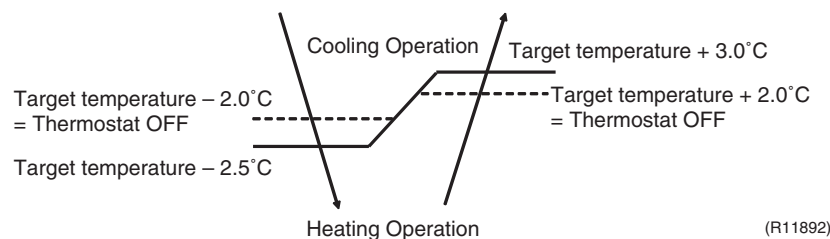


Ex: When the target temperature is 25°C

Cooling → 23°C: Thermostat OFF → 22°C: Switch to heating

Heating → 27°C: Thermostat OFF → 28°C: Switch to cooling

#### Other Models

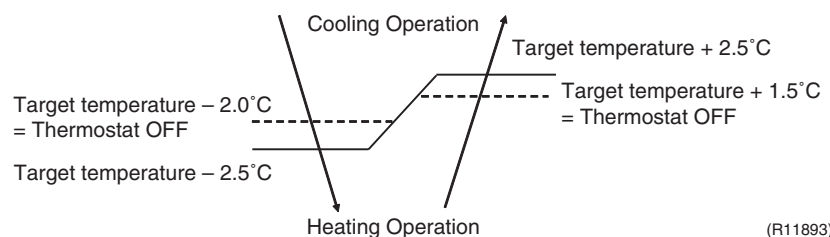

Ex: When the target temperature is 25°C

Cooling → 23°C: Thermostat OFF → 22°C: Switch to heating

Heating → 26.5°C: Thermostat OFF → 27.5°C: Switch to cooling

# 1.8 Thermostat Control

Thermostat control is based on the difference between the room thermistor temperature and the target temperature.

### Thermostat OFF Condition


- ◆ The temperature difference is in the zone A.

### Thermostat ON Condition


- ◆ The temperature difference returns to the zone C after being in the zone A.
- ◆ The system resumes from defrost control in any zones except A.
- ◆ The operation turns on in any zones except A.
- ◆ The monitoring time has passed while the temperature difference is in the zone B.  
(Cooling / Dry : 10 minutes, Heating : 10 seconds)

### Cooling / Dry

- ◆ Wall Mounted Type
- ◆ Floor Standing Type

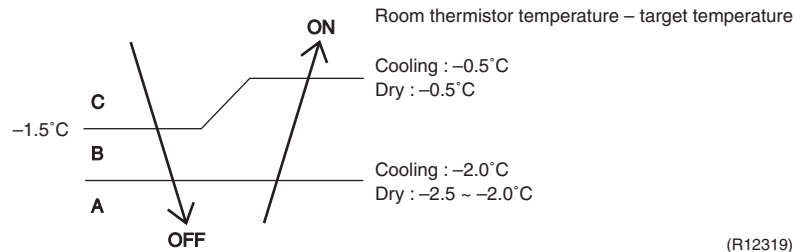


- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

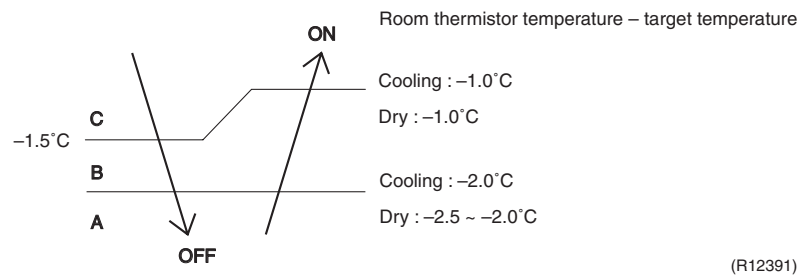


**Heating**


- ◆ Wall Mounted Type: FTXG and CTXG Series, FTXS Series 60/71 Class

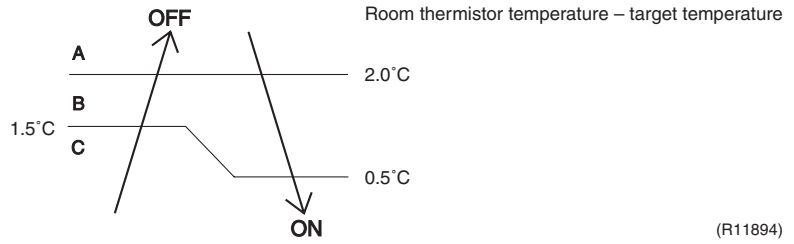

- ◆ Wall Mounted Type: FTXS and ATXS Series 20-50 Class
- ◆ Floor Standing Type

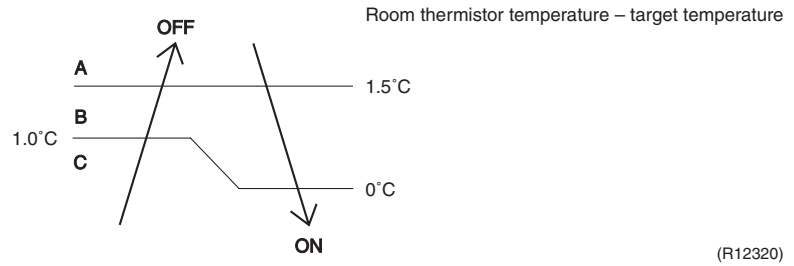

- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

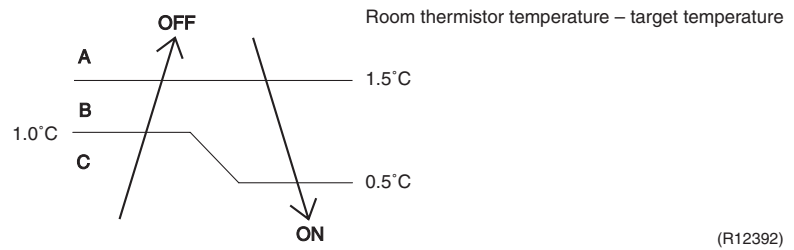

Refer to “Temperature Control” on page 84 for detail.


# 1.9 NIGHT SET Mode

**Outline** When the OFF timer is set, the NIGHT SET Mode is automatically activated. The NIGHT SET Mode keeps the airflow rate setting.

**Detail** The NIGHT SET Mode continues operation at the target temperature for the first one hour, then automatically raises the target temperature slightly in the case of cooling, or lowers it slightly in the case of heating. This prevents excessive cooling in summer and excessive heating in winter to ensure comfortable sleeping conditions, and also conserves electricity.


### Cooling

- ◆ Wall Mounted Type
- ◆ Floor Standing Type

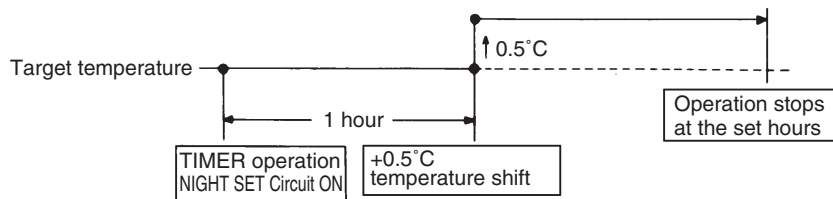

(R10870)


- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

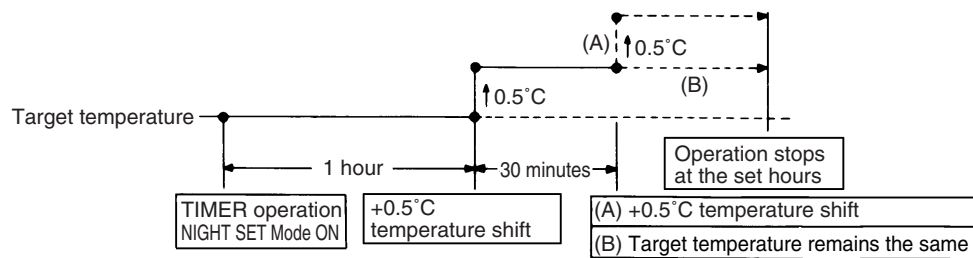

- (A) : When the outdoor temperature is normal and the room temperature is at the set temperature.
- (B) : When the outdoor temperature is high (27°C or higher).

(R14060)

### Heating

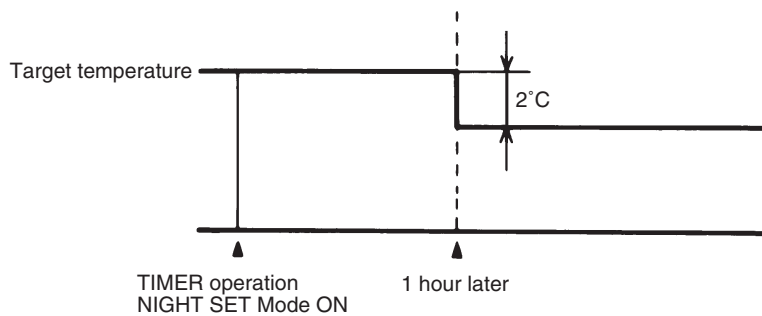

(R10871)

## 1.10 ECONO Operation


### FTXG, CTXG, FTXS, ATXS, FVXS Series

The "ECONO operation" reduces the maximum operating current and power consumption during start-up etc..

This operation is particularly convenient for energy-saving-oriented users. It is also a major bonus for those whose breaker capacities do not allow the use of multiple electrical devices and air conditioners.

It is easily activated from the wireless remote controller by pushing the ECONO button.

- When this function is activated, the maximum capacity decreases.
- The remote controller can send the ECONO command when the unit is in cooling, heating, dry, or automatic operation. This function can only be set when the unit is running. Pressing the ON/OFF button on the remote controller cancels the function.
- This function and POWERFUL operation cannot be used at the same time. The latest command has the priority.

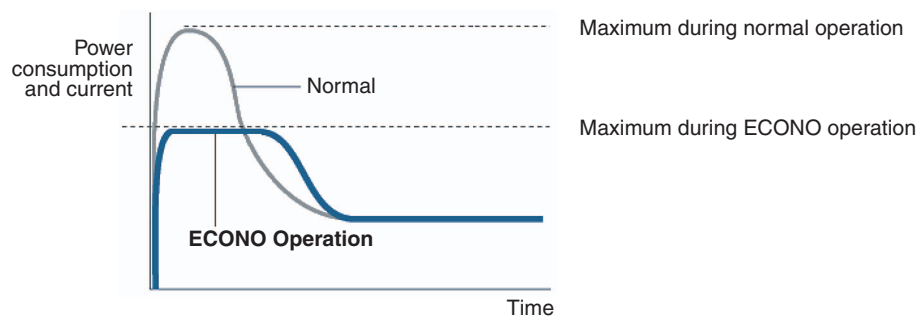

(R9288)

- When the ECONO command is valid, the input current is under reducing control.

## 1.11 HOME LEAVE Operation

### Outline

#### FLK(X)S, FDK(X)S Series

HOME LEAVE operation is a function that allows you to record your favorite set temperature and airflow rate. You can start your favorite operation mode simply by pressing the [HOME LEAVE] button on the remote controller.

### Detail

#### 1. Start of Function

The function starts when the [HOME LEAVE] button is pressed in cooling mode, heating mode (including POWERFUL operation), or while the operation is stopped. If this button is pressed in POWERFUL operation, the POWERFUL operation is canceled and this function becomes effective.

- The [HOME LEAVE] button is ineffective in dry mode and fan mode.

#### 2. Details of Function

A mark representing HOME LEAVE is indicated on the display of the remote controller. The indoor unit is operated according to the set temperature and airflow rate for HOME LEAVE which were pre-set in the memory of the remote controller.

The LED (red) of indoor unit representing HOME LEAVE lights up. (It goes out when the operation is stopped.)

#### 3. End of Function

The function ends when the [HOME LEAVE] button is pressed again during HOME LEAVE operation or when the [POWERFUL] button is pressed.

#### <Cooling>



“HOME LEAVE operation”  
set temp.



#### <Heating>



Set temp.  
“HOME LEAVE operation”  
set temp.



### Others

The set temperature and airflow rate are memorized in the remote controller. When the remote controller is reset due to replacement of battery, it is necessary to set the temperature and airflow rate again for HOME LEAVE operation.



## 1.12 2-Area INTELLIGENT EYE Operation

### Outline


#### Wall Mounted Type: FTXS Series 20-50 Class

The following functions can be performed by a motion sensor (INTELLIGENT EYE).


1. Reduction of the capacity when there is nobody in the room in order to save electricity (energy saving operation)
2. Dividing the room into plural areas and detecting existence of humans in each area. Moving the airflow direction to the area with no human automatically to avoid direct airflow on humans.

### Detail

#### 1. Detection method of INTELLIGENT EYE

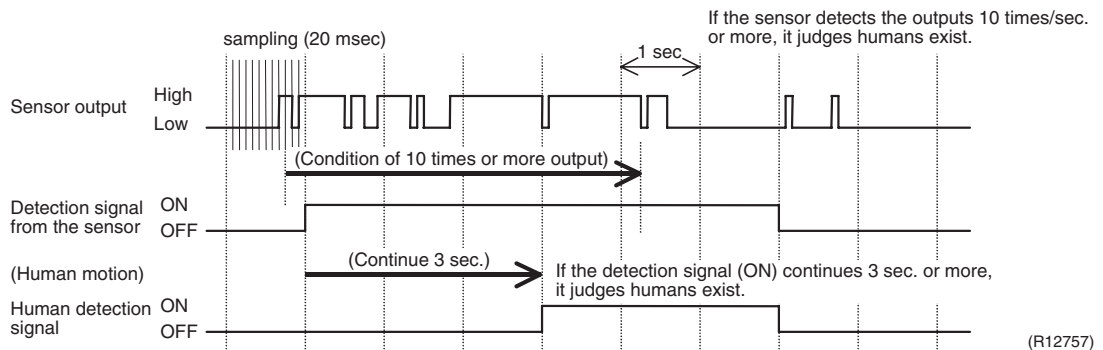


- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- The microcomputer in the indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to  $20 \text{ msec.} \times 10 = 200 \text{ msec.}$ ), and when the ON signal continues 3 sec., it judges human is in the room as the motion signal is ON
- 2-area INTELLIGENT EYE sensor is divided into 2 areas and detects humans in each area.
- Image of 2-area INTELLIGENT EYE

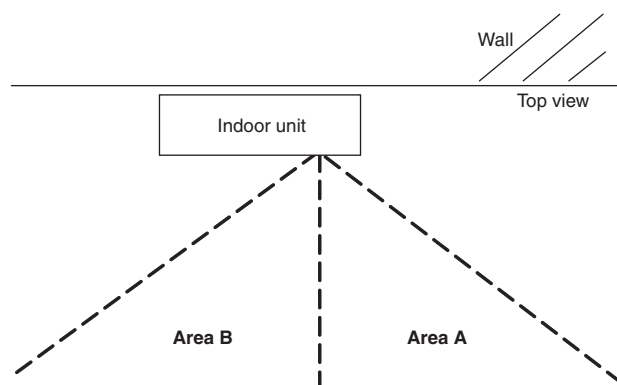

A microcomputer judges human existence by the sensor signal from each area A and B.

(R12276)


**2. Motions (for example: in cooling)**

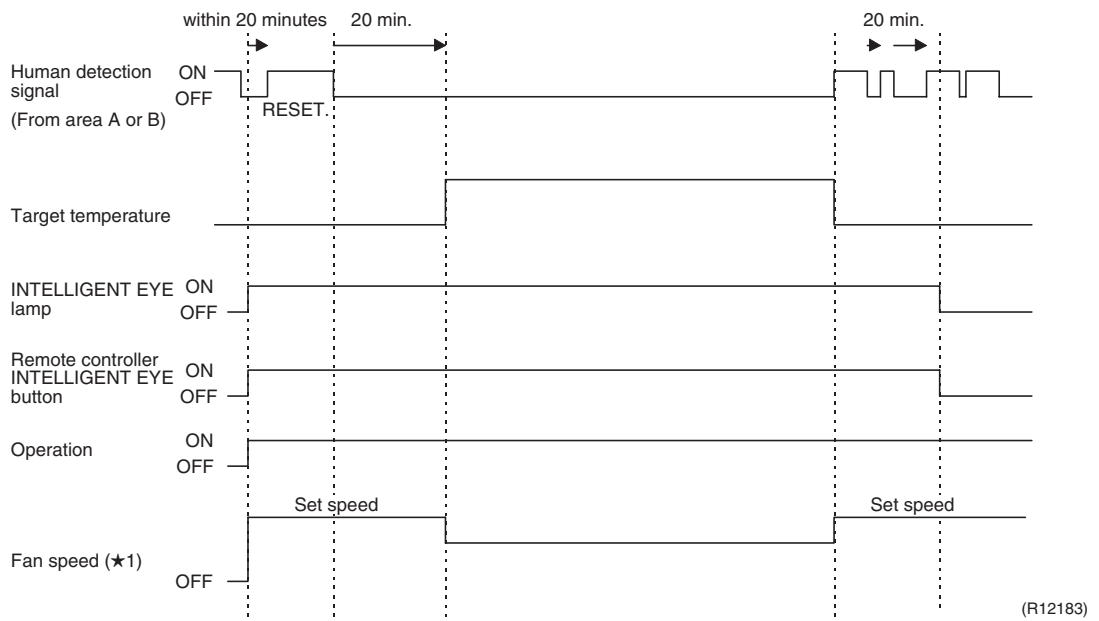

- When the microcomputer does not have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted from the target temperature. (Cooling / Dry : 2°C higher, Heating : 2°C lower, Auto : according to the operation mode at that time.)
- ★1 In case of FAN mode, the fan speed reduces by 60 rpm.

**3. Airflow direction in 2-area INTELLIGENT EYE operation**

- Detection method: The opposite area of detected area is set as the target direction.

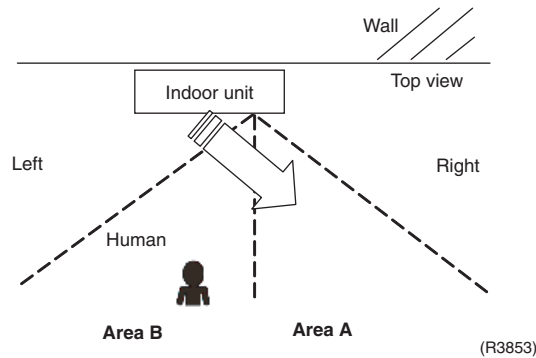

1. Detection signal ON in both area A and B: Shift the airflow direction to area B (left side)
2. Detection signal ON in area A: Shift the airflow direction to area B (left side)
3. Detection signal ON in area B: Shift the airflow direction to area A (right side)
4. Detection signal OFF in both area A and B: No change

\* When the detection signal is OFF for 20 minutes in both area A and B, the unit starts energy saving operation.

**Others**

- For dry operation, you cannot set the temperature with remote controller, but internally the target temperature is shifted by 2°C.

## 1.13 INTELLIGENT EYE Operation


### Outline

**Wall Mounted Type: FTXG and CTXG Series, FTXS Series 60/71 Class, ATXS Series**

This is the function that detects existence of humans in the room by a human motion sensor (INTELLIGENT EYE) and reduces the capacity when there is nobody in the room in order to save electricity.


### Detail

#### 1. Detection method by INTELLIGENT EYE

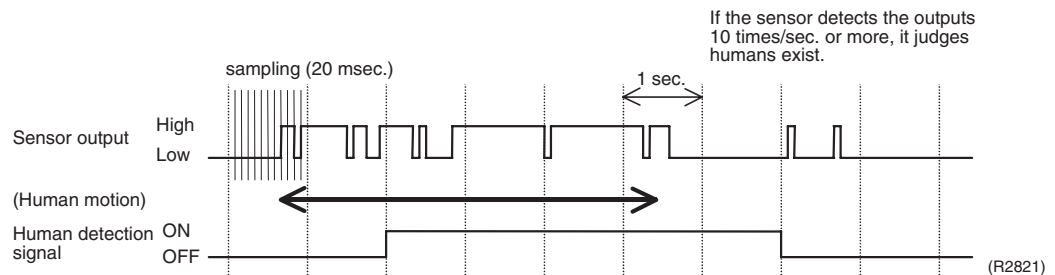

- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- A microcomputer in an indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to  $20 \text{ msec.} \times 10 = 200 \text{ msec.}$ ), it judges human is in the room as the motion signal is ON.

#### 2. The motions (for example: in cooling)

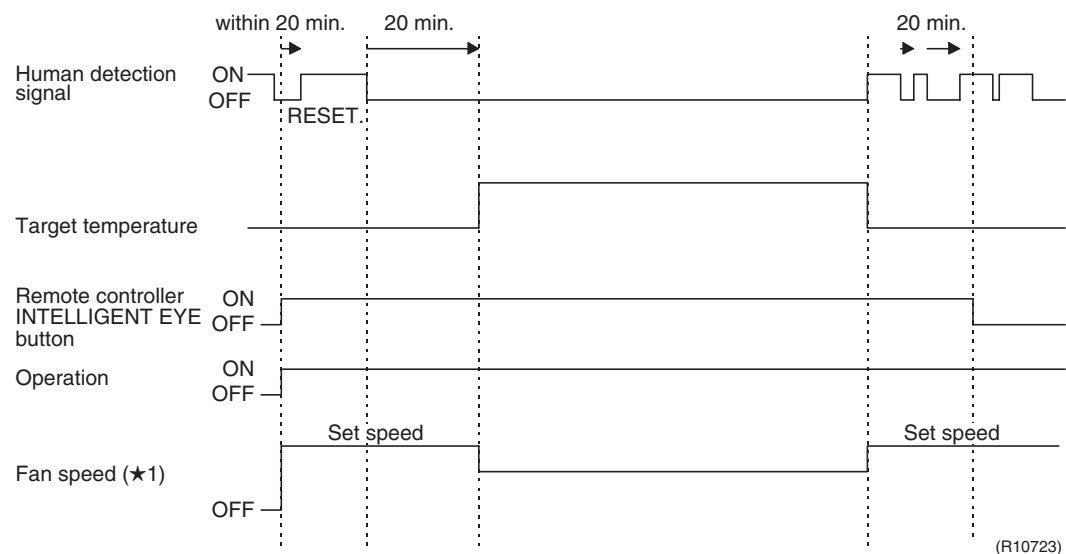

- When a microcomputer does not have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted from the target temperature. (Cooling / Dry :  $2^{\circ}\text{C}$  higher, Heating :  $2^{\circ}\text{C}$  lower, Auto : according to the operation mode at that time.)

★1 In case of FAN mode, the fan speed reduces by 60 rpm.

### Others

- For dry operation, you cannot set the temperature with a remote controller, but internally the target temperature is shifted by  $2^{\circ}\text{C}$ .

# 1.14 Inverter POWERFUL Operation

**Outline**

In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.


**Detail**

When POWERFUL button is pressed, the fan speed and target temperature are converted to the following states for 20 minutes.

Operation mode	Fan speed	Target temperature
COOL	H tap + <b>A</b> rpm	18°C
DRY	Dry rotating speed + <b>A</b> rpm	Lowered by 2 ~ 2.5°C
HEAT	H tap + <b>A</b> rpm	30 ~ 32°C
FAN	H tap + <b>A</b> rpm	—
AUTO	Same as cooling / heating in POWERFUL operation	The target temperature is kept unchanged.

**A** = 40 ~ 90 rpm (depending on the model)

Ex.) : POWERFUL operation in cooling mode.

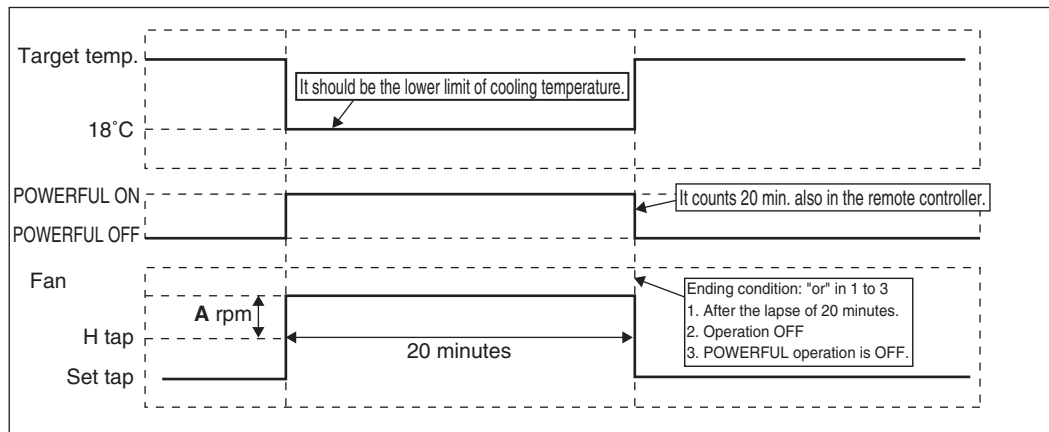


(R14061)

## 1.14.1 Multi-Colored Indicator Lamp / TIMER Lamp

**Features**

**Wall Mounted Type: FTXG and CTXG Series**

Current operation mode is displayed in color of the lamp of the indoor unit. Operating status can be monitored even in automatic operation in accordance with the mode of actual operation.

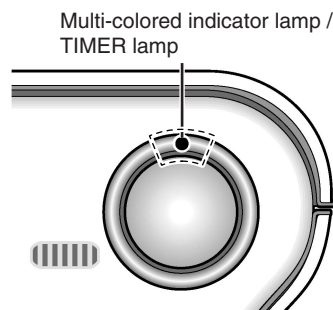

(R11815)


The lamp color changes according to the operation.

- \* AUTO ..... Red / Blue
- \* DRY ..... Green
- \* COOL ..... Blue
- \* HEAT ..... Red
- \* FAN ..... White
- \* TIMER ..... Orange


## Brightness Setting

The brightness of the multi-colored indicator lamp can be adjusted L (low), H (high), or OFF.


1. Press the center of the Temp button and the Mode button at the same time.

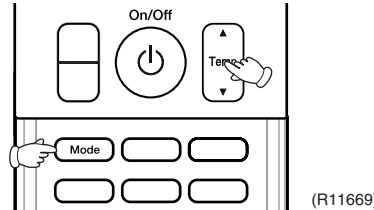


“5℃” is displayed on the LCD.

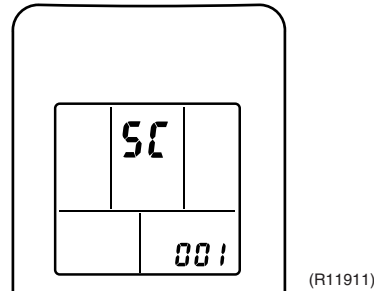

2. Select “L” (light) with the Temp ▲ or ▼ button.

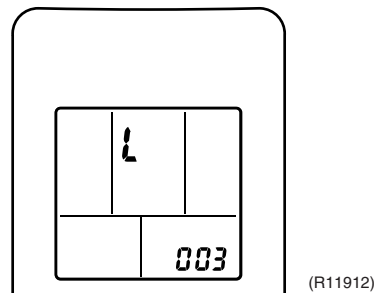

3. Press the Mode button to enter the brightness setting mode.
4. Press the Temp ▲ or ▼ button to adjust the brightness of the multi-colored indicator lamp.

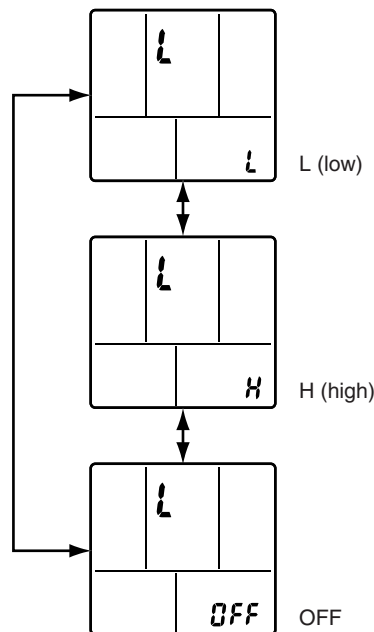

(R11913)

5. Press the Mode button for 5 seconds to exit from the brightness setting mode.  
(When the remote controller is left untouched for 60 seconds, it returns to the normal mode also.)

## 1.15 Other Functions

### 1.15.1 Hot-Start Function

In order to prevent the cold air blast that normally comes when heating operation is started, the temperature of the indoor heat exchanger is detected, and either the airflow is stopped or is made very weak thereby carrying out comfortable heating of the room.

\*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat is turned ON.

### 1.15.2 Signal Receiving Sign

When the indoor unit receives a signal from the remote controller, the unit emits a signal receiving sound.

### 1.15.3 Indoor Unit ON/OFF Button


An ON/OFF button is provided on the display of the unit.

- Press this button once to start operation. Press once again to stop it.
- This button is useful when the remote controller is missing or the battery has run out.
- The operation mode refers to the following table.

	Mode	Temperature setting	Airflow rate
Cooling Only	COOL	22°C	Automatic
Heat Pump	AUTO	25°C	Automatic

- In the case of multi system operation, there are times when the unit does not activate with this button.

ex. Wall mounted type FTXS series 20-50 class

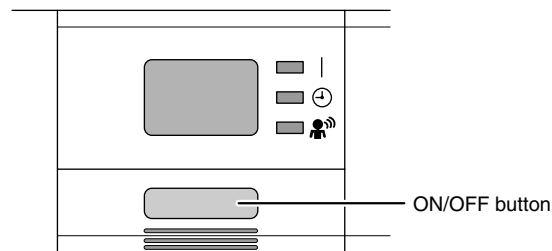

(R8302)

#### <Forced operation>

Forced operation can be started by pressing the ON/OFF button for 5 to 9 seconds while the unit is not operating.

Refer to page 440 for detail.



**Note:** When the ON/OFF button is pressed for 10 seconds or more, the forced operation is stopped.

### 1.15.4 Titanium Apatite Photocatalytic Air-Purifying Filter

This filter combines the Air-Purifying Filter and Titanium Apatite Photocatalytic Deodorizing Filter as a single highly effective filter. The filter traps microscopic particles, decomposes odors and even deactivates bacteria and viruses. It lasts for 3 years without replacement if washed about once every 6 months.

### 1.15.5 Photocatalytic Deodorizing Filter

The photocatalytic deodorizing filter powerfully decomposes odor of tobacco, pet, etc. The deodorizing power is regenerated simply by being exposed to the sunshine. It is recommended to dry the filter in the sun for about 6 hours (after vacuuming the filter) every 6 months.

### 1.15.6 Air-Purifying Filter

The air-purifying filter collects tobacco smoke, pollen, etc. with electrostatic agency.

This filter includes a deodorizing active carbon filter that removes minute particles of odor.

Replace the air-purifying filter every 3 months.

### 1.15.7 Auto-restart Function

Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts automatically when the power is restored in the same condition as before the power failure.



**Note:** It takes 3 minutes to restart the operation because the 3-minute standby function is activated.

### 1.15.8 WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week (up to 28 settings in total). Those 3 items of "ON/OFF", "temperature" and "time" can be set.



Refer to "WEEKLY TIMER Operation" on the following pages for detail.


FTXG, CTXG series: page 146

FTXS, FVXS series: page 183

## 2. Function of Indoor Unit (SA Models)

### 2.1 Drain Pump Control

#### 2.1.1 When the Float Switch is Tripped While the Cooling Thermostat is ON:

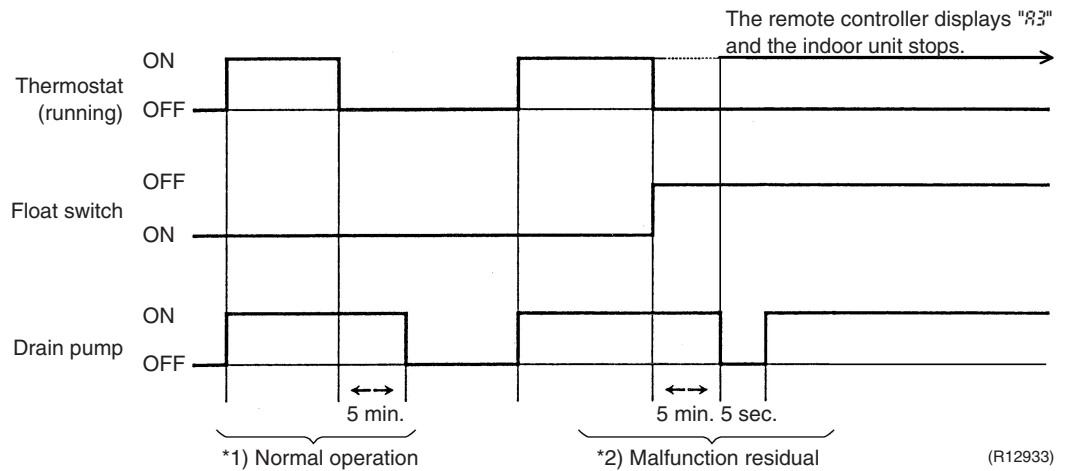


\*1. (Normal operation):

The purpose of residual operation is to completely drain any moisture adhering to the fin of the indoor heat exchanger when the thermostat goes off during cooling operation.

\*2. (Malfunction residual):

The remote controller displays "E3" and the air conditioner comes to an abnormal stop in 5 minutes if the float switch is turned OFF while the cooling thermostat is ON.

#### 2.1.2 When the Float Switch is Tripped While the Cooling Thermostat is OFF:

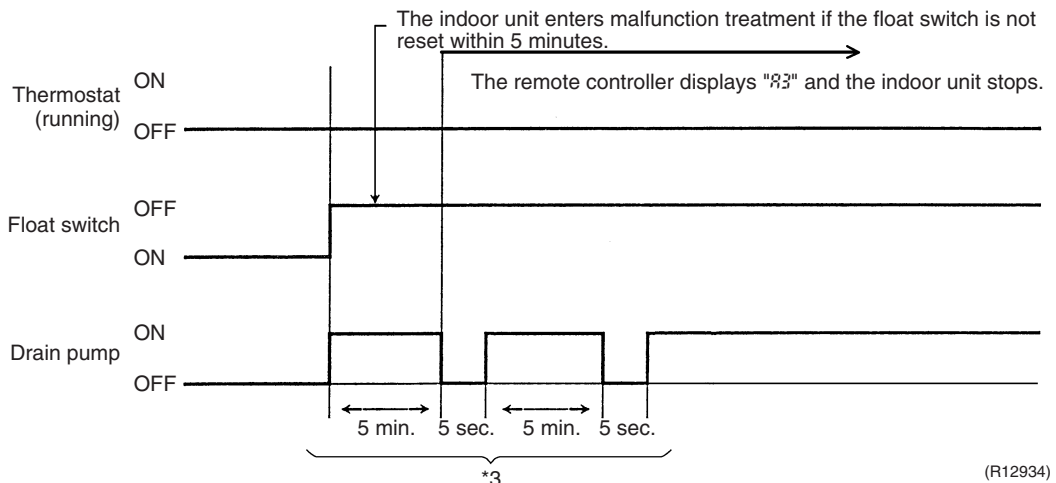


\*3. (Malfunction residual):

The remote controller displays "E3" and the air conditioner comes to an abnormal stop if the float switch is turned OFF and not turned ON again within 5 minutes while the cooling thermostat is OFF.




### 2.1.3 When the Float Switch is Tripped During Heating Operation:

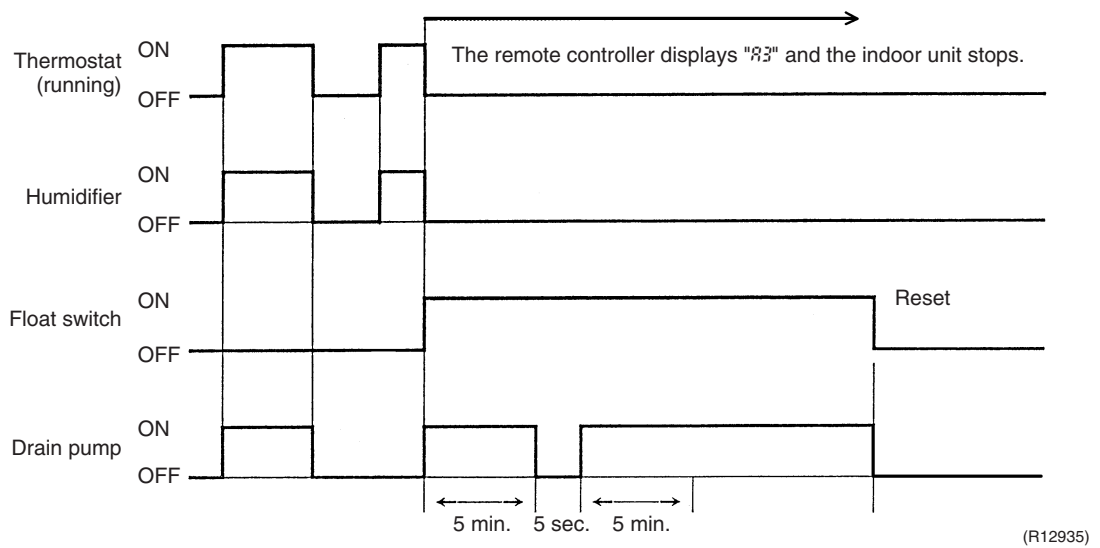

During heating operation, if the float switch is not reset even after the 5 minutes operation, 5 seconds stop, 5 minutes operation cycle ends, operation continues until the switch is reset.

### 2.1.4 When the Float Switch is Tripped and "8F" is Displayed on the Remote Controller:

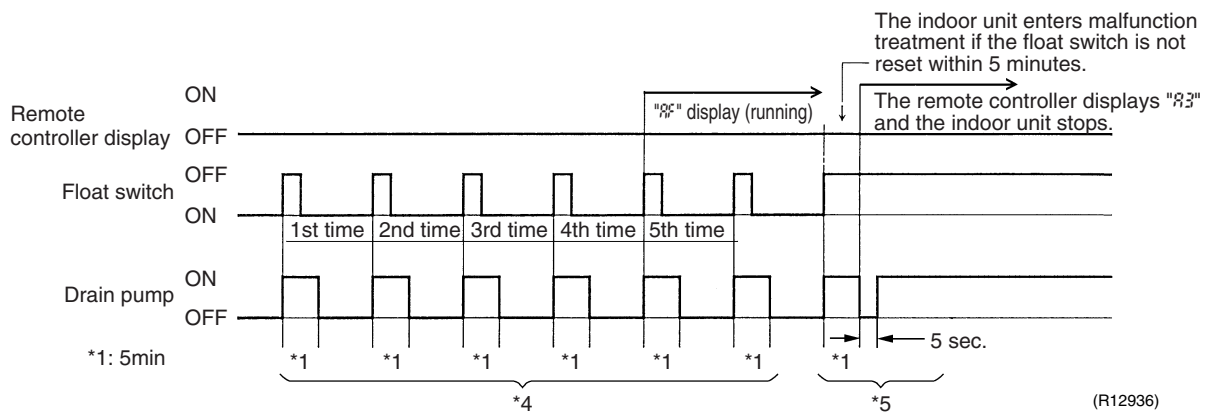

\*4. (Malfunction residual):

If the float switch is tripped 5 times in succession, a drain malfunction is determined to have occurred. "8F" is then displayed as operation continues.

\*5. (Malfunction residual):


The remote controller displays "83" and the air conditioner comes to an abnormal stop if the float switch is OFF for more than 5 minutes in the case of \*4.

## 2.2 Thermostat Sensor in Remote Controller

Temperature is controlled by both the thermostat sensor in remote controller and air suction thermostat in the indoor unit. (This is however limited to when the field setting for the thermostat sensor in remote controller is set to "Use".)

### Cooling

If there is a significant difference in the set temperature and the suction temperature, fine adjustment control is carried out using a body thermostat sensor, or using the sensor in the remote controller near the position of the user when the suction temperature is near the set temperature.

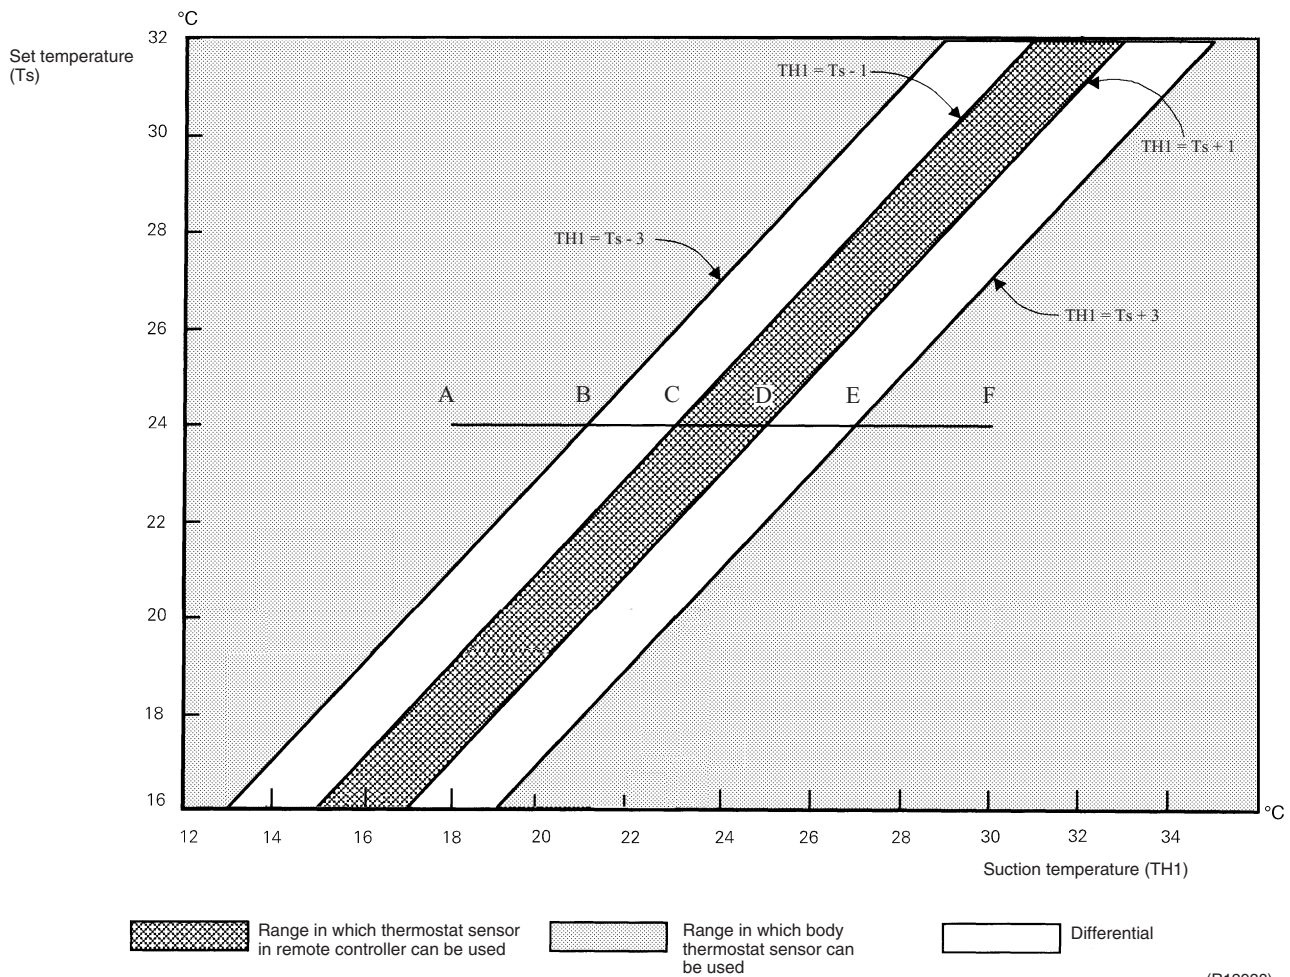

■ **Assuming the set temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 30°C (A → F):**

(This example also assumes there are several other air conditioners, and the suction temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 23°C (A → C).

Remote controller thermostat sensor is used for temperatures from 23°C to 27°C (C → E).

Body thermostat sensor is used for temperatures from 27°C to 30°C (E → F).

■ **Assuming suction temperature has changed from 30°C to 18°C (F → A):**


Body thermostat sensor is used for temperatures from 30°C to 25°C (F → D).

Remote controller thermostat sensor is used for temperatures from 25°C to 21°C (D → B).

Body thermostat sensor is used for temperatures from 21°C to 18°C (B → A).

## Heating

When heating, the hot air rises to the top of the room, resulting in the temperature being lower near the floor where the occupants are. When controlling by body thermostat sensor only, the indoor unit may therefore be turned off by the thermostat before the lower part of the room reaches the set temperature. The temperature can be controlled so the lower part of the room where the occupants are does not become cold by widening the range in which thermostat sensor in remote controller can be used so that suction temperature is higher than the set temperature.

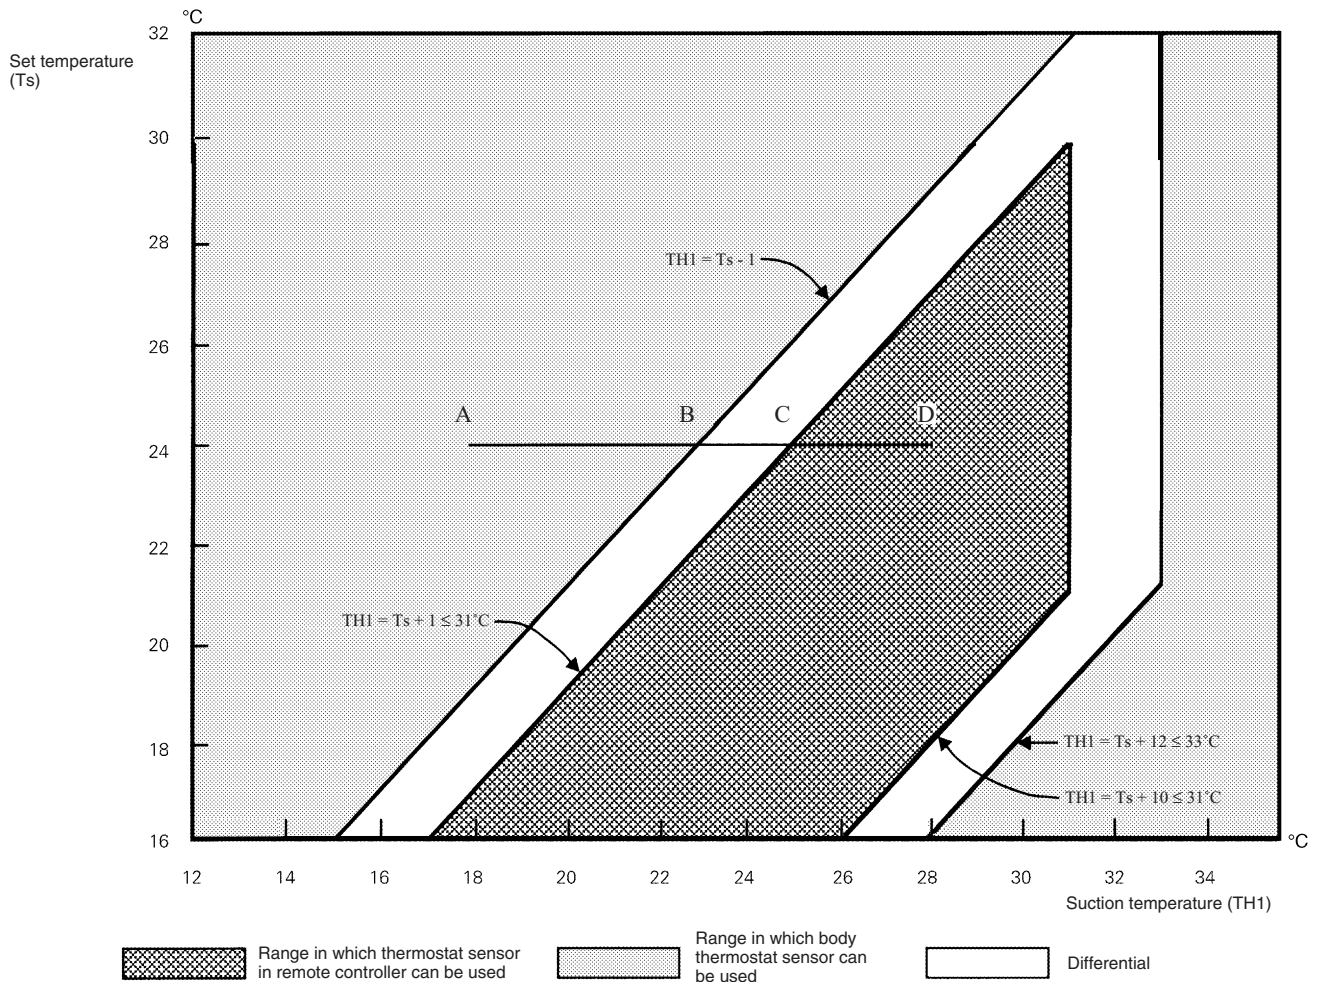

(R12939)

■ **Assuming the set temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 28°C (A → D):**

(This example also assumes there are several other air conditioners, and the suction temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 25°C (A → C).

Remote controller thermostat sensor is used for temperatures from 25°C to 28°C (C → D).

■ **Assuming suction temperature has changed from 28°C to 18°C (D → A):**

Remote controller thermostat sensor is used for temperatures from 28°C to 23°C (D → B).

Body thermostat sensor is used for temperatures from 23°C to 18°C (B → A).


## 2.3 Freeze Prevention Control

When the temperature detected by liquid pipe thermistor (R2T) of the indoor heat exchanger drops too low, the unit enters freeze prevention control in accordance with the following conditions, and is also set in accordance with the conditions given below.

Conditions for starting: Temperature is  $-1^{\circ}\text{C}$  or less for total of 40 min., or temperature is  $-5^{\circ}\text{C}$  or less for total of 10 min.

Conditions for cancelling: Temperature is  $+7^{\circ}\text{C}$  or more for 10 min. continuously

Ex: Case where temperature is  $-5^{\circ}\text{C}$  or less for total of 10 min.

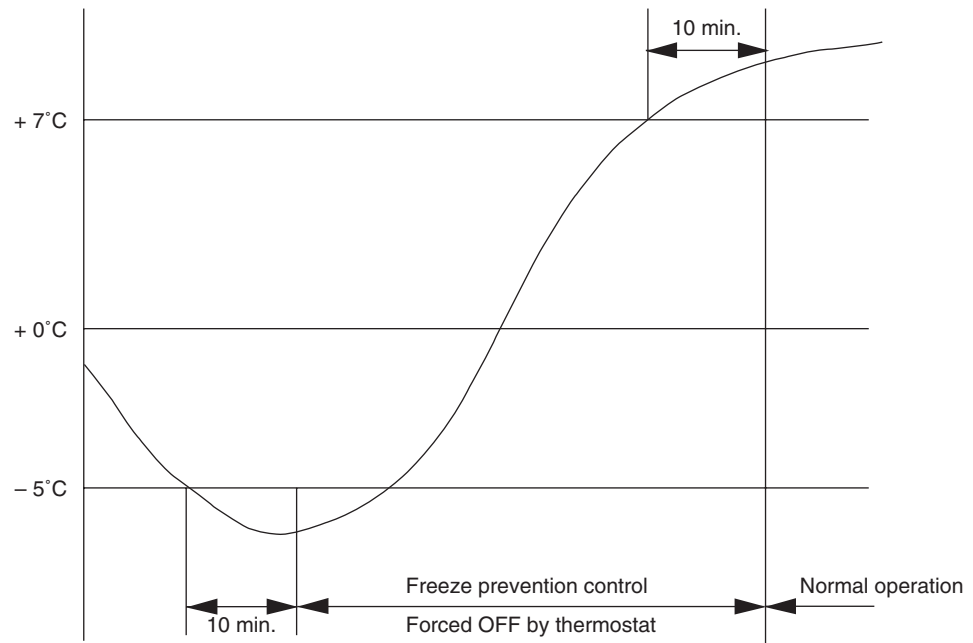


(R12940)

## 2.4 Hot Start Control (In Heating Operation Only)

**Outline**

At startup with thermostat ON or after the completion of defrosting in heating operation, the indoor unit fan is controlled to prevent cold air from blasting out and ensure startup capacity.

**Detail**

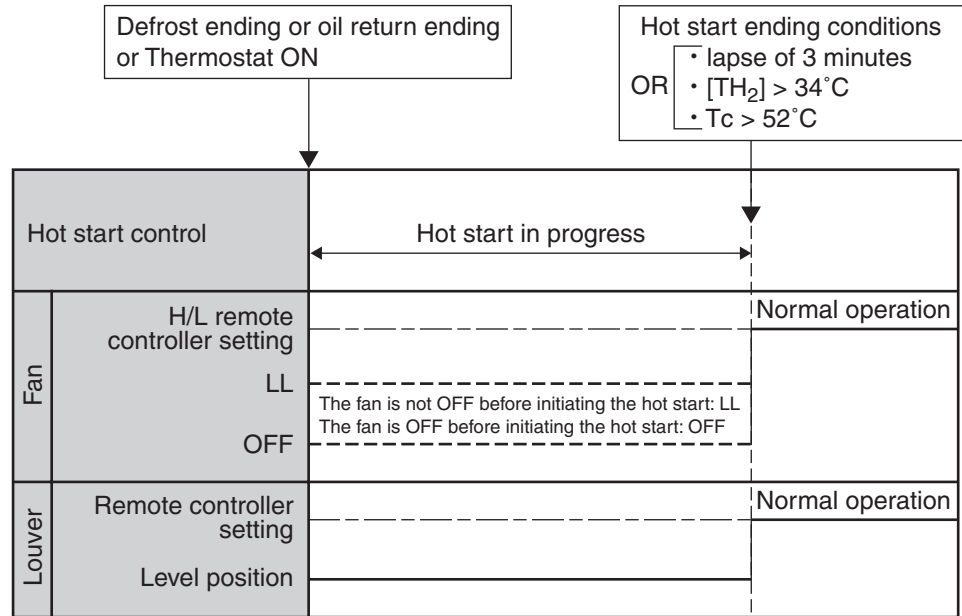


(R12941)

TH<sub>2</sub>: Temperature (°C) detected with the gas thermistor  
T<sub>c</sub> : High pressure equivalent saturated temperature


### 3. Function of Thermistor

- ★ Illustrations are for 5 room models as representative and have 5 lines of indoor unit system (A ~ E). 3 room models have 3 lines (A ~ C) and 4 room models have 4 lines (A ~ D).

#### Cooling Only Model

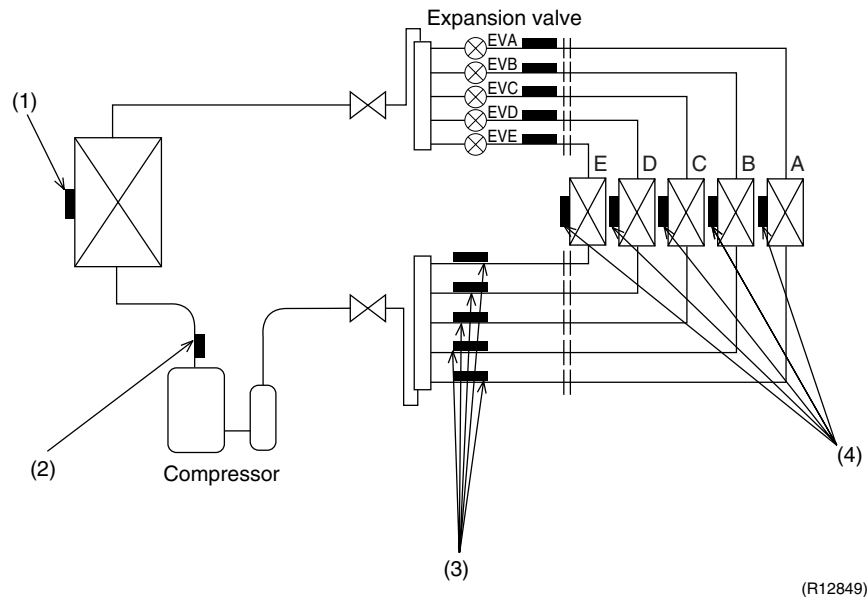

#### Heat Pump Model

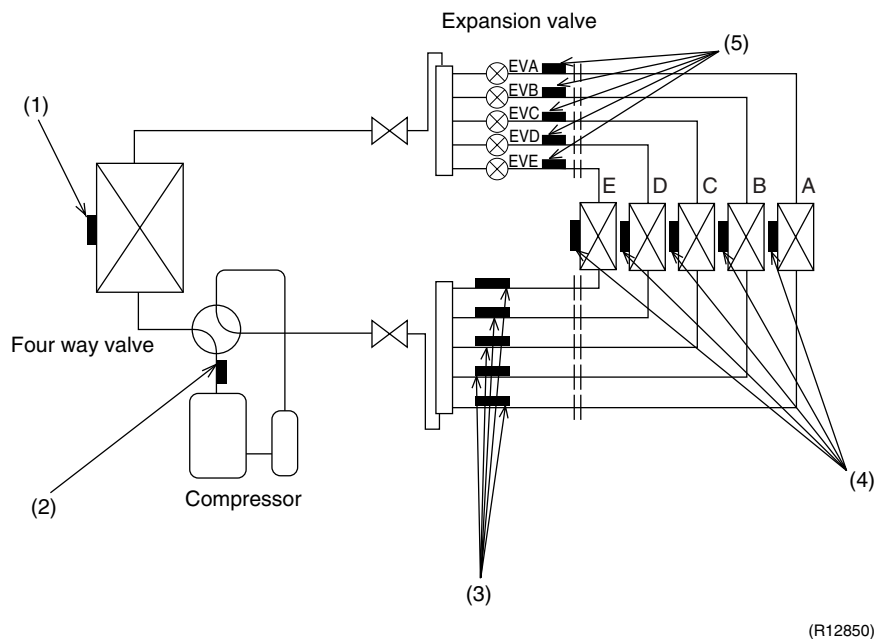

#### (1) Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the outdoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.

3. In cooling operation, the outdoor heat exchanger thermistor is used for high pressure protection.

---

### (2) Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling discharge pipe temperature. If the discharge pipe temperature (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency becomes lower or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge pipe thermistor.

---

### (3) Gas Pipe Thermistor

1. In cooling operation, the gas pipe thermistor is used for gas pipe isothermal control. The system controls electronic expansion valve opening so that the gas pipe temperature in each room becomes equal.

---

### (4) Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the indoor heat exchanger thermistor is used for freeze-up protection control. If the indoor heat exchanger temperature drops abnormally, the operating frequency becomes lower or the operation halts.
3. In cooling operation, the indoor heat exchanger thermistor is used for anti-icing function. If any of the following conditions are met in the room where operation halts, it is assumed as icing.

The conditions are

$$T_c \leq -1^\circ \text{C}$$

$$T_a - T_c \geq 10^\circ \text{C}$$

where  $T_a$  is the room temperature and  $T_c$  is the indoor heat exchanger temperature.

4. In heating operation, the indoor heat exchanger thermistor is used for heating peak-cut control. If the indoor heat exchanger temperature rises abnormally, the operating frequency becomes lower or the operation halts.
5. In heating operation, the indoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the maximum indoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
6. When only one indoor unit is operating, the indoor heat exchanger thermistor is used for subcooling control. The actual subcool is calculated with the liquid pipe temperature and the indoor heat exchanger temperature. The system controls the electronic expansion valve openings to obtain the target subcool.
7. The indoor heat exchanger thermistor is used for wiring error check function. The refrigerant flows in order from the port A to detect the indoor heat exchanger temperature one by one, and then wiring and piping can be checked.

---

### (5) Liquid Pipe Thermistor

1. When only one indoor unit is in heating, the liquid pipe thermistor is used for subcooling control. The actual subcool is calculated with the liquid pipe temperature and the maximum indoor heat exchanger temperature. The system controls the electronic expansion valve openings to obtain the target subcool.
2. In heating operation, the liquid pipe thermistor is used for liquid pipes isothermal control. The system controls electronic expansion valve opening so that the liquid pipe temperatures in each room becomes equal.

## 4. Control Specification

### 4.1 Mode Hierarchy


#### Outline

There are two modes; the one is the normal operation mode and the other is the forced operation mode for installation and providing service.

#### Detail

##### Cooling only model


There are following modes.

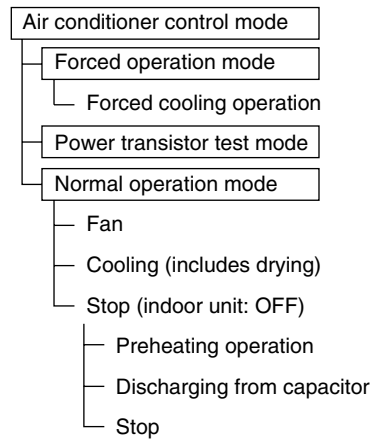

(R14428)

##### Heat Pump Model

There are following modes.

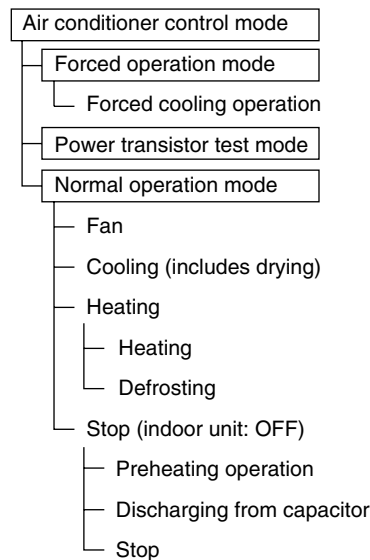

(R14248)



**Note:** Unless specified otherwise, dry operation command is regarded as cooling operation. An indoor fan operation cannot be made in a multiple indoor unit. (A forced fan command to the indoor unit from the outdoor unit is made during forced operation.)

##### Determine Operation Mode

The system judges the operation mode command which is set by each room in accordance with the procedure, and determines the operation mode of the system.

The following procedure is taken when the modes conflict with each other.

\*1. The system follows the mode which is set first. (First-push, first-set)

\*2. For the rooms where the different mode is set, standby mode is activated. (The operation lamp blinks.)



## 4.2 Frequency Control


### Outline

Frequency that corresponds to each room's capacity is determined according to the difference between the target temperature and the temperature of each room.

The function is explained as follows.

1. How to determine frequency
2. Frequency command from an indoor unit (Difference between a room thermistor temperature and the target temperature)
3. Frequency command from an indoor unit (The ranked capacity of the operating room)
4. Frequency initial setting
5. PI control

When the shift of the frequency is less than zero ( $\Delta F < 0$ ) by PI control, the target frequency is used as the command frequency.

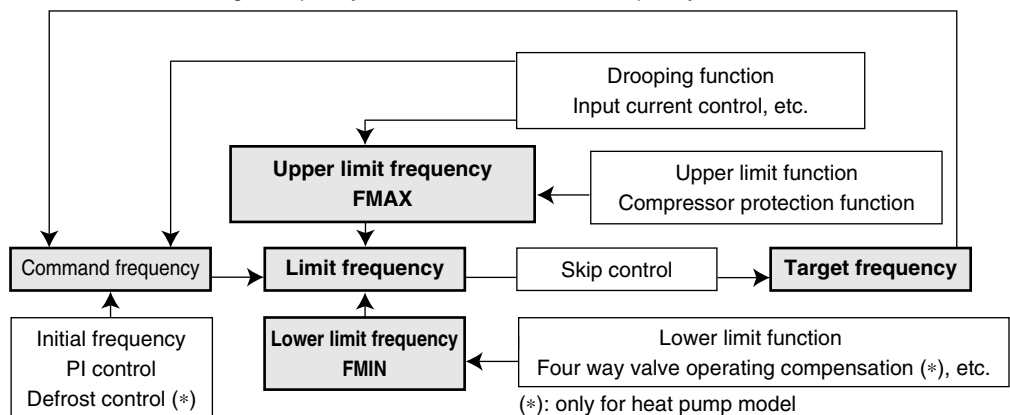

(R11592)

### Detail

#### How to Determine Frequency

The compressor's frequency is determined by taking the following steps.

#### For Cooling Only Model

##### 1. Determine command frequency

- ◆ Command frequency is determined in the following order of priority.
  1. Forced cooling
  2. Indoor frequency command

##### 2. Determine upper limit frequency

- ◆ The minimum value is set as the upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipe temperature, low Hz high pressure limit, freeze-up protection.

##### 3. Determine lower limit frequency

- ◆ The maximum value is set as the lower limit frequency among the frequency lower limits of the following functions:  
Draft prevention, pressure difference upkeep.

##### 4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

**For Heat Pump Model****1. Determine command frequency**

- ◆ Command frequency is determined in the following order of priority.
  1. Limiting defrost control time
  2. Forced cooling / heating
  3. Indoor frequency command

**2. Determine upper limit frequency**

- ◆ The minimum value is set as the upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipe temperature, low Hz high pressure limit, heating peak-cut, freeze-up protection, defrost.

**3. Determine lower limit frequency**

- ◆ The maximum value is set as the lower limit frequency among the frequency lower limits of the following functions:  
Four way valve operation compensation, draft prevention, pressure difference upkeep.

**4. Determine prohibited frequency**

- ◆ There is a certain prohibited frequency such as a power supply frequency.

**Indoor Frequency Command ( $\Delta D$  signal)**

The difference between a room thermistor temperature and the target temperature is taken as the " $\Delta D$  signal" and is used for frequency command.

Temperature difference (°C)	$\Delta D$ signal	Temperature difference (°C)	$\Delta D$ signal	Temperature difference (°C)	$\Delta D$ signal	Temperature difference (°C)	$\Delta D$ signal
-2.0	*Th OFF	0	4	2.0	8	4.0	C
-1.5	1	0.5	5	2.5	9	4.5	D
-1.0	2	1.0	6	3.0	A	5.0	E
-0.5	3	1.5	7	3.5	B	5.5	F

Values depend on the type of indoor unit.

\*Th OFF = Thermostat OFF

**Indoor Unit Capacity (S value)**

The capacity of the indoor unit is a "S" value and is used for frequency command.

ex.)	Capacity	S value	Capacity	S value
	2.5 kW	25	5.0 kW	50
	3.5 kW	35	6.0 kW	60

**Frequency Initial Setting****<Outline>**

When starting the compressor, or when conditions are varied due to the change of the operating room, the frequency must be initialized according to the total of a maximum  $\Delta D$  value of each room and a total value of Q ( $\Sigma Q$ ) of the operating room (the room in which the thermos is set to ON).

Q value: Indoor unit output determined from indoor unit volume, airflow rate and other factors.

**PI Control (Determine Frequency Up / Down by  $\Delta D$  Signal)****1. P control**

A total of the  $\Delta D$  value is calculated in each sampling time (20 seconds), and the frequency is adjusted according to its difference from the frequency previously calculated.

**2. I control**

If the operating frequency is not change more than a certain fixed time, the frequency is adjusted according to the  $\Sigma\Delta D$  value.

When the  $\Sigma\Delta D$  value is small...lower the frequency.

When the  $\Sigma\Delta D$  value is large...increase the frequency.

**3. Limit of frequency variation width**

When the difference between input current and input current drooping value is less than 1.5 A, the frequency increase width must be limited.

**4. Frequency management when other controls are functioning**

- ◆ When each frequency is drooping;  
Frequency management is carried out only when the frequency droops.
- ◆ For limiting lower limit  
Frequency management is carried out only when the frequency rises.

**5. Upper and lower limit of frequency by PI control**

The frequency upper and lower limits are set depending on the total of S values of a room.

When low noise commands come from the indoor unit more than one room or when outdoor unit low noise or quiet commands come from all the rooms, the upper limit frequency must be lowered than the usual setting.

## 4.3 Controls at Mode Changing / Start-up

### 4.3.1 Preheating Operation

**Outline** The inverter operation in open phase starts with the conditions of the preheating command from the indoor, the outdoor temperature, and discharge pipe temperature.

**Detail**

**ON Condition**

- ◆ When outdoor temperature is below 10.5°C and discharge pipe temperature is below 10.5°C, the inverter operation in open phase starts.

**OFF Condition**

- ◆ When outdoor temperature is higher than 12°C or discharge pipe temperature is higher than 12°C, the inverter operation in open phase stops.

### 4.3.2 Four Way Valve Switching

**Outline** In heating operation, current is conducted, and in cooling and defrosting, current is not conducted. In order to eliminate the switching sound when the heating is stopped, as the four way valve coil switches from ON to OFF, the OFF delay switch of the four way valve is carried out after the operation stopped.

**Detail**

**OFF delay switch of four way valve:**

The four way valve coil is energized for 150 seconds after the operation is stopped.

### 4.3.3 Four Way Valve Operation Compensation

**Outline** At the beginning of the operation as the four way valve is switched, acquire the differential pressure to activate the four way valve by having output frequency which is more than a certain fixed frequency, for a certain fixed time.

**Detail**

**Starting Conditions**

1. When starting compressor for heating.
2. When the operation mode changes from the previous time.
3. When starting compressor for defrosting or resetting.
4. When starting compressor for the first time after the reset with the power is ON.  
Set the lower limit frequency to around **A** Hz for 70 seconds with any conditions 1 through 4 above.


	<b>A</b> (Hz)
50/52/58 class	48
68/75 class	40
80/90 class	28

### 4.3.4 3-Minute Standby

Turning on the compressor is prohibited for 3 minutes after turning off.  
(Except when defrosting.)

### 4.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency is set as follows. (The function is not used when defrosting.)

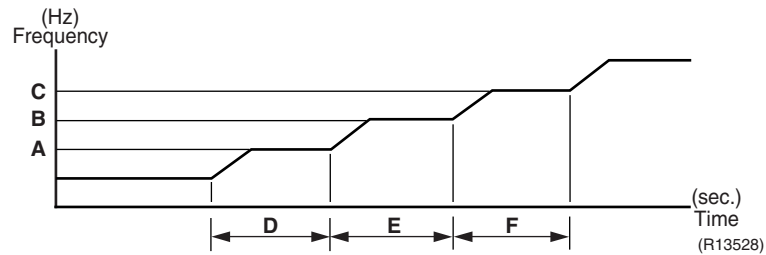


	50/52/58 class	68/75/80/90 class
<b>A (Hz)</b>	55	55
<b>B (Hz)</b>	70	65
<b>C (Hz)</b>	85	80
<b>D (seconds)</b>	150	120
<b>E (seconds)</b>	180	200
<b>F (seconds)</b>	300	470

## 4.4 Discharge Pipe Temperature Control

### Outline

The discharge pipe temperature is used as the internal temperature of the compressor. If the discharge pipe temperature rises above a certain level, the upper limit of frequency is set to keep this temperature from going up further.

### Detail

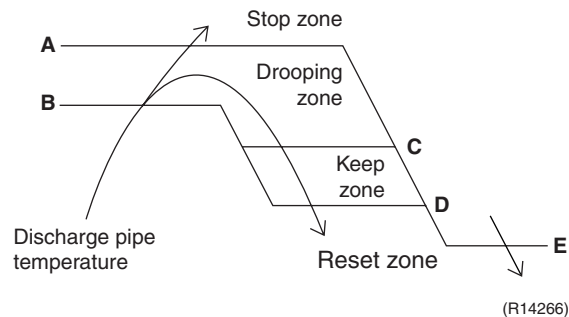

	50/52/58 class	68/75/80/90 class
<b>A (°C)</b>	110	120
<b>B (°C)</b>	103	111
<b>C (°C)</b>	102	109
<b>D (°C)</b>	100	107
<b>E (°C)</b>	95	107


Zone	Control
Stop zone	When the temperature reaches the stop zone, the compressor stops.
Drooping zone	The upper limit of frequency decreases.
Keep zone	The upper limit of frequency is kept.
Reset zone	The upper limit of frequency is canceled.

## 4.5 Input Current Control

### Outline

An input current is detected by the CT during the compressor is running, and the frequency upper limit is set from the input current.  
In case of heat pump model, this control, which is the upper limit control of the frequency, takes priority to the lower limit control of four way valve operation compensation.

### Detail

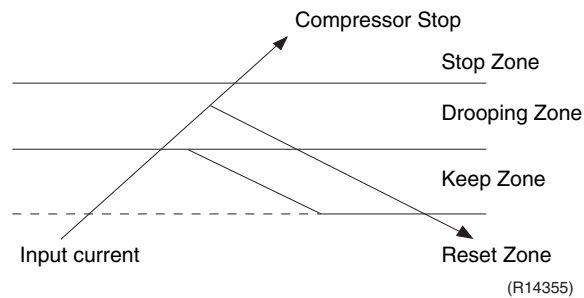

#### Frequency control in each zone

##### Stop zone

- ◆ After 2.5 seconds in this zone, the compressor is stopped.

##### Drooping zone

- ◆ The upper limit of the compressor frequency is defined as operation frequency – 2 Hz.
- ◆ After this, the output frequency is pulled down by 2 Hz every second until it reaches the keep zone.

##### Keep zone

- ◆ The present maximum frequency goes on.

##### Reset zone

- ◆ Limit of the frequency is canceled.

#### Limitation of current drooping and stop value according to the outdoor temperature

- ◆ The current droops when outdoor temperature becomes higher than a certain level (depending on the model).


## 4.6 Freeze-up Protection Control

### Outline

During cooling operation, the signals sent from the indoor unit control the operating frequency limitation and prevent freezing of the indoor heat exchanger. (The signal from the indoor unit is divided into zones.)

### Detail

The operating frequency limitation is judged with the indoor heat exchanger temperature 2 seconds after operation starts and 30 seconds after the number of operation room is changed.

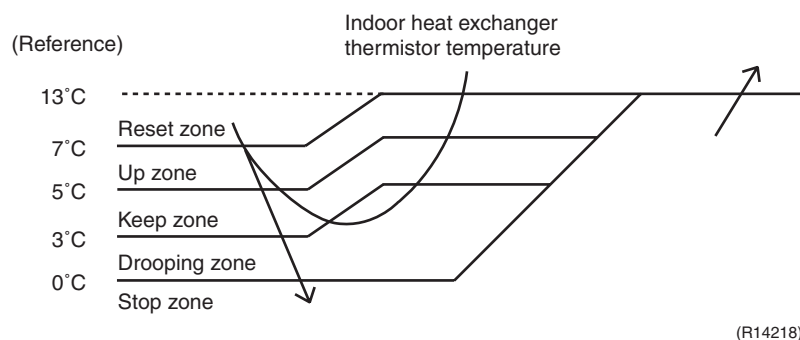

## 4.7 Heating Peak-cut Control


### Outline

During heating operation, the indoor heat exchanger temperature determines the frequency upper limit to prevent abnormal high pressure.

### Detail

- The operating frequency is judged with the indoor heat exchanger temperature 2 minutes after the operation starts and **A** seconds after the number of operation room is changed.
- The maximum value of the indoor heat exchanger temperature controls the following (excluding stopped rooms).

	A (seconds)
When increase	30
When decrease	2

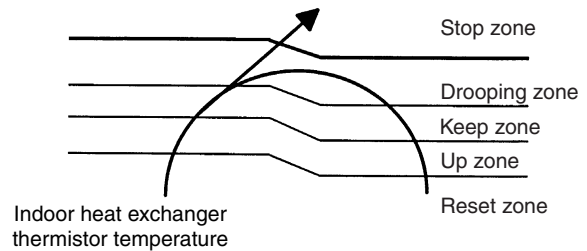

(R4579)

## 4.8 Outdoor Fan Control

### 1. Fan OFF delay when stopped

The outdoor fan is turned OFF 60 seconds after the compressor stops.

### 2. Fan ON control to cool down the electrical box

The outdoor fan is turned ON when the electrical box temperature is high while the compressor is OFF.

### 3. Fan OFF control while defrosting

The outdoor fan is turned OFF while defrosting.

### 4. Fan ON/OFF control when operation starts / stops

The outdoor fan is turned ON when the operation starts. The outdoor fan is turned OFF when the operation stops.

### 5. Fan control while forced operation

The outdoor fan is controlled as well as normal operation while the forced operation.

### 6. Fan speed control while indoor / outdoor unit quiet operation

The rotation speed of the outdoor fan is reduced by the command of the indoor / outdoor unit quiet operation.

### 7. Fan control when the number of heating room decreases

When the outdoor temperature is more than 10°C, the fan is turned off for 30 seconds.

### 8. Fan speed control for pressure difference upkeep

The rotation speed of the outdoor fan is controlled for keeping the pressure difference while cooling with low outdoor temperature.

- ◆ When the pressure difference is small, the rotation speed of the outdoor fan is reduced.
- ◆ When the pressure difference is large, the rotation speed of the outdoor fan is controlled as well as normal operation.

## 4.9 Liquid Compression Protection Function

**Outline** In order to obtain the dependability of the compressor, the compressor is stopped according to the outdoor temperature and temperature of the outdoor heat exchanger.

**Detail**

- Operation stops depending on the outdoor temperature

Compressor turns off under the conditions that the system is in cooling operation and outdoor temperature is below  $-12^{\circ}\text{C}$ .

## 4.10 Defrost Control

**Outline** Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than a certain value to finish.


**Detail**

**Conditions for Starting Defrost**

- The starting conditions is determined with the outdoor temperature and the outdoor heat exchanger temperature.
- The system is in heating operation.
- The compressor operates for 6 minutes.
- More than 38 minutes of accumulated time pass since the start of the operation, or ending the previous defrosting.

**Conditions for Canceling Defrost**

The target heat exchanger temperature as the canceling condition is selected in the range of  $4 \sim 12^{\circ}\text{C}$  according to the outdoor temperature.

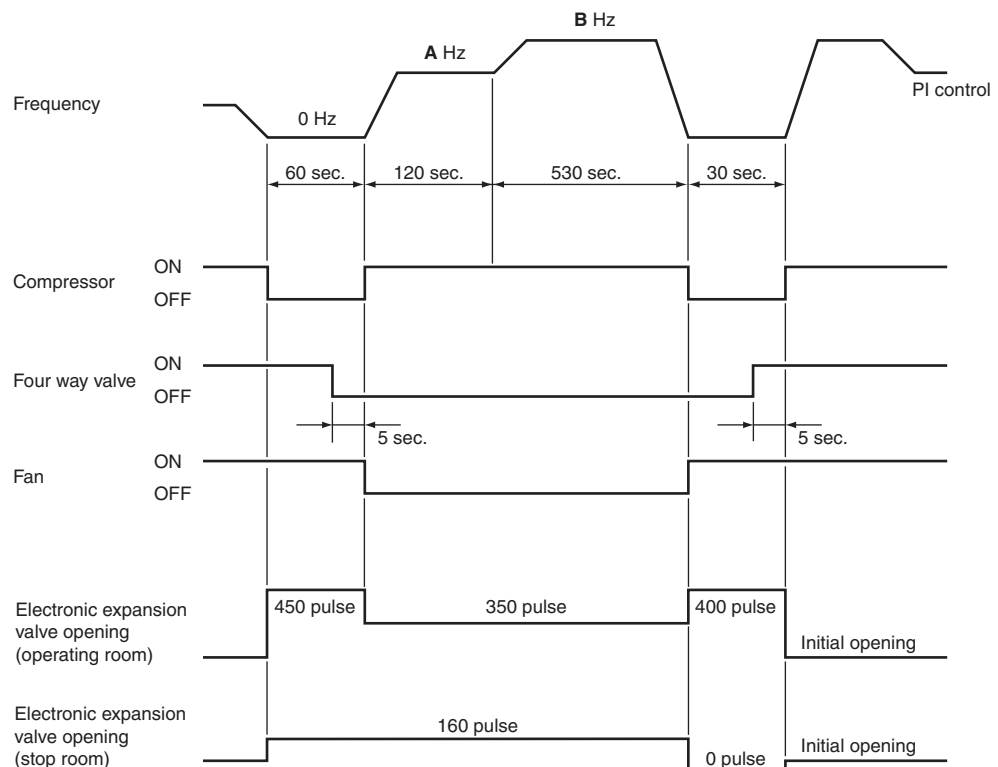

(R14552)

	50/52/58 class	68/75 class	80/90 class
<b>A (Hz)</b>	62	54	39
<b>B (Hz)</b>	80	82	62




## 4.11 Low Hz High Pressure Limit

### Outline

The upper limit of high pressure in a low Hz zone is set. The upper limit of the indoor heat exchanger temperature is also set by the operating frequency. Zones are divided into three, reset zone, keep zone, and drooping zone, and the frequency control is carried out according to each zone.

### Detail

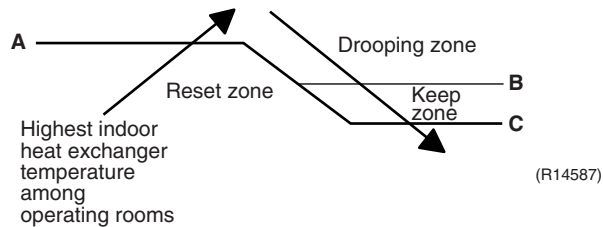

	50-75 class	80/90 class
<b>A</b> (°C)	60	57
<b>B</b> (°C)	59	56
<b>C</b> (°C)	56	53



**Note:** Drooping: The system stops 2 minutes after staying in the drooping zone.

## 4.12 Electronic Expansion Valve Control

### Outline

The following items are included in the electronic expansion valve control.

#### **Electronic expansion valve is fully closed**

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

#### **Room Distribution Control**

1. Gas pipe isothermal control
2. SC (subcooling) control
3. Liquid pipe temperature control (with all ports connected and all rooms being air-conditioned)
4. Liquid pipe temperature control for stopped rooms
5. Dew prevention control for indoor rotor

#### **Open Control**

1. Electronic expansion valve control when starting operation
2. Electronic expansion valve control when frequency changed
3. Electronic expansion valve control for defrosting
4. Electronic expansion valve control for oil recovery
5. Electronic expansion valve control when a discharge pipe temperature is abnormally high
6. Electronic expansion valve control when the discharge pipe thermistor is disconnected
7. Electronic expansion valve control for indoor unit freeze-up protection

#### **Feedback Control**

1. Discharge pipe temperature control

Detail

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		Gas pipe isothermal control	SC (subcooling) control	Control when frequency changed	Control for abnormally high discharge pipe temperature	Oil recovery control	Indoor freeze-up protection control	Liquid pipe temperature control	Liquid pipe temperature control for non-operating units	Dew prevention control for indoor rotor
When power is turned on	○ : function × : not function									
↓	Fully closed when power is turned on	×	×	×	×	×	×	×	×	×
↓	Cooling, 1 room operation									
↓	Open control when starting	×	×	×	○	○	○	×	×	×
↓	(Control of target discharge pipe temperature)	×	×	○	○	○	○	×	×	○
↓	Cooling, 2 rooms operation to Cooling, 4 rooms operation									
↓	Control when the operating room is changed	×	×	×	○	○	○	×	×	○
↓	(Control of target discharge pipe temperature)	○	×	○	○	○	○	×	×	○
↓	Stop									
↓	Pressure equalizing control	×	×	×	×	×	×	×	×	×
↓	Heating, 1 room operation									
↓	Open control when starting	×	×	×	○	×	×	×	×	×
↓	(Control of target discharge pipe temperature)	×	○ ★2	○	○	×	×	○ ★1	○ ★3	×
↓	Heating, 2 rooms operation									
↓	Control when the operating room is changed	×	×	×	○	×	×	×	×	×
↓	(Control of target discharge pipe temperature)	×	○ ★2	○	○	×	×	○ ★1	○ ★3	×
↓	(Defrost control)	×	×	×	×	×	×	×	×	×
↓	Stop									
↓	Pressure equalizing control	×	×	×	×	×	×	×	×	×
↓	Heating operation									
↓	Open control when starting	×	×	×	○	×	×	×	×	×
↓	Control of discharge pipe thermistor disconnection									
↓	Continue	×	○ ★2	×	×	×	×	○ ★1	○ ★3	×
↓	Stop									
↓	Pressure equalizing control	×	×	×	×	×	×	×	×	×

(R10273)

★1: When all the indoor units are operating, "liquid pipe temperature control" is conducted.

★2: "SC (subcooling) control" is conducted for the operating indoor units, when some of the units are not operating.

★3: "Liquid pipe temperature control for stopped room" is conducted for the non-operating indoor units.

### 4.12.1 Fully Closing with Power on

The electronic expansion valve is initialized when the power is turned on. The opening position is set and the pressure equalization is developed.

### 4.12.2 Pressure Equalizing Control

When the compressor is stopped, the pressure equalizing control is activated. The electronic expansion valve opens, and develops the pressure equalization.

### 4.12.3 Opening Limit

#### Outline

A maximum and minimum opening of the electronic expansion valve are limited.

#### Detail

- A maximum electronic expansion valve opening in the operating room: 450 pulses
  - A minimum electronic expansion valve opening in the operating room: 75 pulses
- The electronic expansion valve is fully closed in the room where cooling is stopped and is opened at the fixed degree during defrosting.

### 4.12.4 Starting Operation Control / Changing Operation Room

The electronic expansion valve opening is controlled when the operation starts, and prevent the superheating or liquid compression.

### 4.12.5 High Discharge Pipe Temperature

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, the electronic expansion valve opens and the refrigerant runs to the low pressure side. This procedure lowers the discharge pipe temperature.

### 4.12.6 Oil Recovery Function

#### Outline

The electronic expansion valve opening in the cooling stopped room is set as to open for a certain time at a specified interval so that the oil in the cooling stopped room may not be accumulated.

#### Detail

During cooling operation, every 1 hour continuous operation, the electronic expansion valves in the operation stopped room is opened by 80 pulses for specified time.

### 4.12.7 Gas Pipe Isothermal Control During Cooling


When the units are operating in multiple rooms, the gas pipe temperature is detected and the electronic expansion valve opening is adjusted so that the temperature of the gas pipe in each room becomes equal.

- When the gas pipe temperature > the average gas pipe temperature, → open the electronic expansion valve in that room
- When the gas pipe temperature < the average gas pipe temperature, → close the electronic expansion valve in that room

The temperatures are monitored every 40 seconds.

### 4.12.8 Target Discharge Pipe Temperature Control

The target discharge pipe temperature is obtained from the indoor and outdoor heat exchanger temperature, and the electronic expansion valve opening is adjusted so that the actual discharge pipe temperature becomes close to the target discharge pipe temperature. (Indirect SH (superheating) control using the discharge pipe temperature)

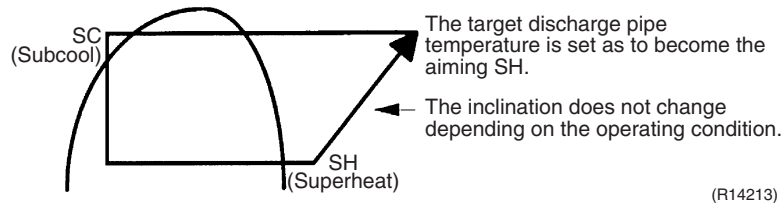

(R14213)

The electronic expansion valve opening and the target discharge pipe temperature are adjusted every 20 seconds. The target discharge pipe temperature is controlled by indoor heat exchanger temperature and outdoor heat exchanger temperature. The opening degree of the electronic expansion valve is controlled by followings.

- ◆ Target discharge pipe temperature
- ◆ Actual discharge pipe temperature
- ◆ Previous discharge pipe temperature

### 4.12.9 SC (Subcooling) Control

#### Outline

The liquid pipe temperature and the heat exchanger temperature are detected and the electronic expansion valve opening is compensated so that the SC of each room becomes the target SC.

- When the actual SC is > target SC, open the electronic expansion valve of the room.
- When the actual SC is < target SC, close the electronic expansion valve of the room.

#### Detail

##### Start Conditions

After finishing the starting control (about 660 ~ 810 seconds), all the electronic expansion valve(s) in the operating room is/are controlled.

##### Determine Electronic Expansion Valve Opening

The electronic expansion valve opening is adjusted so that the temperature difference between the maximum heat exchanger temperature of connected room and the liquid pipe temperature thermistor becomes constant.

## 4.12.10 Disconnection of the Discharge Pipe Thermistor

---

### Outline

The disconnection of the discharge pipe thermistor is detected by comparing the discharge pipe temperature with the condensing temperature. If the discharge pipe thermistor is disconnected, the electronic expansion valve opens according to the outdoor temperature and the operation frequency, and operates for a specified time, and then stops.

After 3 minutes of waiting, the operation restarts and checks if the discharge pipe thermistor is disconnected. If the discharge pipe thermistor is disconnected, the system stops after operating for a specified time.

If the disconnection is detected 4 times in succession, then the system is shut down. When the compressor runs for 60 minutes without any error, the error counter is reset.

---

### Detail

#### **Detect Disconnection**

When the starting control (about 660~810 seconds) finishes, and the 9-minute timer for the compressor operation continuation is not counting time, the following adjustment is made.

1. When the operation mode is cooling

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < outdoor heat exchanger temperature

2. When the operation mode is heating

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < highest indoor heat exchanger temperature

#### **Adjustment when the thermistor is disconnected**

When the disconnection is ascertained, the compressor continues operation for 9 minutes and then stops.

When the compressor stops repeatedly, the system is shut down.

---

## 4.12.11 Control when frequency is changed

When the target discharge pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, the target discharge pipe temperature control is canceled and the target opening of the electronic expansion valve is changed.

## 4.13 Malfunctions

### 4.13.1 Sensor Malfunction Detection

Sensor malfunction may occur either in the thermistor or current transformer (CT) system.

#### Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Radiation fin thermistor
4. Gas pipe thermistor
5. Outdoor temperature thermistor
6. Liquid pipe thermistor

#### Relating to CT Malfunction

When the output frequency is more than 55 Hz (50/52/58/68/75 class) or 32 Hz (80/90 class), and the input current is less than 0.5 A, adjustment is carried out.

### 4.13.2 Detection of Overcurrent and Overload

#### Outline

In order to protect the inverter, an excessive output current is detected, the OL temperature is observed to protect the compressor.

#### Detail

- If the inverter current exceeds 16.5 ~ 20.0 A (depending on the model), the system shuts down the compressor.
- If the OL (compressor head) temperature exceeds 120 ~ 130°C, the compressor stops.


### 4.13.3 Refrigerant Shortage Control

#### Outline

#### I Detecting by power consumption


If the power consumption is below the specified value and the frequency is higher than the specified frequency, it is regarded as refrigerant shortage.

The power consumption is small comparing with that in the normal operation when refrigerant is insufficient, and refrigerant shortage is detected by checking a power consumption.

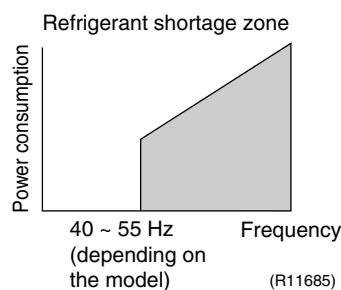

#### II Detecting by discharge pipe temperature

If the discharge pipe temperature is higher than the target discharge pipe temperature, and the electronic expansion valve is fully open for more than the specified time, it is regarded as refrigerant shortage.

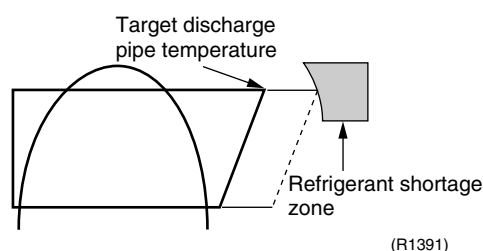

Refer to "Refrigerant shortage" on page 357 for detail.

#### 4.13.4 Anti-icing Function

During cooling, if the indoor heat exchanger temperature in the operation stopped room becomes below the specified temperature for the specified time, the electronic expansion valve is opened in the operation stopped room as specified, and the fully closed operation is carried out. After this, if freezing abnormality occurs more than specified time, the system shuts down as the system abnormality.

---

# Part 5

# Operation Manual

1. System Configuration.....	129
2. RA Indoor Unit.....	130
2.1 FTXG, CTXG Series - ARC466A1 .....	130
2.2 FTXS, FVXS Series - ARC452A1, A3 .....	154
2.3 ATXS, FLK(X)S, FDK(X)S Series - ARC433B67, B68, B69, B76 .....	190
3. SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	212
3.1 BRC1D528 .....	212
3.2 BRC1E51A7 .....	227
3.3 BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66.....	272



# 1. System Configuration

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.

In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

## 2. RA Indoor Unit


### 2.1 FTXG, CTXG Series - ARC466A1

#### 2.1.1 Name of Parts

# Name of Parts

### Indoor Unit

• Appearance of the indoor unit may differ.

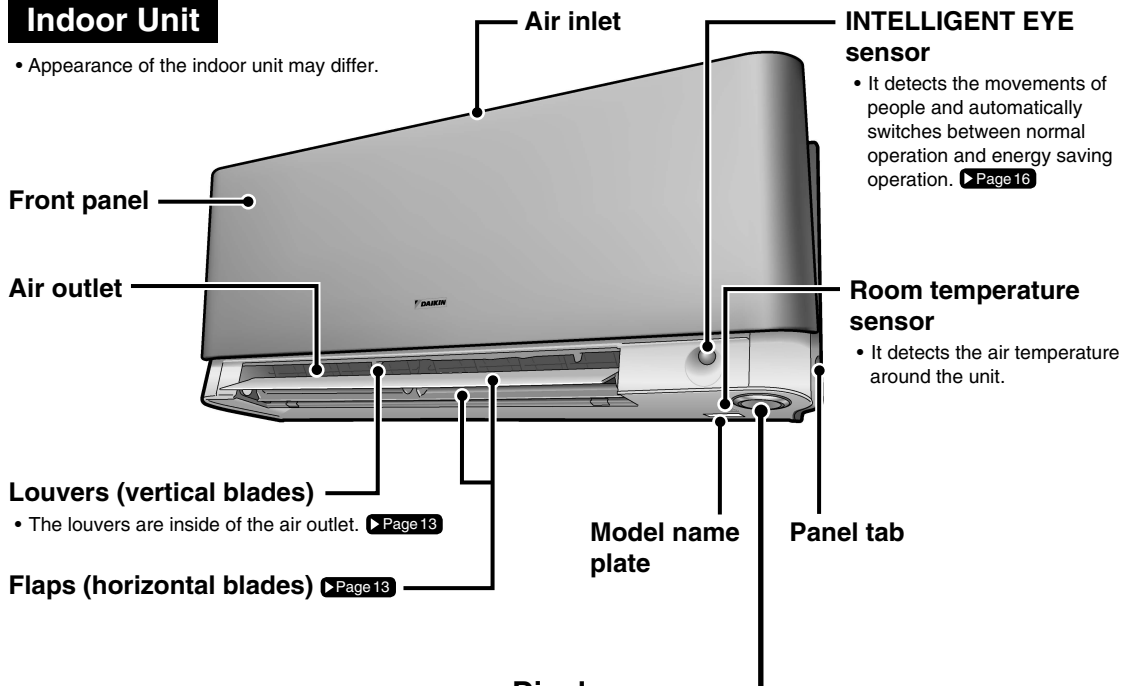

### INTELLIGENT EYE sensor

• It detects the movements of people and automatically switches between normal operation and energy saving operation. [▶ Page 16](#)

### Room temperature sensor

• It detects the air temperature around the unit.

### Louvers (vertical blades)

• The louvers are inside of the air outlet. [▶ Page 13](#)

### Flaps (horizontal blades)

[▶ Page 13](#)

### Display

### INTELLIGENT EYE lamp (green)

[▶ Page 16](#)

### Signal receiver and Indoor unit ON/OFF switch

#### Signal receiver

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.

Case	Sound type
Operation start	beep-beep
Setting changed	beep
Operation stop	long beep

#### Indoor unit ON/OFF switch

- Press this switch once to start operation. Press once again to stop it.
- The operation mode refer to the following table.

Mode	Temperature setting	Airflow rate
AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

### Multi-monitor lamp and TIMER lamp

#### Multi-monitor lamp


- The lamp colour changes according to the operation.

Operation	Multi-monitor lamp
AUTO	Red/Blue
DRY	Green
COOL	Blue
HEAT	Red
FAN	White
TIMER	Orange

#### TIMER lamp

- When operation by timer has been set, the multi-monitor lamp periodically changes to orange. After lighting orange for about 5 seconds, it returns to the colour of the operation mode. The multi-monitor lamp will turn orange on and off in cyclic manner while the air conditioner is not in operation.


TIMER lamp colour : For COOL

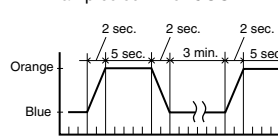

TIMER lamp colour


- DRY : Green → Orange
- COOL : Blue → Orange
- HEAT : Red → Orange
- FAN : White → Orange
- Stop : Off → Orange

■ Open the front panel

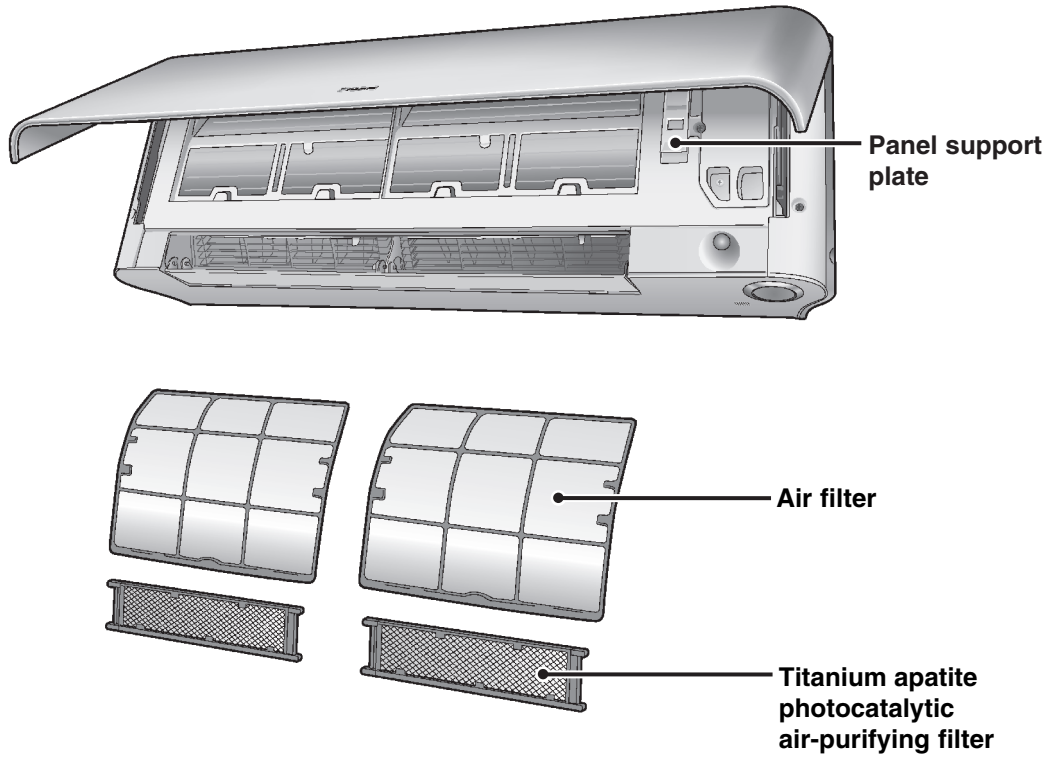

**Outdoor Unit**


• Appearance of the outdoor unit may differ from some models.

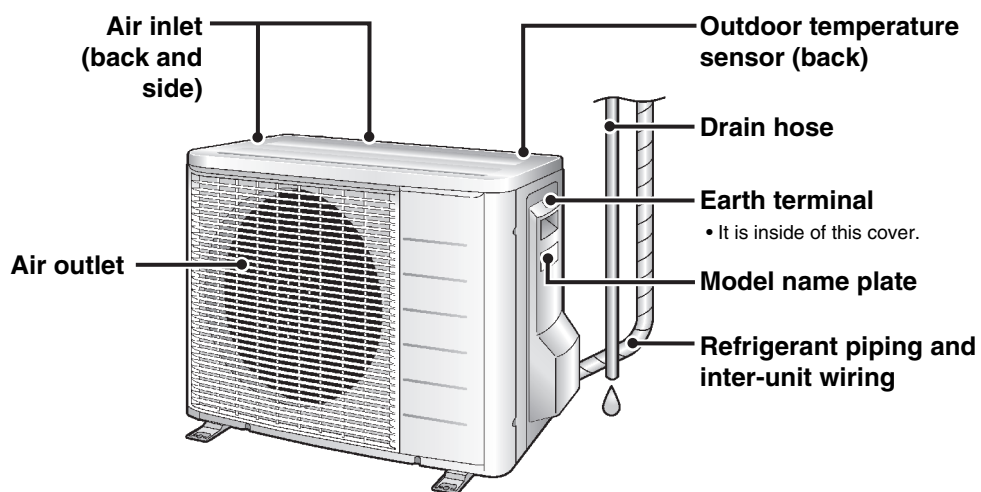

# Name of Parts

## Remote Controller

### Signal transmitter

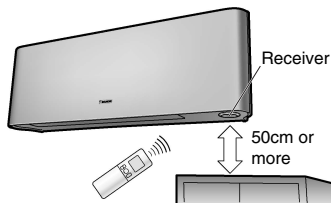


- To use the remote controller, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is approx. 6m. Make sure that there are no obstacles within 50cm under the signal receiver. Such obstacles, if any, may have an adverse influence on the reception performance of the receiver and the reception distance may be shortened.

### FAN setting button

- It selects the airflow rate setting. [▶ Page 14](#)

### POWERFUL button

- POWERFUL operation. [▶ Page 13](#)

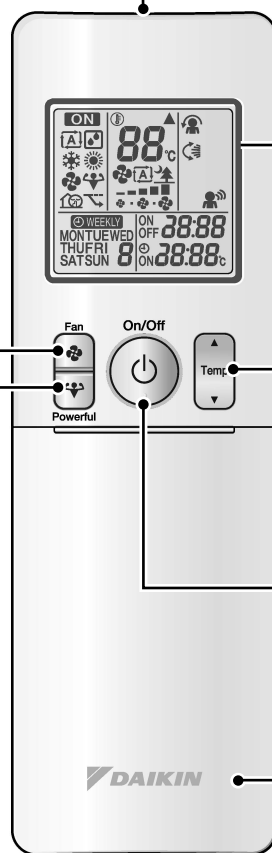

### Display (LCD)

- It displays the current settings. (In this illustration, each section is shown with its displays on for the purpose of explanation.)

### TEMPERATURE adjustment buttons

- It changes the temperature setting. [▶ Page 12](#)

### ON/OFF button


- Press this button once to start operation. Press once again to stop it. [▶ Page 11](#)

### Front cover

- Open the front cover. [▶ Page 8](#)

Model      ARC466A1

■ Open the front cover

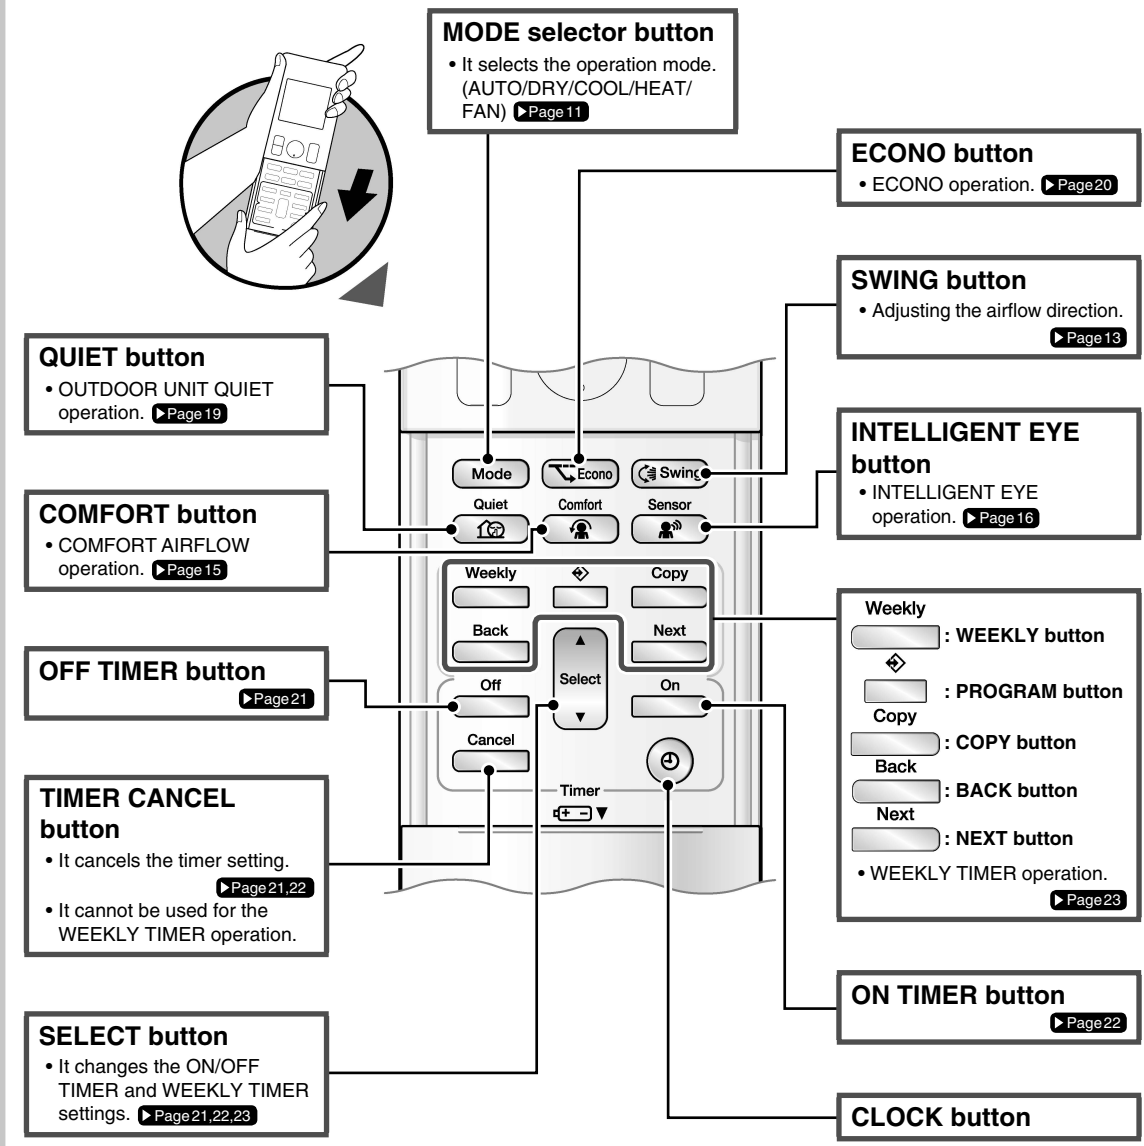

## 2.1.2 AUTO · DRY · COOL · HEAT · FAN Operation



# AUTO · DRY · COOL · HEAT · FAN Operation




The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

### To start operation

#### 1. Press **Mode** and select a operation mode.


- Each pressing of the button advances the mode setting in sequence.



#### 2. Press **On/Off**.

- “**ON**” is displayed on the LCD.
- The multi-monitor lamp lights up. The colour of the lamp varies depending on the operation mode.

Operation	Multi-monitor lamp
AUTO	Red/Blue
DRY	Green
COOL	Blue
HEAT	Red
FAN	White

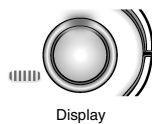

Display


### To stop operation

Press **On/Off** again.

- “**ON**” disappears from the LCD.
- The multi-monitor lamp goes off.

### NOTE

MODE	Notes on each operation mode
HEAT	<ul style="list-style-type: none"> <li>• Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.</li> <li>• The heat pump system heats the room by circulating hot air around all parts of the room. After the start of HEAT operation, it takes some time before the room gets warmer.</li> <li>• In HEAT operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.</li> <li>• During defrosting operation, hot air does not flow out of indoor unit.</li> </ul>
COOL	<ul style="list-style-type: none"> <li>• This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.</li> </ul>
DRY	<ul style="list-style-type: none"> <li>• The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.</li> </ul>
AUTO	<ul style="list-style-type: none"> <li>• In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.</li> <li>• The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.</li> </ul>
FAN	<ul style="list-style-type: none"> <li>• This mode is valid for fan only.</li> </ul>

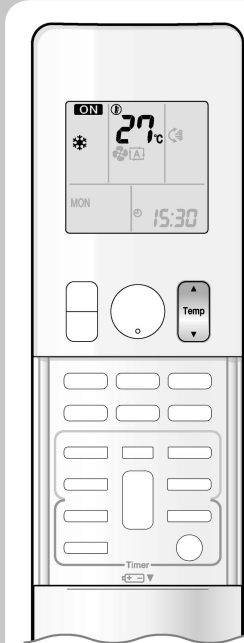

## ■ To change the temperature setting

Press .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.

COOL operation	HEAT operation	AUTO operation	DRY or FAN operation
18-32°C	10-30°C	18-30°C	The temperature setting is not variable.
Press ▲ to raise the temperature and press ▼ to lower the temperature.			

## ■ Operating conditions

### ■ Recommended temperature setting

- For cooling: 26-28°C
- For heating: 20-24°C

### ■ Tips for saving energy

- Be careful not to cool (heat) the room too much.  
Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain.  
Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every 2 weeks.

### ■ Notes on the operating conditions

- The outdoor unit consumes some power to have its electric components work even while it is not operating.  
Connecting outdoor unit RXG25/35: 1-15W  
Other outdoor units: 15-20W  
The outdoor unit consumes 40 to 55W of power at the time of compressor preheating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.


MODE	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature : <2/3/4/5MXS> -10-46°C <RXG> -10-46°C Indoor temperature : 18-32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.)</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>
HEAT	Outdoor temperature : <2MXS> -10-24°C <3/4/5MXS> -15-24°C <RXG> -15-24°C Indoor temperature : 10-30°C	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> </ul>
DRY	Outdoor temperature : <2/3/4/5MXS> -10-46°C <RXG> -10-46°C Indoor temperature : 18-32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

## 2.1.3 Adjusting the Airflow Direction and Rate



# Adjusting the Airflow Direction and Rate

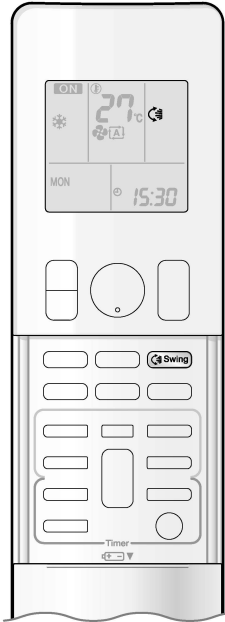


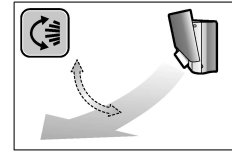
You can adjust the airflow direction to increase your comfort.

### ■ To start auto swing

#### Upper and lower airflow direction

Press  **Swing**.


- “” is displayed on the LCD.
- The flaps (horizontal blades) will begin to swing.



### ■ To set the flaps at desired position


- This function is effective while flaps are in auto swing mode.


Press  **Swing** when the flaps have reached the desired position.

- “” disappears from the LCD.


### ■ To adjust the louvers at desired position

**Hold the knob and move the louvers.**

- You will find a knob on the left-side and the right-side blades.
- When the unit is installed in the corner of a room, the direction of the louvers (vertical blades) should be facing away from the wall.  
If they face the wall, the wall will block off the wind, causing the cooling (or heating) efficiency to drop.
- If the flaps are in the way, press  on the remote controller to move the flaps out of the way and then adjust the louvers.

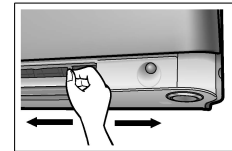


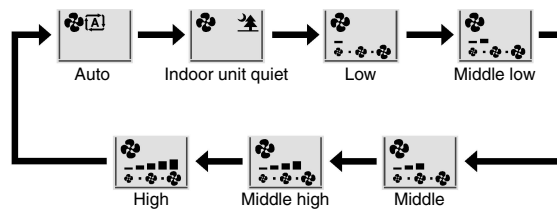


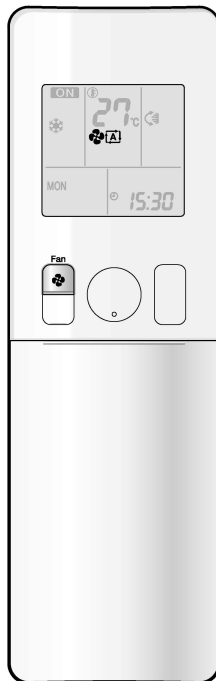


### ■ To adjust the airflow rate setting

Press .

- Each pressing of  advances the airflow rate setting in sequence.




- When the airflow is set to “”, indoor unit quiet operation will start and the noise from the unit will become quieter.
- In indoor unit quiet operation, the airflow rate is set to a weak level.
- In DRY mode, the airflow rate setting is not variable.

## NOTE

### ■ Note on the angles of the flaps

- The flaps swinging range depends on the operation. (See the figure.)

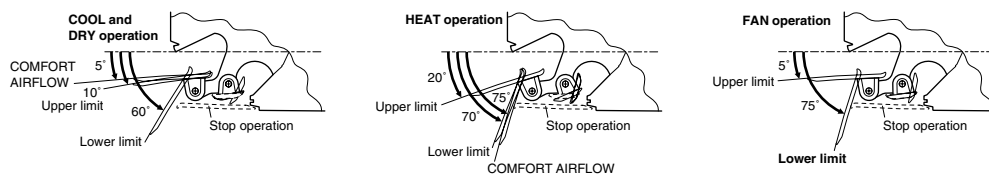

### ■ Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.
- If the air conditioner is operated in COOL or DRY operation with the flaps kept stopped in the downward direction, the flaps will automatically start operating in approximately an hour in order to prevent dew condensation.


## ⚠ CAUTION

- Always use a remote controller to adjust the angles of the flaps. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

## 2.1.4 COMFORT AIRFLOW Operation




# COMFORT AIRFLOW Operation

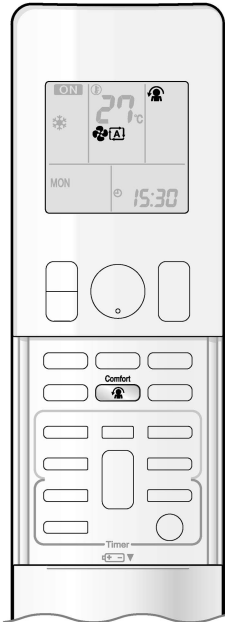

The flow of air will be in the upward direction while in COOL operation and in the downward direction while in HEAT operation, which will provide a comfortable wind that will not come in direct contact with people.


### ■ To start COMFORT AIRFLOW operation


Press .

- “” is displayed on the LCD.
- Airflow rate is set to Auto.  
COOL/DRY: The flaps will go up.  
HEAT: The flaps will go down.


### ■ To cancel COMFORT AIRFLOW operation

Press  again.

- The flaps will return to the memory position from before COMFORT AIRFLOW operation.
- “” disappears from the LCD.

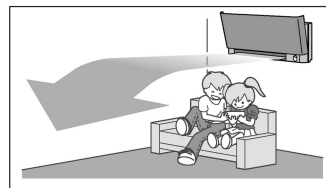

COOL operation

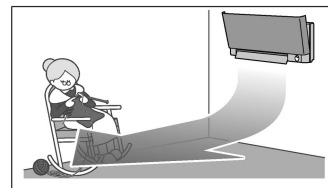

HEAT operation

### NOTE


#### ■ Notes on COMFORT AIRFLOW operation

- The flaps position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time.  
Priority is given to the function of whichever button is pressed last.
- The airflow rate will be set to Auto. If the upper and lower airflow direction is selected, the COMFORT AIRFLOW operation will be canceled.

## 2.1.5 INTELLIGENT EYE Operation




# INTELLIGENT EYE Operation

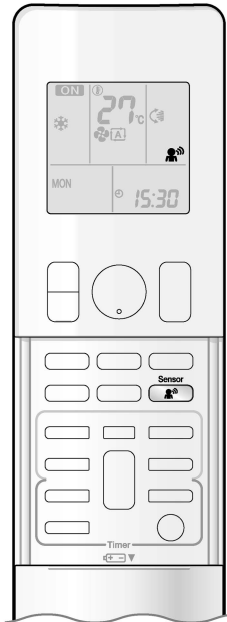


“INTELLIGENT EYE” is the infrared sensor which detects the human movement. If nobody in the room for more than 20 minutes, the operation automatically changes to energy saving operation.

### ■ To start INTELLIGENT EYE operation


Press  .

- “” is displayed on the LCD.
- The INTELLIGENT EYE lamp lights up.

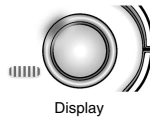

### ■ To cancel INTELLIGENT EYE operation

Press  again.

- “” disappears from the LCD.
- The INTELLIGENT EYE lamp goes off.



# INTELLIGENT EYE Operation

**[Example]**

**When somebody in the room**

- **Normal operation**
  - The air conditioner is in normal operation while the sensor is detecting the movement of people.



**When nobody in the room**

- **20 minutes after, start energy saving operation.**
  - The set temperature is shifted in  $\pm 2^{\circ}\text{C}$  steps.



**Somebody back in the room**

- **Back to normal operation.**
  - The air conditioner will return to normal operation when the sensor detects the movement of people again.

## INTELLIGENT EYE operation is useful for energy saving


■ **Energy saving operation**

- If no presence detected in the room for 20 minutes, the energy saving operation will start.
- This operation changes the temperature  $-2^{\circ}\text{C}$  in HEAT /  $+2^{\circ}\text{C}$  in COOL /  $+1^{\circ}\text{C}$  in DRY operation from set temperature.
- This operation decreases the airflow rate slightly in FAN operation only.

## NOTE

■ **Notes on INTELLIGENT EYE operation**

- Application range is as follows.

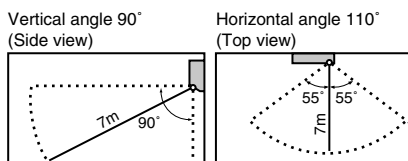

- Sensor may not detect moving objects further than 7m away. (Check the application range.)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during POWERFUL operation.
- NIGHT SET mode [▶Page 21](#) will not go on during use of INTELLIGENT EYE operation.


## CAUTION

- Do not place large objects near the sensor.  
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

## 2.1.6 POWERFUL Operation




# POWERFUL Operation

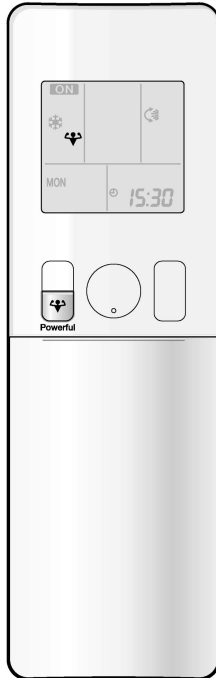

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.


### ■ To start POWERFUL operation

Press  during operation.


- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” is displayed on the LCD.

### ■ To cancel POWERFUL operation

Press  again.



- “” disappears from the LCD.
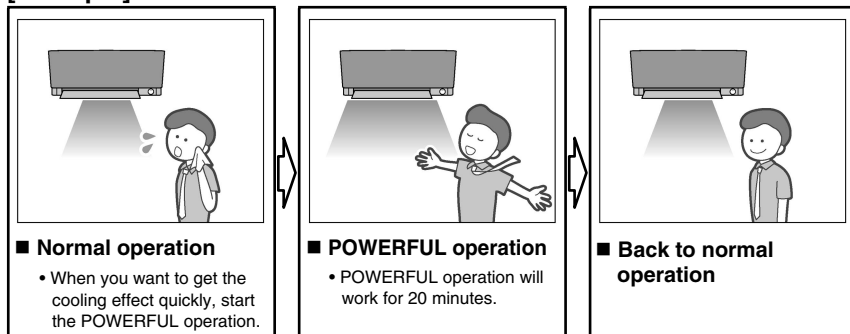
### [Example]



## NOTE


### ■ Notes on POWERFUL operation

- When using POWERFUL operation, there are some functions which are not available.
- POWERFUL operation cannot be used together with ECONO, COMFORT AIRFLOW or OUTDOOR UNIT QUIET operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT operation**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting. The temperature and airflow settings are not variable.
- **In DRY operation**  
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN operation**  
The airflow rate is fixed to the maximum setting.
- **In AUTO operation**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting.

## 2.1.7 OUTDOOR UNIT QUIET Operation




# OUTDOOR UNIT QUIET Operation

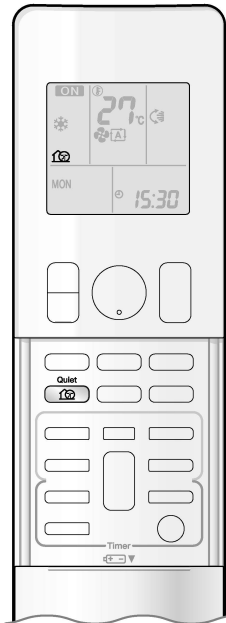

OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during the night.


### ■ To start OUTDOOR UNIT QUIET operation

Press .

- “” is displayed on the LCD.

### ■ To cancel OUTDOOR UNIT QUIET operation

Press  again.

- “” disappears from the LCD.


**[Example]** Using the OUTDOOR UNIT QUIET operation during the night.



- The noise level of the outdoor unit will be lower.  
This is convenient when you need to consideration for your neighborhood.

## NOTE


### ■ Notes on OUTDOOR UNIT QUIET operation

- This function is available in COOL, HEAT, and AUTO operation.  
This is not available in FAN and DRY operation.
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time.  
Priority is given to the function of whichever button is pressed last.
- Even the operation is stopped using the remote controller or the indoor unit ON/OFF switch when using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if they have been already dropped low enough.

## 2.1.8 ECONO Operation



# ECONO Operation

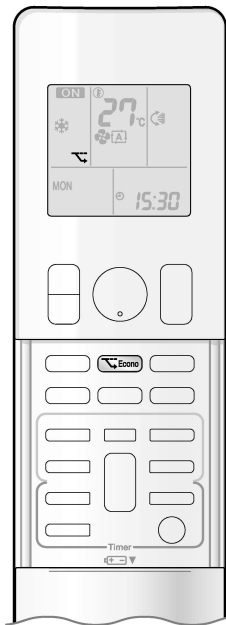

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value. This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.


### ■ To start ECONO operation

Press  during operation.

- “” is displayed on the LCD.

### ■ To cancel ECONO operation

Press  again.

- “” disappears from the LCD.


#### [Example]

##### Normal operation




- In case the air conditioner and other appliances which require high power consumption are used at same time, a circuit breaker may trip if the air conditioner operate with its maximum capacity.

##### ECONO operation

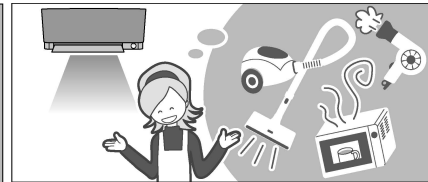



- The maximum power consumption of the air conditioner is limited by using ECONO operation. The circuit breaker will hardly trip even if the air conditioner and other appliances are used at same time.

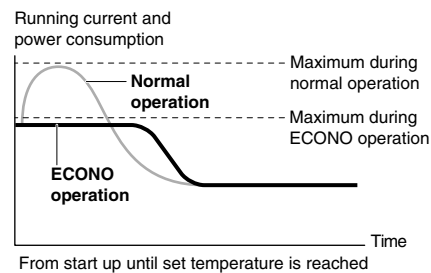

- This diagram is a representation for illustrative purposes only. The maximum running current and power consumption of the air conditioner in ECONO operation vary with the connecting outdoor unit.

## NOTE


### ■ Notes on ECONO operation

- ECONO operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY, and HEAT operation.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- If the level of power consumption is already low, ECONO operation will not drop the power consumption.

## 2.1.9 OFF TIMER Operation



# OFF TIMER Operation

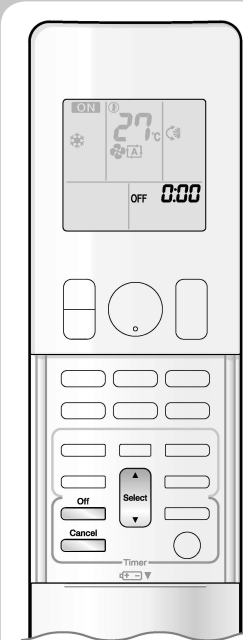

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

### ■ To use OFF TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.

#### 1. Press .



- "0:00" is displayed on the LCD.
- "OFF" blinks.

- "⊕" and day of the week disappear from the LCD.


#### 2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the time setting rapidly.

#### 3. Press again.

- "OFF" and setting time are displayed on the LCD.
- The multi-monitor lamp blinks twice.

The TIMER lamp periodically lights orange. ▶ [Page 5](#)



### ■ To cancel OFF TIMER operation

#### Press .

- "OFF" and setting time disappear from the LCD.
- "⊕" and day of the week are displayed on the LCD.

## NOTE

### ■ Notes on TIMER operation

- When TIMER is set, the present time is not displayed.
- Once you set ON/OFF TIMER, the time setting is kept in the memory. The memory is canceled when remote controller batteries are replaced.
- When operating the unit via the ON/OFF TIMER, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

### ■ NIGHT SET mode


- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.



## 2.1.10 ON TIMER Operation



# ON TIMER Operation

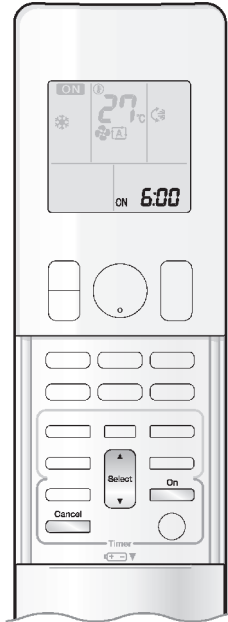

### ■ To use ON TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.

#### 1. Press .



- "6:00" is displayed on the LCD.
- "ON" blinks.


- "⊕" and day of the week disappear from the LCD.

#### 2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes.  
Holding down either button changes the setting rapidly.

#### 3. Press again.

- "ON" and setting time are displayed on the LCD.
- The multi-monitor lamp blinks twice.  
The TIMER lamp periodically lights orange. ▶Page5

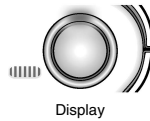


### ■ To cancel ON TIMER operation

#### Press .

- "ON" and setting time disappear from the LCD.
- "⊕" and day of the week are displayed on the LCD.

### ■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the 2 timers is shown below.



## NOTE

### ■ In the following cases, set the timer again.

- After a breaker has turned off.
- After a power failure.
- After replacing batteries in the remote controller.

## 2.1.11 WEEKLY TIMER Operation



# WEEKLY TIMER Operation


Up to 4 timer settings can be saved for each day of the week. It is convenient if the WEEKLY TIMER is set according to the family's life style.

### ■ Using in these cases of WEEKLY TIMER

**Example:** The same timer settings are made for the week from Monday through Friday while different timer settings are made for the weekend.

<p><b>[Monday]</b></p>	<p>Make timer settings up to programs 1-4. ▶Page24</p>
<p><b>[Tuesday to Friday]</b></p>	<p>Use the copy mode to make settings for Tuesday to Friday, because these settings are the same as those for Monday. ▶Page26</p>
<p><b>[Saturday]</b></p>	<p>No timer settings</p>
<p><b>[Sunday]</b></p>	<p>Make timer settings up to programs 1-4. ▶Page24</p>


- Up to 4 reservations per day and 28 reservations per week can be set in the WEEKLY TIMER. The effective use of the copy mode ensures ease of making reservations.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn off time of each day can be set. This will turn off the air conditioner automatically if the user forgets to turn it off.

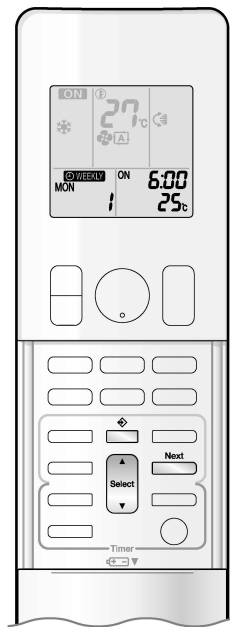


## ■ To use WEEKLY TIMER operation

### Setting mode

- Make sure the day of the week and time are set. If not, set the day of the week and time.

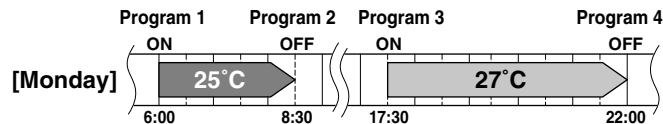

### Setting Displays



### 1. Press .

- The day of the week and the reservation number of the current day will be displayed.
- 1 to 4 settings can be made per day.



### 2. Press to select the desired day of the week and reservation number.


- Pressing  changes the reservation number and the day of the week.


### 3. Press .

- The day of the week and reservation number will be set.
- "WEEKLY" and "ON" blink.

### 4. Press to select the desired mode.

- Pressing  changes "ON" or "OFF" setting in sequence.
- Pressing  alternates the following items appearing on the LCD in rotational sequence.




- In case the reservation has already been set, selecting "blank" deletes the reservation.
- Go to step 9 if "blank" is selected.
- To return to the day of the week and reservation number setting, press .

### 5. Press .


- The ON/OFF TIMER mode will be set.
- "WEEKLY" and the time blink.




# WEEKLY TIMER Operation

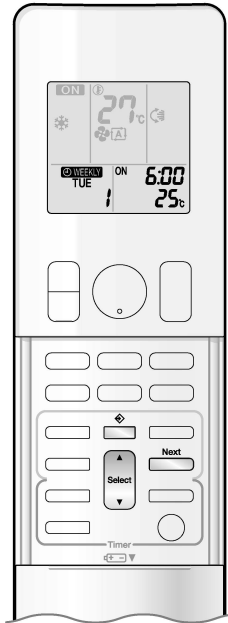


## 6. Press to select the desired time.

- The time can be set between 0:00 and 23:50 in 10 minute intervals.
- To return to the ON/OFF TIMER mode setting, press .
- Go to step 9 when setting the OFF TIMER.


## 7. Press .


- The time will be set.
- “ WEEKLY” and the temperature blink.

## 8. Press to select the desired temperature.



- The temperature can be set between 10°C and 32°C.  
COOL or AUTO: The unit operates at 18°C even if it is set at 10 to 17°C.  
HEAT or AUTO: The unit operates at 30°C even if it is set at 31 to 32°C.
- To return to the time setting, press .
- The set temperature is only displayed when the mode setting is on.

## 9. Press .

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the multi-monitor lamp.
- The temperature is set while in ON TIMER operation, and the time is set while in OFF TIMER operation.
- The next reservation screen will appear.
- To continue further settings, repeat the procedure from step 4.
- The multi-monitor lamp blinks twice.  
The TIMER lamp periodically lights orange. 
- The multi-monitor lamp will not blink orange if all the reservation settings are deleted.

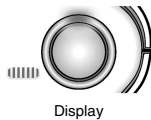



## 10. Press to complete the setting.

- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- A reservation made once can be easily copied and the same settings used for another day of the week. Refer to copy mode. 

### NOTE


#### ■ Notes on WEEKLY TIMER operation

- Do not forget to set the clock on the remote controller first.
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with WEEKLY TIMER. Other settings for ON TIMER are based on the settings just before the operation.
- Both WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will go into standby state, and “ WEEKLY” will disappear from the LCD. When ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Shutting the breaker off, power failure, and other similar events will render operation of the indoor unit's internal clock inaccurate. Reset the clock.

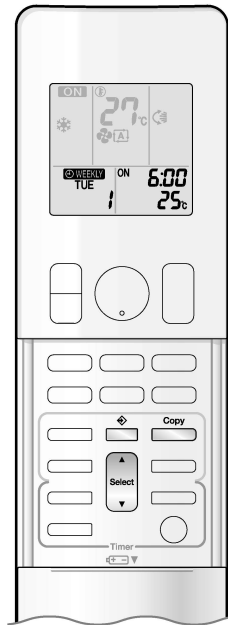


### Copy mode

- A reservation made once can be copied to another day of the week. The whole reservation of the selected day of the week will be copied.

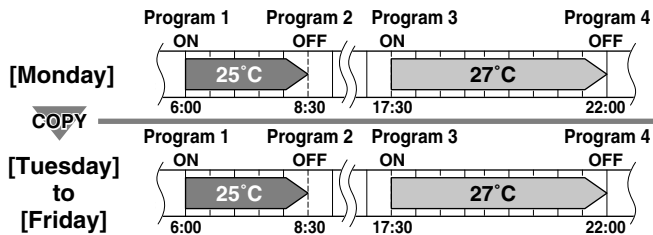

### Setting Displays

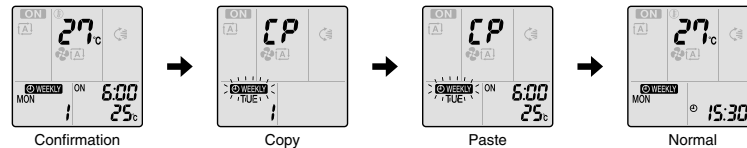

1. Press .
2. Press to confirm the day of the week to be copied.
3. Press .
  - The whole reservation of the selected day of the week will be copied.
4. Press to select the destination day of the week.
5. Press .
  - Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the multi-monitor lamp.
  - The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
  - To continue copying the settings to other days of the week, repeat step 4 and step 5.
  - The multi-monitor lamp blinks twice. The TIMER lamp periodically lights orange.
6. Press to complete the setting.
  - "WEEKLY" is displayed on the LCD and WEEKLY TIMER operation is activated.

### NOTE


#### ■ Note on copy mode

- The entire reservation of the source day of the week is copied in the copy mode.

In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press and change the settings in the steps of setting mode. ▶Page24




# WEEKLY TIMER Operation

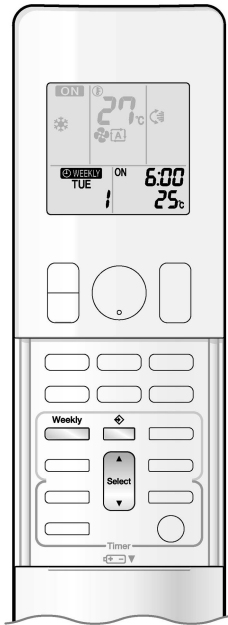

## ■ Confirming a reservation

- The reservation can be confirmed.

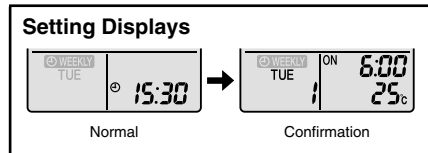

**1. Press** .

- The day of the week and the reservation number of the current day will be displayed.

**2. Press** **to select the day of the week and the reservation number to be confirmed.**

- Pressing displays the reservation details.
- To change the confirmed reserved settings, select the reservation number and press .  
The mode is switched to setting mode. Go to setting mode step **2.** [▶Page 24](#)

**3. Press** **to exit confirming mode.**


## ■ To deactivate WEEKLY TIMER operation

Press while “ WEEKLY” is displayed on the LCD.

- The “ WEEKLY” will disappear from the LCD.
- The TIMER lamp goes off.
- To reactivate the WEEKLY TIMER operation, press again.
- If a reservation deactivated with is activated once again, the last reservation mode will be used.

### CAUTION

- If not all the reservation settings are reflected, deactivate the WEEKLY TIMER operation once. Then press again to reactivate the WEEKLY TIMER operation.

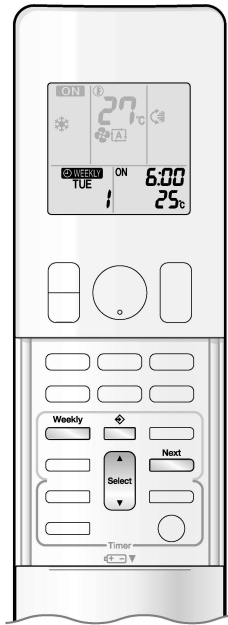

## ■ To delete reservations

### The individual reservation

#### 1. Press .

- The day of the week and the reservation number will be displayed.


#### 2. Press to select the day of the week and the reservation number to be deleted.


#### 3. Press .

- "WEEKLY" and "ON" or "OFF" blink.

#### 4. Press and select "blank".

- Pressing  changes ON/OFF TIMER mode.

- Pressing  alternates the following items appearing on the LCD in rotational sequence.
- The reservation will be no setting with selecting "blank".



#### 5. Press .

- The selected reservation will be deleted.

#### 6. Press .

- If there are still other reservations, WEEKLY TIMER operation will be activated.

### The reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.
- It can be used while confirming or setting reservations.

#### 1. Press to select the day of the week to be deleted.

#### 2. Hold for 5 seconds.

- The reservation of the selected day of the week will be deleted.

### All reservations

#### Hold for 5 seconds while normal display.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone.
- This operation is not effective while WEEKLY TIMER is being set.
- All reservations will be deleted.

## 2.1.12 Note for Multi System

# Note for Multi System

Multi system has one outdoor unit connected to multiple indoor units.


### ■ Selecting the operation mode

#### With the priority room setting present but inactive or not present.

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode as the first unit.

Otherwise, they will enter the standby state, and the multi-monitor lamp will flash: this does not indicate malfunction.

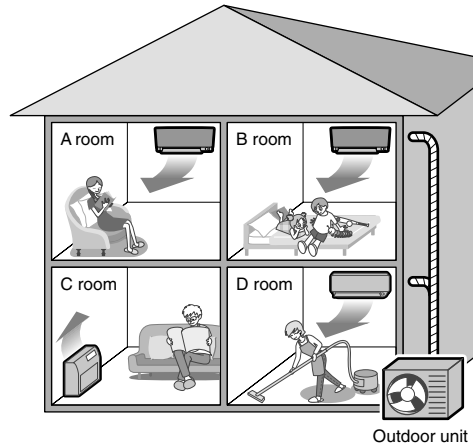

### NOTE

#### ■ Notes on operation mode for multi system

- COOL, DRY and FAN operation may be used at the same time.
- AUTO operation automatically selects COOL operation or HEAT operation based on the room temperature. Therefore, AUTO operation is available when selecting the same operation mode as that of the room with the first unit to be turned on.

### ⚠ CAUTION

- Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is FAN operation, then using HEAT operation in any room after this will give priority to HEAT operation. In this situation, the air conditioner running in FAN operation will go on standby, and the multi-monitor lamp will flash.

#### With the priority room setting active.

Refer to priority room setting on the next page.

### ■ NIGHT QUIET mode (Available only for COOL operation)

NIGHT QUIET mode requires initial programming during installation. Please consult your retailer or dealer for assistance. NIGHT QUIET mode reduces the operation noise of the outdoor unit during the nighttime hours to prevent annoyance to neighbors.

- The NIGHT QUIET mode is activated when the temperature drops 5°C or more below the highest temperature recorded that day. Therefore, when the temperature difference is less than 5°C, this function will not be activated.
- NIGHT QUIET mode reduces slightly the cooling efficiency of the unit.

### ■ OUTDOOR UNIT QUIET operation

Refer to OUTDOOR UNIT QUIET operation. ▶ Page 19

#### With the priority room setting present but inactive or not present.

When using the OUTDOOR UNIT QUIET operation feature with the multi system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers.

When clearing OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using their remote controller.

However OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms.

We recommend you release all rooms using their remote controllers.

#### With the priority room setting active.

Refer to priority room setting on the next page.



## ■ COOL/HEAT mode lock

The COOL/HEAT mode lock requires initial programming during installation. Please consult your authorized dealer for assistance. The COOL/HEAT mode lock sets the unit forcibly to either COOL or HEAT operation. This function is convenient when you wish to set all indoor units connected to the multi system to the same operation mode.

### NOTE

- The COOL/HEAT mode lock cannot be activated together with the priority room setting.

## ■ Priority room setting

The priority room setting requires initial programming during installation. Please consult your authorized dealer for assistance. The room designated as the priority room takes priority in the following situations.

### Operation mode priority

- As the operation mode of the priority room takes precedence, the user can select a different operation mode from other rooms.

#### [Example]

- Room A is the priority room in the examples.

When COOL operation is selected in room A while operating the following modes in room B, C and D :

Operation mode in room B, C and D	Status of room B, C and D when the unit in room A is in COOL operation
COOL or DRY or FAN	Current operation mode maintained
HEAT	The unit enters standby mode. Operation resumes when the room A unit stops operating.
AUTO	If the unit is set to COOL operation, it continues. If the unit is set to HEAT operation, it enters standby mode. Operation resumes when the room A unit stops operating.

### Priority when POWERFUL operation is used

#### [Example]

- Room A is the priority room in the examples.

The indoor units in rooms A, B, C and D are all operating. If the unit in room A enters POWERFUL operation, operation capacity will be concentrated in room A. In such a case, the cooling (heating) efficiency of the units in room B, C and D may be slightly reduced.

### Priority when using OUTDOOR UNIT QUIET operation

#### [Example]

- Room A is the priority room in the examples.

Just by setting the unit in room A to QUIET operation, the air conditioner starts OUTDOOR UNIT QUIET operation. You don't have to set all the operated indoor units to QUIET operation.

## 2.2 FTXS, FVXS Series - ARC452A1, A3

### 2.2.1 Manual Contents and Reference Page

Model Series	Wall Mounted Type		Floor Standing Type
	FTXS20-50G2V1B FTXS20-50J2V1B	FTXS60/71GV1B	FVXS25-50FV1B
<b>Read Before Operation</b>			
Names of Parts	155	158	161
<b>Operation</b>			
AUTO · DRY · COOL · HEAT · FAN Operation ★	164	164	164
Adjusting the Airflow Direction	166	168	170
COMFORT AIRFLOW and INTELLIGENT EYE Operation	172	175	—
POWERFUL Operation ★	178	178	178
OUTDOOR UNIT QUIET Operation ★	179	179	179
ECONO Operation ★	180	180	180
TIMER Operation ★	181	181	181
WEEKLY TIMER Operation ★	183	183	183
Note for Multi System ★	188	188	188
Drawing No.	3P207037-1D 3P266959-2A	3P248442-3	3P191290-1K


★: The illustrations are for FTXS20-50G2V1B model as representative.

## 2.2.2 Names of Parts

FTXS20/25/35/42/50G2V1B, FTXS20/25/35/42/50J2V1B

# Names of parts

## ■ Indoor Unit

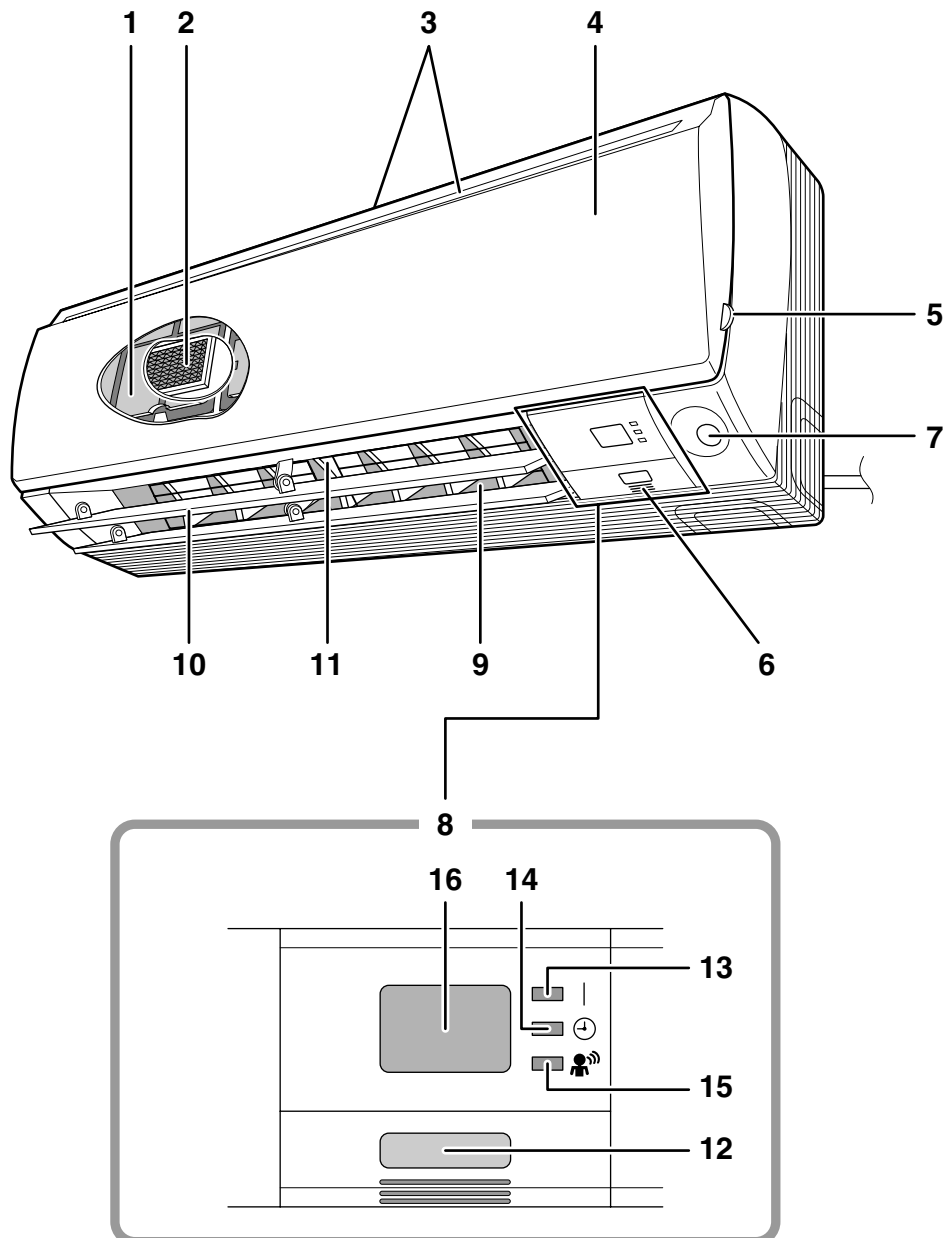

**■ Indoor Unit**

- 1. Air filter
- 2. Titanium Apatite Photocatalytic Air-Purifying Filter:
  - These filters are attached to the inside of the air filters.
- 3. Air inlet
- 4. Front panel
- 5. Panel tab
- 6. Room temperature sensor:
  - It senses the air temperature around the unit.
- 7. INTELLIGENT EYE sensor
- 8. Display
- 9. Air outlet
- 10. Horizontal blades (flaps)
- 11. Vertical blades (louvers):
  - The louvers are inside of the air outlet.

**12. Indoor Unit ON/OFF switch**

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

**13. Operation lamp (green)**


**14. TIMER lamp (yellow)**

**15. INTELLIGENT EYE lamp (green)**

**16. Signal receiver:**

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
  - Operation start .....beep-beep
  - Settings changed.....beep
  - Operation stop.....beeeeeep

## ■ Remote Controller

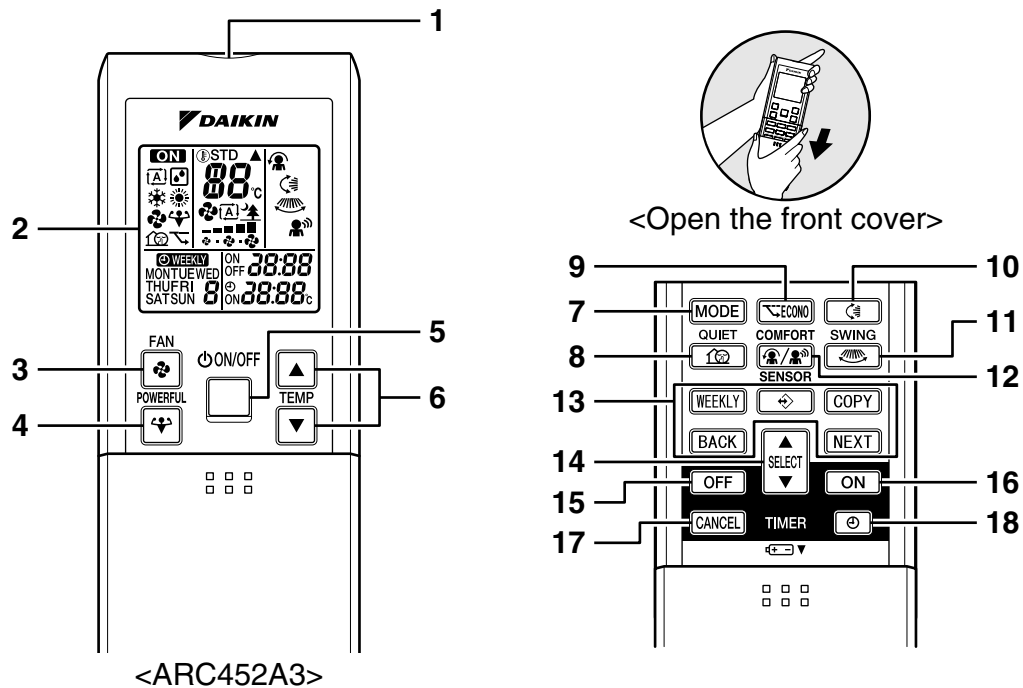


- 1. Signal transmitter:**
  - It sends signals to the indoor unit.
- 2. Display:**
  - It displays the current settings.  
(In this illustration, each section is shown with its displays ON for the purpose of explanation.)
- 3. FAN setting button:**
  - It selects the airflow rate setting.
- 4. POWERFUL button:**
  - POWERFUL operation
- 5. ON/OFF button:**
  - Press this button once to start operation.  
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
- 7. MODE selector button:**
  - It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)
- 8. QUIET button:**
  - OUTDOOR UNIT QUIET operation
- 9. ECONO button:**
  - ECONO operation
- 10. SWING button:**
  - Horizontal blades (flaps)
- 11. SWING button:**
  - Vertical blades (louvers)
- 12. COMFORT/SENSOR button:**
  - COMFORT AIRFLOW and INTELLIGENT EYE operation
- 13. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
  - WEEKLY TIMER operation
- 14. SELECT button:**
  - It changes the ON/OFF TIMER and WEEKLY TIMER settings.
- 15. OFF TIMER button**
- 16. ON TIMER button**
- 17. TIMER CANCEL button:**
  - It cancels the timer setting.
  - It cannot be used for the WEEKLY TIMER operation.
- 18. CLOCK button**

FTXS60/71GV1B

# Names of Parts

## ■ Indoor Unit

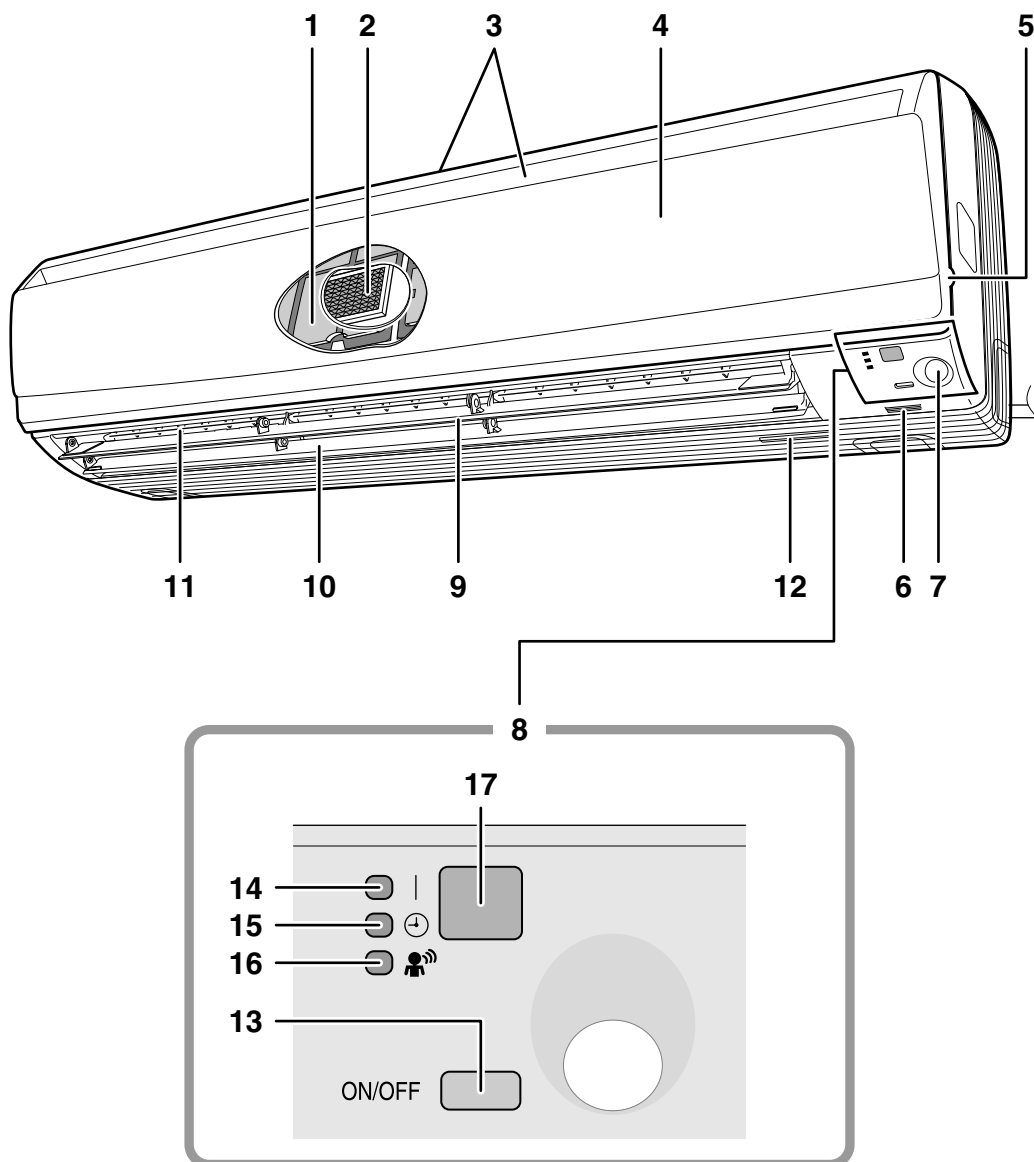

## ■ Indoor Unit

1. **Air filter**
2. **Titanium apatite photocatalytic air-purifying filter:**
  - These filters are attached to the inside of the air filters.
3. **Air inlet**
4. **Front panel**
5. **Panel tab**
6. **Room temperature sensor:**
  - It senses the air temperature around the unit.
7. **INTELLIGENT EYE sensor**
8. **Display**
9. **Air outlet**
10. **Flaps (horizontal blades)**
11. **Louvers (vertical blades):**
  - The louvers are inside of the air outlet.
12. **Model name plate**

### 13. Indoor unit ON/OFF switch:

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

### 14. OPERATION lamp (green)

### 15. TIMER lamp (yellow)


### 16. INTELLIGENT EYE lamp (green)

### 17. Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.
  - Operation start .....beep-beep
  - Settings changed.....beep
  - Operation stop.....long beep

# Names of Parts

## ■ Remote Controller

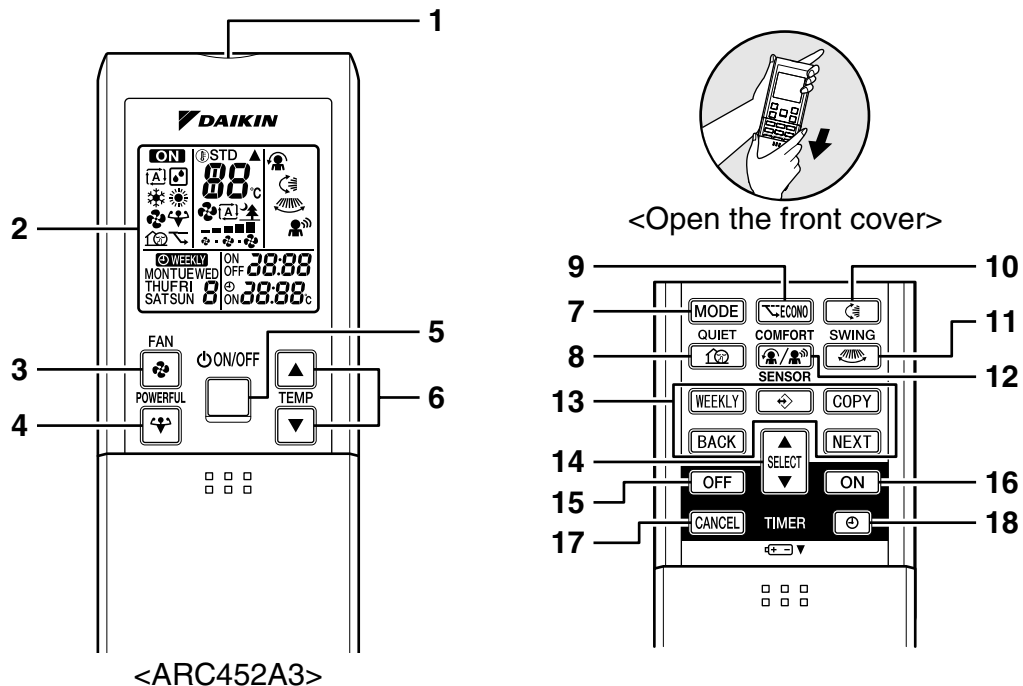


- 1. Signal transmitter:**
  - It sends signals to the indoor unit.
- 2. Display (LCD):**
  - It displays the current settings.  
(In this illustration, each section is shown with its displays on for the purpose of explanation.)
- 3. FAN setting button:**
  - It selects the airflow rate setting.
- 4. POWERFUL button:**
  - POWERFUL operation
- 5. ON/OFF button:**
  - Press this button once to start operation.  
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
- 7. MODE selector button:**
  - It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)
- 8. QUIET button:**
  - OUTDOOR UNIT QUIET operation
- 9. ECONO button:**
  - ECONO operation
- 10. SWING button:**
  - Flaps (horizontal blades)
- 11. SWING button:**
  - Louvers (vertical blades)
- 12. COMFORT/SENSOR button:**
  - COMFORT AIRFLOW and INTELLIGENT EYE operation
- 13. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
  - WEEKLY TIMER operation
- 14. SELECT button:**
  - It changes the ON/OFF TIMER and WEEKLY TIMER settings.
- 15. OFF TIMER button**
- 16. ON TIMER button**
- 17. TIMER CANCEL button:**
  - It cancels the timer setting.  
• It cannot be used for the WEEKLY TIMER operation.
- 18. CLOCK button**




FVXS25/35/50FV1B

# Names of parts

## ■ Indoor Unit

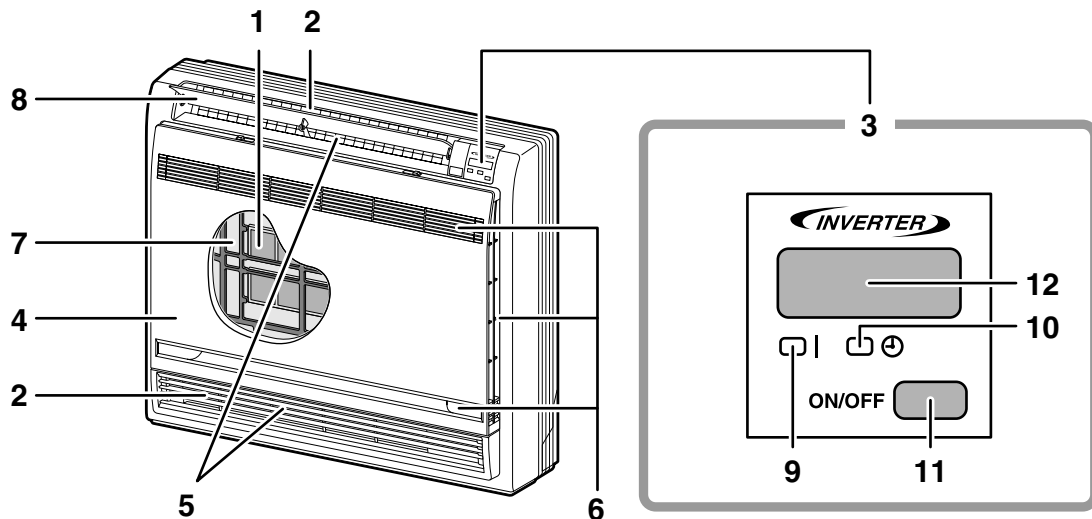

## ■ Opening the Front Panel

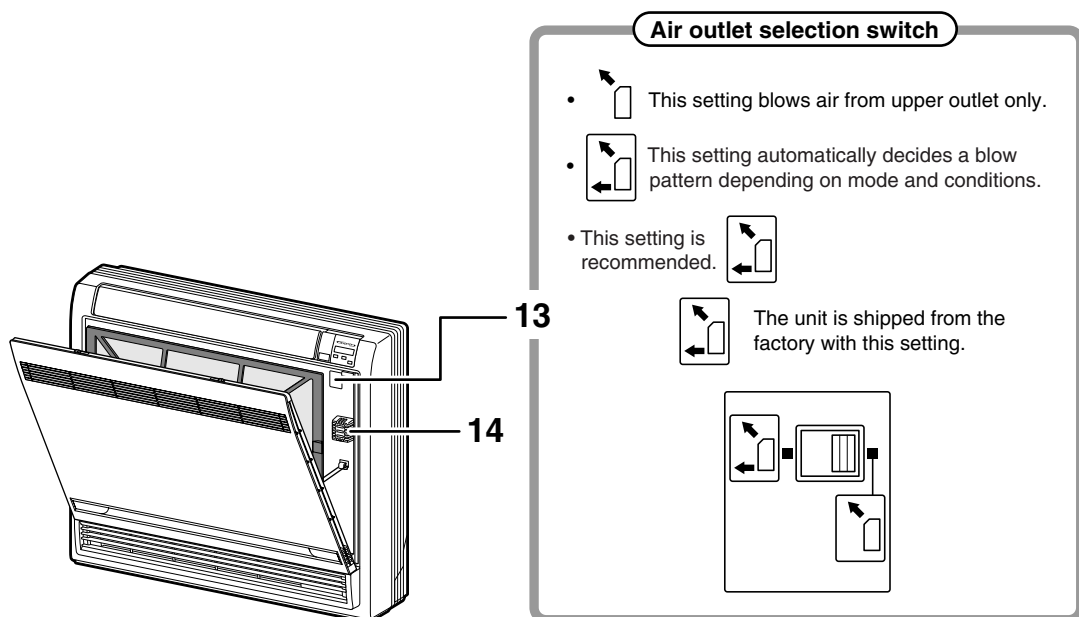

### ⚠ CAUTION

Before opening the front panel, be sure to stop the operation and turn the breaker OFF. Do not touch the metal parts on the inside of the indoor unit, as it may result in injury.

■ Indoor Unit

**1. Titanium Apatite Photocatalytic Air-Purifying Filter:**

- These filters are attached to the inside of the air filters.

**2. Air outlet**

**3. Display**

**4. Front panel**

**5. Vertical blades (louvers)**

- The louvers are inside of the air outlet.

**6. Air inlet**

**7. Air filter**

**8. Horizontal blade (flap)**

**9. Operation lamp (green)**

**10. TIMER lamp (yellow)**

**11. Indoor Unit ON/OFF switch:**

- Push this switch once to start operation. Push once again to stop it.

- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

**12. Signal receiver:**


- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
  - Operation start ..... beep-beep
  - Settings changed ..... beep
  - Operation stop..... beeeeeeep

**13. Air outlet selection switch**


**14. Room temperature sensor:**

- It senses the air temperature around the unit.


## ■ Remote Controller

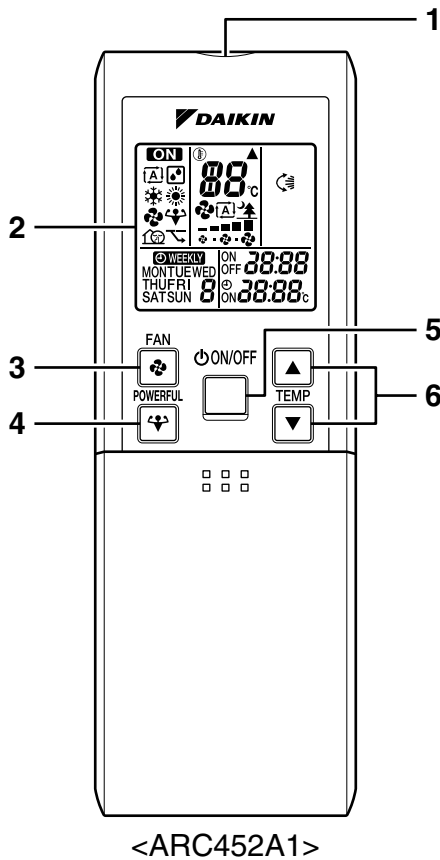

- 1. Signal transmitter:**
  - It sends signals to the indoor unit.
- 2. Display:**
  - It displays the current settings.  
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. FAN setting button:**
  - It selects the airflow rate setting.
- 4. POWERFUL button:**
  - POWERFUL operation
- 5. ON/OFF button:**
  - Press this button once to start operation.  
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
- 7. MODE selector button:**
  - It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)
- 8. QUIET button:**
  - OUTDOOR UNIT QUIET operation

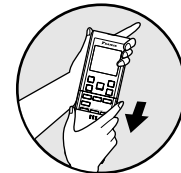

<Open the lid>

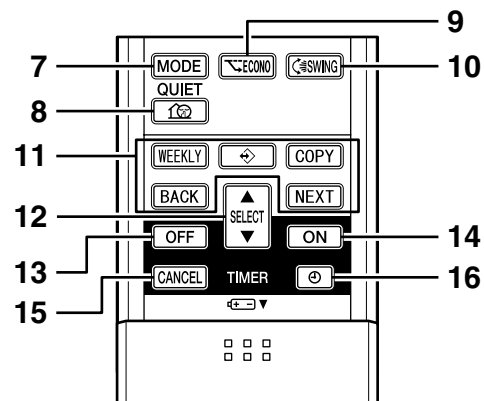

- 9. ECONO button:**
  - ECONO operation
- 10. SWING button:**
  - Adjusting the Airflow Direction
- 11. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
  - WEEKLY TIMER operation
- 12. SELECT button:**
  - It changes the ON/OFF TIMER and WEEKLY TIMER settings.
- 13. OFF TIMER button**
- 14. ON TIMER button**
- 15. TIMER CANCEL button:**
  - It cancels the timer setting.  
• It cannot be used for the WEEKLY TIMER operation.
- 16. CLOCK button**

## 2.2.3 AUTO · DRY · COOL · HEAT · FAN Operation

# AUTO · DRY · COOL · HEAT · FAN Operation



The air conditioner operates with the operation mode of your choice.  
From the next time on, the air conditioner will operate with the same operation mode.

### ■ To start operation

#### 1. Press “MODE selector button” and select a operation mode.


- Each pressing of the button advances the mode setting in sequence.

- : AUTO
- : DRY
- : COOL
- : HEAT
- : FAN



#### 2. Press “ON/OFF button”.

- The OPERATION lamp lights up.

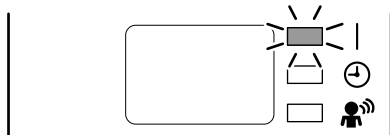


### ■ To stop operation


#### 3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.

### ■ To change the temperature setting




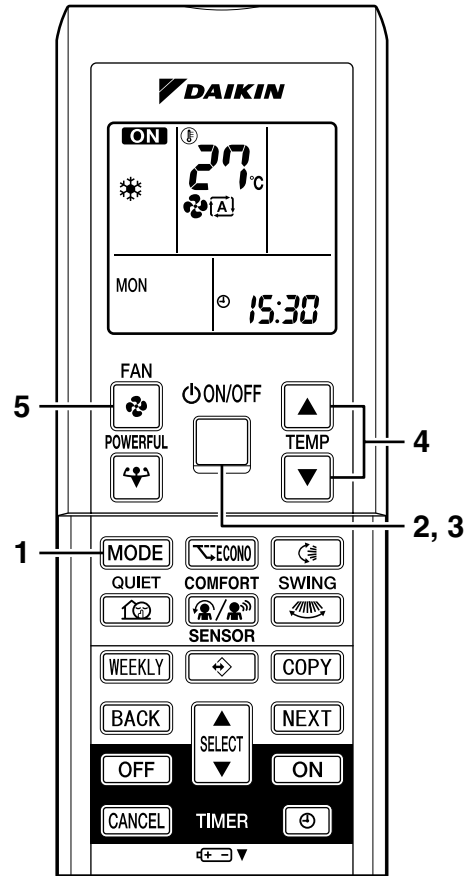

#### 4. Press “TEMPERATURE adjustment button”.




DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like. 

## ■ To change the airflow rate setting

### 5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The airflow rate setting is not variable.	Five levels of airflow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the airflow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

## NOTE

### ■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.
- A pinging sound may be heard during defrosting operation, which, however does not mean that the air conditioner has failures.

### ■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.

### ■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

### ■ Note on AUTO operation

- In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, manually change the set temperature.

### ■ Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.

## 2.2.4 Adjusting the Airflow Direction


FTXS20/25/35/42/50G2V1B, FTXS20/25/35/42/50J2V1B

# Adjusting the Airflow Direction


You can adjust the airflow direction to increase your comfort.

### ■ To adjust the horizontal blades (flaps)

1. Press “SWING button ”.

- “” is displayed on the LCD and the flaps will begin to swing.

2. When the flaps have reached the desired position, press “SWING button ” once more.


- The flaps will stop moving.
- “” disappears from the LCD.


### ■ To adjust the vertical blades (louvers)

3. Press “SWING button ”.





- “” is displayed on the LCD.

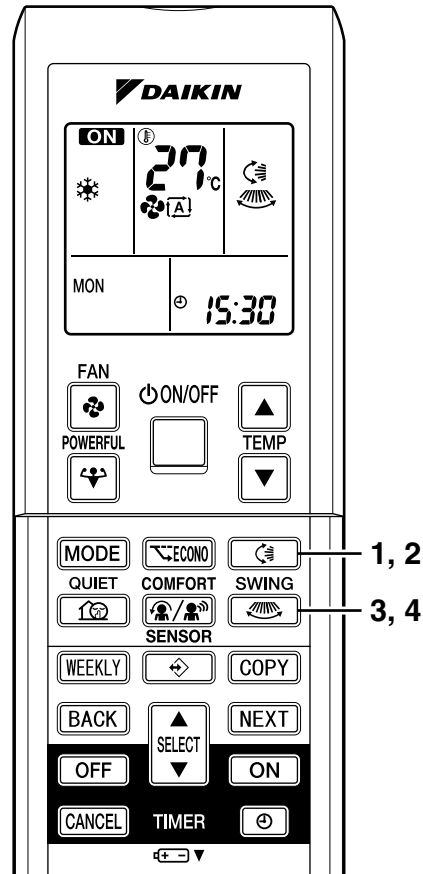4. When the louvers have reached the desired position, press the “SWING button ” once more.

- The louvers will stop moving.
- “” disappears from the LCD.



## ■ To start 3-D Airflow

1. 3. Press the “SWING button ” and the “SWING button ”:  
the “” and “” display will light up and the flap and louvers will move in turn.

## ■ To cancel 3-D Airflow

2. 4. Press either the “SWING button ” or the “SWING button ”.

## ■ COMFORT AIRFLOW operation

- Check COMFORT AIRFLOW operation in the section of “COMFORT AIRFLOW Operation” and “INTELLIGENT EYE Operation”.

## Notes on flaps and louvers angles

- When “SWING button” is selected, the flaps swinging range depends on the operation mode. (See the figure.)


### Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to be collected at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.


### ■ ATTENTION

- Always use a remote controller to adjust the angles of the flaps and louvers. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote controller to adjust the louvers angles. In side the air outlet, a fan is rotating at a high speed.


### In DRY mode or COOL mode



### In HEAT mode

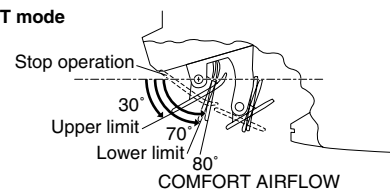

### In FAN mode

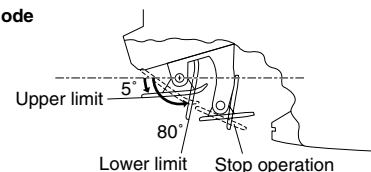

FTXS60/71GV1B


# Adjusting the Airflow Direction

You can adjust the airflow direction to increase your comfort.

## ■ To start auto swing


### Upper and lower airflow direction

Press .

- “” is displayed on the LCD.
- The flaps (horizontal blades) will begin to swing.





### Right and left airflow direction


Press .

- “” is displayed on the LCD.
- The louvers (vertical blades) will begin to swing.




### The 3-D airflow direction

Press  and .

- “” and “” are displayed on the LCD.
- The flaps and louvers move in turn.
- To cancel 3-D airflow, press either  or  again.  
The flaps or louvers will stop moving.

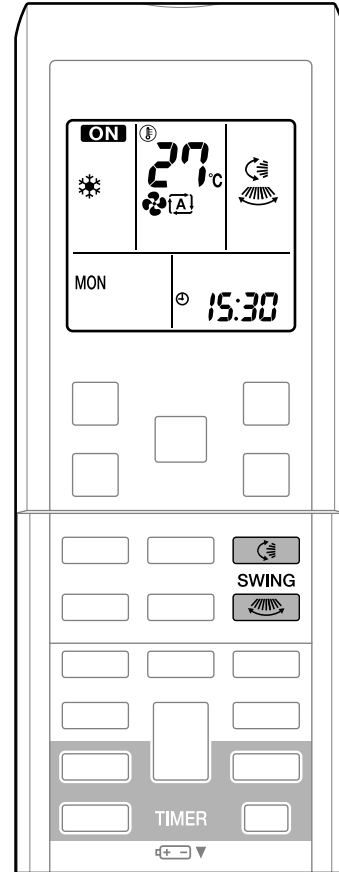

- The following illustrations show respective airflow directions.

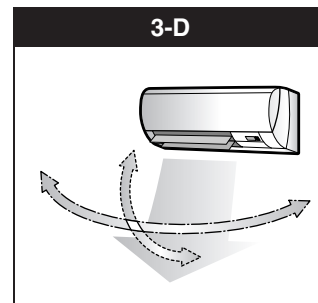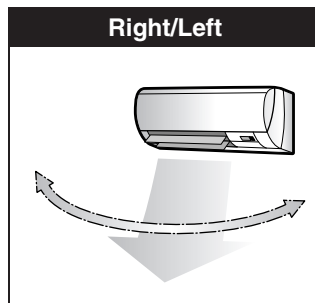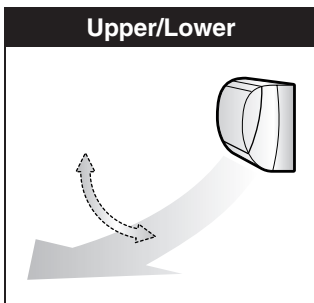





## ■ To set the flaps or louvers at desired position

- This function is effective while flaps or louvers are in auto swing mode.

Press  and  when the flaps or louvers have reached the desired position.

- In the 3-D airflow, the flaps and louvers move in turn.
- “” or “” disappears from the LCD.

### CAUTION

- Always use a remote controller to adjust the angles of the flaps and louvers. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote controller to adjust the louvers angles. In side the air outlet, a fan is rotating at a high speed.

### NOTE


#### ■ Note on the angles of the flaps

- The flaps swinging range depends on the operation. (See the figure.)


#### ■ Note on 3-D airflow

- Using 3-D airflow circulates cold air, which tends to be collected at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.


#### In DRY operation or COOL operation



#### In HEAT operation

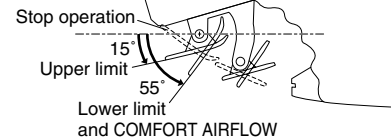

#### In FAN operation

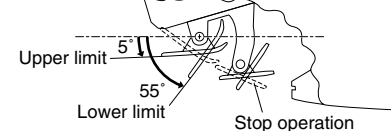






FVXS25/35/50FV1B

# Adjusting the Airflow Direction

You can adjust the airflow direction to increase your comfort.


## ■ To adjust the horizontal blade (flap)

1. Press “SWING button ”.
  - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flap has reached the desired position, press “SWING button ” once more.
  - The flap will stop moving.
  - “” disappears from the LCD.

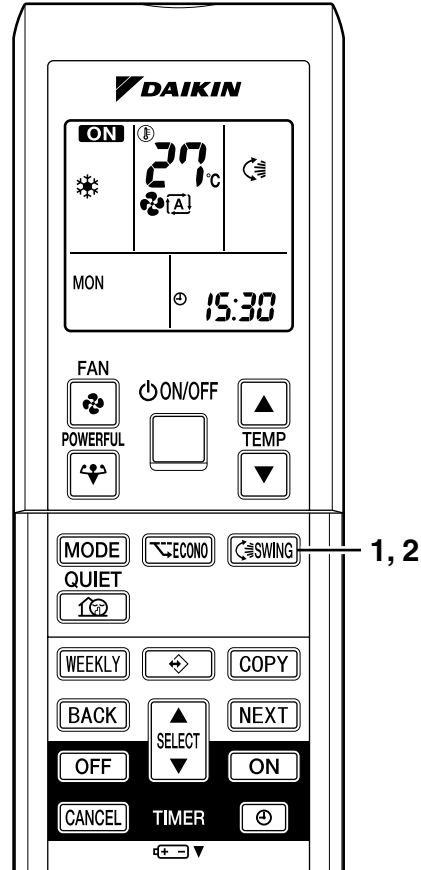

## ■ To adjust the vertical blades (louvers)

Hold the knob and move the louver.  
(You will find a knob on the left-side and the right-side blades.)

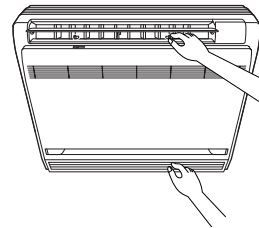


### Notes on flap and louvers angle

- Unless “SWING” is selected, you should set the flap at a near-horizontal angle in HEAT mode and at a upward position in COOL or DRY mode to obtain the best performance.

#### ■ ATTENTION

- When adjusting the flap by hand, turn off the unit, and use the remote controller to restart the unit.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

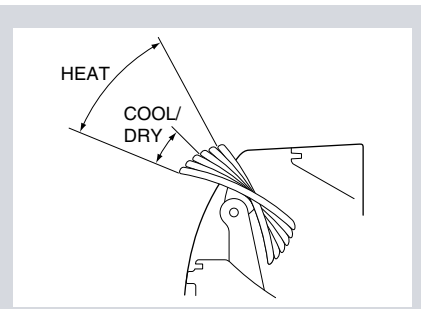


## ■ Airflow selection

- Make airflow selection according to what suits you.

### When setting the airflow selection switch to .

- Air conditioner automatically decides the appropriate blowing pattern depending on the operating mode/situation.

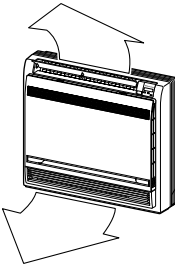Operating mode	Situation	Blowing pattern
COOL mode	<ul style="list-style-type: none"> <li>• When the room has become fully cool, or when one hour has passed since turning on the air conditioner.</li> </ul>	<ul style="list-style-type: none"> <li>• So that air does not come into direct contact with people, air is blown upper air outlet, room temperature is equalized.</li> </ul>
	<ul style="list-style-type: none"> <li>• At start of operation or other times when the room is not fully cooled.</li> </ul>	 <ul style="list-style-type: none"> <li>• Air is blown from the upper and lower air outlets for high speed cooling during COOL mode, and for filling the room with warm air during HEAT mode.</li> </ul>
HEAT mode	<ul style="list-style-type: none"> <li>• At times other than below. (Normal time.)</li> </ul>	
	<ul style="list-style-type: none"> <li>• At start or when air temperature is low.</li> </ul>	<ul style="list-style-type: none"> <li>• So that air does not come into direct contact with people. Air is blown upper air outlet.</li> </ul>

- During Dry mode, so that cold air does not come into direct contact with people, air is blown upper air outlet.

### When setting the air outlet selection switch to .

- Regardless of the operating mode or situation, air blows from the upper air outlet.
- Use this switch when you do not want air coming out of the lower air outlet. (While sleeping etc.)

## CAUTION

- Do not try to adjust the flap by hand.
- When adjusting by hand, the mechanism may not operate properly or condensation may drip from air outlets.

## 2.2.5 COMFORT AIRFLOW and INTELLIGENT EYE Operation

FTXS20/25/35/42/50G2V1B, FTXS20/25/35/42/50J2V1B

# COMFORT AIRFLOW and INTELLIGENT EYE Operation

The INTELLIGENT EYE incorporates infrared sensors to detect the presence of people in the conditioned room.

When these sensors detect people, the louvers will adjust the airflow direction to an area where people are not present. When there are no people in the sensing areas, the air conditioner will go into energy-saving mode.

### ■ To start operation


1. Press “COMFORT/SENSOR button” and select an operation mode.

- Choose the desired operation mode out of the following sequence.
- Each time the “COMFORT/SENSOR button” is pressed a different setting option is displayed on the LCD.



### ■ To cancel operation


2. Press “COMFORT/SENSOR button”.
  - Press the button to select “Blank”.

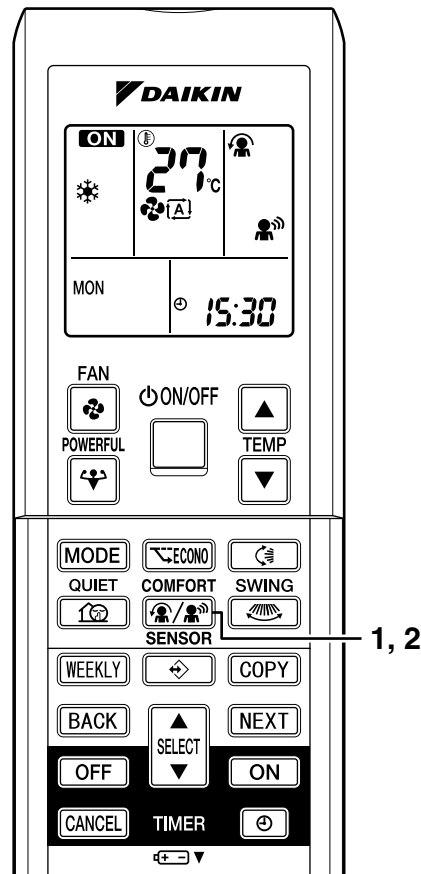


Display	Operation mode	Explanation
	COMFORT AIRFLOW	The flaps will adjust the airflow direction upward while cooling, and adjust the airflow direction downward while heating.
	INTELLIGENT EYE	The sensors will detect the movement of people in the sensing areas and the louvers will adjust the airflow direction to an area where people are not present. When there are no people in the sensing areas, the air conditioner will go into energy-saving mode.
	COMFORT AIRFLOW and INTELLIGENT EYE	The air conditioner will be in COMFORT AIRFLOW operation combined with INTELLIGENT EYE operation.
Blank	No function	—

## Notes on “COMFORT AIRFLOW Operation”

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time.
- The volume of air will be set to AUTO. If the upward and downward airflow direction is selected, the COMFORT AIRFLOW function will be canceled.
- Priority is given to the function of whichever button is pressed last.
- The COMFORT AIRFLOW function makes the following airflow direction adjustments.  
The flaps will move upward while cooling so that the airflow will be directed upward.  
The flaps will move downward while heating so that the airflow will be directed downward.

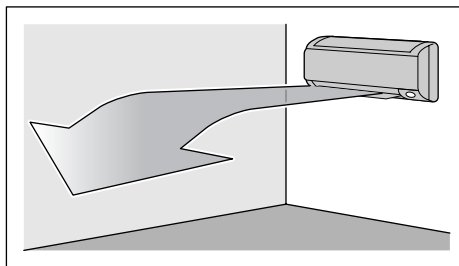

Cooling operation

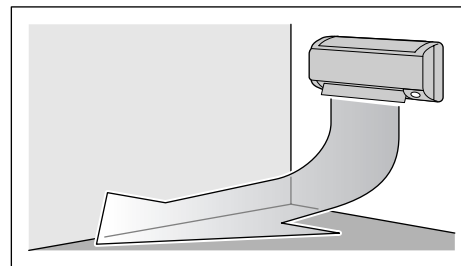


Heating operation



## Notes on “INTELLIGENT EYE Operation”

- The INTELLIGENT EYE sensor according to the following situations.


Vertical angle 90°  
(Side View)

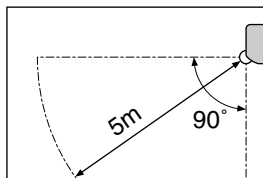


Horizontal angle 110°  
(Top View)

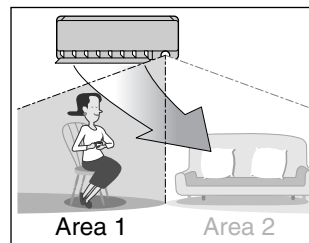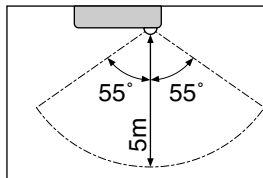

A person is detected in  
area 1.

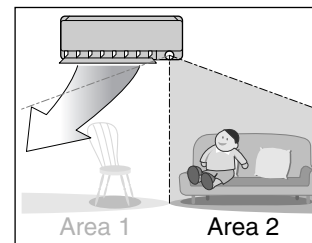


A person is detected in  
area 2.

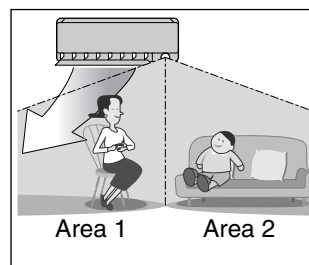

People are detected in  
both areas.

(Use the INTELLIGENT EYE  
Operation in combination with the  
COMFORT AIRFLOW Operation.)

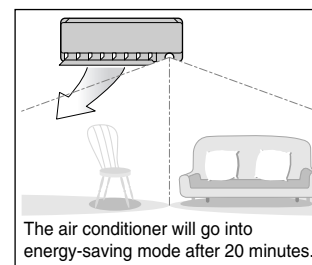

The air conditioner will go into  
energy-saving mode after 20 minutes.

No people are detected in  
the areas.

\* The wind direction may differ from the  
illustrated direction depending on the actions  
and movements of the people in the areas.

# COMFORT AIRFLOW and INTELLIGENT EYE Operation

## Notes on “INTELLIGENT EYE Operation”

- While the air conditioner is in INTELLIGENT EYE operation, the louvers will adjust the airflow direction if there are people in the sensing areas of the INTELLIGENT EYE so that the leftward or rightward airflow will not be directed to the people.  
If no people are detected in either area 1 or 2 in 20 minutes, the air conditioner will go into energy-saving mode with the set temperature shifted by 2°C.  
The air conditioner may go into energy-saving operation even if there are people in the areas. This may occur depending on the clothes the people are wearing if there are no movements of the people in the areas.
- The airflow direction from the louvers will be leftward if there are people in both areas 1 and 2 or if there is a person right in front of the sensors because the sensors on the both sides will detect the person.
- Due to the position of the sensor, people might be exposed to the airflow of the indoor unit if they are close to the front side of the indoor unit.  
If there are people close to the front side of the indoor unit or in both areas, it is recommended to use the COMFORT AIRFLOW and INTELLIGENT EYE functions simultaneously. When both of them are in use, the air conditioner will not direct the airflow towards the people.
- Sensor may not detect moving objects further than 5m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- NIGHT SET MODE will not go on during use of INTELLIGENT EYE operation.

## “INTELLIGENT EYE” is useful for Energy Saving

### ■ Energy saving operation

- Change the temperature -2°C in heating / +2°C in cooling / +2°C in dry mode from set temperature.
- Decrease the airflow rate slightly in FAN mode only. If no presence detected in the room during 20 minutes.

## ■ To combine “COMFORT AIRFLOW Operation” and “INTELLIGENT EYE Operation”

- The air conditioner can go into operation with the COMFORT AIRFLOW and INTELLIGENT EYE functions combined.  
The flaps adjust the airflow direction upward (while in cooling operation) and downward (while in heating operation), during which the sensors of the INTELLIGENT EYE are working to detect the movement of people. When the sensors detect people, the louvers will direct the airflow in such way that it will not be blown directly on them. If there are no people, the air conditioner will go into energy-saving operation after 20 minutes.

## CAUTION


- Do not place large objects near the sensor.  
Also keep heating units or humidifiers outside the sensor’s detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

FTXS60/71GV1B


# COMFORT AIRFLOW and INTELLIGENT EYE Operation

## ■ COMFORT AIRFLOW operation

The flow of air will be in the upward direction while in COOL operation and in the downward direction while in HEAT operation, which will provide a comfortable wind that will not come in direct contact with people.

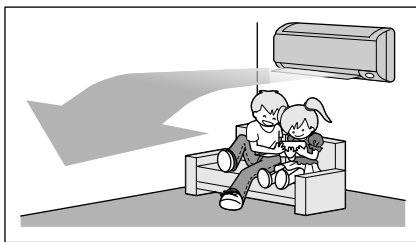

COOL operation

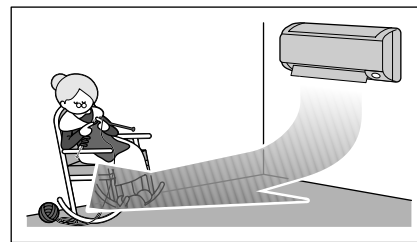


HEAT operation

## ■ INTELLIGENT EYE operation

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.

If nobody in the room for more than 20 minutes, the operation automatically changes to energy saving operation.


### [Example]

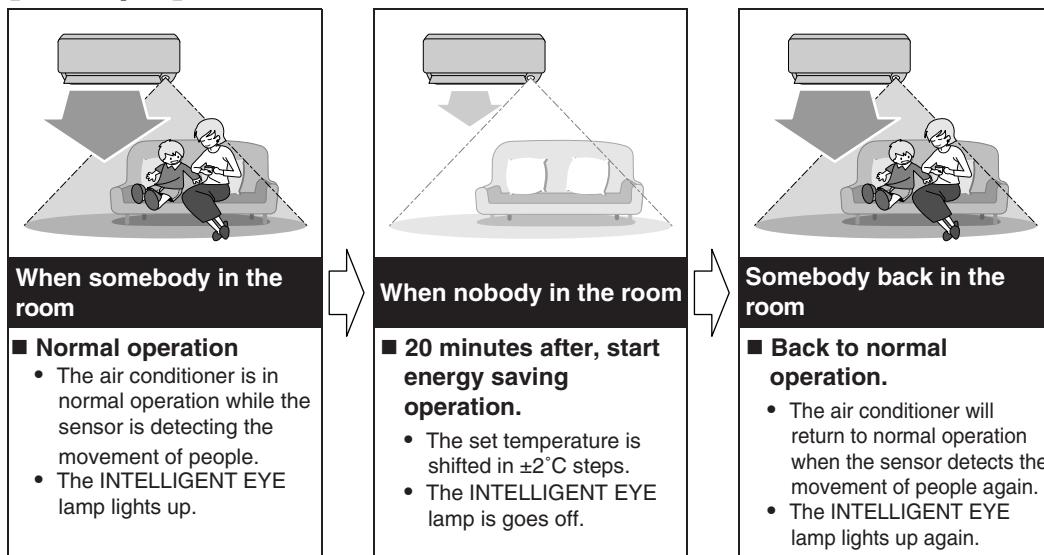




## ■ To combine COMFORT AIRFLOW and INTELLIGENT EYE operation

The air conditioner can go into operation with the COMFORT AIRFLOW and INTELLIGENT EYE operation combined.


## ■ To start operation

Press  and select the desired mode.


- Each time the  is pressed a different setting option is displayed on the LCD.
- By selecting “” from the following icons, the air conditioner will be in COMFORT AIRFLOW operation combined with INTELLIGENT EYE operation.




- When the flaps (horizontal blades) are swinging, the operating as above will stop movement of them.
- The INTELLIGENT EYE lamp lights up.
- The lamp will be lit while human movements are detected.



## ■ To cancel operation

Press  and select “blank” on the LCD.

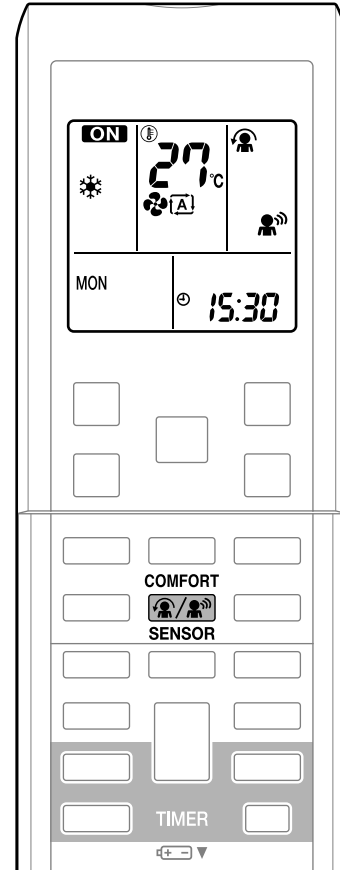

## INTELLIGENT EYE operation is useful for energy saving

### ■ Energy saving operation

- If no presence detected in the room for 20 minutes, the energy saving operation will start.
- This operation changes the temperature  $-2^{\circ}\text{C}$  in HEAT /  $+2^{\circ}\text{C}$  in COOL /  $+2^{\circ}\text{C}$  in DRY operation from set temperature.
- This operation decreases the airflow rate slightly in FAN operation only.



# COMFORT AIRFLOW and INTELLIGENT EYE Operation


## NOTE

### ■ Notes on COMFORT AIRFLOW operation

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time.  
Priority is given to the function of whichever button is pressed last.
- The airflow rate will be set to AUTO. If the upper and lower airflow direction is selected, the COMFORT AIRFLOW operation will be canceled.

### ■ Notes on INTELLIGENT EYE operation

- Application range is as follows.

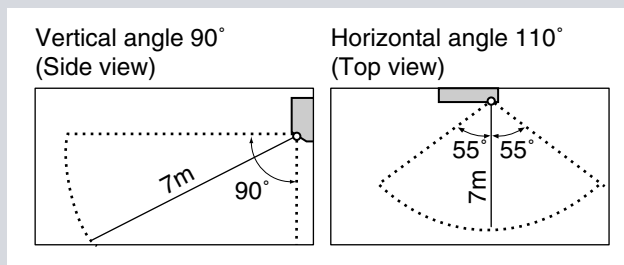

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during POWERFUL operation.
- NIGHT SET mode will not go on during use of INTELLIGENT EYE operation.

### ■ Note on combination of COMFORT AIRFLOW operation and INTELLIGENT EYE operation

- The airflow rate will be set to AUTO. If the upper and lower airflow direction is selected, the COMFORT AIRFLOW operation will be canceled.  
Priority is given to the function of whichever button is pressed last.

## ⚠ CAUTION


- Do not place large objects near the sensor.  
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

## 2.2.6 POWERFUL Operation


# POWERFUL Operation


POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

### ■ To start POWERFUL operation

1. Press “POWERFUL button”.
  - POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
  - “” is displayed on the LCD.
  - When using POWERFUL operation, there are some functions which are not available.


### ■ To cancel POWERFUL operation

2. Press “POWERFUL button” again.
  - “” disappears from the LCD.

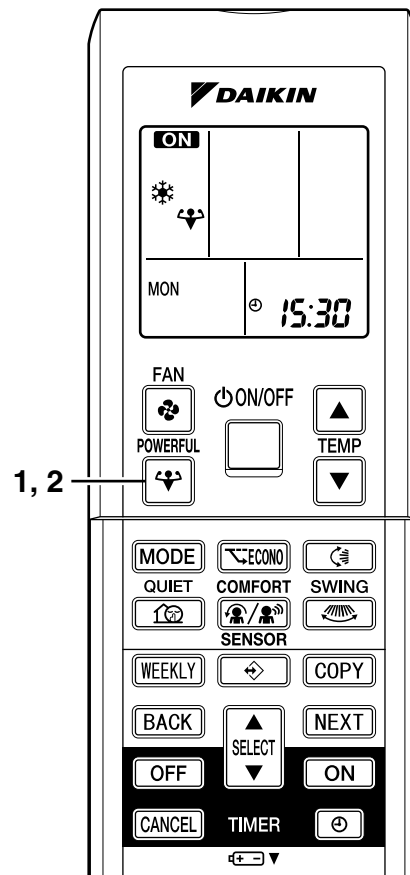

## NOTE

### ■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO, QUIET, or COMFORT Operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT mode**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting.  
The temperature and airflow settings are not variable.
- **In DRY mode**  
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN mode**  
The airflow rate is fixed to the maximum setting.

## 2.2.7 OUTDOOR UNIT QUIET Operation

# OUTDOOR UNIT QUIET Operation


OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

### ■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
  - “” is displayed on the LCD.

### ■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
  - “” disappears from the LCD.

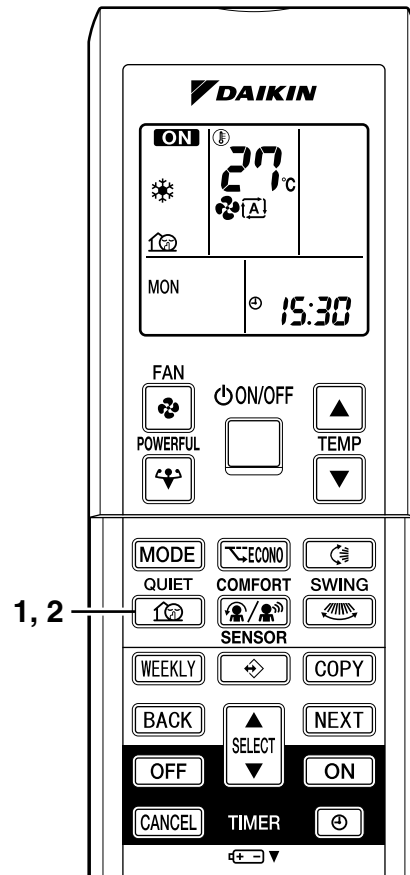

## NOTE

### ■ Note on OUTDOOR UNIT QUIET operation

- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.

## 2.2.8 ECONO Operation

# ECONO Operation

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.


### ■ To start ECONO operation

1. Press “ECONO button”.
  - “” is displayed on the LCD.


### ■ To cancel ECONO operation

2. Press “ECONO button” again.
  - “” disappears from the LCD.


Running current and power consumption

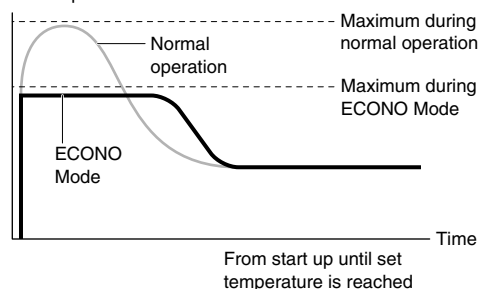

- This diagram is a representation for illustrative purposes only.
- \* The maximum running current and power consumption of the air conditioner in ECONO mode vary with the connecting outdoor unit.

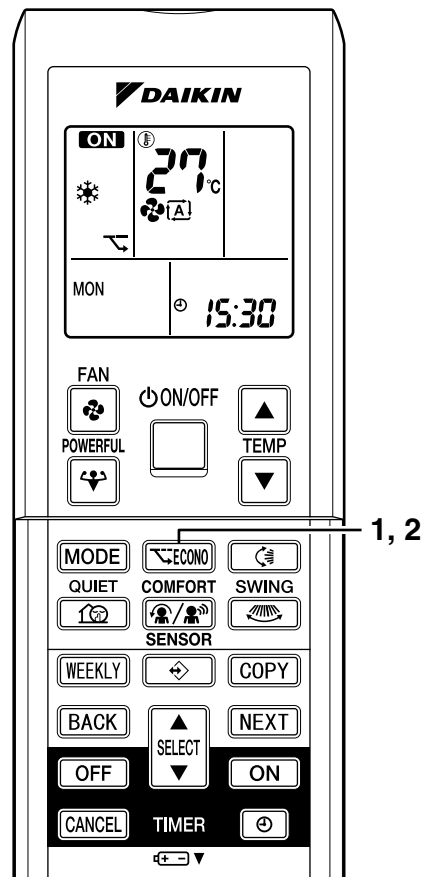

## NOTE

- ECONO Operation can only be set when the unit is running. Pressing the OFF button causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY and HEAT modes.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- Power consumption may not drop even if ECONO operation is used if the level of power consumption is already low.

## 2.2.9 TIMER Operation

# TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

### ■ To use OFF TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.

#### 1. Press “OFF TIMER button”.

0:00 is displayed.



OFF blinks.

#### 2. Press “SELECT button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

#### 3. Press “OFF TIMER button” again.

- The TIMER lamp lights up.

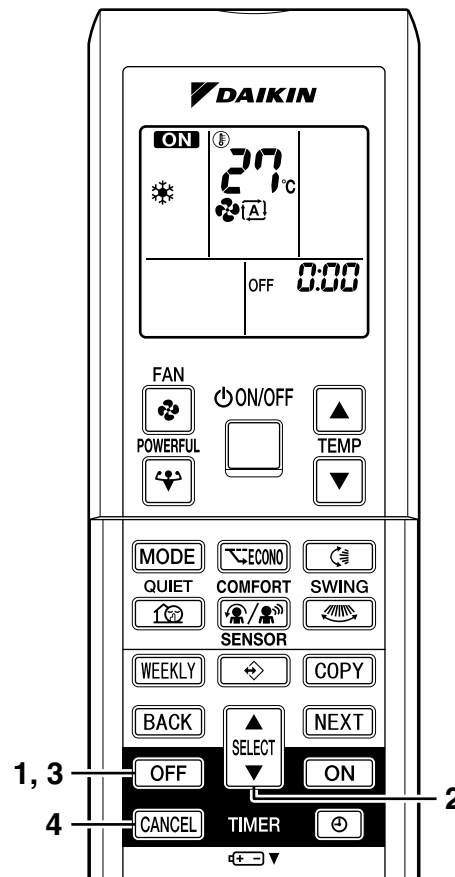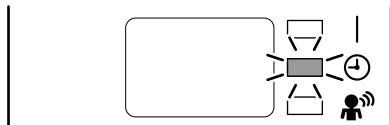

### ■ To cancel the OFF TIMER Operation

#### 4. Press “CANCEL button”.

- The TIMER lamp goes off.

## NOTE

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

### ■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

### ■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.

**1. Press “ON TIMER button”.**

6:00 is displayed.


ON blinks.

**2. Press “SELECT button” until the time setting reaches the point you like.**

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

**3. Press “ON TIMER button” again.**

- The TIMER lamp lights up.

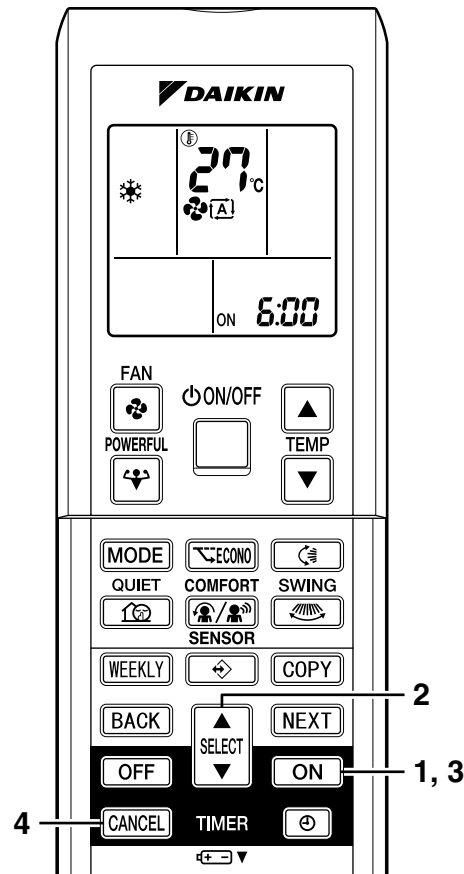


### ■ To cancel ON TIMER operation

**4. Press “CANCEL button”.**

- The TIMER lamp goes off.

### ■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

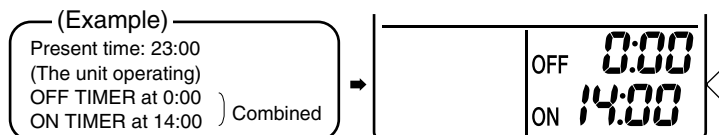

### ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

## 2.2.10 WEEKLY TIMER Operation


# WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week. It is convenient if the WEEKLY TIMER is set according to the family's life style.

### ■ Using in these cases of WEEKLY TIMER

An example of WEEKLY TIMER settings is shown below.

**Example:** The same timer settings are made for the week from Monday through Friday while different timer settings are made for the weekend.

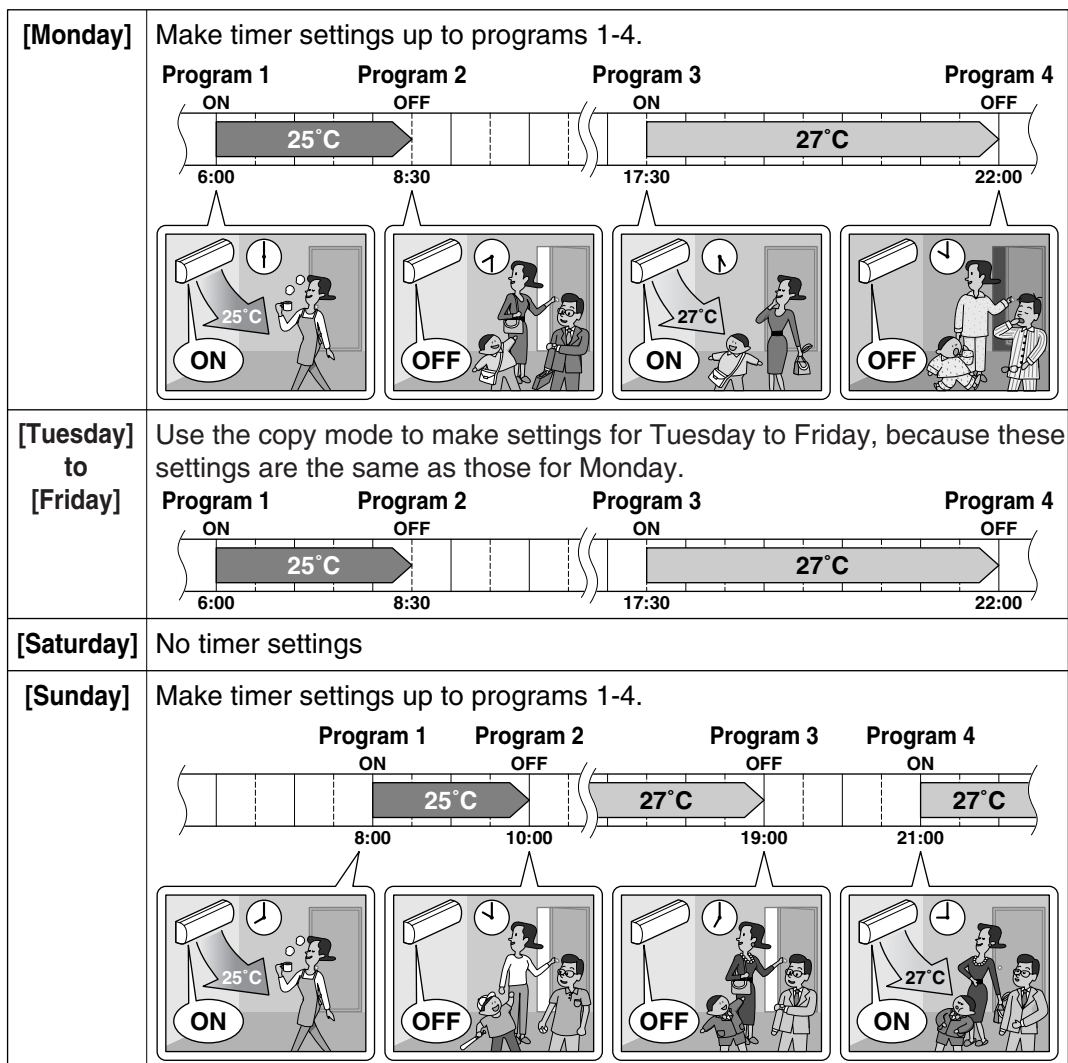


- Up to 4 reservations per day and 28 reservations per week can be set in the WEEKLY TIMER. The effective use of the copy mode ensures ease of making reservations.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn-OFF time of each day can be set. This will turn OFF the air conditioner automatically if the user forgets to turn it OFF.

## ■ To use WEEKLY TIMER operation

### Setting mode


- Make sure the day of the week and time are set. If not, set the day of the week and time.

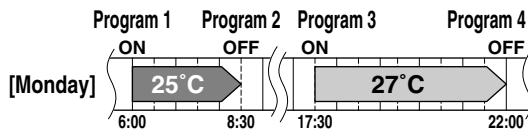


1. Press “” button”.
  - The day of the week and the reservation number of the current day will be displayed.
  - 1 to 4 settings can be made per day.
2. Press the “SELECT button” to select the desired day of the week and reservation number.
  - Pressing the “SELECT button” changes the reservation number and the day of the week.
3. Press “NEXT button”.
  - The day of the week and reservation number will be set.
  - “” and “ON” blink.
4. Press “SELECT button” to select the desired mode.
  - Pressing the “SELECT button” changes “ON” or “OFF” setting in sequence.



- In case the reservation has already been set, selecting “blank” deletes the reservation.
  - Go to STEP 9 if “blank” is selected.
5. Press “NEXT button”.
    - The ON/OFF TIMER mode will be set.
    - “” and the time blink.
  6. Press “SELECT button” to select the desired time.
    - The time can be set between 0:00 and 23:50 in 10 minute intervals.
    - To return to the ON/OFF TIMER mode setting, press “BACK button”.
    - Go to STEP 9 when setting the OFF TIMER.
  7. Press “NEXT button”.
    - The time will be set.
    - “” and the temperature blink.

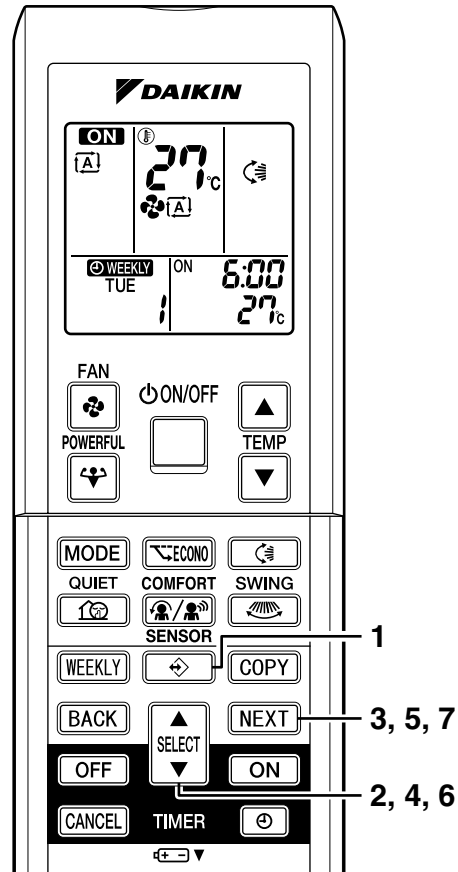

### Setting Displays

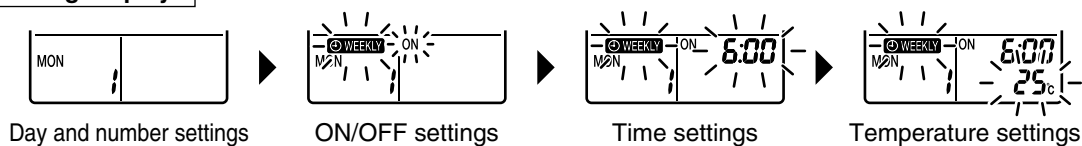



# WEEKLY TIMER Operation


## 8. Press “SELECT button” to select the desired temperature.


- The temperature can be set between 10°C and 32°C.  
Cooling: The unit operates at 18°C even if it is set at 10 to 17°C.  
Heating: The unit operates at 30°C even if it is set at 31 to 32°C.
- To return to the time setting, press “BACK button”.
- The set temperature is only displayed when the mode setting is on.

## 9. Press “NEXT button”.

- The temperature will be set and go to the next reservation setting.
- To continue further settings, repeat the procedure from STEP 4.



## 10. Press “ button” to complete the setting.

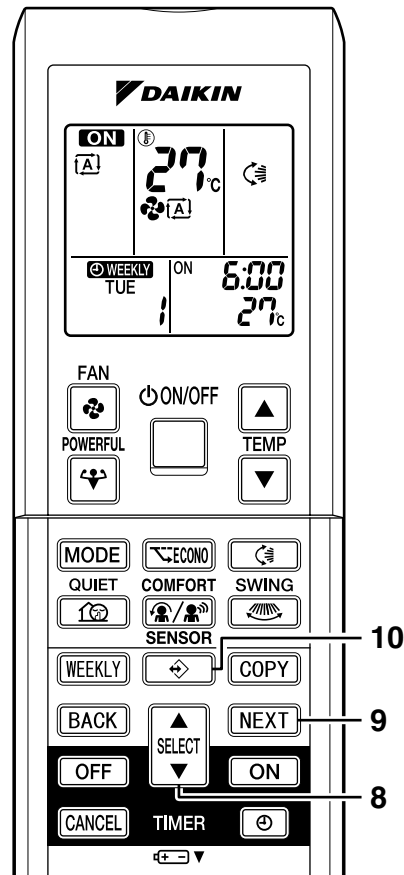- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the operation lamp.
- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights up.
- A reservation made once can be easily copied and the same settings used for another day of the week. Refer to **Copy mode**.




## NOTE




### ■ Notes on WEEKLY TIMER operation


- Do not forget to set the clock on the remote control first.
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with WEEKLY TIMER. Other settings for ON TIMER are based on the settings just before the operation.
- Both WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will go into standby state, and “ WEEKLY” will disappear from the LCD. When ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Only the time and set temperature set with the weekly timer are sent with the “ button”. Set the weekly timer only after setting the operation mode, the fan strength, and the fan direction ahead of time.
- Shutting the breaker off, power failure, and other similar events will render operation of the indoor unit’s internal clock inaccurate. Reset the clock.
- The “BACK button” can be used only for the time and temperature settings. It cannot be used to go back to the reservation number.

### Copy mode

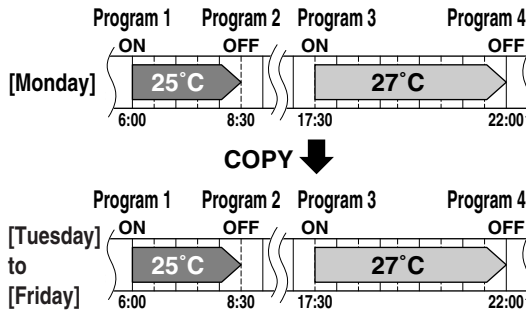
- A reservation made once can be copied another day of the week. The whole reservation of the selected day of the week will be copied.



1. Press “ button”.
2. Press “SELECT button” to confirm the day of the week to be copied.
3. Press “COPY button” to activate copy mode.
  - The whole reservation of the selected day of the week will be copied.
4. Press “SELECT button” to select the destination day of the week.
5. Press “COPY button”.
  - The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
  - To continue copying the settings to other days of the week, repeat STEP 4 and STEP 5.
6. Press “ button” to complete the setting.
  - “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.

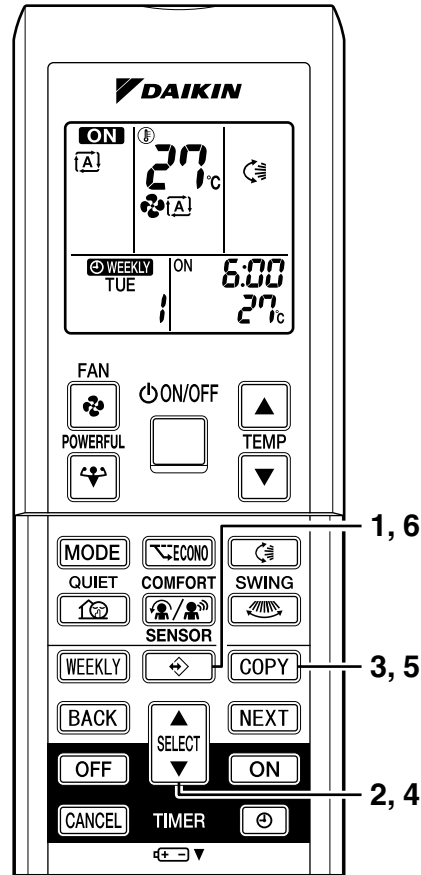


### Setting Displays

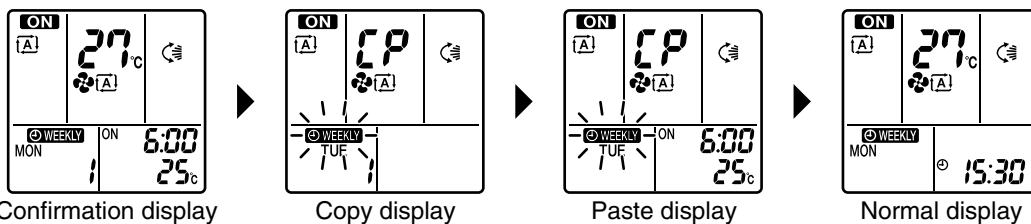

### NOTE

#### ■ COPY MODE

- The entire reservation of the source day of the week is copied in the copy mode. In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press “ button” and change the settings in the steps of **Setting mode**.

# WEEKLY TIMER Operation

## ■ Confirming a reservation

- The reservation can be confirmed.


### 1. Press “ button”.

- The day of the week and the reservation number of the current day will be displayed.


### 2. Press “SELECT button” to select the day of the week and the reservation number to be confirmed.

- Pressing the “SELECT button” displays the reservation details.
  - To change the confirmed reserved settings, select the reservation number and press “NEXT button”.
- The mode is switched to setting mode. Go to **Setting mode** STEP 4.


### 3. Press “ button” to exit confirming mode.

- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights up.

#### Setting Displays



Normal display



Confirmation display

## ■ To deactivate WEEKLY TIMER operation

### 4. Press “WEEKLY button” while

“ WEEKLY” is displayed on the LCD.

- The “ WEEKLY” will disappear from the LCD.
- The TIMER lamp goes off.
- To reactivate the WEEKLY TIMER operation, press the “WEEKLY button” again.
- If a reservation deactivated with “WEEKLY button” is activated once again, the last reservation mode will be used.

## ■ To delete reservations

### The individual reservation

- Refer to **Setting mode** .
- When selecting desired mode at STEP 4 in setting mode, select “blank”. The reservation will be deleted.

### The reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.

### 5. Press “ button”.

### 6. Select the day of the week to be canceled with the “SELECT button”.


### 7. Hold the “WEEKLY button” for 5 seconds.

- The reservation of the selected day of the week will be deleted.

### All reservations

### 8. Hold “WEEKLY button” for 5 seconds while normal display.

- Be sure to direct the remote control toward the main unit and check for a receiving tone.
- This operation is not effective while WEEKLY TIMER is being set.
- All reservations will be deleted.

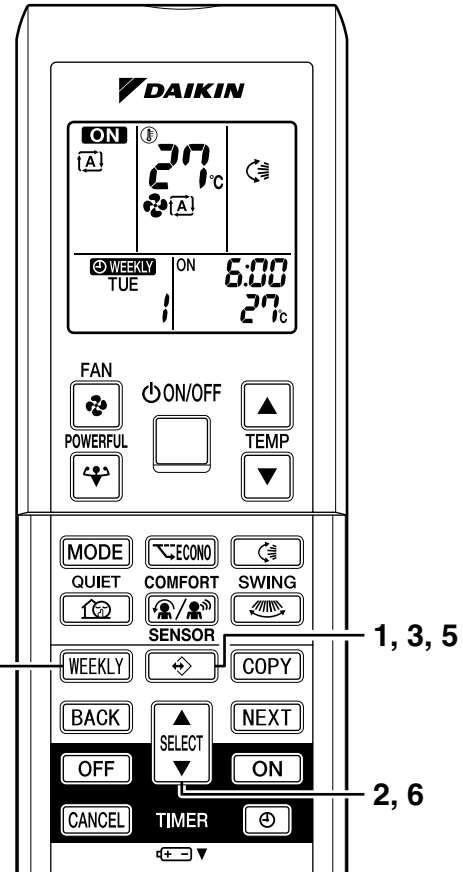


## 2.2.11 Note for Multi System

# Note for Multi System

### << What is a “Multi System”? >>

This system has one outdoor unit connected to multiple indoor units.

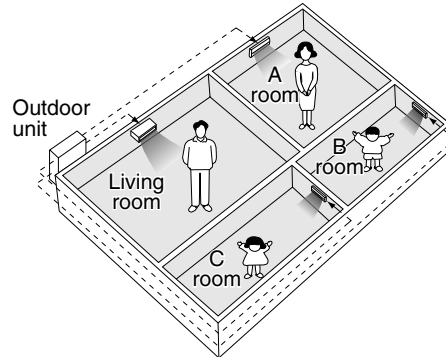

## ■ Selecting the operation mode

### 1. With the Priority Room Setting present but inactive or not present.

When more than one indoor unit is operating, priority is given to the first unit that was turned on. In this case, set the units that are turned on later to the same operation mode (\*1) as the first unit.

Otherwise, they will enter the Standby Mode, and the operation lamp will flash; this does not indicate malfunction.

(\*1)

- COOL, DRY and FAN mode may be used at the same time.
- AUTO mode automatically selects COOL mode or HEAT mode based on the room temperature. Therefore, AUTO mode is available when selecting the same operation mode as that of the room with the first unit to be turned on.

#### <CAUTION>

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to **heating**. In this situation, the air conditioner running in FAN Mode will go on standby, and the operation lamp will flash.

### 2. With the Priority Room Setting active.

See “Priority Room Setting” on the next page.

## ■ NIGHT QUIET Mode (Available only for cooling operation)

NIGHT QUIET Mode requires initial programming during installation. Please consult your retailer or dealer for assistance. NIGHT QUIET Mode reduces the operation noise of the outdoor unit during the night time hours to prevent annoyance to neighbors.

- The NIGHT QUIET Mode is activated when the temperature drops 5°C or more below the highest temperature recorded that day. Therefore, when the temperature difference is less than 5°C, this function will not be activated.
- NIGHT QUIET Mode reduces slightly the cooling (heating) efficiency of the unit.

## ■ OUTDOOR UNIT QUIET operation

### 1. With the Priority Room Setting present but inactive or not present.

When using the OUTDOOR UNIT QUIET operation feature with the Multi system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers.

When clearing OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using their remote controller. However OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms. We recommend you release all rooms using their remote controllers.

### 2. With the Priority Room Setting active.

See “Priority Room Setting” on the next page.

## ■ Cooling / Heating mode lock (Available only for heat pump models)

The Cooling / Heating Mode Lock requires initial programming during installation. Please consult your retailer or dealer for assistance. The Cooling / Heating Mode Lock sets the unit forcibly to either Cooling or Heating Mode. This function is convenient when you wish to set all indoor units connected to the Multi system to the same operation mode.

# Note for Multi System

## ■ Priority Room Setting

The Priority Room Setting requires initial programming during installation. Please consult your retailer or dealer for assistance.

The room designated as the Priority Room takes priority in the following situations;

### 1. Operation mode Priority.

As the operation mode of the Priority Room takes precedence, the user can select a different operation mode from other rooms.

〈Example〉

\* Room A is the Priority Room in the examples.

When COOL mode is selected in Room A while operating the following modes in Room B,C and D:

Operation mode in Room B, C and D	Status of Room B, C and D when the unit in Room A is in COOL mode
COOL or DRY or FAN	Current operation mode maintained
HEAT	The unit enters Standby Mode. Operation resumes when the Room A unit stops operating.
AUTO	If the unit is set to COOL mode, operation continues. If set to HEAT mode, it enters Standby Mode. Operation resumes when the Room A unit stops operating.

### 2. Priority when POWERFUL operation is used.

〈Example〉

\* Room A is the Priority Room in the examples.

The indoor units in Rooms A,B,C and D are all operating. If the unit in Room A enters POWERFUL operation, operation capacity will be concentrated in Room A. In such a case, the cooling (heating) efficiency of the units in Rooms B,C and D may be slightly reduced.

### 3. Priority when using OUTDOOR UNIT QUIET operation.

〈Example〉

\* Room A is the Priority Room in the examples.

Just by setting the unit in Room A to QUIET operation, the air conditioner starts OUTDOOR UNIT QUIET operation.

You don't have to set all the operated indoor units to QUIET operation.

## 2.3 ATXS, FLK(X)S, FDK(X)S Series - ARC433B67, B68, B69, B76

### 2.3.1 Manual Contents and Reference Page

Model Series	Wall Mounted Type	Floor / Ceiling Suspended Dual Type	Duct Connected Type
	ATXS20-50G2V1B	FLK(X)S25-60BAVMB	FDK(X)S25/35EAVMB FDK(X)S50/60CVMB
<b>Read Before Operation</b>			
Remote Controller	191	192	193
<b>Operation</b>			
AUTO · DRY · COOL · HEAT · FAN Operation ★1	194	194	194
Adjusting the Airflow Direction	196	198	—
COMFORT AIRFLOW Operation	200	—	—
INTELLIGENT EYE Operation	201	—	—
POWERFUL Operation ★1	203	203	203
OUTDOOR UNIT QUIET Operation ★1	204	204	204
ECONO Operation	205	—	—
HOME LEAVE Operation ★2	—	206	206
TIMER Operation ★1	208	208	208
Note for Multi System	210	210	210
Drawing No.	3P207037-2D	3P194444-5C	3P196326-9C


★1: The illustrations are for wall mounted type as representative.

★2: The illustrations are for duct connected type as representative.

## 2.3.2 Remote Controller

ATXS20/25/35/42/50G2V1B

### ■ Remote Controller

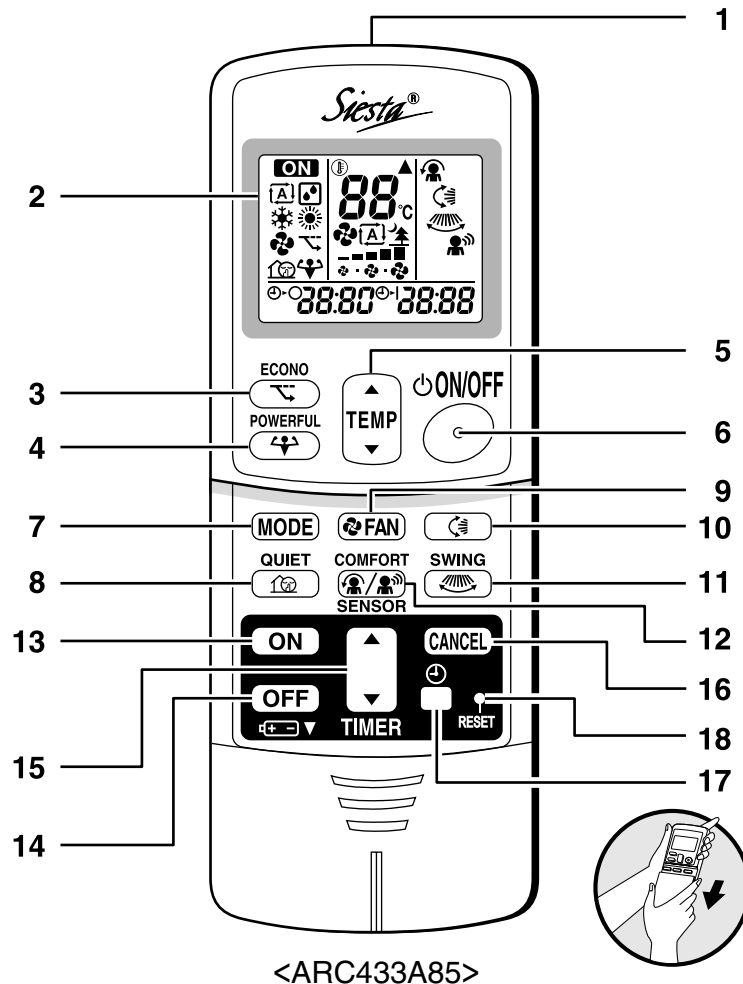


<ARC433A85>

1. **Signal transmitter:**
  - It sends signals to the indoor unit.
2. **Display:**
  - It displays the current settings.
  - (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
3. **ECONO button:**
  - ECONO operation
4. **POWERFUL button:**
  - POWERFUL operation
5. **TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
6. **ON/OFF button:**
  - Press this button once to start operation.
  - Press once again to stop it.
7. **MODE selector button:**
  - It selects the operation mode.
  - (AUTO/DRY/COOL/HEAT/FAN)
8. **QUIET button:** OUTDOOR UNIT QUIET operation
9. **FAN setting button:**
  - It selects the airflow rate setting.
10. **SWING button:**
  - Adjusting the Airflow Direction.
11. **SWING button:**
  - Louvers (vertical blades)
12. **COMFORT/SENSOR button:**
  - COMFORT AIRFLOW and INTELLIGENT EYE operation
13. **ON TIMER button**
14. **OFF TIMER button**
15. **TIMER Setting button:**
  - It changes the time setting.
16. **TIMER CANCEL button:**
  - It cancels the timer setting.
17. **CLOCK button**
18. **RESET button:**
  - Restart the unit if it freezes.
  - Use a thin object to push.

FLK(X)S25/35/50/60BAVMB

## ■ Remote Controller

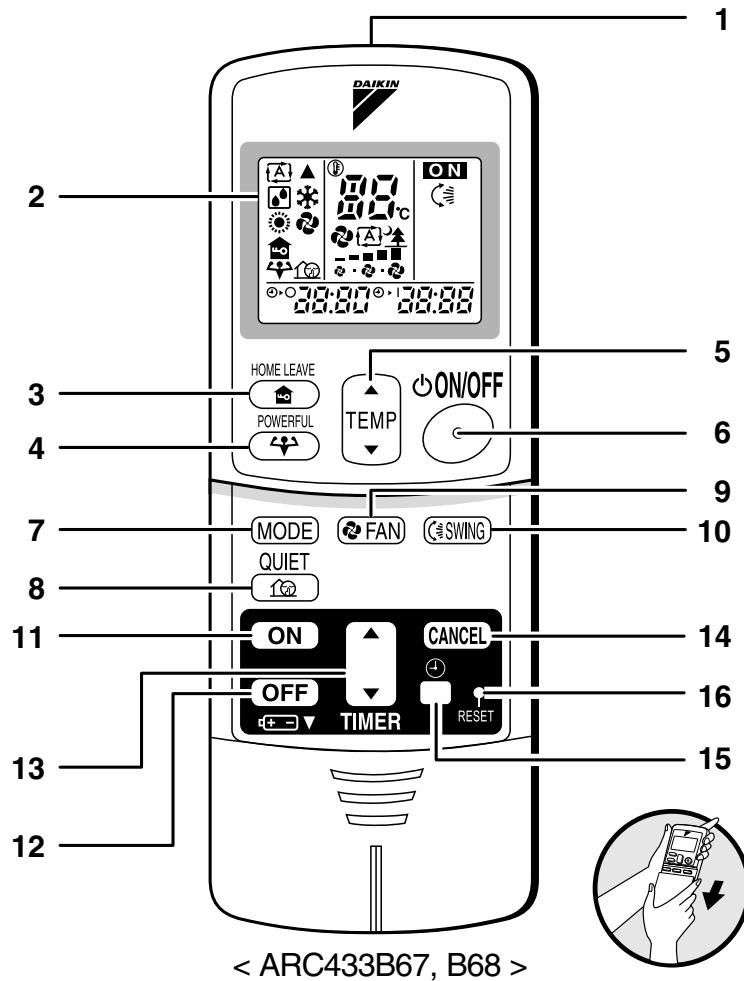

**1. Signal transmitter:**

- It sends signals to the indoor unit.

**2. Display:**

- It displays the current settings.  
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

**3. HOME LEAVE button:**

HOME LEAVE operation

**4. POWERFUL button:**

POWERFUL operation

**5. TEMPERATURE adjustment buttons:**

- It changes the temperature setting.

**6. ON/OFF button:**

- Press this button once to start operation.  
Press once again to stop it.

**7. MODE selector button:**

- It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN)

**8. QUIET button:** OUTDOOR UNIT QUIET operation

**9. FAN setting button:**

- It selects the air flow rate setting.

**10. SWING button**

**11. ON TIMER button**

**12. OFF TIMER button**

**13. TIMER Setting button:**

- It changes the time setting.

**14. TIMER CANCEL button:**

- It cancels the timer setting.

**15. CLOCK button**


**16. RESET button:**

- Restart the unit if it freezes.  
• Use a thin object to push.



FDK(X)S25/35EAVMB, FDK(X)S50/60CVMB

## ■ Remote Controller

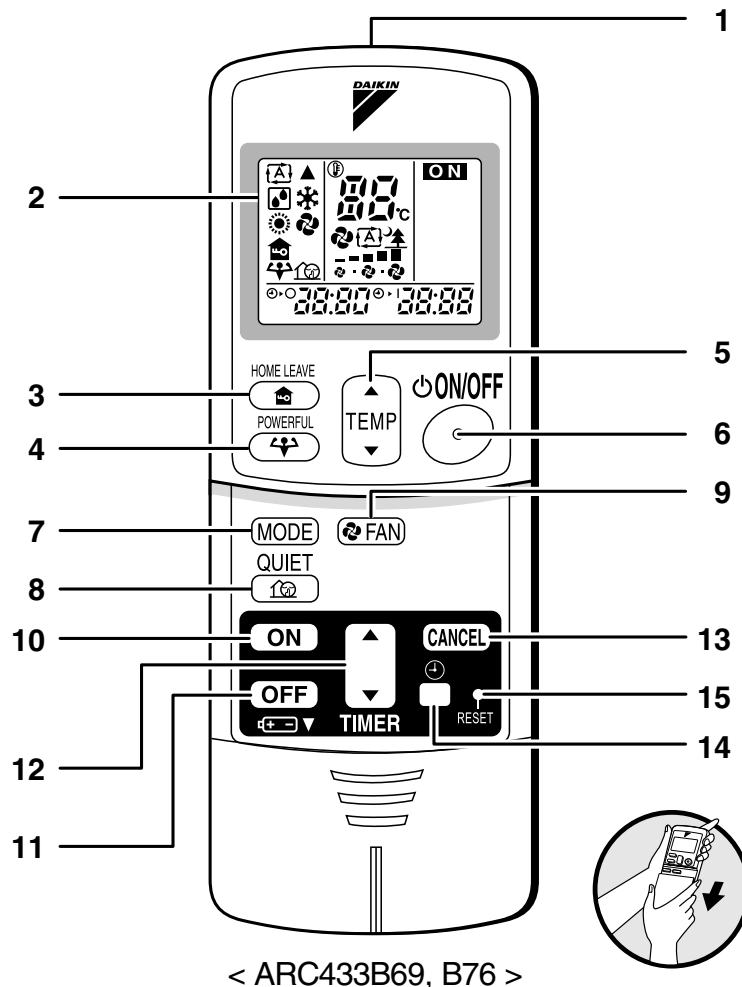

- |   |   |
|---|---|
| <p><b>1. Signal transmitter:</b></p> <ul style="list-style-type: none"> <li>• It sends signals to the indoor unit.</li> </ul> <p><b>2. Display:</b></p> <ul style="list-style-type: none"> <li>• It displays the current settings.<br/>(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)</li> </ul> <p><b>3. HOME LEAVE button:</b><br/>HOME LEAVE operation</p> <p><b>4. POWERFUL button:</b><br/>POWERFUL operation</p> <p><b>5. TEMPERATURE adjustment buttons:</b></p> <ul style="list-style-type: none"> <li>• It changes the temperature setting.</li> </ul> <p><b>6. ON/OFF button:</b></p> <ul style="list-style-type: none"> <li>• Press this button once to start operation.<br/>Press once again to stop it.</li> </ul> | <p><b>7. MODE selector button:</b></p> <ul style="list-style-type: none"> <li>• It selects the operation mode.<br/>(AUTO/DRY/COOL/HEAT/FAN)</li> </ul> <p><b>8. QUIET button:</b> OUTDOOR UNIT QUIET operation</p> <p><b>9. FAN setting button:</b></p> <ul style="list-style-type: none"> <li>• It selects the air flow rate setting.</li> </ul> <p><b>10. ON TIMER button</b></p> <p><b>11. OFF TIMER button</b></p> <p><b>12. TIMER Setting button:</b></p> <ul style="list-style-type: none"> <li>• It changes the time setting.</li> </ul> <p><b>13. TIMER CANCEL button:</b></p> <ul style="list-style-type: none"> <li>• It cancels the timer setting.</li> </ul> <p><b>14. CLOCK button</b></p> <p><b>15. RESET button:</b></p> <ul style="list-style-type: none"> <li>• Restart the unit if it freezes.</li> <li>• Use a thin object to push.</li> </ul> |
|---|---|

### 2.3.3 AUTO · DRY · COOL · HEAT · FAN Operation

## AUTO · DRY · COOL · HEAT · FAN Operation

The air conditioner operates with the operation mode of your choice.

From the next time on, the air conditioner will operate with the same operation mode.

### ■ To start operation

#### 1. Press “MODE selector button” and select a operation mode.

- Each pressing of the button advances the mode setting in sequence.

: AUTO

: DRY

: COOL


: HEAT

: FAN



#### 2. Press “ON/OFF button” .

- The OPERATION lamp lights up.

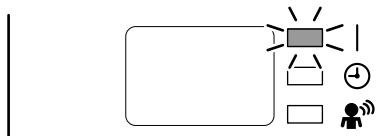

### ■ To stop operation


#### 3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.

### ■ To change the temperature setting



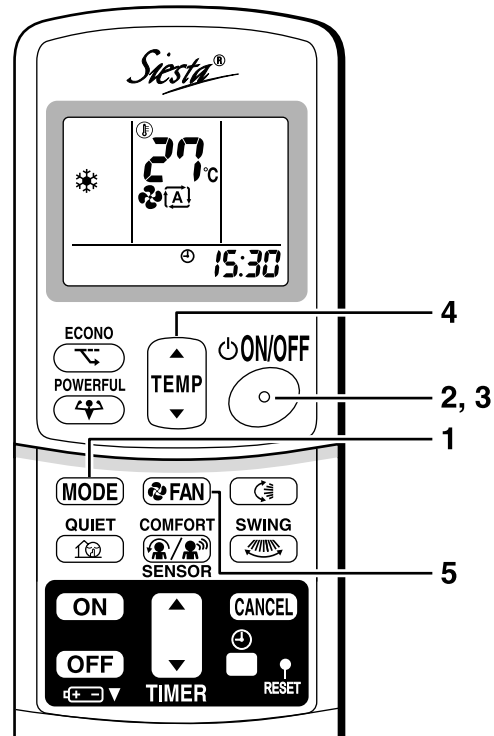


#### 4. Press “TEMPERATURE adjustment button”.

DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like. 




## ■ To change the airflow rate setting

### 5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The airflow rate setting is not variable.	<p>Five levels of airflow rate setting from “” to “” plus “” “” are available.</p> 

- Indoor unit quiet operation

When the airflow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

## NOTE

### ■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.
- A pinging sound may be heard during defrosting operation, which, however does not mean that the air conditioner has failures.

### ■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.

### ■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

### ■ Note on AUTO operation

- In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, manually change the set temperature.

### ■ Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.



## 2.3.4 Adjusting the Airflow Direction


ATXS20/25/35/42/50G2V1B

# Adjusting the Airflow Direction





You can adjust the airflow direction to increase your comfort.
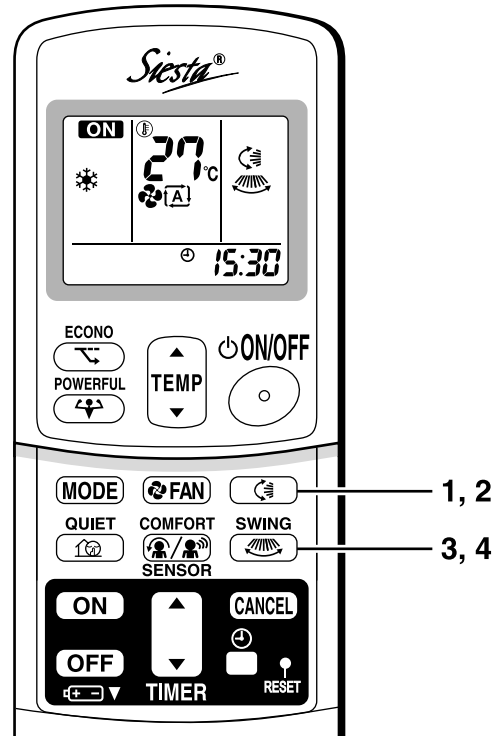
### ■ To adjust the horizontal blades (flaps)


1. Press “SWING button”.
  - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flaps have reached the desired position, press “SWING button” once more.
  - The flaps will stop moving.
  - “” disappears from the LCD.



### ■ To adjust the vertical blades (louvers)

3. Press “SWING button ”.
  - “” is displayed on the LCD.
4. When the louvers have reached the desired position, press the “SWING button ” once more.
  - The louvers will stop moving.
  - “” disappears from the LCD.

## ■ To start 3-D Airflow

1. 3. Press the “SWING button 

## ■ To cancel 3-D Airflow

2. 4. Press either the “SWING button 

## Notes on flaps and louvers angles


- When “SWING button” is selected, the flaps swinging range depends on the operation mode. (See the figure.)

### Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to be collected at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.

### ■ ATTENTION

- Always use a remote controller to adjust the angles of the flaps and louvers. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote controller to adjust the louvers angles. In side the air outlet, a fan is rotating at a high speed.

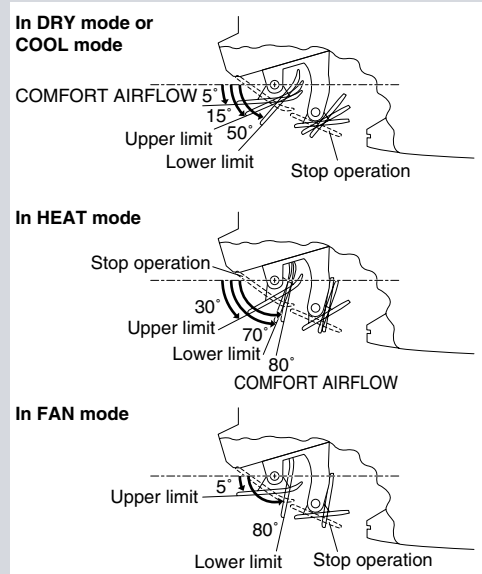


FLK(X)S25/35/50/60BAVMB

# Adjusting the Airflow Direction


You can adjust the air flow direction to increase your comfort.


## ■ To adjust the horizontal blade (flap)

### 1. Press “SWING button”.

- “” is displayed on the LCD and the flaps will begin to swing.


### 2. When the flaps have reached the desired position, press “SWING button” once more.

- The flap will stop moving.
- “” disappears from the LCD.

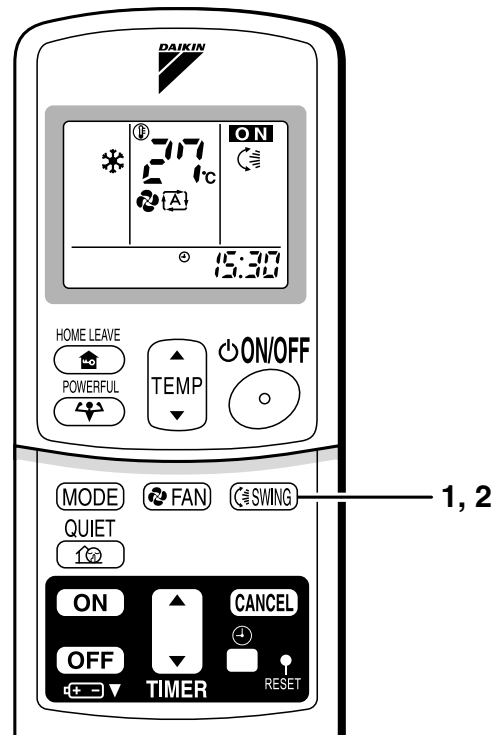

## ■ To adjust the vertical blades (louvers)

- When adjusting the louver, use a robust and stable stool and watch your steps carefully.  
Hold the knob and move the louvers.  
(You will find a knob on the left side and the right side blades.)

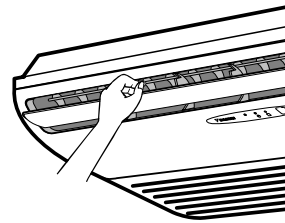


## Notes on flap and louvers angles.

- Unless [SWING] is selected, you should set the flap at a near- horizontal angle in COOL or DRY mode to obtain the best performance.
- In COOL or DRY mode, if the flap is fixed at a downward position, the flap automatically moves in about 60 minutes to prevent condensation on it.

### ■ ATTENTION

- Always use a remote controller to adjust the flap angle.  
If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

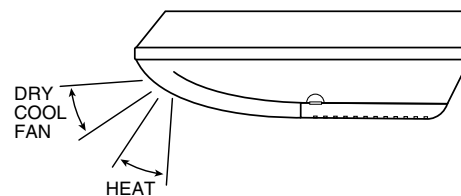



### 2.3.5 COMFORT AIRFLOW Operation

# COMFORT AIRFLOW Operation

The flow of air will be in the upward direction while in cooling mode and in the downward direction while in heating mode, which will provide a comfortable wind that will not come in direct contact with people.

## ■ To start COMFORT AIRFLOW operation

### 1. Press “COMFORT/SENSOR button” and select “” on the LCD.


- Each time the “COMFORT/SENSOR button” is pressed a different setting option is displayed on the LCD.
- By selecting “ • ” from the following icons, the air conditioner will be in COMFORT AIRFLOW operation combined with INTELLIGENT EYE operation.



## ■ To cancel COMFORT AIRFLOW operation


### 2. Press “COMFORT/SENSOR button”.

- Press the button to select “Blank”.

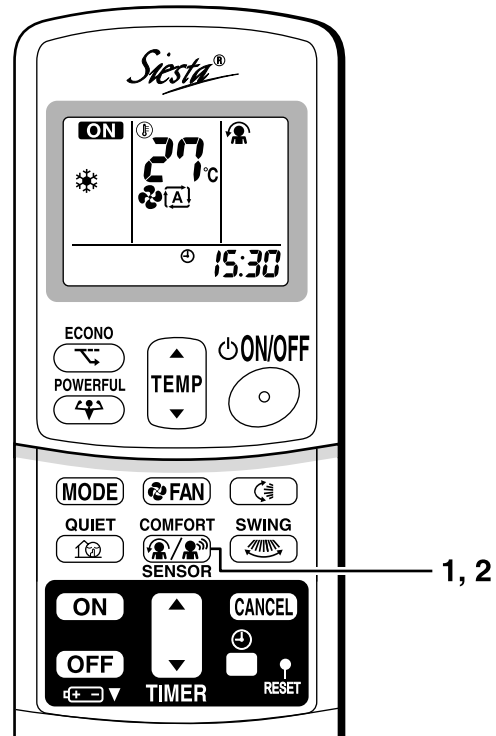


## Notes on “COMFORT AIRFLOW Operation”

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time.
- The volume of air will be set to AUTO. If the upward and downward airflow direction is selected, the COMFORT AIRFLOW function will be canceled.
- Priority is given to the function of whichever button is pressed last.
- The COMFORT AIRFLOW function makes the following airflow direction adjustments.  
The flaps will move upward while cooling so that the airflow will be directed upward.  
The flaps will move downward while heating so that the airflow will be directed downward.

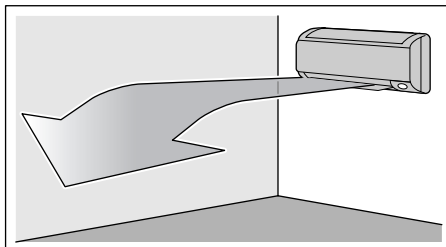

Cooling operation

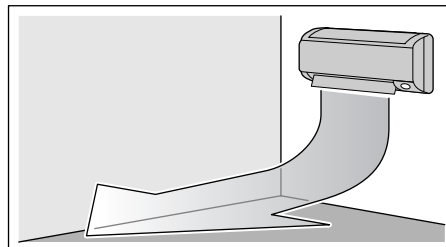

Heating operation





## 2.3.6 INTELLIGENT EYE Operation

# INTELLIGENT EYE Operation

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.

### ■ To start INTELLIGENT EYE operation


#### 1. Press “COMFORT/SENSOR button” and select “” on the LCD.

- Each time the “COMFORT/SENSOR button” is pressed a different setting option is displayed on the LCD.
- By selecting “ ” from the following icons, the air conditioner will be in COMFORT AIRFLOW operation combined with INTELLIGENT EYE operation.




### ■ To cancel the INTELLIGENT EYE operation

- #### 2. Press “COMFORT/SENSOR button”.
- Press the button to select “Blank”.

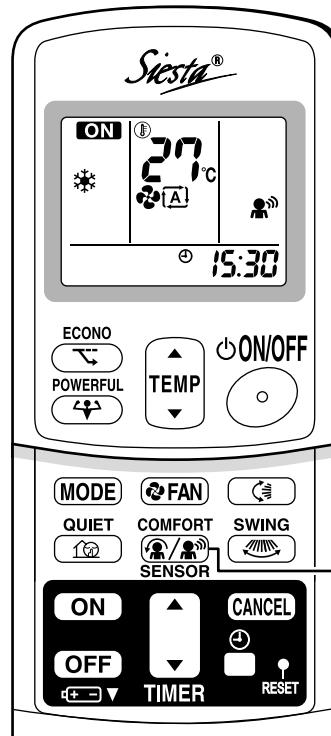

[EX.]

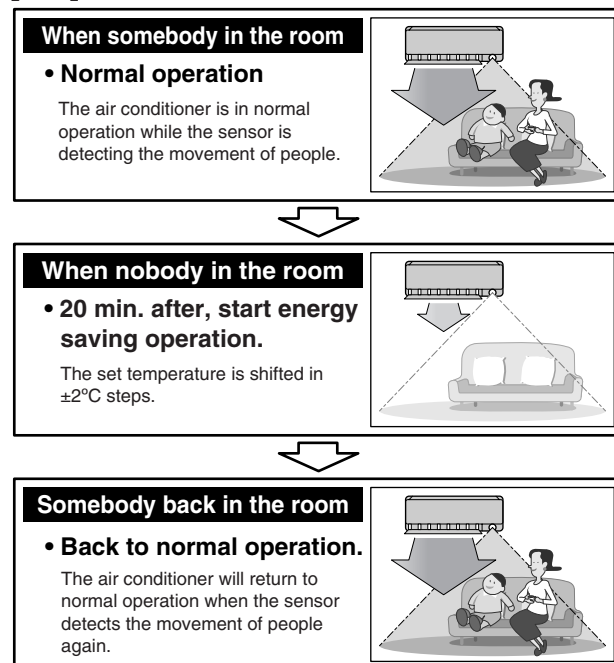

# INTELLIGENT EYE Operation


## “INTELLIGENT EYE” is useful for Energy Saving

### ■ Energy saving operation

- Change the temperature  $-2^{\circ}\text{C}$  in heating /  $+2^{\circ}\text{C}$  in cooling /  $+2^{\circ}\text{C}$  in dry mode from set temperature.
- Decrease the airflow rate slightly in FAN mode only. If no presence detected in the room for 20 minutes.

### Notes on “INTELLIGENT EYE”

- Application range is as follows.

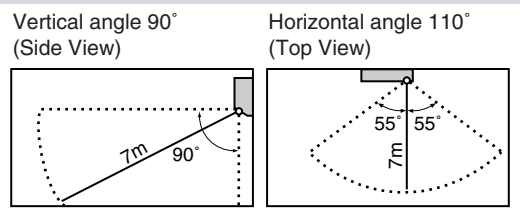

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- NIGHT SET MODE will not go on during use of INTELLIGENT EYE operation.

## ■ To combine “COMFORT AIRFLOW Operation” and “INTELLIGENT EYE Operation”

1. Press “COMFORT/SENSOR button” and select “” on the LCD.
  - Each time the “COMFORT/SENSOR button” is pressed a different setting option is displayed on the LCD.



2. Press “COMFORT/SENSOR button”.

- Press the button to select “Blank”.

- The air conditioner can go into operation with the COMFORT AIRFLOW and INTELLIGENT EYE functions combined.
- The volume of air will be set to AUTO. If the upward and downward airflow direction is selected, the COMFORT AIRFLOW operation will be canceled. Priority is given to the function of whichever button is pressed last.

### CAUTION


- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor’s detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

## 2.3.7 POWERFUL Operation

# POWERFUL Operation


POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

### ■ To start POWERFUL operation

1. Press “POWERFUL button”.
  - POWERFUL operation ends in 20minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
  - “” is displayed on the LCD.
  - When using POWERFUL operation, there are some functions which are not available.


### ■ To cancel POWERFUL operation

2. Press “POWERFUL button” again.
  - “” disappears from the LCD.

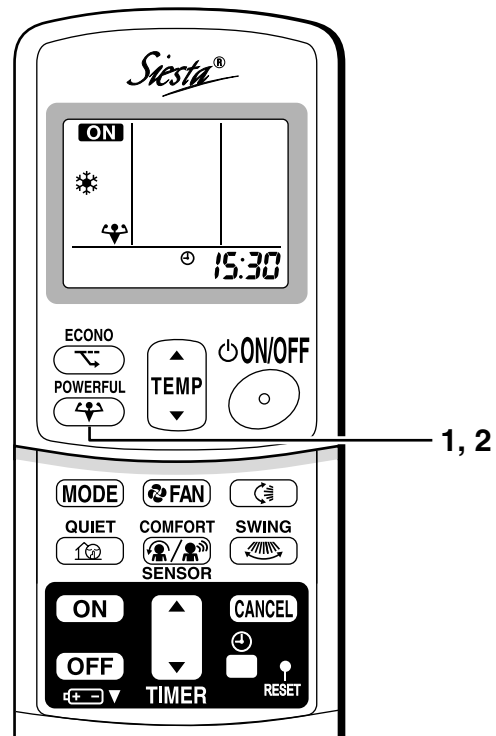

## NOTE

### ■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO, QUIET, or COMFORT Operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT mode**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting.  
The temperature and airflow settings are not variable.
- **In DRY mode**  
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN mode**  
The airflow rate is fixed to the maximum setting.
- **When using priority-room setting**  
See “Note for multi system”.

## 2.3.8 OUTDOOR UNIT QUIET Operation

# OUTDOOR UNIT QUIET Operation


OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

### ■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
  - “” is displayed on the LCD.

### ■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
  - “” disappears from the LCD.

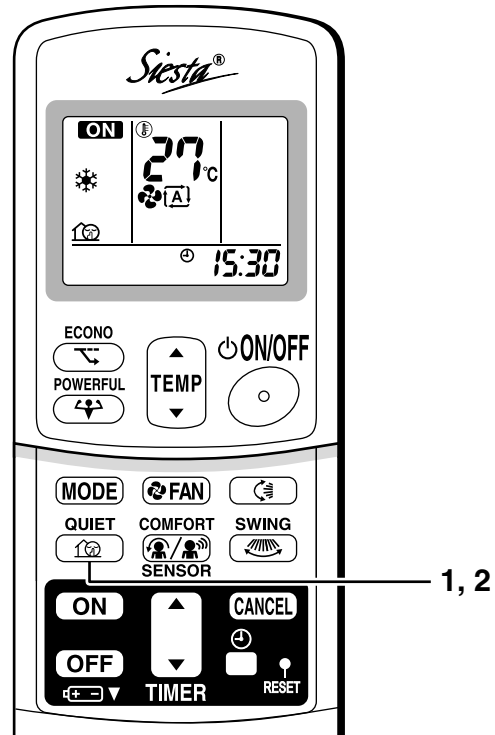

## NOTE

### ■ Note on OUTDOOR UNIT QUIET operation

- If using a multi system, this function will work only when the OUTDOOR UNIT QUIET operation is set on all operated indoor units. However, if using priority-room setting, see “Note for multi system”.
- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.

## 2.3.9 ECONO Operation

# ECONO Operation

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

### ■ To start ECONO operation

#### 1. Press “ECONO button” .


- “” is displayed on the LCD.

### ■ To cancel ECONO operation

#### 2. Press “ECONO button” again.


- “” disappears from the LCD.

Running current and power consumption

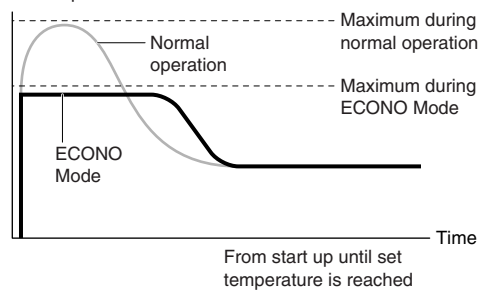


- This diagram is a representation for illustrative purposes only.

- \* The maximum running current and power consumption of the air conditioner in ECONO mode vary with the connecting outdoor unit.

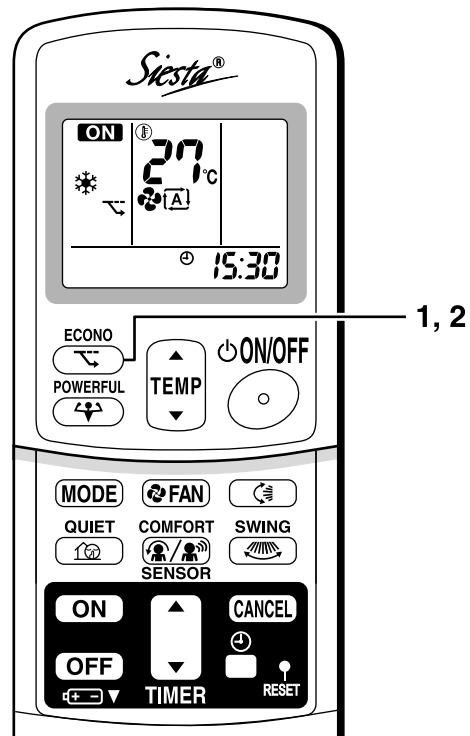

## NOTE

- ECONO Operation can only be set when the unit is running. Pressing the OFF button causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY and HEAT modes.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- Power consumption may not drop even if ECONO operation is used if the level of power consumption is already low.


### 2.3.10 HOME LEAVE Operation



# HOME LEAVE Operation

HOME LEAVE operation is a function which allows you to record your preferred temperature and air flow rate settings.

## ■ To start HOME LEAVE operation


### 1. Press “HOME LEAVE button”.

- “” is displayed on the LCD.
- The HOME LEAVE lamp lights up.

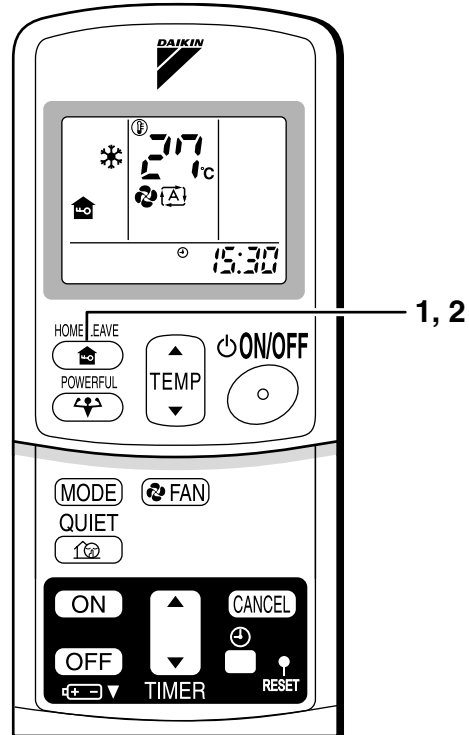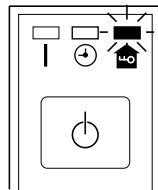

## ■ To cancel HOME LEAVE operation







### 2. Press “HOME LEAVE button” again.

- The HOME LEAVE lamp goes off.
- “” disappears from the LCD.

## Before using HOME LEAVE operation.

### ■ To set the temperature and air flow rate for HOME LEAVE operation

When using HOME LEAVE operation for the first time, please set the temperature and air flow rate for HOME LEAVE operation. Record your preferred temperature and air flow rate.

	Initial setting		Selectable range	
	temperature	Air flow rate	temperature	Air flow rate
Cooling	25°C	“  ”	18-32°C	5 step, “  ” and “  ”
Heating	25°C	“  ”	10-30°C	5 step, “  ” and “  ”

1. Press “HOME LEAVE button”. Make sure “” is displayed in the remote control display.
2. Adjust the set temperature with “” or “” as you like.
3. Adjust the air flow rate with “FAN” setting button as you like.

Home leave operation will run with these settings the next time you use the unit. To change the recorded information, repeat steps 1 – 3.

## ■ What's the HOME LEAVE operation?


Is there a set temperature and air flow rate which is most comfortable, a set temperature and air flow rate which you use the most? HOME LEAVE operation is a function that allows you to record your favorite set temperature and air flow rate. You can start your favorite operation mode simply by pressing the HOME LEAVE button on the remote control. This function is convenient in the following situations.

## ■ Useful in these cases

### 1. Use as an energy-saving mode.

Set the temperature 2-3°C higher (cooling) or lower (heating) than normal. Setting the fan strength to the lowest setting allows the unit to be used in energy-saving mode. Also convenient for use while you are out or sleeping.


#### • Every day before you leave the house...

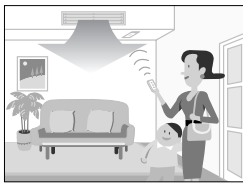

When you go out, push the "HOME LEAVE Operation" button, and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE Operation.




When you return, you will be welcomed by a comfortably air conditioned room.

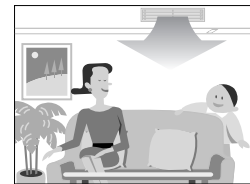

Push the "HOME LEAVE Operation" button again, and the air conditioner will adjust capacity to the set temperature for normal operation.


#### • Before bed...

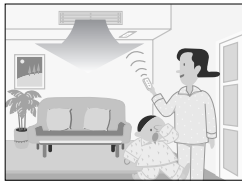

Set the unit to HOME LEAVE Operation before leaving the living room when going to bed.



The unit will maintain the temperature in the room at a comfortable level while you sleep.

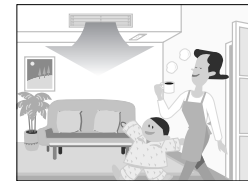

When you enter the living room in the morning, the temperature will be just right. Disengaging HOME LEAVE Operation will return the temperature to that set for normal operation. Even the coldest winters will pose no problem!

### 2. Use as a favorite mode.

Once you record the temperature and air flow rate settings you most often use, you can retrieve them by pressing HOME LEAVE button. You do not have to go through troublesome remote control operations.

## NOTE

- Once the temperature and air flow rate for HOME LEAVE operation are set, those settings will be used whenever HOME LEAVE operation is used in the future. To change these settings, please refer to the "Before using HOME LEAVE operation" section above.
- HOME LEAVE operation is only available in COOL and HEAT mode. Cannot be used in AUTO, DRY, and FAN mode.
- HOME LEAVE operation runs in accordance with the previous operation mode (COOL or HEAT) before using HOME LEAVE operation.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. Last button that was pressed has priority.
- The operation mode cannot be changed while HOME LEAVE operation is being used.
- When operation is shut off during HOME LEAVE operation, using the remote controller or the indoor unit ON/OFF switch, "🏠" will remain on the remote controller display.

### 2.3.11 TIMER Operation

## TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

### ■ To use OFF TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.

**1. Press “OFF TIMER button”.**

0:00 is displayed.



⏻ blinks.

**2. Press “TIMER Setting button” until the time setting reaches the point you like.**

- Every pressing of either button increases or decreases the time setting by 10 minutes.  
Holding down either button changes the setting rapidly.

**3. Press “OFF TIMER button” again.**

- The TIMER lamp lights up.

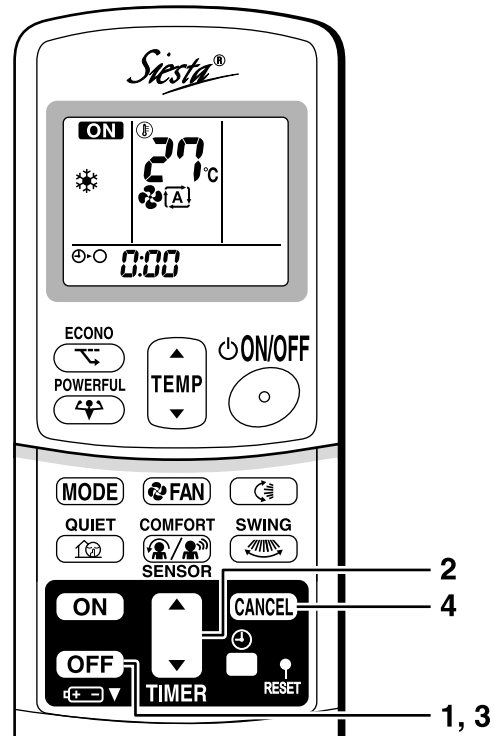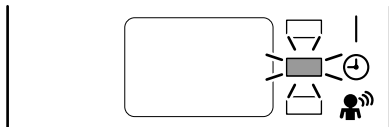

### ■ To cancel the OFF TIMER operation

**4. Press “CANCEL button”.**

- The TIMER lamp goes off.

### NOTE

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user.

#### ■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.



## ■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.

### 1. Press “ON TIMER button”.

6:00 is displayed.



⊕-| blinks.

### 2. Press “TIMER Setting button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

### 3. Press “ON TIMER button” again.

- The TIMER lamp lights up.

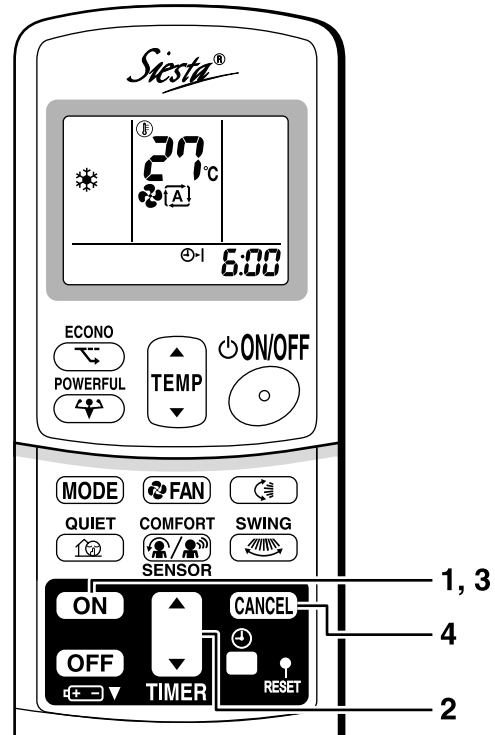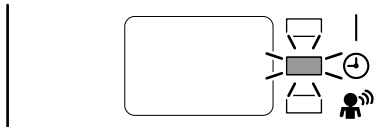


## ■ To cancel ON TIMER operation

### 4. Press “CANCEL button”.

- The TIMER lamp goes off.

## ■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

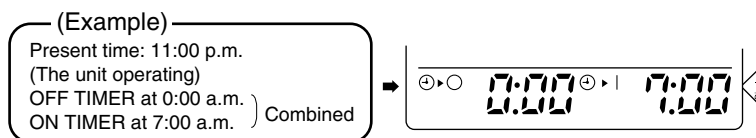

## ATTENTION


- In the following cases, set the timer again.
  - After a breaker has turned OFF.
  - After a power failure.
  - After replacing batteries in the remote controller.

## 2.3.12 Note for Multi System

# Note for Multi System

<< What is a “Multi System”? >>

This system has one outdoor unit connected to multiple indoor units.

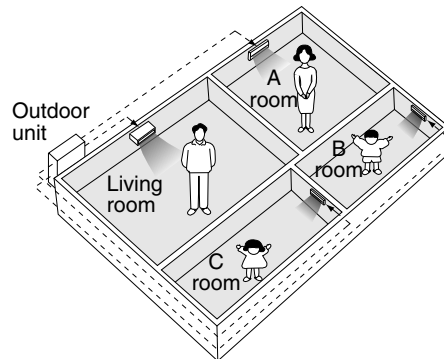

## ■ Selecting the Operation Mode

### 1. With the Priority Room Setting present but inactive or not present.

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode (\*1) as the first unit.

Otherwise, they will enter the Standby Mode, and the operation lamp will flash; this does not indicate malfunction. (\*1)

- COOL, DRY and FAN mode may be used at the same time.
- AUTO mode automatically selects COOL mode or HEAT mode based on the room temperature. Therefore, AUTO mode is available when selecting the same operation mode as that of the room with the first unit to be turned on.

#### <CAUTION>

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to **heating**. In this situation, the air conditioner running in FAN Mode will go on standby, and the operation lamp will flash.

### 2. With the Priority Room Setting active.

See “Priority Room Setting” on the next page.

## ■ NIGHT QUIET Mode (Available only for cooling operation)

NIGHT QUIET Mode requires initial programming during installation. Please consult your retailer or dealer for assistance. NIGHT QUIET Mode reduces the operation noise of the outdoor unit during the night time hours to prevent annoyance to neighbors.

- The NIGHT QUIET Mode is activated when the temperature drops 5°C or more below the highest temperature recorded that day. Therefore, when the temperature difference is less than 5°C, this function will not be activated.
- NIGHT QUIET Mode reduces slightly the cooling efficiency of the unit.

## ■ OUTDOOR UNIT QUIET Operation

### 1. With the Priority Room Setting present but inactive or not present.

When using the OUTDOOR UNIT QUIET operation feature with the Multi system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers.

When clearing OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using their remote controller. However OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms.

We recommend you release all rooms using their remote controllers.

### 2. With the Priority Room Setting active.

See “Priority Room Setting” on the next page.

## ■ Cooling / Heating Mode Lock (Available only for heat pump models)

The Cooling / Heating Mode Lock requires initial programming during installation. Please consult your retailer or dealer for assistance. The Cooling / Heating Mode Lock sets the unit forcibly to either Cooling or Heating Mode. This functions convenient when you wish to set all indoor units connected to the Multi system to the same operation mode.

## ■ Priority Room Setting

The Priority Room Setting requires initial programming during installation. Please consult your retailer or dealer for assistance.

The room designated as the Priority Room takes priority in the following situations;

### 1. Operation Mode Priority.

As the operation mode of the Priority Room takes precedence, the user can select a different operation mode from other rooms.

<Example>

\* Room A is the Priority Room in the examples.

When COOL mode is selected in Room A while operating the following modes in Room B,C and D:

Operation mode in Room B, C and D	Status of Room B, C and D when the unit in Room A is in COOL mode
COOL or DRY or FAN	Current operation mode maintained
HEAT	The unit enters Standby Mode. Operation resumes when the Room A unit stops operating.
AUTO	If the unit is set to COOL mode, operation continues. If set to HEAT mode, it enters Standby Mode. Operation resumes when the Room A unit stops operating.

### 2. Priority when POWERFUL operation is used.

<Example>

\* Room A is the Priority Room in the examples.

The indoor units in Rooms A,B,C and D are all operating. If the unit in Room A enters POWERFUL operation, operation capacity will be concentrated in Room A. In such a case, the cooling (heating) efficiency of the units in Rooms B,C and D may be slightly reduced.

### 3. Priority when using OUTDOOR UNIT QUIET operation.

<Example>


\* Room A is the Priority Room in the examples.

Just by setting the unit in Room A to QUIET operation, the air conditioner starts OUTDOOR UNIT QUIET operation.


You don't have to set all the operated indoor units to QUIET operation.

### 3. SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series

#### 3.1 BRC1D528

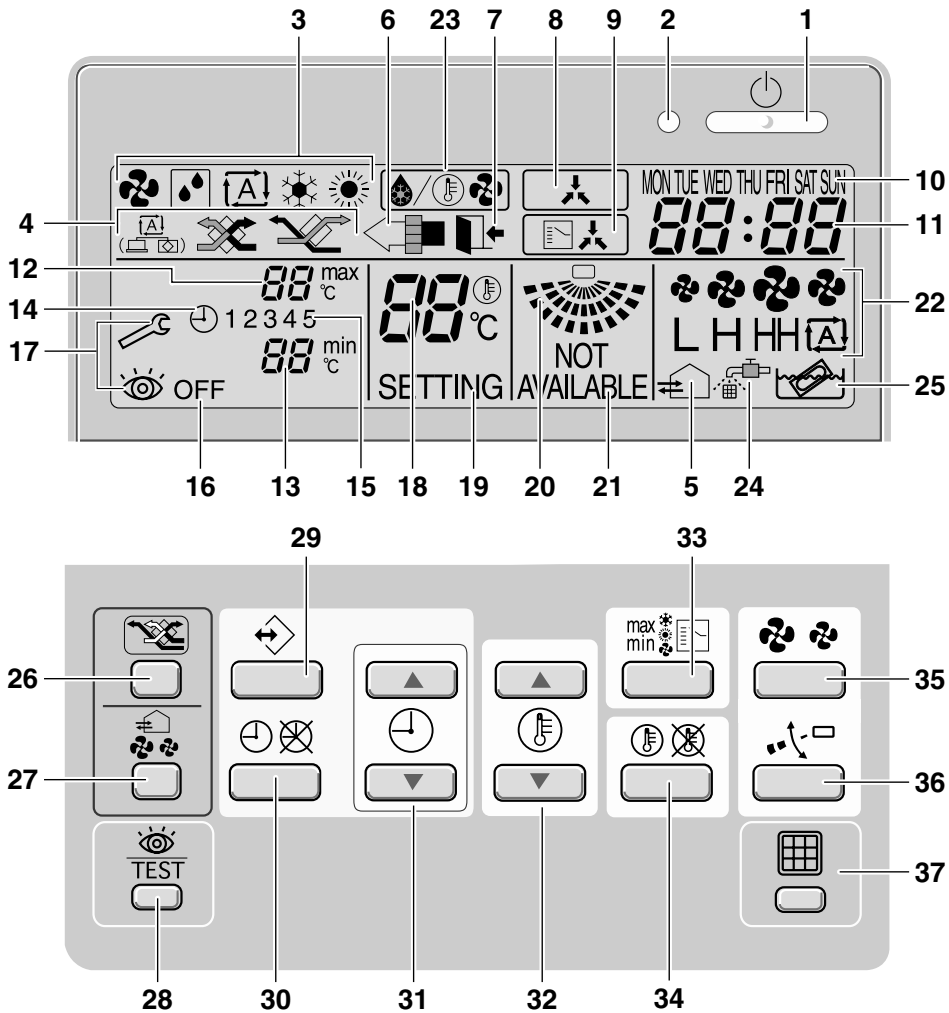

1

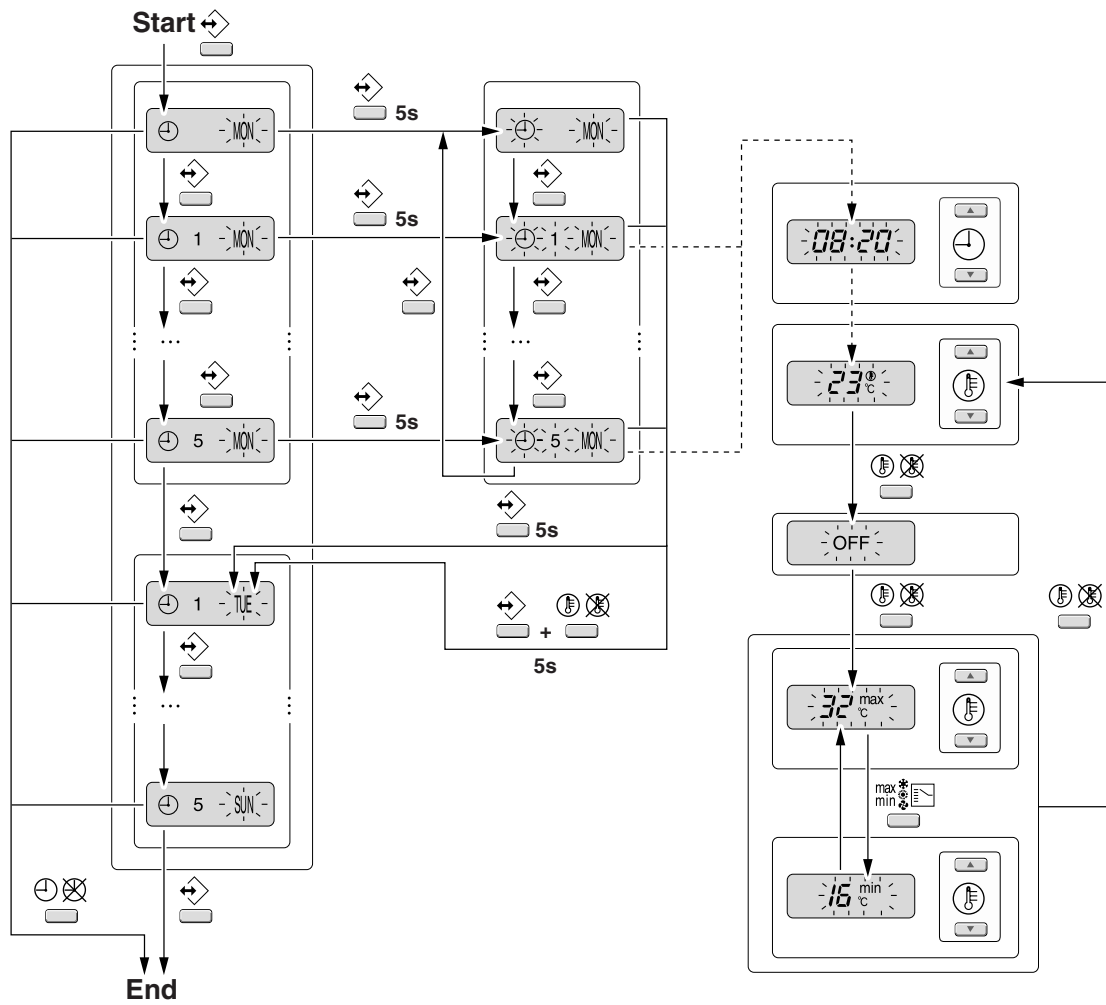

2



BRC1D528

Remote controller

Operation manual



THANK YOU FOR PURCHASING THIS CONTROLLER. READ THE MANUAL ATTENTIVELY BEFORE USING THE INSTALLATION. AFTER READING THE MANUAL, STORE IT IN A SAFE PLACE FOR FUTURE USE.



Before initial operation, contact your dealer to obtain all details concerning your air conditioning installation.

## WARNING

- Never let the remote controller get wet, this may cause an electric shock or fire.
- Never press the buttons of the remote controller with a hard, pointed object. The remote controller may be damaged.
- Never inspect or service the remote controller yourself, ask a qualified service person to do this.

## Contents

	<u>page</u>
1. Features and functions.....	1
2. Name and function of switches and icons.....	2
3. Setting up the controller.....	4
4. Description of the operation modes.....	5
5. Operation.....	5
6. Programming the schedule timer.....	10

## 1. Features and functions

The BRC1D528 is a state of the art remote controller that offers full control over your installation.

### 1 BASIC REMOTE CONTROLLER

The basic remote controller functions are:

- ON/OFF,
- operation mode change-over,
- temperature adjustment,
- air volume adjustment
- air flow direction adjustment.

### 2 CLOCK FUNCTION

The clock functions are:

- 24 hours real time clock,
- day of the week indicator.

### 3 SCHEDULE TIMER FUNCTION

The schedule timer functions are:

- a maximum of 5 actions can be programmed for each day of the week (totalling 35 actions),
- schedule timer can be enabled/disabled at any time,
- linked to a set temperature or a LIMIT operation or an OFF operation,
- "last command" overrules previous command until next scheduled command.

### 4 LIMIT OPERATION

Limit operation provides thermostat control within the range of the set minimum and maximum temperature. The minimum temperature setting will trigger heating, the maximum temperature setting will trigger cooling.

Operation manual

1

**DAIKIN**BRC1D528  
Remote controller  
4PW23717-1

### 5 LEAVE HOME

The leave home function prevents the room temperature from dropping when the occupants are out for a longer period. If the room temperature drops below 10°C, heating is started automatically. As soon as 15°C is reached, the controller returns to its original status.

### 6 BUTTON PERMISSION LEVEL

Three hierarchical permission levels can be set to limit the user action.

## 2. Name and function of switches and icons (Refer to figure 1)

### 1 ON/OFF BUTTON

Press the ON/OFF button to start or stop the system.

### 2 OPERATION LAMP

The operation lamp lights up during operation or blinks if a malfunction occurs.

### 3 OPERATION MODE ICON

These icons indicate the current operation mode (FAN, DRY, AUTOMATIC, COOLING, HEATING).

### 4 VENTILATION MODE ICON



These icons indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).

### 5 VENTILATION ICON

The ventilation icon appears when the ventilation is adjusted with the ventilation amount button (HRV only). Simultaneously, the ventilation amount is indicated by the fan speed icon (see 22).

### 6 AIR CLEANING ICON

This icon indicates that the air cleaning unit (option) is operational.

### 7 LEAVE HOME ICON

The leave home icon shows the status of the leave home function.

ON	Leave home is enabled
FLASHING	Leave home is active
OFF	Leave home is disabled

### 8 EXTERNAL CONTROL ICON

This icon indicates that another controller with higher priority is controlling or disabling your installation.

### 9 CHANGE-OVER UNDER CENTRALISED CONTROL ICON

This icon indicates that the change-over of the installation is under centralised control assigned to another indoor unit or optional cool/heat selector connected to the outdoor unit (= master remote controller).

### 10 DAY OF THE WEEK INDICATOR

MON TUE WED THU FRI SAT SUN

The day of the week indicator shows the current week day (or the set day when reading or programming the schedule timer).

### 11 CLOCK DISPLAY

The clock display indicates the current time (or the action time when reading or programming the schedule timer).

12 MAXTEMPERATURE IMUM SET  $88^{\text{max}}$   $^{\text{c}}$ 

The maximum set temperature indicates the maximum set temperature when in limit operation.

13 MINIMUM SET TEMPERATURE  $88^{\text{min}}$   $^{\text{c}}$ 

The minimum set temperature indicates the minimum set temperature when in limit operation.

## 14 SCHEDULE TIMER ICON

This icon indicates that the schedule timer is enabled.

## 15 ACTION ICONS 1 2 3 4 5

These icons indicate the actions for each day of the schedule timer.

## 16 OFF ICON OFF

This icon indicates that the OFF action is selected when programming the schedule timer.

## 17 INSPECTION REQUIRED and

These icons indicate that inspection is required. Consult your installer.

18 SET TEMPERATURE DISPLAY  $88^{\text{c}}$ 

This indicates the current set temperature of the installation (not shown in LIMIT operation or in FAN or DRY mode).

## 19 SETTING SETTING

Not used, for service purposes only.

## 20 AIR FLOW DIRECTION ICON

This icon indicates the air flow direction (only for installations with motorised air flow Baps).

21 NOT AVAILABLE <sup>NOT AVAILABLE</sup>

<sup>NOT AVAILABLE</sup> is displayed whenever a non-installed option is addressed or a function is not available.

## 22 FAN SPEED ICON

This icon indicates the set fan speed.

## 23 DEFROST/HOTSTART MODE ICON

This icon indicates that the defrost/hotstart mode is active.

## 24 AIR FILTER CLEANING TIME ICON

This icon indicates the air filter must be cleaned. Refer to the manual of the indoor unit.

## 25 ELEMENT CLEANING TIME ICON

This icon indicates the element must be cleaned (HRV only).

## 26 VENTILATION MODE BUTTON

The ventilation mode button operates the HRV; refer to the HRV manual for more details.

## 27 VENTILATION AMOUNT BUTTON

This button sets the ventilation amount; refer to the HRV manual for more details.

## 28 INSPECTION/TEST OPERATION BUTTON

Not used, for service purposes only.

## 29 PROGRAMMING BUTTON

This button is a multi-purpose button. Depending on the previous manipulations of the user, the programming button can have various functions.



30 SCHEDULE TIMER BUTTON 

This button enables or disables the schedule timer.

31 TIME ADJUST BUTTON  

These buttons are used to adjust the clock or, when in programming mode, to adjust the programmed action time. Both buttons have an auto-repeat function.

## 32 TEMPERATURE ADJUST BUTTONS



These buttons are used to adjust the current setpoint or, when in programming mode, to adjust the programmed setpoint temperature (step = 1°C). Both buttons are also used to adjust the day of the week.

## 33 OPERATION CHANGE/MIN-MIX BUTTON




This button is a multi-purpose button. Depending on the previous manipulations of the user, it can have following functions:

- 1 select the operation mode of the installation (FAN, DRY, AUTOMATIC, COOLING, HEATING)
- 2 toggle between minimum temperature and maximum temperature when in limit operation

34 SETPOINT/LIMIT BUTTON 

This button toggles between setpoint, limit operation or OFF (programming mode only).


35 FAN SPEED BUTTON 

This button toggles between L (Low), H (High), HH (very High),  (Automatic).

## 36 AIR FLOW DIRECTION ADJUST BUTTON



This button enables to adjust the air flow direction.

37 AIR FILTER CLEANING TIME ICON RESET BUTTON 


This button is used to reset the air filter cleaning time icon.





### 3. Setting up the controller

After initial installation, the user can set the clock and day of the week.


The controller is equipped with a schedule timer that enables the user to operate the installation automatically; setting the clock and day of the week is required to be able to use the schedule timer.

#### 1 CLOCK SETTING FUNCTION

Hold down the  button for 5 seconds. The clock read-out and the day of week indicator will blink, both can now be adjusted.

Use the  &  buttons to adjust the clock. Each time pressing the time adjust button will in/decrease the time by 1 minute. Keeping the  or  button pressed will in/decrease the time by 10 minutes.

Use the  &  buttons to adjust the day of the week. Each time pressing the  or  buttons will display the next or previous day.

Press the  button to confirm the current set time and day of the week.

If the controller, with blinking clock and day of week read-out, is left untouched for 5 minutes, the clock and day of the week will return to their previous settings; the clock setting function is no longer active.

#### 2 SETTING UP THE SCHEDULE TIMER

To set up the schedule timer, refer to chapter 6. "Programming the schedule timer" on page 10.

#### 4. Description of the operation modes

##### 1 FAN ONLY OPERATION

In this mode, air only circulates without heating or cooling.

##### 2 DRY OPERATION

In this mode, the air humidity will be lowered with a minimal temperature decrease.

The temperature and fan speed are controlled automatically and cannot be controlled by the remote controller.

Dry operation will not function if the room temperature is too low.

##### 3 AUTOMATIC OPERATION

In this mode, the controller will automatically switch between heating and cooling as required by the setpoint or limit temperature.


##### 4 COOLING OPERATION

In this mode, cooling will be activated as required by the setpoint or limit temperature.


##### 5 HEATING OPERATION

In this mode, heating will be activated as required by the setpoint or limit temperature.

##### Hot start (heat pump types only)

At the start of a heating operation, the indoor fan is stopped until a certain indoor heat exchanger temperature is reached and  is displayed. This prevents cold air from leaving the indoor unit.

##### Defrost (heat pump types only)

In heating operation, freezing of the outdoor heat exchanger may occur. If so, the heating capacity of the system lowers and the system goes into defrost operation. The indoor unit fan stops and  is displayed. After maximum 10 minutes of defrost operation, the system returns to heating operation again.

##### 6 LIMIT OPERATION $^{\min}_{\text{C}}$ & $^{\max}_{\text{C}}$

Limit operation is an additional mode that enables to keep the room temperature within certain limits. The  $^{\min}_{\text{C}}$  &  $^{\max}_{\text{C}}$  icons are displayed to confirm the activation of the limit operation.

##### 7 LEAVE HOME


LEAVE HOME is a feature that enables to keep the room temperature above 10°C when the occupants are out. This function will switch on heating if the installation is switched off.






#### 5. Operation


##### Manual operation




In manual operation, the user decides about the settings of the installation. The last setting remains active until the user changes it.

As the controller can be implemented for a wide variety of installations and features, it might occur that you select a function that is not available on your installation; if this is the case, the NOT AVAILABLE message will appear.

Use the  button to select the desired operation mode.





	Fan only operation
	Dry operation
	Automatic operation
	Cooling operation
	Heating operation

Press the  button to toggle between limit operation and the operations listed above.

In limit operation, use the  button to select minimum and maximum temperature settings. Use the  or  buttons to adjust the minimum and maximum temperature settings.




#### 1 FAN ONLY OPERATION

User adjustable parameters:

- Fan speed, use the  button,
- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.







#### 2 DRY OPERATION

User adjustable parameters:

- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.







#### 3 AUTOMATIC OPERATION

User adjustable parameters:

- Setpoint temperature, use the  &  buttons,
- Fan speed, use the  button,
- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.







#### 4 COOLING OPERATION

User adjustable parameters:

- Setpoint temperature, use the  &  buttons,
- Fan speed, use the  button,
- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.





#### 5 HEATING OPERATION

User adjustable parameters:

- Setpoint temperature, use the  &  buttons,
- Fan speed, use the  button,
- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.




#### 6 LIMIT OPERATION

User adjustable parameters:


- Fan speed, use the  button,
- Air flow direction adjust, use the  button,
- Ventilation mode, use the  button,
- Ventilation amount, use the  button.

## ADDITIONAL FEATURES OF THE CONTROLLER





## 1 LEAVE HOME

Press the   and  buttons simultaneously to enable the LEAVE HOME function.



KEEP IN MIND THAT THE  BUTTON MUST BE OFF TO GUARANTEE TRIGGERING OF THE LEAVE HOME FUNCTION.

## 2 Adjusting the air flow direction

Use the  button to adjust the air flow direction. Press the button to switch between fixed or variable air flow direction. Use the  icon to determine the fixed air flow direction by pressing the  button when the  icon indicates the desired direction.

**NOTE** Even if fixed air flow direction is selected, variable air flow direction can be enabled automatically to preserve proper operation of your installation.


## 3 SCHEDULE TIMER

All features and operation and programming of the schedule timer are described below.





**Schedule timer operation**

In schedule timer operation, the installation is also controlled by the schedule timer. The actions programmed in the schedule timer will be executed automatically.

The schedule timer always executes the last command; this means the user can temporarily overrule the last executed programmed action. Refer to "Manual operation" on page 5. The next programmed action (in the schedule timer) will return control to the schedule timer.

Use the  button to enable or disable the schedule timer.

**NOTE**

The schedule timer overrules the  button, only use the  button to enable or disable the schedule timer. The schedule timer is enabled when the  icon is visible. The  button only overrules the schedule timer until the next programmed action.



The programmed schedule is time driven. Make sure that the clock and day of the week are set correctly. Refer to "CLOCK SETTING FUNCTION" on page 4.



Manually adjust the clock for summertime and wintertime. Refer to "CLOCK SETTING FUNCTION" on page 4.



A power failure exceeding 1 hour will reset the clock and the day of the week. Refer to "CLOCK SETTING FUNCTION" on page 4 to adjust the clock and the day of the week.

The actions programmed in the schedule timer will not be lost after a power failure; reprogramming the schedule timer is not required.

To set up the SCHEDULE TIMER refer to chapter 6. "Programming the schedule timer" on page 10.

### What can the schedule timer do?

The concept of the schedule timer is simple, straightforward though powerful.

#### The schedule timer can order 3 actions:

- 1 switch on the installation at a scheduled time, in combination with a setpoint (exact temperature control)
- 2 switch off the installation (end of control)
- 3 switch on the installation at a scheduled time, in limit operation

#### The schedule timer can accept a maximum of 5 actions per day.

For each day of the week a maximum of 5 actions can be programmed, totalling a maximum of 35 programmed actions. The action that was programmed first for a certain day is action 1, the last programmed action for a day could be action 1 (in case only one action is programmed for that day) to 5.



It is of utmost importance to understand that the number assigned to the programmed action, DOES NOT DETERMINE WHEN the programmed action will be executed. Only the TIME, being a part of the data entered when programming the action, will determine when the programmed action will be executed.

### What will the schedule timer do?

If enabled, the schedule timer will execute the programmed actions.

It will order the installation to:

- cool or heat, depending on the current operation, if applicable; the setpoint will be displayed,

OR

- switch off the installation (the schedule timer remains enabled and reactivates the installation as programmed); the operation lamp will turn off,

OR

- cool or heat, whichever is required to keep the room temperature within a specified range (limit operation);  $t_c^{\min}$  and  $t_c^{\max}$  are displayed.



The schedule timer will change the operation mode in LIMIT operation only.

To be able to verify the programmed actions, you can browse the programmed actions, see below.

### What will the schedule timer NOT do?

The schedule timer will not:

- control fan speed,
- control air flow direction,
- control ventilation mode,
- control ventilation amount,
- change the operation mode for a scheduled setpoint.


The parameters listed above can be set manually, without interfering with the schedule timer.

More sophisticated remote controllers are available. Consult your dealer for more information.

### Browsing the programmed actions in the schedule timer (read-out only)

Refer to figure 2.


Browsing the programmed actions of the schedule timer is a sequential process. Only 2 buttons are used to browse the entire schedule timer program.



The  button is used to start browsing, to display the next programmed action or to exit browsing when displaying the last programmed action.


BRC1D528  
Remote controller  
4PW23717-1


**DAIKIN**

Operation manual  
8


The  button is used to exit browsing at once (without having to scroll through all programmed actions).

Press the  button to enter the browse mode, the  icon appears, MON will blink.



**NOTE**  Browsing always starts on Monday and ends on Sunday.

Check the  icon. If at least 1 action is programmed for Monday, **1** will appear.

The clock indicates the time when the programmed action is scheduled, either  $24^{\circ}\text{C}$ , OFF or  $15^{\circ}\text{C}^{\text{min}}$  and  $30^{\circ}\text{C}^{\text{max}}$  is being displayed.

**NOTE**  The temperatures mentioned above are for clarifying purposes only, temperature values on your controller may vary.



If **1** does not appear, it indicates that there are no programmed actions for Monday.

Press the  button again to go to the next day of the week.  will blink, this indicates that the programmed actions for Tuesday are being browsed.


The process described above is now restarted.



If at least 1 action is programmed for Tuesday, **1** will appear. The clock indicates the time when the programmed action will be enabled, either  $24^{\circ}\text{C}$ , OFF or  $15^{\circ}\text{C}^{\text{min}}$  and  $30^{\circ}\text{C}^{\text{max}}$  is being displayed.

If **1** does not appear, it indicates that there are no programmed actions for Tuesday.

Press the  button to display the next programmed action. If a second action is programmed for Tuesday,  will still be blinking and **1 2** will appear.

Assuming that 5 actions were programmed for Tuesday, a total of 5 presses will be required to display all programmed actions.

Continue pressing the  button until the day of the week indicator displays the current day (not blinking), you have now quit browsing.


**NOTE**  The number of times that the  button will have to be pressed to quit browsing depends on the number of programmed actions in the schedule timer.


### How do I interpret the programmed actions

To be able to understand the behaviour of your installation when the schedule timer is enabled, it is important to look at all programmed actions for the current day and maybe the last programmed action of yesterday.

If the first programmed action for today is not active yet, the current status of your installation depends, most probably but not necessarily, on the last programmed action from yesterday. Read the important note below.

If the first programmed action for today is already active, the current status of your installation depends, most probably but not necessarily, on the parameters programmed in the first programmed action for today. Read the important note below.

**NOTE**  To keep the operation of your installation simple, the schedule timer settings can easily be overruled by altering the current setting ("last command" overrules previous command until next scheduled command).

Conclusion: Although  is displayed, somebody might have altered the settings. The next programmed action will overrule the altered settings and all settings return as programmed.

Programmed actions might overlap; due to the "last command overrules" logic, the last scheduled command will rule.

### How do I interpret the readings on the display when the schedule timer is active

As described above, the schedule timer settings, (and as a consequence the display readings) might be overruled temporarily by a manual intervention.

If you want to be absolutely sure about the schedule timer settings for this very moment, you must browse the schedule timer programmed actions. Refer to "Browsing the programmed actions in the schedule timer" on page 8.

## 6 . Programming the schedule timer

### What do I have to program?

As the schedule timer is based on a week program (the same actions will be repeated every week) you will have to select the day of the week first.

Now you must choose an action:

- 1 switch on the installation at a scheduled time, in combination with a setpoint (exact temperature control)
- 2 switch off the installation (end of control)
- 3 switch on the installation at a scheduled time, in limit operation

Finally you must enter the time of the day when the action must be enabled.



**NOTE** If you program 2 or more actions on the same day and at the same time of the day, only the action with the highest action number (2 - 5) will be executed.

### Getting started

Programming the schedule timer is flexible (you can add, remove or alter programmed actions whenever required) and straightforward (programming steps are limited to a minimum).

Below are some tips and tricks to ensure successful programming of the schedule timer:

- familiarise yourself with the icons and the buttons, you will need them when programming,
- familiarise yourself with the browse function, you will need it to start programming. Refer to "Browsing the programmed actions in the schedule timer" on page 8,
- fill out the form at the end of this manual; note the time and the required action for each day (keep in mind that the number of actions is limited to 5 per day),
- take your time to enter all data accurately,
- try to program the actions for each day in logical sequence (start with action 1 for the first action and end with the highest number for the last action). This is not a requirement but it will make it much easier to interpret the program later,
- keep in mind that you can always alter, add or remove the programmed actions later.


BRC1D528  
Remote controller  
4PW23717-1

**DAIKIN**

Operation manual  
10

## Programming


### 1 THE SCHEDULE TIMER IS PROGRAMMED FOR THE FIRST TIME

**NOTE**  When changing day during programming you will have to confirm "the last action". Each day can have 5 programmed actions (numbered 1 to 5) but for some reason you might want to delete one, several or all programmed actions.

To be able to delete programmed actions, you must select the last action that you want to keep, this can be 1 to 5 or no action (⊖ is displayed and no action displayed).













All programmed actions with a number HIGHER than the selected one, or all programmed actions if no last action was selected will be deleted.




### PROGRAMMING THE FIRST DAY OF THE WEEK

**NOTE**  In the guidelines below it is assumed that you start programming the schedule timer actions on Monday and end with the schedule timer actions for Sunday.


If you prefer NOT to start on Monday, first browse to the desired day and then enter the PROGRAM mode.

In this particular case, no actions have been programmed before, all schedule timer actions are idle.


- Browse to Monday by pressing the  button. The  icon appears, MON will blink and one of the  icons might be displayed but all other fields remain blank, indicating that no actions are programmed for Monday.
- Enter the program mode by holding down the button  for 5 seconds, the  icon will now blink too.
- Press the  button to activate the first programmed action.
- A blinking **1** is displayed indicating that the first programmed action for Monday is being programmed; The set temperature and clock display are blinking.
- Press the  button to select either set temperature, OFF, or limit operation.
- Enter the desired temperature using the  &  buttons.
- Press the  button to toggle between minimum set temperature and maximum set temperature in limit operation, the selected temperature will blink.
- Enter the time when the action must start using the  &  buttons (min. step = 10 minutes).


**NOTE**  If, by accident, you pressed the  button, you activated the next action; **1 2** is displayed (**1** steady and **2** blinking). Press the  button repeatedly until a blinking **1** is displayed. You can now continue adjusting the settings for the first schedule timer action.



If the action and the corresponding time are correct, you can proceed to the second schedule timer action. This is done by pressing the  button, the data is saved and the next schedule timer action can be programmed.

Programming the remaining schedule timer actions for the same day is similar.

You can browse the schedule timer actions by pressing the  button.



**NOTE** Don't worry if you add additional schedule timer actions by pressing the  button repeatedly, they can be deleted when finishing the current day.

When all data for the schedule timer actions for Monday are entered, you must confirm the programmed actions.


Make sure the last schedule timer action you want to keep is selected (schedule timer actions with a higher number will be deleted).

Now you must choose between 2 options:

#### 1 CONFIRM AND COPY TO NEXT DAY





The schedule timer action programmed for the current day are also valid for the next day: use the "confirm last action and copy actions to next day" function by pressing the  and  buttons simultaneously for 5 seconds.

#### 2 CONFIRM ONLY

The schedule timer action programmed for the current day are only valid for the selected day: use the "confirm last action and go to next day" function by pressing the  button for 5 seconds.



Program mode is quit and depending on the choice made, the programmed actions are saved for Monday (and possibly Tuesday).


#### PROGRAMMING THE OTHER DAYS OF THE WEEK



Programming the other days of the week is identical to programming the first day of the week.  is blinking to indicate the selected day,  and  are steady if actions were copied from Monday to Tuesday, only  is displayed if no actions were copied from Monday to Tuesday.





#### 2 I WANT TO EDIT PROGRAMMED ACTIONS

Editing programmed actions is easy.

Make sure you are not in program mode ( not blinking); if required, press the  button to quit program mode.

Browse to the programmed actions using the  button, select the day and action you want to edit.

Press the  button for 5 seconds; program mode is enabled, the  icon and selected action are blinking. Edit the settings using the same buttons described above.

Select the "last action" using the  button and decide if you do or do not want to copy the programmed action(s) to the next day (pressing the  and  buttons simultaneously or only the  button for 5 seconds).


### 3 I WANT TO DELETE ONE OR MORE PROGRAMMED ACTIONS

Make sure you are not in program mode (⊕ not blinking); if required, press ⊕⊗ to quit program mode.

Browse to the programmed actions using the ⇄ button, select the day you want to edit.

Press the ⇄ button for 5 seconds; program mode is enabled, the ⊕ icon and selected action are blinking. Select the "last action" you want to keep using the ⇄ button. All higher actions will be deleted.

Confirm the deletion by pressing the ⇄ button for 5 seconds, OR confirm the deletion for the current and the next day too by pressing the ⇄ and ⊕⊗ buttons simultaneously for 5 seconds.

**NOTE**  In the case above, if for example the last action was 3, the programmed actions 4 and 5 will also be deleted (if they were present).


### 4 I WANT TO DELETE ALL PROGRAMMED ACTIONS AT ONCE

Quit programming or browsing.

Press the ⇄ and ⊕⊗ buttons simultaneously for 5 seconds; the ⊕ icon will invert and disappear to confirm deletion.

## 7. Maintenance

The remote controller does not need maintenance. Remove dirt with a soft damp cloth.

**NOTE**  Only use clear tepid water to moisten the cloth.

## 8. Troubleshooting

The guidelines below might help to solve your problem. If you cannot remedy the problem, consult your installer.

### No readings on the remote controller (display blank)

Check if the mains power is still applied to your installation.

### Only is displayed

This indicates that the installation has just been powered, please wait until  disappears.

### The schedule timer does work but the programmed actions are executed at the wrong time (e.g. 1 hour too late or too early)

Check if the clock and the day of the week are set correctly, correct if necessary (refer to "CLOCK SETTING FUNCTION" on page 4).

### I cannot enable the schedule timer (the ⊕ icon blinks for 2 seconds and disappears)

The schedule timer has not been programmed yet. First program the schedule timer (refer to "Programming the schedule timer" on page 10).

### I cannot enable the schedule timer (the icon is displayed)


The schedule timer can not be enabled when a centralised control is connected.

### Limit operation cannot be selected

Limit operation is not available for cooling only installations.

## 3.2 BRC1E51A7

# Names and Functions

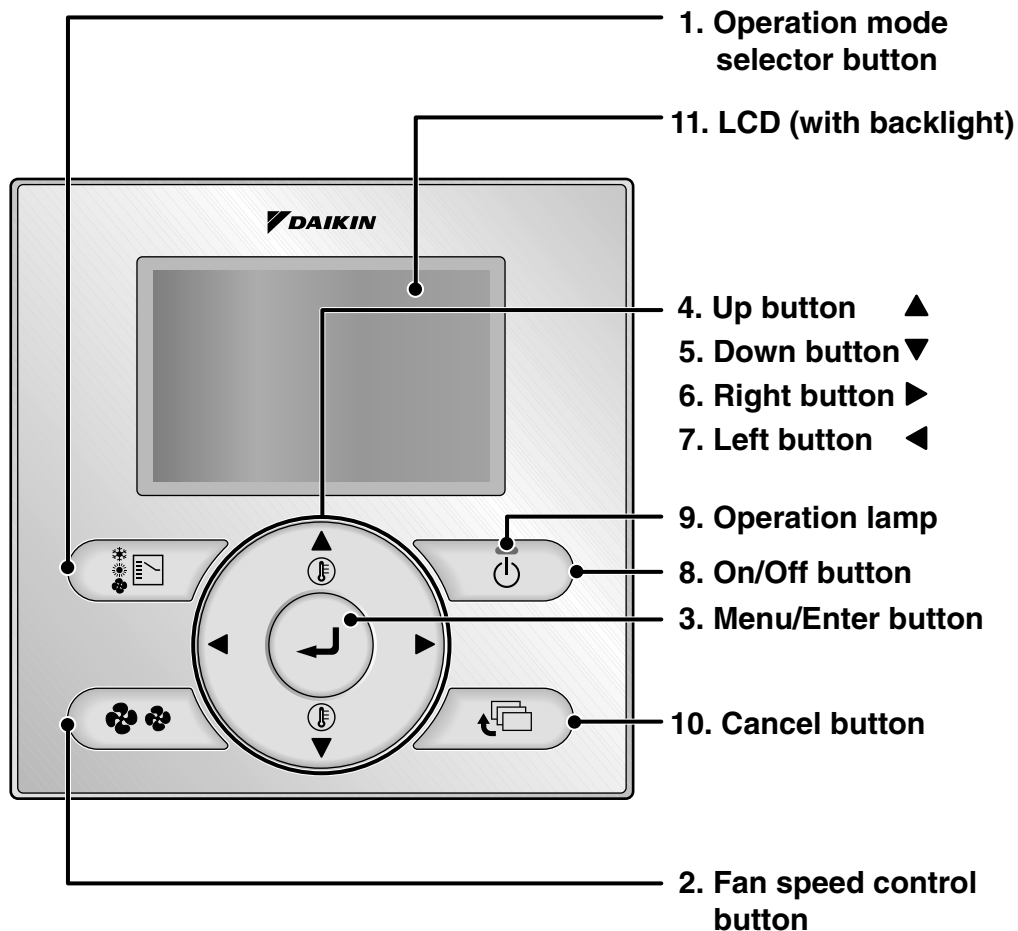

Functions other than basic operation items (i.e., On/Off, Operation mode selector, Fan speed control, and temperature settings) are set from the menu screen.

### NOTE

- Do not install the remote controller in places exposed to direct sunlight. Otherwise, the LCD may become discolored and nothing may be displayed.
- Do not pull or twist the remote controller cord. Otherwise, the remote controller may error.
- Do not press the buttons on the remote controller with objects with sharp ends. Otherwise, the remote controller may receive damage or error.

### 1. Operation mode selector button

---

- Press this button to select the operation mode of your preference. **(See page 14.)**
  - \* Available modes vary with the connecting model.

### 2. Fan speed control button

---

- Press this button to select the fan speed of your preference. **(See page 15.)**
  - \* Available fan speed vary with the connecting model.

### 3. Menu/Enter button

---

- Used to indicate the main menu. **(See page 24 for the menu items.)**
- Used to enter the setting item selected.

### 4. Up button ▲ (Be sure to press the part with the symbol ▲)

---

- Used to raise the set temperature.
- The next items on the upper side will be highlighted.  
(The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.

### 5. Down button ▼ (Be sure to press the part with the symbol ▼)

---

- Used to lower the set temperature.
- The next items on the lower side will be highlighted.  
(The highlighted items will be scrolled continuously when the button is kept pressed.)
- Used to change the item selected.

### 6. Right button ► (Be sure to press the part with the symbol ►)

---

- Used to highlight the next items on the right-hand side.
- Each screen is scrolled in the right-hand direction.
- Home leave settings are enabled with this button kept pressed for at least four seconds. **(See page 19.)**

### 7. Left button ◀ (Be sure to press the part with the symbol ◀)

---

- Used to highlight the next items on the left-hand side.
- Each screen is scrolled in the left-hand direction.
- Home leave settings are enabled with this button kept pressed for at least four seconds. **(See page 19.)**

### 8. On/Off button

---

- Press this button and system will start.
- Press this button again and system will stop.

### 9. Operation lamp (Green)

---

- This lamp lights up during operation.
- This lamp blinks if a error occurs.

### 10. Cancel button

---

- Used to return to the previous screen.

### 11. LCD (with backlight)

---


- The backlight will be light for approximately 30 seconds by pressing any operation button. Operate buttons excluding the On/Off button while the backlight is lit.
- If two remote controllers are used to control a single indoor unit, the backlight of the remote controller operated earlier than the other one will be lit.

# Names and Functions

## Liquid Crystal Display



- Two types of liquid crystal display (LCD) are available. The standard display is by default set.
- To go to the detailed display, select the detailed display in the main menu. (See page 46.)
- The displayed contents of the screen vary with the operation mode of the equipment interlocked. (The following display will appear when the air conditioner is in automatic heating operation.)

### Standard display

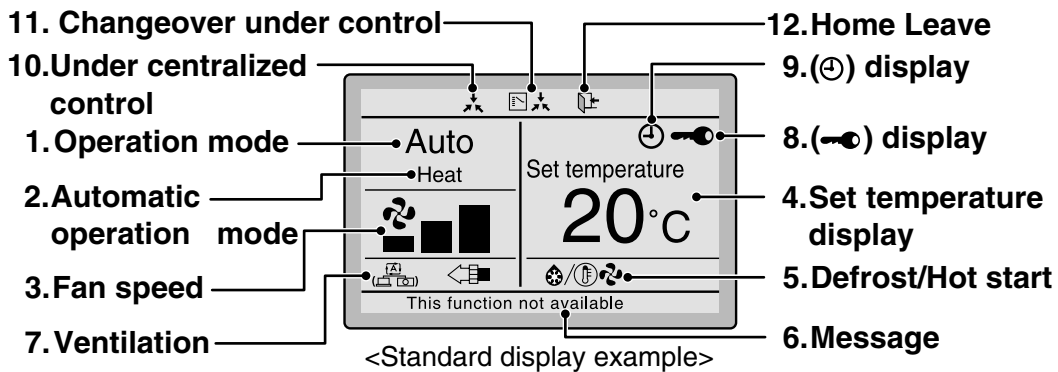

### Detailed display

- The airflow direction, clock, and detailed selection items appear on the detailed display screen in addition to the items appearing on the standard display.

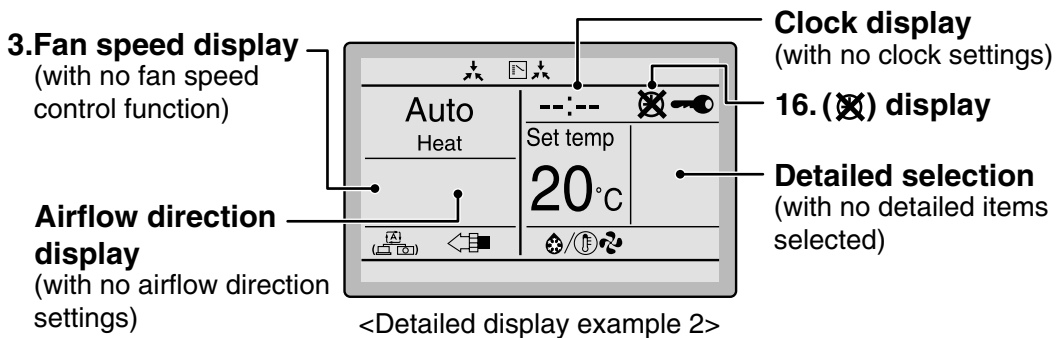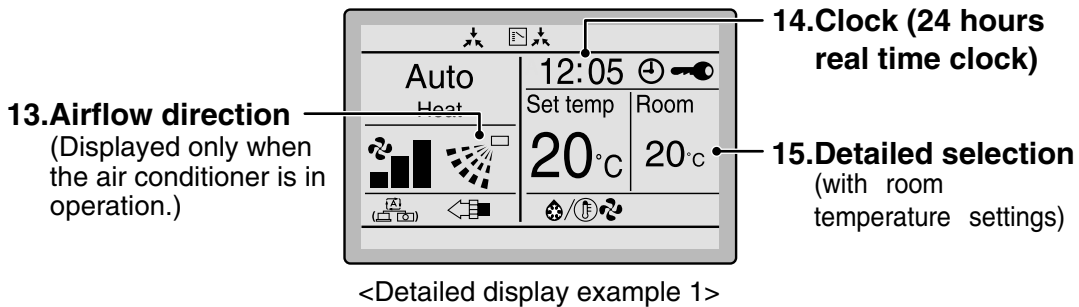

## 1. Operation mode

- Used to display the present operation mode Cool, Heat, Vent, Fan, Dry or Auto mode.

## 2. Automatic operation mode

- Used to display the present automatic operation mode (Cool or Heat).

## 3. Fan speed

- Used to display the fan speed that is set for the air conditioner.
- The fan speed will not be displayed if the air conditioner does not have fan speed control function.

## 4. Set temperature display

- Used to display the temperature set for the air conditioner.

## 5. Defrost/Hot start “/” (See page 16.)

If Ventilating operation “” is displayed:

- Displayed when a total heat exchanger unit, such as the VentiAir, is connected. For details, refer to the Operation Manual of the VentiAir.

## 6. Message

The following messages are displayed.  
“This function not available.”

- Displayed for a few seconds when an operation button is pressed if the indoor unit is not provided with the corresponding function.
- If a number of indoor units are in operation, the message will appear only if none of the indoor units is provided with the corresponding function, i.e., the message will not appear if at least one of the indoor units is provided with the corresponding function.

“Error: Press Menu Button.”

“Warning: Press Menu Button.”

- Displayed if the error or warning is detected (see page 53).

“Quick Cool/Heat” (SkyAir only)

- Displayed if the quick cooling/heating function is turned ON (see page 31).



“Clean the filter.”

“Clean the element.”

“Clean the filter and element.”

- Displayed when the time to clean the filter or element has come (see page 51).

## 7. Ventilation / Purifying

- Displayed when a total heat exchanger unit, such as the VentiAir, is connected.
- **Ventilation mode icon.** “”  
These icons indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).
- **AIR Purifying ICON** “”  
This icon indicates that the air cleaning unit (option) is operational.

## 8. display (See page 23.)

- Displayed when the key lock is set.

## 9. display (See page 34.)

- Displayed if the schedule timer or OFF reminder timer is enabled.

## 10. Under Centralized control “”

- Displayed if the system is under the management of central control equipment (optional accessories) and the operation of the system through the remote controller is prohibited.

## 11. Changeover under control “” (VRV only)

- Displayed on the remote controller if the remote controller has no cooling/heating selection eligibility mode (see page 21).

# Names and Functions

## 12. Home leave “” (See page 19.)

- The home leave icon shows the status of the home leave function.

ON	Home leave is enabled
FLASHING	Home Leave is active
OFF	Home Leave is disabled

## 13. Airflow direction “”

- Displayed when the airflow direction and swing are set (**see page 28**).
- This item is not displayed if the system is not provided with a function to set airflow directions.

## 14. Clock (24 hours real time clock)

- Displayed if the clock is set (**see page 48**).
- If the clock is not set, “-- : --” will be displayed.

## 15. Detailed selection

- Displayed if the detailed display items are selected (**see page 47**).
- No detailed items are by default selected.

## 16. display

- Displayed to inform that the clock needs setting again.
- The schedule timer function will not work unless the clock is set again.

# Basic Operation Method (Use of Direct Buttons)

## Cool/Heat/Auto/Fan Operation (SkyAir and VRV)

**Remote Controller Functions**


**Operation procedure**  
Explains a button operation procedure for the remote controller. Operate the buttons according to the procedure.

**Operation button display**  
Displays the positions of buttons to be operated.

**Operation Method**


**Operation screen display**  
Describes screens that will be displayed on the remote controller in operation.

**1**

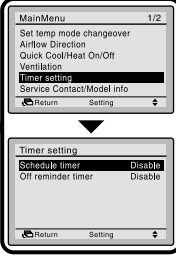

- Displays the main menu screen. (See page 26.)
- Press **▼▲** buttons to select **Timer setting** on the main menu screen. Press Menu/Enter button to display the timer settings screen.

\* Items presently enabled or disabled are displayed.

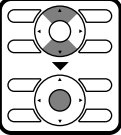


### Preparation


- For mechanical protection purposes, turn ON the system at least six hours before starting the operation of the system.
- Do not turn OFF the system in season in order to ensure the smooth starting of the system.

### Operation Method

**1**

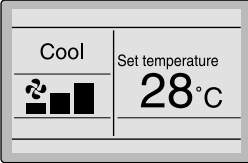

- Press Operation Mode Selector button several times until the desired mode Cooling, Heating, Fan, or Auto mode is selected.




- Unavailable operation modes are not displayed.
- Only the Cooling or Fan mode can be selected if the air conditioner is a cooling-only model.
- The Auto mode can be set in the case of the VRV cooling/heating simultaneous operation system.
- Changeover under control will appear on each remote controller, but only the Cooling or Fan mode can be set in the case of the VRV cooling-only system.



**Note**

- Before making a mode change, make sure that Changeover under control is not displayed on the remote controller. The cooling or heating mode cannot be selected if the above is displayed on the remote controller. See page 21 if Changeover under control display blinks.




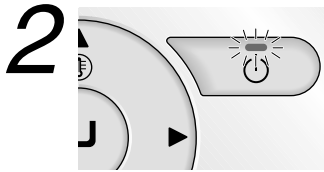


- Press On/Off button.  
The Operation lamp (green) will be lit and the system will start operating.

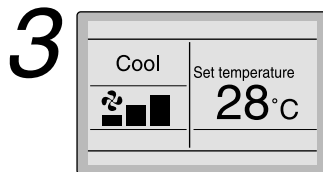



- The set temperature will increase by 1°C when ▲ button is pressed and decrease by 1°C when ▼ button is pressed.



\* No temperature settings are possible while in fan mode.

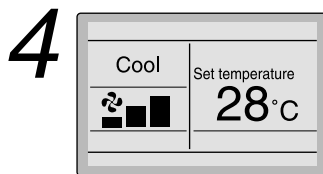

- To make fan speed control, press Fan speed control button and select the desired fan speed from Low, Middle or High.

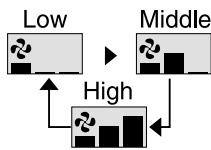


- \* Two fan speed adjustment levels Low, High may be available depending on the type of indoor unit.
- \* The system may be in automatic fan speed control for mechanical protection purposes.
- \* The system may be in automatic fan speed control according to the room temperature.  
The fan may stop operating, which, however, is not a failure.
- \* The completion of fan speed selection may take time, which, however, is not a failure.

5


- Make airflow direction settings from the main menu (see page 28).

\* The airflow direction of the system cannot be changed unless the system is provided with a function to allow airflow direction changes.

## Basic Operation Method (Use of Direct Buttons)

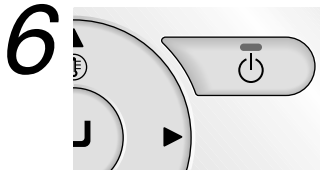

- The Operation lamp will be turned OFF and the system will stop operating when On/Off button is pressed again.



- \* While the system is in heating operation, the system will be in fan operation for approximately one minute in order to eliminate the heat in the indoor unit after the heating operation comes to a stop.

### Note

- Do not turn power OFF soon after the system stops operating. Be sure to wait for at least five minutes so that the drain discharging device will finish discharging the residual drain. Otherwise, water leakage or failures may result.

## Characteristics of Heating Operation

### Starting operation

- The system in heating operation generally requires a long time to attain the set temperature compared with the system in cooling operation. It is recommended to start operating the system in advance by utilizing the timer.

### Perform the following operation of the system in order to prevent the degradation of the heating capability or cold winds from blowing out.

#### Defrosting operation

- The heating capability of the system will drop if the outdoor unit frosts up. Therefore, the system will go into defrosting operation automatically.
- The system will stop blowing out hot air, and “❄️/🔥” (Defrost/Hot start) will be displayed on the remote controller.
- The system will return to normal operation with an elapse of approximately six to eight minutes (but not more than 10 minutes).

#### Hot start (VRV only)

- When the system goes into heating operation, the wind will stop in order to prevent cold air from blowing out of the system in defrosting operation. (In that case, “❄️/🔥” (Defrost/Hot start) will be displayed on the remote controller.)

## Outdoor temperature and heating capability

- The heating capability of the system will drop with a decrease in outdoor temperature.  
If that happens, use the system along with another heating appliance. (In the above case, be sure to ventilate the room as frequently as possible.)  
Do not use the heating appliance in places where the heating appliance is exposed to the wind from the system.
- The system is of hot air circulation type. Therefore, it takes some time for the room to become warm after the system starts operating.  
The indoor fan will automatically go into breezing operation until the inner temperature of the system rises to a certain level.
- If the hot air stays around the ceiling and your feet feel cold, the use of a circulator is recommended.  
For details, consult your Daikin dealer.


## Program Dry Operation

### Preparation

- For mechanical protection purposes, turn ON the system at least six hours before starting the operation of the system.
- Do not turn OFF the system in season in order to ensure the smooth starting of the system.
- The dry mode may not be selected if the remote controller has no right to select cooling/heating mode (see page 22 for details).

### Operation Method

1

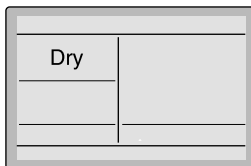


- Press Operation Mode Selector button several times until the Dry operation is selected.




\* The dry operation may not be available depending on the type of indoor unit.

## Basic Operation Method (Use of Direct Buttons)

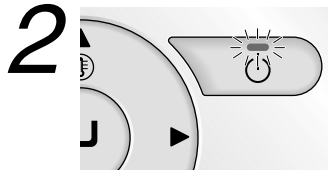

- Press On/Off button.  
The Operation lamp (green) will be lit and the system will start operating.




\* The microcomputer is in automatic temperature and fan speed control. Therefore, temperature or fan speed settings cannot be made or changed while the air conditioner is in operation.

### 3

- Make airflow direction settings from the main menu (see page 28).

\* The airflow direction of the system cannot be changed unless the system is provided with a function to allow airflow direction changes.

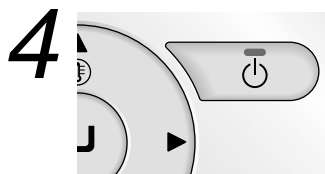

- The Operation lamp will be turned OFF and the system will stop operating when On/Off button is pressed again.




#### Note

- Do not turn power OFF soon after the system stops operating. Be sure to wait for at least five minutes so that the drain discharging device will finish discharging the residual drain. Otherwise, water leakage or failures may result.

## Operation Contents

### Program Dry

The Program dry function of the system repeats the weak cooling operation of the system intermittently to dehumidify the room without dropping the room temperature as much as possible for the prevention of excessive cooling.

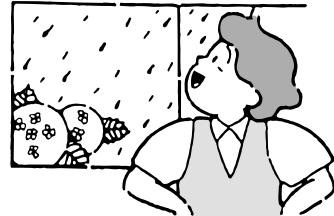

### Program Dry Operation

- The microcomputer is in automatic temperature and fan speed control. Therefore, temperature or fan speed settings cannot be made or changed while the air conditioner is in operation.

## Home Leave



Home Leave is a feature that enables to keep the room temperature above 10°C when the occupants are out.

#### Note


- This function will switch on heating if the installation is switched off.
- For the setting, please contact your local dealer.

**Operation Method** The home leave can not be enabled when a centralized control is connected.

1

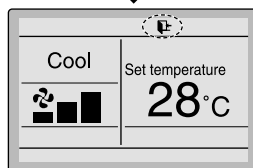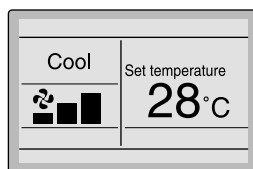

- Press and hold the “▶” or “◀” button for at least four seconds. (During backlight lit)
- The Home Leave icon displays and function is enabled.



The Home Leave icon shows the status of the home leave function.

ON	Home leave is enabled
FLASHING	Home leave is active
OFF	Home leave is disabled

- To cancel the home leave mode, continue pressing Menu/Enter button for at least four seconds. (During backlight lit)

# Basic Operation Method (Use of Direct Buttons)


## Ventilation Operation When Air Conditioner Interlocked with Total Heat Exchanger

### Preparation


- For mechanical protection purposes, turn ON the system at least six hours before starting the operation of the system.
- Do not turn OFF the system in season in order to ensure the smooth starting of the system.

### Operation Method

1

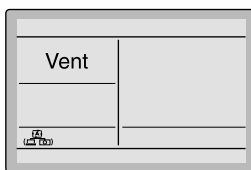

- Set the Operation mode selector button to Ventilation in the case of operating the total heat exchanger without the system between seasons.



2

- To change the ventilation mode setting, make necessary settings from the main menu (see page 33).


\* Ventilation mode: Automatic, Heat exchange, and Bypass

3

- To change the ventilation rate, make necessary settings from the main menu (see page 32).

\* Ventilation rate: Low or High


4

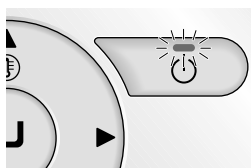


- Press On/Off button.  
The Operation lamp (green) will be lit and the system will start operating.



5

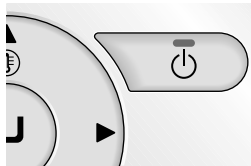

- The Operation lamp will be turned OFF and the system will stop operating when On/Off button is pressed again.






## Setting Method of the Cooling/Heating Selection Eligibility


(VRV only)


**Setting Changes** See page 22 for an explanation of the cooling/heating selection eligibility.

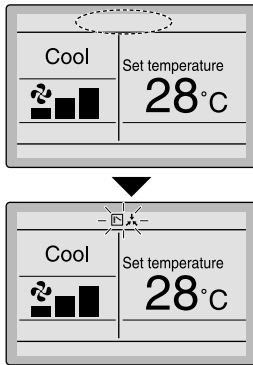1




- Continue pressing Operation Mode Selector button of the remote controller for at least four seconds. (During backlight lit) A remote controller will not display “” (Changeover under control) if a cooling/heating selection eligibility is granted to the remote controller.
- The display “” (Changeover under control) on each remote controller connected to the same outdoor unit or BS unit will start blinking.






- \* Vent mode setting changes are possible regardless of the cooling/heating selection eligibility.
- \* If a cooling/heating selection eligibility is set in the cooling/heating selection remote controller (★), all the remote controllers will display “” (Changeover under control). In this case, no cooling/heating selection eligibility can be set in the remote controllers.
- ★Refer to the operation manual provided to the outdoor unit for the details of the cooling/heating selection remote controller.


- Set a cooling/heating selection eligibility as explained below.

**Selection Settings** The display “” (Changeover under control) will blink when the power is turned ON for the first time.

2

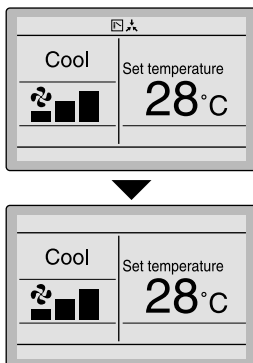


- Press Operation Mode Selector button of the remote controller for which the selection eligibility to be set. Then the cooling/heating selection eligibility will be set and the display “” (Changeover under control) will disappear. The display “” (Changeover under control) will appear on the other remote controllers.





# Basic Operation Method (Use of Direct Buttons)

## Operation Selection

### 3

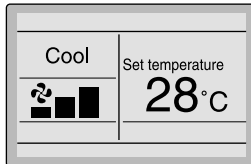


- Press the remote controller that has the cooling/heating selection eligibility (or the remote controller without the display “”) several times until the desired mode is selected. The display will change to “Fan”, “Dry”, “Auto”, “Cool”, “Heat” each time the button is pressed.
- The display “Auto” will appear for the heating/cooling simultaneous operation system only.  
At that time, the other remote controllers with no selection right will follow suit and change the display automatically.



## Cool/Heat Selection Eligibility

- The “Cool”, “Heat”, “Auto” can be set for only the remote controller for which the cooling/heating selection eligibility is set.  
(The display “Auto” will appear for the heating/cooling simultaneous operation system only.)

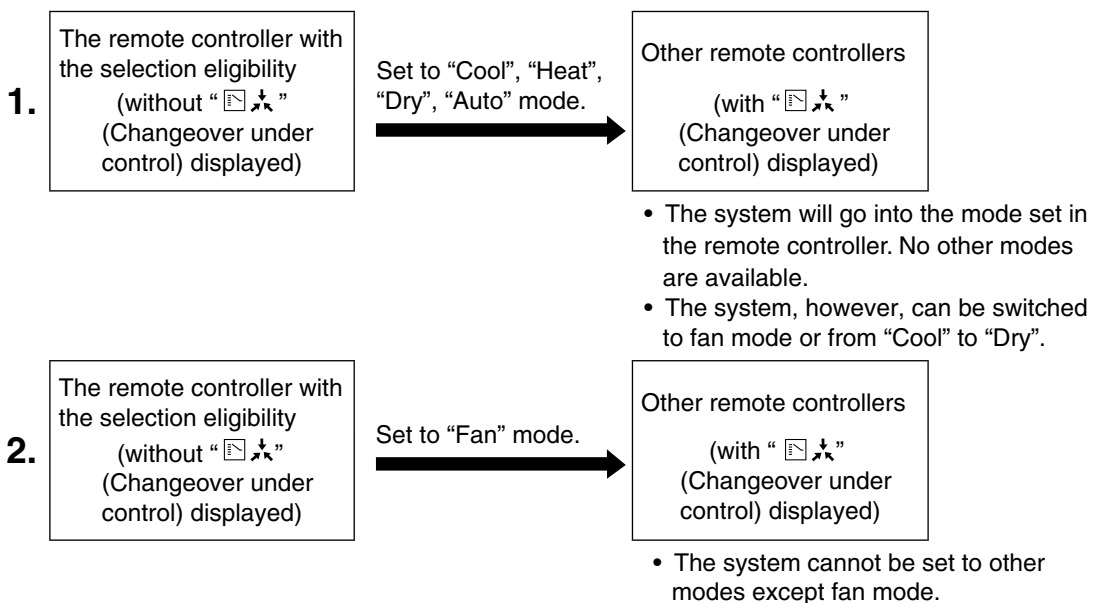




## Precautions for Setting Cooling/Heating Selection Eligibility

- The cooling/heating selection eligibility needs to be set for a single remote controller in the following case.


### (Cooling/Heating selected operation system)

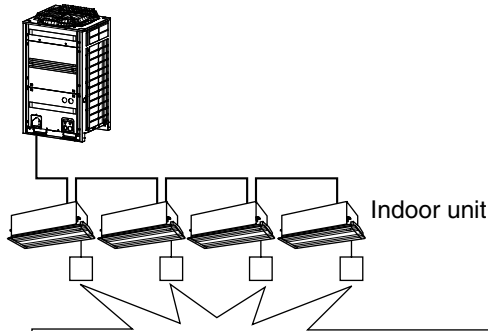

**A number of indoor units are connected to a single outdoor unit.**

Set the cooling/heating/fan selection eligibility in one of the remote controllers.

### (Cooling/Heating simultaneous operation system)

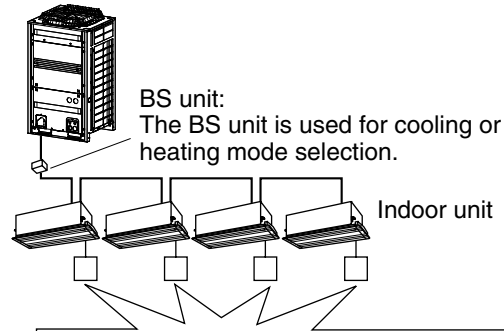


**A single BS unit is connected to a number of indoor units.**

Set the cooling/heating/auto/fan selection eligibility in one of the remote controllers.

## Key Lock

**Operation Method** Make settings and cancel settings in the basic screen.

1

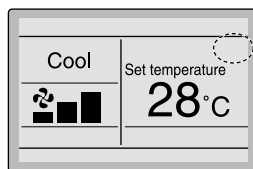



Basic screen

- Continue pressing Menu/Enter button for at least four seconds. (During backlight lit)



2

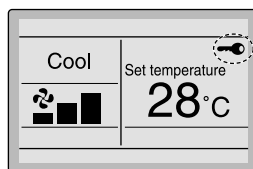

- “” will appear. All buttons are disabled when the keys are locked.
- To cancel the key lock mode, continue pressing Menu/Enter button for at least four seconds. (During backlight lit)

# Quick Reference of Main Menu Items

## ■ The main menu has the following items.

Setting and display items		Description	Reference page
<b>Set temp mode changeover</b>		Select normal set temperature or limit control.	27
<b>Airflow direction setting</b>		<p><b>Used to make airflow direction settings.</b></p> <ul style="list-style-type: none"> <li>The airflow direction blade are automatically operated up and down (left and right).</li> <li>The fixed airflow directions are set to five positions.</li> </ul> <p>* This function is not available to all models.</p>	28
<b>Quick Cooling/Heating On/Off</b> (SkyAir only)		<p><b>Used to set the room to a conformable temperature quickly (unless the system is not in program dry or fan operation).</b></p> <ul style="list-style-type: none"> <li>The maximum quick cooling/heating operation period is 30 minutes.</li> </ul>	31
<b>Ventilation</b> (Ventilation operation settings for total heat exchanger)	<b>Ventilation rate</b>	Used to set to "Low" "High"	32
	<b>Ventilation mode</b>	Used to set Automatic, Heat exchange, and Bypass.	33
<b>Timer setting</b>	<b>Schedule timer</b>	<ul style="list-style-type: none"> <li>Operation start time and stop time can be set according to the day of the week. Either one of the following operation modes can be selected. <ul style="list-style-type: none"> <li>Operation at set temperature: Normal operation</li> <li>Operation within set temperature range (between max. and min. temperatures): Limit operation</li> </ul> </li> <li>Up to 5 actions can be set for each day.</li> <li>Convenient holiday settings and temporary closure settings are possible.</li> </ul> <p>* Clock settings are necessary. * The system goes into schedule timer operation in the previous mode set for the system.</p>	35
	<b>Off reminder timer</b>	<p><b>Used to set each operation period of the system.</b></p> <ul style="list-style-type: none"> <li>Possible to set in 10 minute units from 30 to 180 minutes.</li> </ul>	42
<b>Service Contact/Model Information</b>		Used to display the service contact and model information.	44

Setting and display items		Description	Reference page
<b>Convenient functions</b>	<b>Contrast adjustment</b>	Used to make LCD contrast adjustment.	45
	<b>Display changeover</b> Standard or detailed display	<b>Used to set to standard or detailed display mode.</b> <ul style="list-style-type: none"> <li>• Display Standard or detailed display</li> <li>• Detailed display settings Selectable from the display room temperature, outdoor temperature, system, or without any display items.</li> </ul>	46
<b>Setting status list</b>		• Used to display a list of current settings for available items.	48
<b>Clock setting</b>		<b>Used to make date and time settings and corrections.</b> <ul style="list-style-type: none"> <li>• The clock is in 24 hours real time clock.</li> <li>• The accuracy of the clock is within <math>\pm 30</math> seconds per month.</li> <li>• If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply. The clock needs settings again if the power failure period exceeds 48 hours.</li> </ul>	48
<b>Language changeover</b>		The displayed language can be selected from the following language. (English/Deutsch/Français/Español/Italiano/Ελληνικά/Nederlands/Portugues/Русский/Түркçe)	50

Note: Available setting items vary with the model connected.  
Only the available setting items appear in the menu.

<p><b>Menu Items of Sub Remote Controller</b></p> <p>If two remote controllers are in control of a single indoor unit, the following menu items are not set in the sub remote controller. Set them in the main remote controller.</p> <ul style="list-style-type: none"> <li>• Set temp mode changeover</li> <li>• Schedule timer</li> <li>• Off reminder timer</li> <li>• Home leave</li> </ul>	
--	--


# Menu Manipulation

## Manipulating the Main Menu Screen

### ■ Display Method for Main Menu


#### Operation Method

1

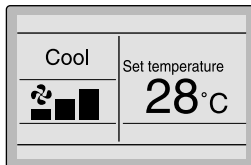


Basic screen

- Press Menu/Enter button.



2

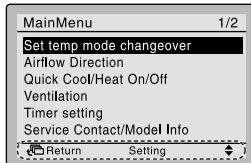


Main menu screen

- The main menu screen will appear.

← Instructions for manipulating the buttons will appear.

3

- Selecting items from the main menu.
  1. Press ▼▲ buttons to select the desired item to be set.
  2. Press Menu/Enter button to display the selected settings screen.

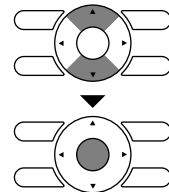

4

- To go back to the basic screen from the main menu screen, press the Cancel button.



### Caution

- While setting items, if a button is not pressed for 5 minutes, the screen will automatically go back to the basic screen.


## Set temp mode changeover

### ■ Limit Operation



Limit operation provides thermostat control within the range of the set minimum and maximum temperature. The minimum temperature setting will trigger heating. The maximum temperature setting will trigger cooling.

**Operation Method** The limit operation can not be enabled when a centralized control is connected.

# 1

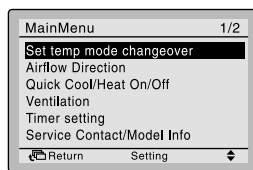


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select “Set temp mode changeover” on the main menu screen.
- Pressing Menu/Enter button takes you back to the basic screen, and the set temperature is displayed in max °C min °C. (Limit Operation)

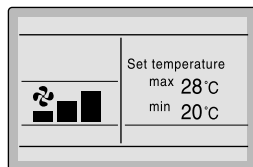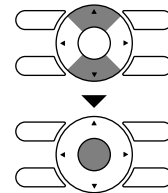


Basic screen

- \* To return to the normal set temperature screen, use “Set temp mode changeover” in the Main Menu again.

# 2

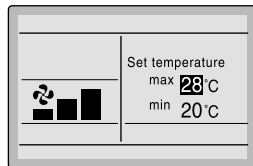


- To change the set temperature, press ▼▲ buttons. The set temperature is highlighted and ready to be changed.
- The set temperature will increase by 1°C when the ▲ button is pressed and decrease by 1°C when the ▼ button is pressed.




#### Note

- The difference between the maximum and minimum temperatures cannot be set to less than 6°C.  
(\* Maximum temperature – Minimum temperature ≥ 6°C)

# 3

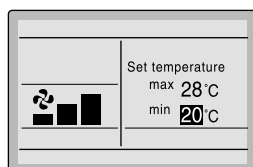

- Pressing ◀▶ buttons switches the variable set temperature between max. and min.




# Menu Manipulation

## Airflow Direction Setting


### Manipulating Airflow Direction Setting

#### Operation Method


1

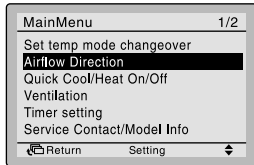


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select **Airflow Direction** on the main menu screen and press the Menu/Enter button. (For models with no airflow direction adjustment, **Airflow Direction** will not be displayed on the main menu screen.)

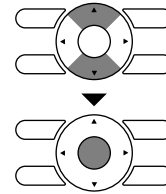

2

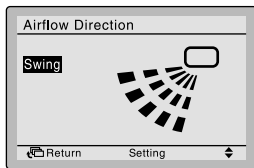

Airflow direction setting (up/down)

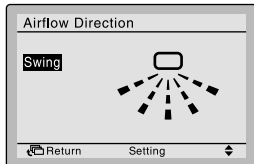

Airflow direction setting (left/right)


- The airflow direction setting screen will appear.

**Note**


- Airflow direction appears on the screen as below.

<p>Up/down direction</p>	<p>Left/right direction</p>	<p>0 : Position 0                  1 : Position 1                  2 : Position 2                  3 : Position 3                  4 : Position 4</p>
--------------------------	-----------------------------	---

3

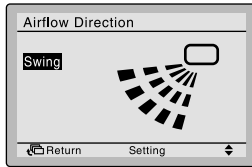


Up/down direction

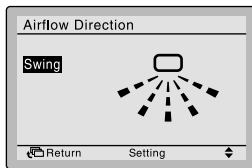

Left/right direction


- Pressing ▼▲ buttons changes the setting to (in order) **Swing**, **Position 0**, **Position 1**, **Position 2**, **Position 3**, and **Position 4**.




- Selecting **Swing** will cause the airflow direction blades to swing back and forth.

**For the swing setting only, all positions will be displayed.**

4

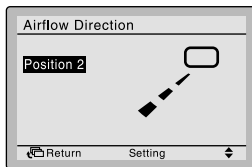

Up/down direction

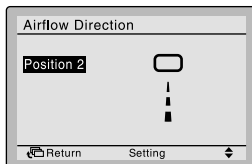


Left/right direction

- When you select one of positions 0 to 4, the airflow direction blades stay in a fixed position.

\* The illustration is a display when position 2 is selected.

- Press ▼▲ buttons to select the desired airflow direction. Press Menu/Enter button to return to the basic screen.

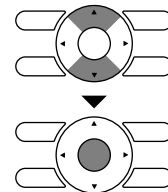


# Menu Manipulation

## Operational Details and Functions

There are two types of airflow direction setting.


### Airflow direction swing

The airflow direction blades automatically swing up and down.

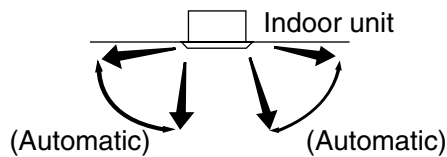

### Airflow direction

You can select from one of five fixed directions. (This has no relation to the angle of the louvers.)

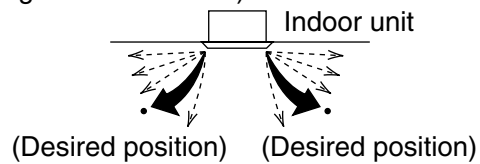

### Movement of airflow direction blades

Under the operation conditions shown below, airflow direction is controlled automatically. Actual operation may thus be different than what is displayed on the remote controller.

<b>Operation condition</b>	<ul style="list-style-type: none"> <li>• Room temperature is higher than the remote controller's set temperature (in heating mode).</li> <li>• When defrosting (in heating mode). (The airflow is blowing horizontally so that people in the room are not in direct line of the cold air.)</li> <li>• Under continuous operation with the airflow blowing horizontally.</li> </ul>
----------------------------	--

Heating mode includes automatic operation.





## Quick Cooling/Heating On/Off


### Quick Cooling/Heating On

#### Operation Method

1

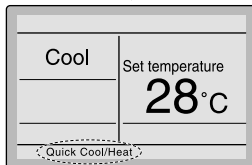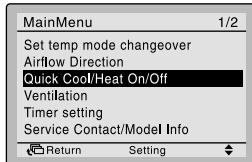



- While operating in Cooling, Heating, or Auto mode, display the main menu screen (see page 26).
- Press ▼▲ buttons to select **Quick Cool/Heat On/Off** on the main menu screen. Press Menu/Enter button to return to the basic screen.
- Quick Cooling/Heating will appear on the basic screen. Quick Cooling/Heating is now on.

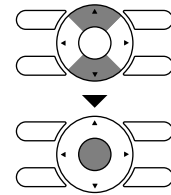


### Quick Cooling/Heating Off

#### Operation Method

2

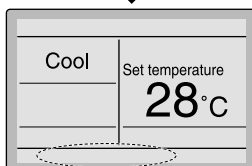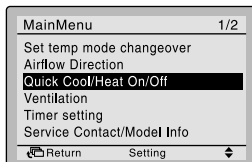

- While Quick Cooling/Heating is displayed on the basic screen, display the main menu screen (see page 26).
- Press ▼▲ buttons to select **Quick Cool/Heat On/Off** on the main menu screen. Press Menu/Enter button to return to the basic screen.
- Quick Cooling/Heating will no longer appear on the basic screen.
- Quick Cooling/Heating is now off.

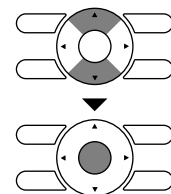

# Menu Manipulation

## Quick Cooling/Heating

**Quick Cooling/Heating** The indoor unit is automatically controlled, increasing the power of the outdoor unit and quickly bringing the room to a comfortable temperature.


- Fan speed display goes off and fan speed can no longer be switched.
- Cannot be set when in fan and dry modes.
- Quick Cooling/Heating mode will run for a maximum of 30 minutes before the unit automatically returns to normal operation.
- Activating mode selector will return the air conditioner to normal operation.
- In heating mode, fan speed may increase and the wind temperature may decrease.  
Adjust the operation as desired.

## Ventilation


### ■ Display method for ventilation settings screen

#### Operation Method

1

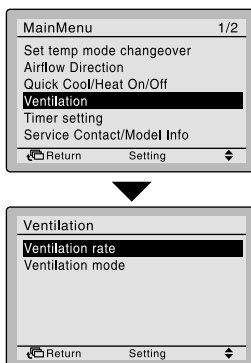


- Display the main menu screen.  
(See page 26.)
- Press ▼▲ buttons to select **Ventilation** on the main menu screen.  
(For models with no ventilation function, **Ventilation** will not be displayed on the main menu screen.)  
Press Menu/Enter button to display the ventilation settings screen.

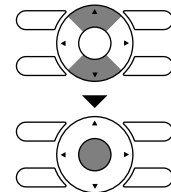


### ■ Changing the ventilation rate

#### Operation Method


1

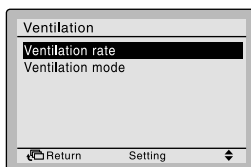


- Bring up the ventilation settings screen  
(see above).
- Press ▼▲ buttons to select **Ventilation rate** on the ventilation settings screen.  
Press Menu/Enter button to display the ventilation rate settings screen.

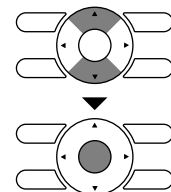

2

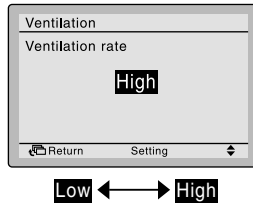


- Pressing ▼▲ buttons changes the setting to in order **Low** and **High**.



\* Only modes that can be set are displayed.

3

- Selecting the desired ventilation rate and pressing Menu/Enter button selects the setting and takes you back to the basic screen.




(Pressing Cancel button takes you back to the previous screen without changing the ventilation rate.)



## ■ Changing ventilation mode

### Operation Method


1

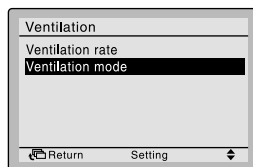


- Display the ventilation settings screen. (See page 32.)
- Press ▼▲ buttons to select **Ventilation mode** on the ventilation settings screen. Press Menu/Enter button to display the ventilation mode settings screen.



2

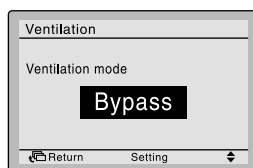


- Pressing ▼▲ buttons changes the settings in order as shown below.




\* Only modes that can be set are displayed.

# Menu Manipulation

3

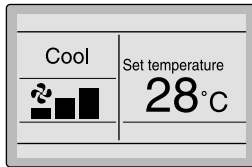

- Selecting the desired ventilation mode and pressing Menu/Enter button enters the settings and takes you back to the basic screen.



(Pressing the Cancel button takes you back to the previous screen without changing the ventilation mode.)

## Ventilation Mode

### Automatic mode

Using information from the air conditioner (cooling, heating, fan, and set temperature) and the total heat exchanger unit (indoor and outdoor temperatures), mode is automatically changed between Heat exchanger and Bypass.

### Heat exchange mode

Outside air undergoes Heat exchange and is supplied to inside the room.

### Bypass mode


Outside air is supplied to inside the room without undergoing heat exchange.

## Timer Settings


### ■ Display method for timer settings screen

#### Operation Method


1

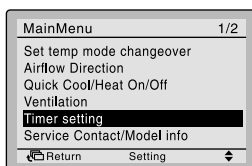


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select **Timer setting** on the main menu screen.

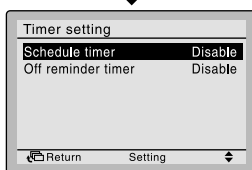

Press Menu/Enter button to display the timer settings screen.



\* Currently enabled/disabled is displayed.

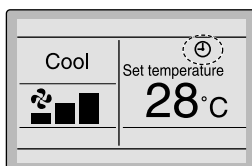


- When either schedule timer or off reminder timer is enabled, ⊕ appears on the basic screen.

## ■Setting the schedule timer



### Display method for the schedule timer settings screen

**Operation Method** The schedule timer can not be enabled when a centralized control is connected.


# 1

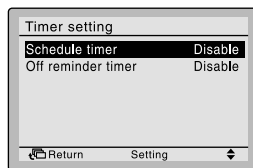


- Bring up the timer settings screen. (See page 34.)
- Press ▼▲ buttons to select the **Schedule timer** on the timer settings screen. Press Menu/Enter button to display the schedule timer settings screen.

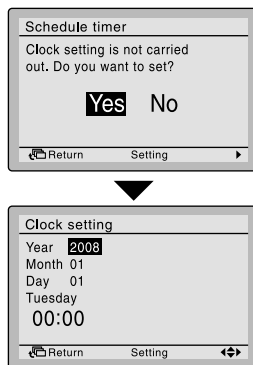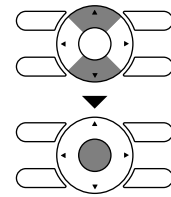


- Before setting the schedule timer, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press Menu/Enter button. Set the current year, month, day, and time. (See clock settings on page 48.)

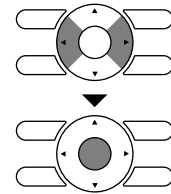

# 2

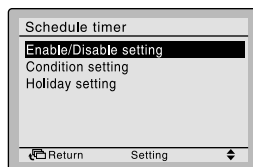

- Press ▼▲ buttons to select the desired setting items on the schedule timer settings screen and press Menu/Enter button.

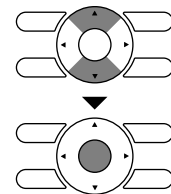


# Menu Manipulation

## ■ Schedule timer


### Condition setting

#### Operation Method


1

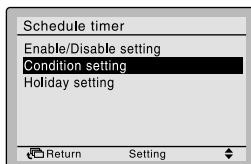


- Display the schedule timer settings screen. (See page 35.)
- Press ▼▲ buttons to select **Condition setting** on the schedule timer settings screen. Press Menu/Enter button to display the condition setting screen.

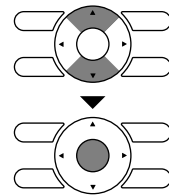

2

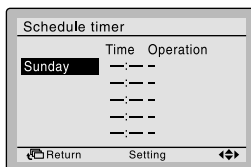


- Press ▼▲ buttons to select the day to be set on the condition setting screen.
- Input the program for the selected day next.





The schedule timer can accept a maximum of 5 operations per day.


3

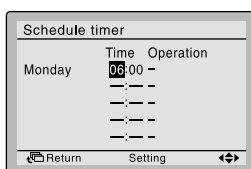


- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired operation start time. Each press of ▼▲ buttons moves the numbers by 1 hour or 1 minute. Holding down the button causes the number to change continuously.

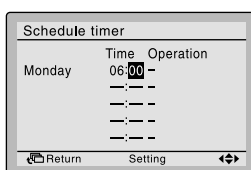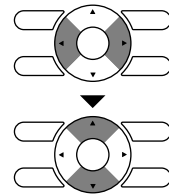

4

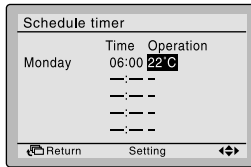

- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to select the desired operation.

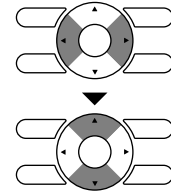




The following three types of operations are available.

- \*1. switch on the installation at a scheduled time, in combination with a set point (exact temperature control)
- \*2. switch on the installation at a scheduled time, in limit operation
- \*3. switch off the installation (end of control)
- \* The status remain unchanged in the case of “-”.


The display changes in sequence as shown below when ▼▲ buttons are pressed.



- To make an operation change at set temperature, press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to set the operation to **22°C**.

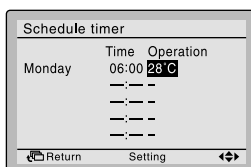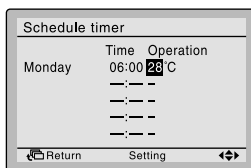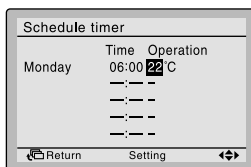


- To change the set temperature, press the Menu/Enter button so that the set temperature will be highlighted and ready to be changed.
- Press ▼▲ buttons to change the set temperature. The set temperature will increase by 1°C when the ▲ button is pressed and decrease by 1°C when the ▼ button is pressed.
- Pressing Menu/Enter button enters the set temperature change.


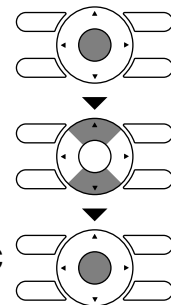


# Menu Manipulation



## 5

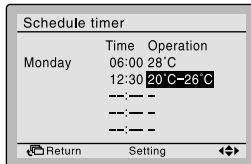


- To make limit operation settings, press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired set time.
- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to set the operation to **20°C - 26°C**.

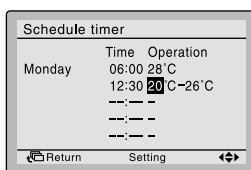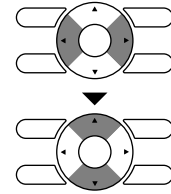

- To change the maximum and minimum temperatures, press the Menu/Enter button so that the temperatures will be ready to be changed.

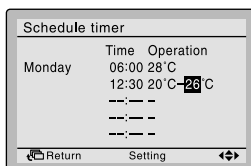
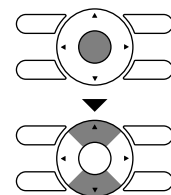


- Press ◀▶ buttons to select the desired temperature to be changed.

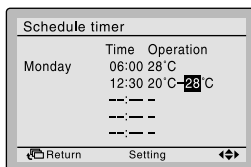

- Press ▼▲ buttons to change the set temperature.

The set temperature will increase by 1°C when the ▲ button is pressed and decrease by 1°C when the ▼ button is pressed.

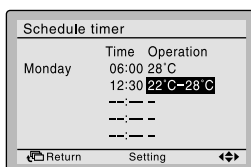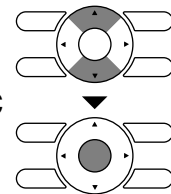


### Note

- The difference between the maximum and minimum temperatures cannot be set to less than 6°C.  
(\* Maximum temperature – Minimum temperature ≥ 6°C)


- Pressing Menu/Enter button enters the set temperature change.



6

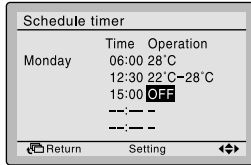


- To make operation stop settings, press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired operation stop time.
- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to turn **OFF** the operation.

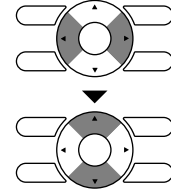


7

- To set a different day of the week, press ◀▶ buttons to highlight the day presently set.
- Press ▼▲ buttons to change the day and input the program in the same manner.


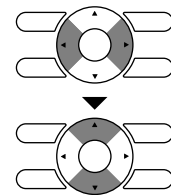


\* To copy the settings for the previous day, select the operation mode selector button so that the settings will be copied as they are.  
Example: The contents for Monday are copied by pressing the operation mode selector button after selecting Tuesday.

8

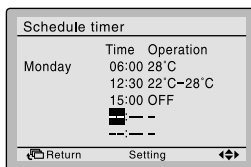

- When the entire day settings are completed, highlight the items other than the operation and press the Menu/Enter button. The settings confirmation screen will appear.

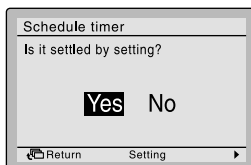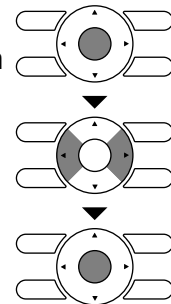

- Press ◀▶ button to select **Yes** on the settings confirmation screen. Pressing Menu/Enter button enters the schedule timer settings and takes you back to the basic screen.


# Menu Manipulation

## Holiday setting


(The schedule timer will be disabled for days that have been set as holiday.)

### Operation Method


# 1

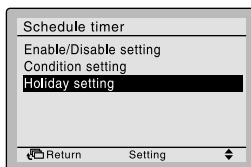


- Bring up the schedule timer settings screen. (See page 35.)
- Press ▼▲ buttons to select **Holiday setting** on the schedule timer settings screen. Press Menu/Enter button to display the holiday settings screen.

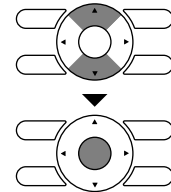

# 2

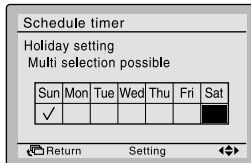


- Press ◀▶ buttons to select the desired day. Press ▼▲ buttons to display “✓” to make the holiday settings. Pressing ▼▲ buttons switches the setting between set and release. Multiple days can be selected as holidays.

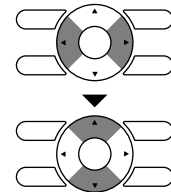


Note: To able the schedule timer for the day selected as a holiday, the holiday setting must be released.


# 3

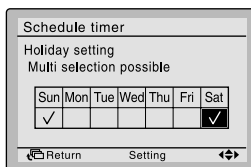


- To complete the holiday settings, press Menu/Enter button. The settings confirmation screen will appear.




# 4

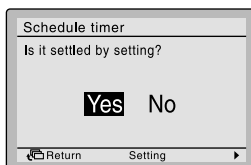

- Press ◀▶ button to select **Yes** on the settings confirmation screen. Pressing Menu/Enter button enters the holiday settings and takes you back to the schedule timer settings screen.

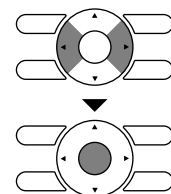

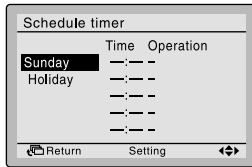


- Holiday that are set will be displayed on the condition settings screen.




## Enabling or disabling the schedule timer without changing the set day or time

### Operation Method


1

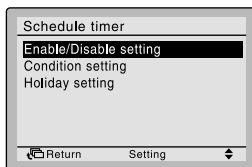


- Bring up the schedule timer settings screen. (See page 35.)
- Press ▼▲ buttons to select **Enable/Disable setting** on the schedule timer settings screen. Press Menu/Enter button to display the enable/disable settings screen.

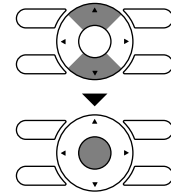


2

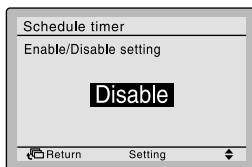


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable settings screen. Press Menu/Enter button after selecting the item. Then the settings confirmation screen will appear.

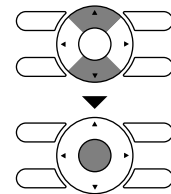

3

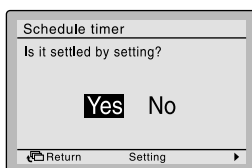

- Press ◀▶ button to select **Yes** on the settings confirmation screen. Pressing Menu/Enter button enters the enable/disable settings for the schedule timer and takes you back to the basic screen.

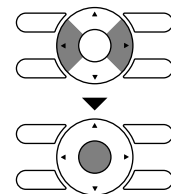


# Menu Manipulation

## ■ Making and checking the off reminder timer settings

### Operation Method


1

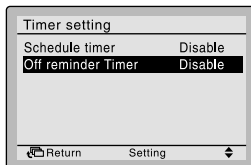


- Bring up the timer settings screen.

(See page 34.)


Press ▼▲ buttons to select the **Off reminder timer** on the timer settings screen.  
Press Menu/Enter button to display the off reminder timer settings screen.

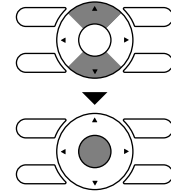


2

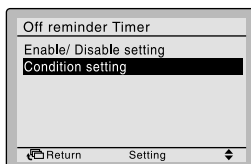


- Press ▼▲ buttons to select **Condition setting** on the off reminder timer settings screen.  
Press Menu/Enter button to display the condition settings screen.

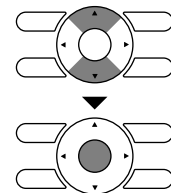


3

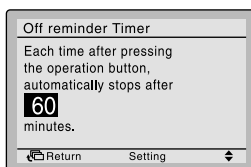


- Use ▼▲ buttons to set the time from operation start until the unit automatically stops.  
Selections can be made in increments of 10 minutes from 30 to 180 minutes.  
Holding down the button causes the number to change continuously.
- Select the desired time and press Menu/Enter button.  
The settings confirmation screen will appear.

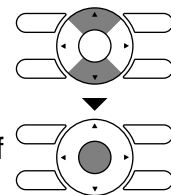

4

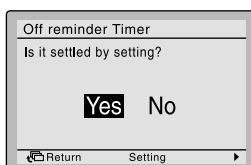


- Press ◀▶ button to select **Yes** on the settings confirmation screen.  
Pressing Menu/Enter button enters the off reminder timer settings and takes you back to the basic screen.

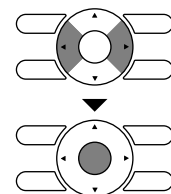


## Enabling or disabling the off reminder timer without changing the set time

### Operation Method


1

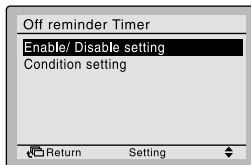


- Bring up the off reminder timer settings screen. (See page 42.)
- Press ▼▲ buttons to select **Enable/Disable setting** on the off reminder timer settings screen. Press Menu/Enter button to display the enable/disable settings screen.

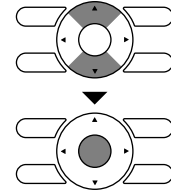


2

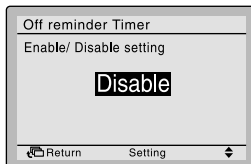


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable settings screen. Press Menu/Enter button after selecting the item. Then the settings confirmation screen will appear.

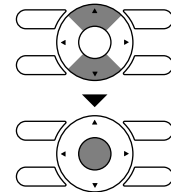

3

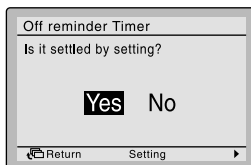

- Press ◀▶ button to select **Yes** on the settings confirmation screen. Pressing Menu/Enter button enters the enable/disable settings for the off reminder timer settings and takes you back to the basic screen.

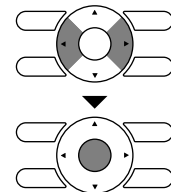


# Menu Manipulation

## Service Contact/Model Information


### Display method for service contact and model information

#### Operation Method


1

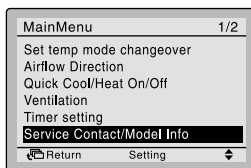

- Display the main menu screen.  
(See page 26.)
- Press ▼▲ buttons to select **Service Contact/Model Info** on the main menu screen and press Menu/Enter button.

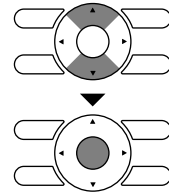

2

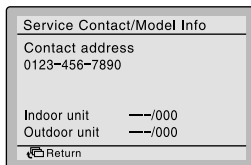

- The phone number for the contact address will appear at the top of the screen.  
(If you have not yet registered your product, it will not appear.)
  - The model information of the indoor and outdoor units of your product will appear on the bottom of the screen.  
(For some models the product code may appear.)
- \* The model name will not appear if you have had the circuit board replaced.

- \* The error code record may also appear.  
If it is not blinking, the unit is working properly.  
The error code record will disappear if you press On/Off button for more than 4 seconds.




## Convenient Functions


### ■ Contrast Adjustment

#### Operation Method


1

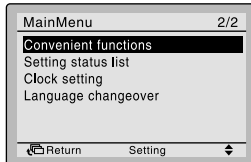


- Display the main menu screen.  
(See page 26.)
- Press ▼▲ buttons to select **Convenient functions** on the main menu screen.  
Press Menu/Enter button to display the convenient functions settings screen.

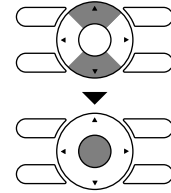


2

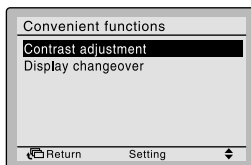


- Bring up the convenient functions settings screen.
- Press ▼▲ buttons to select **Contrast adjustment** on the convenient functions settings screen.  
Press Menu/Enter button to display the contrast adjustment settings screen.

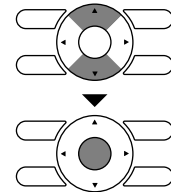

3

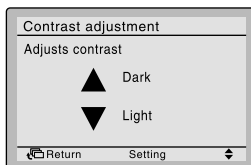

- On the contrast adjustment settings screen press ▼▲ buttons until you reach the desired contrast.  
After setting, press Menu/Enter button and return to the basic screen.

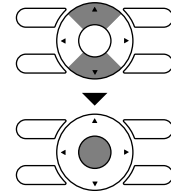


# Menu Manipulation

## ■ Display changeover


### Display selection

#### Operation Method


1

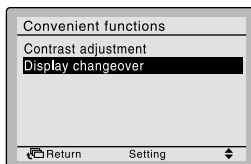


- Bring up the convenient functions settings screen. (See page 45.)
- Press ▼▲ buttons to select **Display changeover** on the convenient functions settings screen. Press Menu/Enter button to display the display selection settings screen.

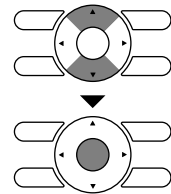


2

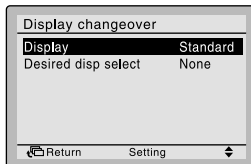


- Press ▼▲ buttons to select **Display** on the convenient functions settings screen. Press Menu/Enter button to display the display settings screen.

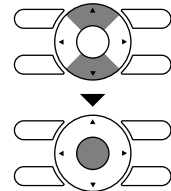

3

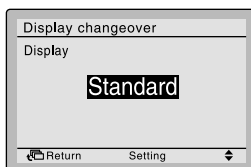

- Press ▼▲ buttons to select **Standard** or **Details** on the display settings screen.
- Then, press Menu/Enter button to confirm settings and return to the basic screen.

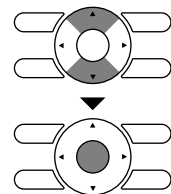


\* Refer to **Setting the detailed display selection** to change detailed display selection. (See page 47.)




## Setting the detailed display selection

### Operation Method


1

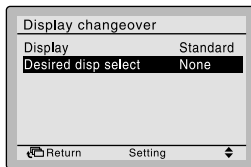

- Bring up the display selection settings screen. (See page 46.)
- Press ▼▲ buttons to select **Desired disp select** on the convenient functions settings screen. Press Menu/Enter button to display the detailed display selection screen.

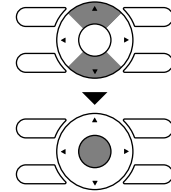

2

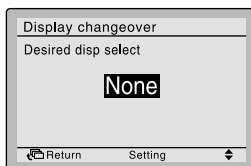

- Pressing ▼▲ buttons displays the following.



\* Some models may not display these items even if they are selected.

- Be sure to read the following notes regarding display of room temperature and outdoor temperature.

#### Room temperature

.....An estimate of the temperature near the remote controller.


The temperature that is detected may be affected by the location of the unit.

#### Outdoor temperature

.....An estimate of the temperature near the outdoor unit.

The temperature that is detected may be affected by factors such as the location of the unit (if it is in direct sunlight, for e.g.) and unit operation during defrosting.

- After setting, press Menu/Enter button to confirm settings and return to the basic screen.




# Menu Manipulation

## Setting Status List


### Manipulating the setting status list

#### Operation Method


1

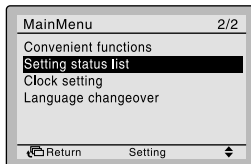


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select **Setting status list** on the main menu screen and press Menu/Enter button.

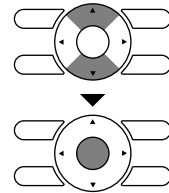

2

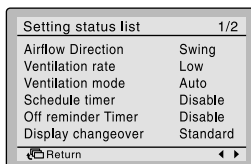

- A list showing the current setting status will appear. Press ◀▶ buttons to go to the next item.
- Pressing Cancel button takes you back to the main menu screen.

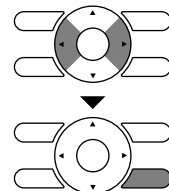

#### Display items

Airflow direction	Off reminder timer
Ventilation rate	Quick Cool/Heat
Ventilation mode	Display changeover
Schedule timer	Desired disp select


\* Display items may differ depending on the model. Only the items that can be set are displayed.

## Clock Setting


### Setting the clock

#### Operation Method


1

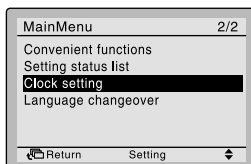


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select **Clock setting** on the main menu screen. Press Menu/Enter button to display the clock settings screen.

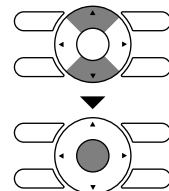


2

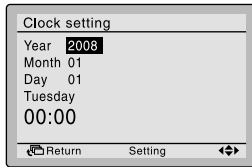


- Select “Year” with ◀▶ buttons. Input the year with ▼▲ buttons. Holding down the button causes the number to change continuously.

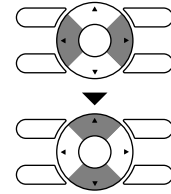


3

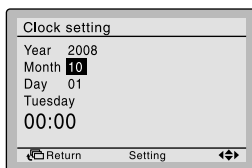


- Select “Month” with ◀▶ buttons. Input the month with ▼▲ buttons. Holding down the button causes the number to change continuously.

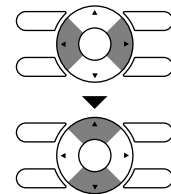


4

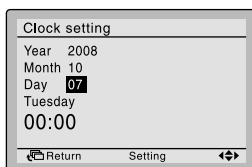


- Select “Day” with ◀▶ buttons. Input the day with ▼▲ buttons. Holding down the button causes the number to change continuously. Days of the week change automatically.

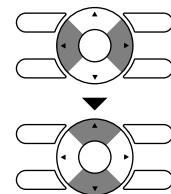


5

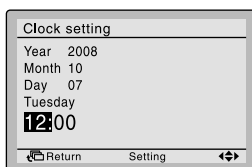


- Select “Hour” with ◀▶ buttons. Input the hour with ▼▲ buttons. Holding down the button causes the number to change continuously.

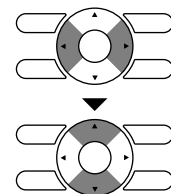

6

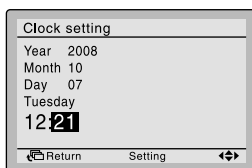


- Select “Minute” with ◀▶ buttons. Input the minute with ▼▲ buttons. Holding down the button causes the number to change continuously.
- Press Menu/Enter button. The settings confirmation screen will appear.

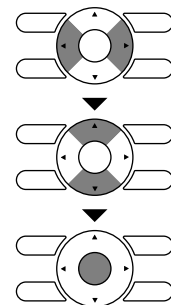


Note:

The date can be set between January 1, 2008 and December 31, 2099.

# Menu Manipulation

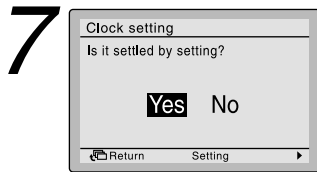

- Press ◀▶ button to select **Yes** on the settings confirmation screen. Press Menu/Enter button to set the clock and return to the basic screen.

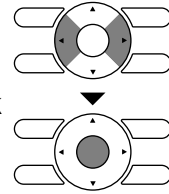

\* When setting schedule timer, the display return to the settings screens.

## Caution

### ■ Daylight Saving Time

Caution : The following period has adopted Daylight Saving Timer.

[Start] Last Sunday,  
March AM 2:00


[End] Last Sunday,  
October AM 3:00

Please consult with your Daikin dealer to change a setup.


## Language changeover

### ■ Selectable languages


#### Operation Method

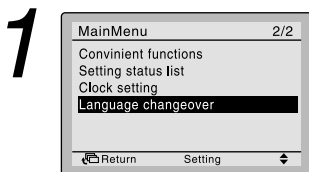


- Display the main menu screen. (See page 26.)
- Press ▼▲ buttons to select **Language changeover** on the main menu screen and press the Menu/Enter button.

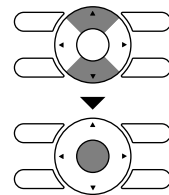

2

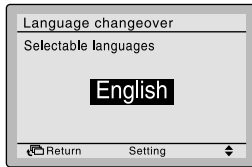

- Press ▼▲ buttons to select “Language” on the language changeover screen. English/Deutsch/Français/Español/Italiano/Ελληνικά/Nederlands/Portugues/Русский/Тürkçe
- Pressing Menu/Enter button to confirm settings and return to the basic screen.

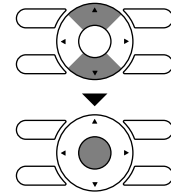


## Maintenance

### Filter Sign Resetting

#### Operation Method

1

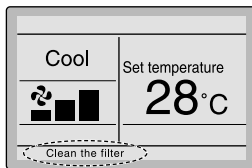


- When the time to clean the filter or element has come, one of the following messages will appear on the bottom of the basic screen.
  - “Clean the filter”
  - “Clean the filter and element”
  - “Clean the element”

- Wash, clean, or replace the filter or element.  
For details, refer to the operation manual of the indoor unit.


2

- Reset the filter sign when the filter or element is washed, cleaned, or replaced.
- Press Menu/Enter button.  
The main menu screen will appear.





# Maintenance

3

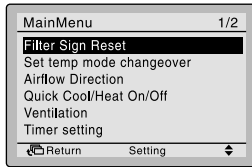

- Press ▼▲ buttons to select **Filter Sign Reset** on the main menu screen and press Menu/Enter button.

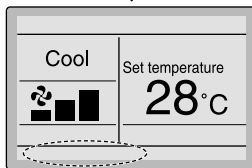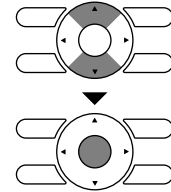

- The display shown in 1 will disappear from the basic screen when the filter sign is reset.

## ⚠ Caution

- **Do not wash the remote controller.**  
 Doing so may cause electric leakage and result in electric shocks or fire.



- **Be sure to stop the operation of the air conditioner and turn off the power supply breaker at the time of maintenance.**  
 Failure to do so may result in electric shocks or injury.



## Maintenance of Unit and LCD

- Wipe the LCD and other surface part of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth then.

### Note

- Do not use any paint thinner, organic solvent, or strong acid.

## ⚠ Warning

- **Do not use flammable materials (e.g., hairspray or insecticide) near the air conditioner.**  
**Do not clean the product with organic solvents such as benzene or paint thinner.**  
 The use of organic solvents may cause crack damage to the product, electric shocks, or fire.



# Useful Information

## Error code Display

### ■ Contact your Daikin dealer in the following cases


#### Warning

- When the air conditioner is malfunctioning (e.g., giving off a burning odor), **stop the air conditioner and turn off power.** Continued operation under such circumstances may result in failure, electric shocks, or fire. Contact your Daikin dealer.



### Operation Method

1

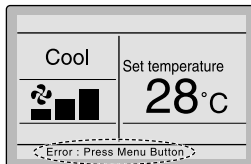

- If an error occurs, either one of the following items will blink in the basic screen.


“Error: Press Menu Button.”

\* The operation indicator will blink.


“Warning: Press Menu Button.”

\* The operation indicator will not blink.

- Press Menu/Enter button.

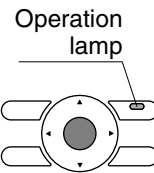


2

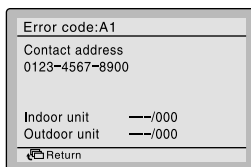

- The error code blinks and the contact address and model name will appear.
- Notify your Daikin dealer of the Error code and Model name.



### 3.3 BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66

★The illustrations of indoor unit are for FFQ model as representative.

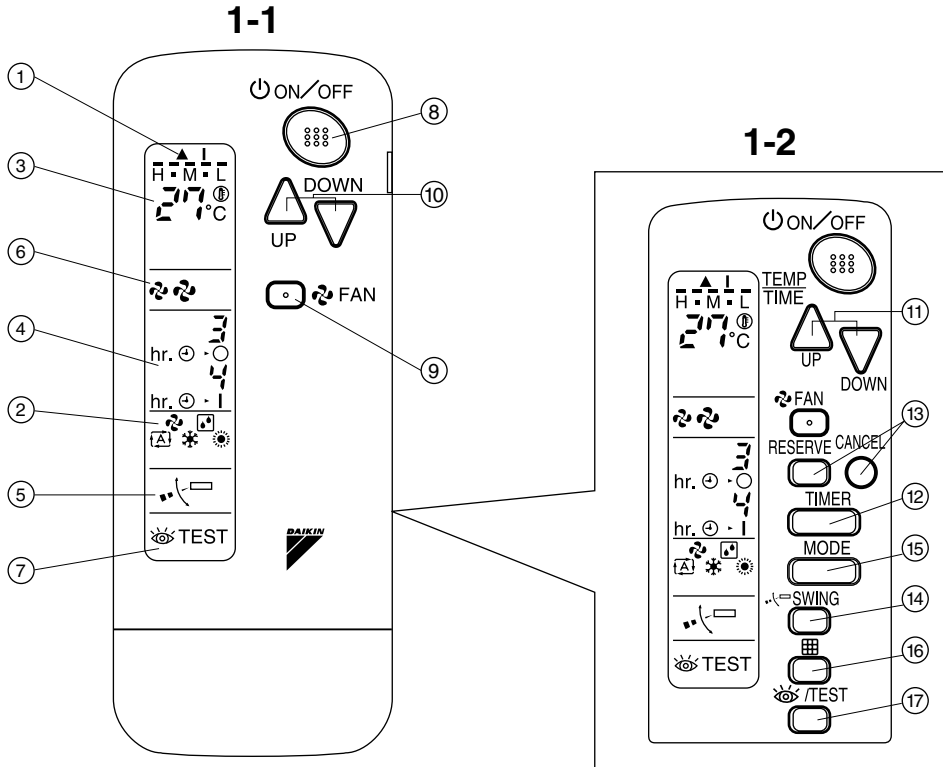

1

#### 1-3 COOL/HEAT CHANGEOVER REMOTE CONTROL SWITCH

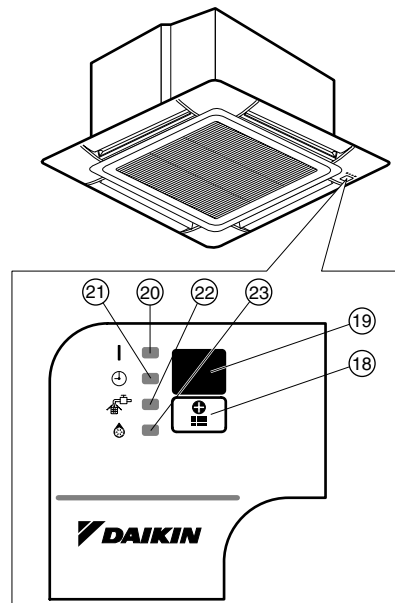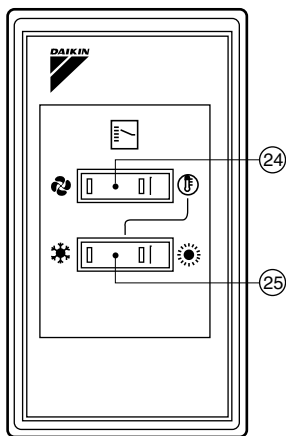

1






2

[1]



## 2. NAMES AND FUNCTIONS OF THE OPERATING SECTION (Fig. 1, 2)


1	<b>DISPLAY “▲” (SIGNAL TRANSMISSION)</b>	7	<b>DISPLAY “👁️ TEST ” (INSPECTION/ TEST OPERATION)</b>
	This lights up when a signal is being transmitted.		When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.
2	<b>DISPLAY “🌀” “🔌” “{A}” “⚙️” “☀️” (OPERATION MODE)</b>	8	<b>ON/OFF BUTTON</b>
	This display shows the current OPERATION MODE. For cooling only type, “{A}” (Auto) and “☀️” (Heating) are not installed.		Press the button and the system will start. Press the button again and the system will stop.
3	<b>DISPLAY “<math>\frac{TEMP}{C}</math>” (SET TEMPERATURE)</b>	9	<b>FAN SPEED CONTROL BUTTON</b>
	This display shows the set temperature.		Press this button to select the fan speed, HIGH or LOW, of your choice.
4	<b>DISPLAY “hr. ⓪ . 0 hr. ⓪ . 1” (PROGRAMMED TIME)</b>	10	<b>TEMPERATURE SETTING BUTTON</b>
	This display shows PROGRAMMED TIME of the system start or stop.		Use this button for SETTING TEMPERATURE (Operates with the front cover of the remote controller closed.)
5	<b>DISPLAY “🌀” (AIR FLOW FLAP)</b>	11	<b>PROGRAMMING TIMER BUTTON</b>
	Refer to page 9.		Use this button for programming “START and/or STOP” time. (Operates with the front cover of the remote controller opened.)
6	<b>DISPLAY “🌀” “🌀” (FAN SPEED)</b>	12	<b>TIMER MODE START/STOP BUTTON</b>
	The display shows the set fan speed.		Refer to page 10.
7		13	<b>TIMER RESERVE/CANCEL BUTTON</b>
			Refer to page 10.
8		14	<b>AIR FLOW DIRECTION ADJUST BUTTON</b>
			Refer to page 9.
9		15	<b>OPERATION MODE SELECTOR BUTTON</b>
			Press this button to select OPERATION MODE.
10		16	<b>FILTER SIGN RESET BUTTON</b>
			Refer to the section of MAINTENANCE in the operation manual attached to the indoor unit.
11		17	<b>INSPECTION/TEST OPERATION BUTTON</b>
			This button is used only by qualified service persons for maintenance purposes.
12		18	<b>EMERGENCY OPERATION SWITCH</b>
			This switch is readily used if the remote controller does not work.

	<b>RECEIVER</b>
19	This receives the signals from the remote controller.
	<b>OPERATING INDICATOR LAMP (Red)</b>
20	This lamp stays lit while the air conditioner runs. It flashes when the unit is in trouble.
	<b>TIMER INDICATOR LAMP (Green)</b>
21	This lamp stays lit while the timer is set.
	<b>AIR FILTER CLEANING TIME INDICATOR LAMP (Red)</b>
22	Lights up when it is time to clean the air filter.
	<b>DEFROST LAMP (Orange)</b>
23	Lights up when the defrosting operation has started. (For cooling only type this lamp does not turn on.)
	<b>FAN/AIR CONDITIONING SELECTOR SWITCH</b>
24	Set the switch to “  ” (FAN) for FAN and “  ” (A/C) for HEAT or COOL.
	<b>COOL/HEAT CHANGE OVER SWITCH</b>
25	Set the switch to “  ” (COOL) for COOL and “  ” (HEAT) for HEAT.
<b>NOTES</b> 	
<ul style="list-style-type: none"> <li>For the sake of explanation, all indications are shown on the display in Figure 1 contrary to actual running situations.</li> <li>Fig. 1-2 shows the remote controller with the front cover opened.</li> <li>If the air filter cleaning time indicator lamp lights up, clean the air filter as explained in the operation manual provided with the indoor unit. After cleaning and reinstalling the air filter, press the filter sign reset button on the remote controller. The air filter cleaning time indicator lamp on the receiver will go out.</li> <li>The Defrost Lamp will flash when the power is turned on. This is not a malfunction.</li> </ul>	

### 3. HANDLING FOR WIRELESS REMOTE CONTROLLER

**Precautions in handling remote controller**  
**Direct the transmitting part of the remote controller to the receiving part of the air conditioner.**

If something blocks the transmitting and receiving path of the indoor unit and the remote controller as curtains, it will not operate.

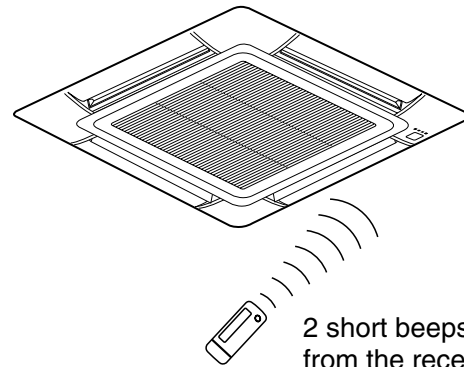

2 short beeps from the receiver indicates that the transmission is properly done.

**Transmitting distance is approximately 7 m.**

**Do not drop or get it wet.**

It may be damaged.

**Never press the button of the remote controller with a hard, pointed object.**

The remote controller may be damaged.

#### Installation site

- It is possible that signals will not be received in rooms that have electronic fluorescent lighting. Please consult with the salesman before buying new fluorescent lights.
- If the remote controller operated some other electrical apparatus, move that machine away or consult your dealer.

### Placing the remote controller in the remote controller holder


Install the remote controller holder to a wall or a pillar with the attached screw. (Make sure it transmits)

#### Placing the remote controller

Slide from above

#### Removing the remote controller

Pull it upward

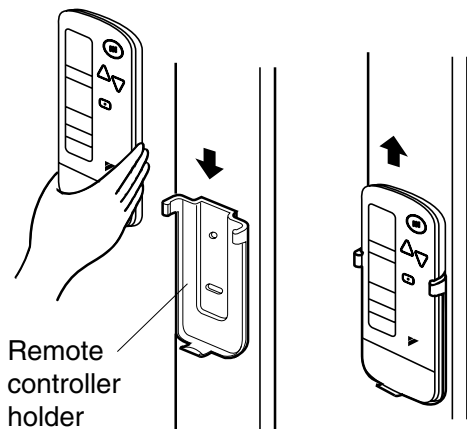


### How to put the dry batteries

(1) Remove the back cover of the remote controller to the direction pointed by the arrow mark.

(2) Put the batteries  
Use two dry cell batteries (AAA.LR03 (alkaline)). Put dry batteries correctly to fit their (+) and (-).

(3) Close the cover



### — When to change batteries —

Under normal use, batteries last about a year. However, change them whenever the indoor unit doesn't respond or responds slowly to commands, or if the display becomes dark.

### [CAUTIONS]

- Replace all batteries at the same time, do not use new and old batteries intermixed.
- In case the remote controller is not used for a long time take out all batteries in order to prevent liquid leak of the battery.

### IN THE CASE OF CENTRALIZED CONTROL SYSTEM

If the indoor unit is under centralized control, it is necessary to switch the remote controller's setting.

In this case, contact your DAIKIN dealer.

## 4. OPERATION RANGE

### SKYAIR System

If the temperature or the humidity is beyond the following conditions, safety devices may work and the air conditioner may not operate, or sometimes, water may drop from the indoor unit.

#### COOLING [°C]

OUTDOOR UNIT	INDOOR		OUTDOOR TEMPERATURE
	TEMPERATURE	HUMIDITY	
RS50 · 60 RKS25 · 35 · 50 · 60 RXS25 · 35 · 50 · 60	D B	21 to 32	80% or below D B - 10 to 46
	W B	14 to 23	
3MKS50 4MKS58 · 75 · 90 3MXS52 4MXS68 · 80	D B	21 to 32	80% or below D B - 10 to 46
	W B	14 to 23	

#### HEATING [°C]

OUTDOOR UNIT	INDOOR TEMPERATURE	OUTDOOR TEMPERATURE
RXS25 · 35 · 50 · 60	D B	D B - 14 to 24
		W B - 15 to 18
3MXS52 4MXS68 · 80	D B	D B - 14 to 21
		W B - 15 to 15.5

DB: Dry bulb temperature

WB: Wet bulb temperature

The setting temperature range of the remote controller is 16°C to 32°C.

**VRV System**

See the operation manual provided with the air conditioner.

**5. OPERATION PROCEDURE**

Refer to figure 1 on page [1]

- Operating procedure varies with heat pump type and cooling only type. Contact your Daikin dealer to confirm your system type.
- To protect the unit, turn on the main power switch 6 hours before operation.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

**COOLING, HEATING, AUTOMATIC, FAN, AND PROGRAM DRY OPERATION**

Operate in the following order.

- AUTOMATIC OPERATION can be selected only by Heat pump split system.
- For cooling only type, "COOLING", and "FAN" and "DRY" operation are able to select.

⟨⟨FOR SYSTEMS WITHOUT COOL/HEAT CHANGE OVER REMOTE CONTROL SWITCH⟩⟩

Refer to figure 1-1, 2 on page [1]



Press OPERATION MODE SELECTOR button several times and select the OPERATION MODE of your choice as follows.

- COOLING OPERATION..... “ ❄ ”
- HEATING OPERATION..... “ ☀ ”

■ AUTOMATIC OPERATION..... “ ⏸ ”

- In this operation mode, COOL/HEAT changeover is automatically conducted.

■ FAN OPERATION..... “ 🌀 ”

■ DRY OPERATION..... “ 🌫 ”

- The function of this program is to decrease the humidity in your room with the minimum temperature decrease.
- Micro computer automatically determines TEMPERATURE and FAN SPEED.
- This system does not go into operation if the room temperature is below 16°C.



Press ON/OFF button

OPERATION lamp lights up or goes off and the system starts or stops OPERATION.

NOTE 🗨

- Do not turn OFF power immediately after the unit stops. Then, wait no less than 5 minutes.  
Water is leaking or there is something else wrong with the unit.

⟨⟨FOR SYSTEMS WITH COOL/HEAT CHANGE OVER REMOTE CONTROL SWITCH⟩⟩

Refer to figure 1-1,3 on page [1]






(1) Select OPERATION MODE with the COOL/HEAT CHANGE OVER REMOTE CONTROL SWITCH as follows.

■ COOLING OPERATION..... “ ❄ ”




■ HEATING OPERATION..... “ ☀ ”



- FAN OPERATION..... “  ”
- DRY OPERATION..... “  ”

• See “FOR SYSTEMS WITHOUT COOL/ HEAT CHANGEOVER REMOTE CONTROL SWITCH” for details on dry operation.

**(2) Press OPERATION MODE SELECTOR button several times and select “  ”**  
(This operation is only available during dry operation.)



**Press ON/OFF button**

OPERATION lamp lights up or goes off and the system starts or stops OPERATION.

**NOTE** 

- Do not turn OFF power immediately after the unit stops. Then, wait no less than 5 minutes.  
Water is leaking or there is something else wrong with the unit.

**[EXPLANATION OF HEATING OPERATION]**

**DEFROST OPERATION**

- As the frost on the coil of an outdoor unit increase, heating effect decreases and the system goes into DEFROST OPERATION.
- The fan operation stops and the DEFROST lamp of the indoor unit goes on. After 6 to 8 minutes (maximum 10 minutes) of DEFROST OPERATION, the system returns to HEATING OPERATION.

**Heating capacity & Outdoor air temperature**

- Heating capacity drops as outdoor air temperature lowers. If feeling cold, use another heater at the same time as this air conditioner.


- Hot air is circulated to warm the room. It will take some time from when the air conditioner is first started until the entire room becomes warm. The internal fan automatically turns at low speed until the air conditioner reaches a certain temperature on the inside. In this situation, all you can do is wait.
- If hot air accumulates on the ceiling and feet are left feeling cold, it is recommended to use a circulator. For details, contact the place of purchase.

**ADJUSTMENT**

For programming TEMPERATURE, FAN SPEED and AIR FLOW DIRECTION, follow the procedure shown below.




**Press TEMPERATURE SETTING button and program the setting temperature**

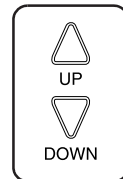

- Each time this button is pressed, setting temperature rises 1°C.
- Each time this button is pressed, setting temperature lowers 1°C.

**In case of automatic operation**

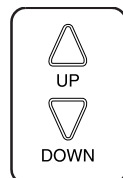

- Each time this button is pressed, setting temperature shifts to “H” side.
- Each time this button is pressed, setting temperature shifts to “L” side.

[°C]

	H	•	M	•	L
Setting temperature	25	23	22	21	19

- The setting is impossible for fan operation.


**NOTE** 

- The setting temperature range of the remote controller is 16°C to 32°C.



## FAN SPEED CONTROL


**Press FAN SPEED CONTROL button.**  
High or Low fan speed can be selected.  
The micro computer may sometimes control the fan speed in order to protect the unit.




## AIR FLOW DIRECTION ADJUST

### UP AND DOWN DIRECTION

- The movable limit of the flap is changeable.  
Contact your Daikin dealer for details.

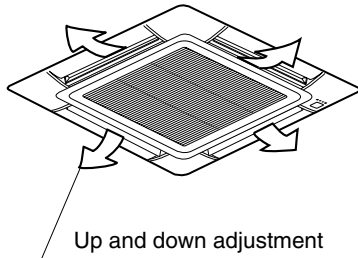

**Press the AIR FLOW DIRECTION ADJUST button to select the air direction as shown below.**

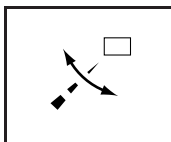

DISPLAY appears and the air flow direction continuously varies.  
(Automatic swing setting)



Press AIR FLOW DIRECTION ADJUST button to select the air direction of your choice.



DISPLAY vanishes the air flow direction is fixed  
(Fixed air flow direction setting).

## MOVEMENT OF THE AIR FLOW FLAP

For the following conditions, micro computer controls the air flow direction so it may be different from the display.

Operation mode	Heating
Operation conditions	<ul style="list-style-type: none"> <li>When starting operation</li> <li>When room temperature is higher than the set temperature</li> <li>At defrost operation (The flaps blow horizontally to avoid blowing cold air directly on the occupants of the room.)</li> </ul>

### NOTES

- If you try cooling or programmed drying, while the flaps are facing downward, air flow direction may change unexpectedly. There is nothing wrong with the equipment. This serves to prevent dew formed on parts in the air discharge outlet from dripping.
- Operation mode includes automatic operation.

## PROGRAM TIMER OPERATION

Operate in the following order.

- The timer is operated in the following two ways.
  - Programming the stop time (⊕ · ○)  
.... The system stops operating after the set time has elapsed.
  - Programming the start time (⊕ · |)  
.... The system starts operating after the set time has elapsed.
- The timer can be programmed a maximum of 72 hours.
- The start and the stop time can be simultaneously programmed.

## 1 TIMER MODE START/STOP

Press the **TIMER MODE START/STOP** button several times and select the mode on the display.


The display flashes.

For setting the timer stop .... “ ⊕ · ○ ”

For setting the timer start .... “ ⊕ · | ”

## 2 PROGRAMMING TIME

Press the **PROGRAMMING TIME** button and set the time for stopping or starting the system.

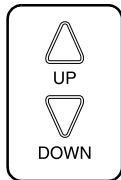

When this button is pressed, the time advances by 1 hour.

When this button is pressed, the time goes backward by 1 hour.

## 3 TIMER RESERVE

Press the **TIMER RESERVE** button.


The timer setting procedure ends.

The display or changes from flashing light to a constant light.

## 4 TIMER CANCEL

Press the **TIMER OFF** button to cancel programming. The display vanishes.

For example.

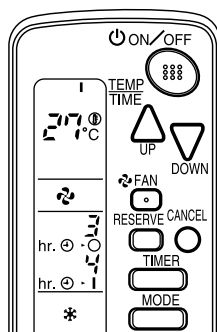

When the timer is programmed to stop the system after 3 hours and start the system after 4 hours, the system will stop after 3 hours and then 1 hour later the system will start.

### NOTES


- When the timer is programmed to stop the system after 3 hours and start the system after 4 hours, the system will stop after 3 hours and then 1 hour later the system will start.
- After the timer is programmed, the display shows the remaining time.

### HOW TO SET MASTER REMOTE CONTROLLER (For VRV system)

- When the system is installed as shown below, it is necessary to designate the master remote controller.

#### ■ For Heat pump system


When one outdoor unit is connected with several indoor units.

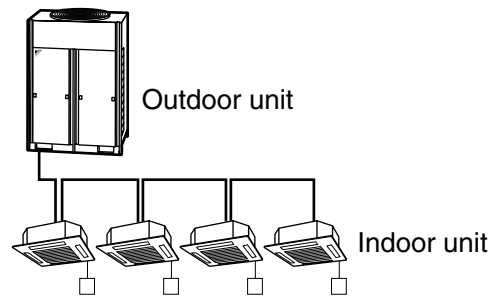

One of these remote controllers needs to be designated as the master remote controller.

### ■ For Heat recovery system

When one BS unit is connected with several indoor units.

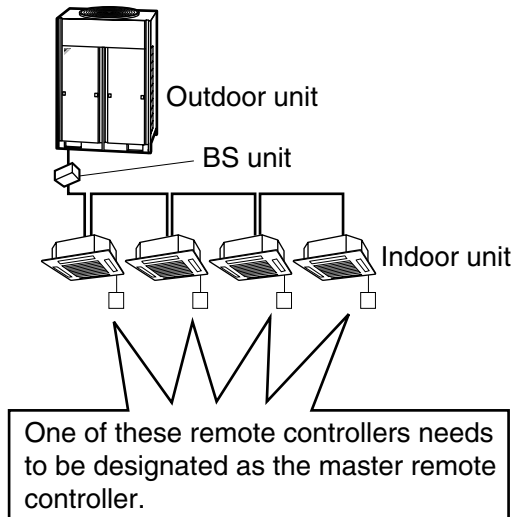

- Only the master remote controller can select HEATING, COOLING or AUTOMATIC (only Heat recovery system) OPERATION.

When the indoor unit with master remote controller is set to "COOL", you can switch over operation mode between "FAN", "DRY" and "COOL".

When the indoor unit with master remote controller is set to "HEAT", you can switch over operation mode between "FAN" and "HEAT".

When the indoor unit with master remote controller is set to "FAN", you cannot switch operation mode.

When attempting settings than that consented above, a "peep" is emitted as a warning.

Only with Heat recovery system, you can set the indoor unit to AUTOMATIC. Attempting to do so, a "peep" will be emitted as a warning.

#### How to designate the master remote controller

Operate in the following order.



**Continuously press the OPERATION MODE SELECTOR button for 4 seconds.**

The displays showing "⊕" of all slave indoor unit connected to the same outdoor unit or BS unit flash.



**Press the OPERATION MODE SELECTOR button to the indoor unit that you wish to designate as the master remote controller. Then designation is completed. This indoor unit is designated as the master remote controller and the display showing "⊕" vanishes.**

- To change settings, repeat steps ① and ②.


#### EMERGENCY OPERATION

When the remote controller does not work due to battery failure or the absence thereof, use this switch which is located beside the discharge grille on the main unit. When the remote controller does not work, but the battery low indicator on it is not lit, contact your dealer.

#### [START]

**1 To press the emergency operation switch.**

The machine runs in the previous mode. The system operates with the previously set air flow direction.

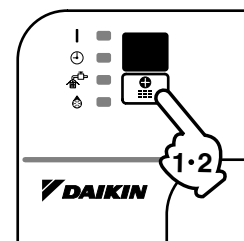



**[STOP]****2**

Press the **EMERGENCY OPERATION** switch again.

### PRECAUTIONS FOR GROUP CONTROL SYSTEM OR TWO REMOTE CONTROLLER CONTROL SYSTEM

This system provides two other control systems beside individual control (one remote controller controls one indoor unit) system. Confirm the following if your unit is of the following control system type.

#### ■ Group control system

One remote controller controls up to 16 indoor units.  
All indoor units are equally set.

#### ■ Two remote controller control system

Two remote controllers control one indoor unit. (In case of group control system, one group of indoor units)  
The unit follows individual operation.

#### NOTES

- Cannot have two remote controller control system with only wireless remote controllers. (It will be a two remote controller control system having one wired and one wireless remote controllers.)
- Under two remote controller control system, wireless remote controller cannot control timer operation.
- Only the operating indicator lamp out of 3 other lamps on the indoor unit display functions.

#### NOTE

- Contact your Daikin dealer in case of changing the combination or setting of group control and two remote controller control systems.

## 6. NOT MALFUNCTION OF THE AIR CONDITIONER

The following symptoms do not indicate air conditioner malfunction

### I. THE SYSTEM DOES NOT OPERATE

- **The system does not restart immediately after the ON/OFF button is pressed.**  
If the OPERATION lamp lights, the system is in normal condition. It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.
- **The system does not restart immediately when TEMPERATURE SETTING button is returned to the former position after pushing the button.**  
It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.
- **If the reception beep is rapidly repeated 3 times (It sounds only twice when operating normally.)**  
Control is set to the optional controller for centralized control.
- **If the defrost lamp on the indoor unit's display is lit when heating is started.**  
This indication is to warn against cold air being blown from the unit. There is nothing wrong with the equipment.

## 7. HOW TO DIAGNOSE TROUBLE SPOTS

### I. EMERGENCY STOP

When the air conditioner stops in emergency, the run lamp on the indoor unit starts blinking. Take the following steps yourself to read the malfunction code that appears on the display. Contact your dealer with this code. It will help pinpoint the cause of the trouble, speeding up the repair.



Press the **INSPECTION/TEST** button to select the inspection mode “**U**”.

“**U**” appears on display and blinks. “UNIT” lights up.



Press **PROGRAMMING TIMER** **BUTTON** and change the unit number.

Press to change the unit number until the indoor unit beeps and perform the following operation according to the number of beeps.

#### Number of beeps

3 short beeps .... Perform all steps from **3** to **6**

1 short beep ..... Perform **3** and **6** steps.

1 long beep ..... Normal state



Press **OPERATION MODE SELECTOR** **BUTTON**

“**U**” on the left-hand of the malfunction code blinks.



Press **PROGRAMMING TIMER** **BUTTON** and change the malfunction code.

Press until the indoor unit beeps twice.



Press **OPERATION MODE SELECTOR** **BUTTON**

“**U**” on the right-hand of the malfunction code blinks.



Press **PROGRAMMING TIMER** **BUTTON** and change the malfunction code.

Press until the indoor unit makes a long beep.

The malfunction code is fixed when the indoor unit makes a long beep.



**Reset of the display**


Press **OPERATION MODE SELECTOR** **BUTTON** to get the display back to the normal state.



## II. IN CASE BESIDES EMERGENCY STOP

### 1. The unit does not operate at all.

- Check if the receiver is exposed of sunlight or strong light. Keep receiver away from light.
- Check if there are batteries in the remote controller. Place the batteries.
- Check if the indoor unit number and wireless remote controller number are equal.

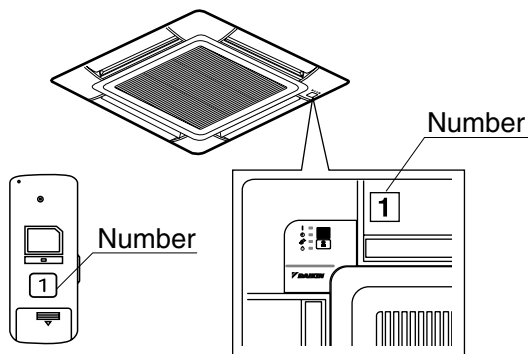

Operate the indoor unit with the remote controller of the same number. Signal transmitted from a remote controller of a different number cannot be accepted. (If the number is not mentioned, it is considered as "1")

### 2. The system operates but it does not sufficiently cool or heat.

- If the set temperature is not proper.
- If the FAN SPEED is set to LOW SPEED.
- If the air flow angle is not proper.


Contact the place of purchase in the following case.

### — ⚠ WARNING —

When you detect a burning odor, shut OFF power immediately and contact the place of purchase. Using the equipment in anything but proper working condition can result in equipment damage, electric shock and/or fire.

### [Trouble]

The RUN lamp of the indoor unit is flashing and the unit does not work at all.

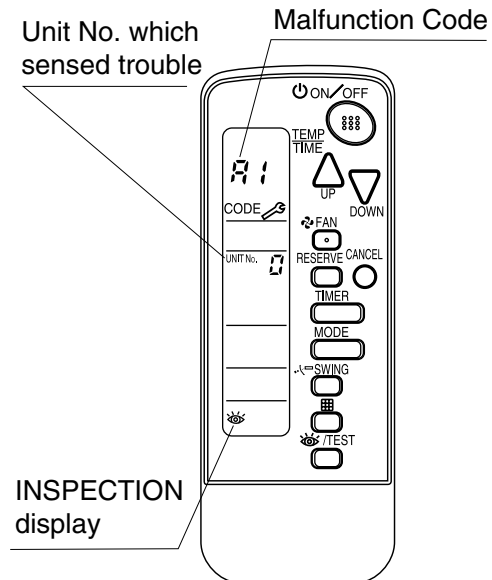

### [Remedial action]

Check the malfunction code (A1 - UF) on the remote controller.

Notify and inform the model name and what the malfunction code indicates to your Daikin dealer.

# Part 6

## Service Diagnosis

1. Troubleshooting with LED .....	286
1.1 Indoor Unit.....	286
1.2 Outdoor Unit.....	288
2. Problem Symptoms and Measures .....	289
3. Service Check Function .....	290
3.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	290
3.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	299
4. Code Indication on Remote Controller .....	306
4.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	306
4.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	306
4.3 Outdoor Unit.....	307
5. Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series.....	308
5.1 Indoor Unit PCB Abnormality .....	308
5.2 Freeze-up Protection Control or Heating Peak-cut Control.....	309
5.3 Fan Motor or Related Abnormality .....	311
5.4 Thermistor or Related Abnormality (Indoor Unit).....	314
5.5 Front Panel Open / Close Fault (FTXG and CTXG Series).....	315
5.6 Signal Transmission Error (between Indoor Unit and Outdoor Unit) ...	316
5.7 Unspecified Voltage (between Indoor Unit and Outdoor Unit) .....	318
6. Troubleshooting for SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series .....	319
6.1 Indoor Unit PCB Abnormality .....	319
6.2 Drain Water Level System Abnormality.....	320
6.3 Fan Motor or Related Abnormality .....	322
6.4 Swing Motor Lock (FHQ Series).....	324
6.5 Drain System Abnormality.....	325
6.6 Thermistor or Related Abnormality.....	326
6.7 Remote Controller Thermistor Abnormality.....	328
6.8 Signal Transmission Error (between Indoor Unit and Remote Controller).....	329
6.9 Signal Transmission Error (between MAIN Remote Controller and SUB Remote Controller).....	330
6.10 Field Setting Abnormality .....	331
7. Troubleshooting for Outdoor Unit.....	333
7.1 Anti-icing Function.....	333
7.2 Outdoor Unit PCB Abnormality.....	335
7.3 OL Activation (Compressor Overload) .....	336
7.4 Compressor Lock .....	337
7.5 DC Fan Lock .....	338
7.6 Input Overcurrent Detection .....	339
7.7 Discharge Pipe Temperature Control.....	340

---

7.8	High Pressure Control in Cooling .....	341
7.9	Compressor Sensor System Abnormality .....	343
7.10	Position Sensor Abnormality .....	345
7.11	CT or Related Abnormality .....	347
7.12	Thermistor or Related Abnormality (Outdoor Unit) .....	349
7.13	Electrical Box Temperature Rise .....	351
7.14	Radiation Fin Temperature Rise .....	353
7.15	Output Overcurrent Detection .....	355
7.16	Refrigerant Shortage .....	357
7.17	Low-voltage Detection or Over-voltage Detection .....	359
7.18	Signal Transmission Error (on Outdoor Unit PCB) .....	360
7.19	Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units) .....	361
8.	Check .....	362
8.1	Thermistor Resistance Check .....	362
8.2	Fan Motor Connector Check .....	363
8.3	Hall IC Check .....	363
8.4	Power Supply Waveform Check .....	363
8.5	Electronic Expansion Valve Check .....	364
8.6	Four Way Valve Performance Check .....	365
8.7	Inverter Unit Refrigerant System Check .....	365
8.8	“Inverter Checker” Check .....	366
8.9	Rotation Pulse Check on the Outdoor Unit PCB .....	367
8.10	Installation Condition Check .....	368
8.11	Discharge Pressure Check .....	368
8.12	Outdoor Fan System Check .....	369
8.13	Capacitor Voltage Check .....	369
8.14	Power Module Check .....	369

# 1. Troubleshooting with LED


## 1.1 Indoor Unit

### Operation Lamp

The operation lamp blinks when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated, or when the thermistor malfunctions.
  2. When a signal transmission error occurs between the indoor and outdoor units.
- In either case, conduct the diagnostic procedure described in the following pages.


#### Wall Mounted Type: FTXG and CTXG Series

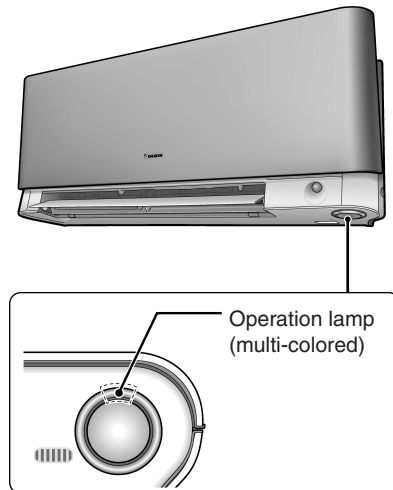

(R12750)


#### Wall Mounted Type: FTXS and ATXS Series 20-50 Class

(The design of the front panel varies depending on the model.)

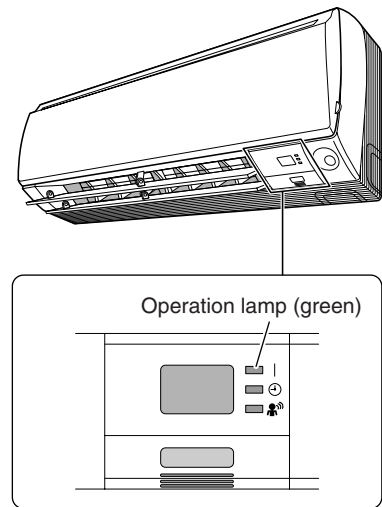


(R12187)

#### Wall Mounted Type: FTXS Series 60/71 Class

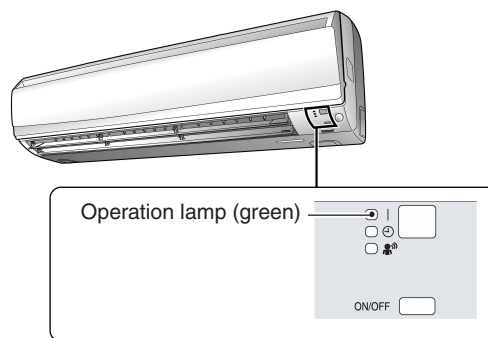

(R11689)


#### Floor Standing Type

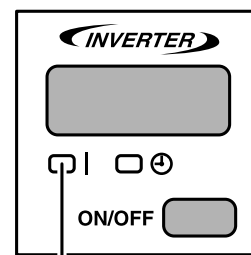

Operation lamp (green)


(R11687)

#### Floor / Ceiling Suspended Dual Type

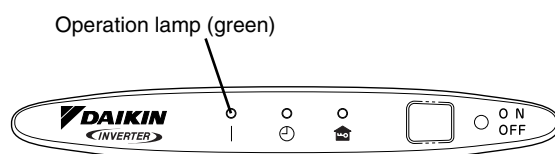


(R11688)


#### Duct Connected Type

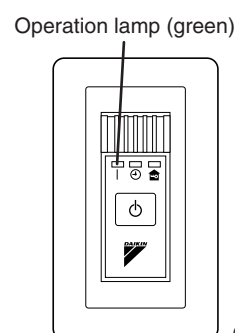

(Q0340)

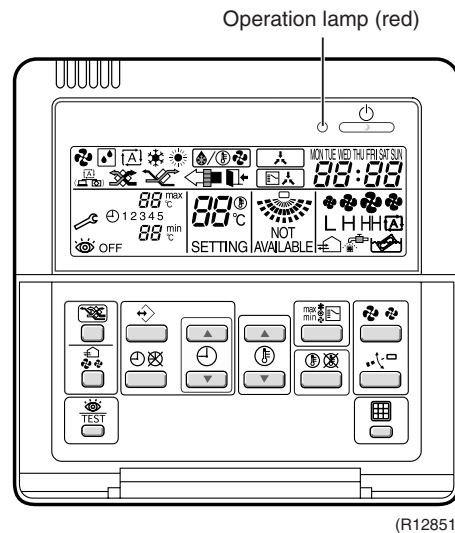**BRC1D528**

(R12851)

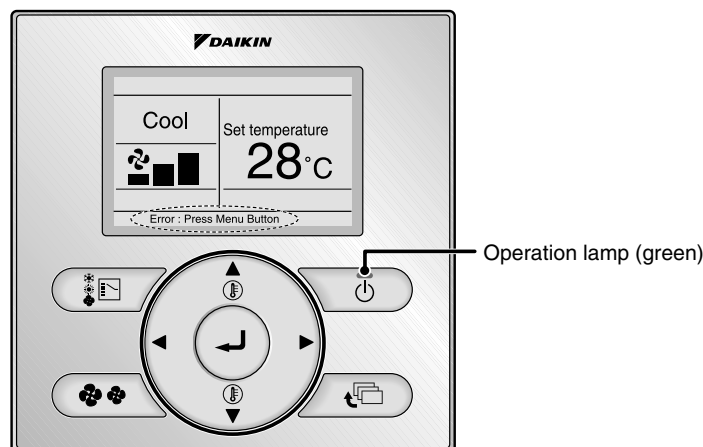**BRC1E51A7**

★ The error or warning message also blinks on the basic screen.

(R12852)

**BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66**

In case of wireless remote controller, a signal receiver PCB and a display PCB are installed on indoor unit.

When the error occurs, the operation lamp on the display PCB blinks.

**Caution:**

When operation stops suddenly and the operation lamp blinks, it could be "operation mode conflict".

Check followings;

Are the operation modes all the same for the indoor units connected to multi system outdoor unit?

If not, set all the indoor units to the same operation mode and confirm that the operation lamp is not blinking.

Moreover, when the operation mode is automatic, set all the indoor unit operation mode as "cooling" or "heating" and check again if the operation lamp is normal.

If the lamp stops blinking after the above steps, there is no malfunction.


★ Operation stops and operation lamp blinks only for indoor unit which different operation mode is set later. (The first set operation mode has priority.)

**Service Monitor**

The indoor unit has one green LED (LED A) on the control PCB. When the microcomputer works in order, the LED A blinks.

## 1.2 Outdoor Unit

The outdoor unit has one green LED (LED A) on the PCB. When the LED A blinks, the microcomputer works in order.

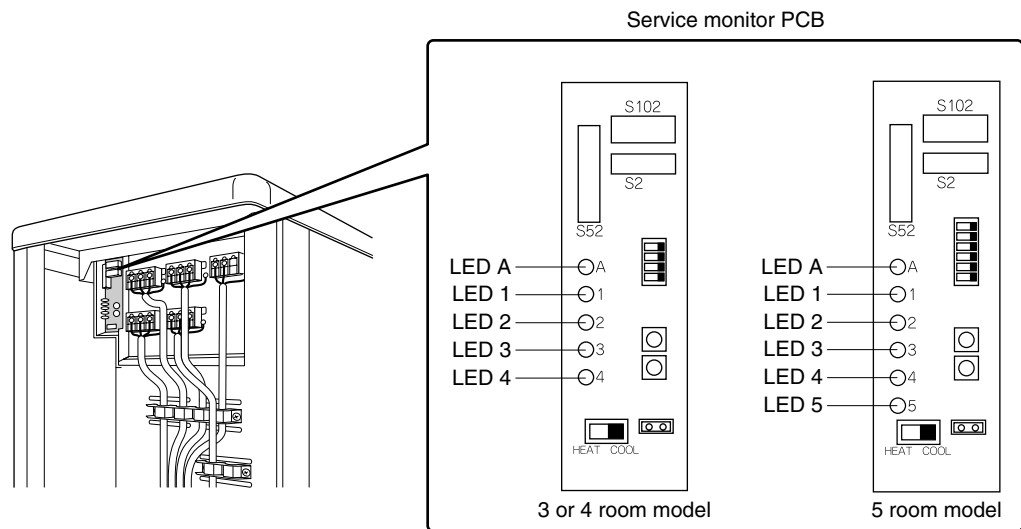

(R12853)

There are a green LED (LED A) and red LEDs on the outdoor unit PCB. The LED A indicates microcomputer operation condition. In normal condition, the LED A is blinking and the other LEDs are OFF.

Even after the error is canceled and the unit operates in normal condition, the LED indication remains.



## 2. Problem Symptoms and Measures


Problem Symptom	Check Item	Details of Measure	Reference Page
None of the units operates.	Check the power supply.	Check if the rated voltage is supplied.	—
	Check the type of the indoor units.	Check if the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below -10 ~ 10°C (depending on the model).	—
	Diagnose with remote controller indication	—	306, 307
	Check the remote controller addresses.	Check if address settings for the remote controller and indoor unit are correct.	447
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below -10 ~ 10°C (depending on the model).	—
	Diagnose with remote controller indication.	—	306, 307
Some indoor units do not operate.	Check the type of the indoor units.	Check if the indoor unit type is compatible with the outdoor unit.	—
	Diagnose with remote controller indication	—	306, 307
Units operate but do not cool, or do not heat.	Check for wiring and piping errors in the connection between the indoor and outdoor units.	Conduct the wiring/piping error check described on the product diagnosis nameplate.	—
	Check for thermistor detection errors.	Check if the thermistor is mounted securely.	—
	Check for faulty operation of the electronic expansion valve.	Set all the units to cooling operation, and compare the temperatures of the liquid pipes to see if the each electronic expansion valve works.	—
	Diagnose with remote controller indication.	—	306, 307
	Diagnose by service port pressure and operating current.	Check for refrigerant shortage.	357
Large operating noise and vibrations	Check the output voltage of the power module.	—	369
	Check the power module.	—	—
	Check the installation condition.	Check if the required spaces for installation (specified in the installation manual, etc.) are provided.	—

## 3. Service Check Function

### 3.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series

#### 3.1.1 ARC466 Series Remote Controller

- Check Method 1**
- When the timer cancel button is held down for 5 seconds, "00" indication appears on the temperature display section.

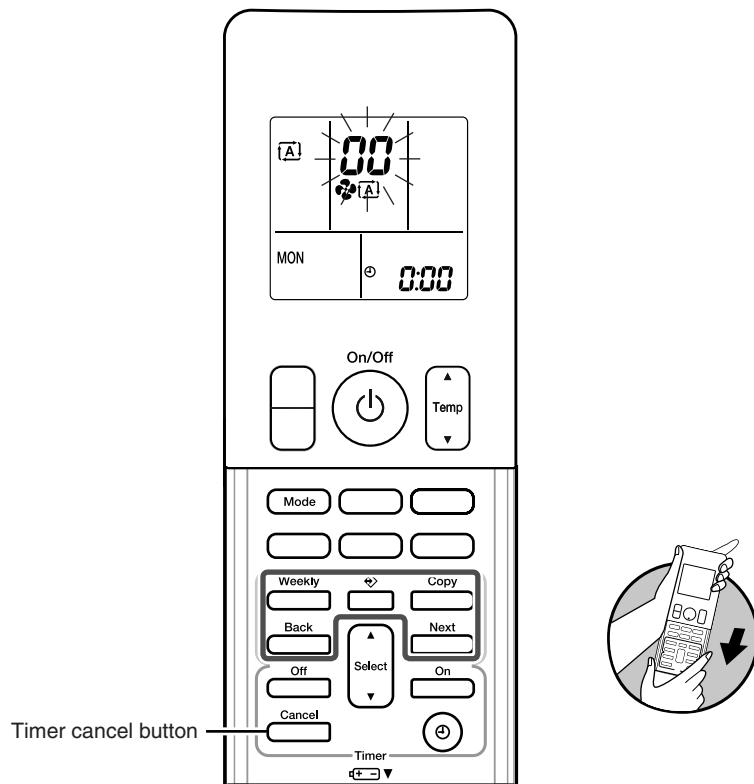

< ARC466 Series >

(R14553)

- Press the timer cancel button repeatedly until a long beep sounds.
  - The code indication changes in the sequence shown below.

No.	Code	No.	Code	No.	Code
1	00	13	07	25	UR
2	U4	14	R3	26	UH
3	LS	15	M8	27	P4
4	E6	16	M9	28	L3
5	M6	17	09	29	L4
6	M0	18	04	30	M7
7	R6	19	05	31	U2
8	E7	20	J3	32	ER
9	U0	21	J6	33	PH
10	F3	22	E5	34	FR
11	R5	23	R1	35	H1
12	F6	24	E1	36	P9




**Note:**


- A short beep "pi" and 2 consecutive beeps "pi pi" indicate non-corresponding codes.
- To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.
- Not all the error codes are displayed. When you cannot find the error code, try the check method 2. (→Refer to page 291.)

## Check Method 2


1. Press the center of the Temp button and the Mode button at the same time.

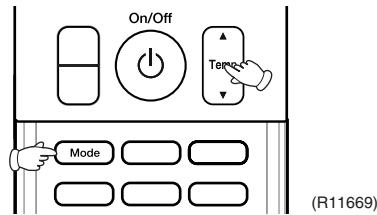


“5ㄥ” is displayed on the LCD.

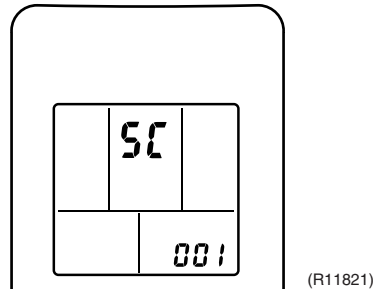

2. Select “5ㄥ” (service check) with the Temp▲ or ▼ button.
3. Press the Mode button to enter the service check mode.  
The figure of the ten’s place blinks.

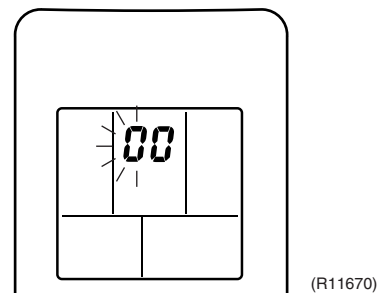


4. Press the Temp▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

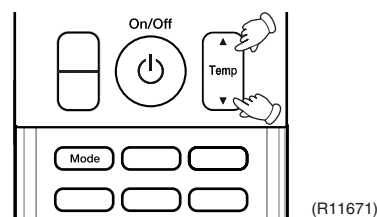


5. Diagnose by the sound.
  - ★“pi” : The figure of the ten’s place does not accord with the error code.
  - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
  - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.  
(The figures indicated when you hear the “beep” sound are error code.  
→ Refer to page 306, 307.)


6. Press the Mode button.

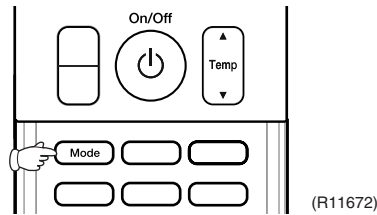

The figure of the one's place blinks.

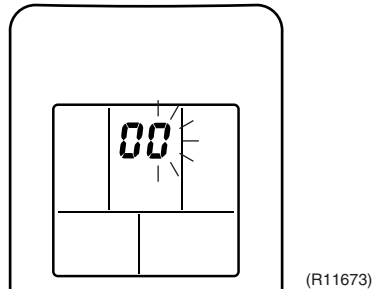

7. Press the Temp ▲ or ▼ button and change the figure until you hear the sound of “beep”.

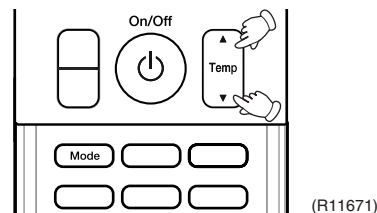


8. Diagnose by the sound.

- ★“pi” : The figure of the ten's place does not accord with the error code.
- ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
- ★“beep” : The both figures of the ten's and one's place accord with the error code.

9. Determine the error code.

The figures indicated when you hear the “beep” sound are error code.  
(Error codes and description → Refer to page 306, 307.)


10. Press the Mode button for 5 seconds to exit from the service check mode.  
(When the remote controller is left untouched for 60 seconds, it returns to the normal mode also.)

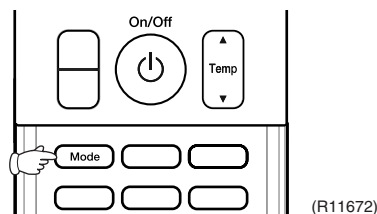

### 3.1.2 ARC452 Series Remote Controller

#### Check Method 1

- When the timer cancel button is held down for 5 seconds, "00" indication appears on the temperature display section.

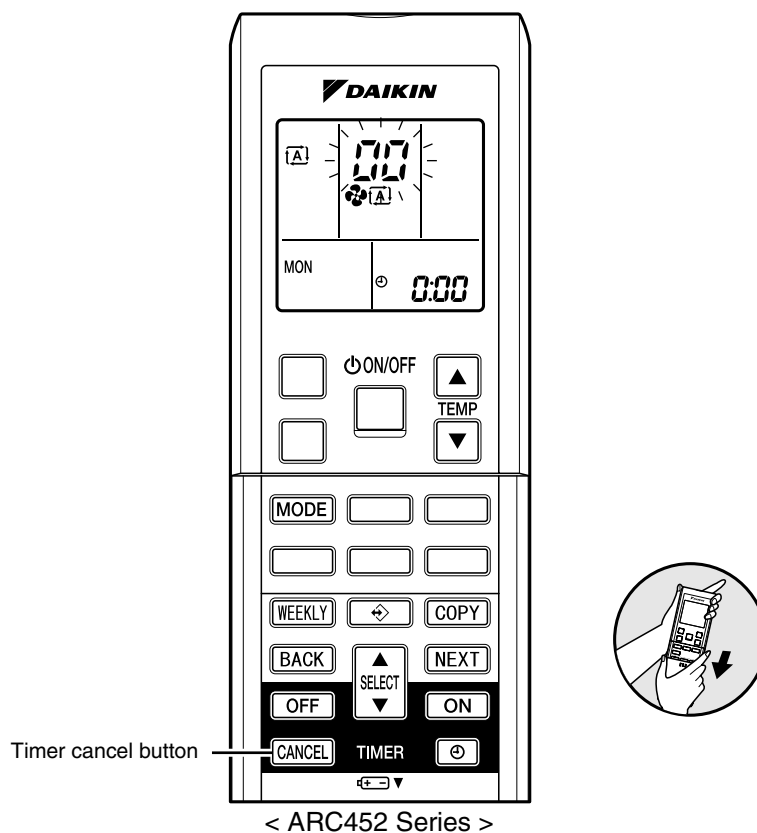

(R14554)

- Press the timer cancel button repeatedly until a long beep sounds.

■ The code indication changes in the sequence shown below.

No.	Code	No.	Code	No.	Code
1	00	13	07	25	UR
2	04	14	R3	26	UR
3	15	15	H8	27	P4
4	E6	16	H9	28	L3
5	H6	17	09	29	L4
6	H0	18	04	30	H7
7	R6	19	05	31	U2
8	E7	20	J3	32	ER
9	U0	21	J6	33	R4
10	F3	22	E5	34	FR
11	R5	23	R1		
12	F6	24	E1		




#### Note:


- A short beep "pi" and 2 consecutive beeps "pi pi" indicate non-corresponding codes.
- To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.
- Not all the error codes are displayed. When you cannot find the error code, try the check method 2. (→Refer to page 294.)

**Check Method 2**


1. Press the 3 buttons (TEMP▲, TEMP▼, MODE) at the same time.

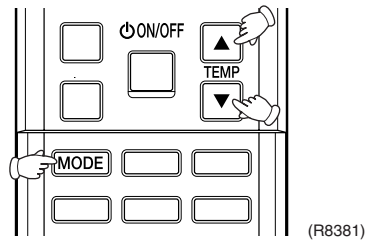

The figure of the ten's place blinks.

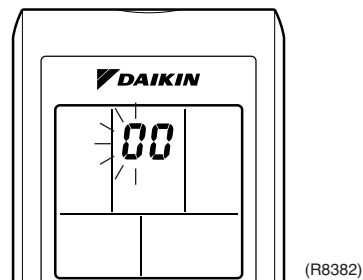


2. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

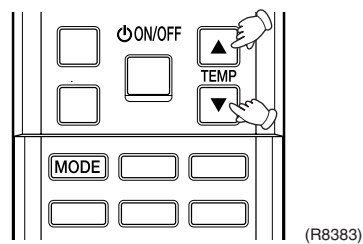


3. Diagnose by the sound.
  - ★“pi” : The figure of the ten's place does not accord with the error code.
  - ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
  - ★“beep” : The both figures of the ten's and one's place accord with the error code.  
(The figures indicated when you hear the “beep” sound are error code.  
→ Refer to page 306, 307.)


4. Press the MODE button.

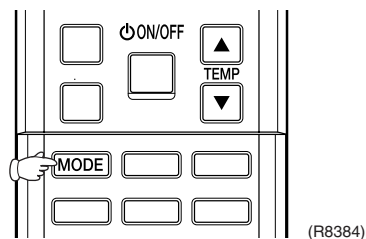


The figure of the one's place blinks.

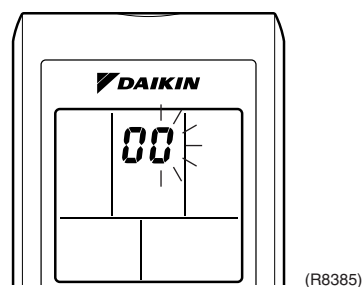


5. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep”.

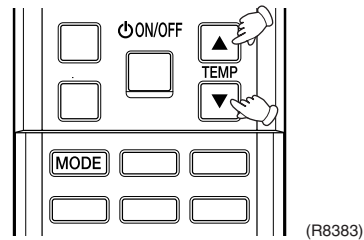


6. Diagnose by the sound.
- ★“pi” : The figure of the ten’s place does not accord with the error code.
  - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
  - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.
7. Determine the error code.  
The figures indicated when you hear the “beep” sound are error code.  
(Error codes and description → Refer to page 306, 307.)
8. Press the MODE button to exit from the diagnosis mode.

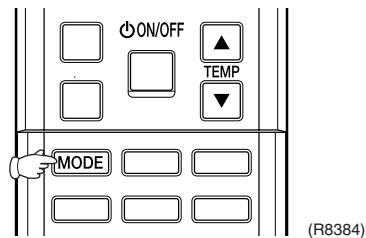

The display “ 7 ~ ” means the trial operation mode.  
(Refer to page 443 for trial operation.)

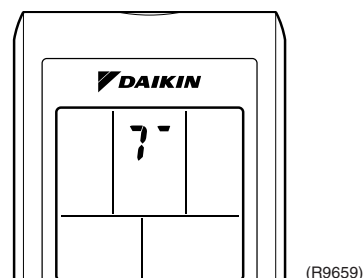

9. Press the ON/OFF button twice to return to the normal mode.

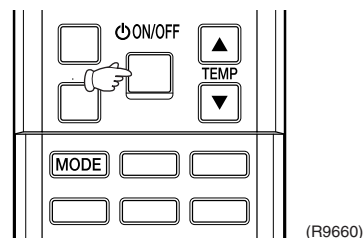


**Note:** When the remote controller is left untouched for 60 seconds, it returns to the normal mode.

### 3.1.3 ARC433 Series Remote Controller

#### Check Method 1

1. When the timer cancel button is held down for 5 seconds, "00" indication appears on the temperature display section.

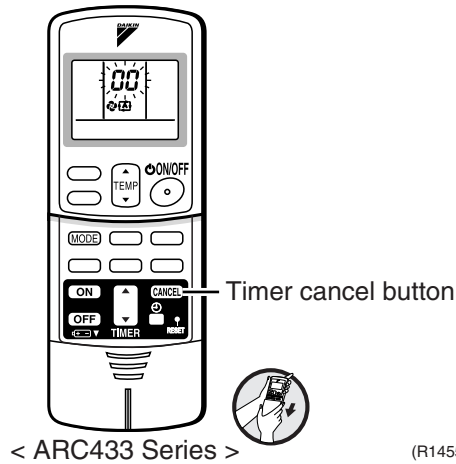

2. Press the timer cancel button repeatedly until a long beep sounds.
  - The code indication changes in the sequence shown below.

#### <ARC433B85>

No.	Code	No.	Code	No.	Code
1	00	12	F6	23	R1
2	U4	13	E7	24	E1
3	L5	14	R3	25	UR
4	E6	15	H8	26	UH
5	H6	16	H9	27	P4
6	H0	17	E9	28	L3
7	R6	18	E4	29	L4
8	E7	19	E5	30	H7
9	U0	20	J3	31	U2
10	F3	21	J6	32	ER
11	R5	22	E5	33	R4

#### <ARC433B67, B68, B69, B76>

No.	Code	No.	Code	No.	Code
1	00	12	E7	23	H0
2	U4	13	H8	24	E1
3	F3	14	J3	25	P4
4	E6	15	R3	26	L3
5	L5	16	R1	27	L4
6	R6	17	E4	28	H6
7	E5	18	E5	29	H7
8	F6	19	H9	30	U2
9	E9	20	J6	31	UH
10	U0	21	UR	32	ER
11	E7	22	R5	33	R4




#### Note:

1. A short beep "pi" and two consecutive beeps "pi pi" indicate non-corresponding codes.
2. To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.
3. Not all the error codes are displayed. When you cannot find the error code, try the check method 2. (→Refer to page 297.)




## Check Method 2

1. Press the center of the TEMP button and the MODE button at the same time.

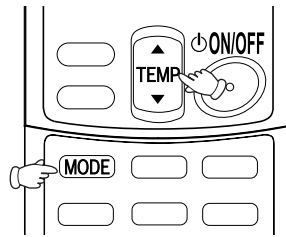


(R4272)

The figure of the ten's place blinks.

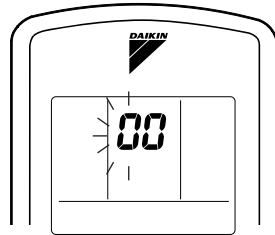

(R4273)

2. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

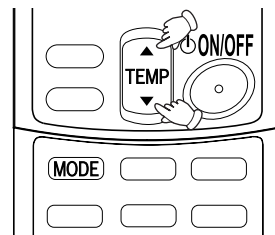


(R4274)

3. Diagnose by the sound.


- ★“pi” : The figure of the ten's place does not accord with the error code.
- ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
- ★“beep” : The both figures of the ten's and one's place accord with the error code.  
(The figures indicated when you hear the “beep” sound are error code.  
→ Refer to page 306, 307.)

4. Press the MODE button.

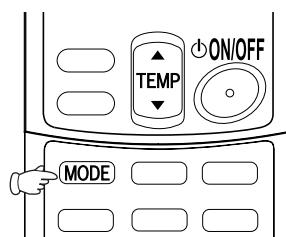


(R4275)

The figure of the one's place blinks.

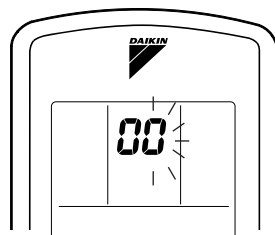

(R4276)

5. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep”.

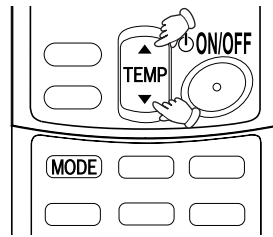


(R4277)

6. Diagnose by the sound.
- ★“pi” : The figure of the ten’s place does not accord with the error code.
  - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
  - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.

7. Determine the error code.


The figures indicated when you hear the “beep” sound are error code.  
(Error codes and description → Refer to page 306, 307.)

8. Press the MODE button to exit from the diagnosis mode.

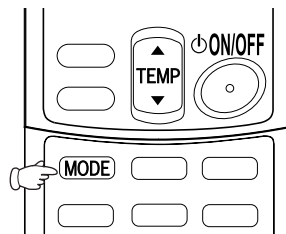


(R4278)

The display “ 7 ~ ” means the trial operation mode.  
(Refer to page 443 for trial operation.)

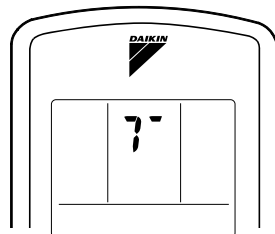

(R9669)

9. Press the ON/OFF button twice to return to the normal mode.

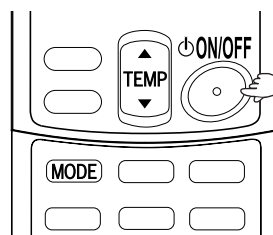

(R9670)




**Note:** When the remote controller is left untouched for 60 seconds, it returns to the normal mode.

## 3.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series


### 3.2.1 Relations between Modes

BRC1D528, BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66

The following modes can be selected by using the [Inspection / Test] button on the remote controller.

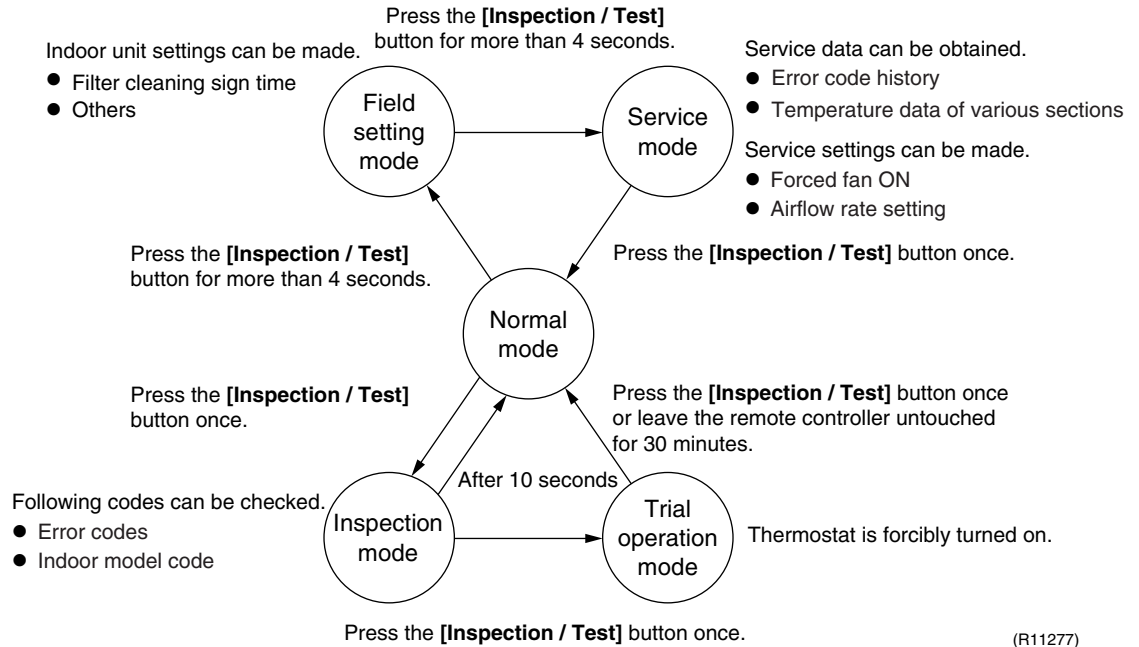

BRC1E51A7

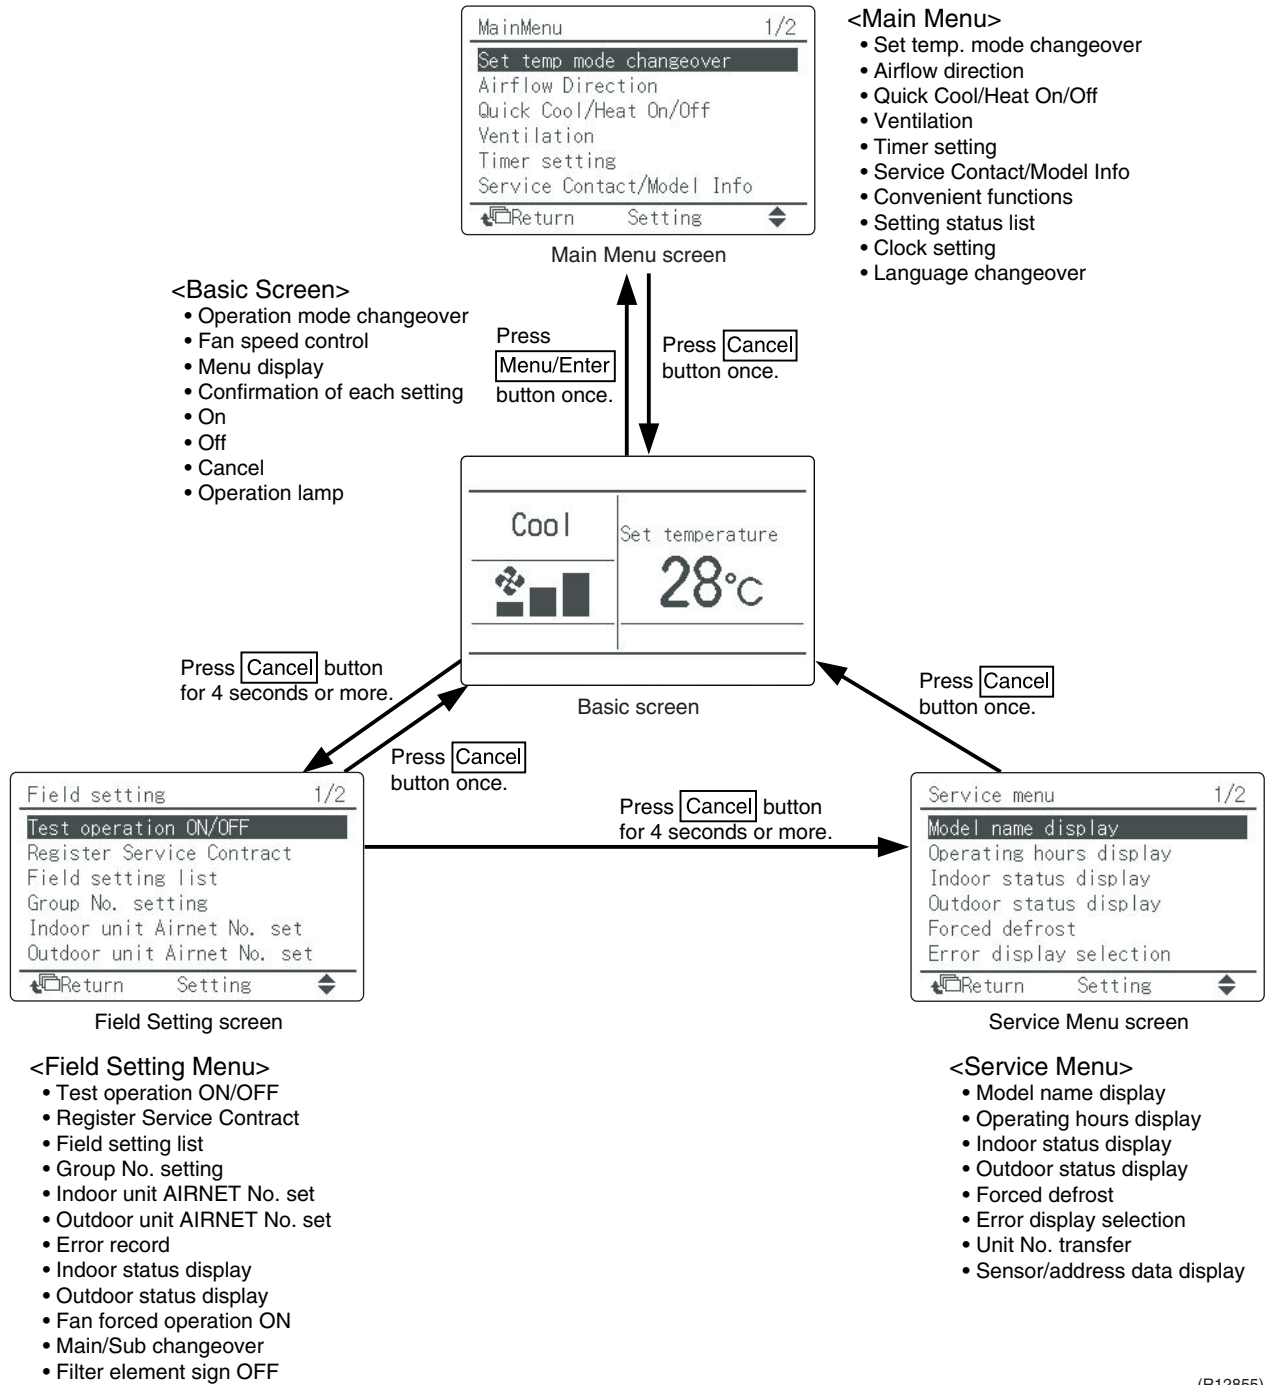


(R12855)

### 3.2.2 BRC1D528

If operation stops due to malfunction, the operation lamp on the remote controller blinks, and error code is displayed. (Even if stop operation is carried out, malfunction contents are displayed when inspection mode is entered.) The error code enables you to tell what kind of malfunction caused operation to stop.

Refer to page 306, 307 for error code and malfunction contents.

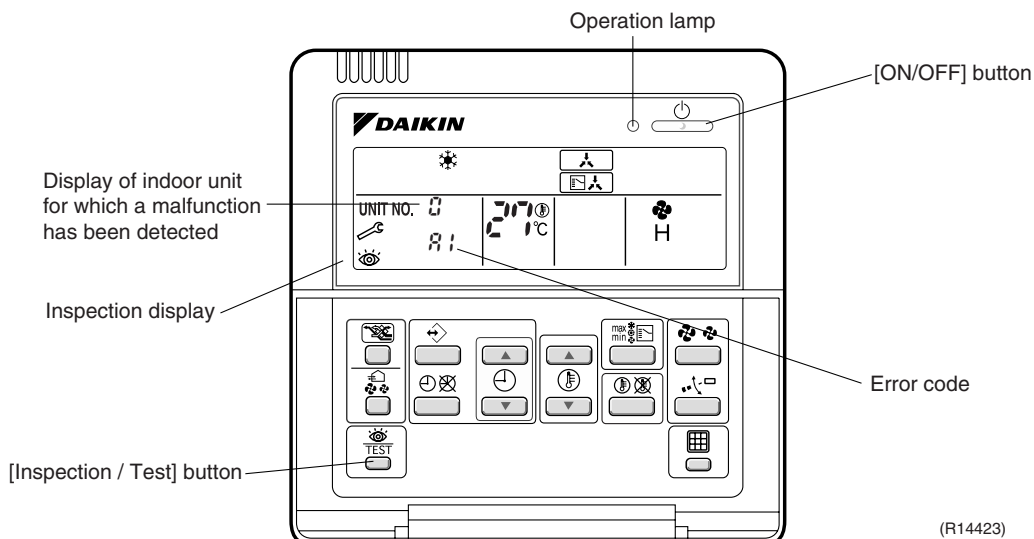


**Note:**

1. When you press the [Inspection / Test] button, the inspection display blinks.
2. While in the inspection mode, press the [ON/OFF] button for 5 seconds or more to clear the failure history indication. In this case, the error code blinks twice and then changes to "00" (= Normal), the UNIT No. changes to "0", and the operation mode automatically switches from the inspection mode to the normal mode (displaying the set temperature).

### 3.2.3 BRC1E51A7

The following display appears on the screen when a error (or a warning) occurs during operation.

Check the error code and take the corrective action specified for the particular model.

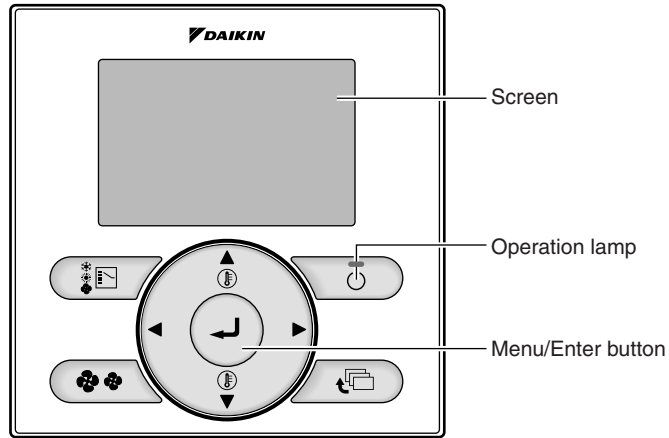

(R12856)

**(1) Check if it is error or warning.**


	Operation status	Display	
Abnormal shutdown	The system stops operating.	The operation lamp (green) starts to blink. The message "Error: Press Menu Button" appears and blinks at the bottom of the screen.	<p>(R12858)</p>
Warning	The system continues its operation.	The operation lamp (green) remains on. The message "Warning: Press Menu Button" appears and blinks at the bottom of the screen.	<p>(R12857)</p>

**(2) Take corrective action.**

- Press the [Menu/Enter] button to check the error code.





- Take the corrective action specific to the model.

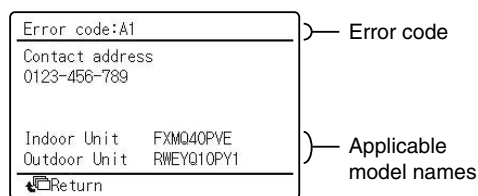
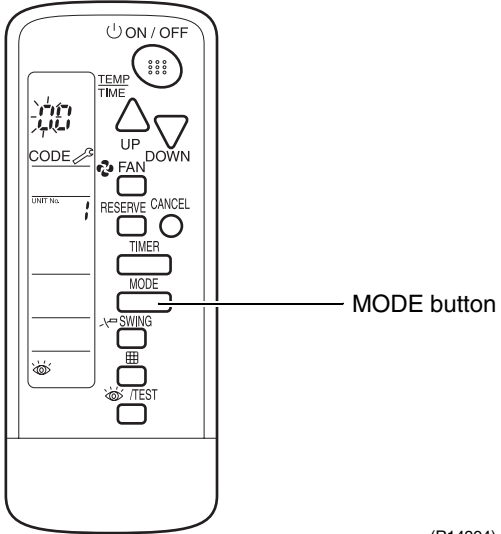
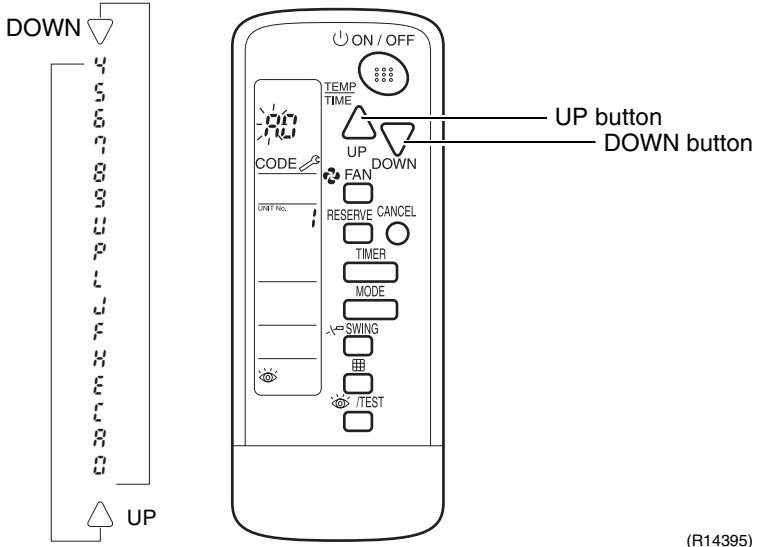


(R12859)




### 3.2.4 BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66

To find the error code, proceed as follows:

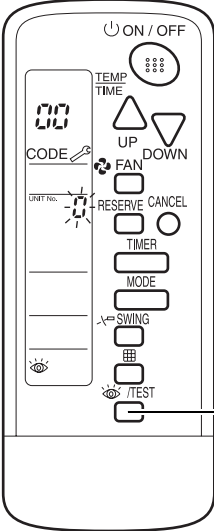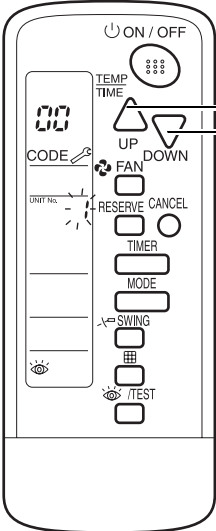Step	Action								
1	<p>Press the [Inspection / Test] button to enter the inspection mode. Then the figure “00” blinks on the UNIT No. display.</p>  <p style="text-align: right;">[Inspection / Test] button</p> <p style="text-align: right;">(R14392)</p>								
2	<p>Press the UP or DOWN button and change the UNIT No. until the receiver of the remote controller starts to beep.</p>  <p style="text-align: right;">UP button DOWN button</p> <p style="text-align: right;">(R14424)</p> <table border="1" data-bbox="616 1626 1377 1865"> <thead> <tr> <th data-bbox="616 1626 994 1659">If you hear...</th> <th data-bbox="994 1626 1377 1659">Then...</th> </tr> </thead> <tbody> <tr> <td data-bbox="616 1659 994 1693">3 short beeps</td> <td data-bbox="994 1659 1377 1693">Follow all steps below.</td> </tr> <tr> <td data-bbox="616 1693 994 1827">1 short beep</td> <td data-bbox="994 1693 1377 1827">Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.</td> </tr> <tr> <td data-bbox="616 1827 994 1865">1 continuous beep</td> <td data-bbox="994 1827 1377 1865">There is no abnormality.</td> </tr> </tbody> </table>	If you hear...	Then...	3 short beeps	Follow all steps below.	1 short beep	Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.	1 continuous beep	There is no abnormality.
If you hear...	Then...								
3 short beeps	Follow all steps below.								
1 short beep	Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.								
1 continuous beep	There is no abnormality.								

Step	Action								
3	<p>Press the MODE button. The left “” (upper digit) indication of the error code blinks.</p>  <p style="text-align: right;">(R14394)</p>								
4	<p>Press the UP or DOWN button to change the error code upper digit until the receiver of the remote controller starts to beep.</p>  <p style="text-align: right;">(R14395)</p> <table border="1" data-bbox="614 1541 1380 1684"> <thead> <tr> <th>If you hear...</th> <th>Then...</th> </tr> </thead> <tbody> <tr> <td>2 short beeps</td> <td>The upper digit matches.</td> </tr> <tr> <td>1 short beep</td> <td>No digits match.</td> </tr> <tr> <td>1 continuous beep</td> <td>Both upper and lower digits match.</td> </tr> </tbody> </table>	If you hear...	Then...	2 short beeps	The upper digit matches.	1 short beep	No digits match.	1 continuous beep	Both upper and lower digits match.
If you hear...	Then...								
2 short beeps	The upper digit matches.								
1 short beep	No digits match.								
1 continuous beep	Both upper and lower digits match.								

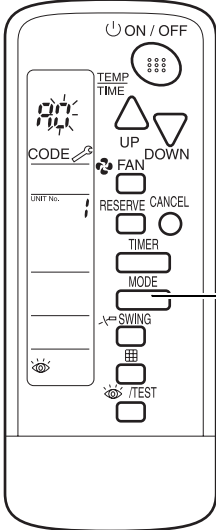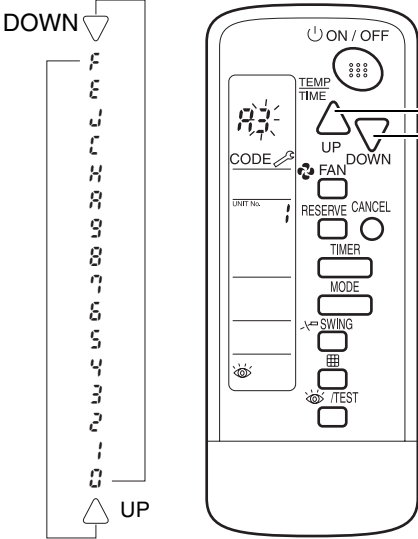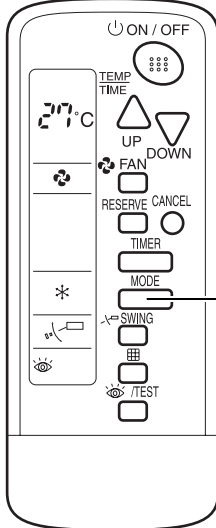

Step	Action
5	<p>Press the MODE button. The right “E” (lower digit) indication of the error code blinks.</p>  <p style="text-align: right;">MODE button</p> <p style="text-align: right;">(R14396)</p>
6	<p>Press the UP or DOWN button and change the error code lower digit until the receiver of the remote controller generates a continuous beep.</p>  <p style="text-align: right;">UP button DOWN button</p> <p style="text-align: right;">(R14397)</p>
7	<p>Press the MODE button to return to the normal mode. If you do not press any button for 1 minutes, the remote controller automatically returns to the normal mode.</p>  <p style="text-align: right;">MODE button</p> <p style="text-align: right;">(R14398)</p>

## 4. Code Indication on Remote Controller

### 4.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series

Error Codes	Description	Reference Page	
00	Normal condition	—	
R1	Indoor unit PCB abnormality	308	
R5	Freeze-up protection control or heating peak-cut control	309	
R6	Fan motor or related abnormality	DC motor (wall, floor standing)	311
		AC motor (duct, floor / ceiling)	313
C4	Indoor heat exchanger thermistor or related abnormality	314	
C7	Front panel open / close fault (FTXG and CTXG series)	315	
C9	Room temperature thermistor or related abnormality	314	
U4	Signal transmission error (between indoor unit and outdoor unit)	316	
UR	Unspecified voltage (between indoor unit and outdoor unit)	318	

### 4.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series

Error Codes	Description	Reference Page
00	Normal condition	—
R1	Indoor unit PCB abnormality	319
R3	Drain water level system abnormality	320
R6	Fan motor or related abnormality	322
R7	Swing motor lock (FHQ series)	324
RF	Drain system abnormality	325
C4	Indoor heat exchanger thermistor or related abnormality	326
C9	Room temperature thermistor or related abnormality	326
CJ	Remote controller thermistor abnormality	328
U5	Signal transmission error (between indoor unit and remote controller)	329
U8	Signal transmission error (between MAIN remote controller and SUB remote controller)	330
UR	Field setting abnormality	331

: Error code displays automatically and system stops.  
Inspect and repair it.

: In the case of the shaded error codes, “inspection” is not displayed. The system operates, but be sure to inspect and repair it.

## 4.3 Outdoor Unit

☀: ON, ●: OFF, ⦿: Blinks

Green : Blinks in normal condition

Red : OFF in normal condition

Outdoor Unit LED Indication						Error Codes	Description	Reference Page
Green	Red							
A	1	2	3	4	5★			
⦿	●	●	●	●	●	00	Normal condition	—
						U9	Unspecified voltage (between indoor and outdoor units)	361
						U4	Anti-icing function in other rooms	361
⦿	●	●	☀	☀	●	(U0)	Refrigerant shortage	357
⦿	☀	●	●	☀	●	U2	Low-voltage detection or over-voltage detection	359
⦿	●	☀	☀	☀	●	U7	Signal transmission error (on outdoor unit PCB)	360
⦿	☀	●	☀	☀	●	R5	Anti-icing function	333
⦿	☀	☀	☀	●	●	E1	Outdoor unit PCB abnormality	335
⦿	☀	●	☀	●	●	(E5)	OL activation (compressor overload)	336
⦿	●	☀	☀	●	●	(E6)	Compressor lock	337
⦿	☀	☀	☀	☀	●	E7	DC fan lock	338
⦿	●	☀	●	☀	●	E8	Input overcurrent detection	339
⦿	☀	●	☀	●	●	F3	Discharge pipe temperature control	340
⦿	☀	●	☀	☀	●	F6	High pressure control in cooling	341
⦿	☀	☀	●	●	●	H0	Compressor sensor system abnormality	343
						H6	Position sensor abnormality	345
						H8	CT or related abnormality	347
						H9	Outdoor temperature thermistor or related abnormality	349
						J3	Discharge pipe thermistor or related abnormality	349
						J6	Outdoor heat exchanger thermistor or related abnormality	349
						J8	Liquid pipe thermistor or related abnormality	349
						J9	Gas pipe thermistor or related abnormality	349
P4	Radiation fin thermistor or related abnormality	349						
⦿	☀	☀	●	☀	●	L3	Electrical box temperature rise	351
⦿	●	●	●	☀	●	L4	Radiation fin temperature rise	353
⦿	●	●	☀	●	●	L5	Output overcurrent detection	355




**Note:**


- The error codes in the parenthesis ( ) are displayed only when the system is shut down.
- When a sensor error occurs, check the remote controller display to determine which sensor is malfunctioning.  
If the remote controller does not indicate the error code, conduct the following procedure.  
\*Turn the power switch off and back on again. If the same LED indication appears again immediately after the power is turned on, the fault is in the thermistor.  
\*If the above condition does not result, the fault is in the CT.
- The indoor unit error code may take the precedence in the remote controller display.
- ★ 3 room models and 4 room models do not have LED5.

# 5. Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series


## 5.1 Indoor Unit PCB Abnormality

<b>Remote Controller Display</b>	
<b>Method of Malfunction Detection</b>	The system checks if the circuit works properly within the microcomputer of the indoor unit.
<b>Malfunction Decision Conditions</b>	The system cannot set the internal settings.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Wrong models interconnected</li> <li>■ Defective indoor unit PCB</li> <li>■ Disconnection of connector</li> </ul>

### Troubleshooting

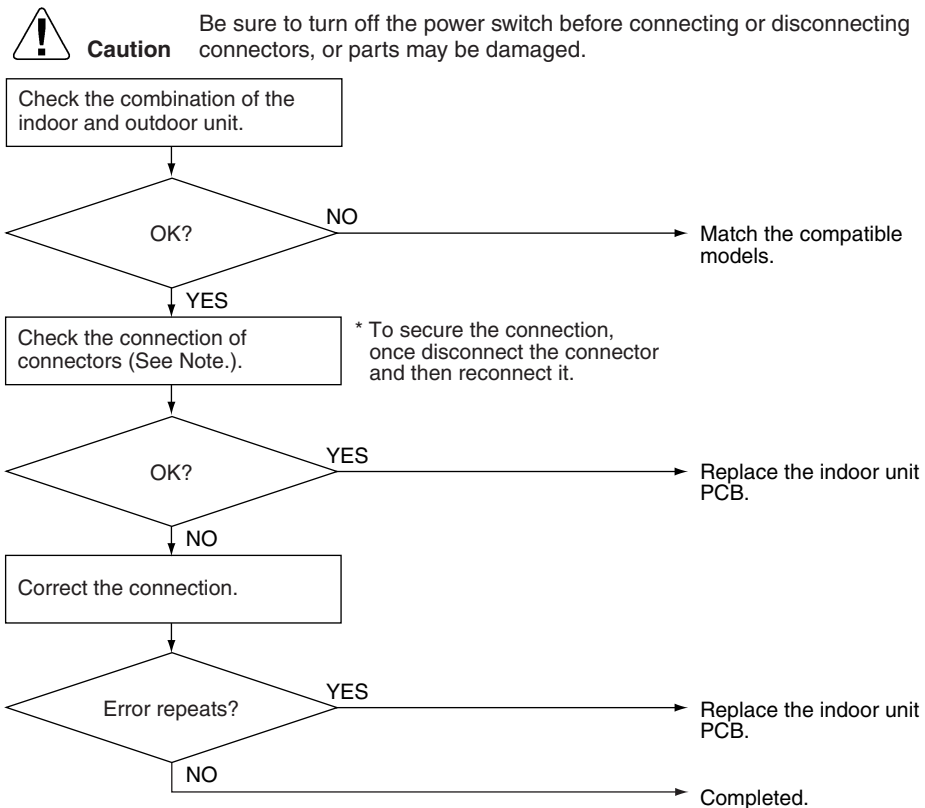

(R11930)

 **Note:** Check the following connector.

Model Type	Connector
Wall mounted type	Terminal board ~ Control PCB
Floor standing type	Terminal board ~ Control PCB
Floor / ceiling suspended dual type	S36 ~ S37
Duct connected type	Terminal board ~ Control PCB

## 5.2 Freeze-up Protection Control or Heating Peak-cut Control

Remote  
Controller  
Display

85

Method of  
Malfunction  
Detection

- Freeze-up protection control  
During cooling operation, the freeze-up protection control (operation halt) is activated according to the temperature detected by the indoor heat exchanger thermistor.
- Heating peak-cut control  
During heating operation, the temperature detected by the indoor heat exchanger thermistor is used for the heating peak-cut control (operation halt, outdoor fan stop, etc.)

Malfunction  
Decision  
Conditions

- Freeze-up protection control  
During cooling operation, the indoor heat exchanger temperature is below 0°C.
- Heating peak-cut control  
During heating operation, the temperature detected by the indoor heat exchanger thermistor is above 65°C.

Supposed  
Causes

- Clogged air filter of the indoor unit
- Dust accumulation on the indoor heat exchanger
- Short-circuited air
- Defective indoor heat exchanger thermistor
- Defective indoor unit PCB


Troubleshooting



**Check No.01**  
Refer to P.362



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

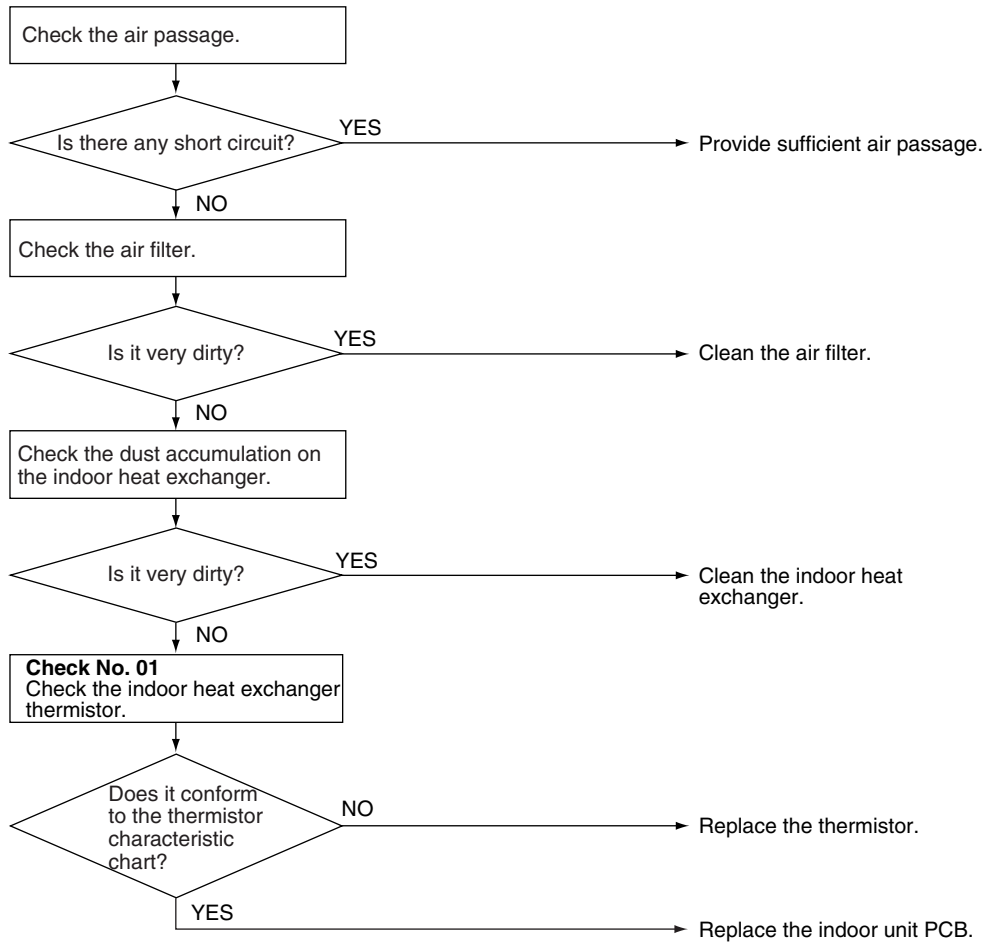

(R14402)

## 5.3 Fan Motor or Related Abnormality

### 5.3.1 DC Motor (Wall Mounted Type, Floor Standing Type)

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

Malfunction  
Decision  
Conditions

The detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed  
Causes

- 
- Disconnection of connector
  - Foreign matters stuck in the fan
  - Layer short inside the fan motor winding
  - Breaking of wire inside the fan motor
  - Breaking of the fan motor lead wires
  - Defective capacitor of the fan motor
  - Defective indoor unit PCB


Troubleshooting

**Check No.02**  
Refer to P.363




**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power supply and rotate the fan by hand.

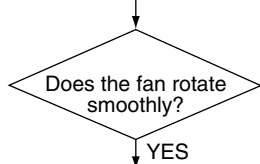





Turn the power on and start operation.

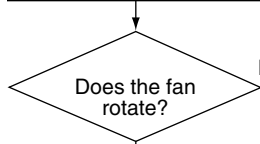

Turn off the power supply and disconnect the fan motor connector, then turn the power on.


Note : The motor may break when the motor connector is disconnected while remaining power supply.

**Check No.02**  
Check the output of the fan motor connector

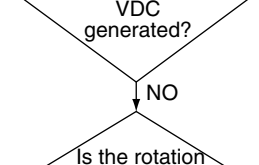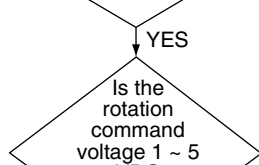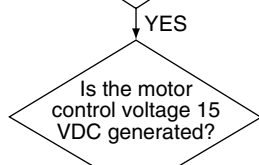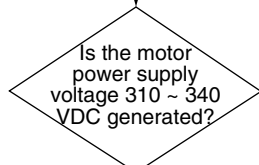

Stop the fan motor.

**Check No.02**  
Check the output of the fan motor connector

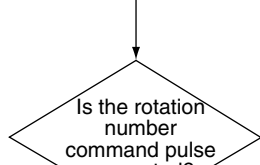

Replace the indoor unit PCB.

(R14404)



### 5.3.2 AC Motor (Duct Connected Type, Floor / Ceiling Suspended Dual Type)

Remote Controller Display



Method of Malfunction Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

Malfunction Decision Conditions

The detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed Causes

- Layer short inside the fan motor winding
- Breaking of wire inside the fan motor
- Breaking of the fan motor lead wires
- Defective capacitor of the fan motor
- Defective indoor unit PCB


Troubleshooting



Check No.04  
Refer to P.363



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

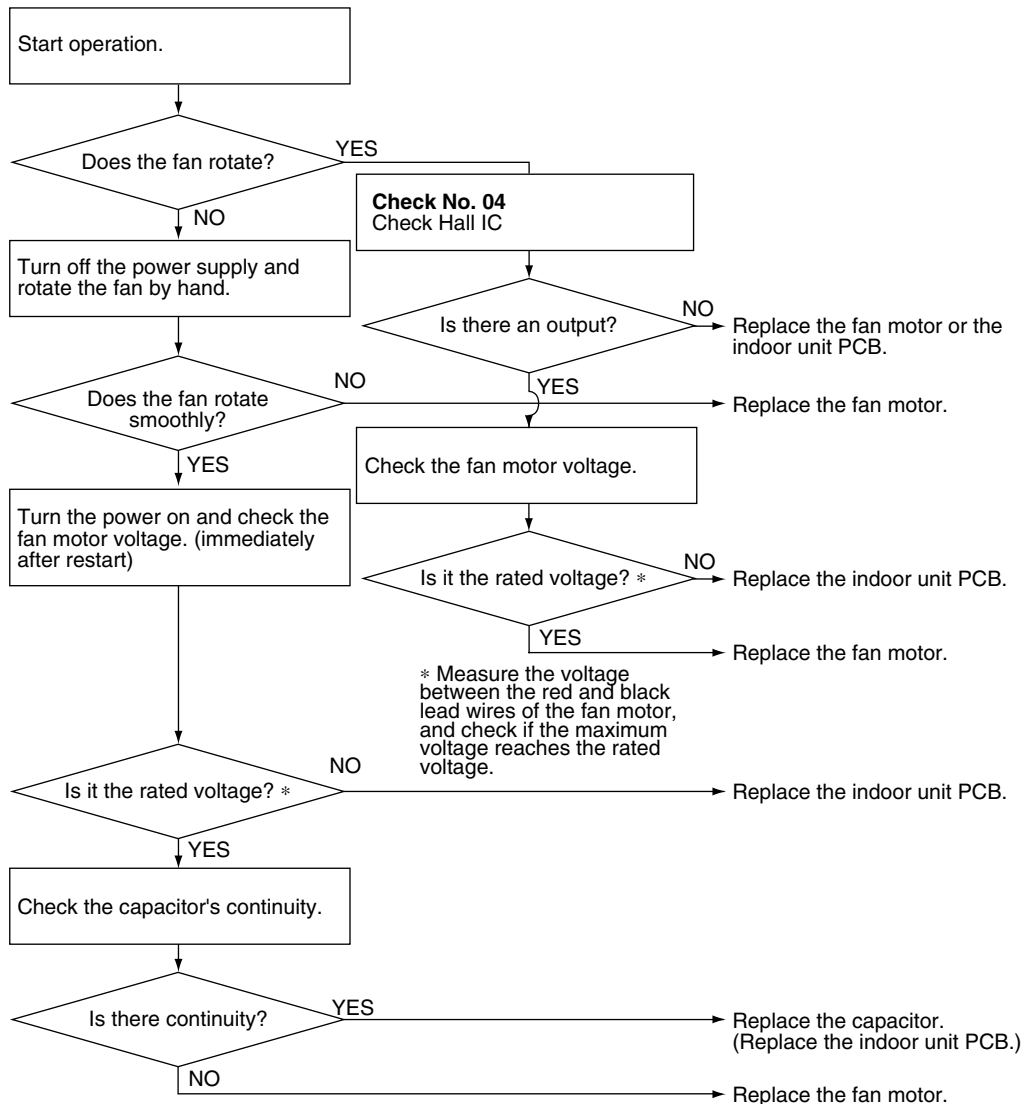


(R14403)

## 5.4 Thermistor or Related Abnormality (Indoor Unit)

Remote Controller Display	⌘4,⌘9
Method of Malfunction Detection	The temperatures detected by the thermistors are used to determine thermistor errors.
Malfunction Decision Conditions	The thermistor input is more than 4.96 V or less than 0.04 V during compressor operation.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Disconnection of connector</li> <li>■ Defective thermistor</li> <li>■ Defective indoor unit PCB</li> </ul>

### Troubleshooting

  
**Check No.01**  
 Refer to P.362

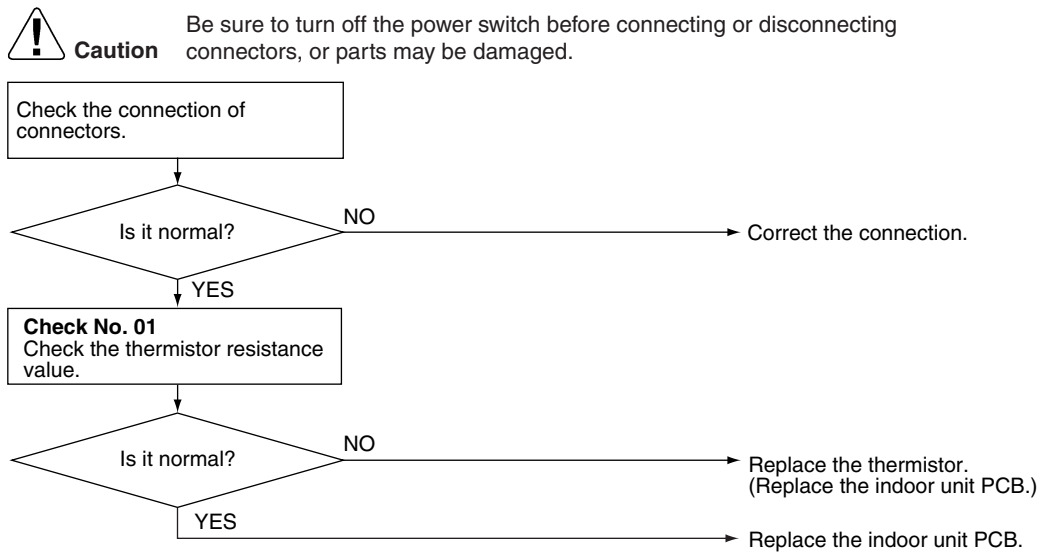

(R14406)

⌘4 : Indoor heat exchanger thermistor  
 ⌘9 : Room temperature thermistor

## 5.5 Front Panel Open / Close Fault (FTXG and CTXG Series)

Remote  
Controller  
Display



Method of  
Malfunction  
Detection


Malfunction  
Decision  
Conditions

- If the error repeats twice, the system is shut down.

Supposed  
Causes

- Defective reduction motor
- Malfunction or deterioration of the front panel mechanism
- Defective limit switch

Troubleshooting

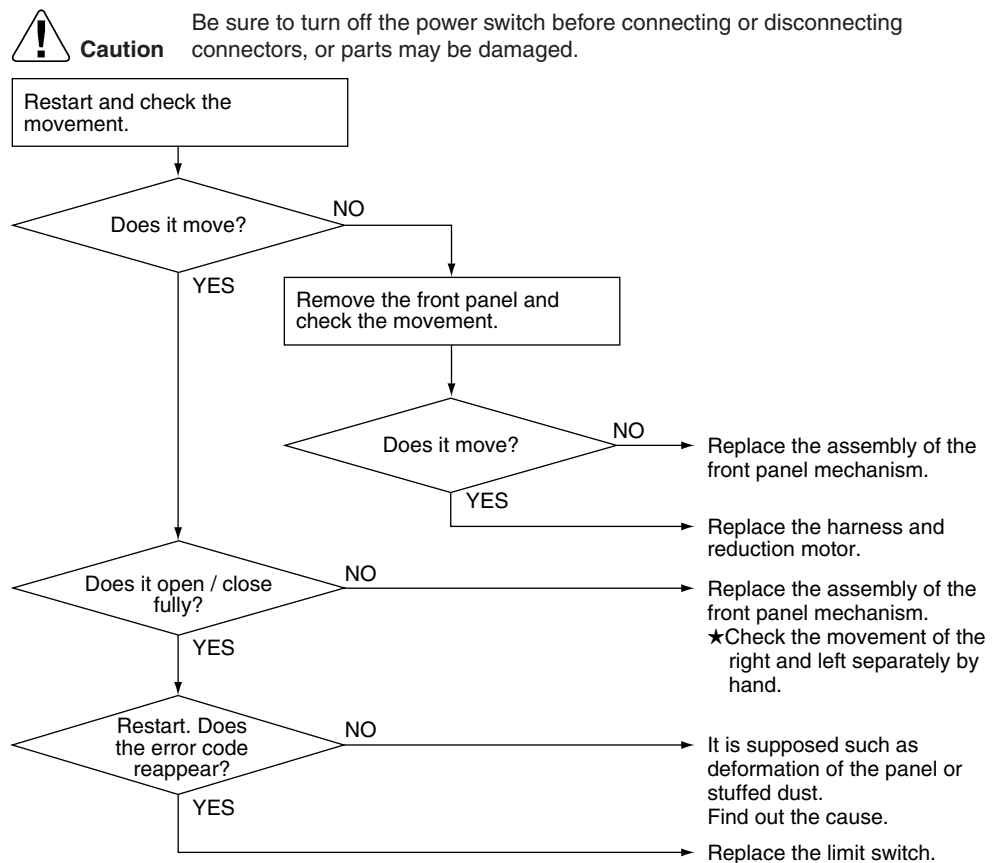

(R12180)



**Note:** You cannot operate the unit by the remote controller when the front panel mechanism breaks down.

<To the dealers: temporary measure before repair>

1. Turn off the power.
2. Remove the front panel.
3. Turn on the power.  
(Wait until the initialization finishes.)
4. Operate the unit by the indoor unit ON/OFF button.

## 5.6 Signal Transmission Error (between Indoor Unit and Outdoor Unit)

**Remote  
Controller  
Display**



**Method of  
Malfunction  
Detection**

The data received from the outdoor unit in indoor unit-outdoor unit signal transmission is checked whether it is normal.

**Malfunction  
Decision  
Conditions**

The data sent from the outdoor unit cannot be received normally, or the content of the data is abnormal.


**Supposed  
Causes**

- Defective outdoor unit PCB
- Defective indoor unit PCB
- Wiring error
- Disturbed power supply waveform
- Breaking of the connection wires between the indoor and outdoor units (wire No. 3)

Troubleshooting



**Check No.11**  
Refer to P.363

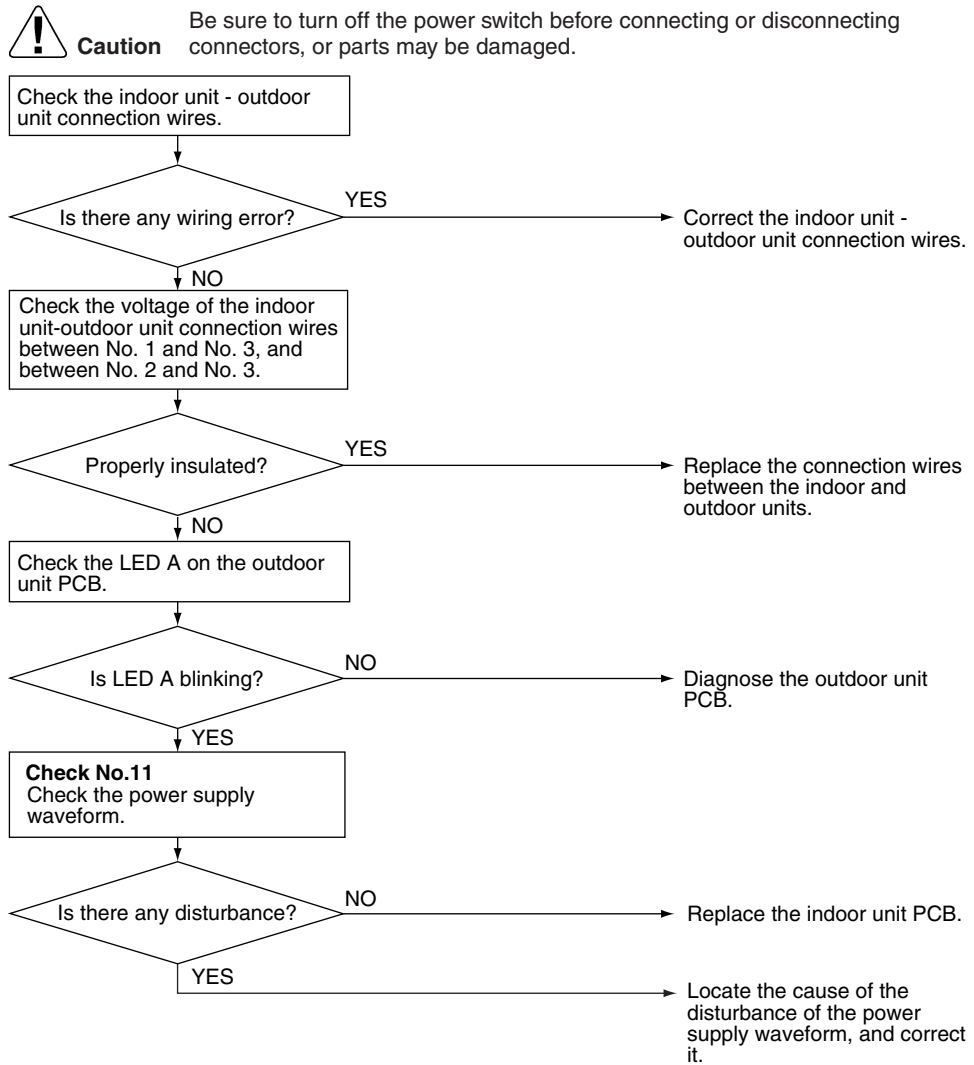

(R14556)

## 5.7 Unspecified Voltage (between Indoor Unit and Outdoor Unit)

Remote Controller Display



Method of Malfunction Detection

The supply power is detected for its requirements (different from pair type and multi type) by the indoor / outdoor transmission signal.

Malfunction Decision Conditions

The pair type and multi type are interconnected.

Supposed Causes


- Wrong models interconnected
- Wrong wiring of connecting wires
- Wrong indoor unit PCB or outdoor unit PCB mounted
- Defective indoor unit PCB
- Defective outdoor unit PCB

Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

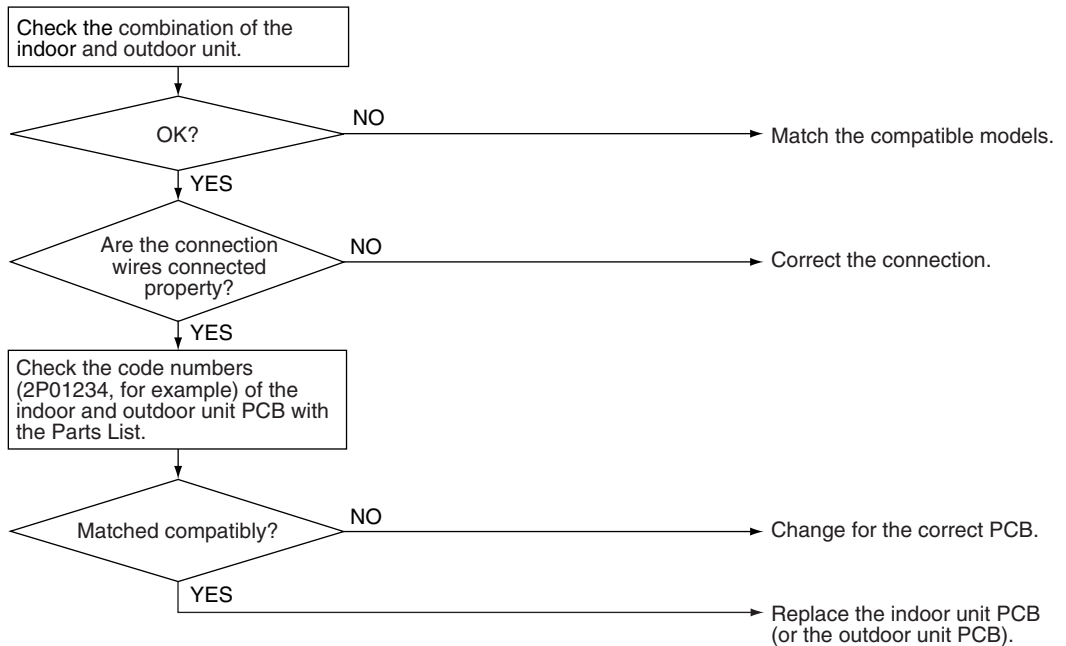

(R11707)

## 6. Troubleshooting for SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series

### 6.1 Indoor Unit PCB Abnormality

Remote  
Controller  
Display

81

Method of  
Malfunction  
Detection

The system checks the data from EEPROM.

Malfunction  
Decision  
Conditions

When the data from the EEPROM is not received correctly

EEPROM (Electrically Erasable Programmable Read Only Memory): A memory chip that holds its content without power. It can be erased, either within the computer or externally and usually requires more voltage for erasure than the common +5 volts used in logic circuits. It functions like non-volatile RAM, but writing to EEPROM is slower than writing to RAM.

Supposed  
Causes


- Defective indoor unit PCB

Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

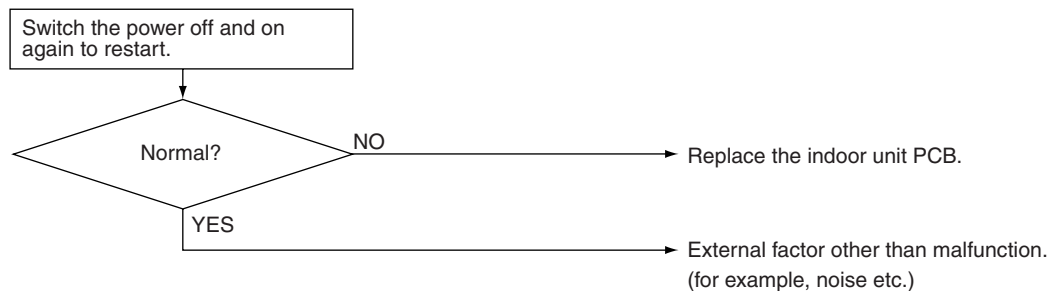

(R11294)

## 6.2 Drain Water Level System Abnormality


<b>Remote Controller Display</b>	83
<b>Method of Malfunction Detection</b>	The float switch detects error.
<b>Malfunction Decision Conditions</b>	When the water level reaches its upper limit and when the float switch turns OFF
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defective drain pump</li> <li>■ Improper drain piping work</li> <li>■ Clogged drain piping</li> <li>■ Defective float switch</li> <li>■ Defective indoor unit PCB</li> <li>■ Defective short circuit connector X15A on indoor unit PCB</li> </ul>



## Troubleshooting

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

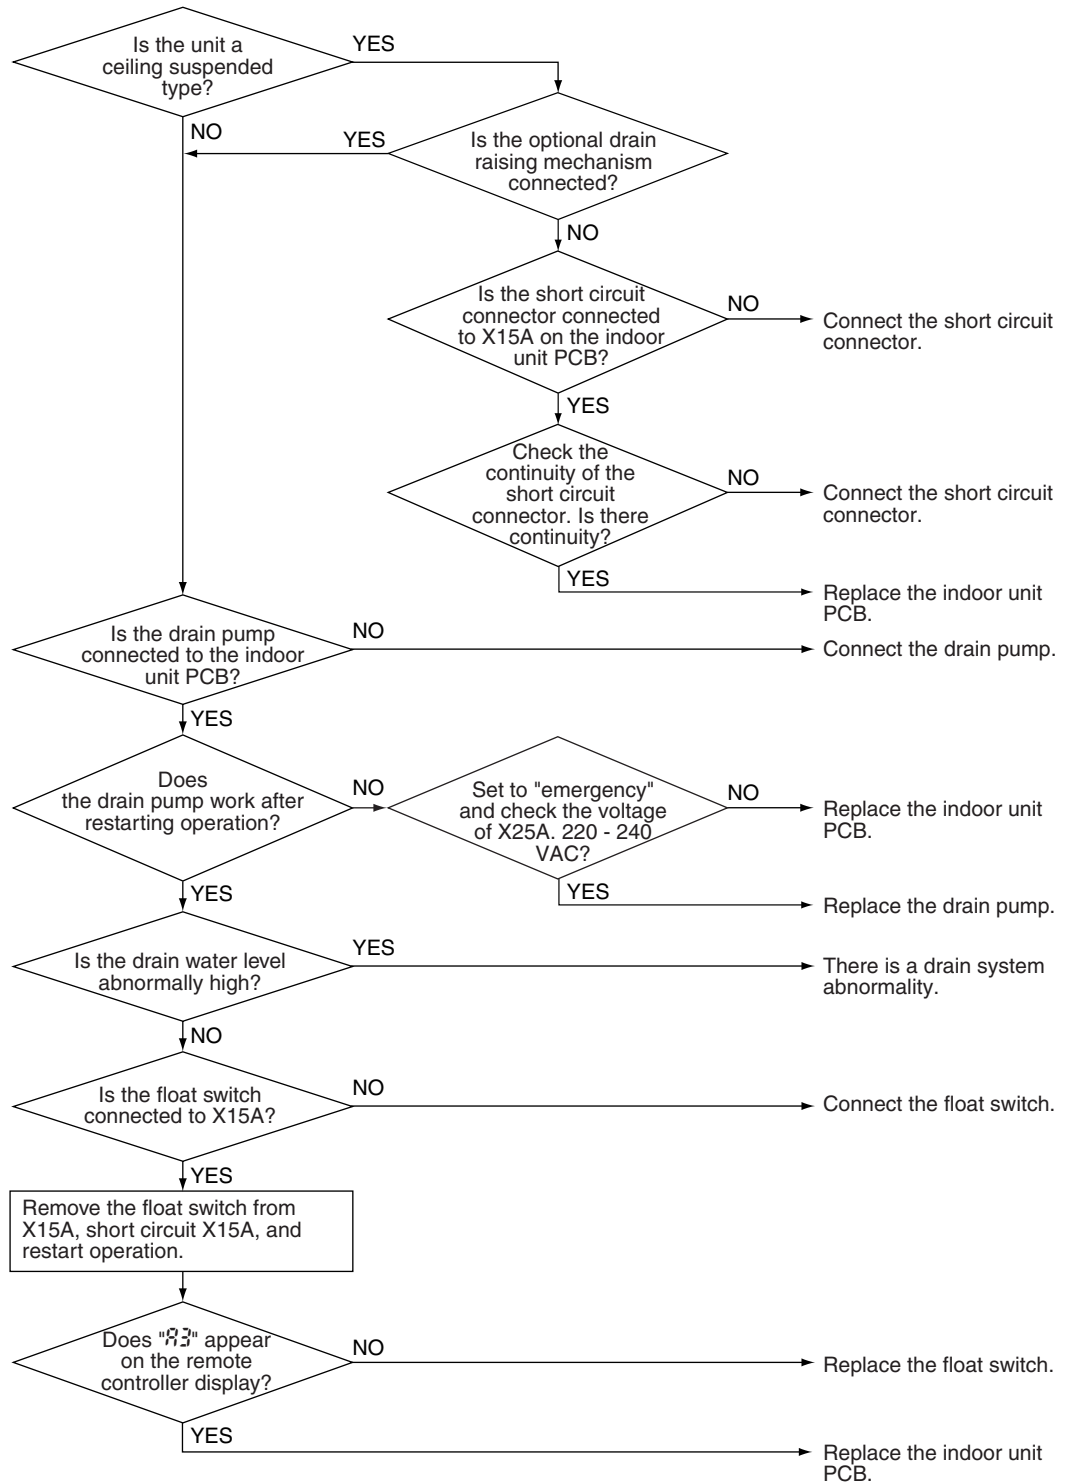

(R12861)



**Note:** If "E3" is detected by the indoor unit PCB which is not mounted with X15A, the indoor unit PCB is defective.

## 6.3 Fan Motor or Related Abnormality

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

The signal from the fan motor detects abnormal fan speed.

Malfunction  
Decision  
Conditions

When the fan rotations are not detected while the output voltage to the fan is at its maximum

Supposed  
Causes

- Defective indoor fan motor
- Broken or disconnected wire
- Defective contact
- Defective indoor unit PCB


Troubleshooting

**FFQ, FCQ, FDBQ, FBQ Series**



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

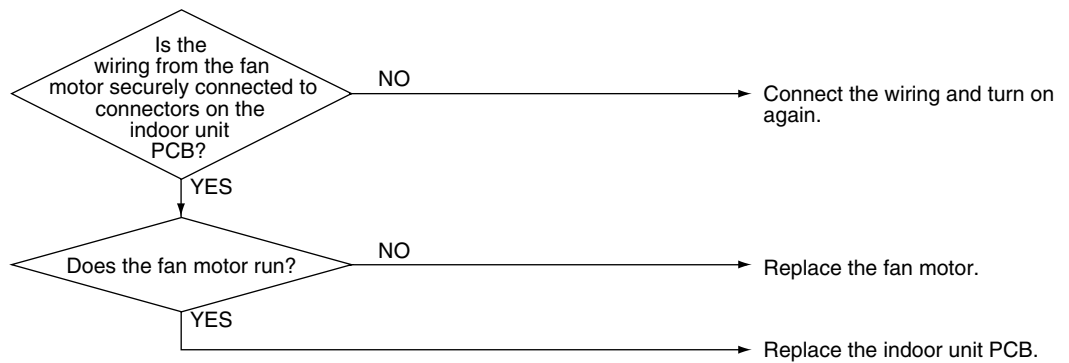


(R11296)

## Troubleshooting

## FHQ Series

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

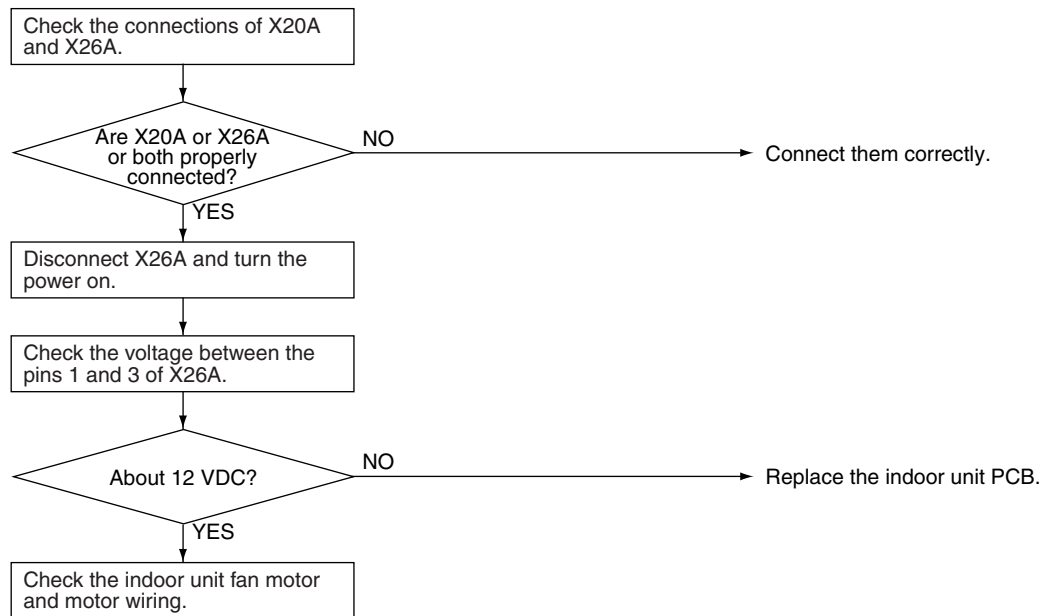


(R12862)




**Note:** There is a possibility of open phase power supply, also check power supply.

## 6.4 Swing Motor Lock (FHQ Series)

<b>Remote Controller Display</b>	
<b>Method of Malfunction Detection</b>	The error is detected by the limit switch when the motor turns.
<b>Malfunction Decision Conditions</b>	When the ON/OFF micro-switch for position detection cannot be reversed even though the swing motor is energized for a specified amount of time (about 30 seconds).
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defective swing motor</li> <li>■ Defective micro-switch</li> <li>■ Disconnection of connector</li> <li>■ Defective indoor unit PCB</li> </ul>

### Troubleshooting

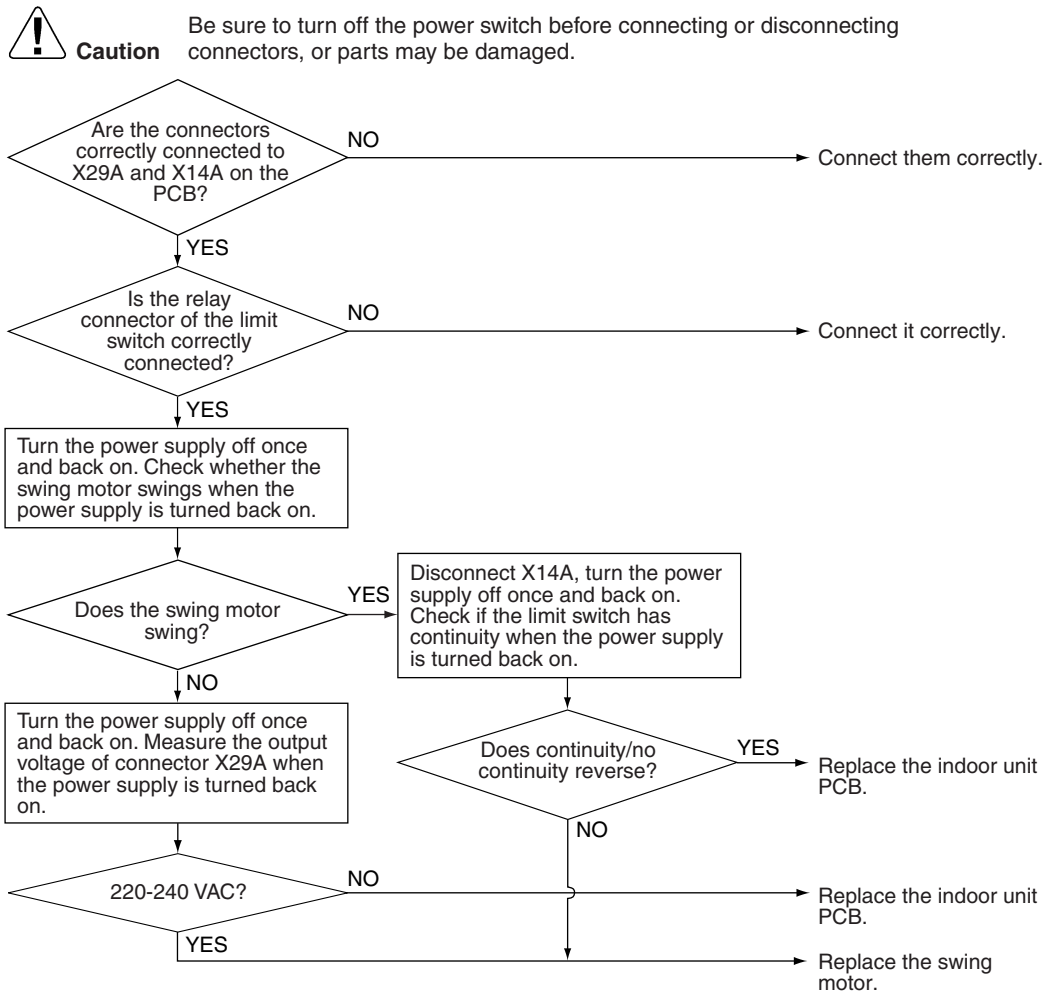

(R12863)

## 6.5 Drain System Abnormality

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

Water leakage is detected based on the float switch ON/OFF changeover while the compressor is not operating.

Malfunction  
Decision  
Conditions

When the float switch changes from ON to OFF while the compressor is OFF

Supposed  
Causes


- Error in the drain pipe installation
- Defective float switch
- Defective indoor unit PCB

### Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

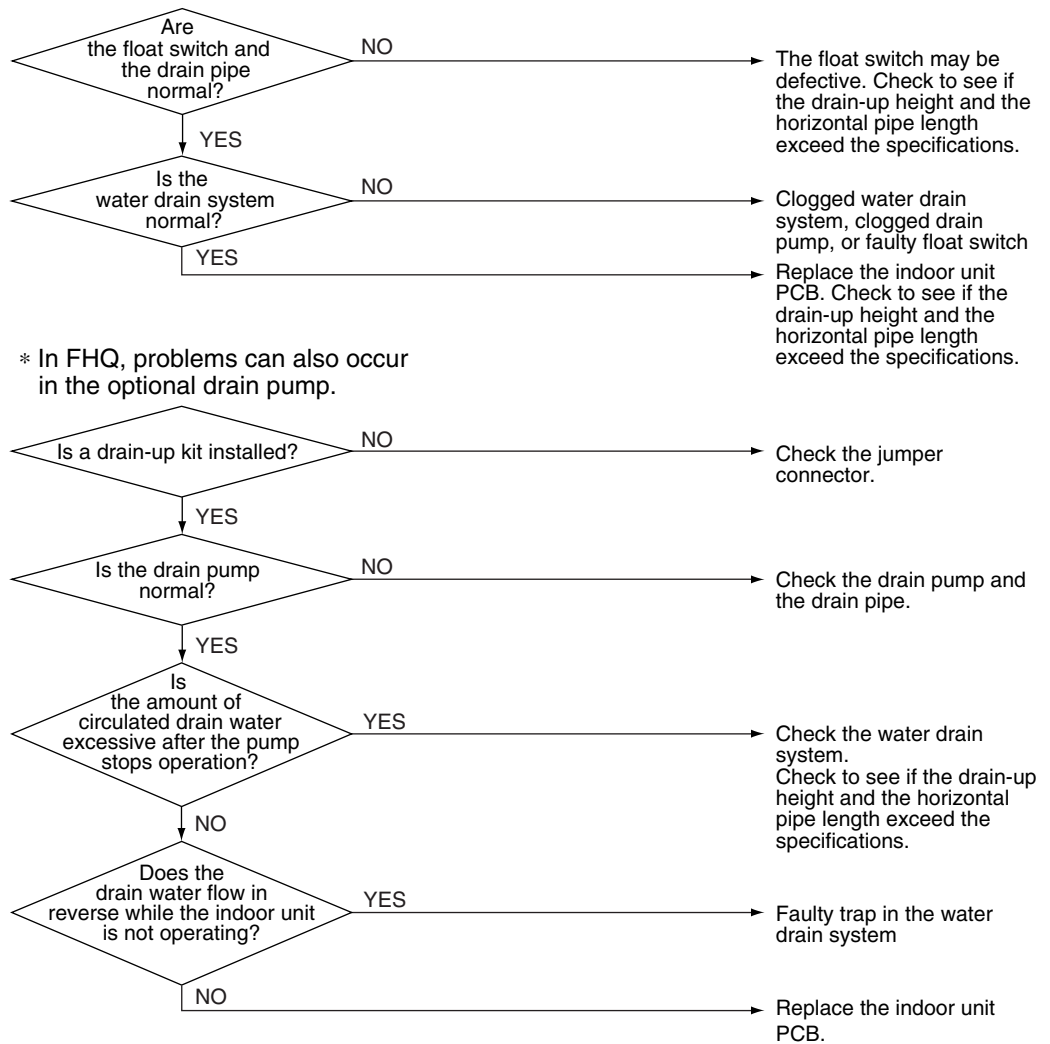

(R13752)

## 6.6 Thermistor or Related Abnormality

**Remote  
Controller  
Display**

The table below describes the 2 thermistor abnormalities.

Error	Description
E4	Defective indoor heat exchanger thermistor system
E9	Defective room temperature thermistor system

**Method of  
Malfunction  
Detection**

Malfunction detection is carried out by the temperature detected by thermistor.

**Malfunction  
Decision  
Conditions**

When during compressor operation:

- Thermistor input > 4.96 V
- or
- Thermistor output < 0.04 V.

**Supposed  
Causes**

- Disconnection of connector
- Defective thermistor
- Defective indoor unit PCB
- Broken or disconnected wire

**Checking  
thermistors**

If the cause of the problem is related to the thermistors, the thermistors should be checked prior to changing the indoor unit PCB.

To check the thermistors, proceed as follows:

Step	Action
1	Disconnect the thermistor from the indoor unit PCB.
2	Read the temperature and the resistor value.
3	Check if the measured values correspond with the values in the table of thermistor resistance check.




Refer to “Thermistor resistance check” on page 362 for detail.

## Troubleshooting



### Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

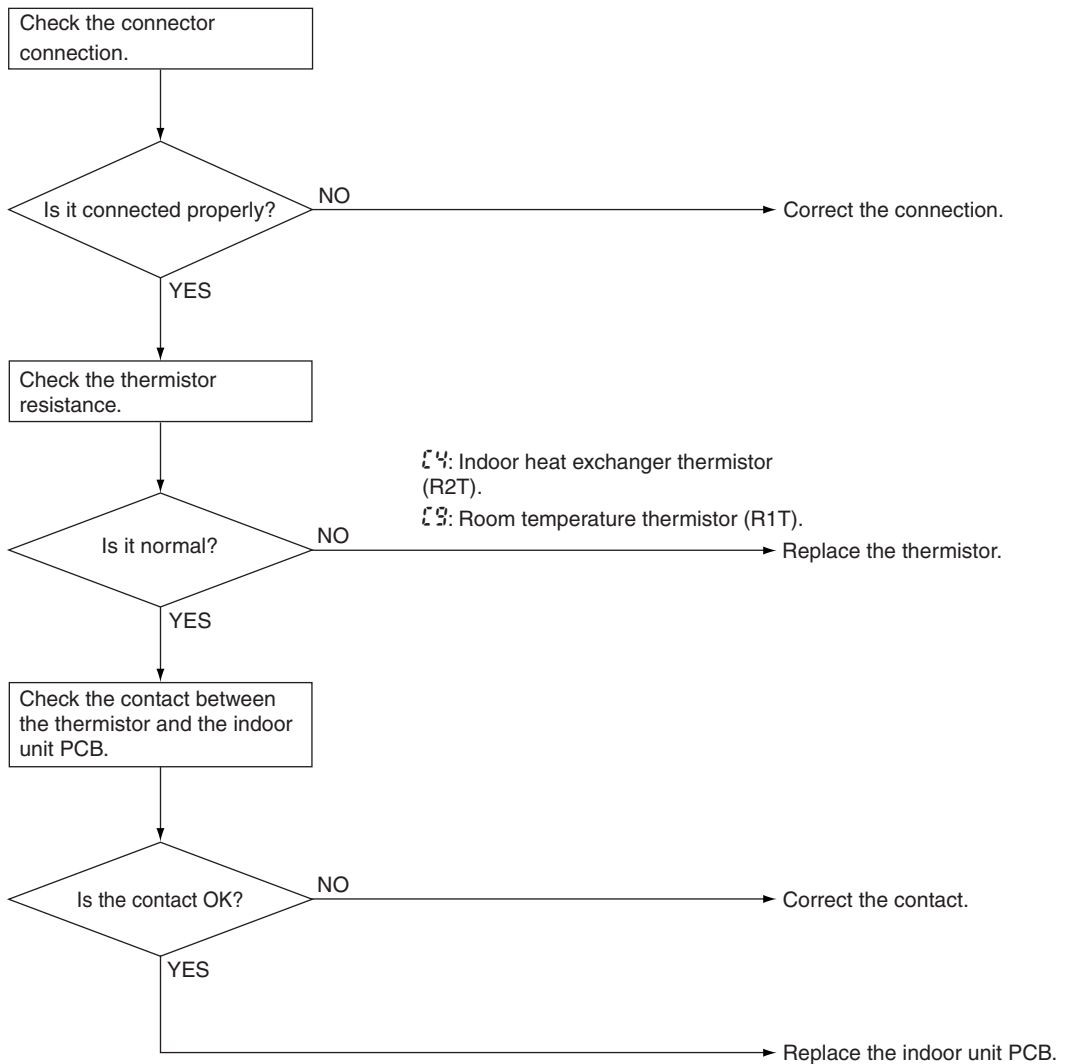

(R11299)

## 6.7 Remote Controller Thermistor Abnormality

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

Even if remote controller thermistor is malfunctioning, the system can operate with the system thermistor.  
Malfunction detection is carried out by the temperature detected by the remote controller thermistor.


Malfunction  
Decision  
Conditions

When the remote controller thermistor disconnected or shorted while the unit is running  
Even if the remote controller thermistor is malfunctioning, the system can operate with the system thermistor.

Supposed  
Causes

- Defective thermistor
- Broken wire

Troubleshooting

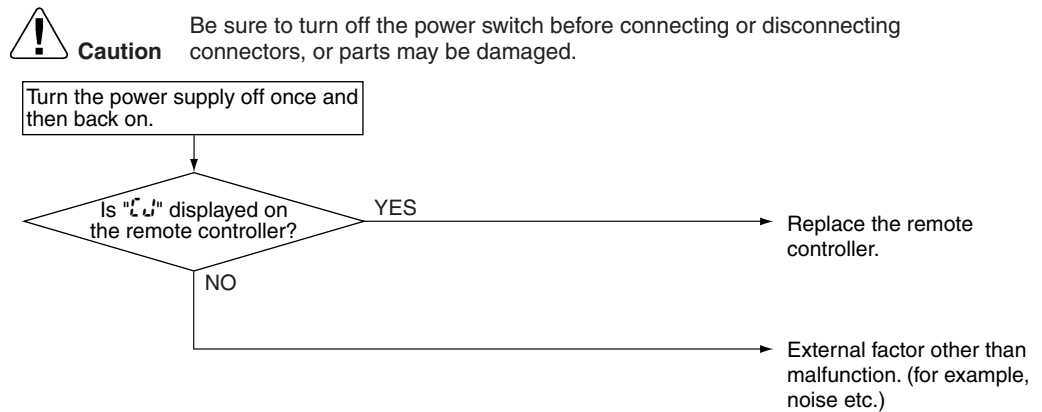

(R11300)



## 6.8 Signal Transmission Error (between Indoor Unit and Remote Controller)

Remote  
Controller  
Display

UC  
LS

Method of  
Malfunction  
Detection

Microcomputer checks if transmission between indoor unit and remote controller is normal.


Malfunction  
Decision  
Conditions

The error is generated when the micro-processor detects that the transmission between the indoor unit and the remote controller is not normal over a certain amount of time.

Supposed  
Causes

- Defective remote controller
- Defective indoor unit PCB
- External cause (noise...)
- Connection of 2 master remote controllers (when using 2 remote controllers)

Troubleshooting

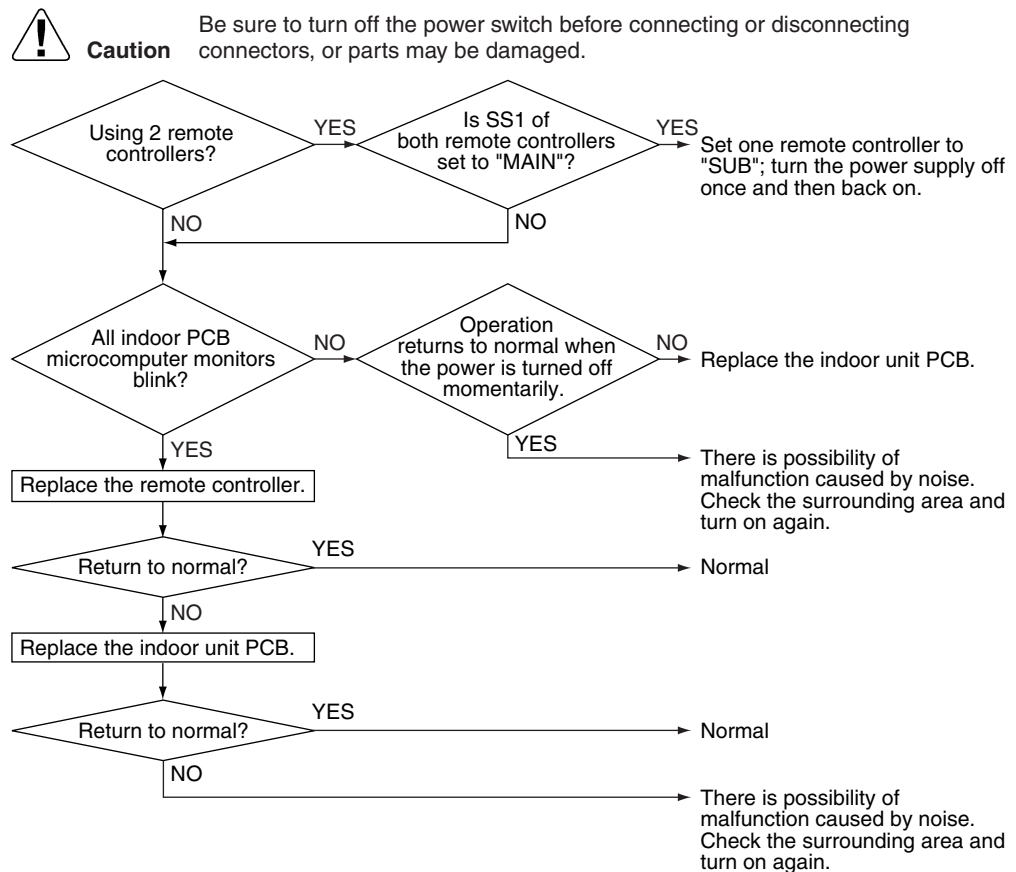

(R13008)

## 6.9 Signal Transmission Error (between MAIN Remote Controller and SUB Remote Controller)

Remote Controller Display



Method of Malfunction Detection

In case of controlling with 2 remote controllers, check the system using micro-computer if signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction Decision Conditions

The error is generated when the microprocessor detects that the transmission between the indoor unit and the remote controllers (MAIN and SUB) is not normal over a certain amount of time in case of controlling with 2 remote controllers.


Supposed Causes

- Transmission error between MAIN remote controller and SUB remote controller
- Connection among SUB remote controllers
- Defective remote controller PCB

Troubleshooting



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

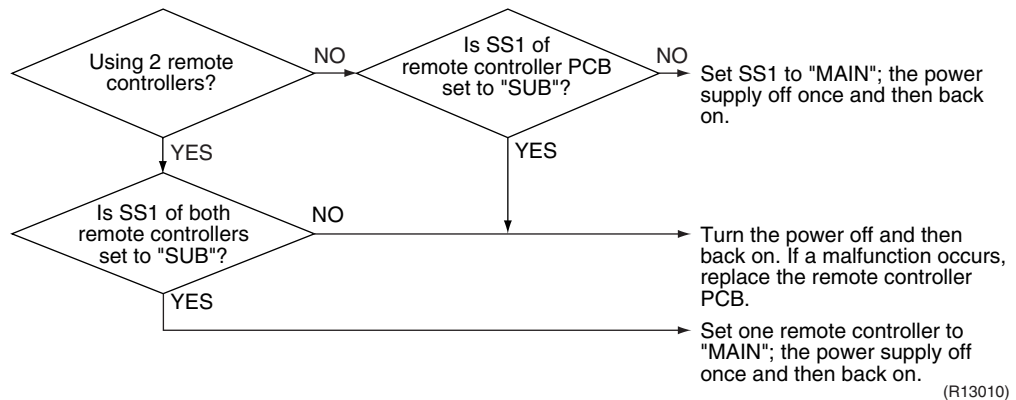

## 6.10 Field Setting Abnormality

---

Remote  
Controller  
Display

UP

---

Method of  
Malfunction  
Detection

Malfunction  
Decision  
Conditions


Incorrect field setting

---

Supposed  
Causes

- Defective indoor unit PCB
- Defective outdoor unit PCB
- Defective power supply PCB
- Indoor-outdoor, indoor-indoor unit transmission wiring
- Defective remote controller wiring





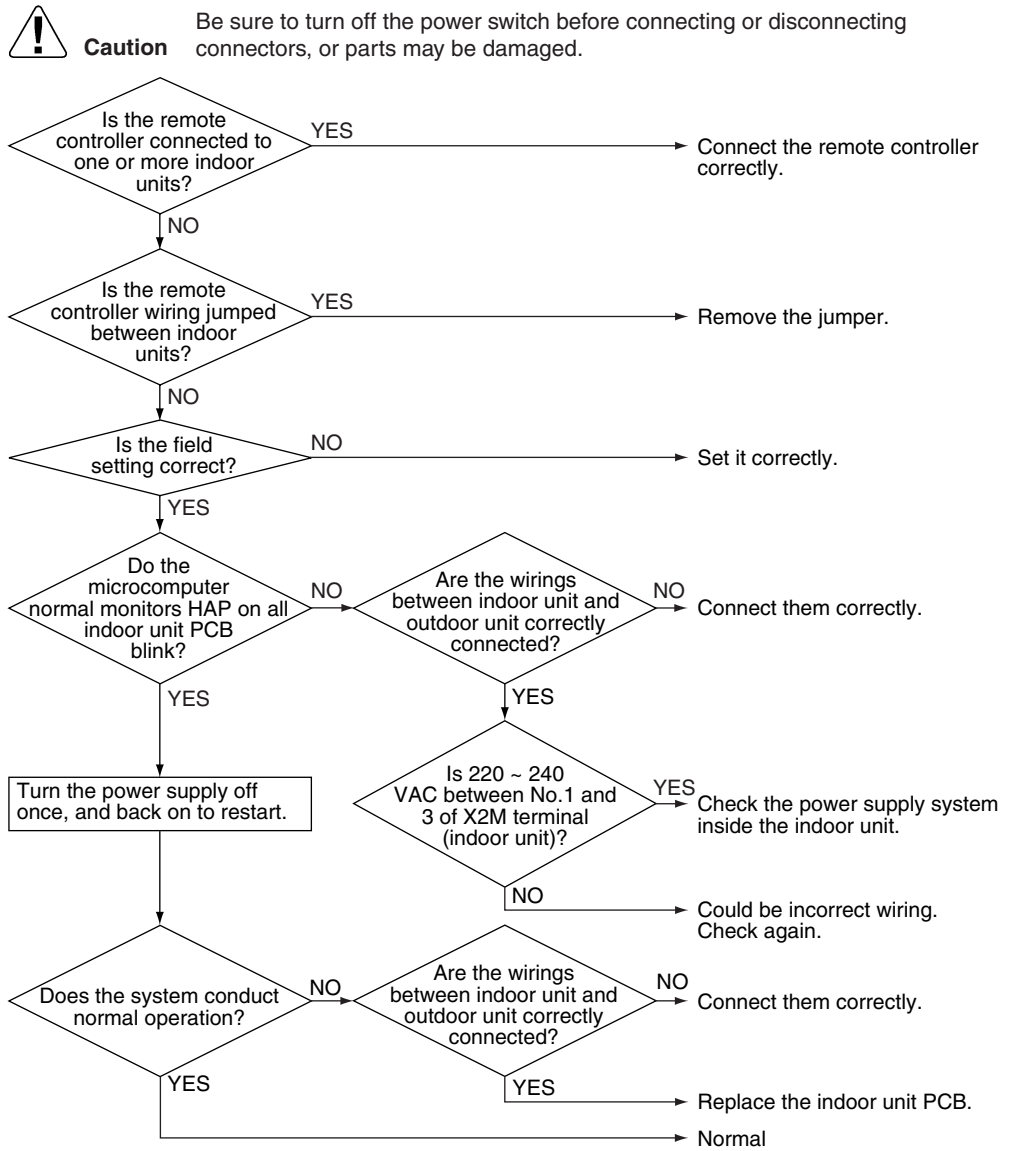
Troubleshooting



(R13067)

## 7. Troubleshooting for Outdoor Unit

### 7.1 Anti-icing Function

<b>Remote Controller Display</b>	RS
<b>Outdoor Unit LED Display</b>	A  1  2  3  4  5
<b>Method of Malfunction Detection</b>	During cooling operation, indoor unit icing is detected by checking the temperatures sensed by the indoor heat exchanger thermistor and room temperature thermistor that are located in a shut-down room.
<b>Malfunction Decision Conditions</b>	<ul style="list-style-type: none"> <li>■ In cooling operation, the both conditions (A) and (B) are met for 5 minutes.           <ul style="list-style-type: none"> <li>(A) Room temperature – Indoor heat exchanger temperature <math>\geq 10^{\circ}\text{C}</math></li> <li>(B) Indoor heat exchanger temperature <math>\leq -1^{\circ}\text{C}</math></li> </ul> </li> <li>■ If the error repeats 4 times, the system is shut down.</li> <li>■ Reset condition: Continuous run for about 60 minutes without any other error</li> </ul>
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Wrong wiring or piping</li> <li>■ Defective electronic expansion valve</li> <li>■ Short-circuited air</li> <li>■ Defective indoor heat exchanger thermistor</li> <li>■ Defective room temperature thermistor</li> </ul>

Troubleshooting



**Check No.01**  
Refer to P.362




**Check No.12**  
Refer to P.364



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

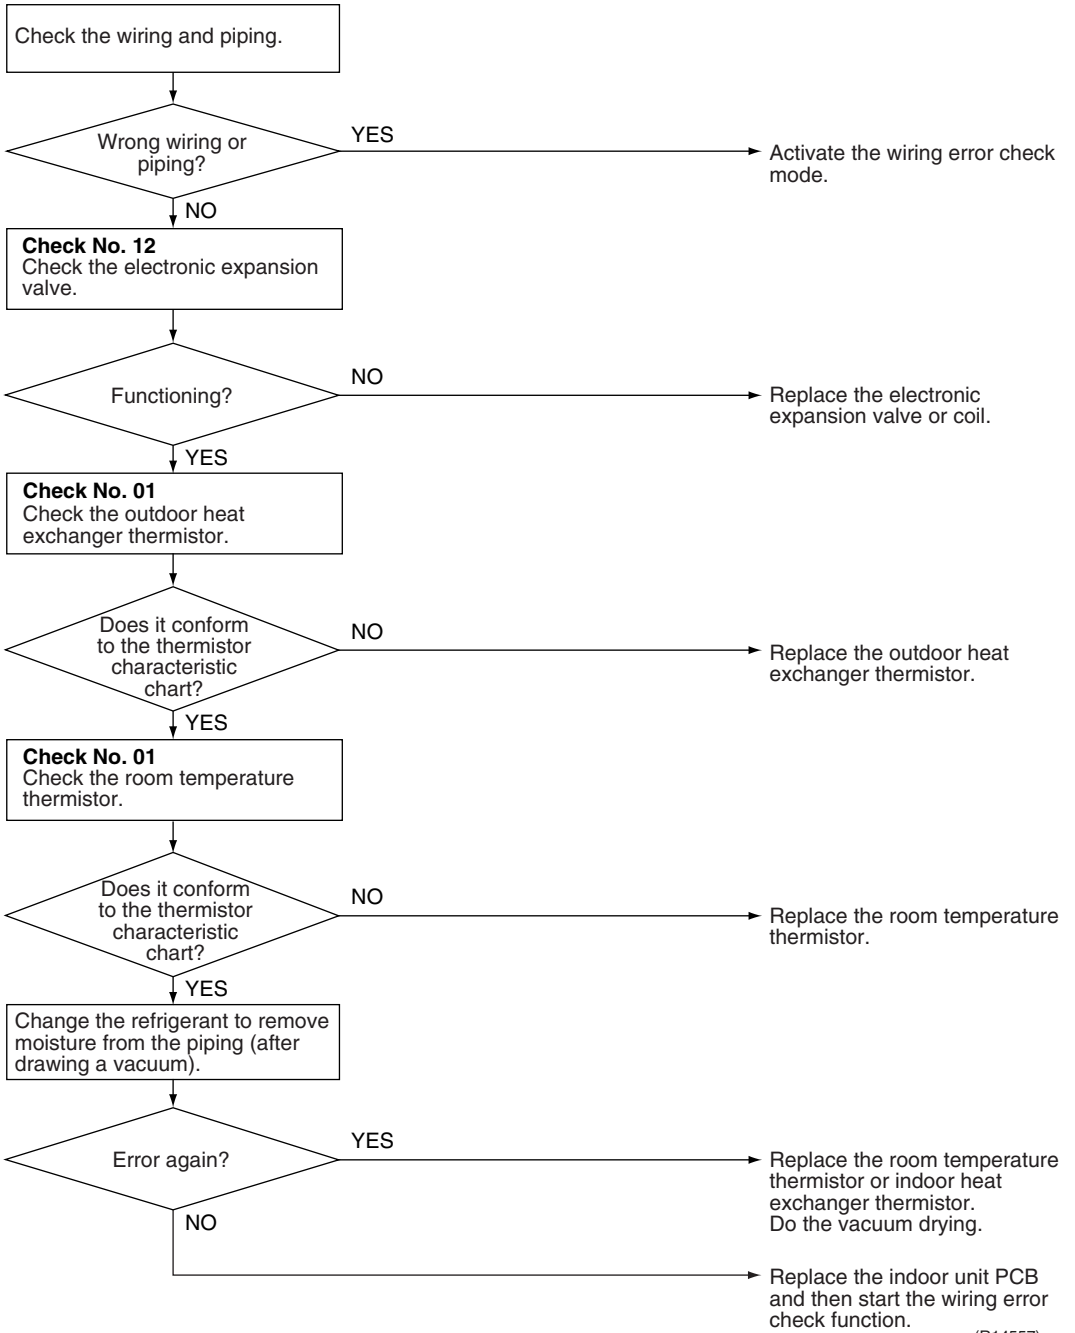


(R14557)

## 7.2 Outdoor Unit PCB Abnormality

<b>Remote Controller Display</b>	E I
<b>Outdoor Unit LED Display</b>	A ● 1 ○ 2 ○ 3 ○ 4 ● 5 ●
<b>Method of Malfunction Detection</b>	Detect within the program of the microcomputer.
<b>Malfunction Decision Conditions</b>	The program of the microcomputer is in abnormal running order.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Noise</li> <li>■ Momentary fall of voltage</li> <li>■ Momentary power failure</li> <li>■ Defective outdoor unit PCB</li> </ul>

### Troubleshooting

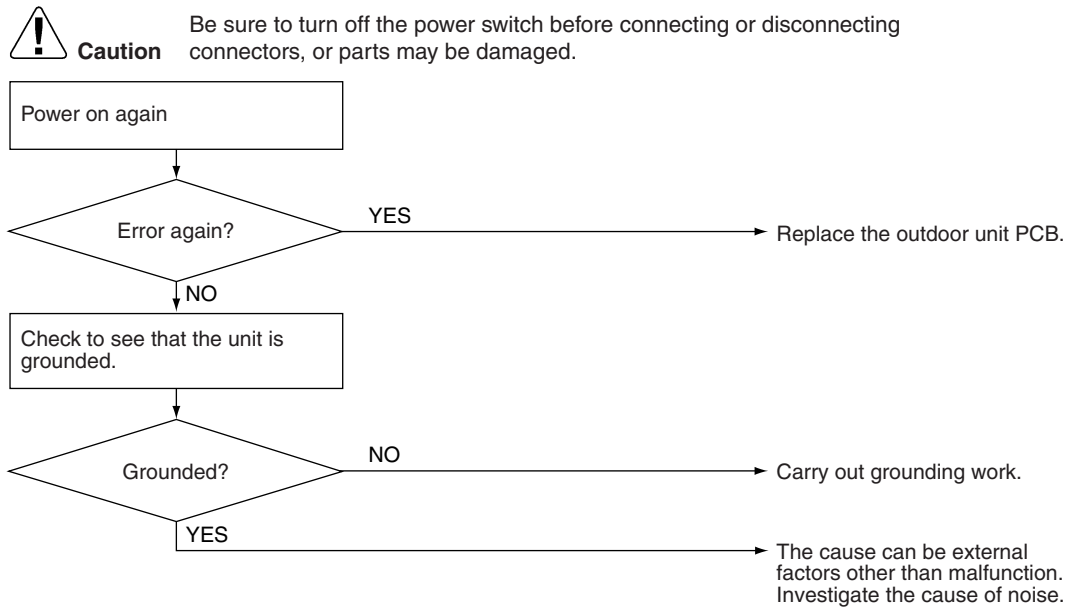






(R7183)

### 7.3 OL Activation (Compressor Overload)

Remote Controller Display	ES
Outdoor Unit LED Display	A 1 2 3 4 5
Method of Malfunction Detection	A compressor overload is detected through compressor OL.
Malfunction Decision Conditions	<ul style="list-style-type: none"> <li>■ If the error repeats twice, the system is shut down.</li> <li>■ Reset condition: Continuous run for about 60 minutes without any other error</li> <li>* The operating temperature condition is not specified.</li> </ul>
Supposed Causes	<ul style="list-style-type: none"> <li>■ Refrigerant shortage</li> <li>■ Defective four way valve</li> <li>■ Defective outdoor unit PCB</li> <li>■ Water mixed in refrigerant</li> <li>■ Defective electronic expansion valve</li> <li>■ Defective stop valve</li> </ul>

**Troubleshooting**

-  **Check No.01**  
Refer to P.362
-  **Check No.12**  
Refer to P.364
-  **Check No.13**  
Refer to P.365
-  **Check No.14**  
Refer to P.365

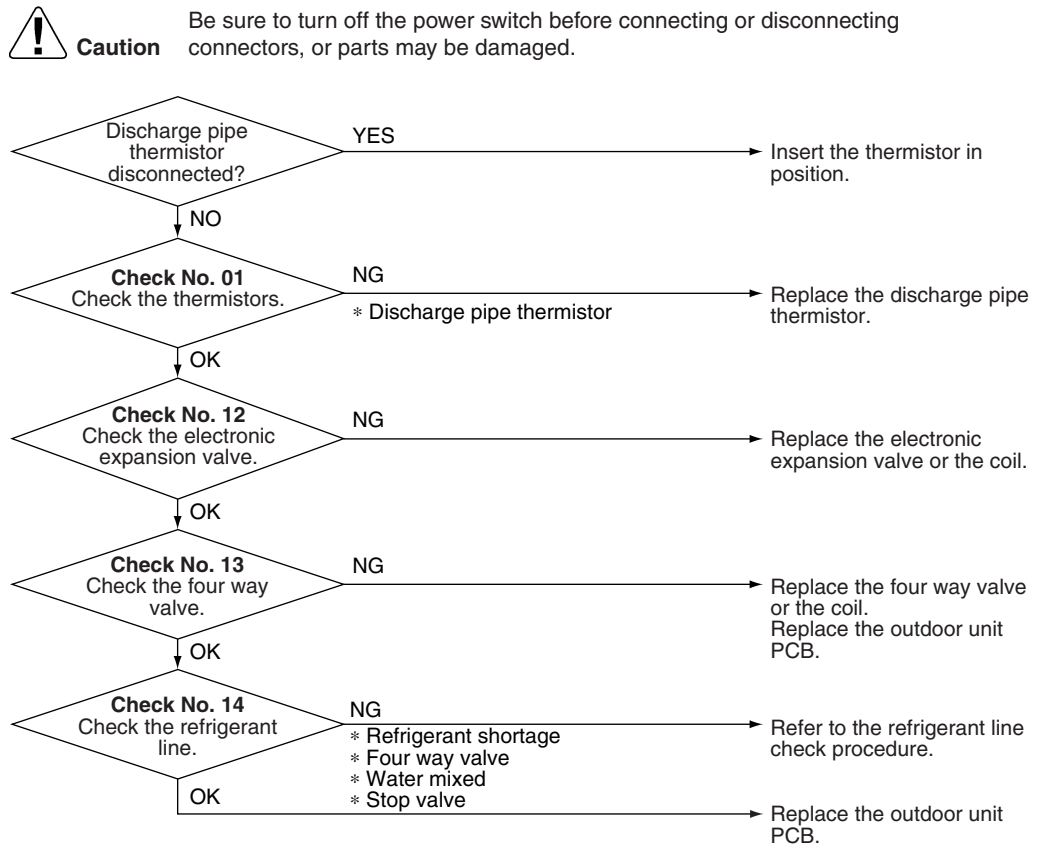

(R14408)



## 7.4 Compressor Lock

Remote  
Controller  
Display



Outdoor Unit LED  
Display

A 1 2 3 4 5

Method of  
Malfunction  
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.

Malfunction  
Decision  
Conditions

- Judging from the current waveform generated when high-frequency voltage is applied to the compressor.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 5 minutes without any other error

Supposed  
Causes

- Compressor locked

Troubleshooting




**Check No.15**  
Refer to P.366



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.  
(Precaution before turning on the power again)  
Make sure the power has been off for at least 30 seconds.

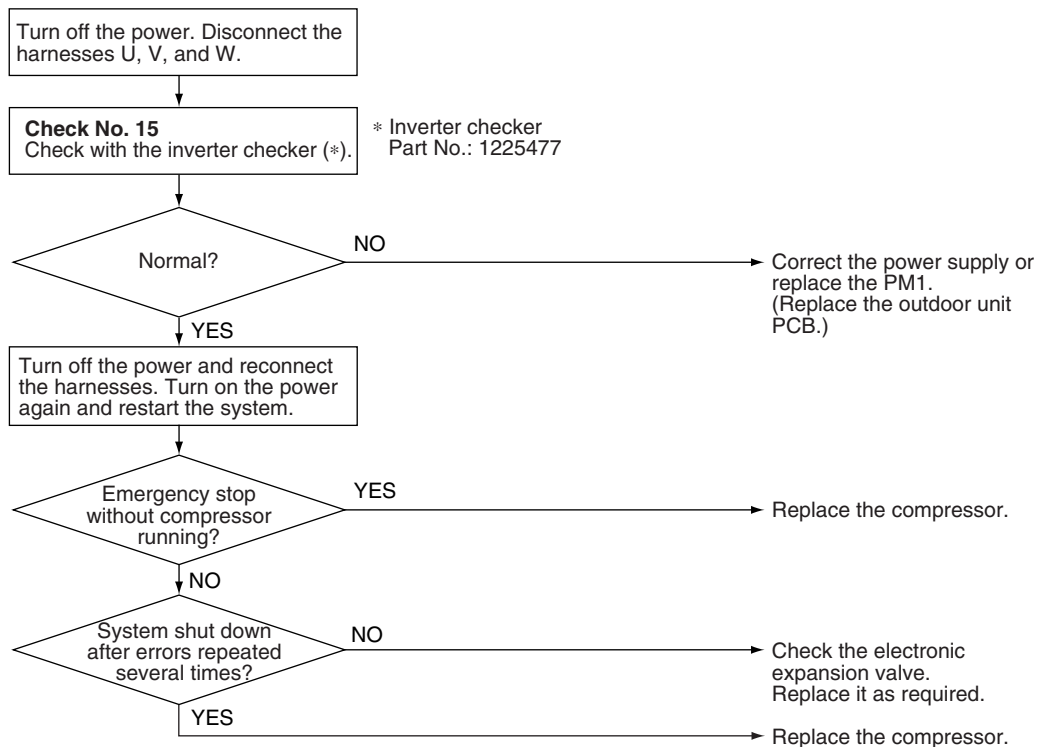

(R14409)

## 7.5 DC Fan Lock

Remote Controller Display



Outdoor Unit LED Display



Method of Malfunction Detection

An error is determined with the high-voltage fan motor rotation speed detected by the Hall IC.

Malfunction Decision Conditions


- The fan does not start in 30 seconds even when the fan motor is running.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 5 minutes without any other error

Supposed Causes

- Defective fan motor
- Disconnection of the fan motor
- Foreign matters stuck in the fan

### Troubleshooting

  
**Check No.16**  
 Refer to P.367

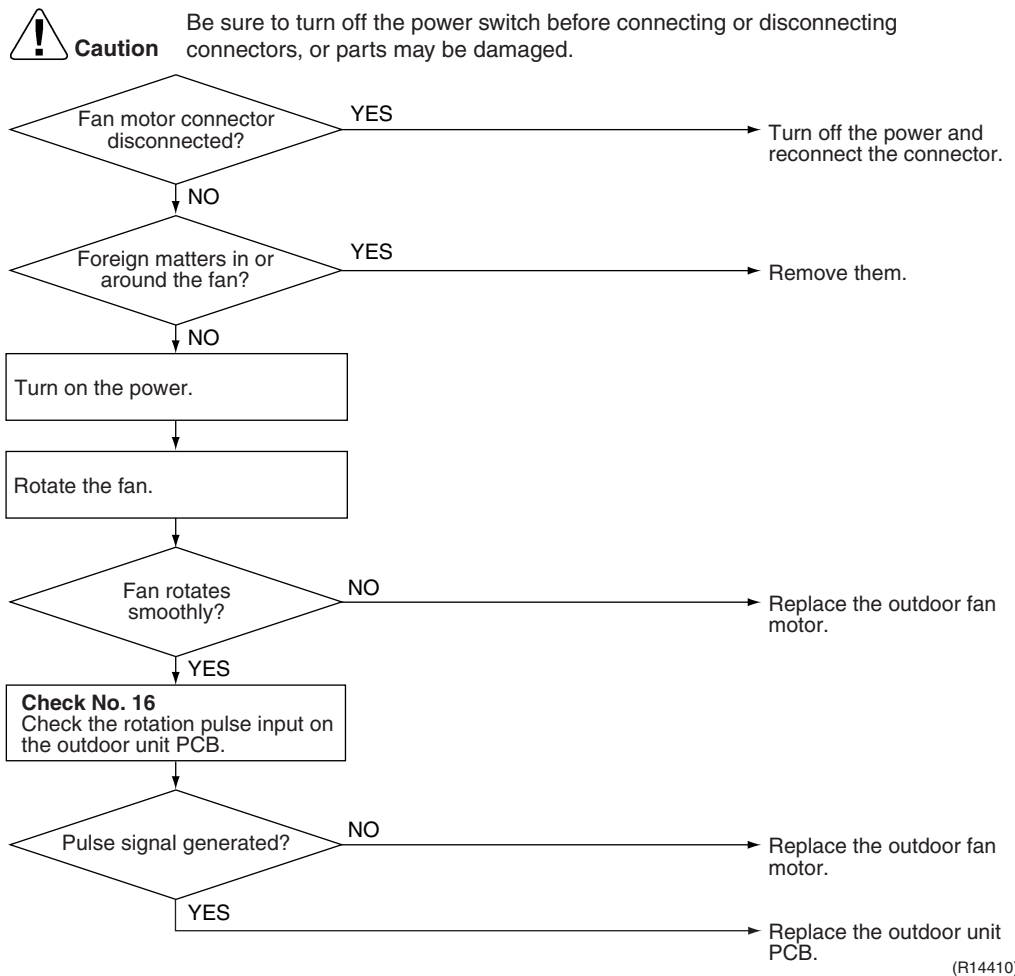

(R14410)

## 7.6 Input Overcurrent Detection

Remote  
Controller  
Display



Outdoor Unit LED  
Display

A 1 2 3 4 5

Method of  
Malfunction  
Detection

Detected by checking the input current value

Malfunction  
Decision  
Conditions

- The input current is at a certain value (depending on the condition) for 2.5 seconds.
- The compressor halts if the error occurs, and restarts automatically after 3-minute standby.

Supposed  
Causes

- Defective compressor
- Defective power transistor
- Defective inverter main circuit electrolytic capacitor
- Defective outdoor unit PCB
- Short circuit

Troubleshooting



**Check No.15**  
Refer to P.366



**Check No.17**  
Refer to P.368




**Check No.18**  
Refer to P.368



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

\* An input overcurrent may result from wrong internal wiring. If the system is interrupted by an input overcurrent after the wires have been disconnected and reconnected for part replacement, check the wiring again.

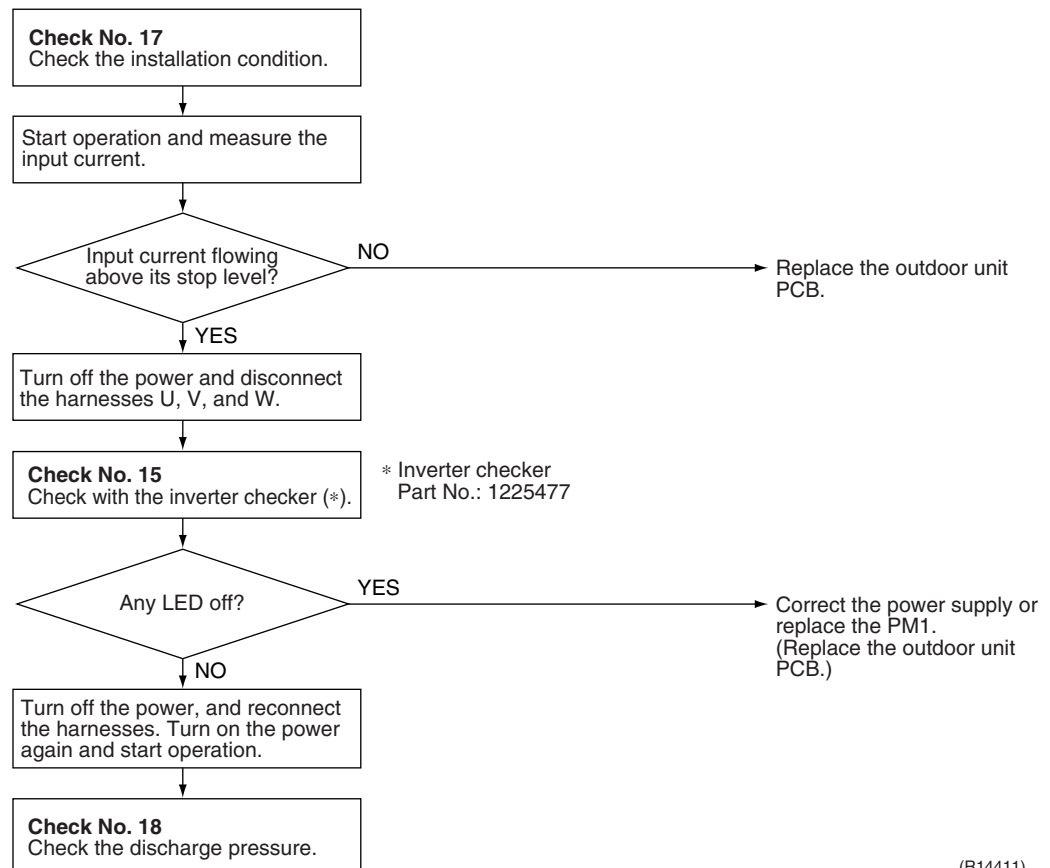


(R14411)

## 7.7 Discharge Pipe Temperature Control

Remote Controller Display										
Outdoor Unit LED Display	A  1  2  3  4  5									
Method of Malfunction Detection	Detected by the discharge pipe thermistor									
Malfunction Decision Conditions	<ul style="list-style-type: none"> <li>■ If the temperature detected by the discharge pipe thermistor rises above <b>A</b> °C, the compressor stops.</li> <li>■ The error is cleared when the discharge pipe temperature is dropped below <b>B</b> °C.</li> </ul> <table border="1"> <thead> <tr> <th></th> <th>A (°C)</th> <th>B (°C)</th> </tr> </thead> <tbody> <tr> <td>50/52/58 class</td> <td>110</td> <td>95</td> </tr> <tr> <td>68/75/80/90 class</td> <td>120</td> <td>107</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>■ If the error repeats 6 times, the system is shut down.</li> <li>■ Reset condition: Continuous run for about 60 minutes without any other error</li> </ul>		A (°C)	B (°C)	50/52/58 class	110	95	68/75/80/90 class	120	107
	A (°C)	B (°C)								
50/52/58 class	110	95								
68/75/80/90 class	120	107								
Supposed Causes	<ul style="list-style-type: none"> <li>■ Refrigerant shortage</li> <li>■ Defective four way valve</li> <li>■ Defective discharge pipe thermistor (Defective outdoor heat exchanger thermistor or outdoor temperature thermistor)</li> <li>■ Defective outdoor unit PCB</li> <li>■ Water mixed in refrigerant</li> <li>■ Defective electronic expansion valve</li> <li>■ Defective stop valve</li> </ul>									

### Troubleshooting

- Check No.01**  
Refer to P.362
- Check No.12**  
Refer to P.364
- Check No.14**  
Refer to P.365

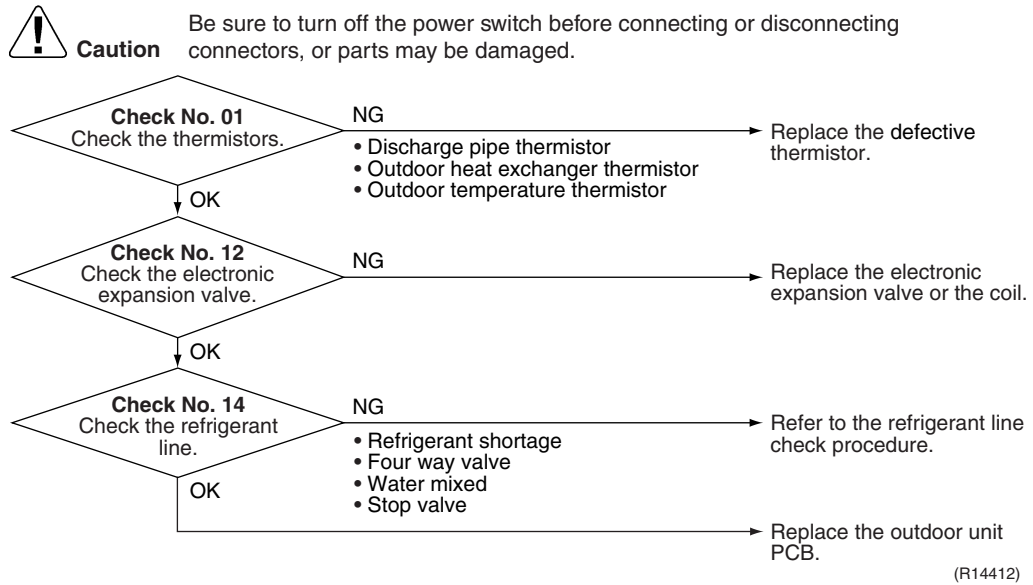

## 7.8 High Pressure Control in Cooling

### Remote Controller Display



### Outdoor Unit LED Display



### Method of Malfunction Detection

High-pressure control (operation halt, frequency drop, etc.) is activated in cooling mode if the temperature sensed by the outdoor heat exchanger thermistor exceeds the limit.

### Malfunction Decision Conditions

- The temperature sensed by the outdoor heat exchanger thermistor rises above about 65°C.
- The error is cleared when the temperature drops below about 50°C.

### Supposed Causes

- The installation space is not large enough.
- Defective outdoor unit fan
- Defective electronic expansion valve
- Defective outdoor heat exchanger thermistor
- Defective outdoor unit PCB
- Defective stop valve
- Dirty outdoor heat exchanger

Troubleshooting


  
**Check No.01**  
 Refer to P.362


  
**Check No.12**  
 Refer to P.364

  
**Check No.17**  
 Refer to P.368

  
**Check No.18**  
 Refer to P.368

  
**Check No.19**  
 Refer to P.369

 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

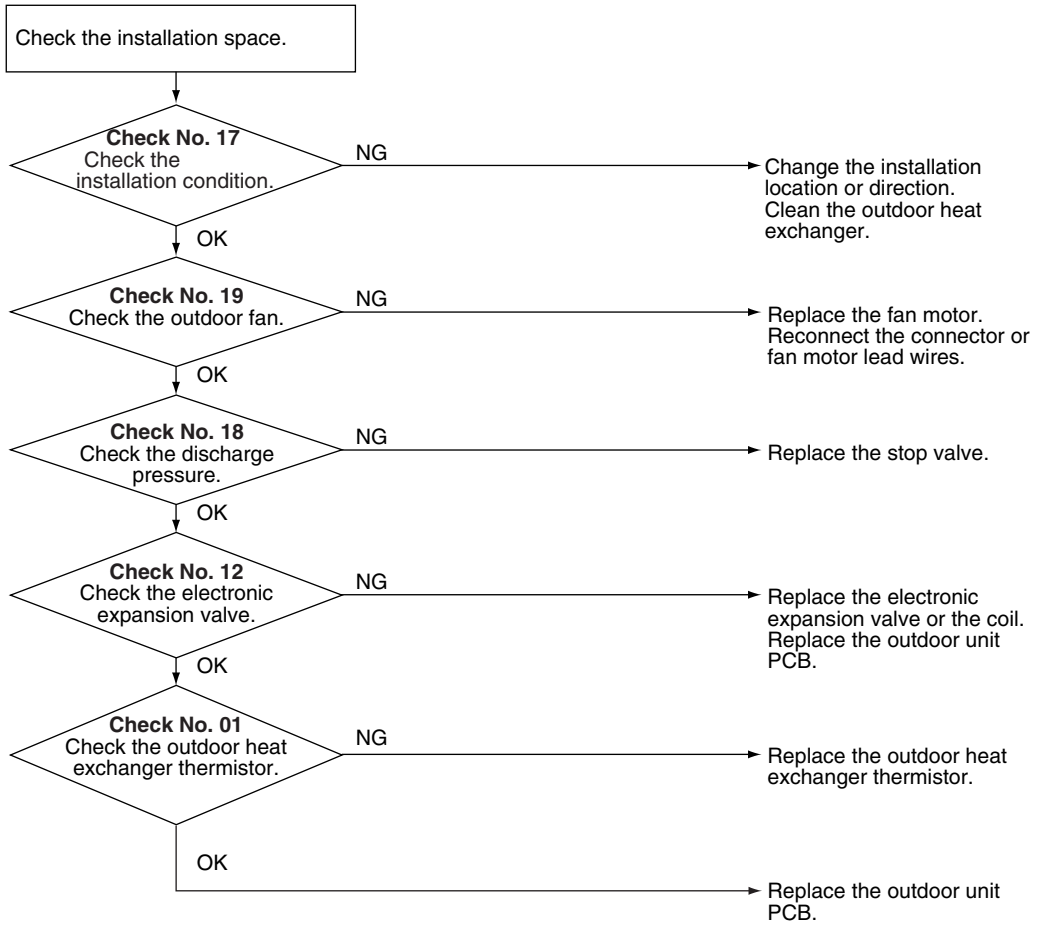

(R14558)

## 7.9 Compressor Sensor System Abnormality

Remote  
Controller  
Display



Outdoor Unit LED  
Display



Method of  
Malfunction  
Detection

- Fault condition is identified by the supply voltage and the DC voltage which is detected before the compressor startup.
- Fault condition is identified by the compressor current which is detected right after the compressor startup.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 5 minutes without any other error


Malfunction  
Decision  
Conditions

- The detected value of the supply voltage and the DC voltage is obviously low or high.
- The compressor current does not run when the compressor is started.

Supposed  
Causes

- Disconnection of reactor
- Disconnection of compressor
- Defective outdoor unit PCB
- Defective compressor

Troubleshooting

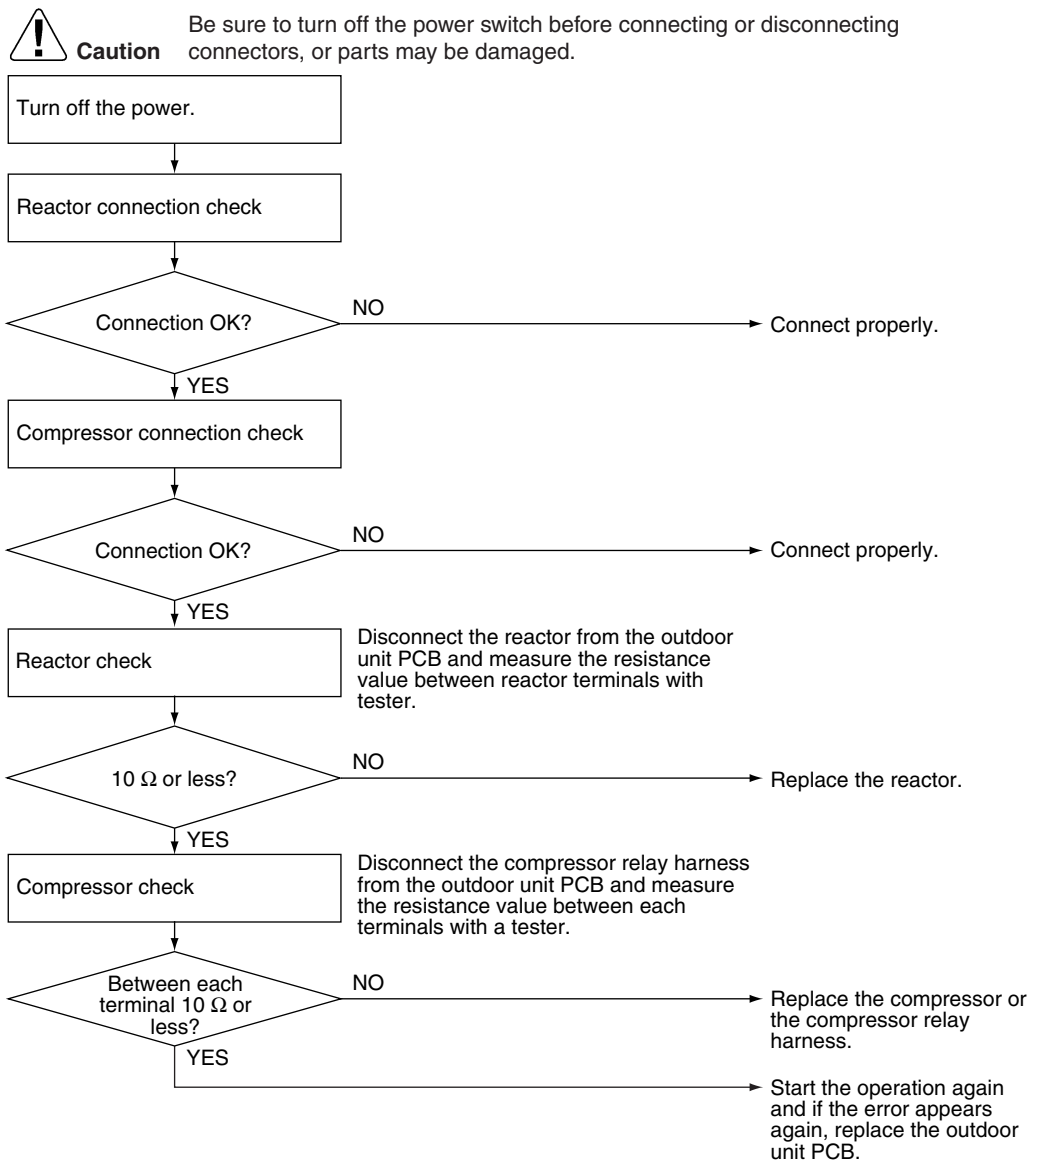

(R7174)



## 7.10 Position Sensor Abnormality

Remote  
Controller  
Display

HE

Outdoor Unit LED  
Display

A  1  2  3  4  5

Method of  
Malfunction  
Detection

A compressor startup failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction  
Decision  
Conditions


- If the error repeats 8 times, the system is shut down.
- Reset condition: Continuous run for about 5 minutes without any other error

Supposed  
Causes

- Disconnection of the compressor relay cable
- Defective compressor
- Defective outdoor unit PCB
- Startup failure caused by the closed stop valve
- Input voltage out of specification

Troubleshooting

  
**Check No.15**  
 Refer to P.366

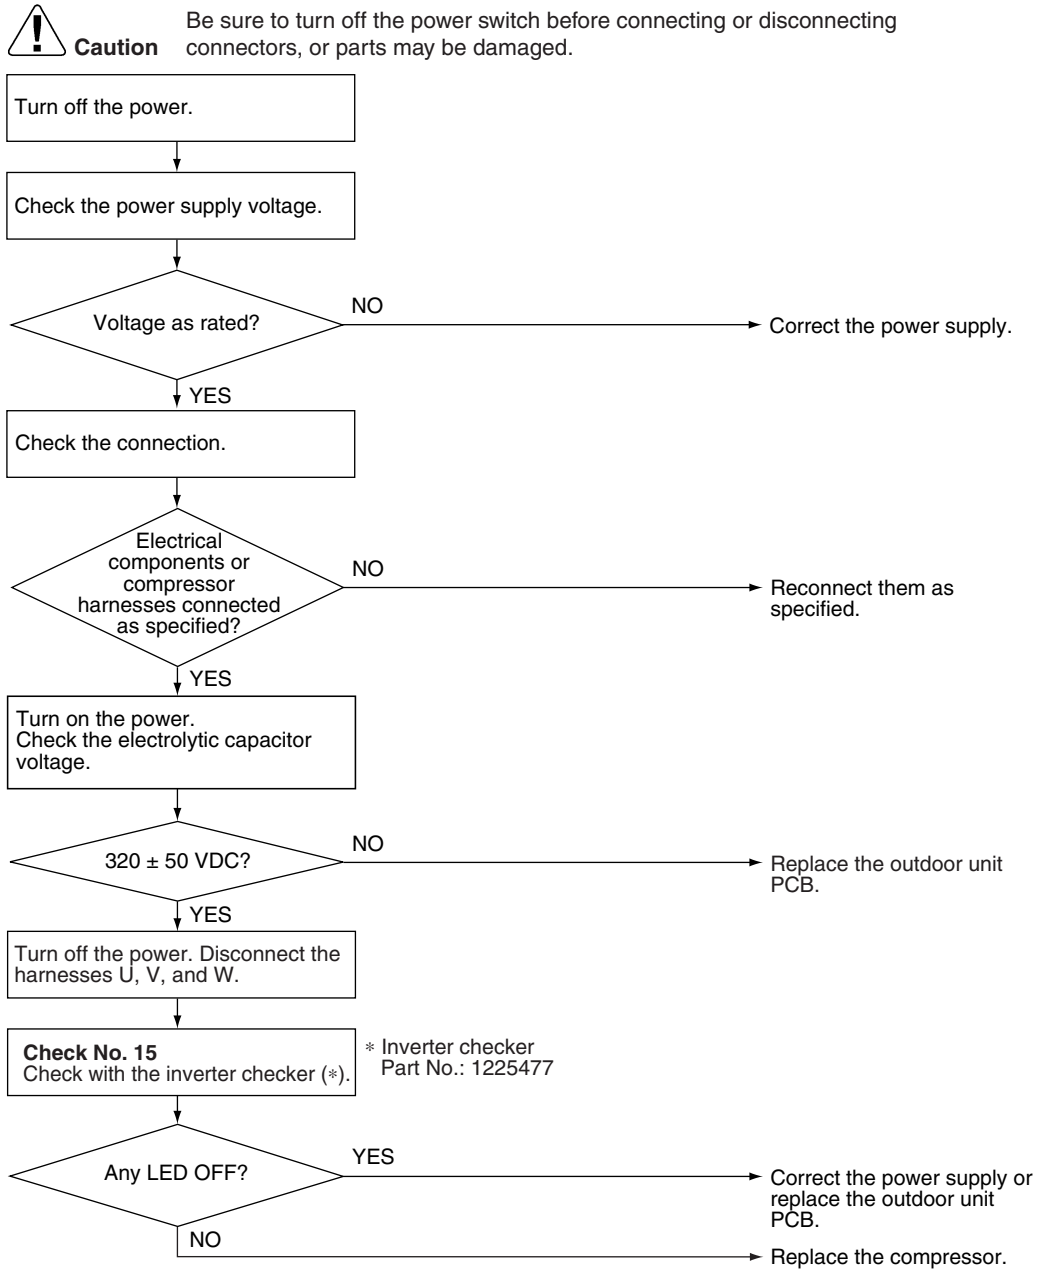

(R14560)

## 7.11 CT or Related Abnormality

### Remote Controller Display



### Outdoor Unit LED Display



### Method of Malfunction Detection

A CT or related error is detected by checking the compressor running frequency and CT-detected input current.

### Malfunction Decision Conditions

- The compressor running frequency is more than **A** Hz and input current is below **B** A.

	<b>A</b> (Hz)	<b>B</b> (A)
50-75 class	55	0.5
80/90 class	32	0.5

- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error


### Supposed Causes

- Defective power transistor
- Breaking of wiring or disconnection
- Defective reactor
- Defective outdoor unit PCB

Troubleshooting

 **Check No.15**  
Refer to P.366

 **Check No.21**  
Refer to P.369


 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.

Start operation.

\* Running current as shown at right with relay cable 1 or 2?

YES → Replace the outdoor unit PCB.

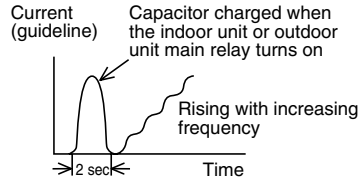

**Check No. 21**  
Check the capacitor voltage.

320 ± 50 VDC?

YES → Turn off the power. Disconnect the harnesses U, V, and W.

Measure the rectifier input voltage.

**Check No. 15**  
Check with the inverter checker (\*).  
\* Inverter checker Part No.: 1225477

Any LED OFF?

YES → Correct the power supply or replace the PM1. (Replace the outdoor unit PCB.)

Turn off the power and reconnect the harnesses. Then turn on the power again and restart operation.

Compressor running?

YES → Replace the outdoor unit PCB.

NO → Replace the compressor.

Voltage within the allowable range (Supply voltage ± 15%)?

YES → Replace the outdoor unit PCB.

NO → Check the supply voltage.

(R14562)

## 7.12 Thermistor or Related Abnormality (Outdoor Unit)

Remote  
Controller  
Display

H3, U3, U6, U8, U9, P4

Outdoor Unit LED  
Display

A  1  2  3  4  5

Method of  
Malfunction  
Detection

This type of error is detected by checking the thermistor input voltage to the microcomputer.  
A thermistor error is detected by checking the temperature sensed by each thermistor.

Malfunction  
Decision  
Conditions

- The thermistor input is above 4.96 V or below 0.04 V with the power on.
- U3 error is judged if the discharge pipe temperature is lower than the heat exchanger temperature.
- The system is shut down if all the units are judged as the U3 error.

Supposed  
Causes

- Disconnection of the connector for the thermistor
- Defective thermistor
- Defective outdoor unit PCB
- Defective indoor unit PCB
- Defective heat exchanger thermistor in the case of U3 error (outdoor heat exchanger thermistor in cooling mode, or indoor heat exchanger thermistor in heating mode)

Troubleshooting

In case of "P4"



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

**Replace the outdoor unit PCB.**

P4 : Radiation fin thermistor

Troubleshooting



**Check No.01**  
Refer to P.362

In case of "H3" "J3" "J5" "J8" "J9"



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn on the power again.

Error displayed again on remote controller?

NO

Reconnect the connectors or thermistors.

YES

**Check No. 01**  
Check the thermistor resistance value.

\* Note

Normal?

NO

Replace the defective one(s) of the following thermistors.

- Outdoor temperature thermistor
- Discharge pipe thermistor
- Outdoor heat exchanger thermistor
- Liquid pipe thermistor
- Gas pipe thermistor

YES

J3 error: The discharge pipe temperature is lower than the heat exchanger temperature.

Cooling: Outdoor heat exchanger thermistor

Heating: Indoor heat exchanger thermistor

**Check No. 01**  
Check the indoor heat exchanger thermistor resistance value in the heating mode.

Indoor heat exchanger thermistor functioning?

NO

Replace the following thermistor.

- Indoor heat exchanger thermistor

YES

Replace the outdoor unit PCB.  
(Replace the indoor unit PCB.)

(R14415)

- H3 : Outdoor temperature thermistor
- J3 : Discharge pipe thermistor
- J5 : Outdoor heat exchanger thermistor
- J8 : Liquid pipe thermistor
- J9 : Gas pipe thermistor

## 7.13 Electrical Box Temperature Rise

Remote  
Controller  
Display



Outdoor Unit LED  
Display



Method of  
Malfunction  
Detection

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

Malfunction  
Decision  
Conditions

- With the compressor off, the radiation fin temperature is above **A** °C.
- The error is cleared when the temperature drops below **B** °C.
- To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above **C** °C and stops when it drops below **B** °C.

A (°C)	B (°C)	C (°C)
100	70	85


Supposed  
Causes

- Defective outdoor unit fan
- Short circuit
- Defective fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB


Troubleshooting


 **Check No.17**  
Refer to P.368

 **Check No.19**  
Refer to P.369

 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.

 **WARNING**  
To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above C °C and stops when it drops below B °C.

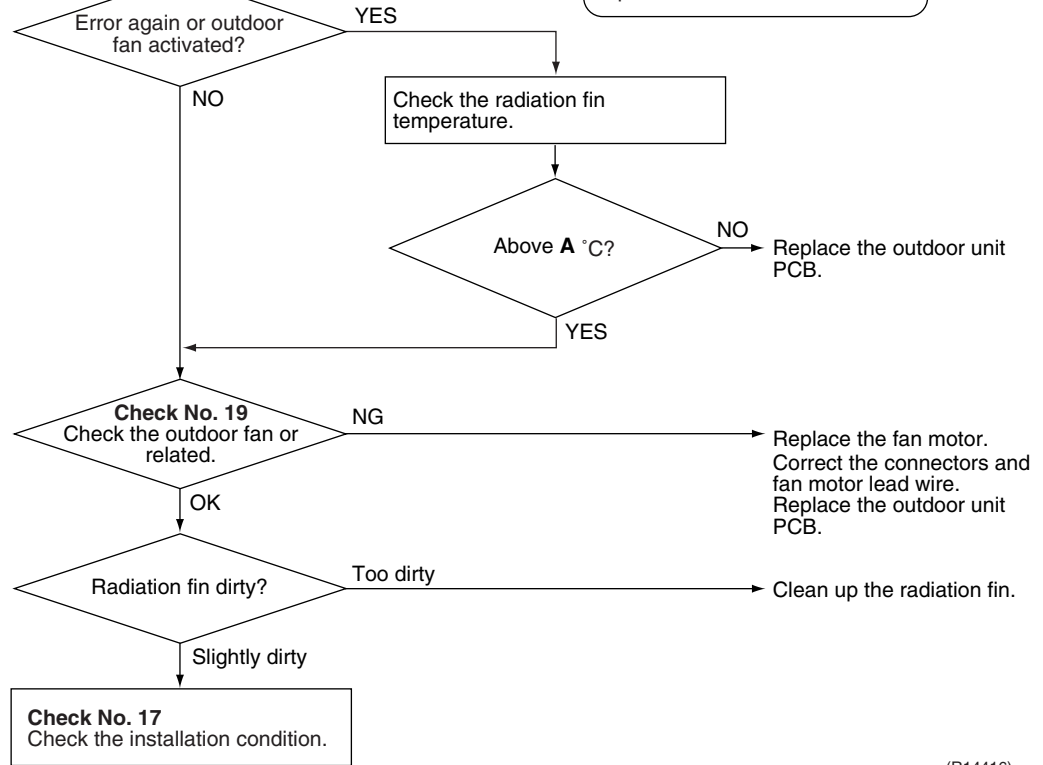

(R14416)

A (°C)	B (°C)	C (°C)
100	70	85



## 7.14 Radiation Fin Temperature Rise

Remote  
Controller  
Display

L4

Outdoor Unit LED  
Display

A  1 ● 2 ● 3 ● 4  5 ●

Method of  
Malfunction  
Detection

A radiation fin temperature rise is detected by checking the radiation fin temperature with the compressor on.

Malfunction  
Decision  
Conditions

- The radiation fin temperature with the compressor on is above **A** °C.
- The error is cleared when the temperature drops below **B** °C

	<b>A</b> (°C)	<b>B</b> (°C)
50-75 class	103	95
80/90 class	105	97

- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed  
Causes

- Defective outdoor unit fan
- Short circuit
- Defective fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB
- Silicon grease is not applied properly on the radiation fin after replacing the outdoor unit PCB.


Troubleshooting

 **Check No.17**  
Refer to P.368

 **Check No.19**  
Refer to P.369



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.  
(Precaution before turning on the power again)  
Make sure the power has been off for at least 30 seconds.

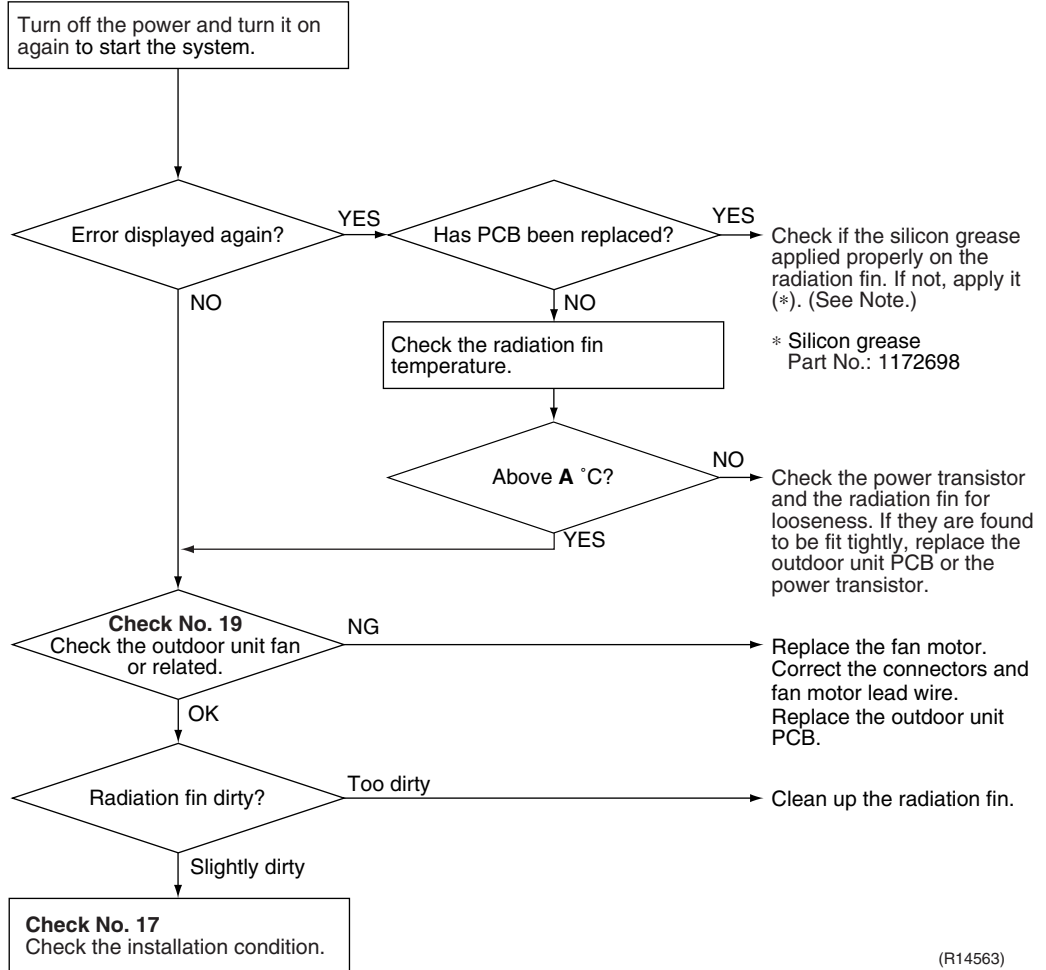

(R14563)

	A (°C)
50-75 class	103
80/90 class	105



**Note:** Refer to “Application of silicon grease to a power transistor and a diode bridge” on page 462 for detail.

## 7.15 Output Overcurrent Detection

Remote  
Controller  
Display

LS

Outdoor Unit LED  
Display

A  1 ● 2 ● 3  4 ● 5 ●

Method of  
Malfunction  
Detection

An output overcurrent is detected by checking the current that flows in the inverter DC section.

Malfunction  
Decision  
Conditions

- A position signal error occurs while the compressor is running.
- A speed error occurs while the compressor is running.
- An output overcurrent signal is fed from the output overcurrent detection circuit to the microcomputer.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 5 minutes without any other error

Supposed  
Causes

- Defective power transistor
- Wrong internal wiring
- Abnormal supply voltage
- Defective outdoor unit PCB
- Closed stop valve
- Defective compressor
- Poor installation condition

Troubleshooting



**Check No.15**  
Refer to P.366



**Check No.17**  
Refer to P.368



**Check No.18**  
Refer to P.368




**Check No.22**  
Refer to P.369



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

\* An output overcurrent may result from wrong internal wiring. If the system is interrupted by an output overcurrent after the wires have been disconnected and reconnected for part replacement, check the wiring again.

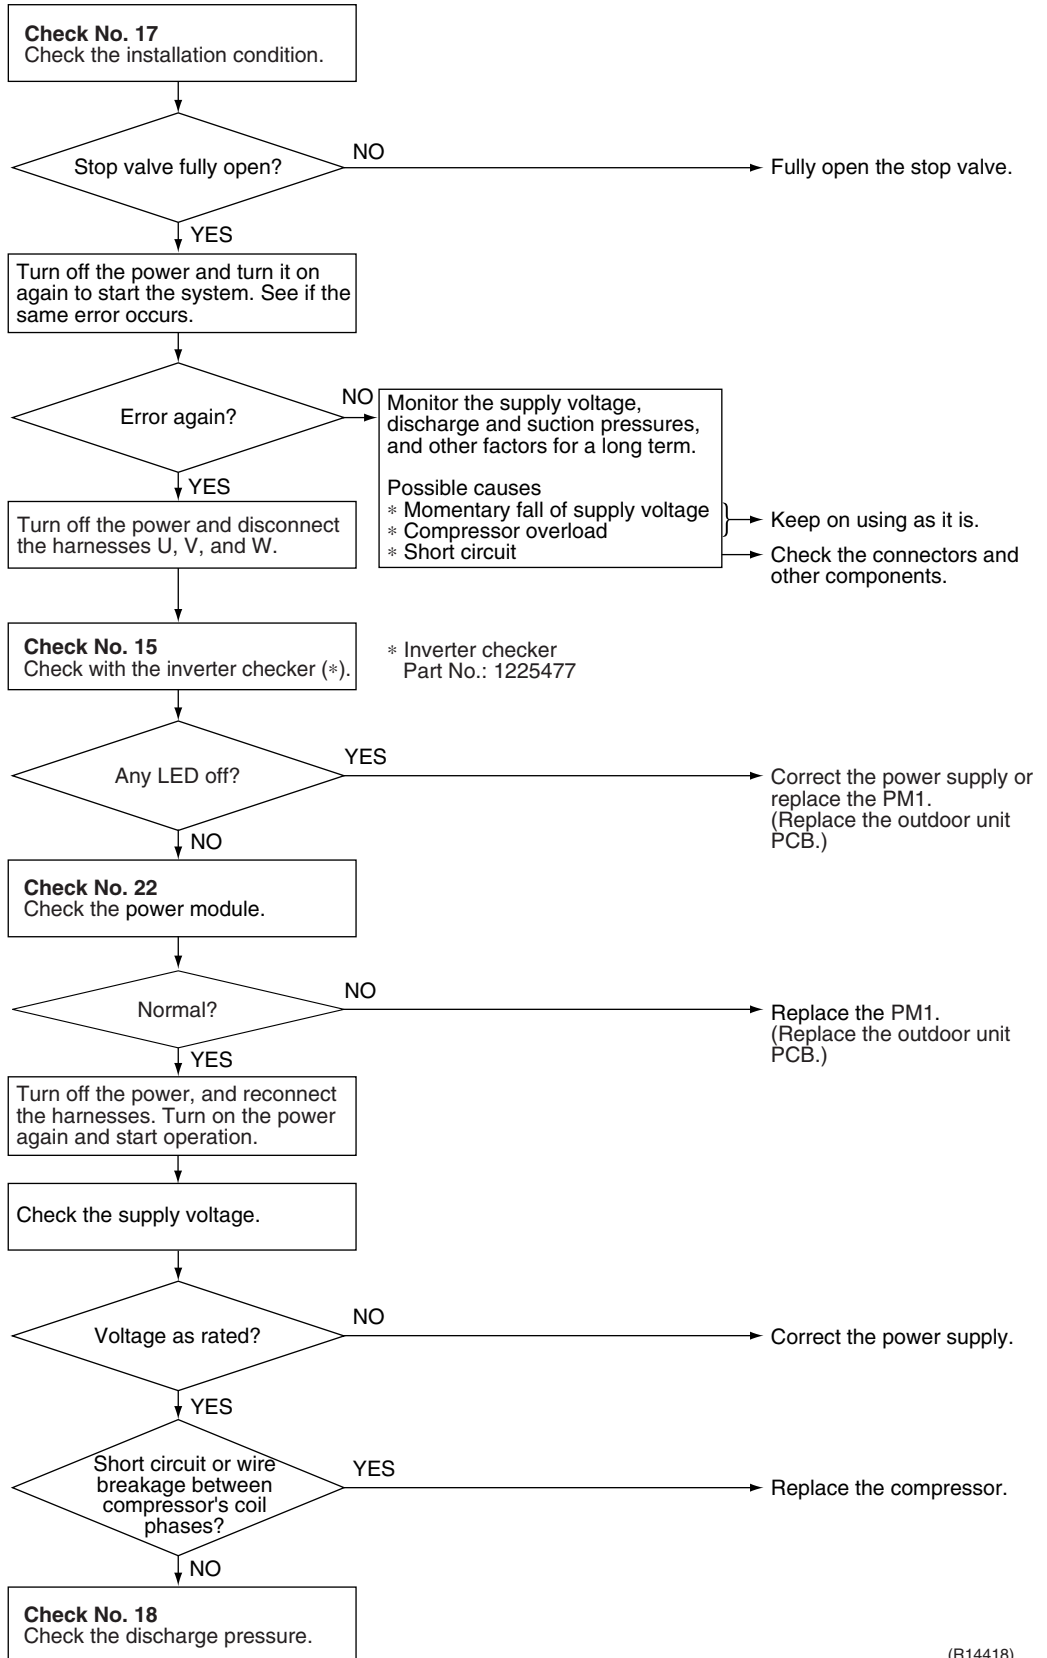

(R14418)

## 7.16 Refrigerant Shortage

### Remote Controller Display



### Outdoor Unit LED Display



### Method of Malfunction Detection

#### Refrigerant shortage detection I :

Refrigerant shortage is detected by checking the input current value and the compressor output frequency. If the refrigerant is short, the input current is smaller than the normal value.

#### Refrigerant shortage detection II :

Refrigerant shortage is detected by checking the discharge pipe temperature and the opening of the electronic expansion valve. If the refrigerant is short, the discharge pipe temperature tends to rise.

### Malfunction Decision Conditions

#### Refrigerant shortage detection I :

The following conditions continue for 7 minutes.

- ◆ DC current  $\leq A \times$  Compressor output frequency + B
- ◆ Output frequency  $> C$

	A (-)	B (A)	C (Hz)
50/52/58 class	0.01	0.3	54
68/75 class	0.035	0.5	55
80/90 class	0.027	2.0	40

#### Refrigerant shortage detection II :

The following conditions continue for 80 seconds.

- ◆ Opening of the electronic expansion valve  $\geq D$
- ◆ Discharge pipe temperature  $> E \times$  target discharge pipe temperature + F

	D (pulse)	E (-)	F (°C)
Cooling	450	255/256	20
Heating		255/256	40

- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

### Supposed Causes

- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Disconnection of the discharge pipe thermistor, indoor or outdoor heat exchanger thermistor, room or outdoor temperature thermistor
- Closed stop valve
- Defective electronic expansion valve

Troubleshooting




Check No.01  
Refer to P.362



Check No.12  
Refer to P.364



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

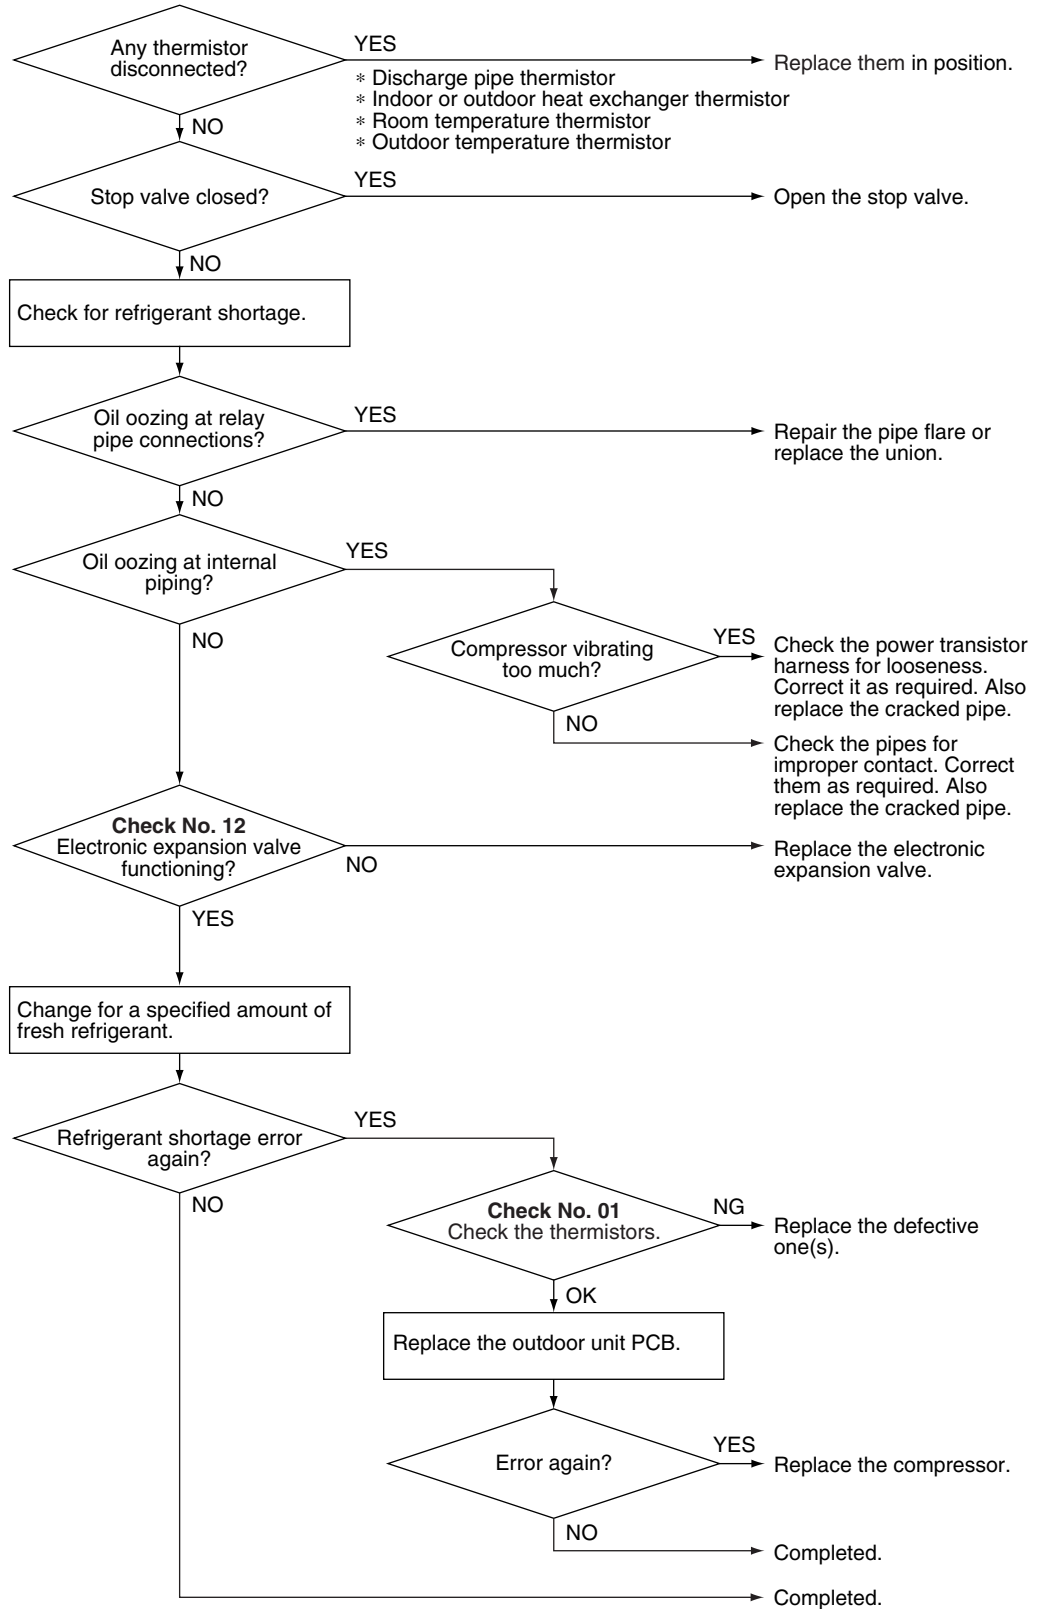

(R14419)

## 7.17 Low-voltage Detection or Over-voltage Detection

Remote  
Controller  
Display



Outdoor Unit LED  
Display

A 1 2 3 4 5

Method of  
Malfunction  
Detection

**Low-voltage detection:**

An abnormal voltage drop is detected by the DC voltage detection circuit.

**Over-voltage detection:**

An abnormal voltage rise is detected by the over-voltage detection circuit.

Malfunction  
Decision  
Conditions

**Low-voltage detection:**

- The voltage detected by the DC voltage detection circuit is below 150 V for 0.1 second.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

**Over-voltage detection:**

- An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer.
- The compressor stops if the error occurs, and restarts automatically after 3-minute standby.

Supposed  
Causes


- Supply voltage is not as specified.
- Defective DC voltage detection circuit
- Defective over-voltage detection circuit
- Defective PAM control part

Troubleshooting









**Caution**

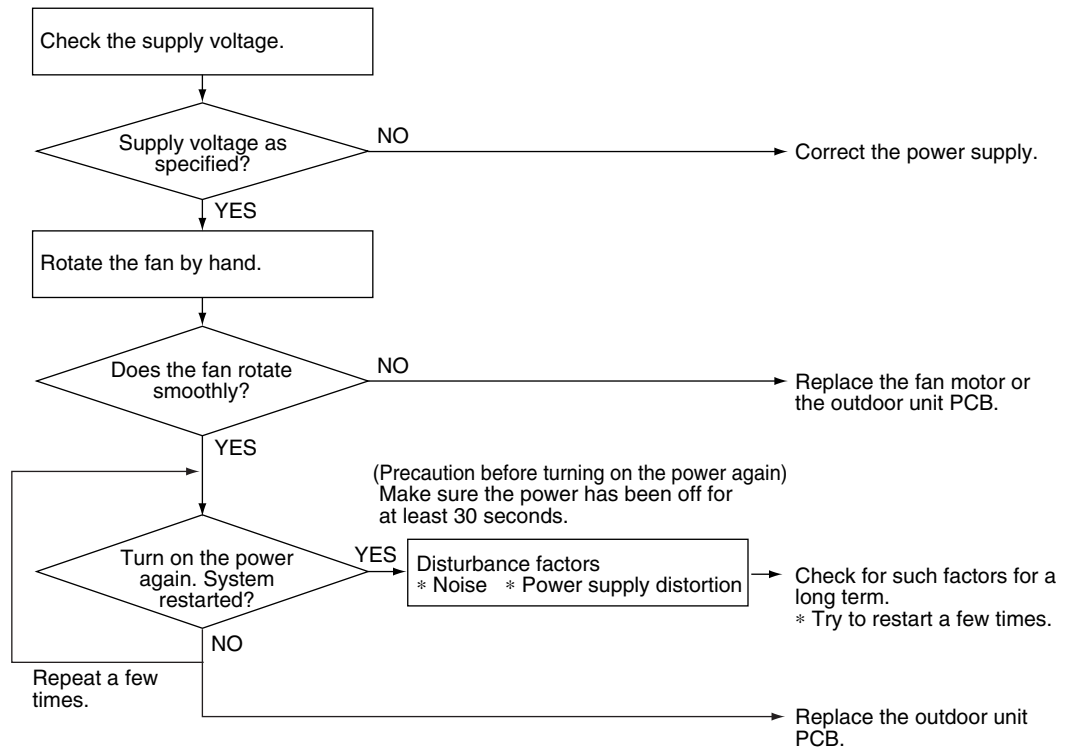Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.




(R7150)

## 7.18 Signal Transmission Error (on Outdoor Unit PCB)

<b>Remote Controller Display</b>	
<b>Outdoor Unit LED Display</b>	A  1  2  3  4  5
<b>Method of Malfunction Detection</b>	Communication error between microcomputer mounted on the main PCB and PM1.
<b>Malfunction Decision Conditions</b>	<ul style="list-style-type: none"> <li>■ The abnormality is determined when the data sent from the PM1 can not be received for 9 seconds.</li> <li>■ The error counter is reset when the data from the PM1 can be successfully received.</li> </ul>
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defective outdoor unit PCB</li> </ul>

**Troubleshooting**

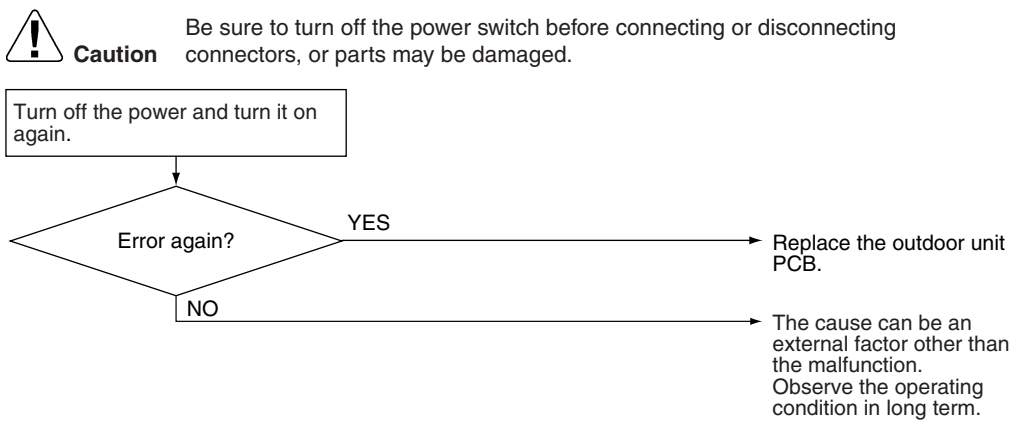

(R7185)



## 7.19 Anti-icing Function in Other Rooms / Unspecified Voltage (between Indoor and Outdoor Units)

Remote  
Controller  
Display

UR, UH

Outdoor Unit LED  
Display

A  1  2  3  4  5

Method of  
Malfunction  
Detection

A wrong connection is detected by checking the combination of indoor and outdoor units on the microcomputer.

Malfunction  
Decision  
Conditions

- Anti-icing function in other rooms
- Unspecified internal and/or external voltages
- Mismatching of indoor and outdoor units

Supposed  
Causes


- Anti-icing function in other rooms
- Wrong models interconnected
- Wrong indoor unit PCB or outdoor unit PCB mounted

### Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

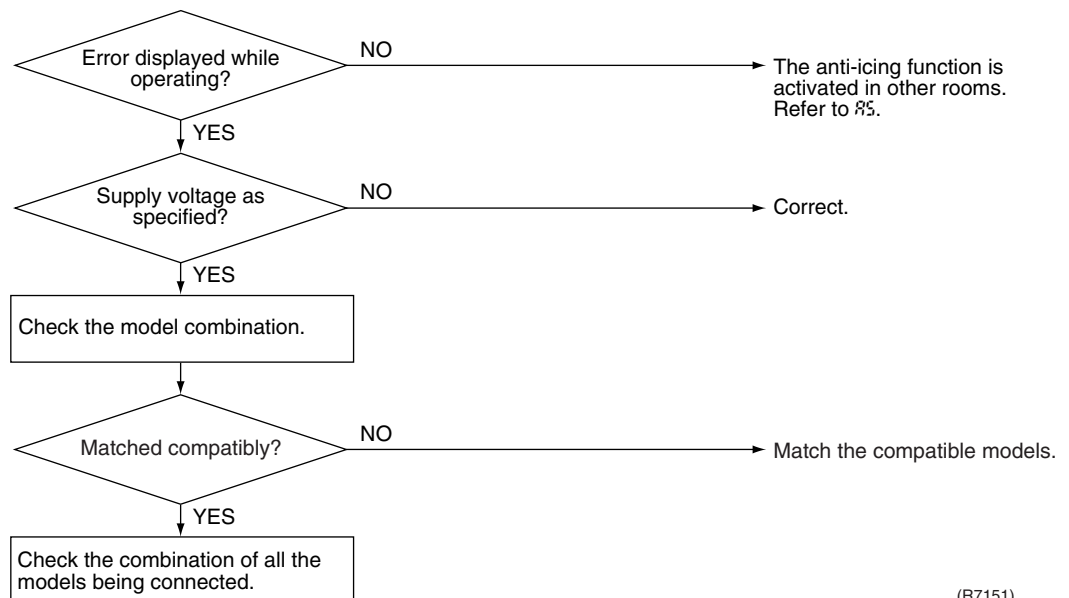

(R7151)



**Note:** Refer to “Anti-icing function” on page 333 for detail.

## 8. Check

### 8.1 Thermistor Resistance Check


#### Check No.01

Disconnect the connectors of the thermistors from the PCB, and measure the resistance of each thermistor using tester.


The relationship between normal temperature and resistance is shown in the table and the graph below.

Thermistor temperature (°C)	Resistance (kΩ)
-20	211.0
-15	150.0
-10	116.5
-5	88.0
0	67.2
5	51.9
10	40.0
15	31.8
20	25.0
25	20.0
30	16.0
35	13.0
40	10.6
45	8.7
50	7.2

( $R_{25^{\circ}\text{C}} = 20 \text{ k}\Omega$ ,  $B = 3950 \text{ K}$ )

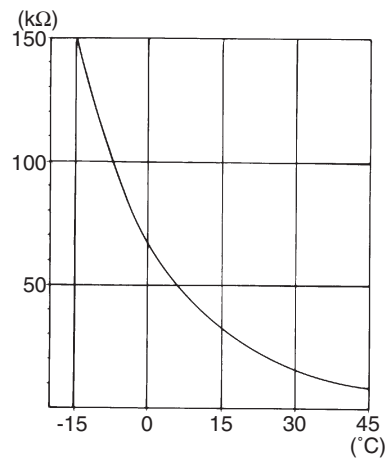


(R11905)

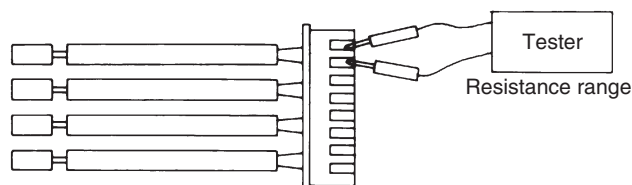

(R11906)

- For the models in which the thermistor is directly mounted on the PCB, disconnect the connector for the PCB and measure.




(R3460)

## 8.2 Fan Motor Connector Check

### Check No.02

1. Check the connection of connector.
2. Check motor power supply voltage output (pins 4 - 7).
3. Check motor control voltage (pins 4 - 3).
4. Check rotation command voltage output (pins 4 - 2).
5. Check rotation pulse input (pins 4 - 1).

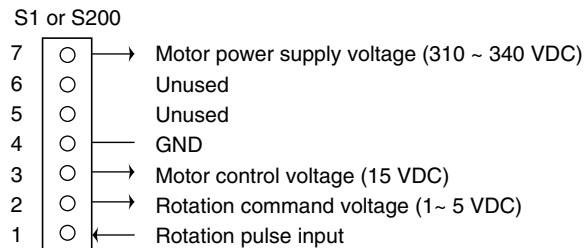

(R14225)

## 8.3 Hall IC Check


### Check No.04

1. Check the connector connection.
2. With the power on, operation off, and the connector connected, check the following.
  - \*Output voltage of about 5 V between pins 1 and 3.
  - \*Generation of 3 pulses between pins 2 and 3 when the fan motor is operating.

If NG in step 1 → Defective PCB → Replace the PCB.

If NG in step 2 → Defective Hall IC → Replace the fan motor.

If OK in both steps 1 and 2 → Replace the PCB.

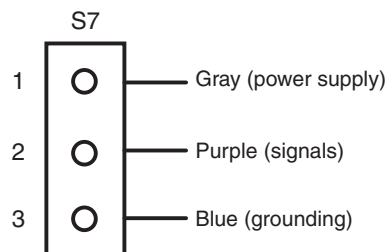

(R14211)


## 8.4 Power Supply Waveform Check

### Check No.11

Measure the power supply waveform between No. 1 and No. 2 on the terminal board, and check the waveform disturbance.


- Check to see if the power supply waveform is a sine wave (Fig.1).
- Check to see if there is waveform disturbance near the zero cross (sections circled in Fig.2)

[Fig.1]

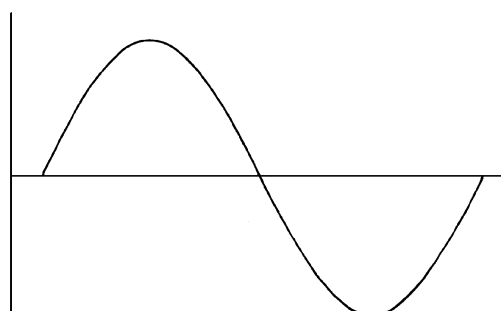

(R1736)

[Fig.2]

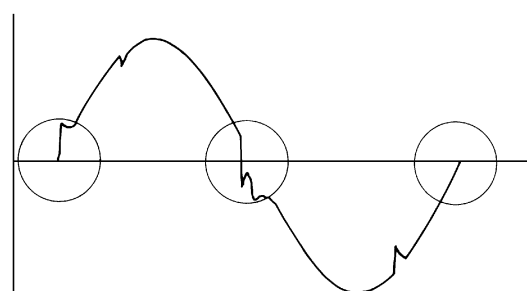

(R1444)

## 8.5 Electronic Expansion Valve Check

### Check No.12

Conduct the followings to check the electronic expansion valve (EV).

1. Check to see if the EV connector is correctly inserted in the PCB. Match the EV unit number and the connector number.
2. Turn the power off and on again, and check to see if all the EVs generate latching sound.
3. If any of the EVs does not generate latching sound in the above step 2, disconnect that connector and check the continuity using a tester.

Check the continuity between the pins 1 - 6 and 3 - 6, and between the pins 2 - 5 and 4 - 5. If there is no continuity between the pins, the EV coil is faulty.

4. If no EV generates latching sound in the above step 2, the outdoor unit PCB is faulty.
5. If the continuity is confirmed in the above step 3, mount a good coil (which generated latching sound) in the EV unit that did not generate latching sound, and check to see if that EV generates latching sound.

\*If latching sound is generated, the outdoor unit PCB is faulty.

\*If latching sound is not generated, the EV unit is faulty.




**Note:** Please note that the latching sound varies depending on the valve type.

If the system keeps operating with a defective electronic expansion valve, the following problem may occur.


Valve opening position	Possible problem	Check method
Open	<b>Cooling:</b> ■ Flowing noise of refrigerant in the unit which is not in operation ■ Water leakage at the unit which is not in operation ■ Operation half due to anti-icing function	Reset power supply and conduct cooling operation unit by unit.  Check the liquid pipe temperature of no-operation unit.  Is it almost same as the outdoor temperature? NO → The EV is not defective. YES → Replace the EV of the room. (R11266)
	<b>Heating:</b> ■ Flowing noise of refrigerant in the unit which is not in operation ■ The unit does not heat the room.	
Close	<b>Cooling:</b> ■ The problem unit does not cool the room. ■ Only the problem unit is in operation, the unit starts pump down. (The low pressure of the unit becomes vacuum.) ■ Abnormal discharge pipe temperature	Reset power supply and conduct cooling operation unit by unit.  Check the low pressure  Does the pressure become into vacuum zone? NO → The EV is not defective. YES → Replace the EV of the room. (R11267)
	<b>Heating:</b> ■ Refrigerant shortage due to stagnation of liquid refrigerant inside the faulty indoor unit ■ The unit does not heat the room. ■ Abnormal discharge pipe temperature	

## 8.6 Four Way Valve Performance Check

### Check No.13

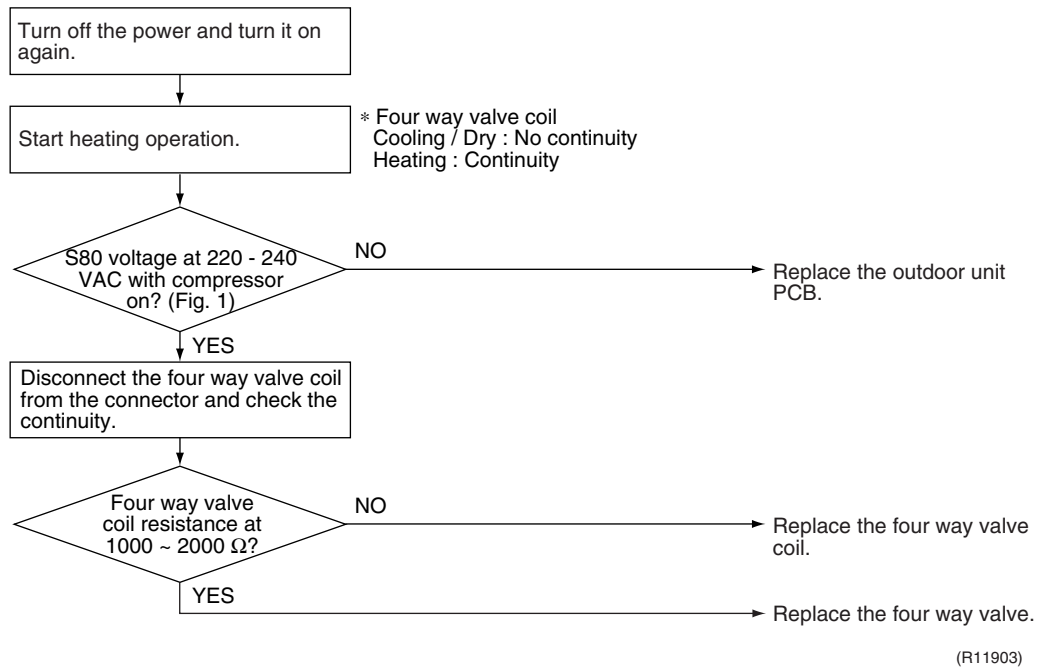


(Fig. 1)

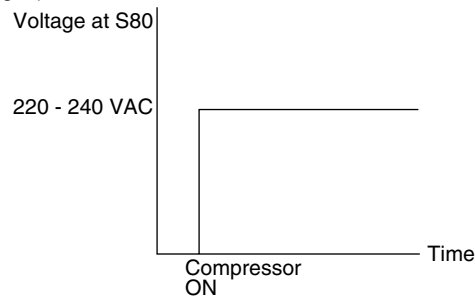

(R11904)

## 8.7 Inverter Unit Refrigerant System Check

### Check No.14

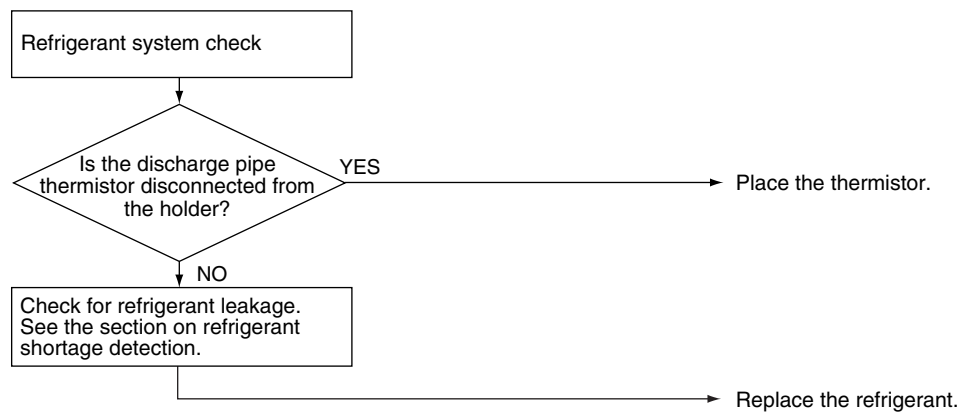

## 8.8 “Inverter Checker” Check

### Check No.15

#### ■ Characteristics

If abnormal stop occurs due to compressor startup failure or overcurrent output when using inverter unit, it is difficult to judge whether it is caused by the compressor failure or other failure (control PCB, power module, etc.). The inverter checker makes it possible to judge the cause of trouble easily and securely. (Connect this checker as a quasi-compressor instead of compressor and check the output of inverter)

#### ■ Operation Method

##### Step 1


Be sure to turn the power off.

##### Step 2

Install the inverter checker instead of a compressor.

##### Note:

Make sure the charged voltage of the built-in smoothing electrolytic capacitor drops to 10 VDC or below before carrying out the service work.

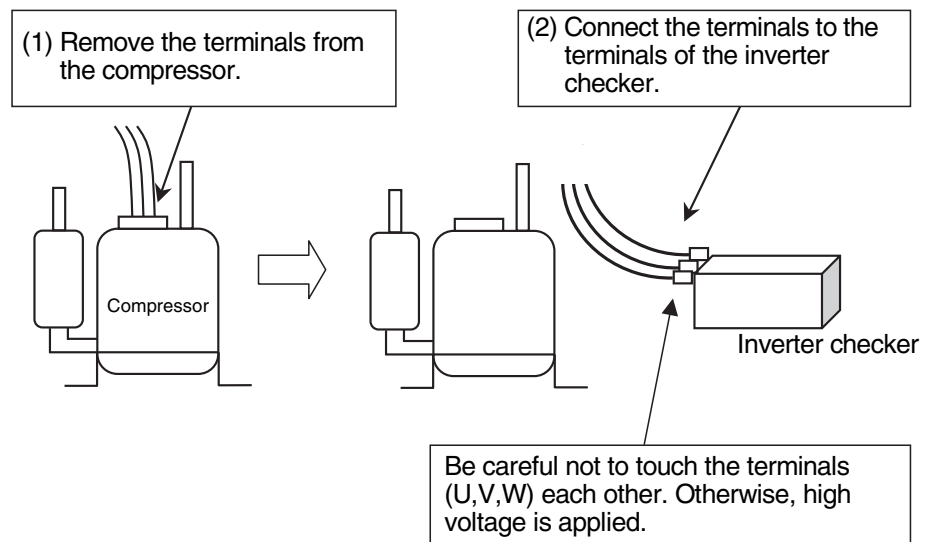

##### Reference:

If the terminals of the compressor are not FASTON terminals (difficult to remove the wire on the terminals), it is possible to connect wires available on site to the outdoor unit from output side of PCB. (Do not connect them to the compressor at the same time, otherwise it may result in incorrect detection.)

##### Step 3

Activate power transistor test operation from the outdoor unit.

1) Press the forced operation ON/OFF button for 5 seconds.

(Refer to page 440 for the position.)

→ Power transistor test operation starts.


■ **Diagnose method (Diagnose according to 6 LEDs lighting status.)**

- (1) When all the LEDs are lit uniformly, the compressor is defective.  
→ Replace the compressor.
- (2) When the LEDs are not lit uniformly, check the power module.  
→ Refer to **Check No.13**.
- (3) If NG in **Check No.13**, replace the power module (PCB).  
If OK in **Check No.13**, check if there is any solder cracking on the PCB.
- (4) If any solder cracking is found, replace the PCB or repair the soldered section.  
If there is no solder cracking, replace the PCB.



**Caution**

- (1) When the output frequency is low, the LEDs blink slowly. As the output frequency increases, the LEDs blink quicker. (The LEDs look like they are lit.)
- (2) On completion of diagnose by the inverter checker, be sure to re-crimp the FASTON terminals. Otherwise, the terminals may be burned due to loosening.

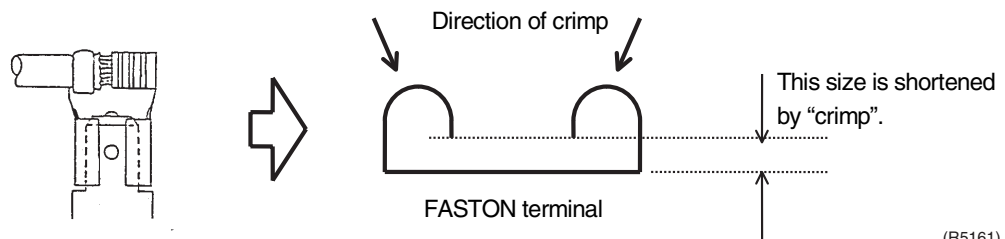

(R5161)

## 8.9 Rotation Pulse Check on the Outdoor Unit PCB

### Check No.16

<Outdoor fan motor>

Make sure that the voltage of  $320 \pm 30$  V is applied.


1. Set operation off and power off. Disconnect the connector S70.
2. Check that the voltage between the pins 4 - 7 is 320 VDC.
3. Check that the control voltage between the pins 3 - 4 is 15 VDC.
4. Check that the rotation command voltage between the pins 2 - 4 is 0 ~ 15 VDC.
5. Keep operation off and power off. Connect the connector S70.
6. Check whether 2 pulses (0 ~ 15 VDC) are output at the pins 1 - 4 when the fan motor is rotated 1 turn by hand.

When the fuse is melted, check the outdoor fan motor for proper function.

If NG in step 2 → Defective PCB → Replace the PCB.

If NG in step 4 → Defective Hall IC → Replace the outdoor fan motor.


If OK in both steps 2 and 4 → Replace the PCB.

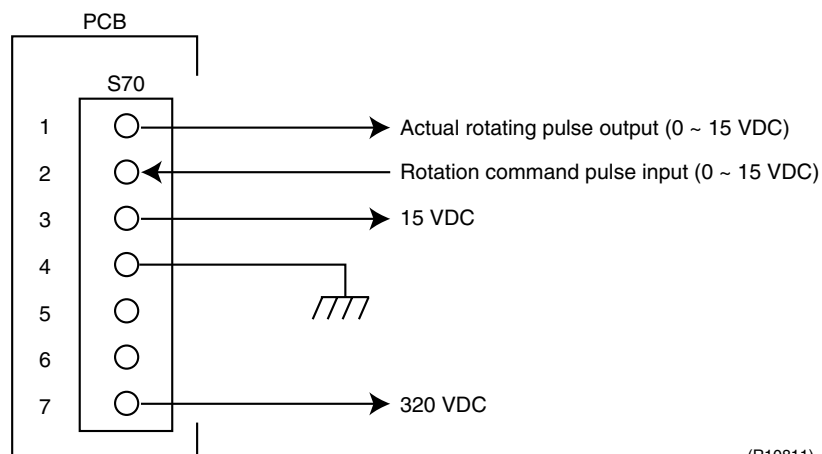

(R10811)

## 8.10 Installation Condition Check


### Check No.17

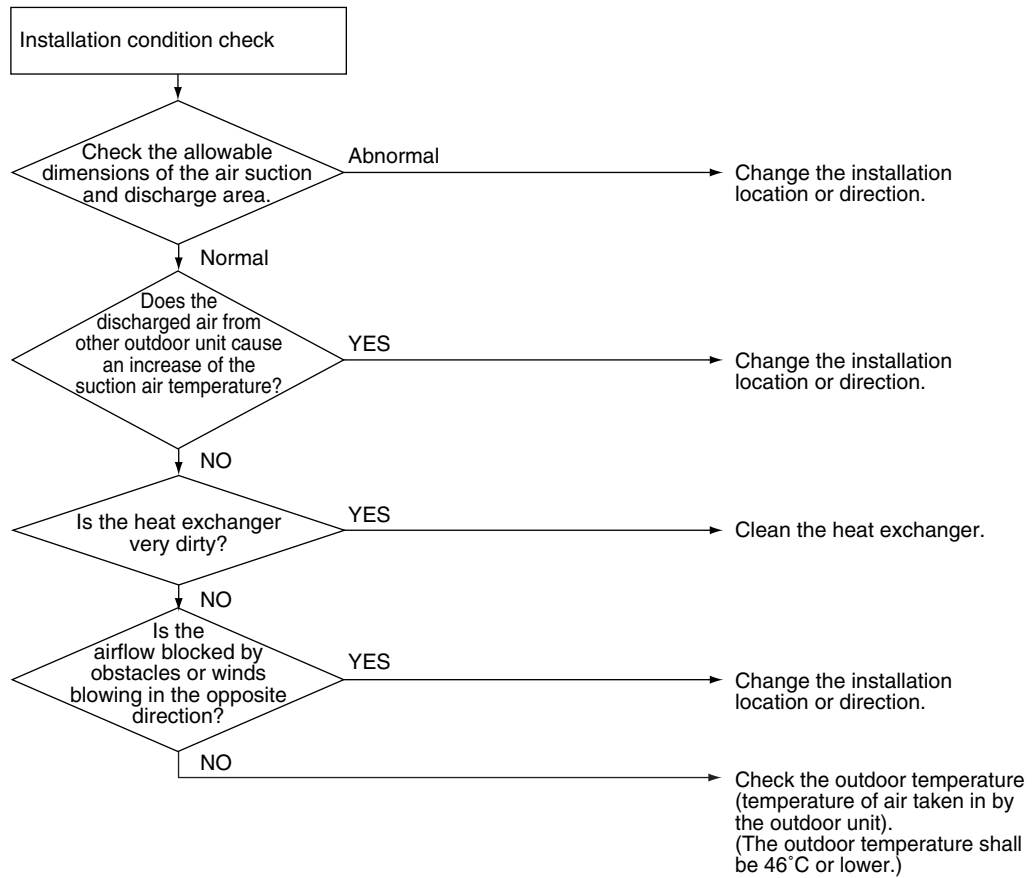

(R11229)

## 8.11 Discharge Pressure Check

### Check No.18

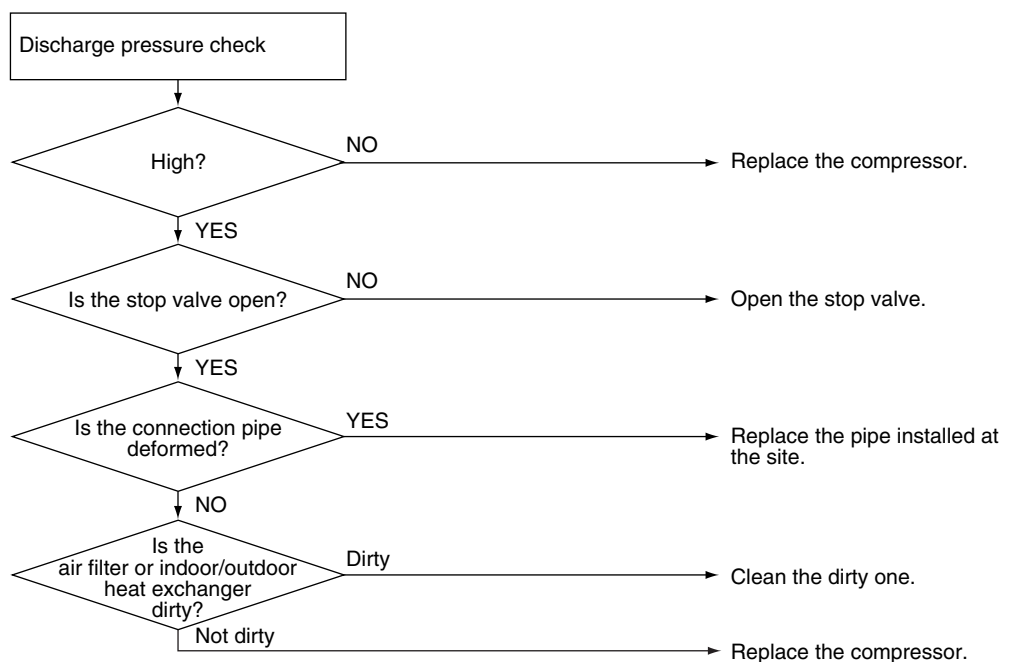


(R11718)



## 8.12 Outdoor Fan System Check

### Check No.19

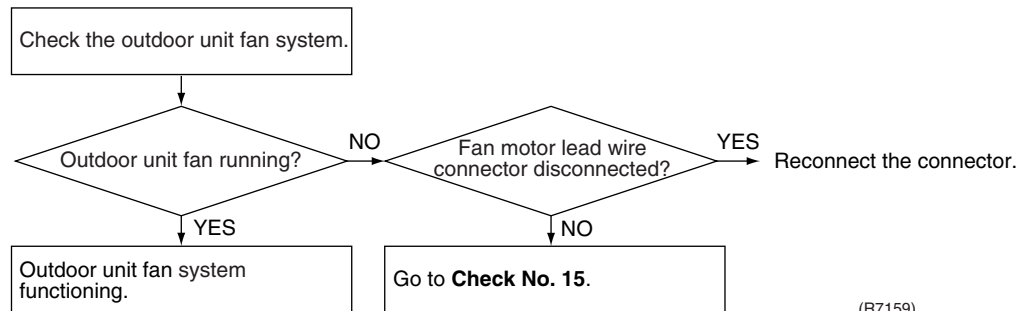

(R7159)


## 8.13 Capacitor Voltage Check

### Check No.21

Before this check, be sure to check the main circuit for short circuit.

With the circuit breaker still on, measure the voltage according to the drawing of the model in question. Be careful never to touch any live parts.

Multimeter  
(DC. voltage range)

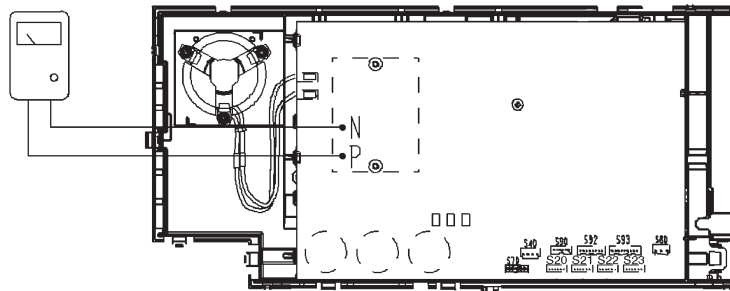

(R12869)

## 8.14 Power Module Check

### Check No.22



**Note:** Check to make sure that the voltage between (+) and (-) of the diode bridge (DB1) is approx. 0 V before checking.

- Disconnect the compressor harness connector from the outdoor unit PCB. To disengage the connector, press the protrusion on the connector.
- Follow the procedure below to measure resistance between the terminals of the DB1 and the terminals of the compressor with a multi-tester. Evaluate the measurement results for a judgment.

Negative (-) terminal of tester (positive terminal (+) for digital tester)	DB1 (+)	UVW	DB1 (-)	UVW
Positive (+) terminal of tester (negative terminal (-) for digital tester)	UVW	DB1 (+)	UVW	DB1 (-)
Resistance in OK	several kΩ ~ several MΩ			
Resistance in NG	0 Ω or ∞			

---

# Part 7

## Removal Procedure

1. Outdoor Unit - 50~75 Class.....	371
1.1 Removal of Outer Panels .....	371
1.2 Removal of Electrical Box .....	375
1.3 Removal of PCBs .....	383
1.4 Removal of Outdoor Fan / Fan Motor.....	388
1.5 Removal of Sound Blankets .....	390
1.6 Removal of Coils / Thermistors .....	394
1.7 Removal of Distributor.....	397
1.8 Removal of Four Way Valve.....	398
1.9 Removal of Compressor.....	399
2. Outdoor Unit - 80/90 Class.....	401
2.1 Removal of Outer Panels .....	401
2.2 Removal of Electrical Box .....	417
2.3 Removal of PCBs .....	423
2.4 Removal of Fan Motor.....	427
2.5 Removal of Coils / Thermistors .....	428
2.6 Removal of Sound Blankets .....	434
2.7 Removal of Compressor.....	437

# 1. Outdoor Unit - 50~75 Class

Note: The illustrations are for heat pump models as representative.




## 1.1 Removal of Outer Panels





**Procedure**









**Warning**

Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

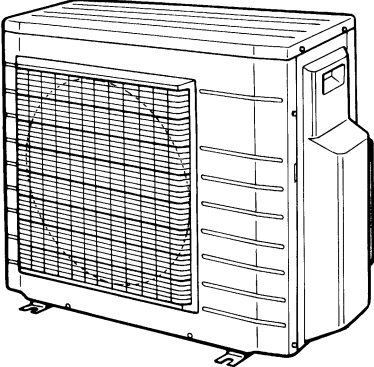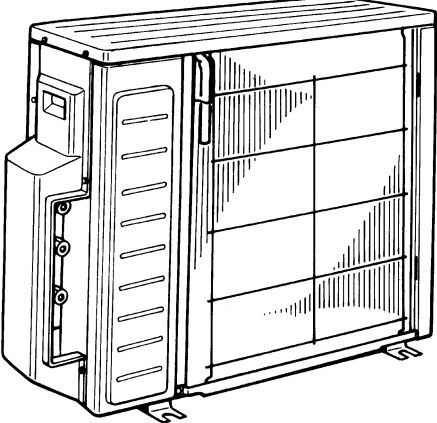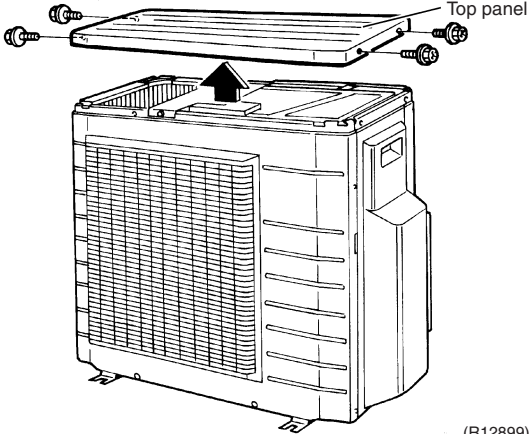Step	Procedure	Procedure	Points
1	External appearance	 <p>(R5494)</p>  <p>(R12898)</p>	<ul style="list-style-type: none"> <li>Take care not to cut your finger by the fins of the heat exchanger.</li> </ul>
2	Remove the 4 screws (2 on both sides) of the top panel.	 <p>Top panel</p> <p>(R12899)</p>	

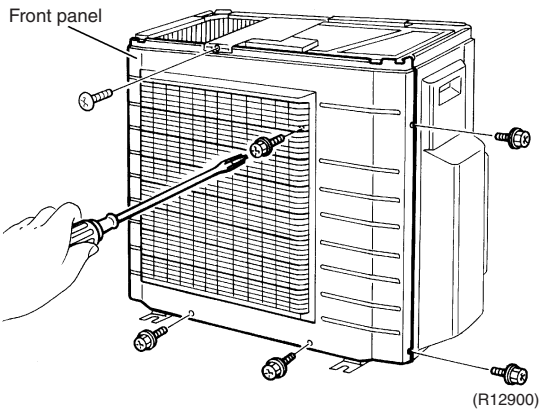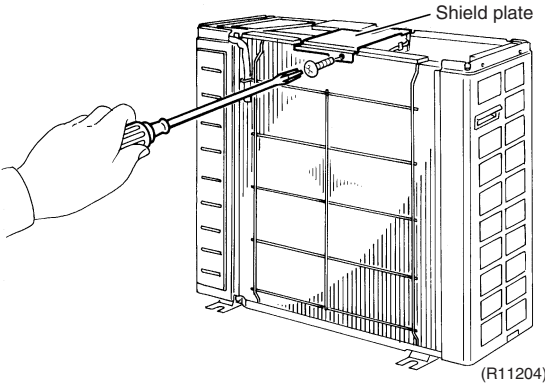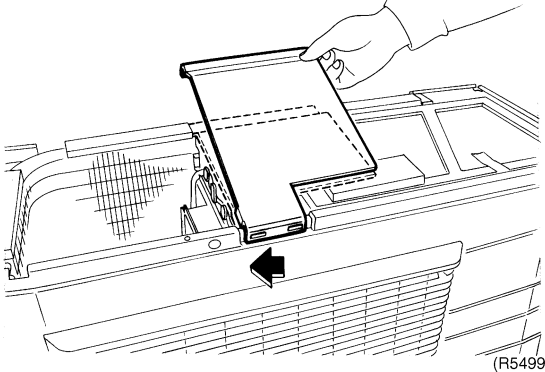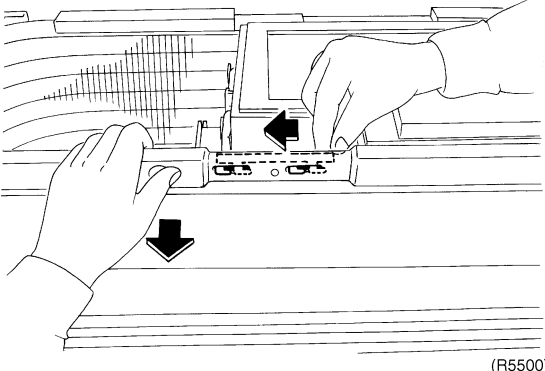Step	Procedure	Points
3	<p>Remove the 6 screws of the front panel.</p> 	
4	<p>Remove the 1 screw of the shield plate.</p> 	
5	<p>Slide the shield plate to the left to release the hooks and remove the shield plate.</p> 	
6	<p>Release the upper 2 hooks.</p> 	<ul style="list-style-type: none"> <li>Align the position of hole of the upper hook to pull the front panel out.</li> </ul>

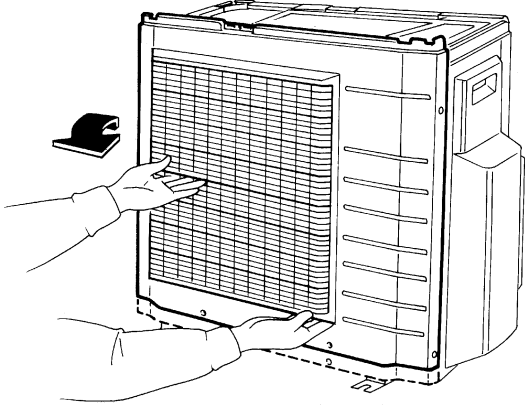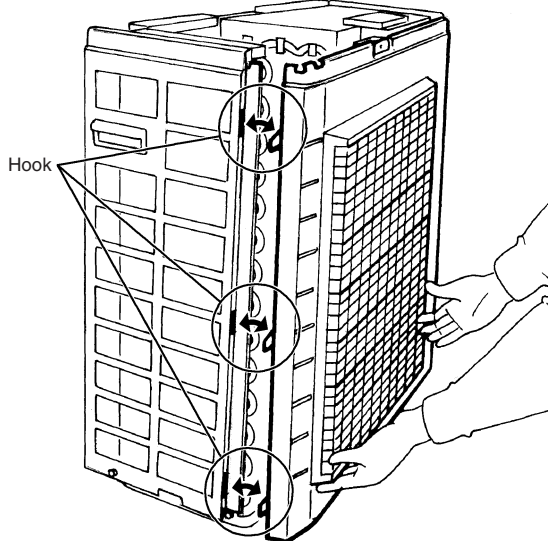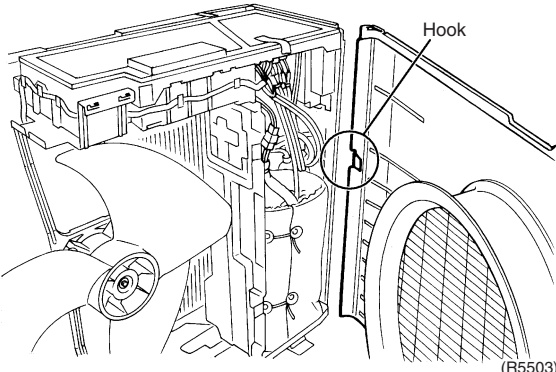Step	Procedure	Points
7	<p>Lift the front panel up to unfasten the left side hooks.</p>  <p>(R5501)</p>  <p>(R12901)</p>	<p>■ The front panel has 3 hooks on the left.</p>
8	<p>Unfasten the right side hook and remove the front panel.</p>  <p>(R5503)</p>	

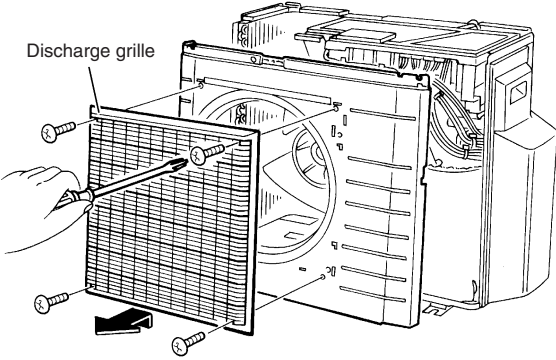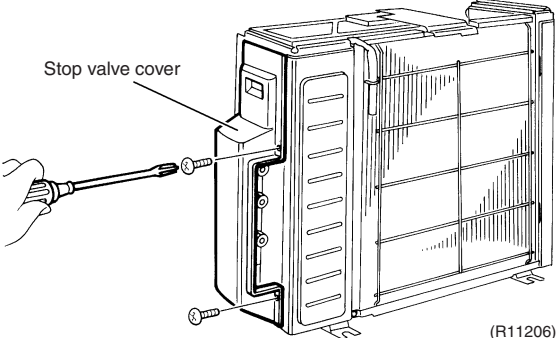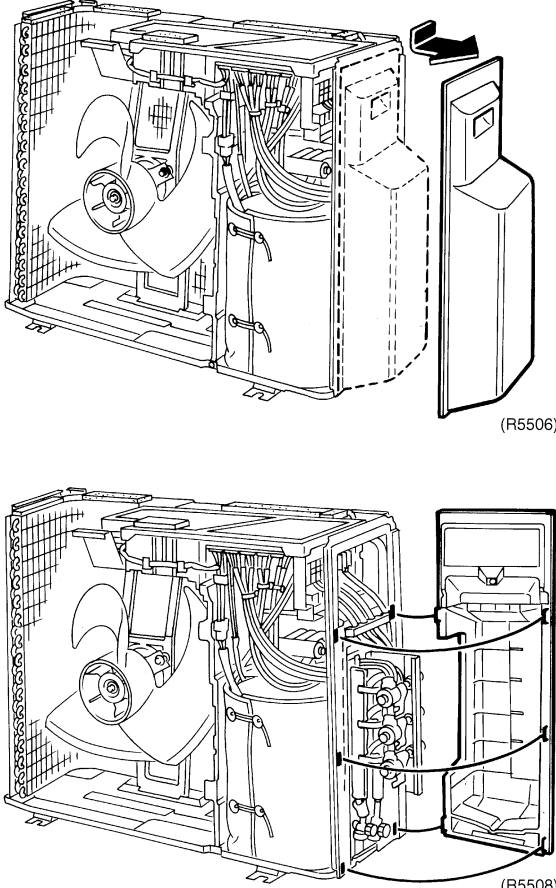Step	Procedure	Procedure	Points
9	Remove the 4 screws of the discharge grille.	 <p>Discharge grille</p> <p>(R12902)</p>	
10	Remove the 2 screws of the stop valve cover.	 <p>Stop valve cover</p> <p>(R11206)</p>	
11	Slide the stop valve cover downward and remove it.	 <p>(R5506)</p> <p>(R5508)</p>	<p>■ When reassembling, make sure to fit the 5 hooks.</p>




# 1.2 Removal of Electrical Box





**Procedure**



**Warning**





Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

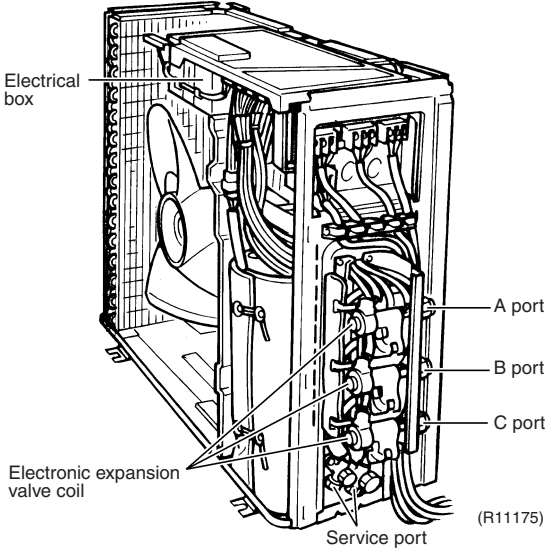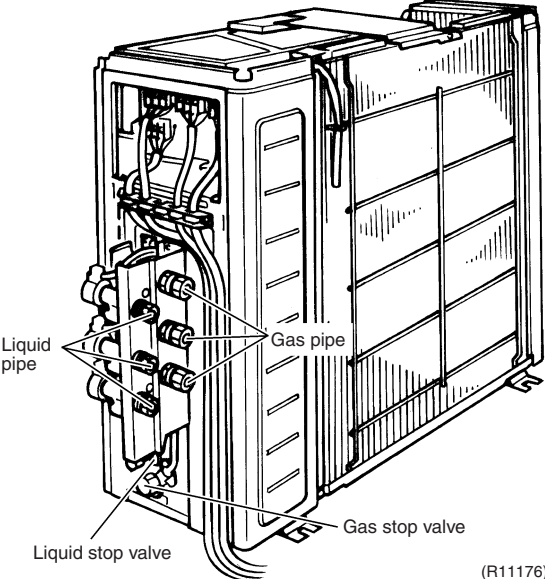
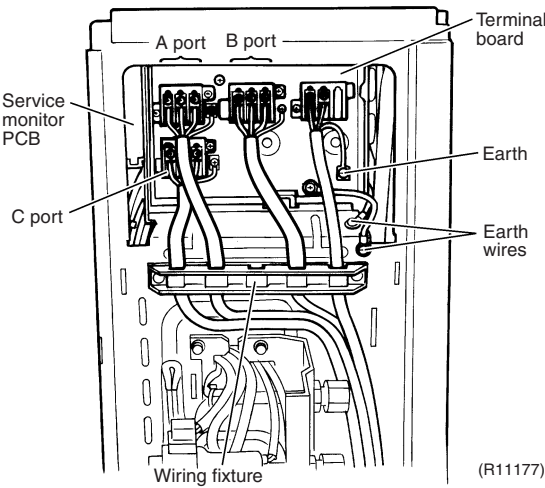
Step	Procedure	Points
1. Disconnect the harnesses.		
1	<p>Layout of the connecting wires</p>   	<p>■ Illustrations are for 3 room models as representative, 4 room models also have D port.</p> <p>■ Connecting wires                      (1) Black : Power supply                      (2) White : Power supply                      (3) Red : Transmission</p> <p>■ Power Supply wires                      (L) - Black                      (N) - White</p> <p>■ The wires are fixed to the terminal board with screws.</p>

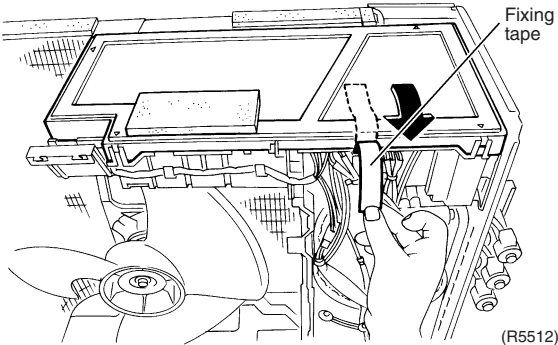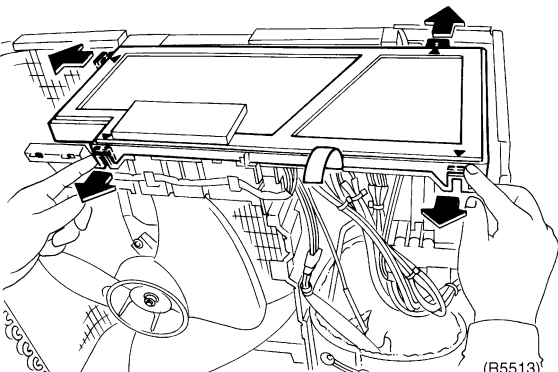
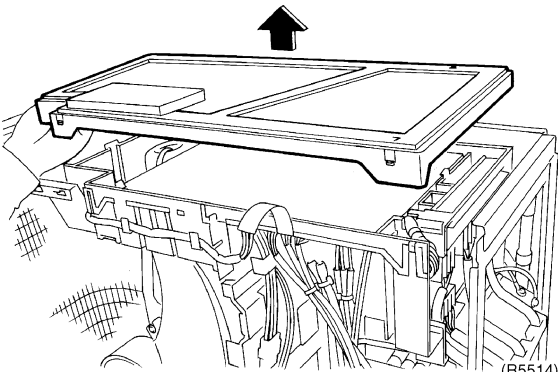
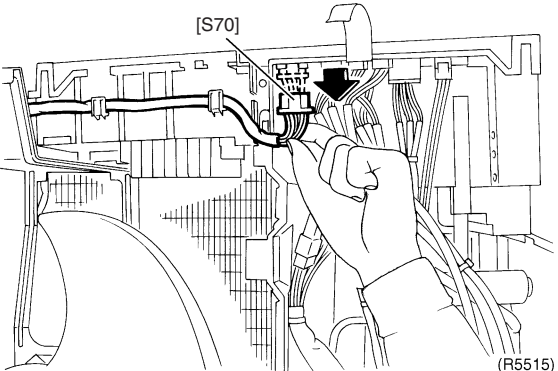
Step	Procedure	Points
2	<p>Detach the fixing tape of the electrical box cover.</p>  <p>(R5512)</p>	
3	<p>Unfasten the 4 hooks at the ▲ mark of the electrical box cover.</p>  <p>(R5513)</p>	
4	<p>Lift the electrical box cover up and remove it.</p>  <p>(R5514)</p>	
5	<p>Disconnect the connector for the fan motor [S70].</p>  <p>(R5515)</p>	









Step	Procedure	Points
6	Release the fan motor lead wire from the hooks.	
7	Disconnect the connectors for the electronic expansion valve coils. [S20] (white) : room A [S21] (red) : room B [S22] (blue) : room C	■ 4 room models also have [S23] (yellow) for room D.
8	Pull out the clamp.	

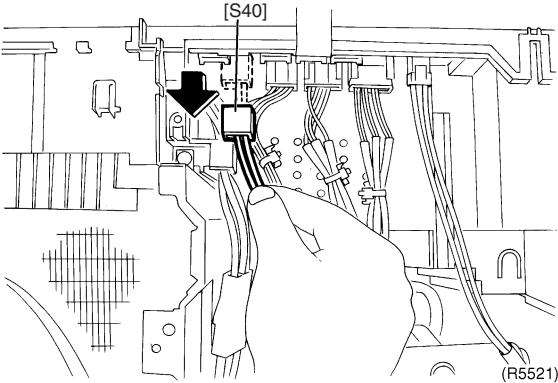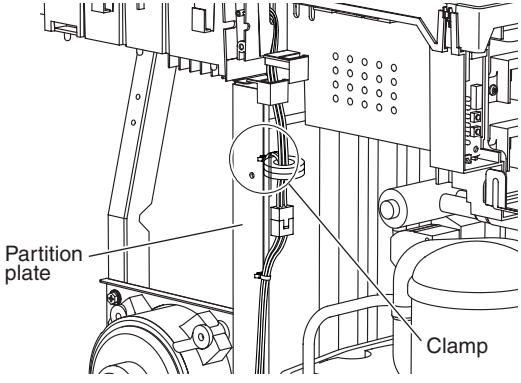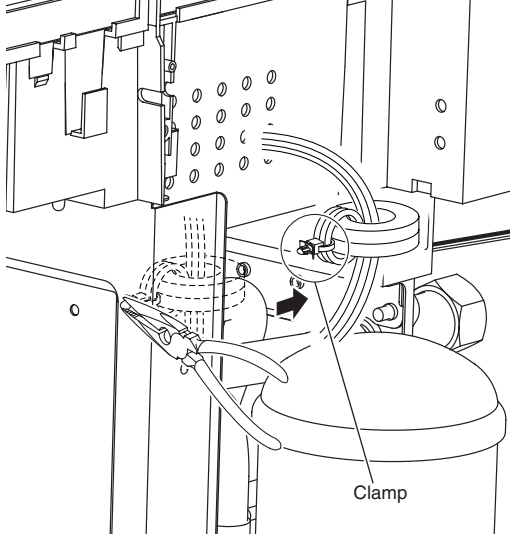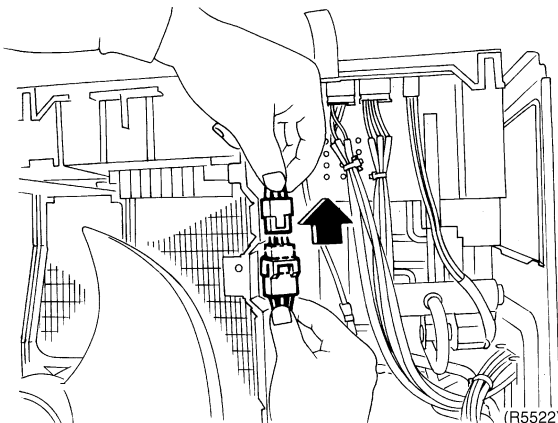Step	Procedure	Points
9	<p>Disconnect the connector for the overload protector [S40].</p> 	
10	<p>The wire harness for the compressor is attached to the partition plate by the clamp.</p> 	
11	<p>Pull out the clamp with pliers.</p> 	
12	<p>Disconnect the relay connector of the compressor.</p> 	

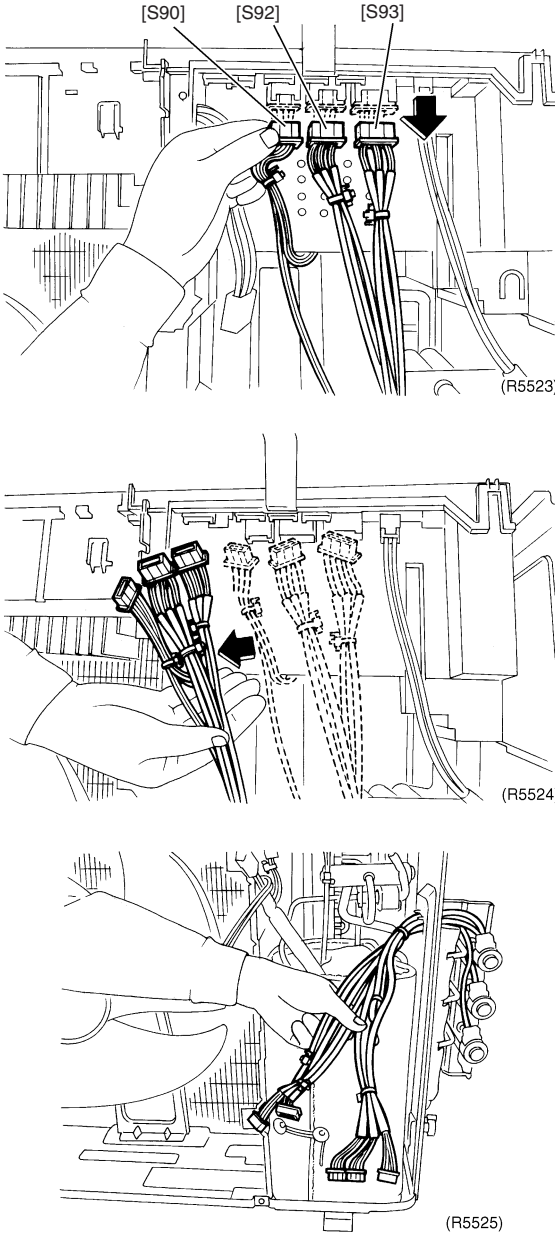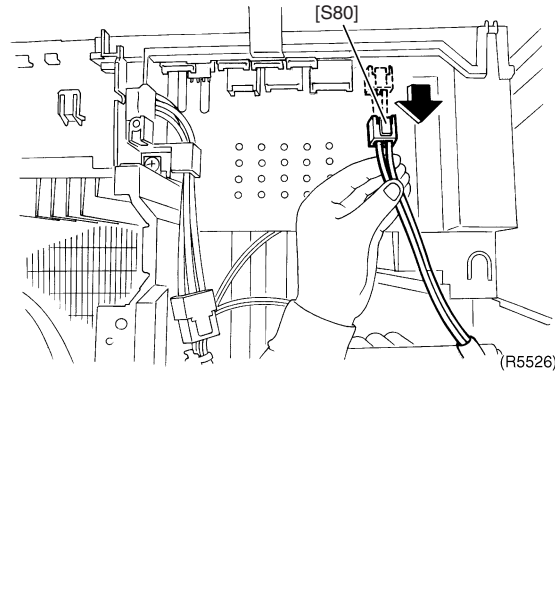Step	Procedure	Points
<p>13 Disconnect the each connector.                      [S90] : Thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)                      [S92] : Gas pipe thermistors                      [S93] : Liquid pipe thermistors</p>	 <p>The first diagram (R5523) shows a hand pulling the connector for [S93] (Liquid pipe thermistors) away from the terminal block. The second diagram (R5524) shows a hand pulling the connector for [S92] (Gas pipe thermistors) away. The third diagram (R5525) shows a hand pulling the connector for [S90] (Thermistors) away.</p>	
<p>14 Disconnect the connector for the four way valve coil [S80].</p>	 <p>The diagram (R5526) shows a hand pulling the connector for [S80] (four way valve coil) away from the terminal block.</p>	<p>■ The cooling only models have no harness for [S80].</p>

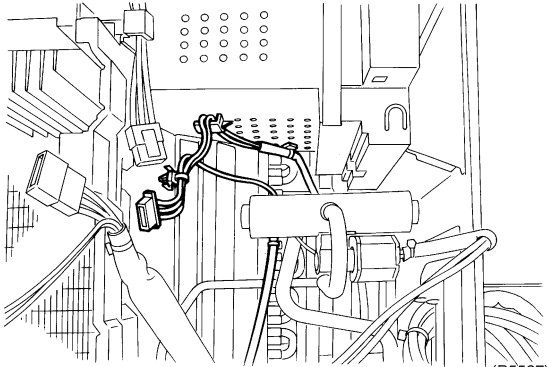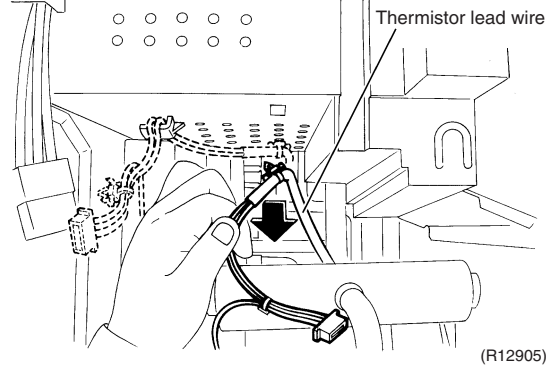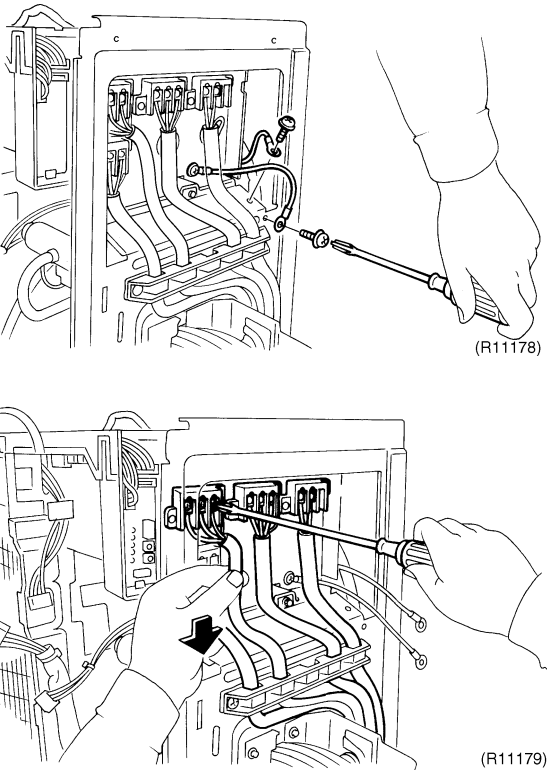Step	Procedure	Procedure	Points
15	The figure shows the arrangement of the wire harnesses under the electrical box.	 <p>(R5527)</p>	
16	Pull out the clamp of the thermistor lead wire.	 <p>Thermistor lead wire</p> <p>(R12905)</p>	
2. Remove the electrical box.	<p>1 Remove the 2 screws of the earth terminal.</p> <p>2 Remove the screws on the terminal board and disconnect all the connecting wires.</p>	 <p>(R11178)</p> <p>(R11179)</p>	

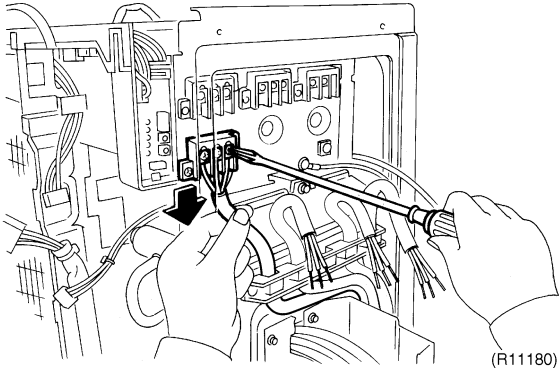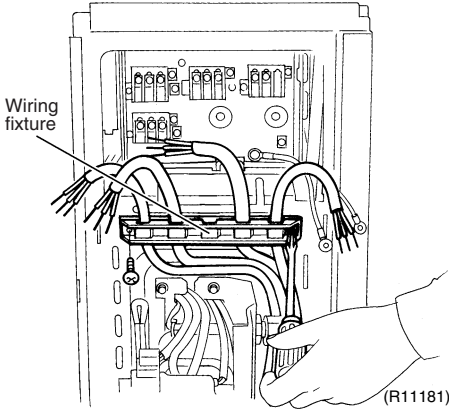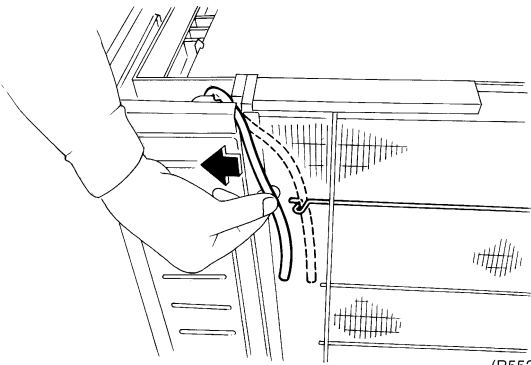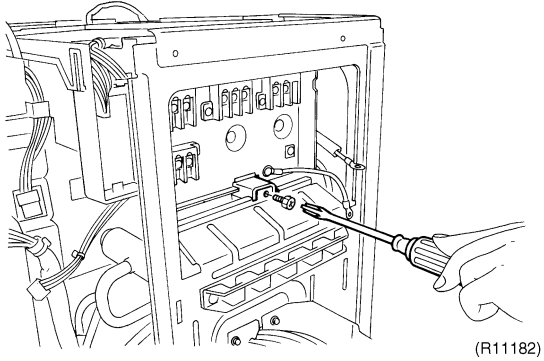Step	Procedure	Points
3	<p data-bbox="199 645 448 712">Remove the 2 screws of the wiring fixture.</p>  	
4	<p data-bbox="199 1093 464 1160">Detach the outdoor temperature thermistor.</p> 	
5	<p data-bbox="199 1518 448 1619">Remove the screw on the right side of the electrical box.</p> 	



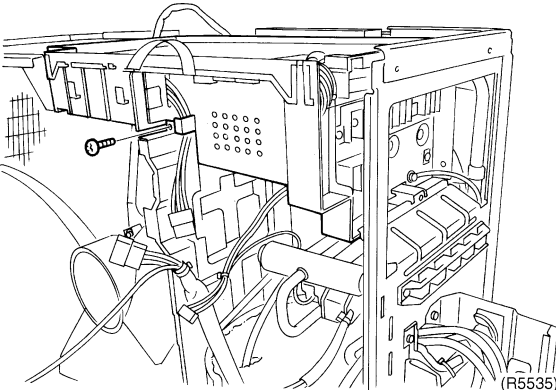
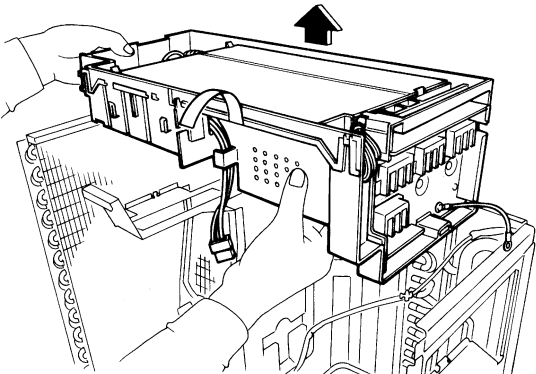
Step	Procedure	Points	Points
6	Remove the 1 screw in front of the electrical box.	 <p>(R5535)</p>	
7	Lift up and remove the electrical box.	 <p>(R5536)</p>	






# 1.3 Removal of PCBs

**Procedure**







**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.


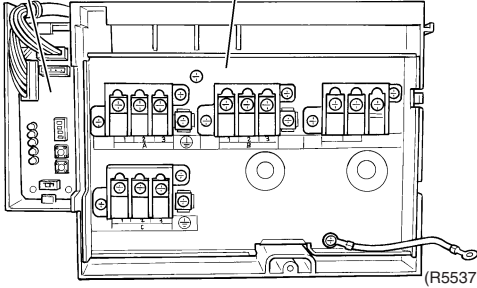
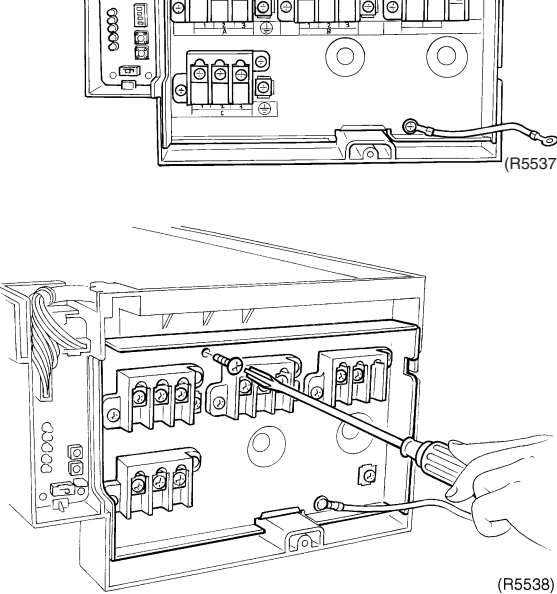
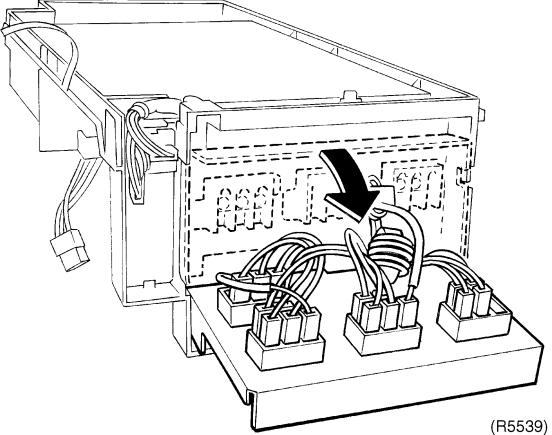
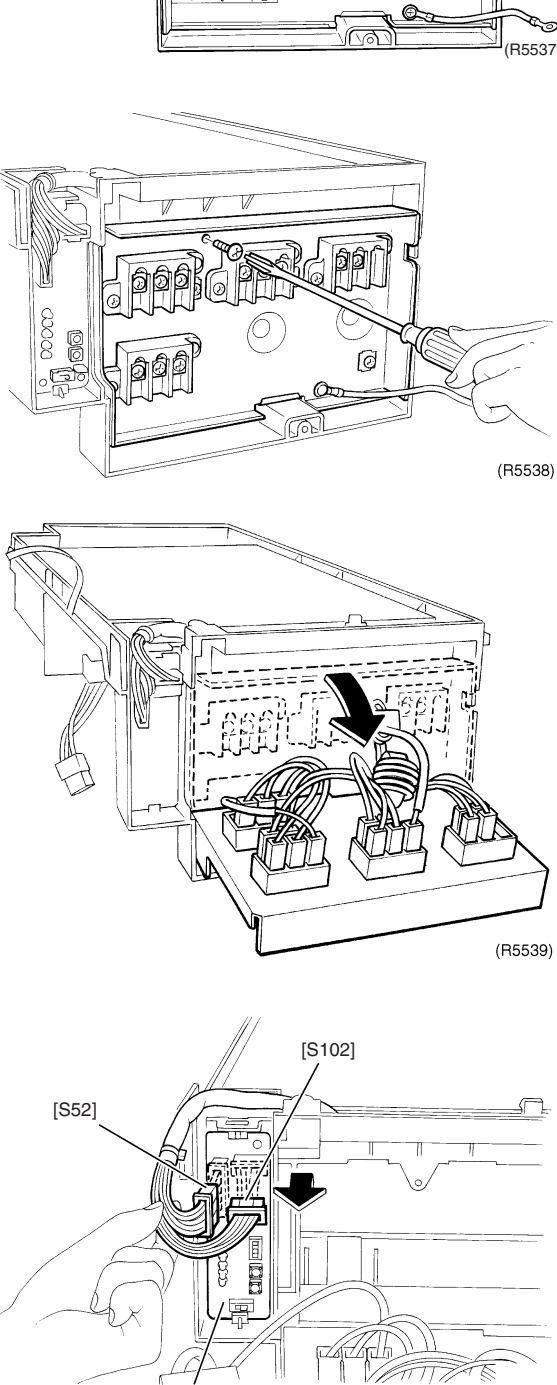
Step	Procedure	Points
1. Remove the service monitor PCB.	<p>Service monitor PCB Terminal board</p>  <p>(R5537)</p>	
1	External appearance	
2	Remove the screw of the terminal board and open it.	
	 <p>(R5538)</p>	
	 <p>(R5539)</p>	
3	Disconnect the connectors [S52] [S102] from the service monitor PCB.	
	 <p>(R5540)</p>	
	<p>Service monitor PCB</p> <p>(R5540)</p>	

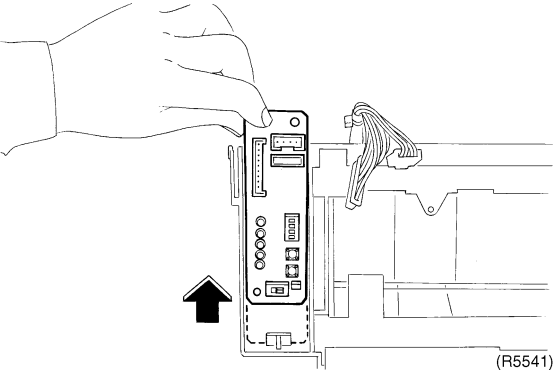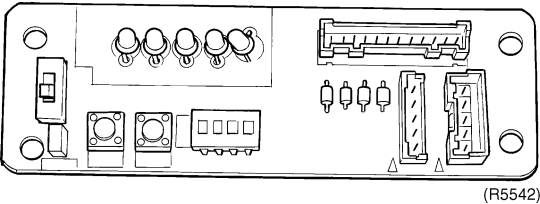
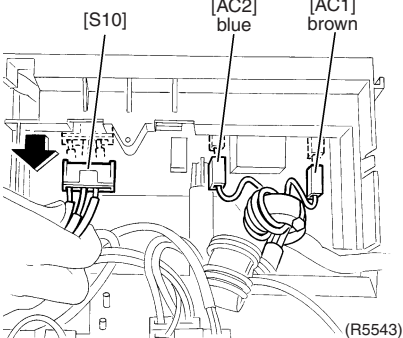
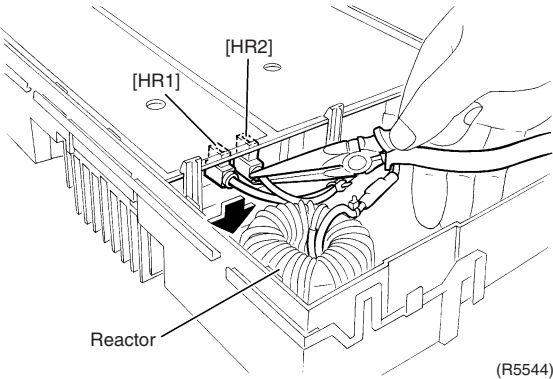
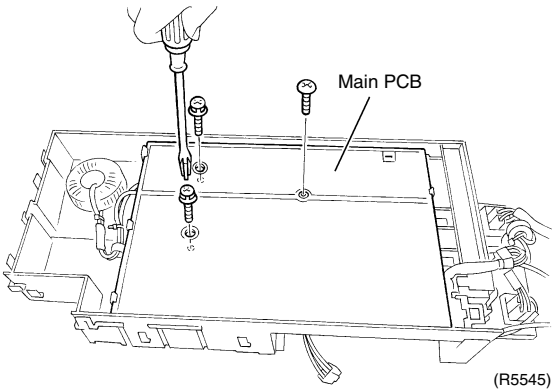
Step	Procedure	Points
4	<p>Widen the upper hook and pull the service monitor PCB upward to remove.</p>  	<p>■ Refer to page 82 for detail.</p>
2. Remove the main PCB.		
1	<p>Disconnect the connectors for the terminal board on the right side.</p> 	<p>[AC1] [AC2] : for power supply [S10] : for transmission</p>
2	<p>Disconnect the 2 connectors for reactor.</p> 	
3	<p>Remove the 3 screws of the main PCB.</p> 	



Step	Procedure	Points
4	Unfasten the 3 hooks on the reactor side and slide the main PCB to the left.	
5	Release the relay harness for the compressor from the hook.	
6	Lift up the main PCB and remove it.	<ul style="list-style-type: none"> <li>■ In working, be careful not to break the main PCB with the excessive force because the main PCB and the radiation fin are adhered to one another.</li> </ul>

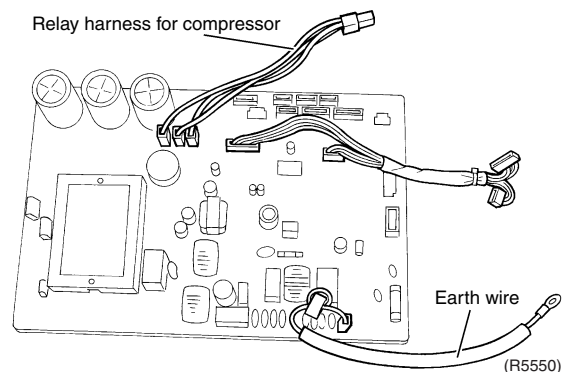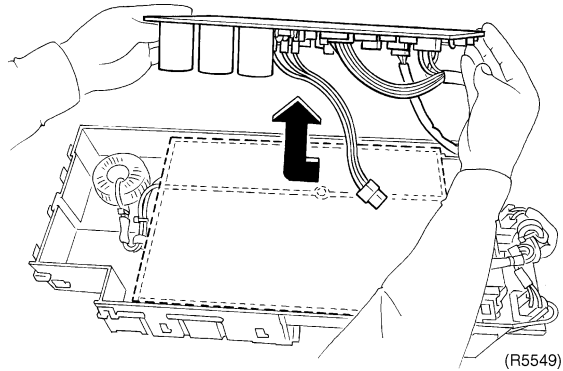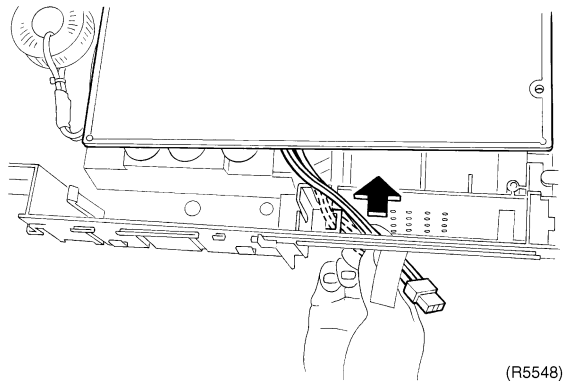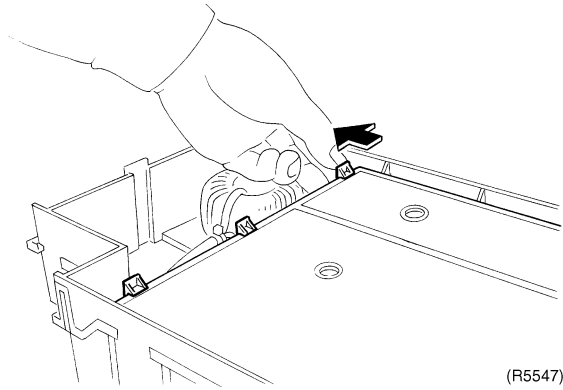

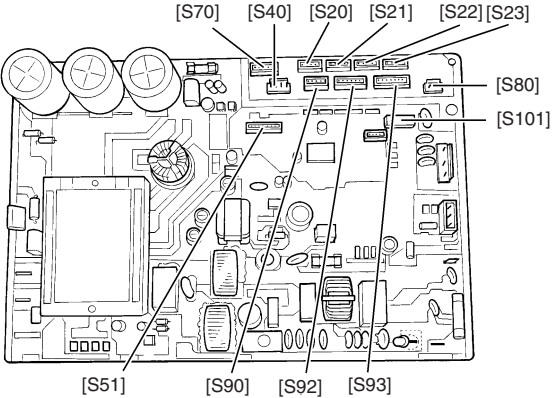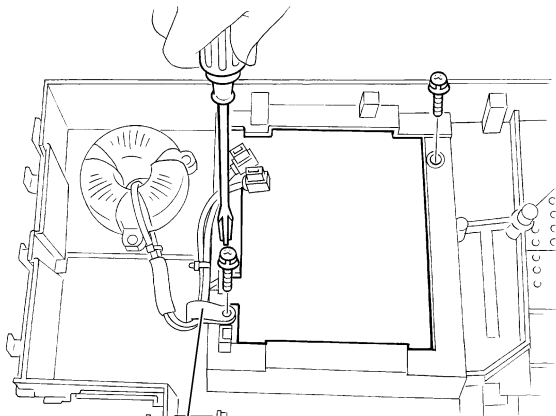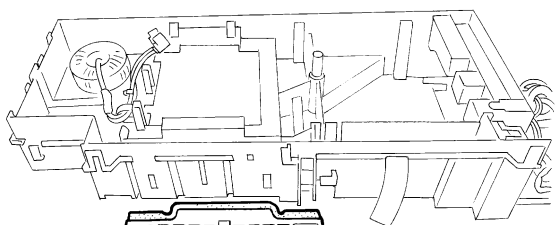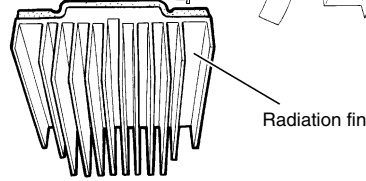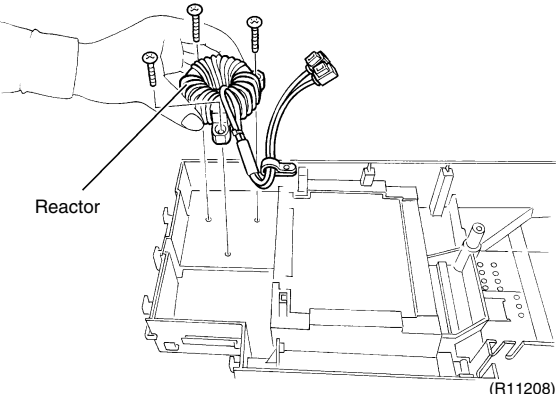Step	Procedure	Points
7	<p>Remove the 2 screws of the radiation fin.</p>  <p>(R12906)</p>  <p>Clamp for reactor harness (R11207)</p>   <p>(R5553)</p>	<p>■ Refer to page 81 for detail.</p> <p>■ When reassembling, make sure to use the silicon grease.</p> <p>■ Silicon grease Part No.: 1172698</p>
8	<p>Remove the 3 screws of the reactor.</p>  <p>Reactor (R11208)</p>	

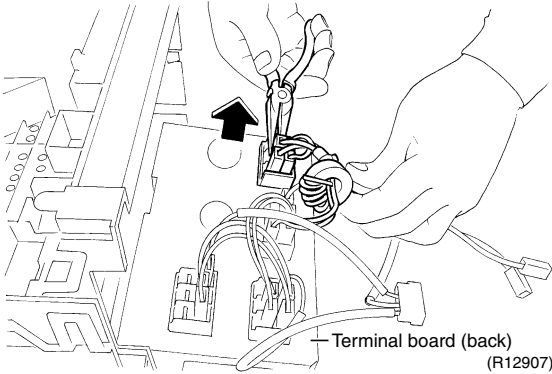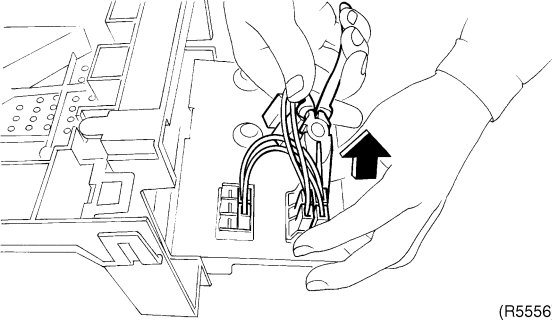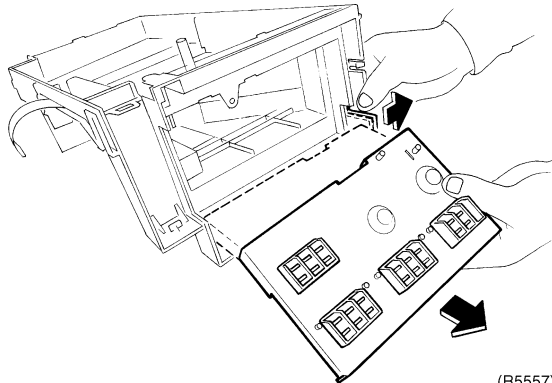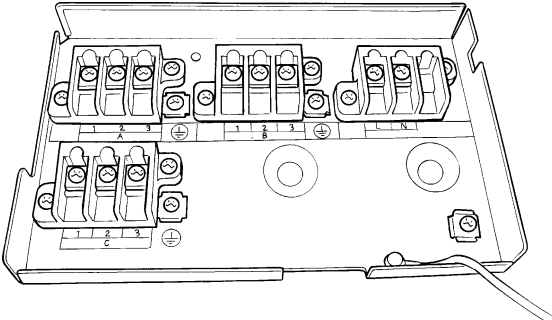Step	Procedure	Points
<p>3. Remove the terminal board.</p> <p>1 Disconnect the wire harnesses from the back of the terminal board.</p> <p>2 Unfasten the hook of the electrical box and remove the terminal board.</p>	 <p>Terminal board (back) (R12907)</p>  <p>(R5556)</p>  <p>(R5557)</p>  <p>(R5558)</p>	




# 1.4 Removal of Outdoor Fan / Fan Motor

**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the 2 screws of the fan motor fixing plate.	<p>Fan motor fixing plate (R12908)</p>	<ul style="list-style-type: none"> <li>■ Remove the outer panels and plates.</li> <li>■ Remove the electrical box.</li> </ul>
2	Remove the fan motor fixing plate.	<p>(R5561)</p>	<p>(R5564)</p> <ul style="list-style-type: none"> <li>■ When reassembling, fit the lower hooks.</li> <li>■ Nut size: M6</li> </ul>
3	Remove the nut and remove the outdoor fan.	<p>Outdoor fan (R12909)</p> <p>D-cut ▼ mark Nut (R14592)</p>	<p>10 mm (R12236)</p> <ul style="list-style-type: none"> <li>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</li> </ul>

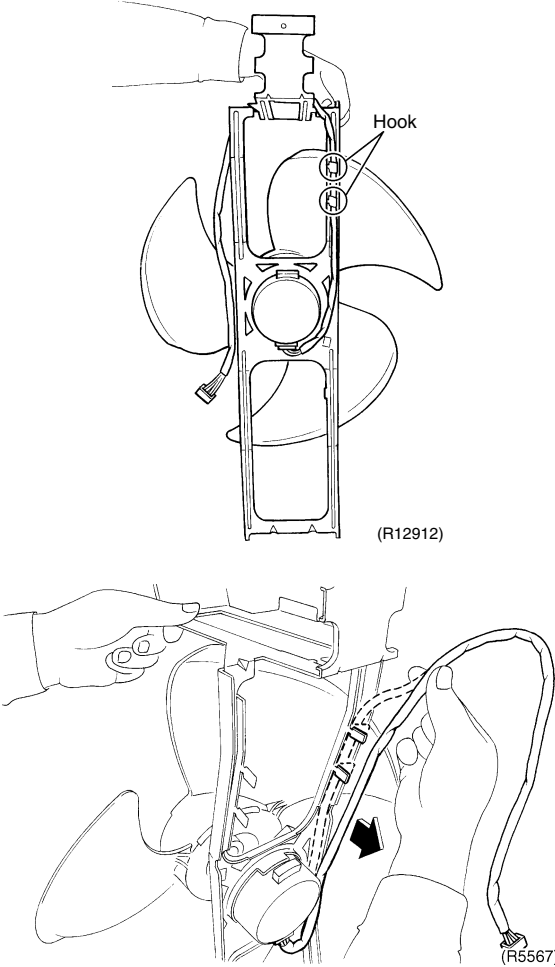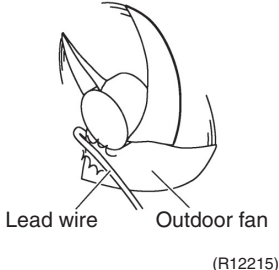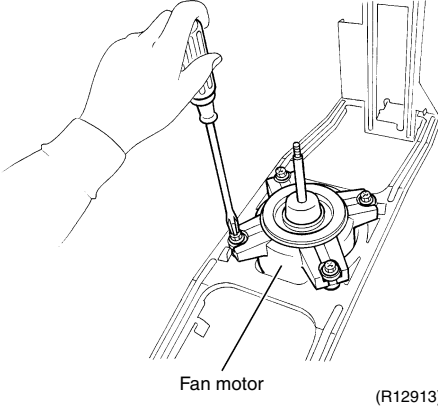Step	Procedure	Points
4	Open the 2 hooks and release the fan motor lead wire.	<ul style="list-style-type: none"> <li>■ When reassembling, put the fan motor lead wire through the back of the fan motor so as not to be entangled with the outdoor fan.</li> </ul>
	 <p>(R12912)</p> <p>(R5567)</p>	 <p>(R12215)</p>
5	Remove the 4 screws and remove the fan motor.	
	 <p>Fan motor</p> <p>(R12913)</p>	

# 1.5 Removal of Sound Blankets




**Procedure**







**Warning**



Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the right side panel.	<p>Right side panel</p> <p>(R12915)</p>	<ul style="list-style-type: none"> <li>■ Remove the outer panels and plates.</li> <li>■ Remove the electrical box.</li> </ul>
2. Remove the 2 screws on the back.	<p>(R5571)</p>	
3. Remove the protection rubber. There is a hook on the back.	<p>Protection rubber</p> <p>(R5572)</p>	

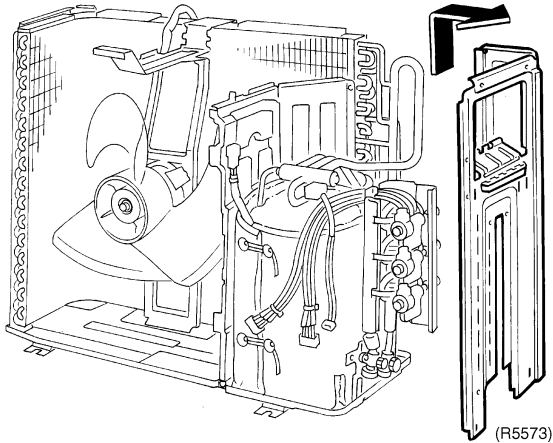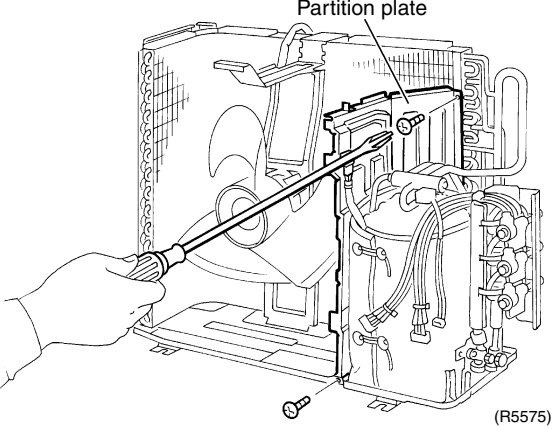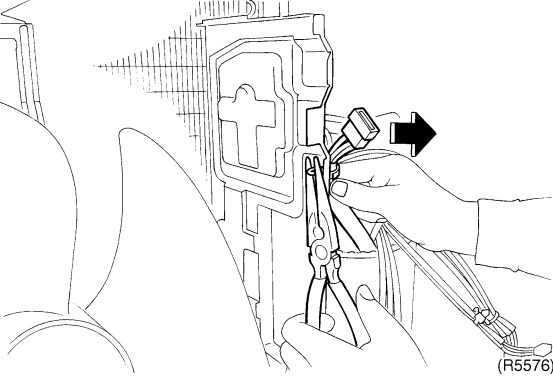Step	Procedure	Points
4	<p>Lift up and remove the right side panel.</p>  <p>(R5573)</p>	
2.	<p>Remove the partition plate.</p> <p>1 Remove the 2 screws of the partition plate.</p>  <p>Partition plate</p> <p>(R5575)</p> <p>2 Detach the clamp of the relay harness for the compressor.</p>  <p>(R5576)</p>	

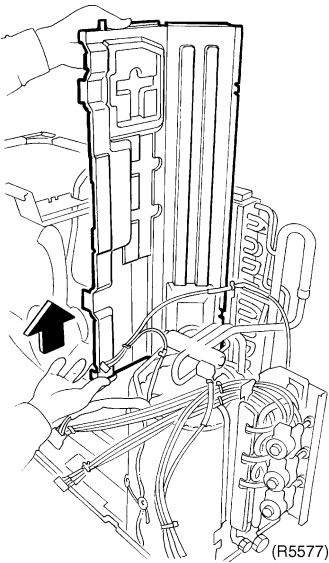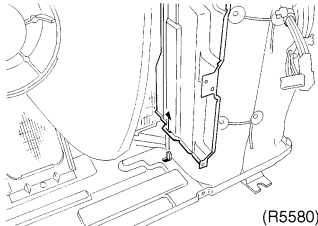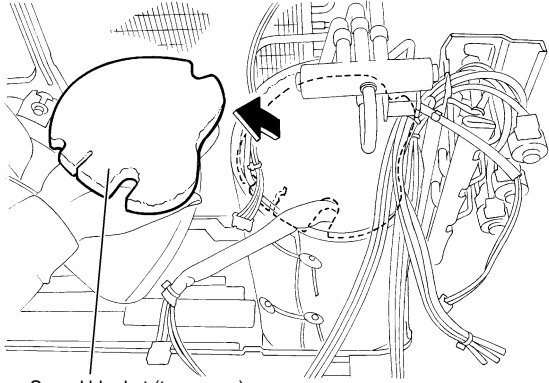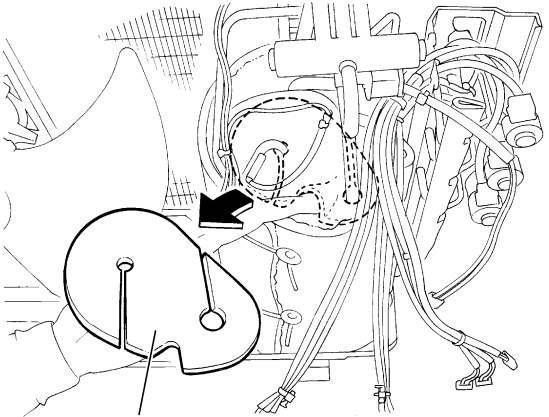Step	Procedure	Points
3	<p>Lift up and remove the partition plate.</p>  <p>(R5577)</p>	 <p>(R5580)</p> <ul style="list-style-type: none"> <li>When reassembling, make sure to fit the lower hook of the partition plate.</li> </ul>
3.	<p>Remove the sound blanket.</p>	<ul style="list-style-type: none"> <li>Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.</li> </ul>
1	<p>Remove the sound blanket (top upper).</p>  <p>Sound blanket (top upper) (R5579)</p>	
2	<p>Remove the sound blanket (top inner).</p>  <p>Sound blanket (top inner) (R5582)</p>	

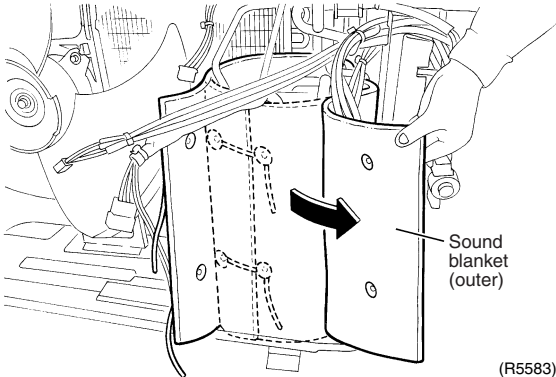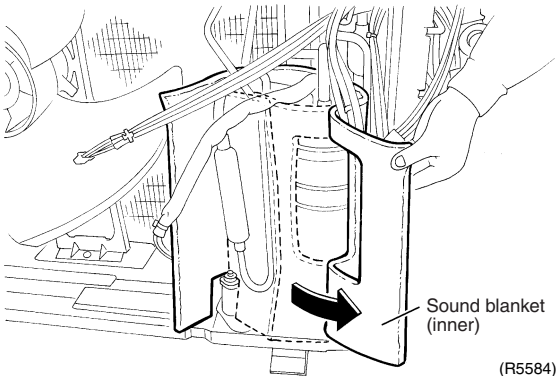

Step	Procedure	Points
3	<p>Untie the fixing strings to open the sound blanket (outer) and pull it out.</p>  <p>(R5583)</p>	
4	<p>Open the sound blanket (inner) and pull it out.</p>  <p>(R5584)</p>	



# 1.6 Removal of Coils / Thermistors





**Procedure**





**Warning**

Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

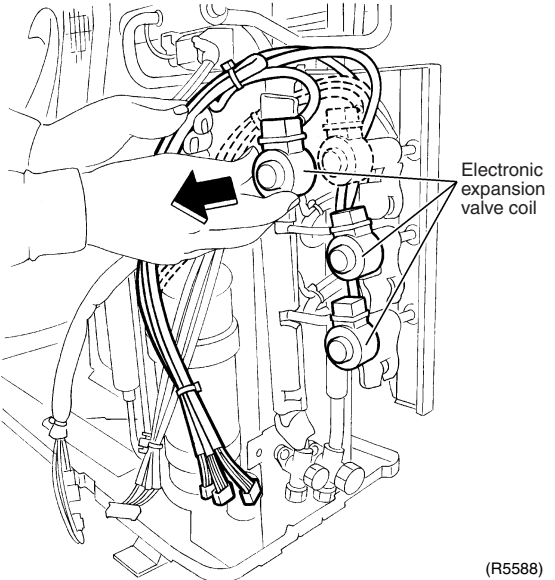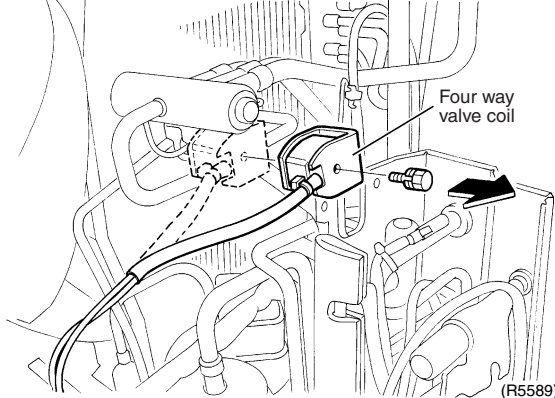Step	Procedure	Points
1. Remove the electronic expansion valve coils.	 <p>(R5588)</p>	
1 Pull out the electronic expansion valve coils.		
2. Remove the four way valve coil.	 <p>(R5589)</p>	
1 Remove the 1 screw to remove the four way valve coil.		

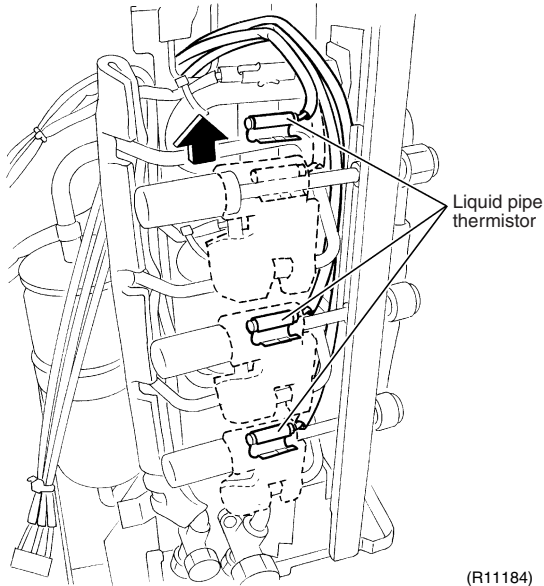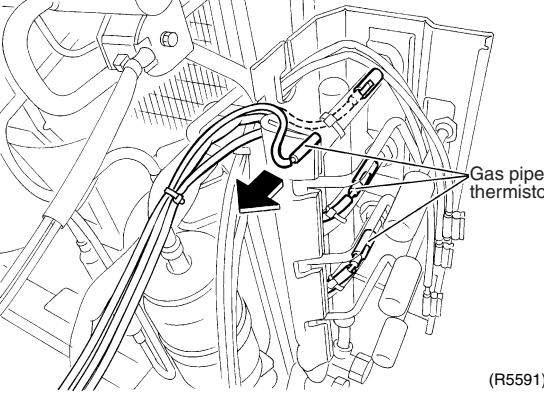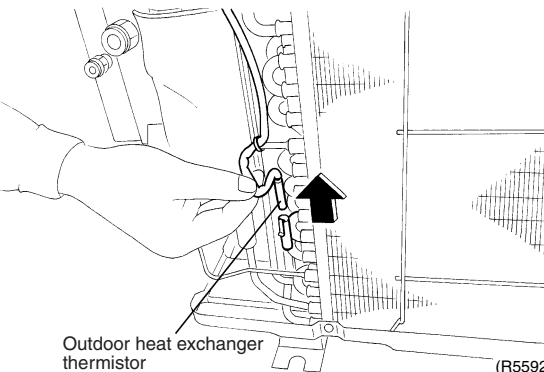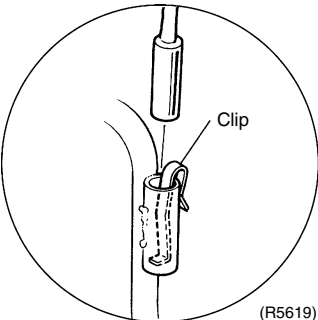Step	Procedure	Points
<p>3. Remove the thermistors.</p>	<p>1 Open the putty and remove the liquid pipe thermistors.</p>  <p>(R11184)</p> <p>2 Pull out the gas pipe thermistors.</p>  <p>(R5591)</p> <p>3 Pull out the outdoor heat exchanger thermistor.</p>  <p>(R5592)</p>	<ul style="list-style-type: none"> <li>■ When reassembling, meet the edge of the thermistor and the fixture.</li> </ul>  <p>(R5619)</p> <ul style="list-style-type: none"> <li>■ Be careful not to lose the clip.</li> </ul>

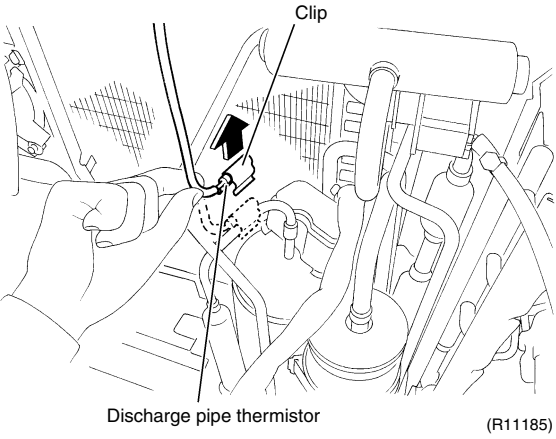
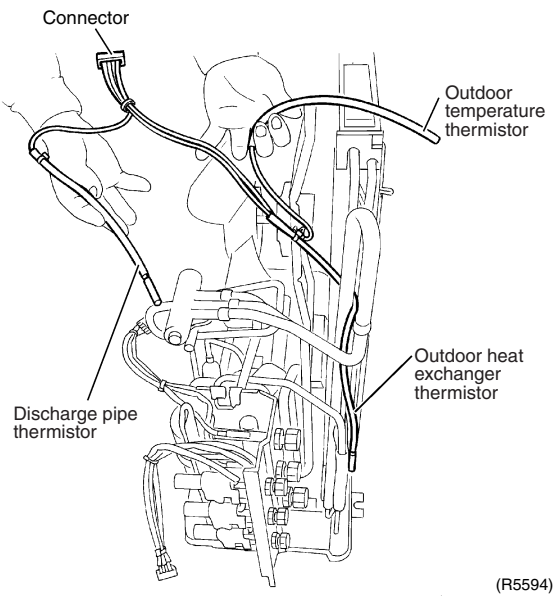
Step	Procedure	Points
4	<p>Remove the discharge pipe thermistor.</p> 	<ul style="list-style-type: none"> <li>■ When reassembling, meet the edge of the thermistor and the fixture.</li> </ul>
5	<p>Remove the assembly of thermistors.</p> 	

# 1.7 Removal of Distributor

**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

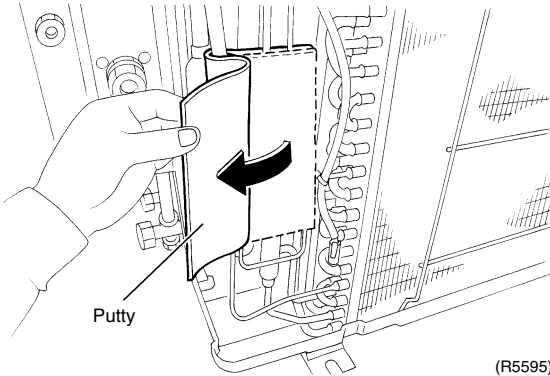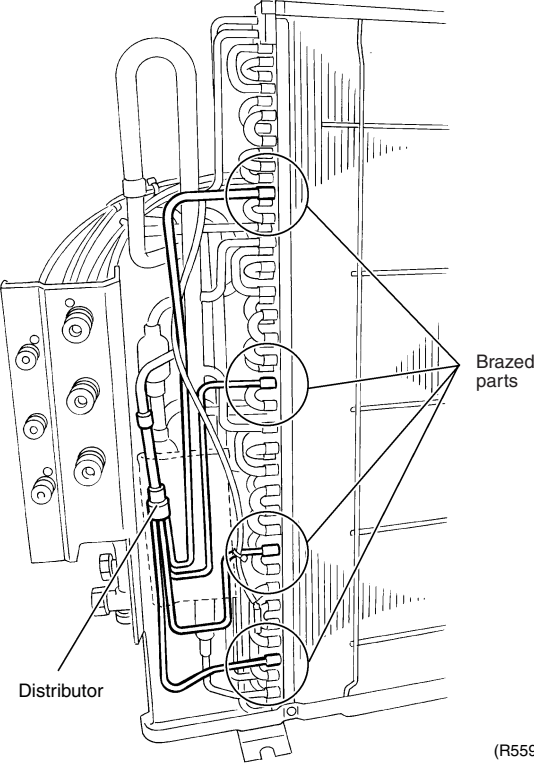Step	Procedure	Points
1	<p>Remove the putty.</p>  <p>(R5595)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant gas is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>		
2	<p>Heat up and disconnect the brazed parts to remove the distributor.</p>  <p>(R5596)</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>		<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

# 1.8 Removal of Four Way Valve

**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.





Step	Procedure	Points
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant gas is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>	<p style="text-align: right;">Four way valve coil (R5589)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p>
<p>1 Remove the 1 screw to remove the four way valve coil.</p>	<p style="text-align: right;">(a) (R14067)</p>	<p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p>
<p>2 Heat up the 4 brazed part of the four way valve. First, disconnect the part (a).</p>	<p style="text-align: right;">(b) (R14068)</p>	<p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
<p>3 Disconnect the part (b).</p>	<p style="text-align: right;">(c) (d) (R14069)</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>	<p style="text-align: right;">(c) (d) (R14069)</p>	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

# 1.9 Removal of Compressor





**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

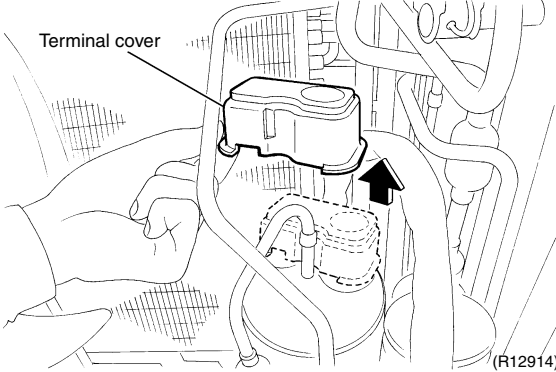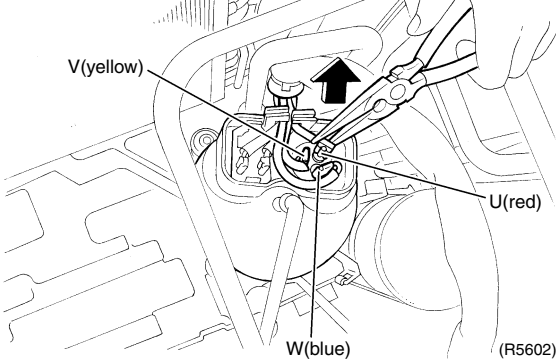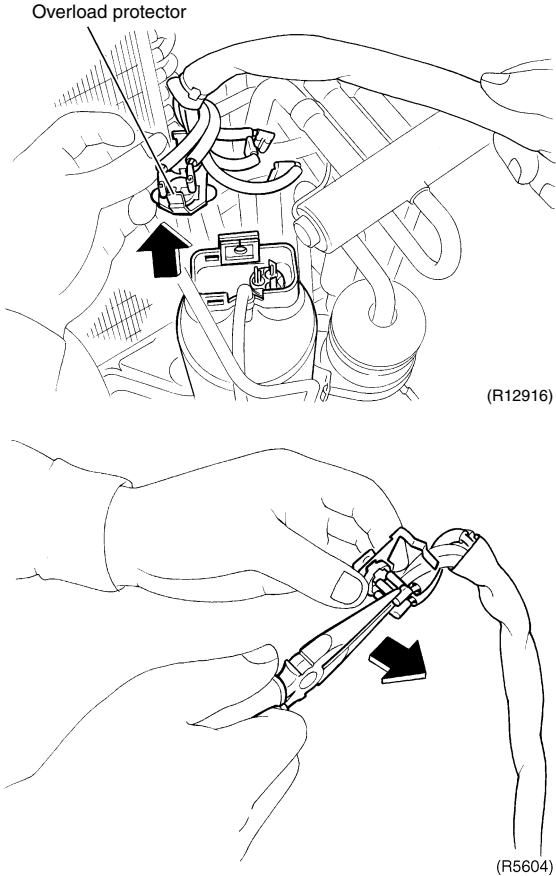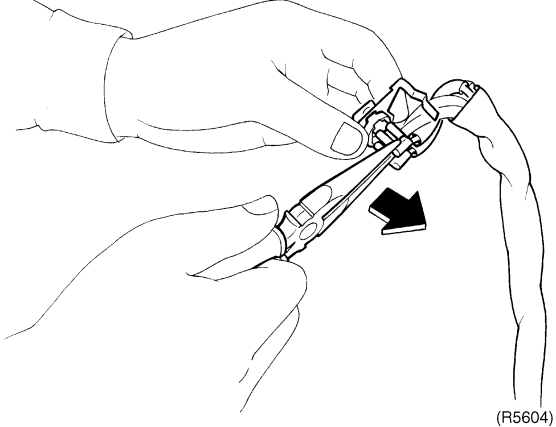Step	Procedure	Procedure	Points
1	Remove the terminal cover.	 <p>(R12914)</p>	
2	Disconnect the compressor lead wires.	 <p>(R5602)</p>	
3	Detach the overload protector.	 <p>(R12916)</p>  <p>(R5604)</p>	

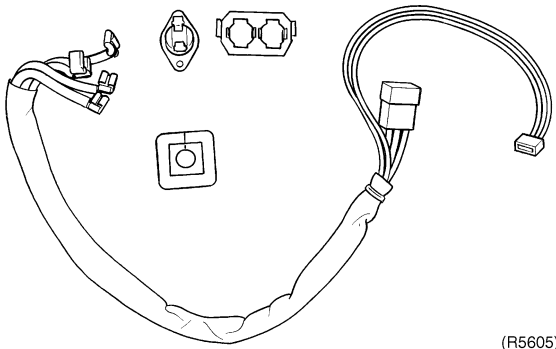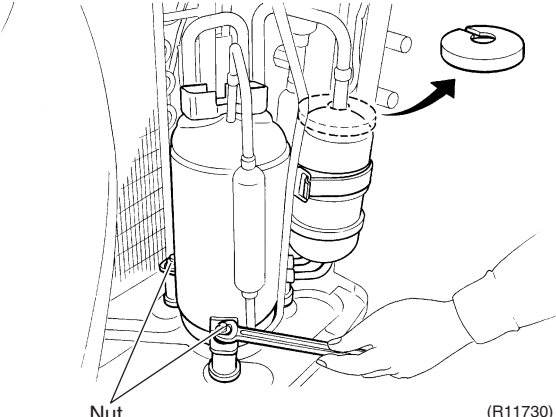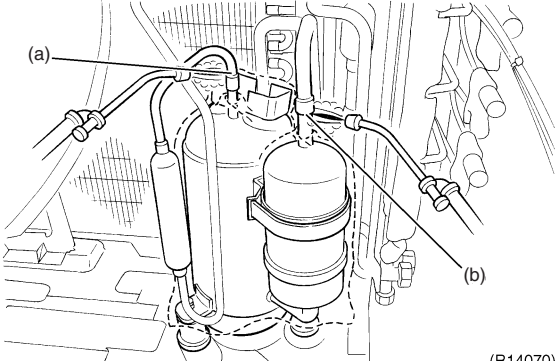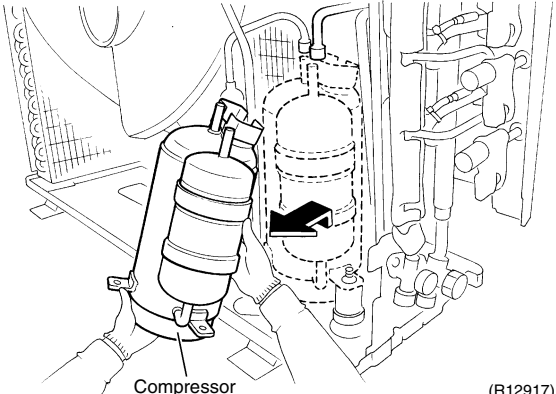

Step	Procedure	Points
<p>4 Remove the putty. 5 Remove the 2 nuts.</p>	 <p>(R5605)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Warning</b> Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
<p>6 Heat up the brazed part of the discharge side and disconnect the part (a). 7 Heat up the brazed part of the suction side and disconnect the part (b). 8 Lift the compressor up to remove.</p>	 <p>Nut (R11730)</p>  <p>(R14070)</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> <li>Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin.</li> </ul>	 <p>Compressor (R12917)</p>	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>



## 2. Outdoor Unit - 80/90 Class

Note: The illustrations are for heat pump models as representative.




### 2.1 Removal of Outer Panels




Procedure









**Warning**



Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

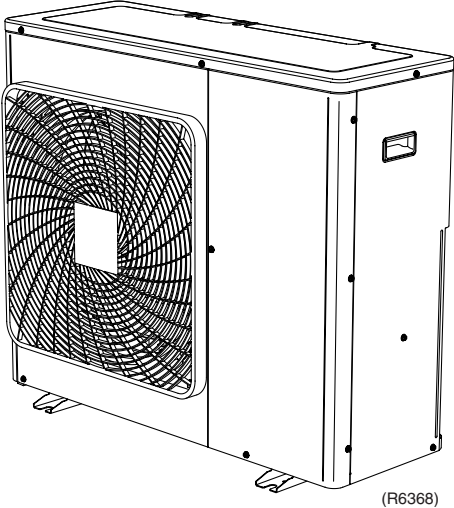
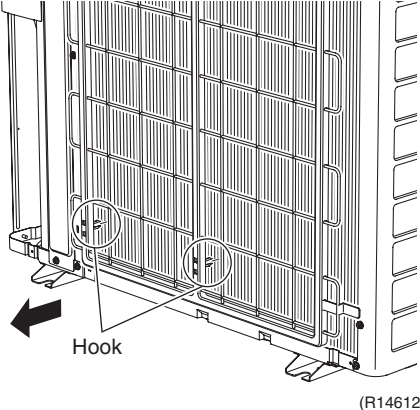
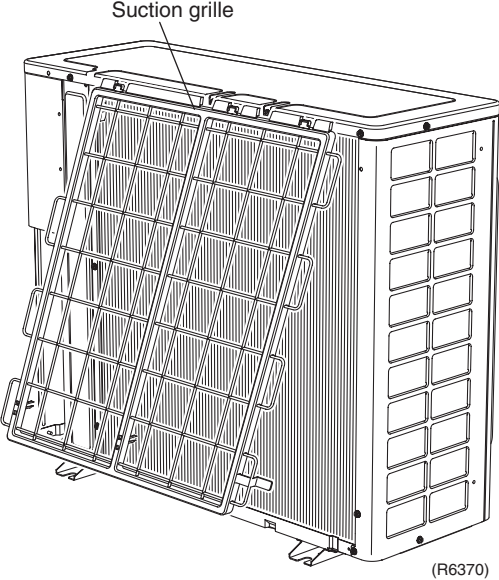
Step	Procedure	Procedure	Points
1	External appearance	 <p>(R6368)</p>	
1	<p>1. Remove the suction grille.</p> <p>1 Release the 2 hooks at the bottom first.</p>	<p>Rear side</p>  <p>Hook</p> <p>(R14612)</p>  <p>Suction grille</p> <p>(R6370)</p>	<p>■ The hooks are secured in the clearances of the heat exchanger fins.</p>

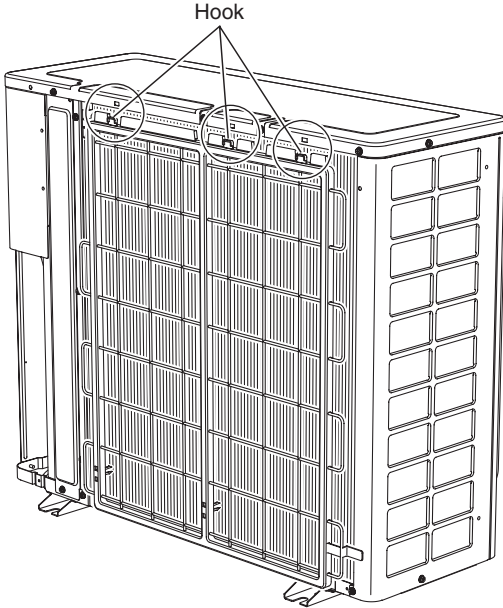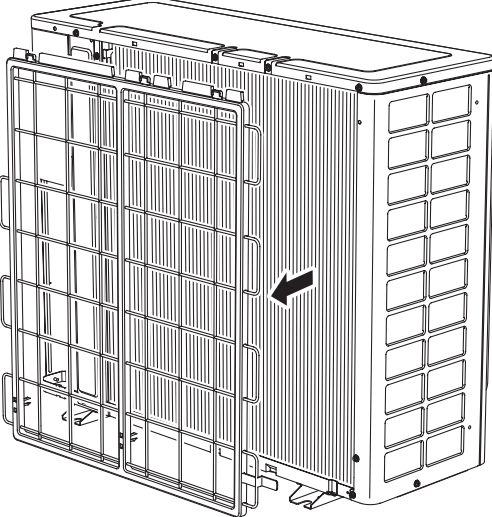
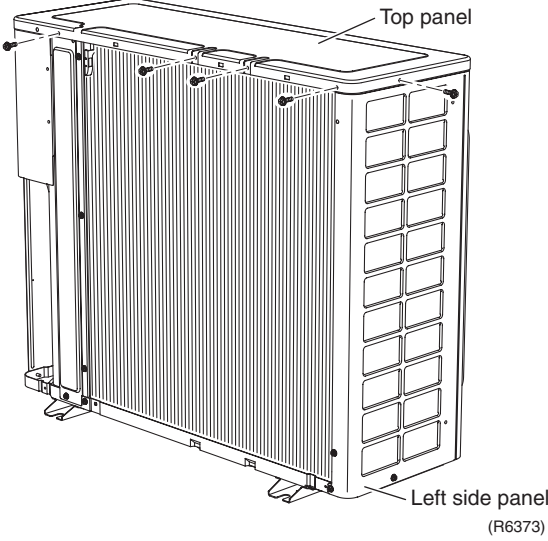
Step	Procedure	Points
2	<p>Slide the suction grille downward to release the 3 top hooks.</p>  <p>(R14613)</p>	
3	<p>Remove the suction grille.</p>  <p>(R6372)</p>	
1	<p>2. Remove the top panel.</p> <p>1 Remove the 4 screws on the back and the 1 screw on the left side panel.</p>  <p>(R6373)</p>	

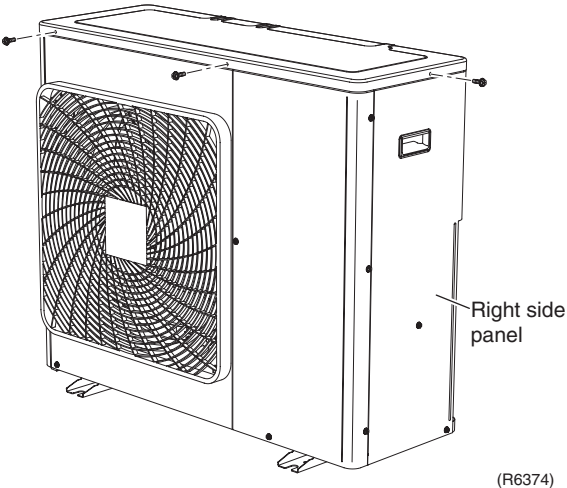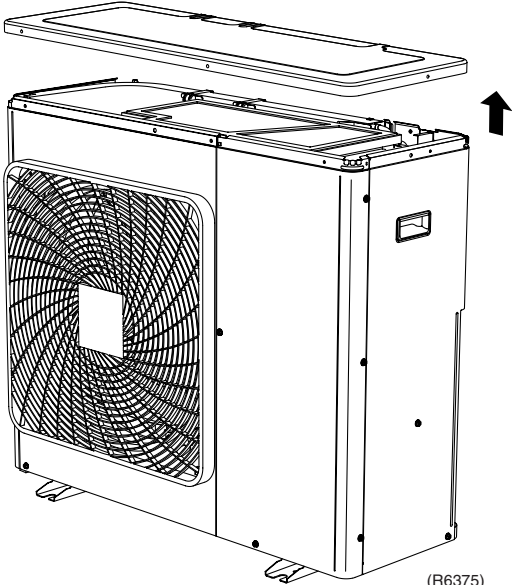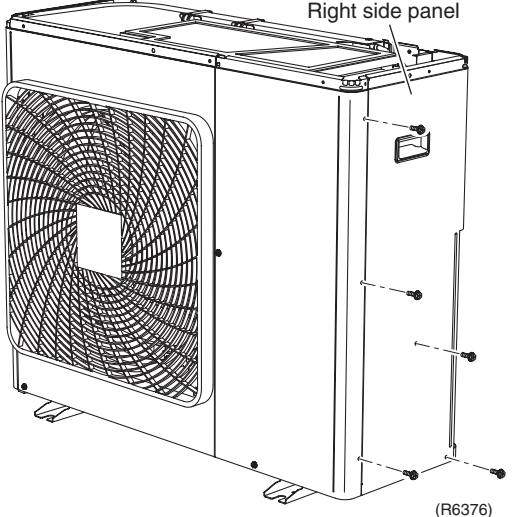Step	Procedure	Points
2	<p>Remove the 2 screws on the front and the 1 screw on the right side panel.</p>  <p style="text-align: right;">(R6374)</p>	
3	<p>Lift the top panel and remove it.</p>  <p style="text-align: right;">(R6375)</p>	
3.	<p>Remove the right side panel.</p> <p>1 Remove the 5 screws.</p>  <p style="text-align: right;">(R6376)</p>	



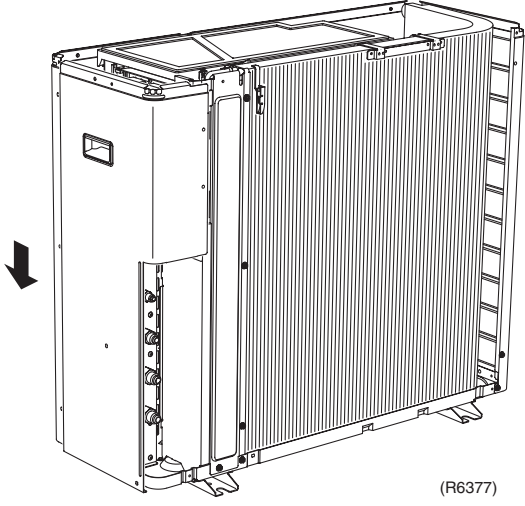
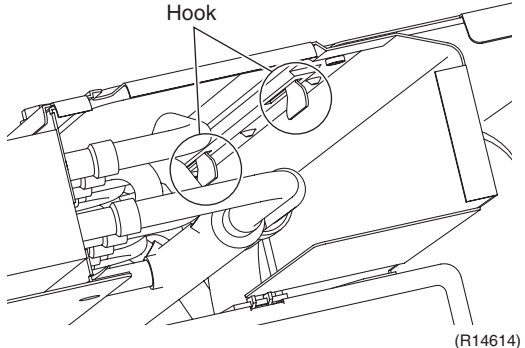
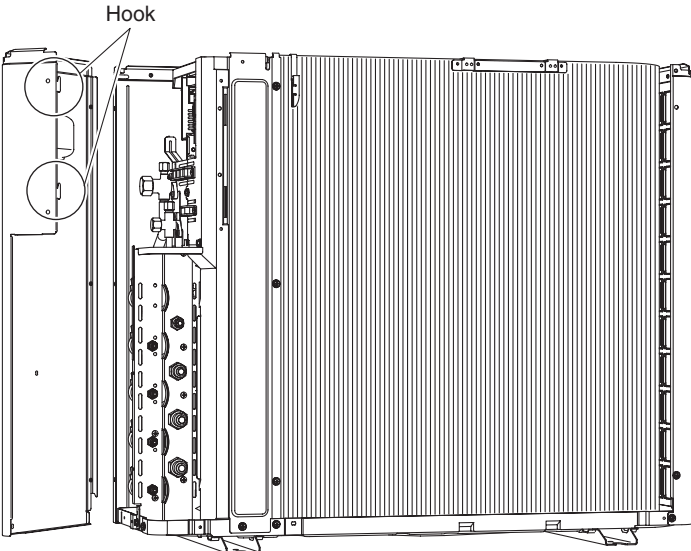
Step	Procedure	Points
2	<p data-bbox="199 217 459 342">Slide the right side panel downward to release the 2 hooks on the back side.</p>  <p data-bbox="957 723 1018 745">(R6377)</p>  <p data-bbox="683 808 735 831">Hook</p> <p data-bbox="970 1137 1042 1160">(R14614)</p>  <p data-bbox="638 1211 691 1234">Hook</p> <p data-bbox="1169 1769 1241 1792">(R14615)</p>	

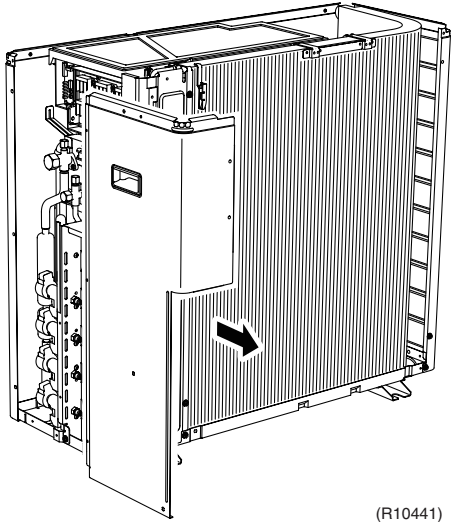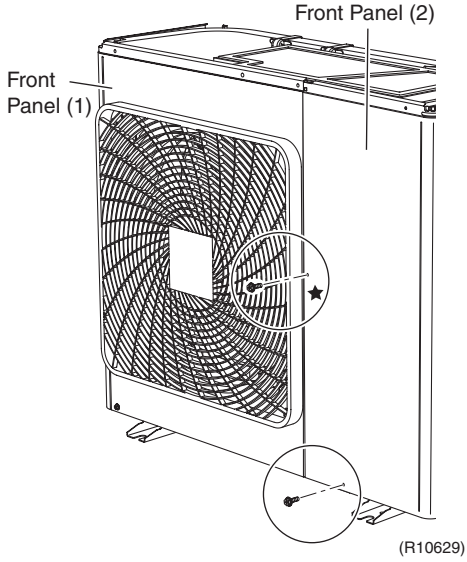Step	Procedure	Points
3	<p>Remove the right side panel.</p>  <p>(R10441)</p>	
4.	<p>Remove the front panel (2).</p> <p>1 Remove the 2 screws.</p>  <p>(R10629)</p>	<p>★ This screw is M5 × 16</p>

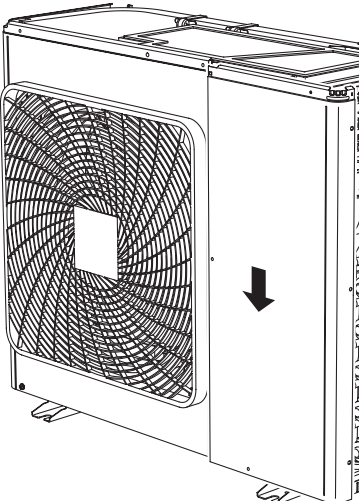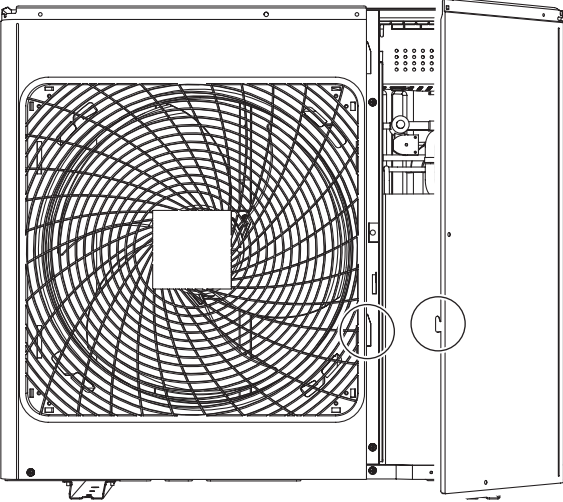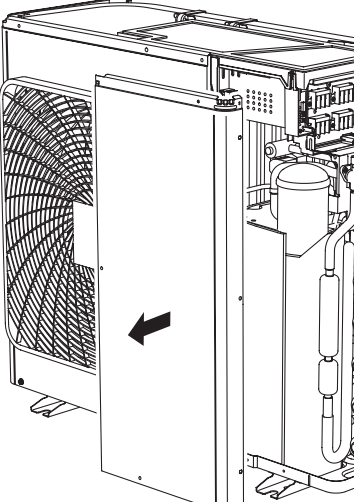Step	Procedure	Points
<p>2</p> <p>Slide the front panel (2) downward to release the hook.</p>	 <p>(R10374)</p>  <p>(R6383)</p>	
<p>3</p> <p>Remove the front panel (2).</p>	 <p>(R10375)</p>	


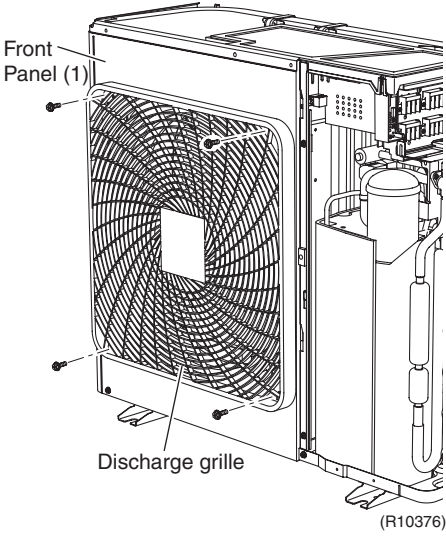
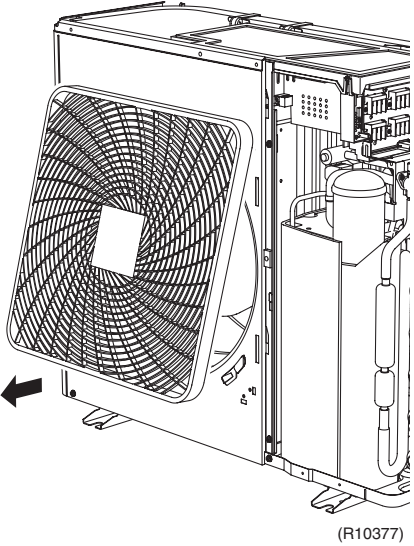
Step	Procedure	Points
5. Remove the front panel (1).		
1	Remove the 4 screws on the discharge grille. 	■ Remove the discharge grille and outdoor fan first to remove the front panel (1).
2	Pull the bottom of the discharge grille toward yourself. 	

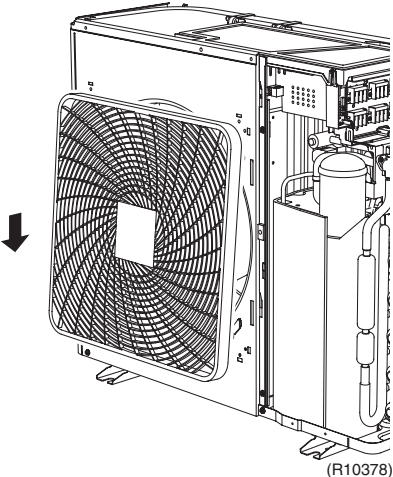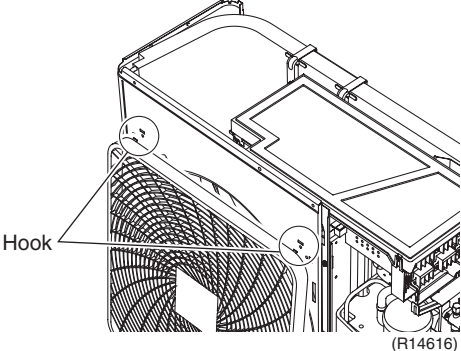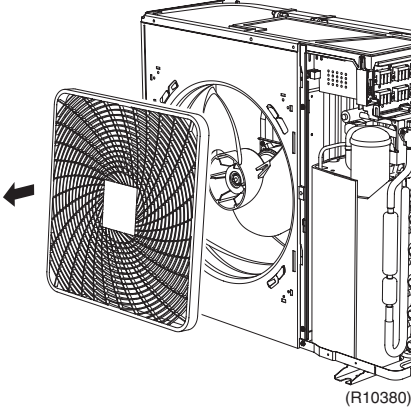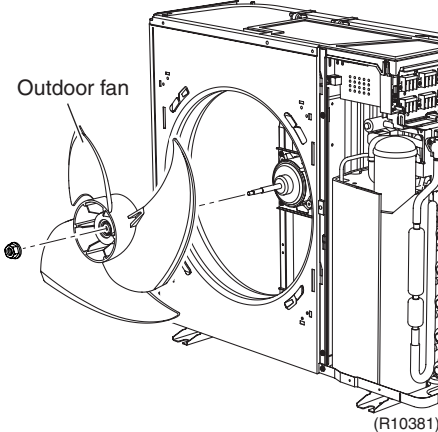
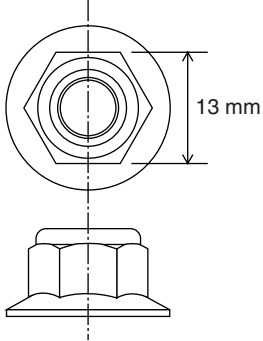




Step	Procedure	Procedure	Points
3	Slide the discharge grille downward to release the 2 hooks at the top.	 <p>(R10378)</p>  <p>Hook</p> <p>(R14616)</p>	
4	Remove the discharge grille.	 <p>(R10380)</p>	
5	Remove the nut and remove the outdoor fan.	 <p>Outdoor fan</p> <p>(R10381)</p>	<p>■ Nut size : M8</p>  <p>13 mm</p> <p>(R12301)</p> <p>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</p>








Step	Procedure	Points
6	Remove the 2 screws on the partition plate (1).	
7	Remove the screw at the bottom left of the front panel (1).	
8	Remove the screw at the bottom of the left side.	

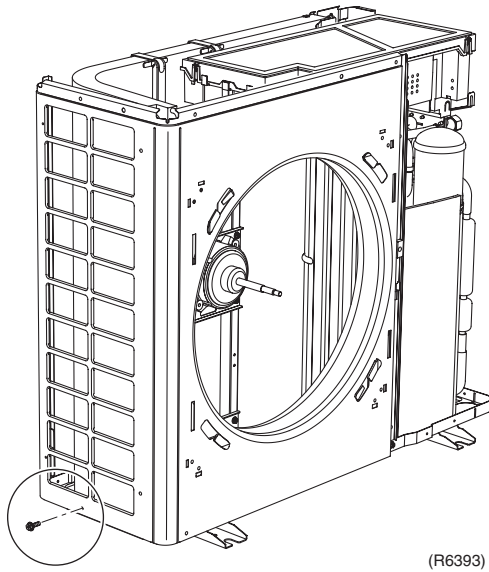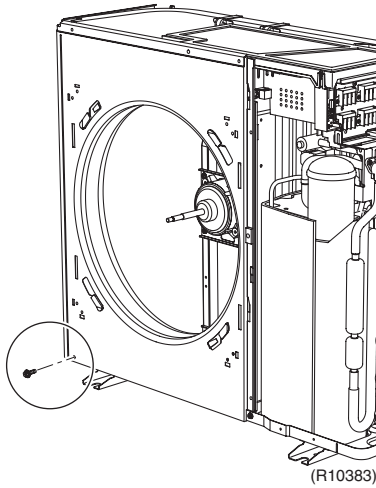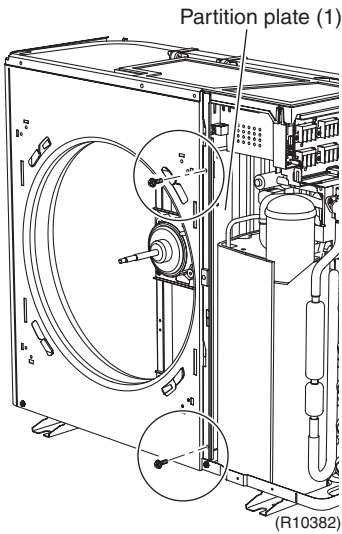

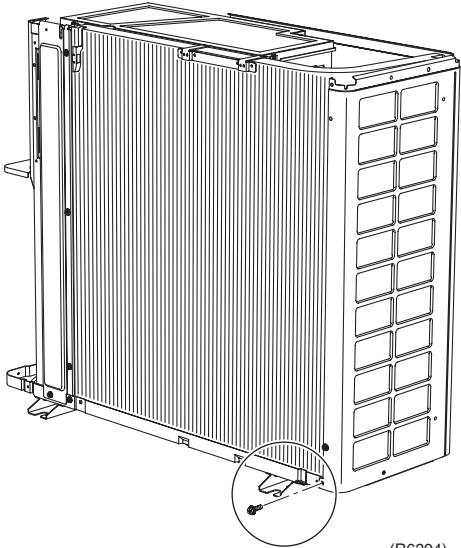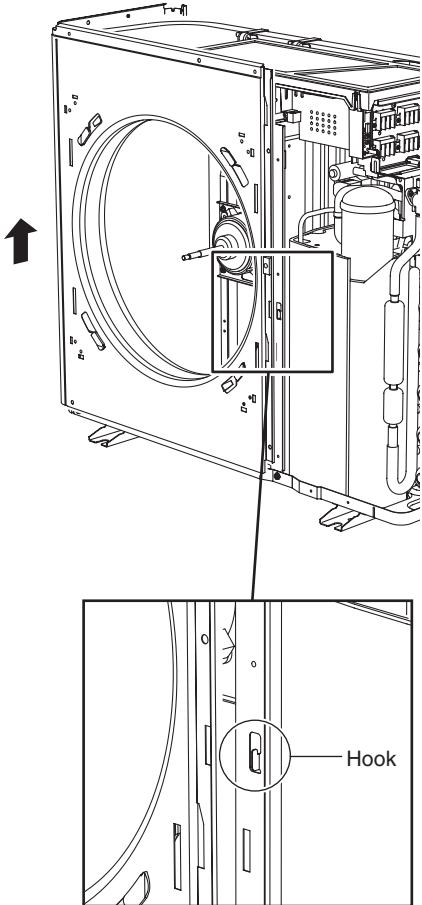
Step		Procedure	Points
9	Remove the screw at the bottom of the back side.	 <p>(R6394)</p>	
10	The front panel (1) has a hook. Lift the front panel (1).	 <p>(R10384)</p>	

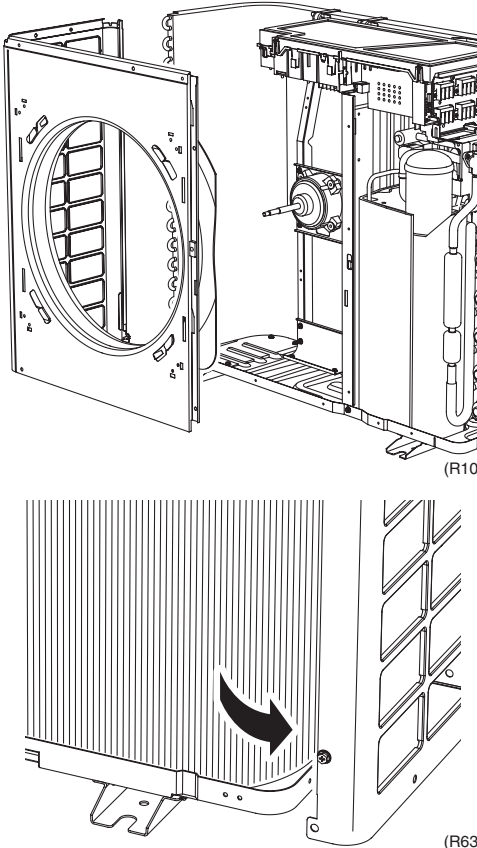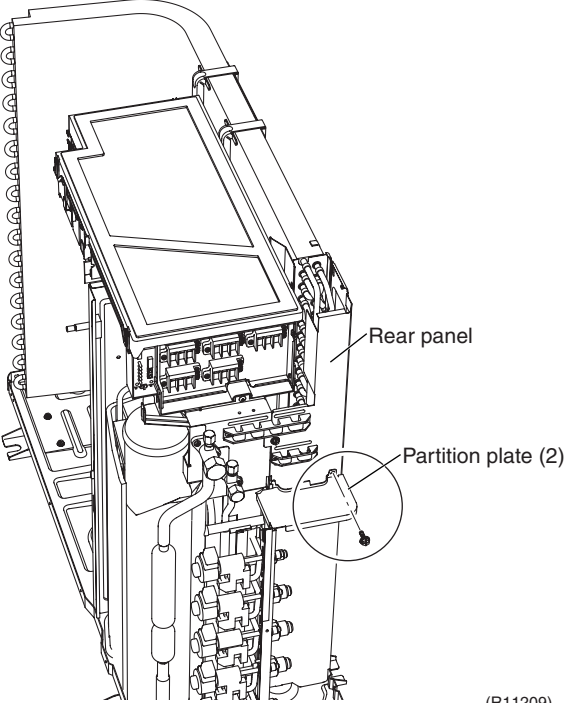Step	Procedure	Points
11	<p data-bbox="199 219 464 277">Remove the front panel (1).</p>  <p data-bbox="986 703 1054 725">(R10385)</p> <p data-bbox="986 1077 1046 1099">(R6396)</p>	<ul style="list-style-type: none"> <li data-bbox="1093 741 1449 831">■ Be sure to detach the front panel (1) carefully so as not to deform it.</li> </ul>
6.	<p data-bbox="135 1131 440 1153">Remove the rear panel.</p> <p data-bbox="135 1167 448 1225">1 Remove the screw on the partition plate (2).</p>  <p data-bbox="868 1514 975 1536">Rear panel</p> <p data-bbox="900 1630 1066 1653">Partition plate (2)</p> <p data-bbox="986 1883 1054 1906">(R11209)</p>	

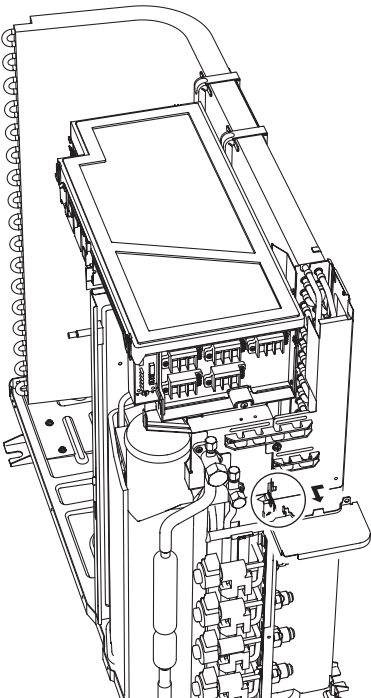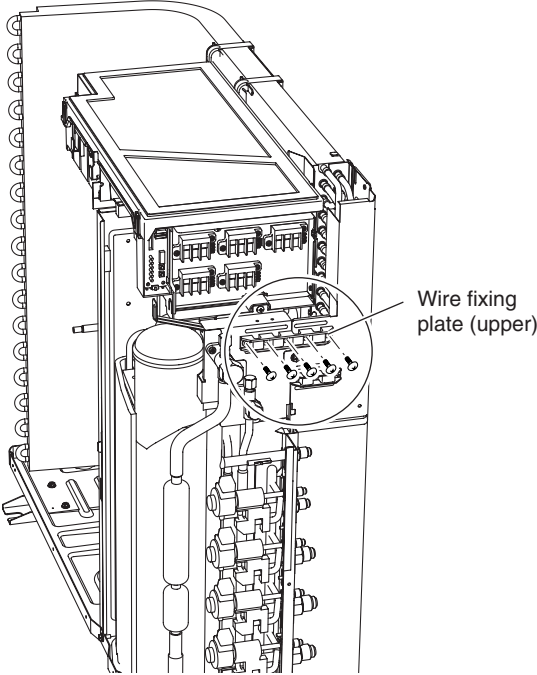
Step	Procedure	Points
2	Slide the partition plate (2) to the left and remove it.	
	 <p>(R11211)</p>	
3	Remove the 5 screws on the wire fixing plate (upper).	
	 <p>Wire fixing plate (upper)</p> <p>(R11210)</p>	

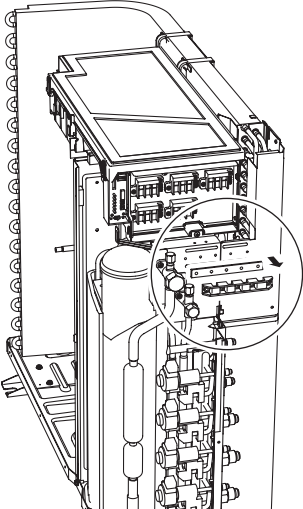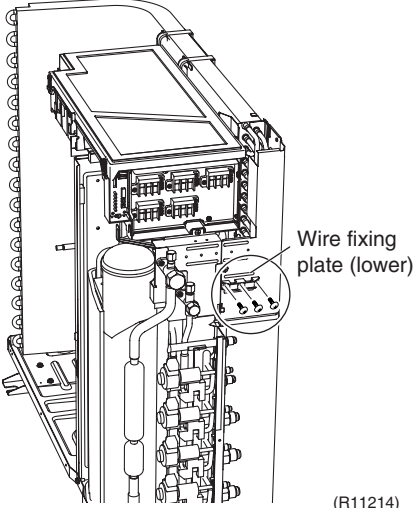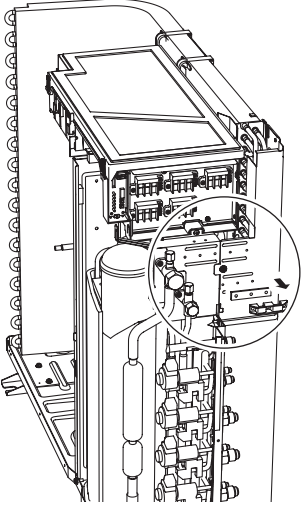Step	Procedure	Points
4	<p>Remove the wire fixing plate (upper).</p>  <p>(R11213)</p>	
5	<p>Remove the 3 screws on the wire fixing plate (lower).</p>  <p>(R11214)</p>	
6	<p>Remove the wire fixing plate (lower).</p>  <p>(R11215)</p>	


Step	Procedure	Points
7	Pull out the holder of the outdoor temperature thermistor.	<ul style="list-style-type: none"> <li>■ The holder is secured in the clearances of the outdoor heat exchanger fins.</li> </ul>
8	Release the thermistor wire from the groove	
9	Remove the 3 screws on the rear panel.	

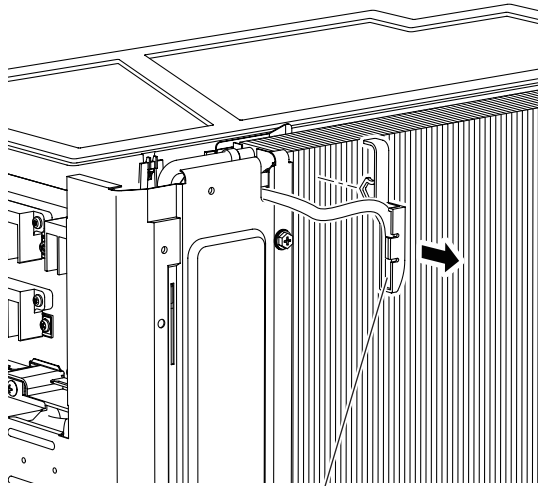

Outdoor temperature thermistor (R10388)

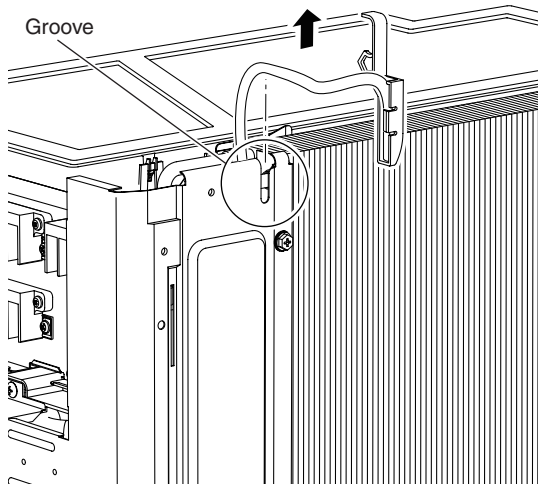


(R10389)

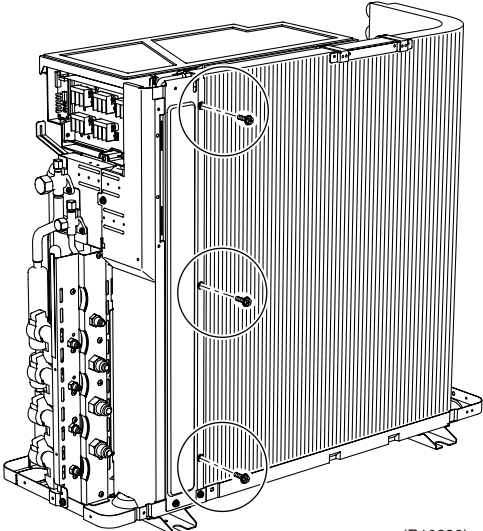


(R10390)


Step	Procedure	Points
10	Remove the screw on the bottom frame.	
11	Remove the screw on the stop valve mounting plate.	
12	Lift the rear panel upward to unfasten the 2 hooks.	

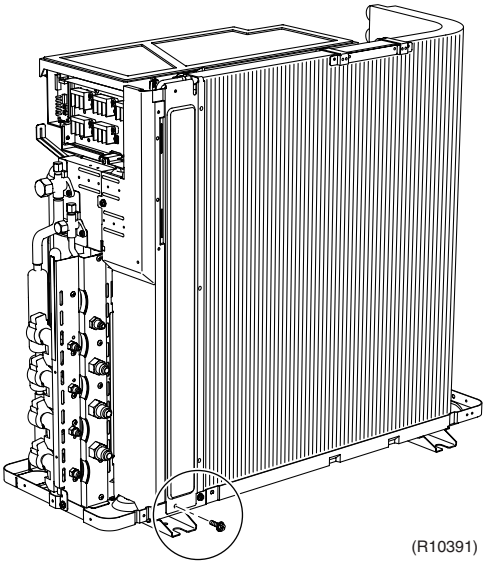


(R10391)

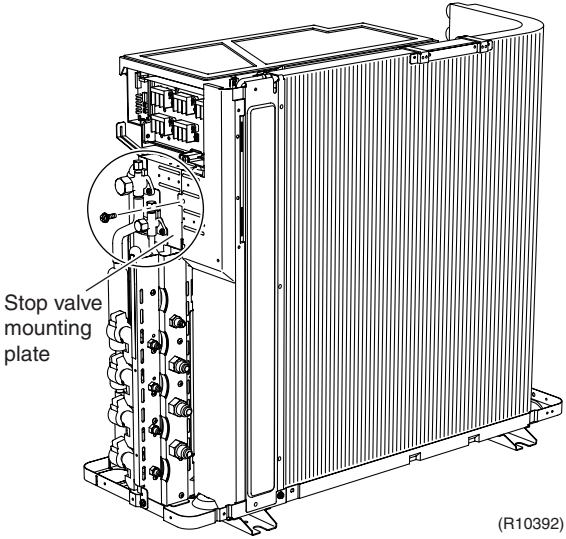

(R10392)

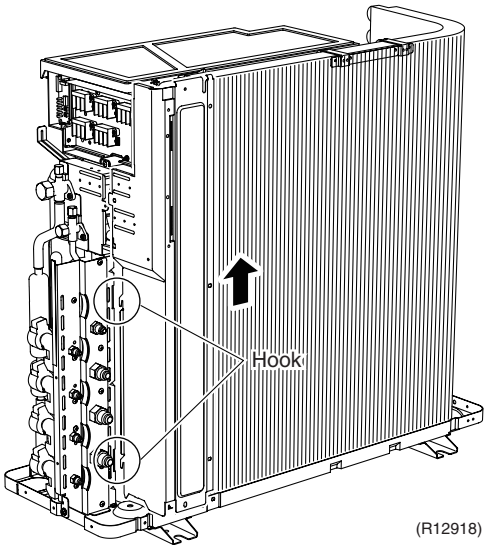

(R12918)

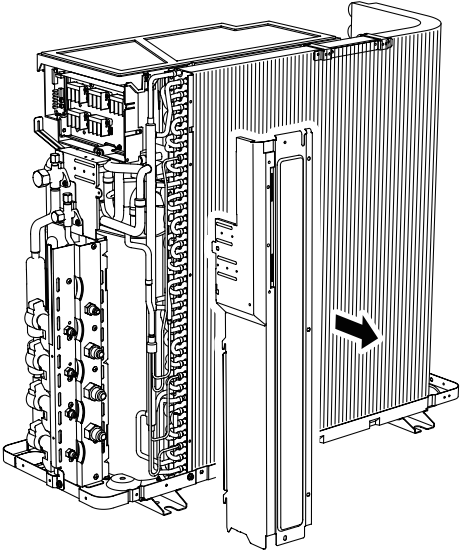Step	Procedure	Points
13	<p data-bbox="201 219 469 255">Remove the rear panel.</p>  <p data-bbox="948 819 1011 842">(R10394)</p>	






## 2.2 Removal of Electrical Box

### Procedure









### Warning




Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

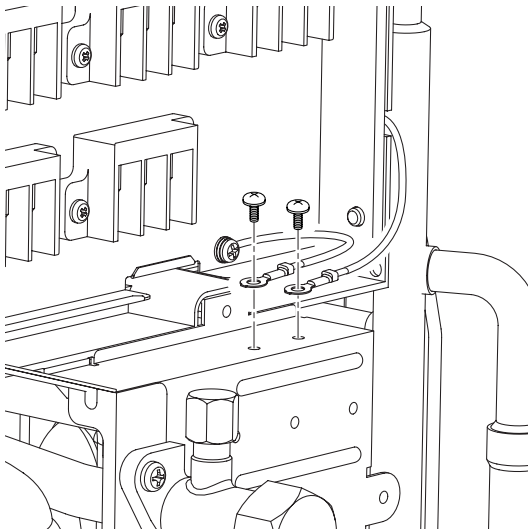
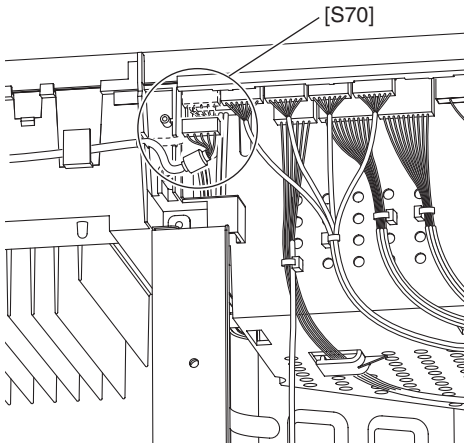
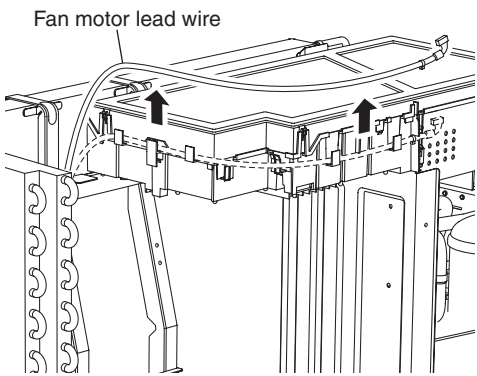
Step	Procedure	Procedure	Points
1	Remove the 2 screws to detach the earth wires.	 <p>(R10396)</p>	
2	Disconnect the connector for the fan motor [S70].	 <p>(R10397)</p>	
3	Release the fan motor lead wire.	 <p>(R12919)</p>	



Step	Procedure	Points
4	Disconnect the connector for the four way valve coil [S80].	<ul style="list-style-type: none"> <li>■ Pull out the clamp.</li> <li>■ The cooling only model has no harness for [S80].</li> </ul>
5	Disconnect the connectors for the electronic expansion valve coil. [S20] (white): room A [S21] (red): room B [S22] (blue): room C [S23] (yellow): room D	<ul style="list-style-type: none"> <li>■ Pull out the clamp.</li> <li>■ 5 room models also has [S24] (green) for room E.</li> </ul>
6	Disconnect the connector for the liquid pipe thermistor [S93].	<ul style="list-style-type: none"> <li>■ Pull out the clamp.</li> </ul>

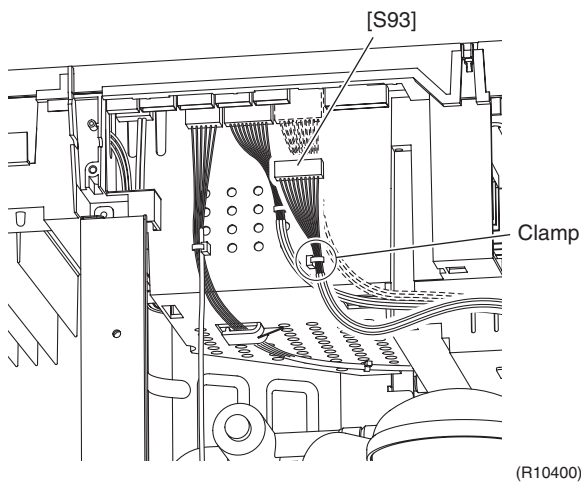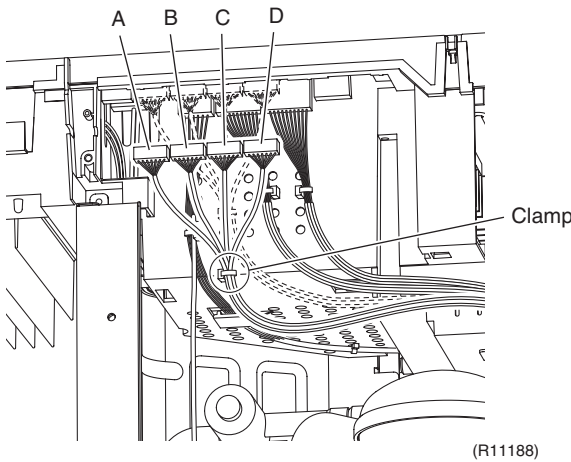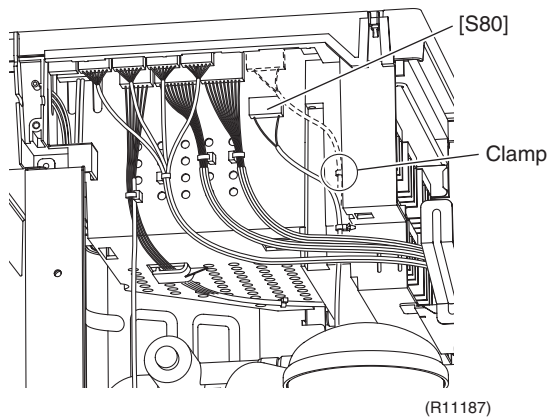

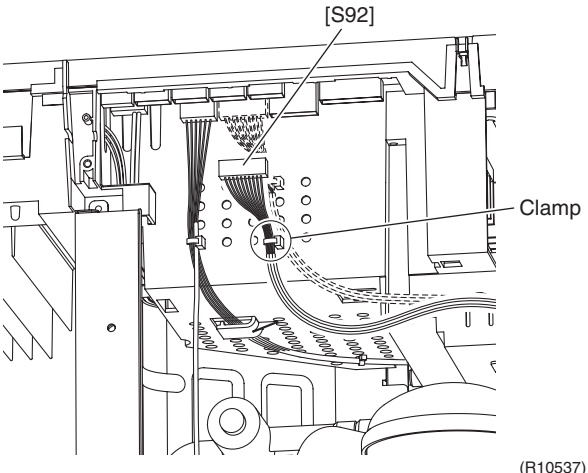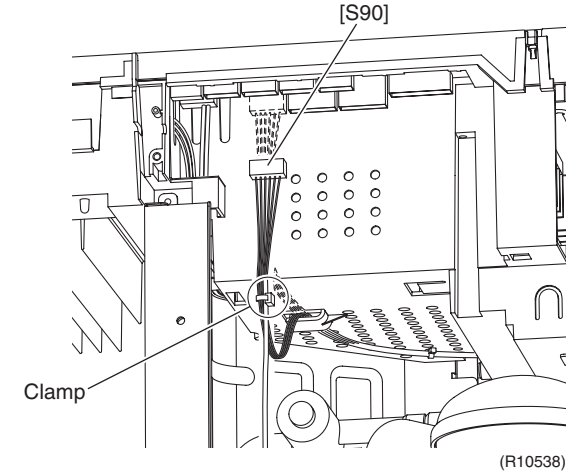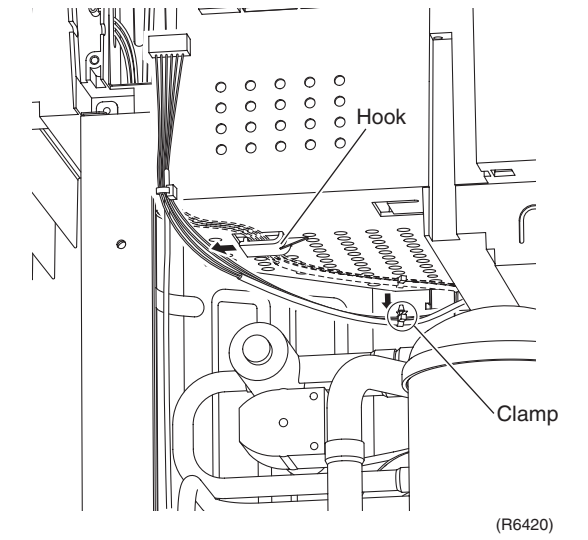Step	Procedure	Points
7	Disconnect the connector for the gas pipe thermistor [S92].	■ Pull out the clamp.
	 <p>(R10537)</p>	
8	Disconnect the connector for the thermistors [S90].	■ Pull out the clamp.
	 <p>(R10538)</p>	
9	The wire harness of the thermistor is hooked under the electrical box. Unhook it and pull out the clamp.	
	 <p>(R6420)</p>	

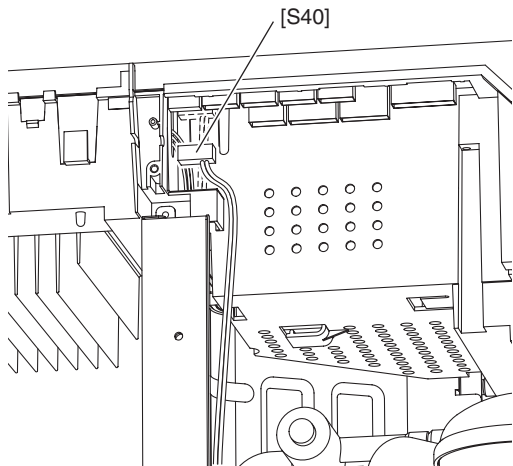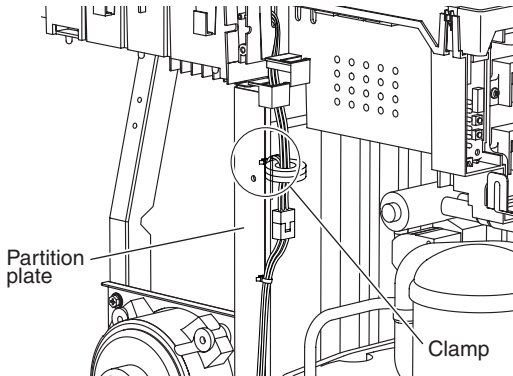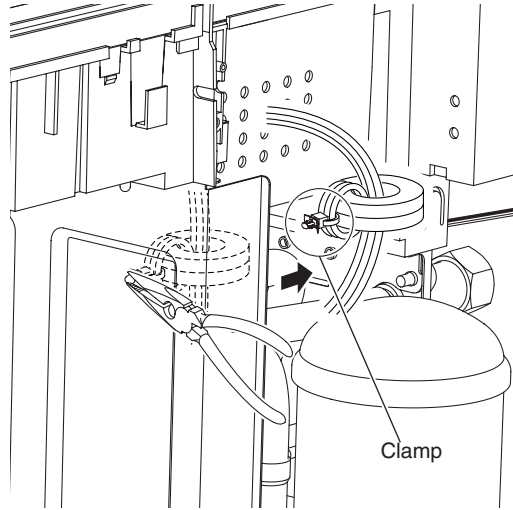Step	Procedure	Points
10	<p>Disconnect the connector for the overload protector [S40].</p>  <p>(R10539)</p>	
11	<p>The wire harness for the compressor is attached to the partition plate (1) by the clamp.</p>  <p>(R12904)</p>	
12	<p>Pull out the clamp with pliers.</p>  <p>(R6423)</p>	

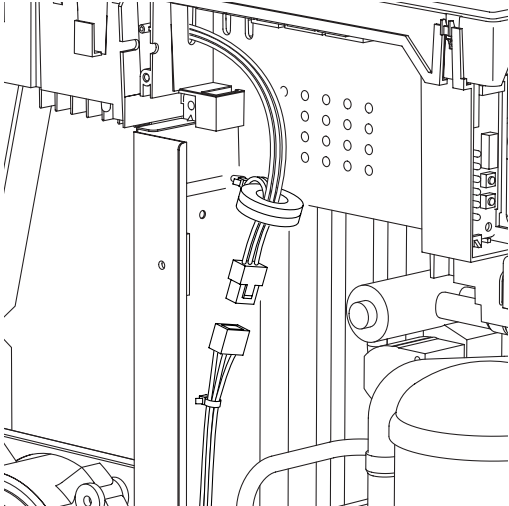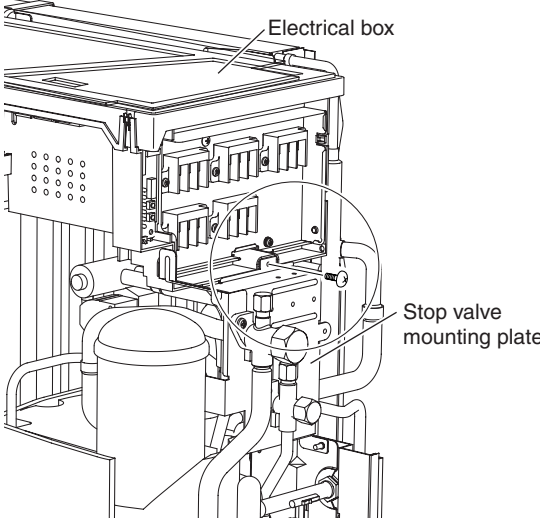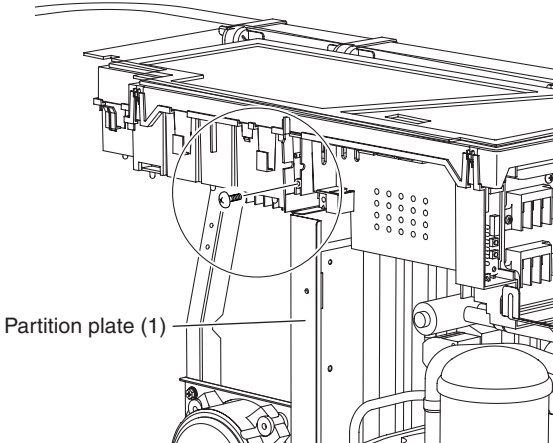Step	Procedure	Points
13	Disconnect the relay connector of the compressor.	
	 <p>(R6469)</p>	
14	Remove the screw on the stop valve mounting plate.	
	 <p>Electrical box</p> <p>Stop valve mounting plate</p> <p>(R10395)</p>	
15	Remove the screw on the partition plate (1).	
	 <p>Partition plate (1)</p> <p>(R6411)</p>	

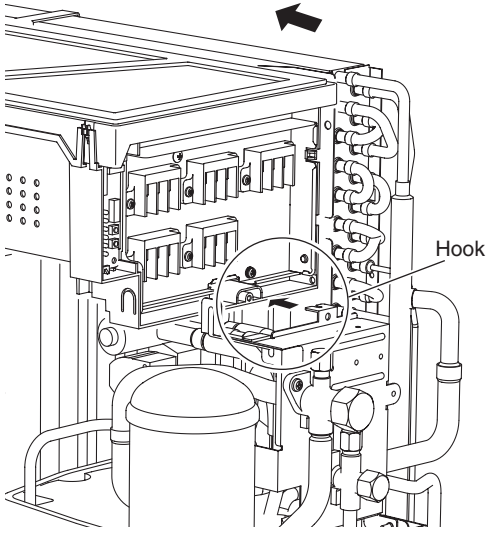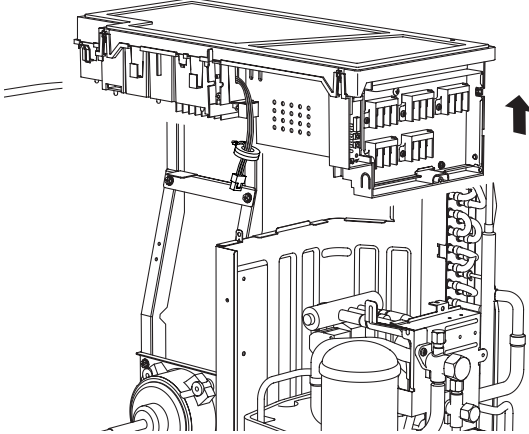Step	Procedure	Points
16	<p>Slide the electrical box leftward to unfasten the hook on the right side of the electrical box.</p>  <p>(R10401)</p>	
17	<p>Lift up the electrical box and remove it.</p>  <p>(R10402)</p>	






## 2.3 Removal of PCBs

**Procedure**






**Warning**

Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

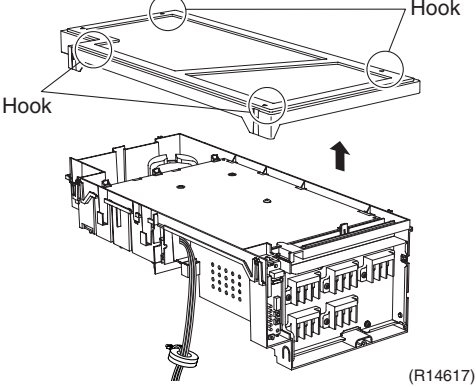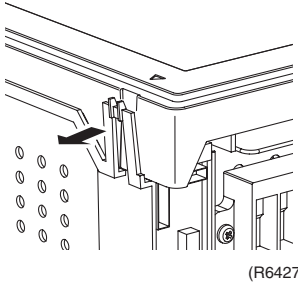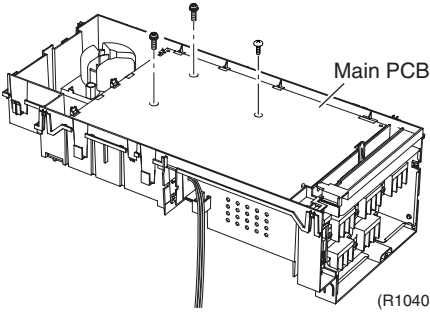
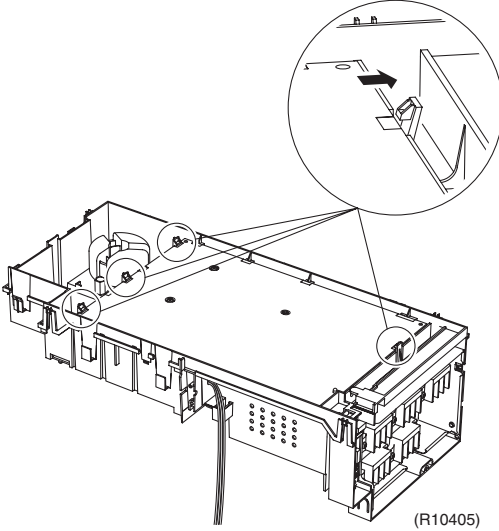
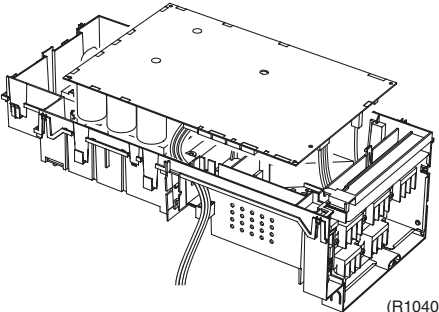
Step	Procedure	Points
1.	Remove the main PCB.	
1	Remove the cover of the electrical box.	<p>■ Release the 4 hooks. The hooks are marked with ▼.</p>  
2	Remove the 3 screws.	
3	Unfasten the 4 hooks.	
4	Lift up the main PCB.	
	  	

Step		Procedure	Points
5	Disconnect the connectors.	<p>(R10407)</p>	<ul style="list-style-type: none"> <li>■ [S51] [S101] : service monitor PCB</li> <li>■ [S10] : terminal board (transmission)</li> <li>■ [HR1] [HR2] : reactor</li> <li>■ [AC1] [AC2] : terminal board (power supply)</li> <li>■ [U] [V] [W] : compressor</li> <li>■ Refer to page 82 for detail.</li> </ul>
6	Remove the main PCB.	<p>(R10408)</p>	
2.	Remove the reactor.		
1	Remove the screw.	<p>(R10409)</p>	
2	Remove the 3 screws and lift the reactor upward to remove it.	<p>(R6434)</p>	

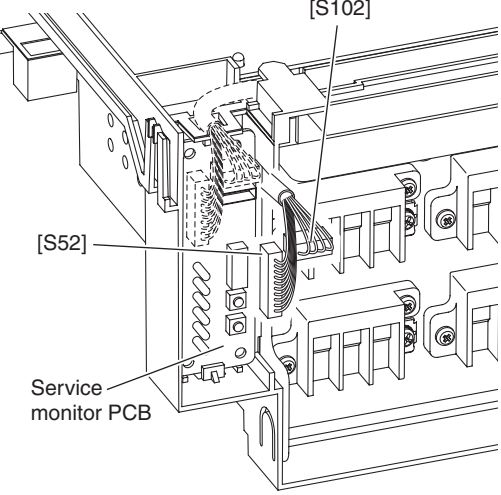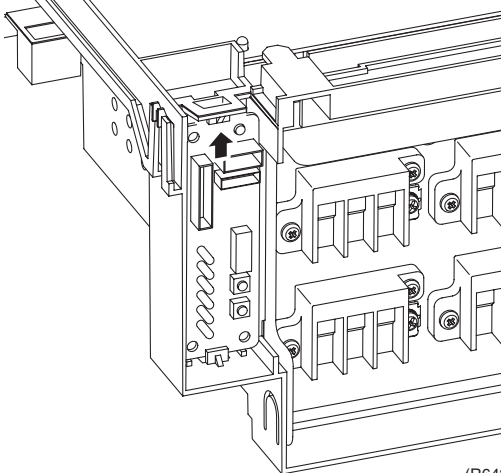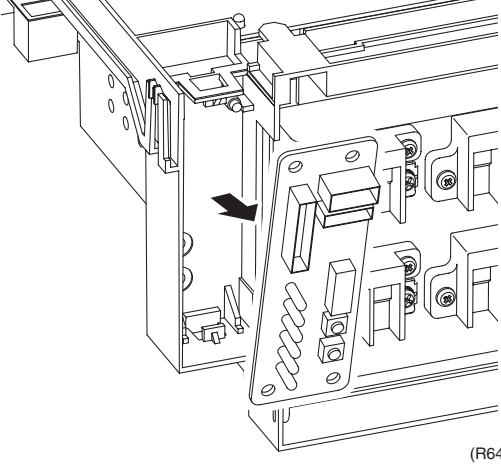

Step	Procedure	Points
3.	Remove the service monitor PCB.	
1	Disconnect the connectors [S52] [S102] from the service monitor PCB.  <p>(R10410)</p>	
2	Slightly lift the top hook to detach.  <p>(R6436)</p>	
3	Unfasten the bottom hook and remove the service monitor PCB.  <p>(R6437)</p>	■ Refer to page 82 for detail.

Step	Procedure	Points
4. Remove the terminal board.		
1	Remove the screw.	
2	Unfasten the hook.	
3	Remove the terminal board.	

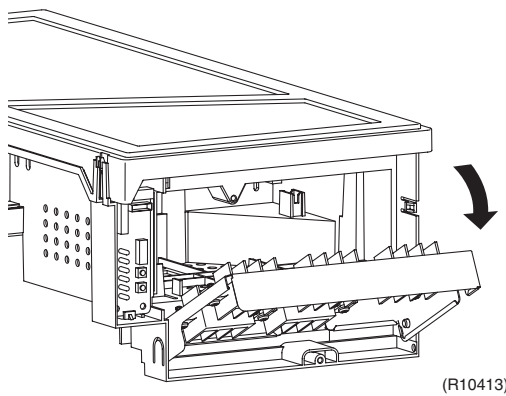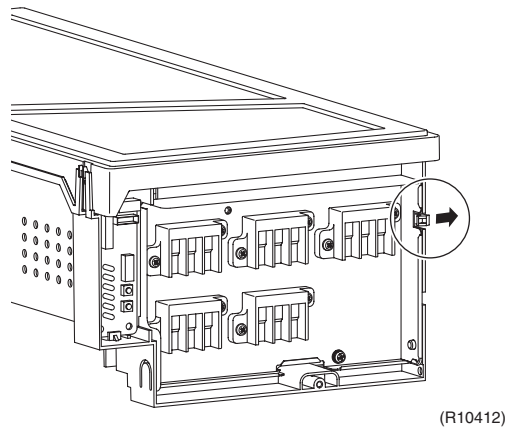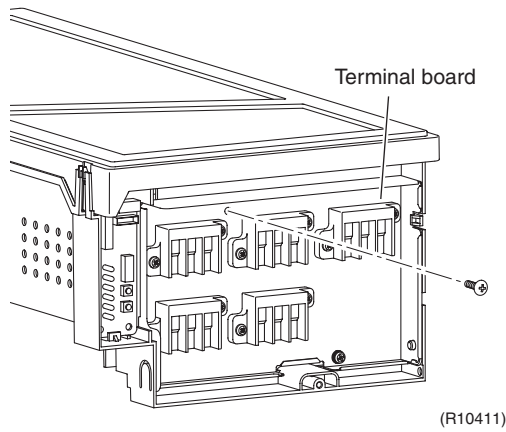

## 2.4 Removal of Fan Motor





**Procedure**



**Warning**

Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 2 lower screws of the fan motor.	<p>■ Be sure to remove the lower screws first. If the upper screws are removed first, the fan motor may tilt or fall because the center of its gravity is toward the front. It may cause injuries.</p>
2	Remove the 2 upper screws.	
3	Remove the fan motor.	<p>■ When reassembling, be sure to place the wire harness lower.</p>

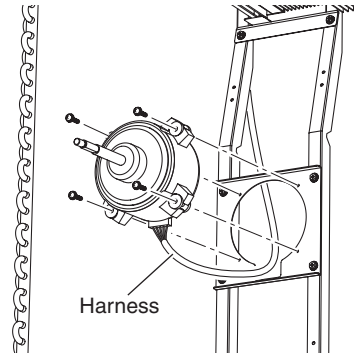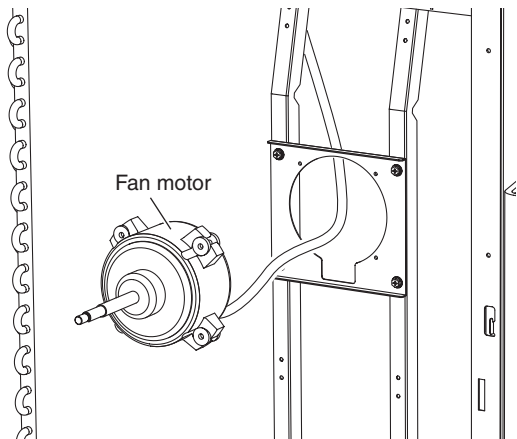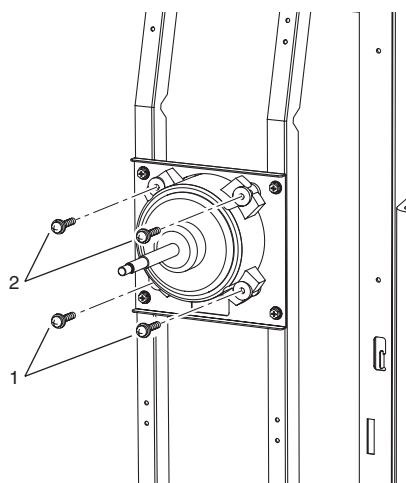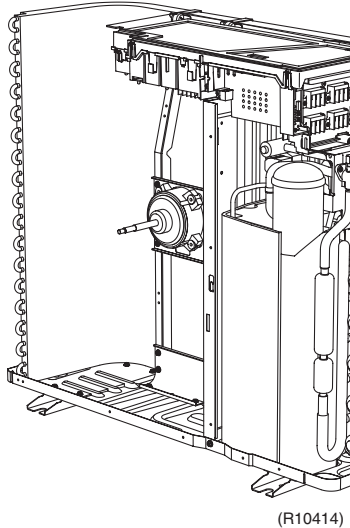



## 2.5 Removal of Coils / Thermistors



**Procedure**






**Warning**


Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

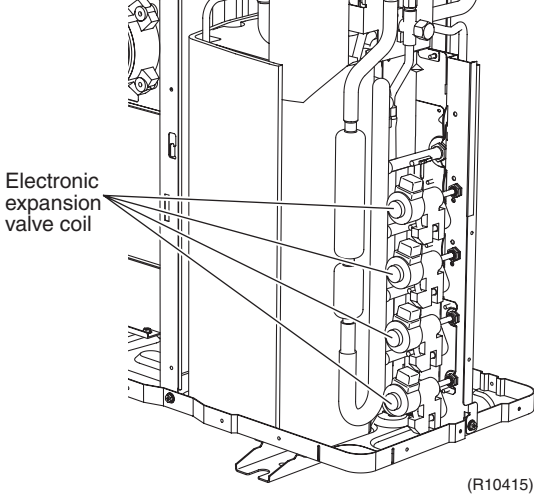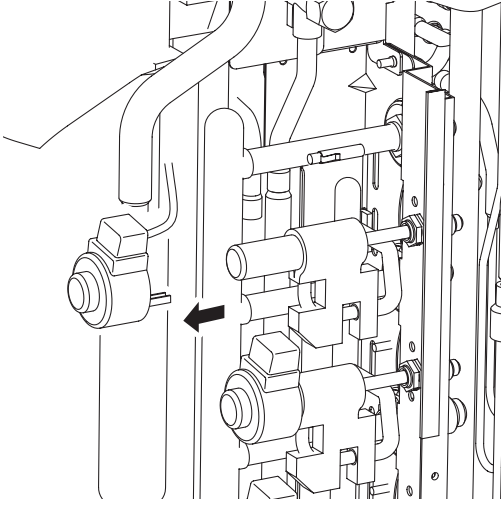Step	Procedure	Points
1.	Remove the electronic expansion valve coils.	
1	Pull out the electronic expansion valve coils.	
	 <p>(R10415)</p>  <p>(R6446)</p>	

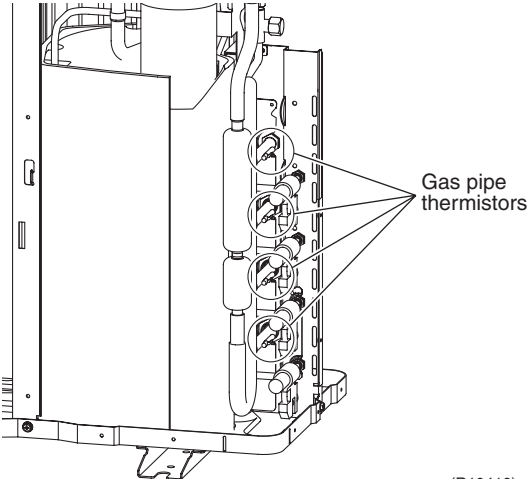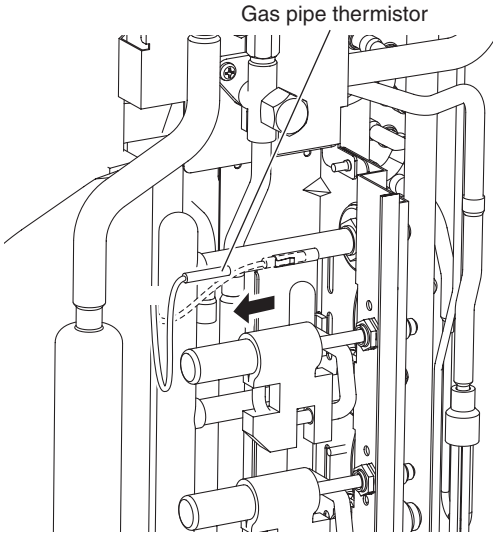Step	Procedure	Points
2. Remove the thermistors.	<p data-bbox="199 248 454 309">1 Pull out the gas pipe thermistors.</p>  <p data-bbox="970 728 1040 748">(R10416)</p>  <p data-bbox="943 1361 1002 1382">(R6448)</p>	

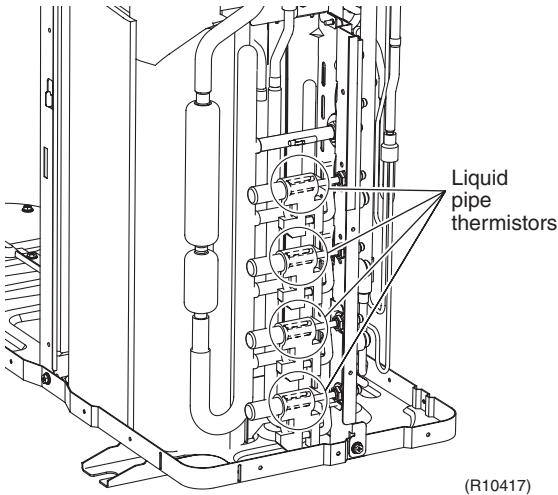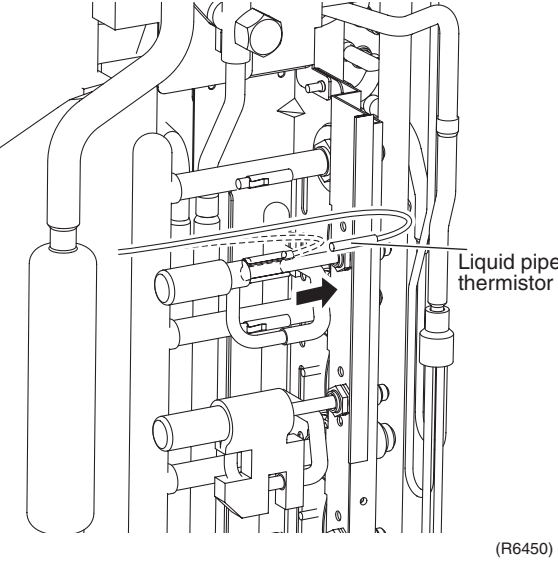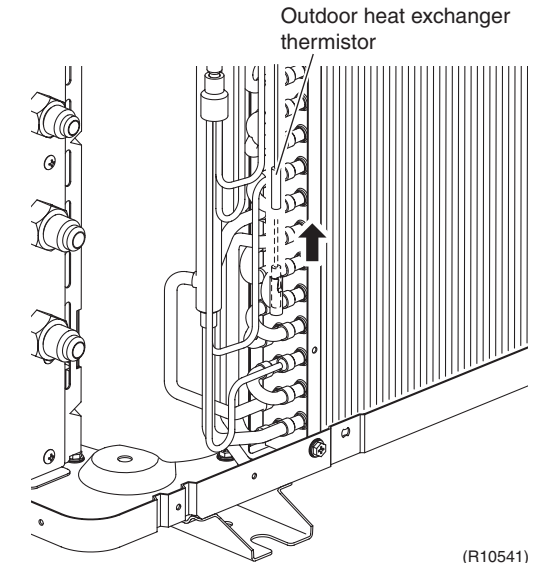
Step	Procedure	Points
2	Peel off the putty and pull out the liquid pipe thermistors.	
	 <p>(R10417)</p>	
	 <p>(R6450)</p>	
3	Pull out the outdoor heat exchanger thermistor.	
	 <p>(R10541)</p>	

Step	Procedure	Points
4	Remove the clip from the outdoor heat exchanger thermistor.	<ul style="list-style-type: none"> <li>■ Be careful not to lose the clip.</li> </ul>
5	Slightly open the sound blanket (outer).	
6	Remove the sound blanket (top upper).	

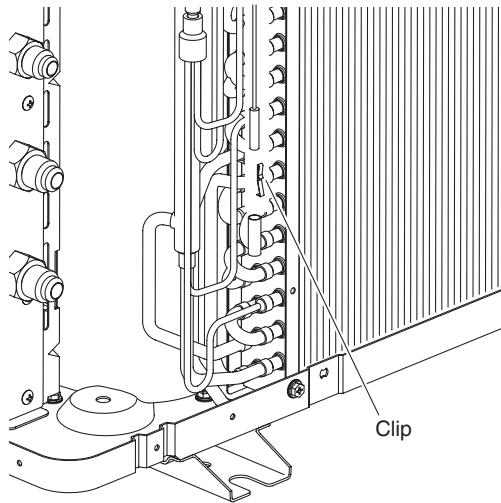


Clip

(R6452)



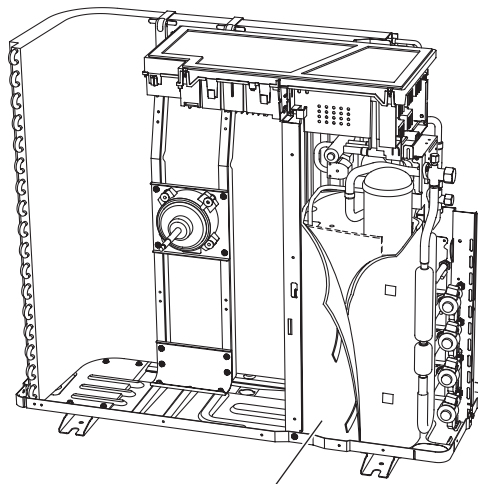


Sound blanket (outer) (R10418)

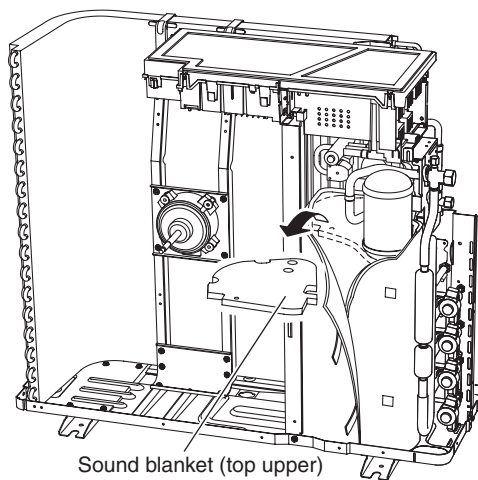

Sound blanket (top upper)

(R10419)

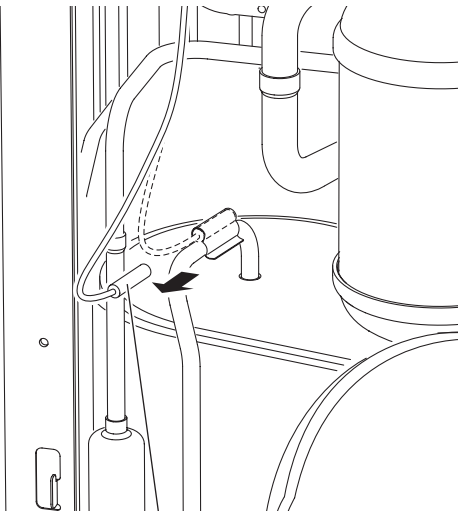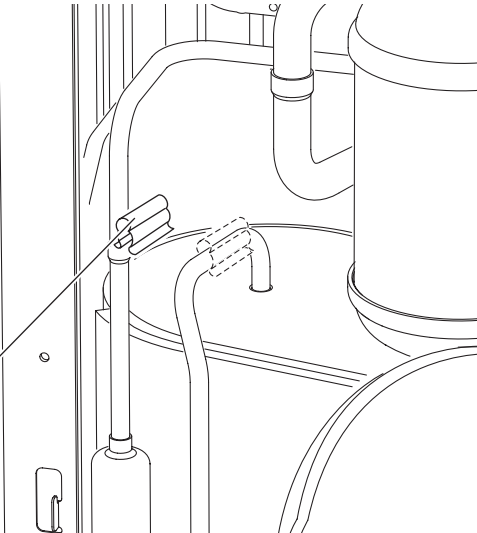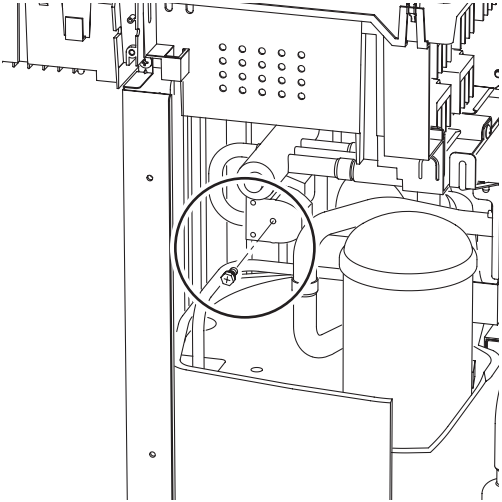Step	Procedure	Points
7	<p>Remove the discharge pipe thermistor.</p>  <p>Discharge pipe thermistor (R10420)</p>	
8	<p>Remove the fixture.</p>  <p>Fixture (R10430)</p>	
3.	<p>Remove the four way valve coil.</p>	
1	<p>Remove the screw.</p>  <p>(R10431)</p>	



Step	Procedure	Points
2	Remove the four way valve coil.	

The diagram shows a side view of an outdoor unit. A four-way valve coil is highlighted with a black arrow and a label 'Four way valve coil'. The coil is a rectangular component with two electrical terminals on its side, mounted on a pipe. Above it is a larger cylindrical component, likely the compressor. The diagram is a line drawing with various pipes, valves, and electrical connections visible.

(R10432)




## 2.6 Removal of Sound Blankets

**Procedure**




**Warning**


Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

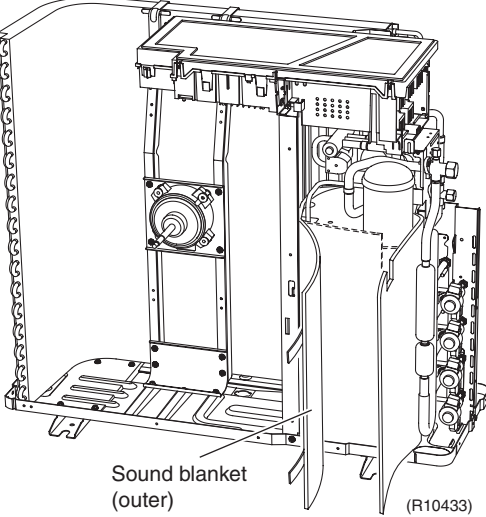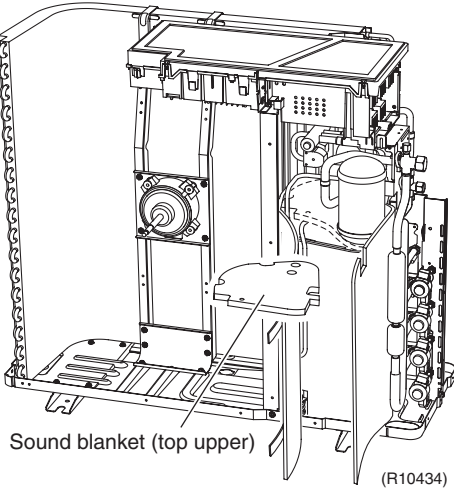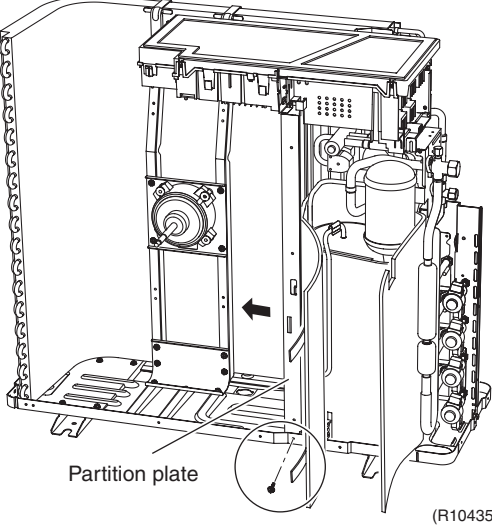Step	Procedure	Procedure	Points
1	Open the sound blanket (outer).	 <p>Sound blanket (outer)</p> <p>(R10433)</p>	
2	Remove the sound blanket (top upper).	 <p>Sound blanket (top upper)</p> <p>(R10434)</p>	<ul style="list-style-type: none"> <li>■ The sound blanket is fragile. Carefully pass the blanket through the discharge pipe.</li> </ul>
3	Remove the screw from the partition plate and push the plate to the left slightly for easy work.	 <p>Partition plate</p> <p>(R10435)</p>	


Step	Procedure	Points
4	Remove the sound blanket (outer).	<ul style="list-style-type: none"> <li>■ The sound blanket is fragile.</li> </ul>
5	Remove the sound blanket (top inner).	<ul style="list-style-type: none"> <li>■ The sound blanket is fragile. Carefully pass the blanket through the discharge pipe.</li> </ul>
6	Open the sound blanket (inner) and pass it through the part of the mufflers.	<ul style="list-style-type: none"> <li>■ The sound blanket is fragile. Be careful of the notches of the compressor mount (3 locations).</li> </ul>

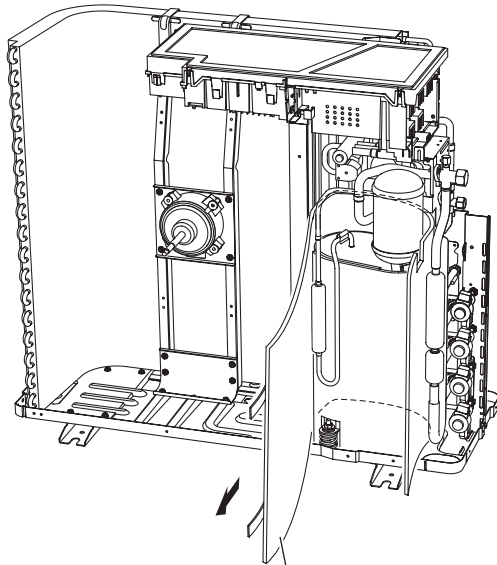


Sound blanket (outer) (R10436)

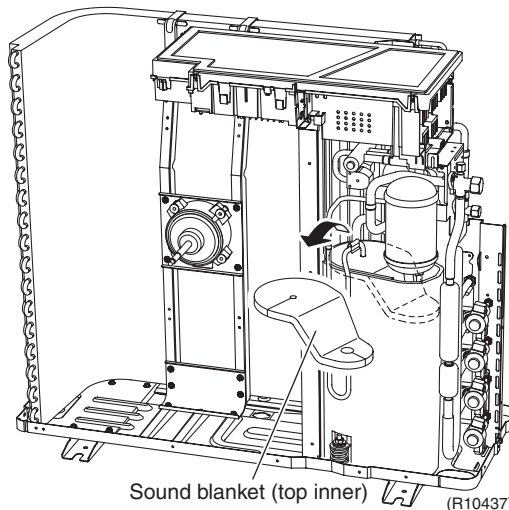

Sound blanket (top inner) (R10437)

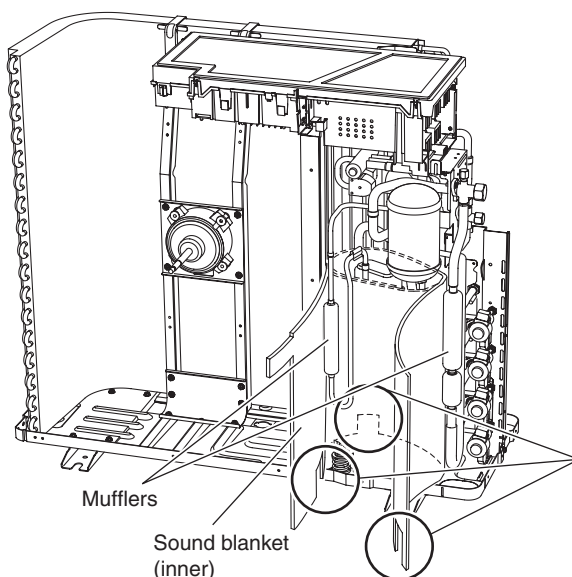

Mufflers  
Sound blanket (inner) (R10438)

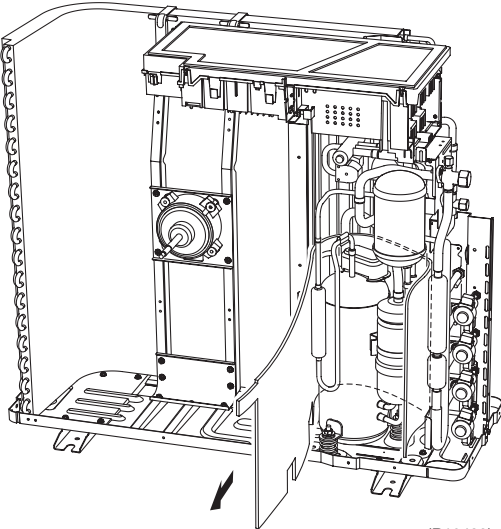Step	Procedure	Points
7	<p data-bbox="201 219 416 277">Remove the sound blanket (inner).</p>  <p data-bbox="959 763 1026 786">(R10439)</p>	




## 2.7 Removal of Compressor

**Procedure**



**Warning**

Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

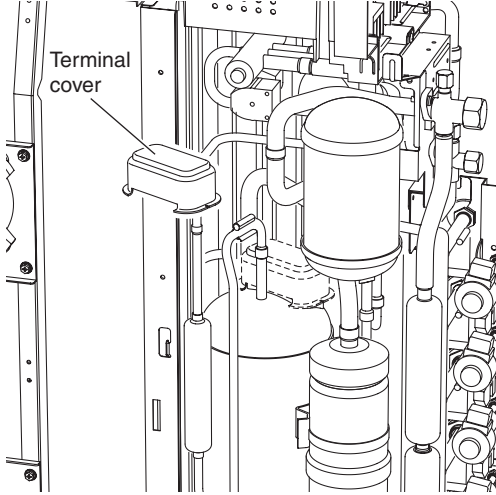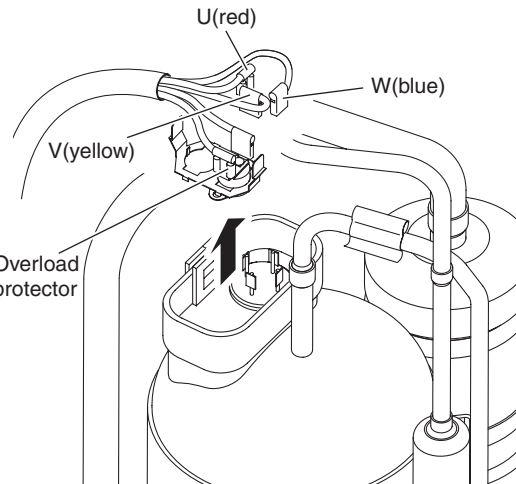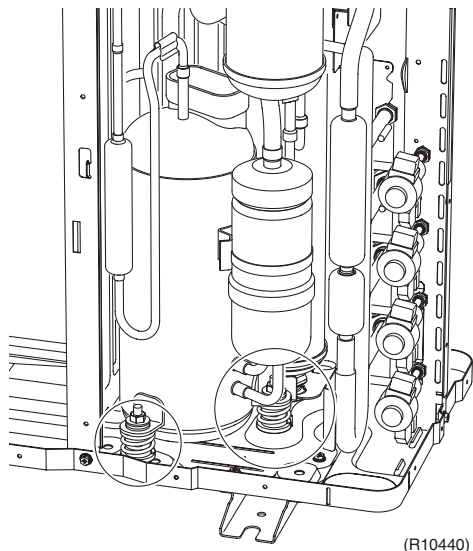Step	Procedure	Procedure	Points
1	Remove the terminal cover.	 <p>(R6466)</p>	
2	Disconnect the compressor lead wires.	 <p>(R9471)</p>	<p>■ U : red, V : yellow, W : blue</p>
3	Remove the overload protector.	 <p>(R10440)</p>	<p>■ Disconnect the pipings, referring to page 400.</p>

---

# Part 8

## Trial Operation and Field Settings

1. Pump Down Operation.....	439
2. Forced Operation .....	440
3. Wiring Error Check Function .....	441
4. Trial Operation .....	443
4.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	443
4.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	445
5. Field Settings .....	447
5.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series .....	447
5.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series.....	451
5.3 Outdoor Unit.....	459
6. Application of Silicon Grease to a Power Transistor and a Diode Bridge .....	462


# 1. Pump Down Operation

## Outline

In order to protect the environment, be sure to conduct pump down operation when relocating or disposing the unit.

## Detail

- 1) Remove the valve caps from the liquid stop valve and the gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop the forced cooling operation.

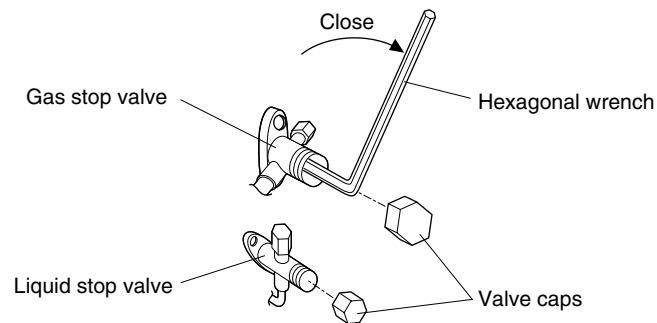

(R14566)



Refer to page 440 for forced operation.


## 2. Forced Operation

### Outline

Forced operation mode includes forced cooling and forced heating. Operation mode can be selected by the operation mode switch (SW2) on the outdoor unit. Press the forced operation ON/OFF switch (SW1) on the outdoor unit to start the operation.

### Detail

Item	Forced Cooling	Forced Heating
Conditions	1) The indoor unit is not abnormal, but the indoor unit which is not in the freezing prohibiting zone is present in more than 1 room.	1) The indoor unit is not abnormal. The indoor unit which is not in the peak-cut prohibited zone is present in more than 1 room.
	2) The outdoor unit is not abnormal and not in the 3-minute standby mode.	←
	3) The operating mode of the outdoor unit is the stop mode.	←
	4) The operation mode switch (SW2) on the outdoor unit is set to the cooling mode.	4) The operation mode switch (SW2) on the outdoor unit is set to the heating mode.
Start	Press the forced operation ON/OFF switch (SW1) on the outdoor unit.	←
Operating room	All rooms: The command is sent to all the rooms where the transmission is normal.	■ Only 1 room: The command is sent to one of the rooms which can be operate and the order of priority is A>B>C>D>E. Other rooms operation must be stopped.
Command frequency	<ul style="list-style-type: none"> <li>• 50-58 class : 52 Hz</li> <li>• 68/75 class : 42 Hz</li> <li>• 80/90 class : 31 Hz</li> </ul>	(Outdoor temperature : 2°C) <ul style="list-style-type: none"> <li>• 50-58 class : 42 Hz</li> <li>• 68/75 class : 35 Hz</li> <li>• 80/90 class : 26 Hz</li> </ul>
End	1) Press the forced operation ON/OFF switch (SW1) on the outdoor unit again.	←
	2) The operation ends automatically after 15 minutes.	2) The operation ends automatically after 60 minutes.
Others	The protection functions are prior to all others in the forced operation.	←

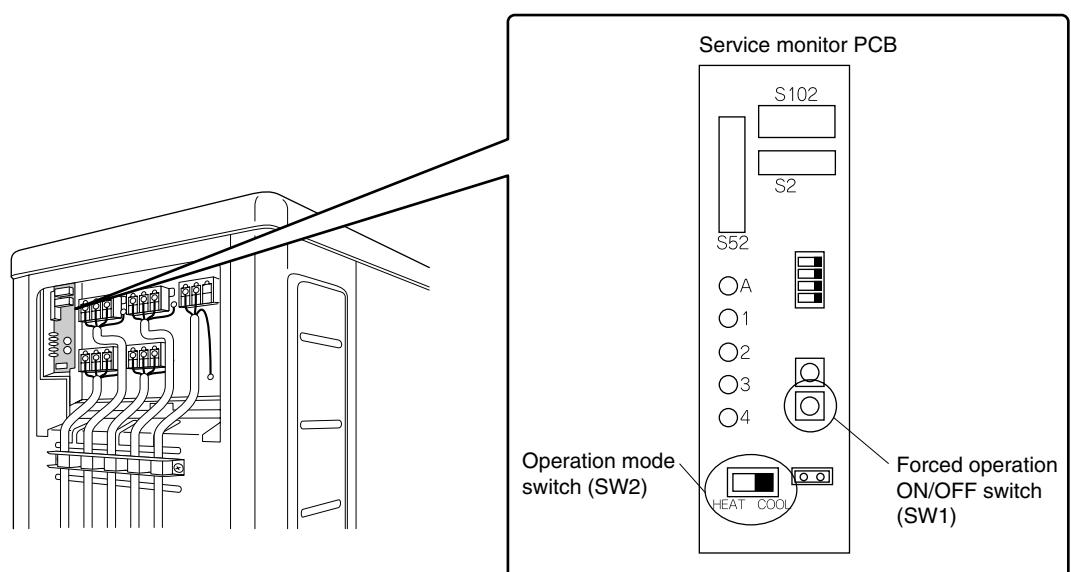

(R12870)



### 3. Wiring Error Check Function

#### Outline

The convenient wiring error check function is designed for the microcomputer to correct wiring errors itself.

If local wiring is unclear in the case of buried piping, for example, just press the wiring error check switch that is behind the right side panel of the outdoor unit. Even if the connections for Room A and Room B are confused, the system may run without a hassle. Note that this check function does not work in the following cases.

- For about 1 minute after the power is turned on (during initial setup).
  - For 3-minute standby period after the compressor has stopped.
  - When the outdoor temperature is below 5°C.
  - If the indoor unit is in trouble (also in case of all-room transmission failure).
- When the piping and wiring are perfect, there is no need to use this function.

#### Operation

1. Remove the stop valve cover or the right side panel.
2. Press the wiring error check switch (SW3) on the service monitor PCB of the outdoor unit, and the wiring error check function is activated.
3. In about 10 ~ 20 minutes, the check finishes automatically.
4. When the check is over, the service monitor LED indicators start blinking.

LED	1	2	3	4	5	Judgment
Status	All blinking at once					Self-correction impossible
	Blinking one after another					Self-correction complete


- Self-correction complete...The LED indicators 1 ~ 3 (3 room model), 1 ~ 4 (4 room model), or 1~5 (5 room model) blink one after another.
- Self-correction impossible...The LED indicators blink all at the same time.
  - \* Transmission failure occurs at any of the indoor units.
  - \* The indoor unit heat exchanger thermistor is disconnected.
  - \* An indoor unit is in trouble (if a trouble occurs during the wiring error checking).
- Emergency stop...Any of the LED indicators stays on.



#### Note:

1. It takes about 10 ~ 20 minutes (after pressing the wiring error check switch) to complete the checking.
2. Wrongly connected liquid and gas pipes cannot be self-corrected. Be sure to make the liquid pipe and the gas pipe in pairs.
3. To cancel the wiring error check procedure halfway, press the wiring error check switch again.  
In this case, the memory of the microcomputer returns to its initial status (Room A wiring → Port A piping, Room B wiring → Port B piping).
4. When replacing the outdoor unit PCB, be sure to use this function.
5. Make the power side setting after doing the wiring error check. (Otherwise, if the wiring is reversed, the air-conditioners being connected are set up in the reverse way.)

Service monitor PCB

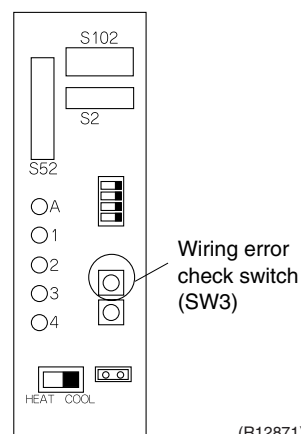

(R12871)

**Basic Knowledge**


- Refrigerant flows from Port A and on. The temperatures of the indoor heat exchanger thermistors are detected one by one to check up the matching between the piping and wiring.
- With this function on, freezing (crackling) noise may be heard from the indoor unit. This is not a problem. (This is because the heat exchanger temperature is made to drop below 0°C in order to increase the detection accuracy.)
- The indoor fan is made to turn on and off at the same time.

**Checking the current setting data on the microcomputer memory**

Those data can be checked by looking at the service monitor LED indicators, when the wiring error checking is over, during forced operation, at the stop of the system. The LED indicators stop blinking when the forced operation is over.  
 LED1...Room A wiring, LED2...Room B wiring  
 1st blinking LED...Port A piping, 2nd blinking LED...Port B piping  
 The 1st blinking LED means the room that is connected with Port A. The 2nd blinking LED means the one connected with Port B.


**Example**

Ex.) Suppose the LED indicators are blinking as follows.

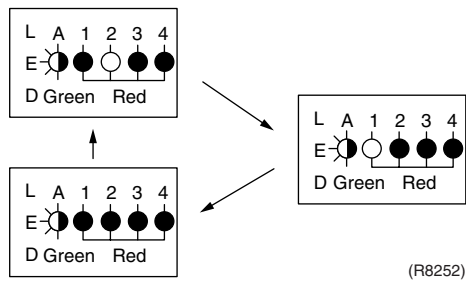

(R8252)

The above means that Port A is connected with Port B, and Port B with Room A (or self-corrected this way.)

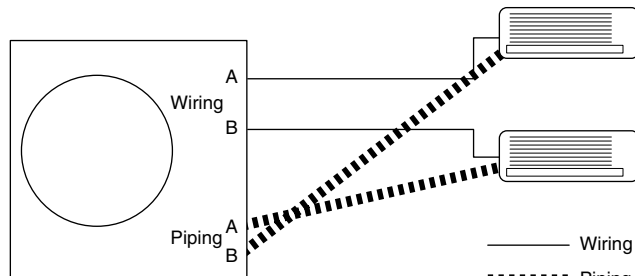

— Wiring  
 - - - - - Piping  
 (R8253)

## 4. Trial Operation

### 4.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series

#### Outline

1. Measure the supply voltage and make sure that it falls in the specified range.
2. Trial operation should be carried out in either cooling or heating mode.
3. Carry out the trial operation in accordance with the operation manual to ensure that all functions and parts, such as flap movement, are working properly.
  - The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
  - If the circuit breaker trips to shut off the power to the air conditioner, the system backs up the operation mode. The system then restarts operation with the previous mode when the circuit breaker is restored.


In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.  
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system does not start for 3 minutes after it is turned off.

#### Detail


##### ARC466 Series

- (1) Press the On/Off button to turn on the system.
- (2) Press the center of the Temp button and the Mode button at the same time.
- (3) Select “?” (trial operation) with the Temp ▲ or ▼ button.
- (4) Press the Mode button to start the trial operation.
- (5) Press the Mode button and select operation mode.
- (6) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the On/Off button.

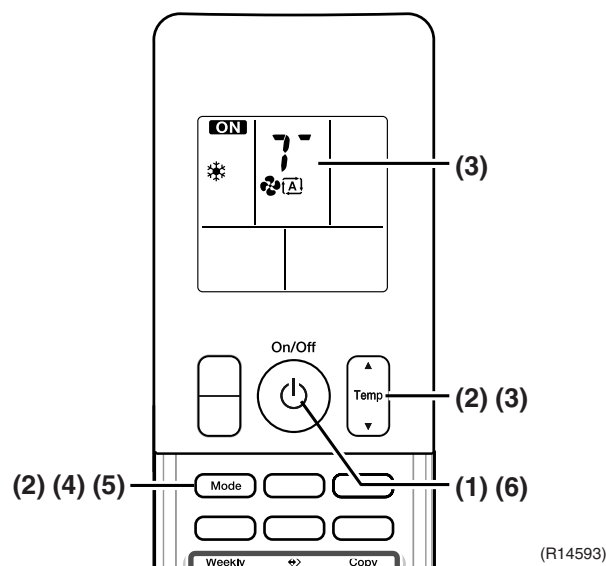


**ARC452 Series**

- (1) Press the ON/OFF button to turn on the system.
- (2) Press the both of TEMP buttons and the MODE button at the same time.
- (3) Press the MODE button twice.  
(“?” appears on the display to indicate that trial operation is selected.)
- (4) Press the MODE button and select operation mode.
- (5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the ON/OFF button.

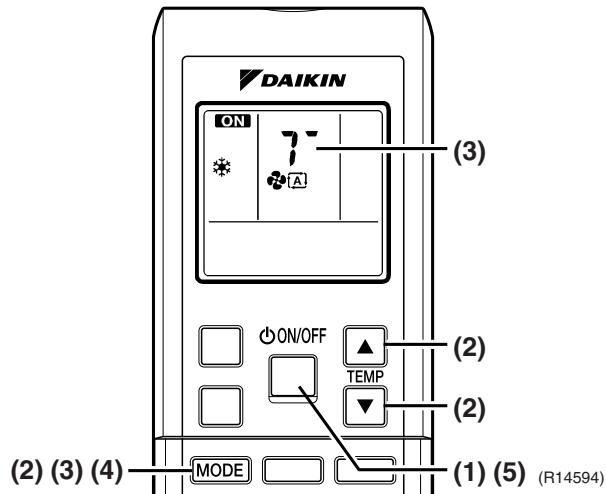

**ARC433 Series**

- (1) Press the ON/OFF button to turn on the system.
- (2) Press the center of the TEMP button and the MODE button at the same time.
- (3) Press the MODE button twice.  
(“?” appears on the display to indicate that trial operation is selected.)
- (4) Press the MODE button and select operation mode.
- (5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the ON/OFF button.

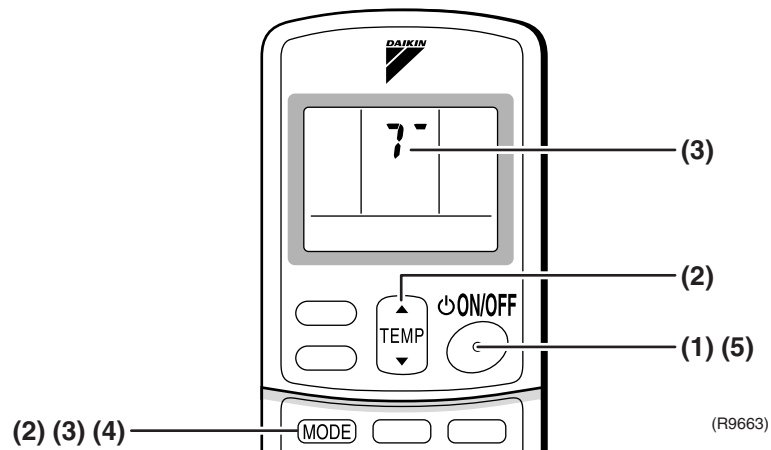

## 4.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series

### 4.2.1 Check points





To carry out test operation, check the followings:

- Check that the temperature setting of the remote controller is at the lowest level in cooling mode.
- Go through the following checklist:



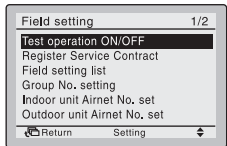
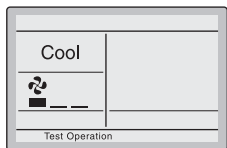



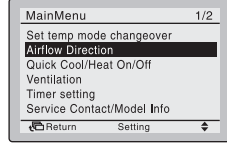

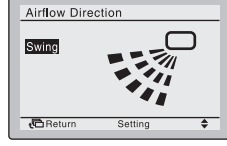


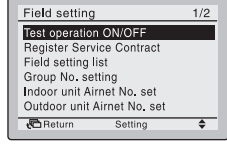
Checkpoints	Cautions or warnings
Are all units securely installed?	<ul style="list-style-type: none"> <li>● Dangerous for turning over during storm</li> <li>● Possible damage to pipe connections</li> </ul>
Is the earth wire installed according to the applicable local standard?	Dangerous if electric leakage occurs.
Are all air inlets and outlets of the indoor and outdoor units unobstructed?	<ul style="list-style-type: none"> <li>● Poor cooling</li> <li>● Poor heating</li> </ul>
Does the drain flow out smoothly?	Water leakage
Is piping adequately heat-insulated?	Water leakage
Have the connections been checked for refrigerant leakage?	<ul style="list-style-type: none"> <li>● Poor cooling</li> <li>● Poor heating</li> <li>● Stop</li> </ul>
Is the supply voltage conform to the specifications on the name plate?	Incorrect operation
Are the cable sizes as specified and according to local regulations?	Damage of cables
Are the remote controller signals received by the unit?	No operation

### 4.2.2 Test operation

**BRC1D528, BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66**

Step	Action
1	Turn on the power supply more than 6 hours before test operation.
2	Open the gas stop valve.
3	Open the liquid stop valve.
4	Set to cooling operation with the remote controller and start operation by pressing [ON/OFF] button (  ).
5	Press the [Inspection / Test] button (  ) 4 times (2 times for wireless remote controller) and operate at test operation mode for 3 minutes.
6	Press the [Airflow Direction Adjust] button (  ) to make sure the unit is in operation.
7	Press the [Inspection / Test] button (  ) and operate normally.
8	Confirm all the function of unit according to the operation manual.
9	If the decoration panel has not been installed, turn off the power after the test operation.

## BRC1E51A7

Step	Action	Remote controller
<b>Before test operation</b>		
1	Turn on the power supply more than 6 hours before test operation.	
2	Open the gas stop valve.	
3	Open the liquid stop valve.	
<b>How to activate test operation</b>		
4	Press and hold the [Cancel] button (  ) for 4 seconds to enter the <b>Field setting</b> menu.	
5	Use the ▼▲ buttons to select <b>Test operation ON/OFF</b> and push the [Menu/Enter] button (  ).	 (R12872)
6	<b>Test operation</b> is displayed on the bottom of the basic screen.	 (R12873)
7	Push the [ON/OFF] button (  ) within 10 seconds to start the test operation.	
<b>How to check airflow direction</b>		
8	Push the [Menu/Enter] button (  ) to enter the <b>Main Menu</b> .	
9	Use the ▼▲ buttons to select <b>Airflow direction</b> and push the [Menu/Enter] button (  ).	 (R12874)
10	Check that the airflow direction is actuated according to the setting and push the [Menu/Enter] button (  ).	 (R12875)
<b>How to deactivate test operation</b>		
11	Press and hold the [Cancel] button (  ) for 4 seconds to enter the <b>Field setting</b> menu.	
12	Use the ▼▲ buttons to select <b>Test operation ON/OFF</b> in the menu and push the [Menu/Enter] button (  ).	 (R12876)


## 5. Field Settings

### 5.1 RA Indoor Unit - F(C)TXG, FTXS, ATXS, FVXS, FLK(X)S, FDK(X)S Series

#### 5.1.1 Model Type Setting

<ARC452A1, A3>

- This remote controller is common to the heat pump model and cooling only model. Use the DIP switch on the remote controller to set the heat pump model or cooling only model.
- Make the setting as shown in the illustration. (The factory set is the heat pump side.)
  - Heat pump model: Set the DIP switch to H/P.
  - Cooling only model: Set the DIP switch to C/O.

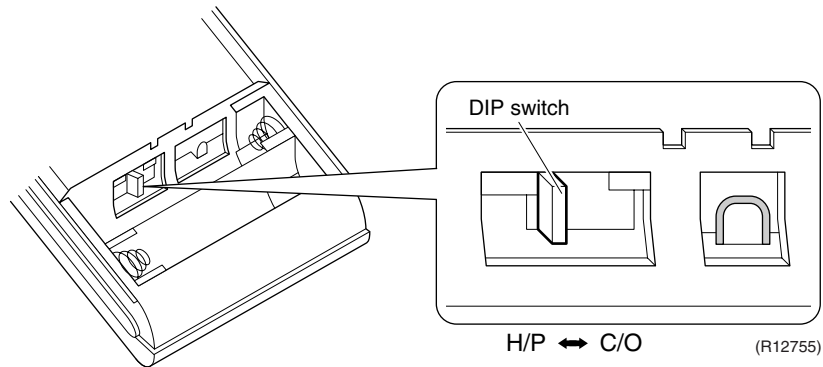

#### 5.1.2 When 2 Units are Installed in 1 Room

##### Outline


When 2 indoor units are installed in 1 room, 1 of the 2 pairs of indoor unit and wireless remote controller can be set for different address. Both the indoor unit PCB and the wireless remote controller need alteration.

##### Indoor Unit PCB


<Wall Mounted Type>

- (1) Remove the front grille.
- (2) Remove the electrical box.
- (3) Remove the shield plate of the electrical box.
- (4) Cut the address setting jumper JA on the PCB.


##### FTXG and CTXG Series

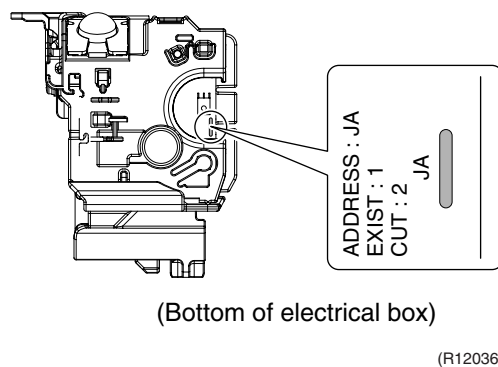

##### FTXS and ATXS Series 20-50 Class


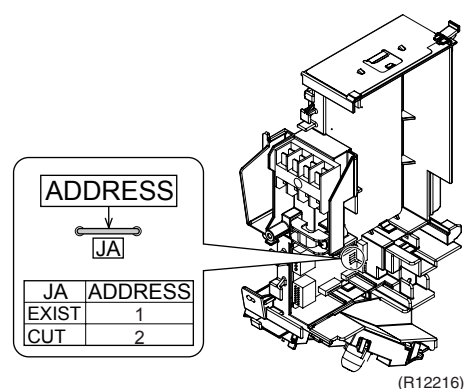


**FTXS Series 60/71 Class**

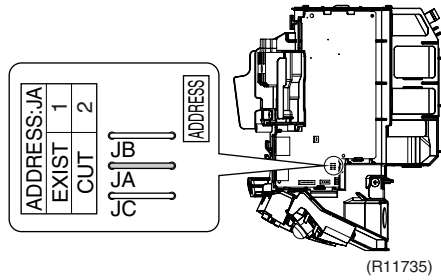

**< Floor Standing Type >**


- 1) Remove the front grille.
- 2) Lift the sensor PCB fixing plate and remove the front shield plate.
- 3) Disconnect the connectors [S1] [S41] [S42].
- 4) Remove the electric box (1 screw).
- 5) Pull out the indoor heat exchanger thermistor.
- 6) Remove the shield plate (8 tabs).
- 7) Cut the address jumper JA on the indoor unit PCB.
- 8) Cut the address jumper J4 in the remote controller.  
(Refer to “Wireless remote controller”.)

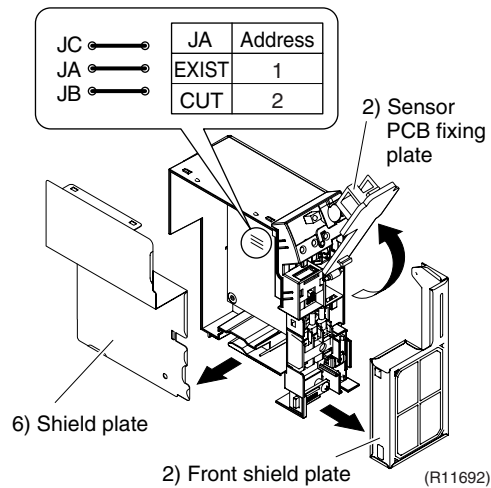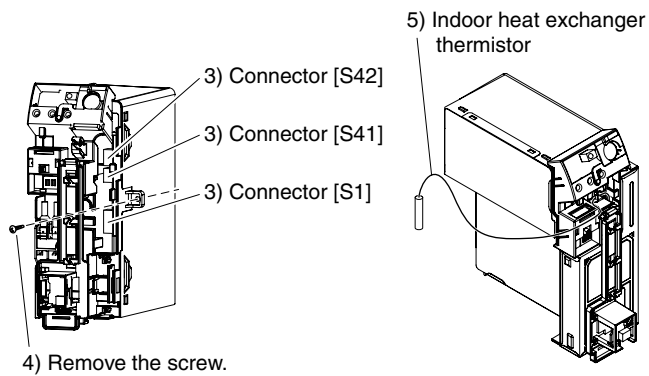




< Floor / Ceiling Suspended Dual Type >

- Cut the jumper JA on PCB.

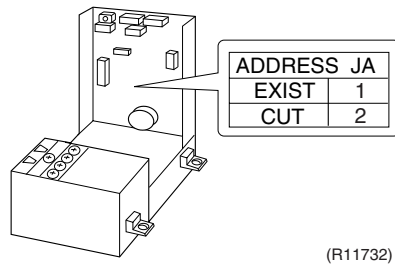

< Duct Connected Type >


- Cut the jumper JA on PCB.

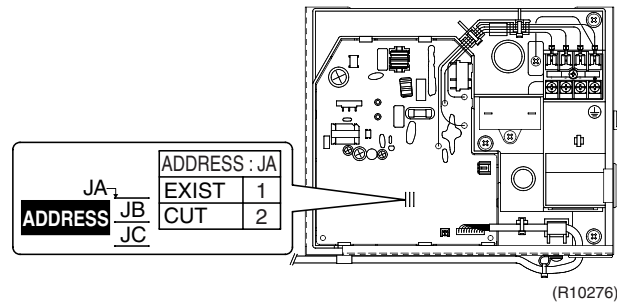


**Wireless Remote Controller**

- (1) Remove the cover and take it off.
- (2) Cut the address setting jumper.


<ARC466 series>

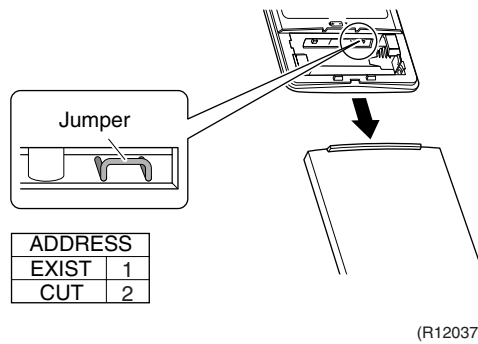

<ARC452 series>

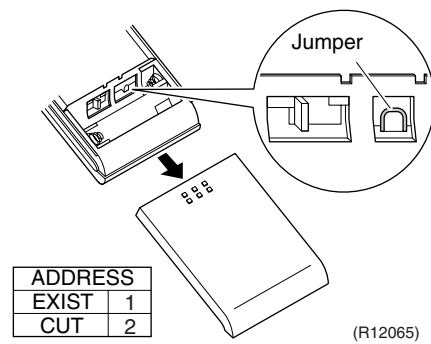

<ARC433 series>

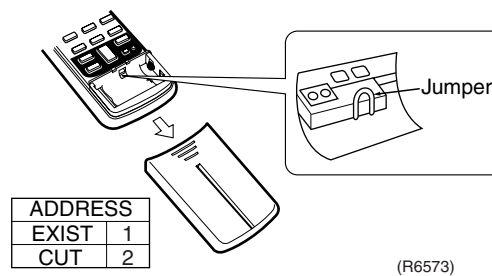

### 5.1.3 Jumper and Switch Settings

Jumper (on indoor unit PCB)	Function	When connected (factory set)	When cut
JB	Fan speed setting when compressor stops for thermostat OFF. (effective only at cooling operation)	Fan speed setting ; Remote controller setting	Fan speed setting; "0" (The fan stops.)
JC	Power failure recovery function	Auto-restart	The unit does not resume operation after recovering from a power failure. Timer settings are cleared.

<Floor Standing Type>

Switch (on indoor unit PCB)	Function	OFF (factory set)	ON
SW2-4	Upward airflow limit setting	Exposed or half embedded installation	Set the switch to ON position when you install the indoor unit embedded in the wall to avoid condensation.

<Floor / Ceiling Suspended Dual Type>

Switch (on indoor unit PCB)	Function	FLOOR (factory set)	CEILING
SW2	Installation style changeover	When installed as the floor mounted type	When installed as the ceiling suspended type



For the location of the jumper and the switch, refer to the following pages.

Wall mounted type: page 51, 54, 57

Floor Standing Type: page 60

Floor / Ceiling Suspended Dual Type: page 62

Duct connected type: page 64

## 5.2 SA Indoor Unit - FFQ, FCQ, FDBQ, FBQ, FHQ Series


### 5.2.1 How to Change the Field Settings

#### Outline

If optional accessories are mounted on the indoor unit, the indoor unit setting may have to be changed. Refer to the instruction manual for each optional accessory.

#### Wired remote controller

#### BRC1D528

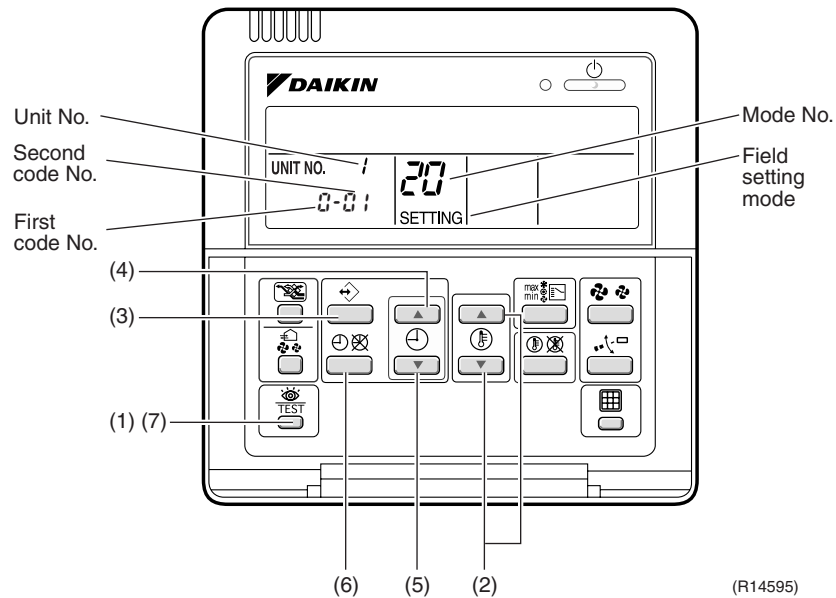


To set the field settings, you have to change:

- Mode No.
- First code No.
- Second code No.




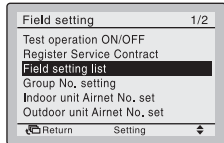









Step	Action
1	Press the [INSPECTION / TEST] button for 4 seconds during normal mode to enter the field setting mode.
2	Press the [TEMPERATURE ADJUST] button to select the desired mode No.
3	<ul style="list-style-type: none"> <li>■ If the indoor unit is under group control, all settings for all the indoor units are set at the same time. Use the codes 10 to 15 to apply this group control and proceed to the next step.</li> <li>■ If you want to set the indoor units of one group individually or if you want to read out the last settings, use the codes 20 to 25 which are displayed in brackets. Press the [PROGRAMMING] button to select the indoor unit No. for which you want to adjust the field settings.</li> </ul>
4	Press the upper part of the [TIME ADJUST] button to select the first code No.
5	Press the lower part of the [TIME ADJUST] button to select the second code No.
6	Press the [SCHEDULE TIMER] button to confirm the setting.
7	Press the [INSPECTION / TEST] button to return to normal mode.

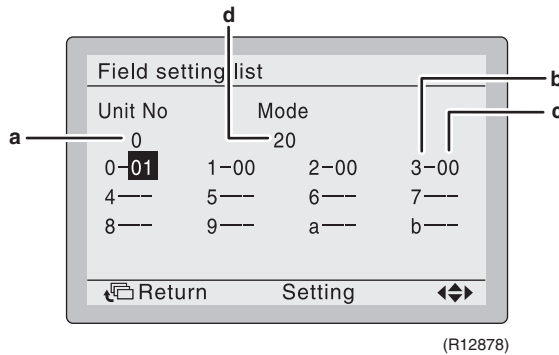**BRC1E51A7**




(R12878)

- a Unit No.
- b First code No.
- c Second code No.
- d Mode

Step	Action	Remote controller
1	Press and hold the [Cancel] button (  ) for 4 seconds to enter the <b>Field setting</b> menu.	
2	Use the  buttons to select <b>Field setting list</b> and push the [Menu/Enter] button (  ).	 <p>(R12879)</p>
3	Use the  buttons to select the desired <b>Mode</b> .	
4	During group control, when setting by each indoor unit ( <b>Mode 20, 21, 22 and 23</b> have been selected), push the  button to highlight and  buttons to select the INDOOR UNIT NO. to be set. This operation is unnecessary when setting by group.	
5	Highlight the second code No. to be changed using the  buttons, and use the  buttons to select the desired second code No.	When setting by group, all of the second code No. that may be set are displayed as “*”.
6	Push the [Menu/Enter] button (  ) to display the confirmation screen.	
7	Use the  buttons to select <b>Yes</b> and push the [Menu/Enter] button (  ).	When multiple setting changes are needed, repeat steps 3 to 7.
8	Push the [Cancel] button (  ) 2 times to return to basic screen.	

### Wireless remote controller

**BRC7E530W/531W, BRC7F532F/533F, BRC7EA63W/66**

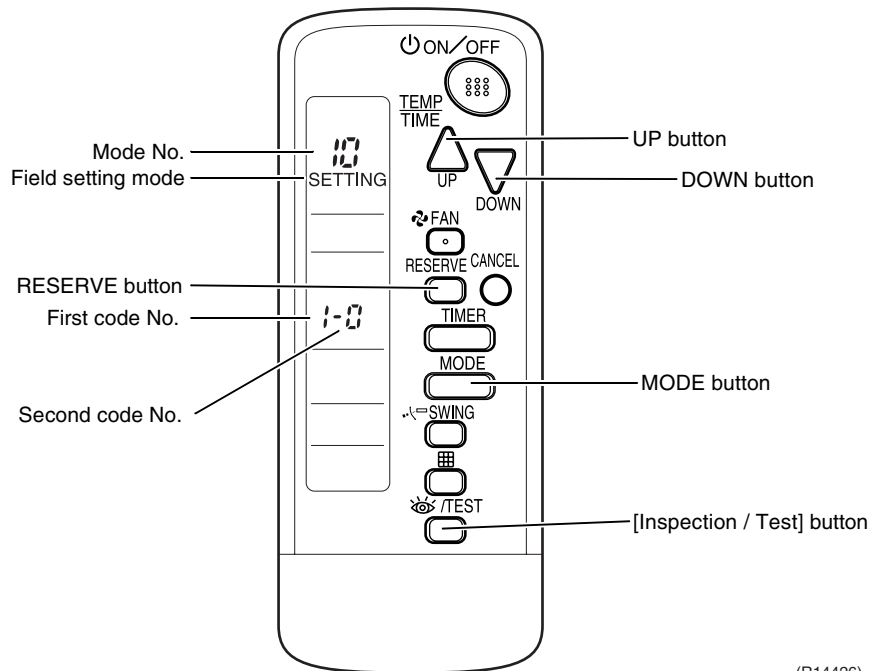

(R14426)

To set the field settings, you have to change:

- Mode No.
- First code No.
- Second code No.

Step	Action
1	Press the [Inspection / Test] button for 4 seconds during normal mode to enter the field setting mode.
2	Press the [MODE] button to select the desired mode No.
3	Press the [UP] button to select the first code No.
4	Press the [DOWN] button to select the second code No.
5	Press the [RESERVE] button to confirm the setting.
6	Press the [Inspection / Test] button to return to the normal mode.

### 5.2.2 Overview of the Field Settings

Mode No.	First Code No.	Description of setting		Second Code No.					
				01	02	03	04		
10 (20)	0	Filter cleaning sign interval	Ultra longlife filter	Light	Approx. 10,000 hrs.	Heavy	Approx. 5,000 hrs.	—	—
			Longlife filter		Approx. 2,500 hrs.		Approx. 1,250 hrs.		
	1	Long life filter type		Longlife filter	Ultra longlife filter	—	—		
	2	Remote controller thermistor		Enabled	Disabled	—	—		
3	Filter cleaning sign		Display	No display	—	—			
11 (21)	0	Indoor unit number of simultaneous operation system		Pair	Twin	Triple	Double twin		
	1	Simultaneous operation system individual setting		Unified setting	Individual setting	—	—		
	7	External static pressure setting		Airflow adjustment is OFF	Completion of airflow adjustment	Start of airflow adjustment	—		
12 (22)	1	Forced ON/OFF function		Forced OFF	ON/OFF operation	—	—		
	2	Thermostat differential changeover (setting for when using remote sensor)		1°C	0.5°C	—	—		
13 (23)	0	High air outlet velocity (for high ceiling applications)		≤ 2.7 m	2.7 ~ 3.0 m	3.0 ~ 3.5 m	—		
	1	Selection of airflow direction (setting for when a blocking pad kit has been installed)		4-way flow	3-way flow	2-way flow	—		
	3	Selection of airflow function (setting for when using a decoration panel for outlet)		Equipped	Not equipped	—	—		
	4	Airflow direction range setting		Upper	Normal	Lower	—		
	6	External static pressure		Refer to Note 2.					
14 (24)	2	Dust collection sign interval		Approx. 1,250 hrs.	Approx. 2,500 hrs.	Approx. 5,000 hrs.	—		
	3	Filter replacement sign		No display	Approx. 32,000 hrs.	Approx. 48,000 hrs.	Approx. 72,000 hrs.		
	4	Panel indicator (green) ON/OFF		The indicator lights up during both air conditioning operation and filter auto-cleaning.	The indicator can light up only during filter auto-cleaning.	The indicator does not light up during both air conditioning operation and filter auto-cleaning.	—		
	8	Selection of the automatic control operation lock mode		ON	OFF	—	—		
	9	Dust amount setting		Standard	Heavy	—	—		
15 (25)	3	Drain pump operation with humidifying		Not equipped	Equipped	—	—		

■ : factory set



- Note:** 1. Any function that is not available on the indoor unit is not displayed.  
2.

Mode No.	First code No.	Second code No.	External static pressure (Pa)		
			FBQ		
			35 class	50 class	60 class
13 (23)	6	03	30	30	30
		04	35	35	40
		05	40	40	50
		06	45	45	60
		07	50	50	70
		08	60	60	80
		09	70	70	90
		10	80	80	100
		11	90	90	—
		12	100	100	—

■ : factory set

## 5.2.3 MAIN / SUB Setting when Using 2 Wired Remote Controllers



### Outline

The MAIN / SUB setting is necessary when 1 indoor unit is controlled by 2 remote controllers. When you use 2 remote controllers (control panel and separate remote controller), set one to MAIN and the other to SUB.


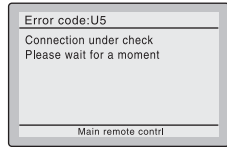
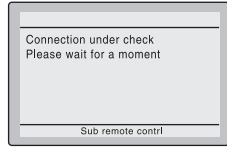
### Detail

The remote controllers are factory set to MAIN, so you only have to change one remote controller from MAIN to SUB.

#### BRC1D528

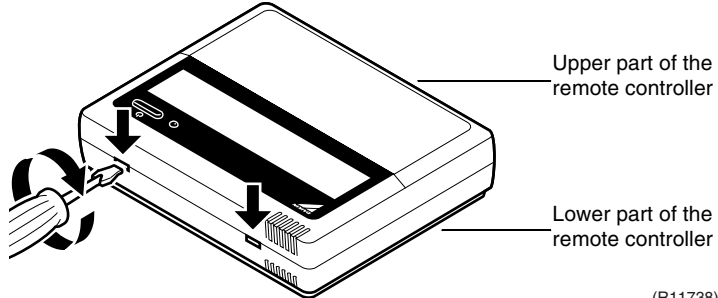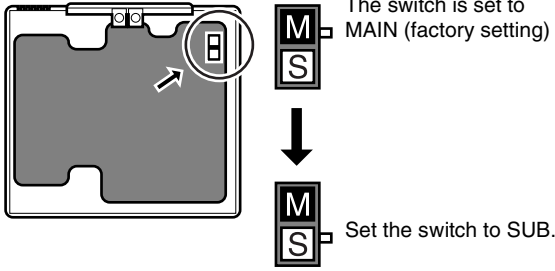Step	Action
1	<p>Insert a flat screwdriver into the groove between the upper and lower part of the remote controller, as shown in the illustration below. Gently pry off the upper part of the controller, working from the two possible positions.</p>  <p style="text-align: right;">(R11738)</p>
2	<p>Set the [MAIN / SUB changeover] switch on the PCB to "S".</p>  <p style="text-align: right;">(R11739)</p>

#### BRC1E51A7

Step	Action	Remote controller
1	Put on the power for both remote controllers.	
2	Determine which one is the sub/main remote controller.	
3	When <b>Error code: U5 - Connection under check Please wait for a moment</b> is displayed on both remote controllers, push and hold the [Operation mode selector] button (  ) of the sub remote controller for 4 seconds.	 <p style="text-align: right;">(R12880)</p>
4	The sub remote controller now displays <b>Sub remote contrl.</b>  Note) The main remote controller still displays <b>Main remote contrl.</b>	 <p style="text-align: right;">(R12881)</p>
5	After a few seconds, the basic screen is displayed.	




## 5.2.4 Address and MAIN / SUB Setting for Wireless Remote Controller

### Outline



If several wireless remote controller units are used together in the same room (including the case where both group control and individual remote controller control are used together), be sure to set the addresses for the receiver and wireless remote controller. (For group control, see the attached installation manual for the indoor unit.) If using together with a wired remote controller, you have to change the MAIN / SUB setting on the signal receiver PCB.


### Signal Receiver PCB

Set the address setting switch (SS2) on the signal receiver PCB according to the table below.

Unit No.	No.1	No.2	No.3
Address setting switch (SS2)	 (S1935)	 (S1936)	 (S1937)

When using both a wired and a wireless remote controller for 1 indoor unit, the wired controller should be set to MAIN. Therefore, set the MAIN / SUB setting switch (SS1) on the signal receiver PCB to SUB.

	MAIN	SUB
MAIN / SUB setting switch (SS1)	 (S1938)	 (S1939)

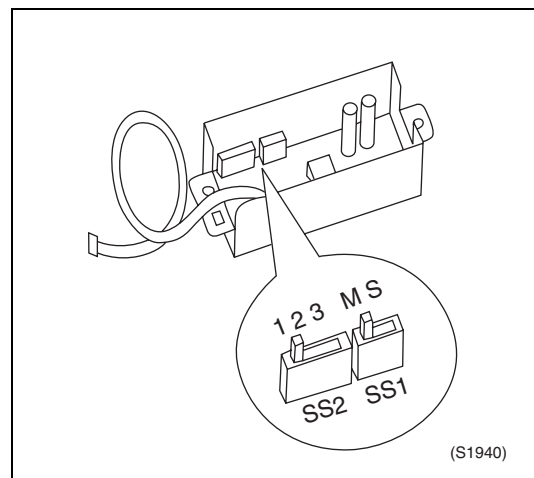


After completing setting, seal off the opening of the address setting switch (SS2) and the MAIN / SUB setting switch (SS1) with the attached sealing pad.




**Wireless Remote Controller (Factory Set is "1")**

1. Hold down the " [Grid] " button and the " [Eye/TEST] " button at the same time for at least 4 seconds to enter the field setting mode. ("SETTING" is indicated on the display).
2. Press the " [FAN] " button and select "A" or "b". Each time the button is pressed, the display switches between "A" and "b".
3. Press the " [UP] " button and " [DOWN] " button to set the address.



Address can be set from 1 ~ 6, but set it to 1 ~ 3 and to same address as the receiver. (The receiver does not work with address 4 ~ 6.)

4. Press the " [RESERVE] " button to confirm the setting.
5. Hold down the " [Eye/TEST] " button for at least 1 second to exit the field setting mode and return to the normal display.

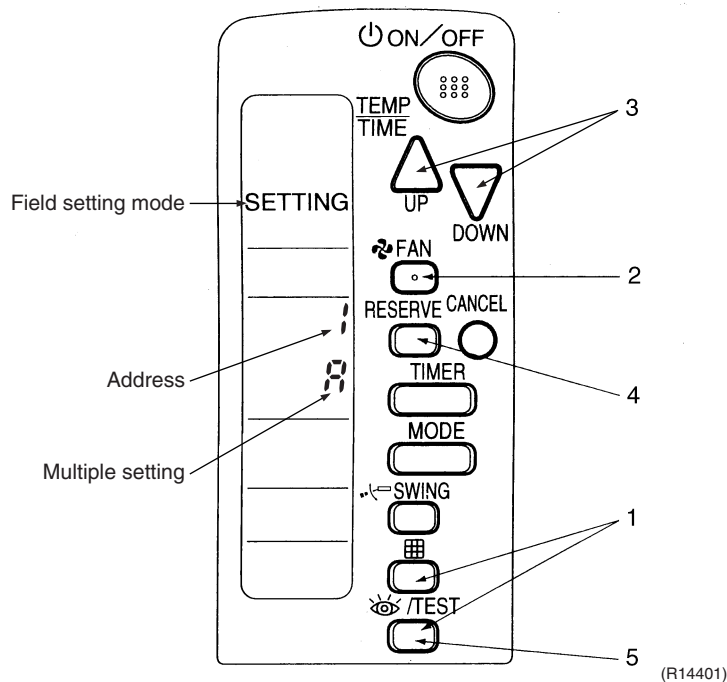


**Multiple Settings A/b**

When the indoor is controlled by outside controller (central remote controller, etc.), it sometimes does not respond to ON/OFF command or temperature setting command from the remote controller. Check what setting the customer needs and make the multiple setting as shown below.

Remote Controller		Indoor Unit	
Multiple Setting	Remote Controller Display	Controlled by other air conditioners or devices	Other condition
A: Standard	All items are displayed.	ON/OFF command and temperature setting command cannot be accepted. (1 long beep or 3 short beeps emitted)	
b: Multiple display	Operations set only is displayed shortly after execution.	All the commands can be accepted (2 short beeps)	

**After Setting**

Stick the unit No. label at the decoration panel air discharge outlet as well as on the back of the wireless remote controller.

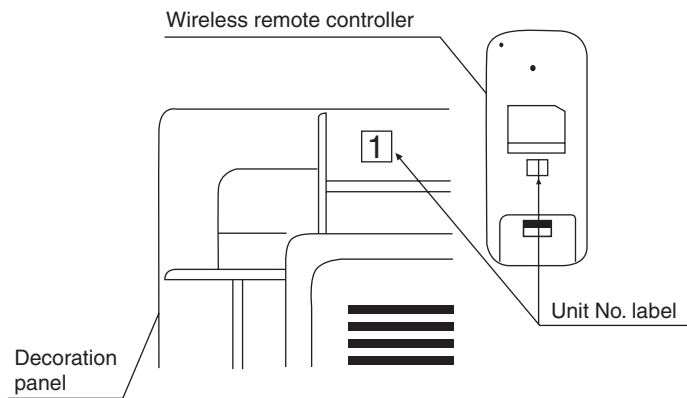

(R12961)



**Note:** Set the unit No. of the receiver and the wireless remote controller to be the same. If the settings differ, the signal from the remote controller cannot be received.

## 5.3 Outdoor Unit

### 5.3.1 Priority Room Setting

Electronic expansion valves are controlled to provide more capacity to the prioritized room.

- Setting method

Turn off the circuit breaker before changing the setting.

Only one room can be set as the priority room (By turning on one of the SW4 on the service monitor PCB of the outdoor unit).

- The control starts when all the following conditions are met.

- \* Priority room setting is made.


- \* "POWERFUL" signal from the priority room unit is received.



**Note:** The operation mode of the priority room unit has precedence.

- Cancellation of control


The control function is canceled when the "POWERFUL" operation mode is switched off or 20 minutes elapse after "POWERFUL Operation" started.

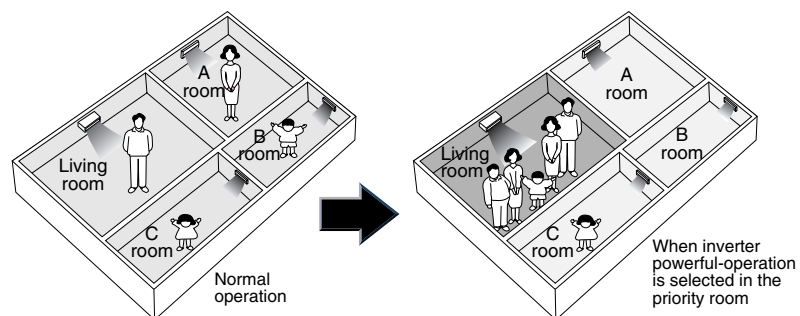

The prioritized room will be heated/cooled much more quickly

(R1396)


Service monitor PCB

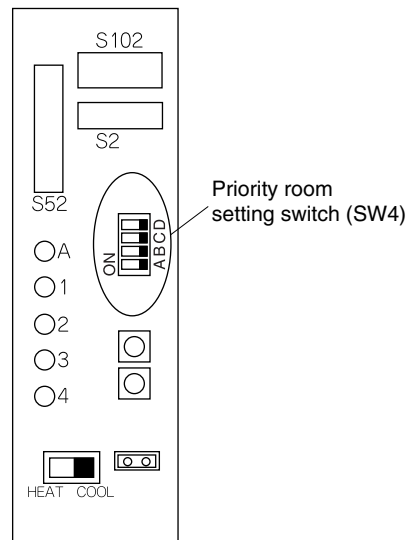

3 or 4 room model

(R12882)

Service monitor PCB

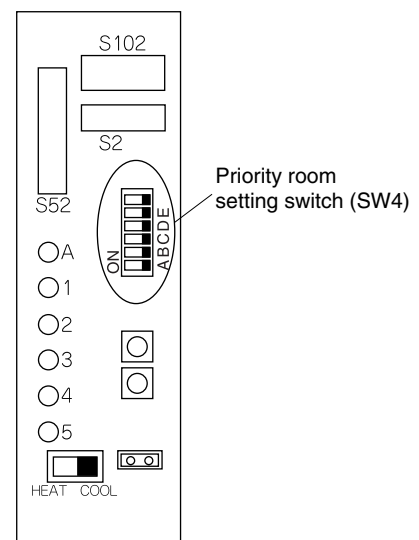


5 room model

(R12883)

### 5.3.2 COOL / HEAT Mode Lock

Use the [S15] connector to set the unit to cooling only or heating only.  
 Setting to heating only (H): Short-circuit pins 1 and 3 of the connector [S15].  
 Setting to cooling only (C): Short-circuit pins 3 and 5 of the connector [S15].  
 The following specifications apply to the connector housing and pins.  
 JST products Housing: VHR-5N  
 Pin: SVH-21T-1, 1  
 Note that forced operation is also possible in cooling / heating mode.

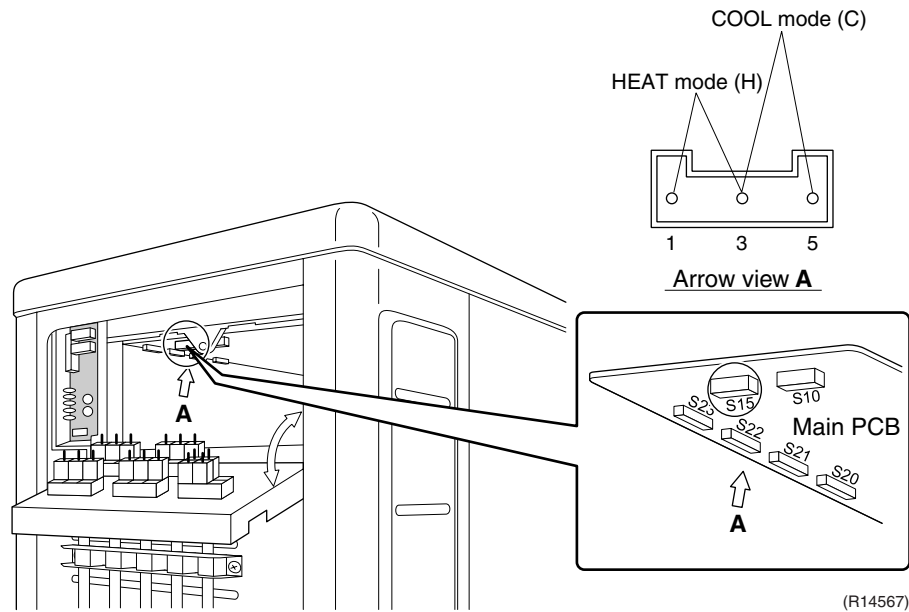


### 5.3.3 NIGHT QUIET Mode

If NIGHT QUIET mode is to be used, initial settings must be made when the unit is installed. Explain the function of NIGHT QUIET mode, as described below, to the customer, and confirm whether or not the customer wants to use NIGHT QUIET mode.


NIGHT QUIET mode function reduces operating noise of the outdoor unit at nighttime. This function is useful if the customer is worried about the effects of the operating noise on the neighbors. However, if NIGHT QUIET mode is running, cooling capacity is reduced.

#### ■ Procedure

1. Remove the SW5 jumper switch on the service monitor PCB of the outdoor unit. Once the settings are complete, reset the power.

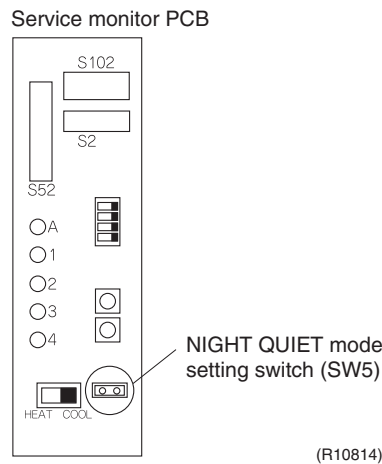

2. Install the removed jumper switch as described below. This jumper switch is needed later to disable this setting.

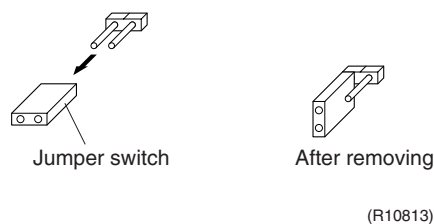

### 5.3.4 ECONO-mode-proof Setting

#### Outline

When installing in hotels, you can make ECONO mode ineffective on the outdoor unit.

#### Operation

The ECONO mode can be switched over between "effective" and "ineffective" by pressing the forced operation ON/OFF switch (SW1) on the outdoor unit and wiring error check switch (SW3) on the outdoor unit at the same time and holding them for 5 seconds while the compressor is stopped. The LEDs are lit in turn for 15 seconds to show the ECONO mode status. The factory setting is "effective".

LED flashing order	effective → ineffective	ineffective → effective
3 or 4 room model	4 → 3 → 2 → 1	1 → 2 → 3 → 4
5 room model	5 → 4 → 3 → 2 → 1	1 → 2 → 3 → 4 → 5

## 6. Application of Silicon Grease to a Power Transistor and a Diode Bridge

### Applicable Models

All outdoor units using inverter type compressor for room air conditioner.

When the printed circuit board (PCB) of an outdoor unit is replaced, it is required that silicon grease (\*1) is certainly applied to the heat radiation part (the contact point to the radiation fin) of the power transistor and diode bridge.

\*1: Parts number of the silicon grease – 1172698 (Drawing number 3FB03758-1)

### Details



The silicon grease is an essential article for encouraging the heat radiation of the power transistor and the diode bridge. Applying the paste should be implemented in accordance with the following instruction.

Remark: There is the possibility of failure with smoke in case of bad heat radiation.

- Wipe off the old silicon grease completely on a radiation fin.
- Apply the silicon grease evenly to the whole.
- Do not leave any foreign object such as solder or paper waste between the power transistor and the radiation fin, and also the diode bridge, and the radiation fin.
- Tighten the screws of the power transistor and the diode bridge, and contact to the radiation fin without any gap.

### <Example>

The shape of electrical box and PCB vary depending on the model.

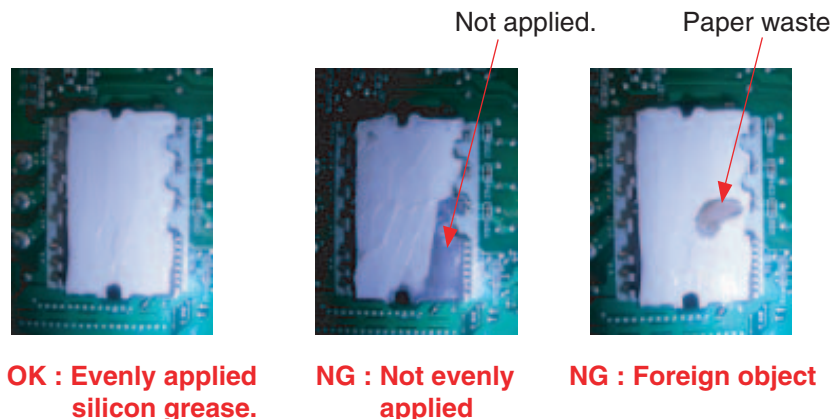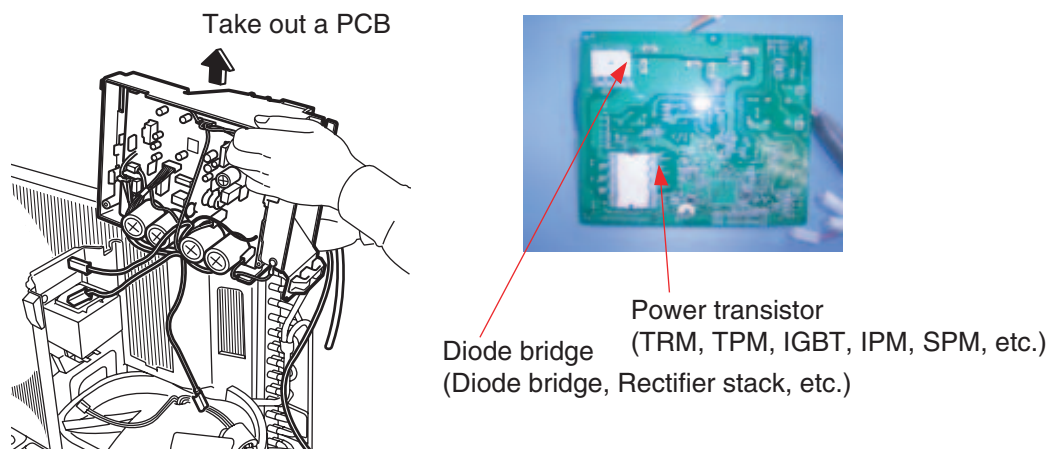

(R9056)

# Part 9

# Appendix

1. Piping Diagrams.....	464
1.1 Indoor Unit.....	464
1.2 Outdoor Unit.....	470
2. Wiring Diagrams.....	475
2.1 Indoor Unit.....	475
2.2 Outdoor Unit.....	483



# 1. Piping Diagrams

## 1.1 Indoor Unit

### 1.1.1 Wall Mounted Type

FTXG25/35JV1BW(S)

CTXG50JV1BW(S)

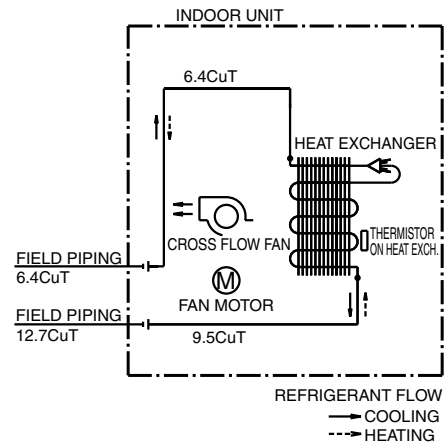
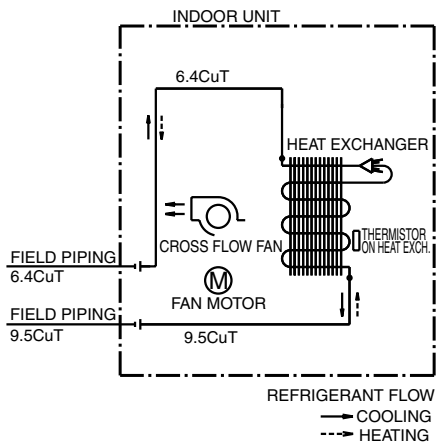


4D065855

4D065856

FTXS20/25/35/42G2V1B  
 FTXS20/25/35/42J2V1B  
 ATXS20/25/35/42G2V1B

FTXS50G2V1B  
 FTXS50J2V1B  
 ATXS50G2V1B

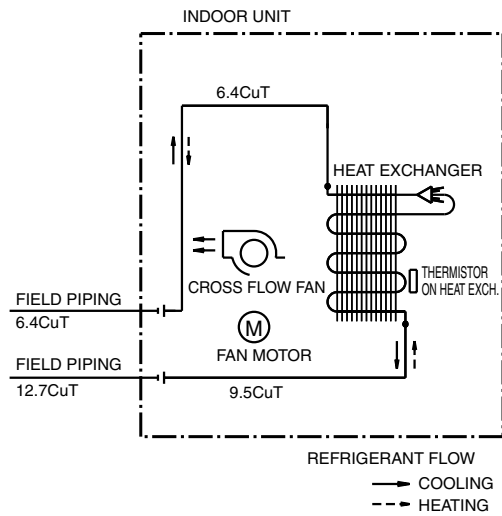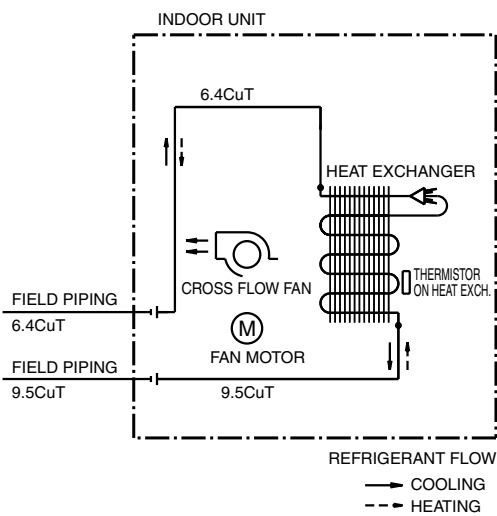


4D058897F

4D058898F




FTXS60GV1B

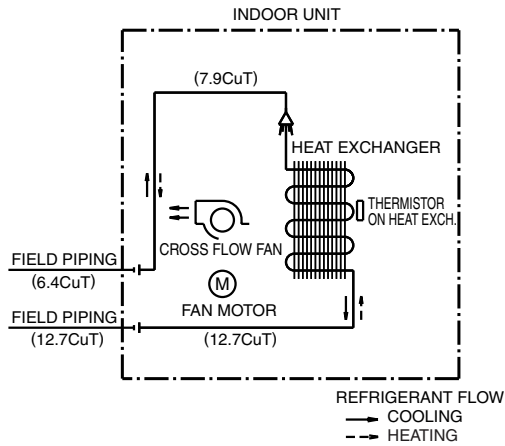

4D040081X


FTXS71GV1B

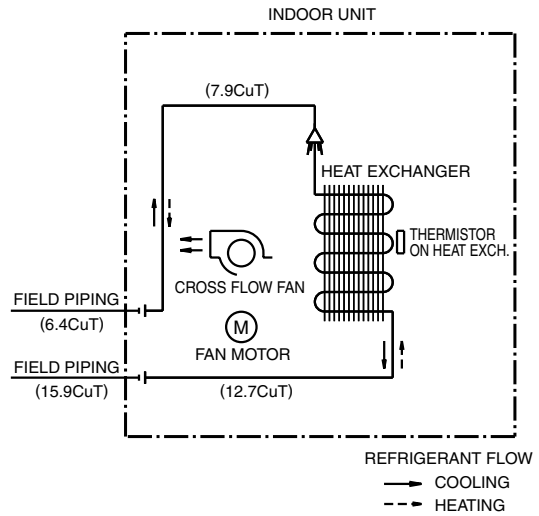

4D040082U


1.1.2 Floor Standing Type

FVXS25/35FV1B

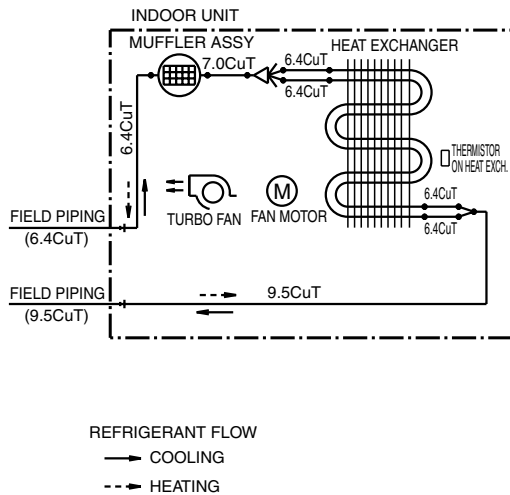

4D056137B

FVXS50FV1B

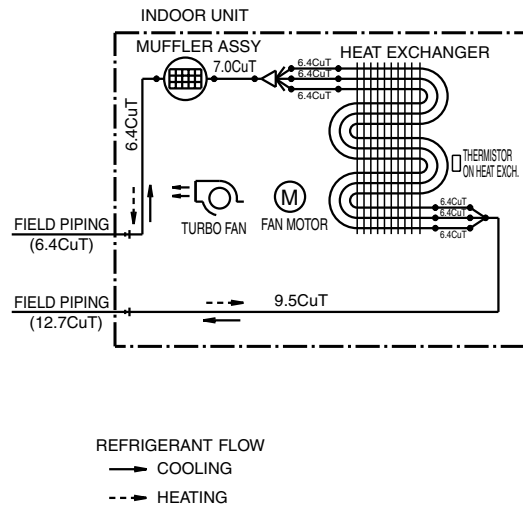


4D056138B

### 1.1.3 Floor / Ceiling Suspended Dual Type

FLKS25/35BAVMB

FLKS50/60BAVMB

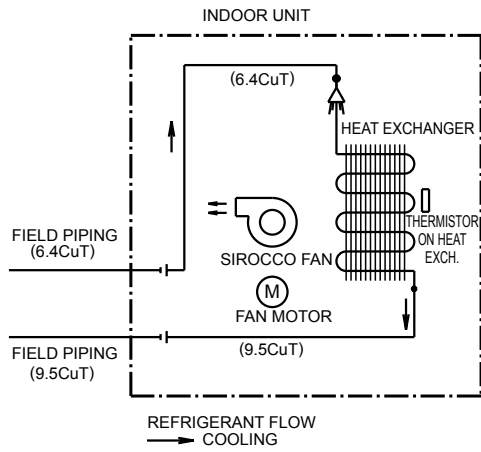


4D034012E



4D048723A

FLXS25/35BAVMB

FLXS50/60BAVMB

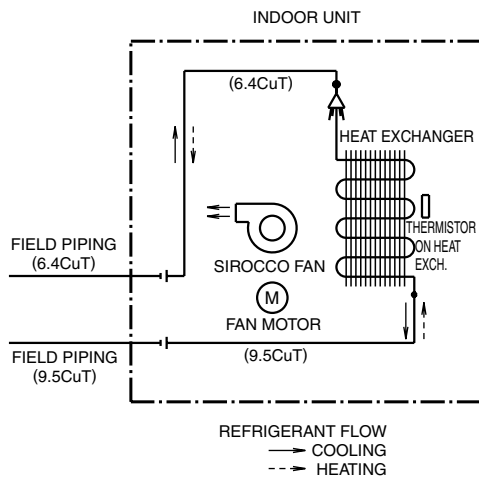


4D048722B

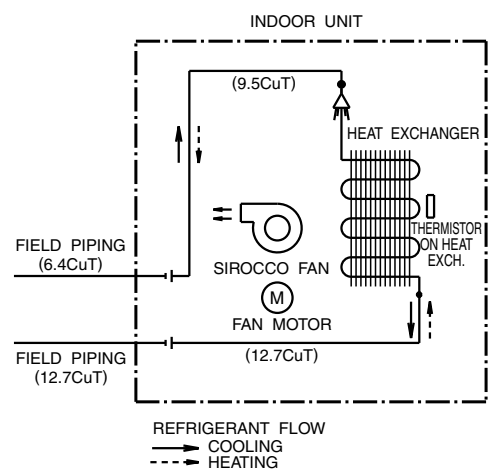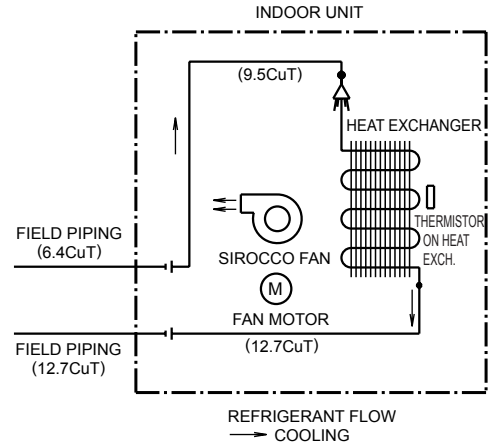

4D048724B

### 1.1.4 Duct Connected Type


FDK(X)S25/35EAVMB, FDK(X)S50/60CVMB

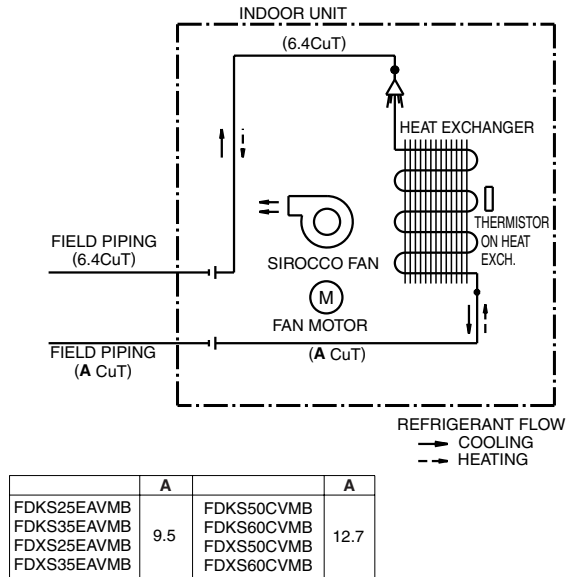

C: 4D045449L

### 1.1.5 Ceiling Mounted Cassette Type


FFQ25/35/50/60B8V1B

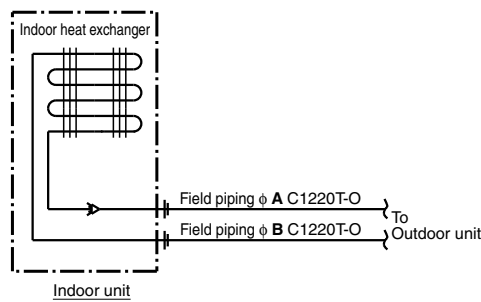

MODEL	A	B
FFQ25/35B8V1B	6.4	9.5
FFQ50/60B8V1B	6.4	12.7

C: 4D039335A

FCQ35/50/60C7VEB, FCQ35/50/60C8VEB

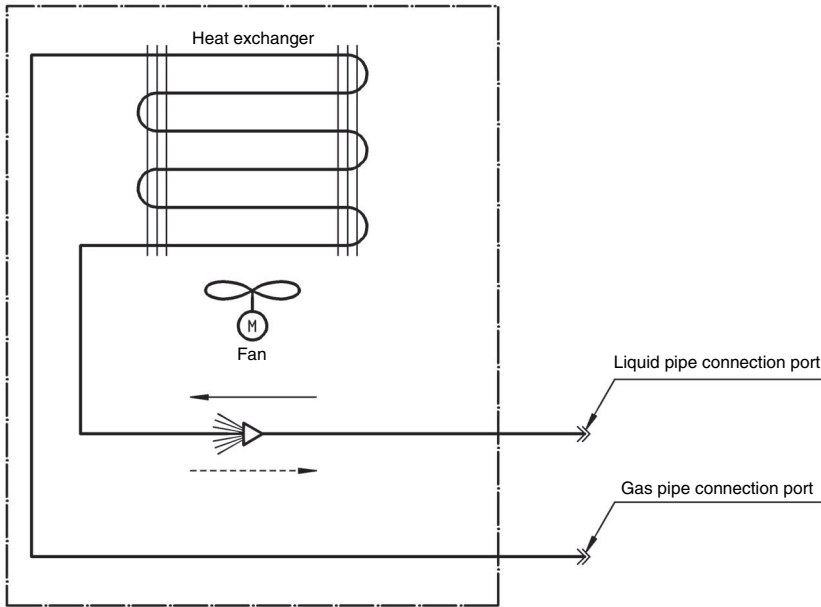


Model	Gas	Liquid
FCQ35C	φ9.52	φ6.35
FCQ50C	φ12.70	φ6.35
FCQ60C		

Cooling ————  
 Heating - - - - -

C: 3TW28925-1A

1.1.6 Ceiling Mounted Built-in Type

FDBQ25B8V1

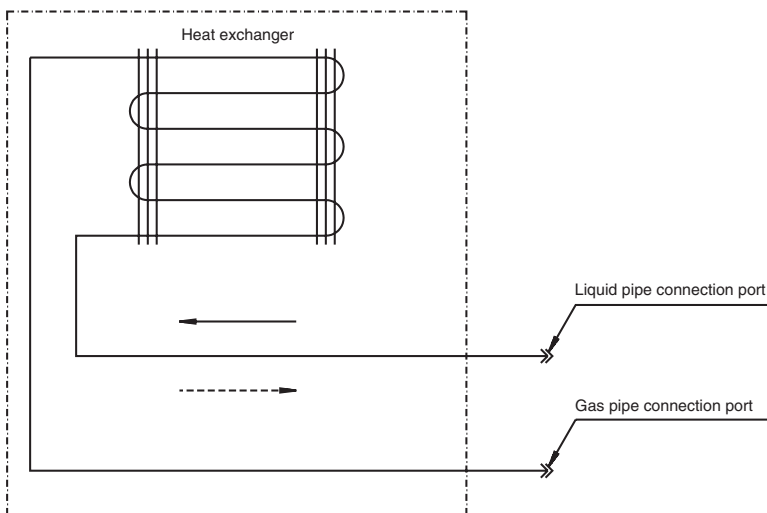


Refrigerant flow  
 Cooling ————  
 Heating - - - - -

Refrigerant pipe connection port diameters

Model	Gas	Liquid
FDBQ25B8V1	φ9.52	φ6.35

C: 3TW20815-1B


**FBQ35/50/60C7VEB**

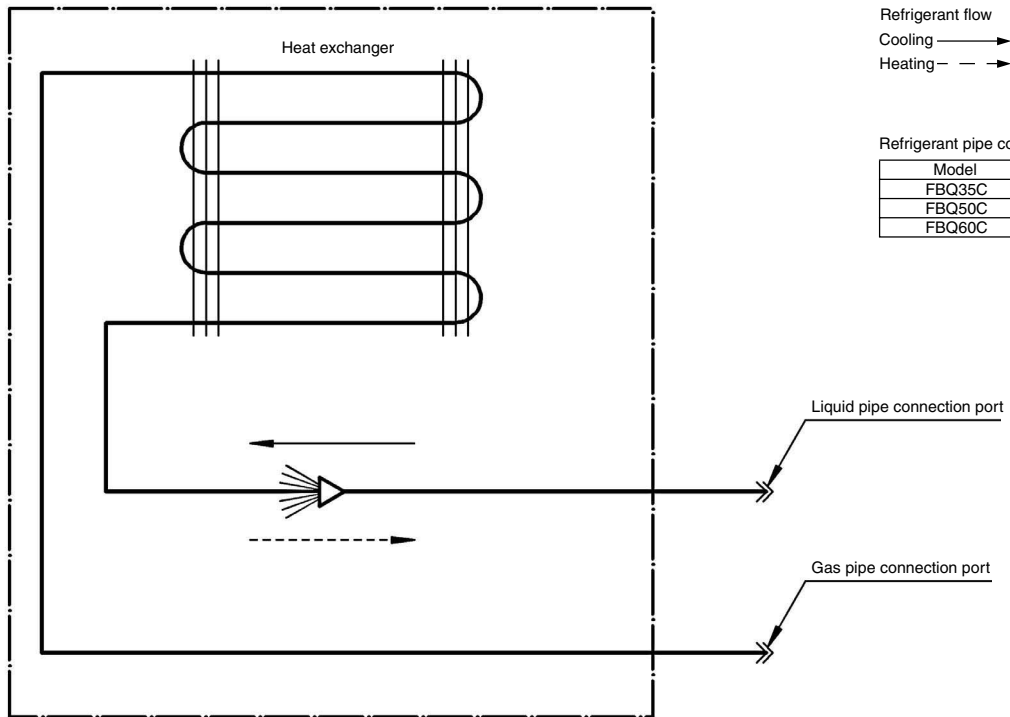

C: 3TW31275-1

**1.1.7 Ceiling Suspended Type**

**FHQ35/50/60BVV1B**

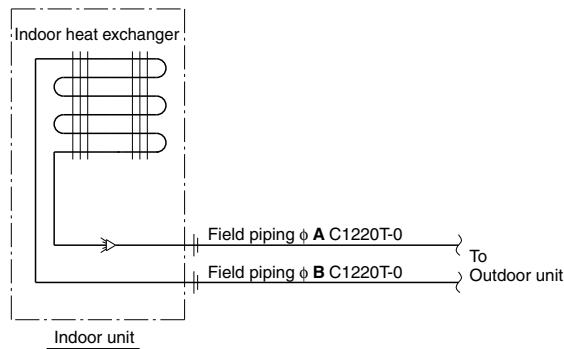


MODEL	A	B
FHQ35BVV1B	6.4	9.5
FHQ50/60BVV1B	6.4	12.7

C: 4D037995J

# 1.2 Outdoor Unit


## 1.2.1 Cooling Only

### 3MKS50E3V1B

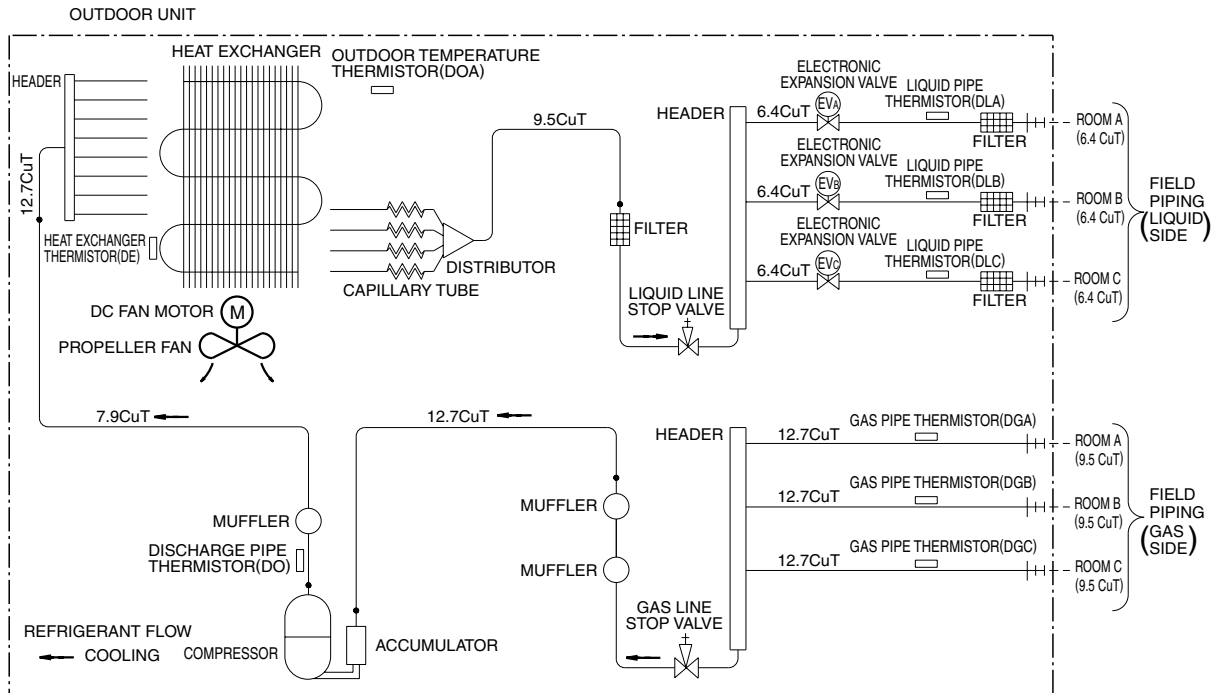


3D052056C

### 4MKS58E3V1B

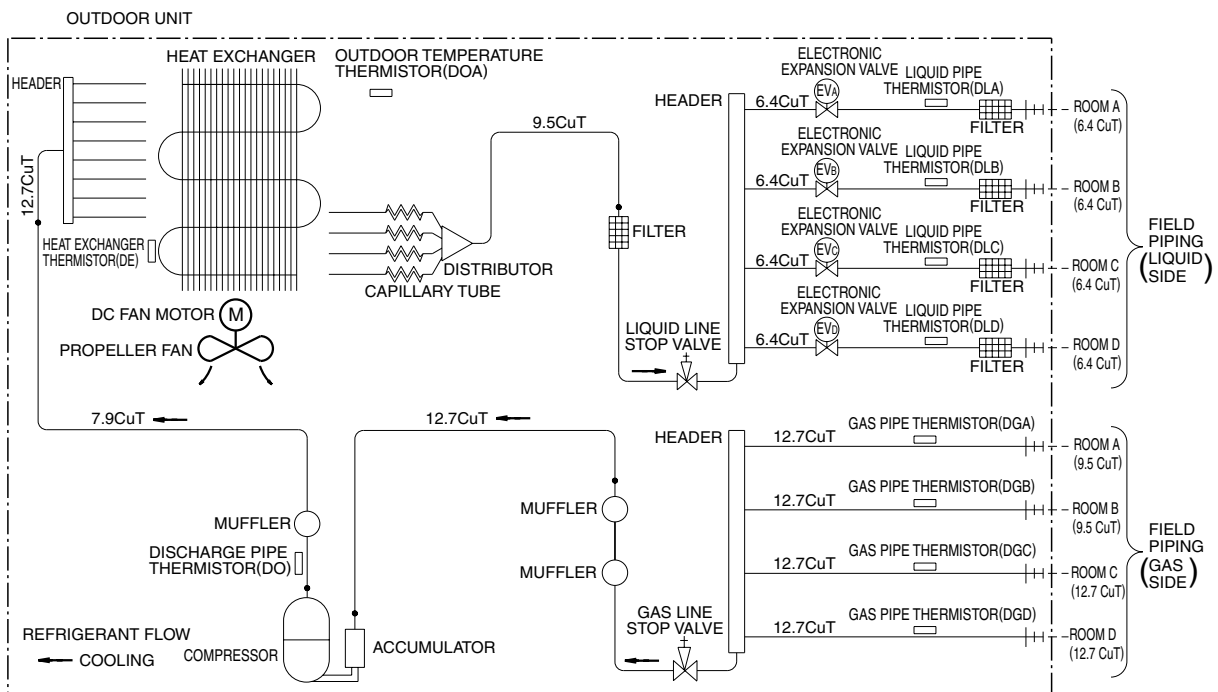


3D052057B

4MKS75F2V1B

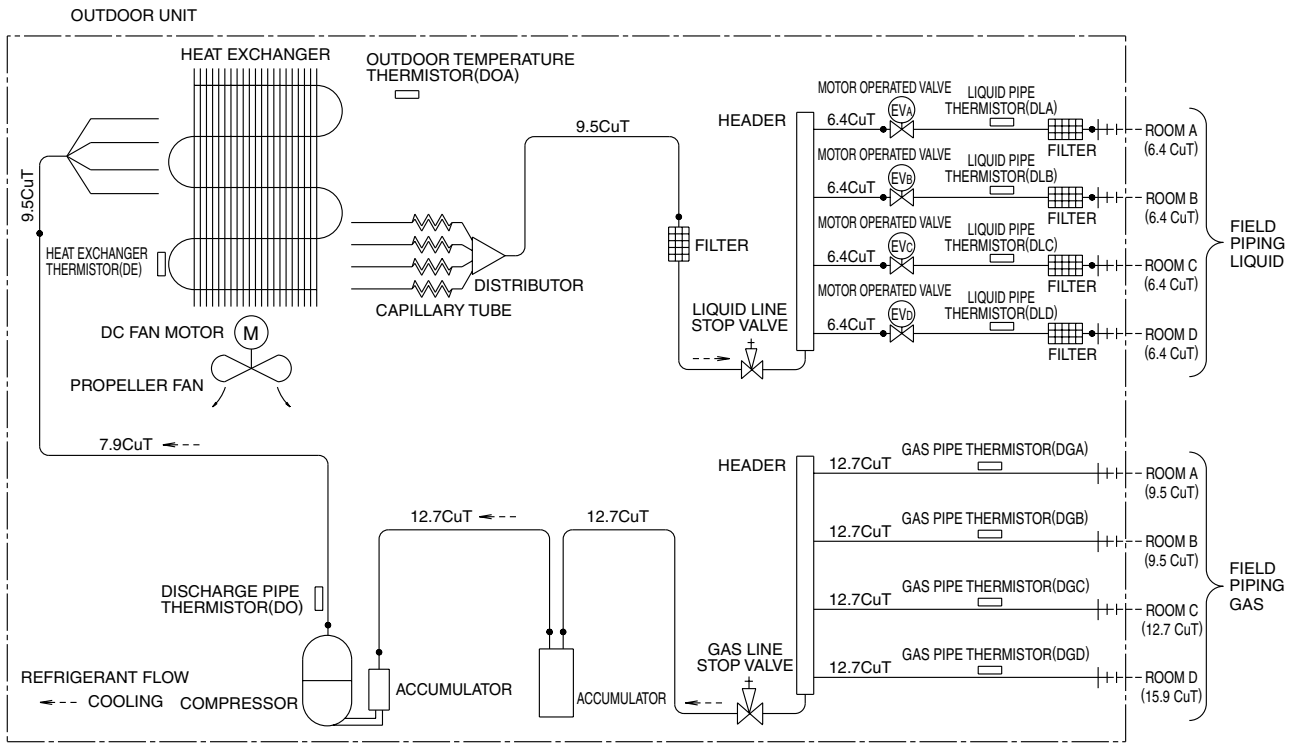

3D034513H


5MKS90E2V3B

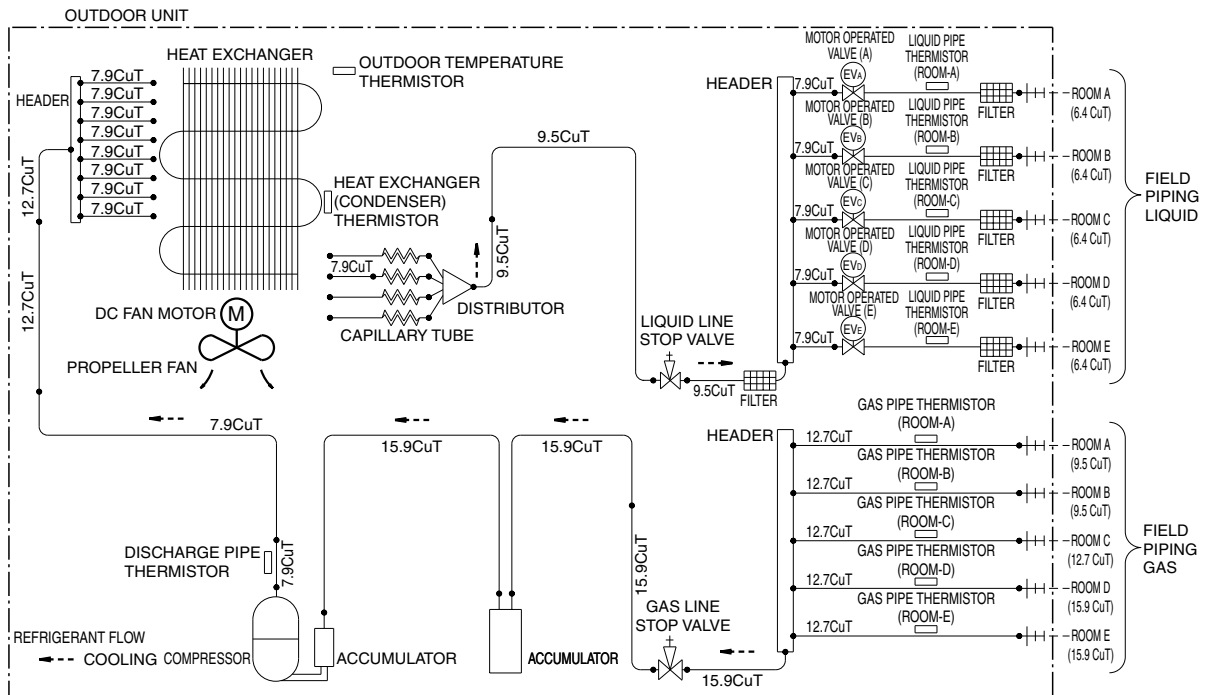

3D051938


### 1.2.2 Heat Pump

#### 3MXS52E3V1B, 3AMX52E3V1B

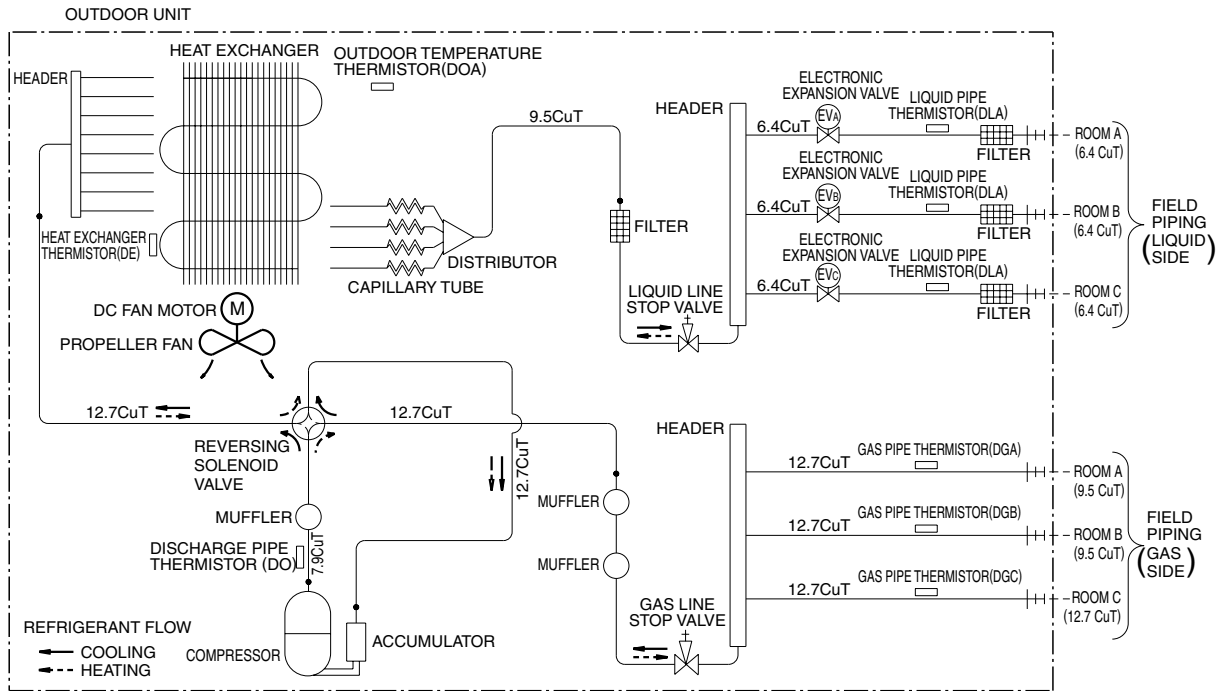

3D052055C


#### 3MXS68G2V1B

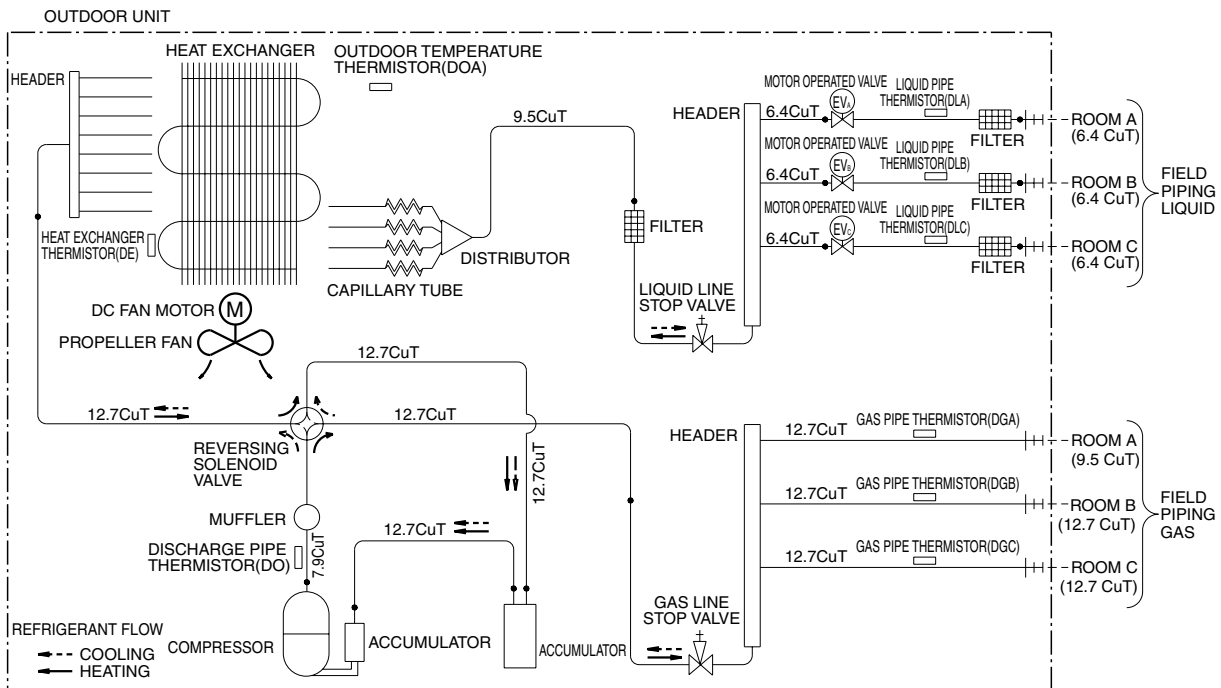

3D058888




4MXS68F2V1B

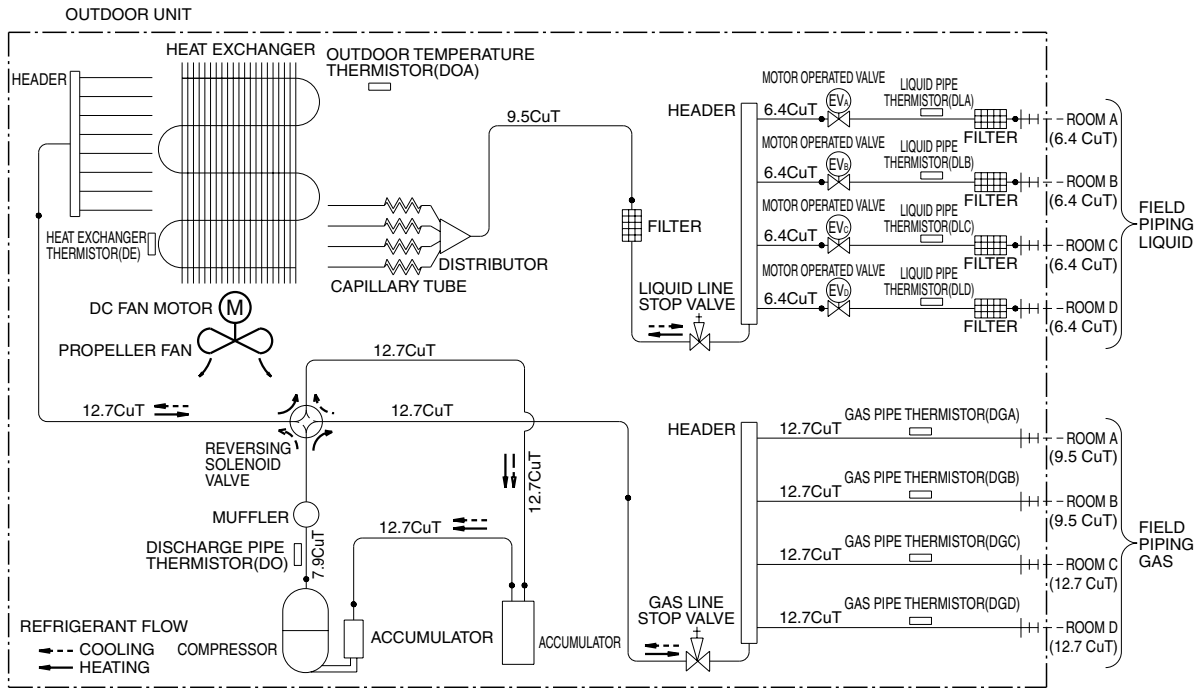


3D055041

4MXS80E2V3B, 4AMX80E2V3B

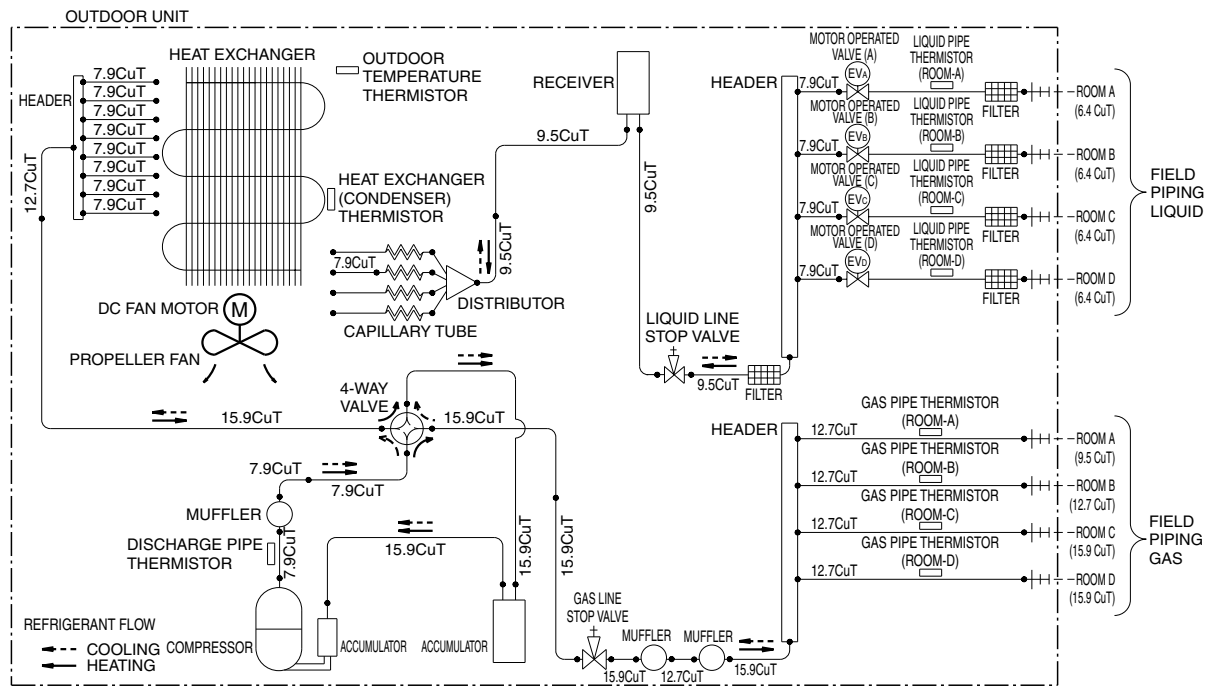

C: 3D051937D

5MXS90E2V3B

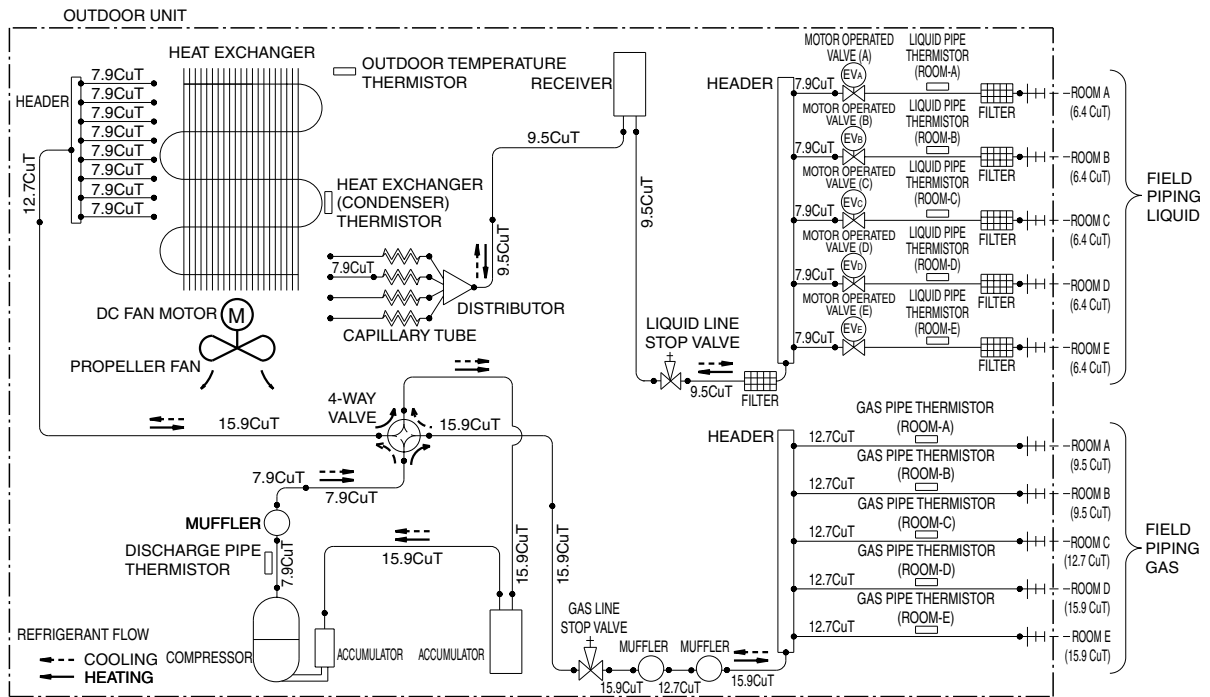


3D051936A

## 2. Wiring Diagrams

### 2.1 Indoor Unit


#### 2.1.1 Wall Mounted Type

FTXG25/35JV1BW(S), CTXG50JV1BW(S)

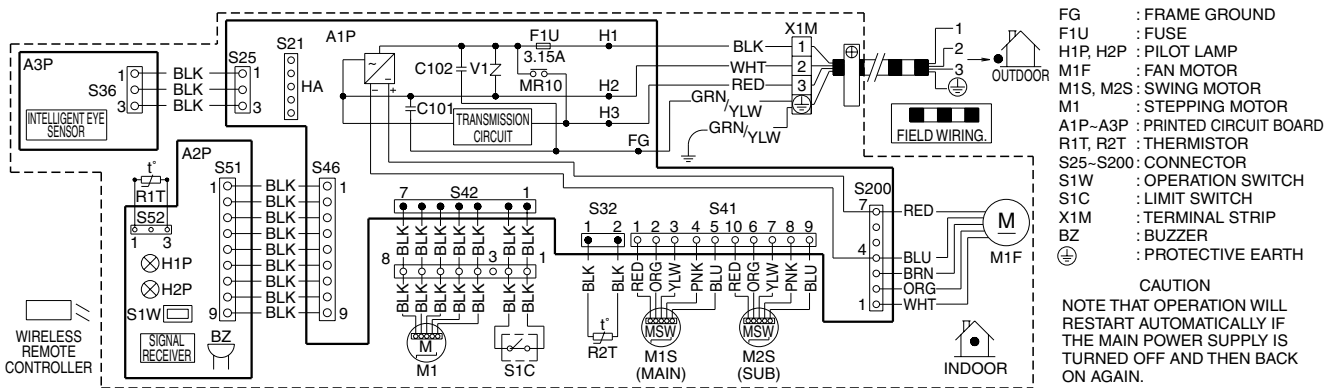


3D065507B

FTXS20/25/35/42/50G2V1B, FTXS20/25/35/42/50J2V1B, ATXS20/25/35/42/50G2V1B

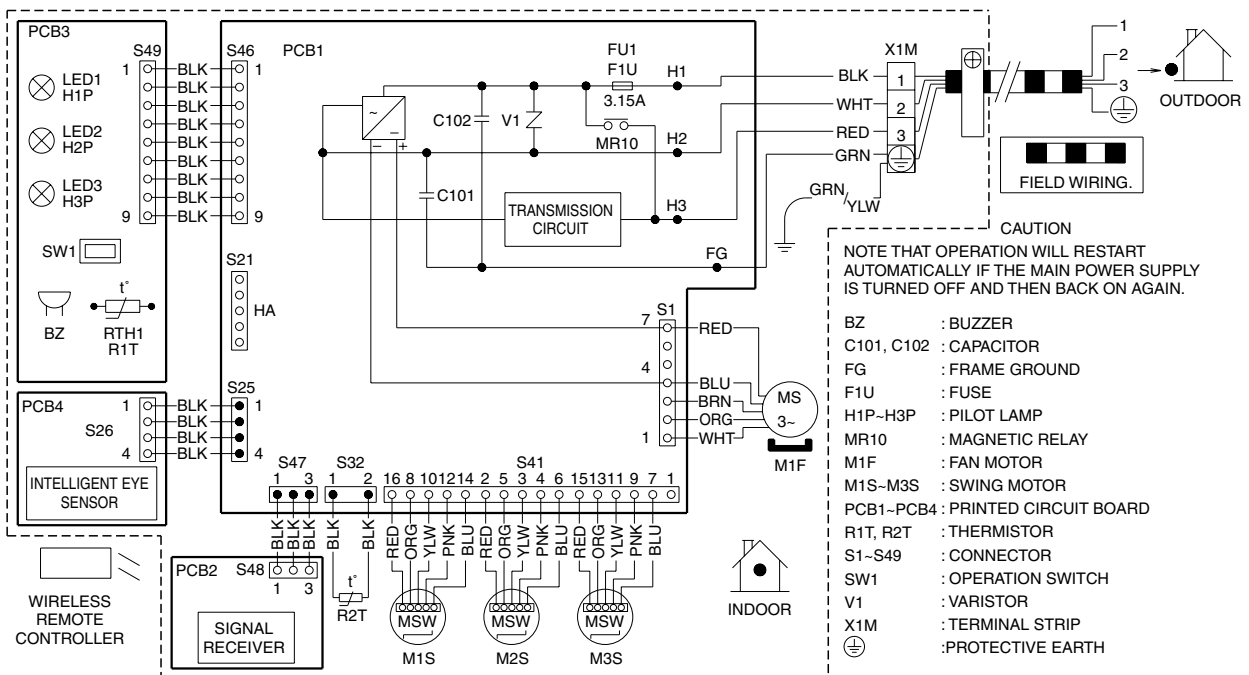

3D058246D


FTXS60/71GV1B

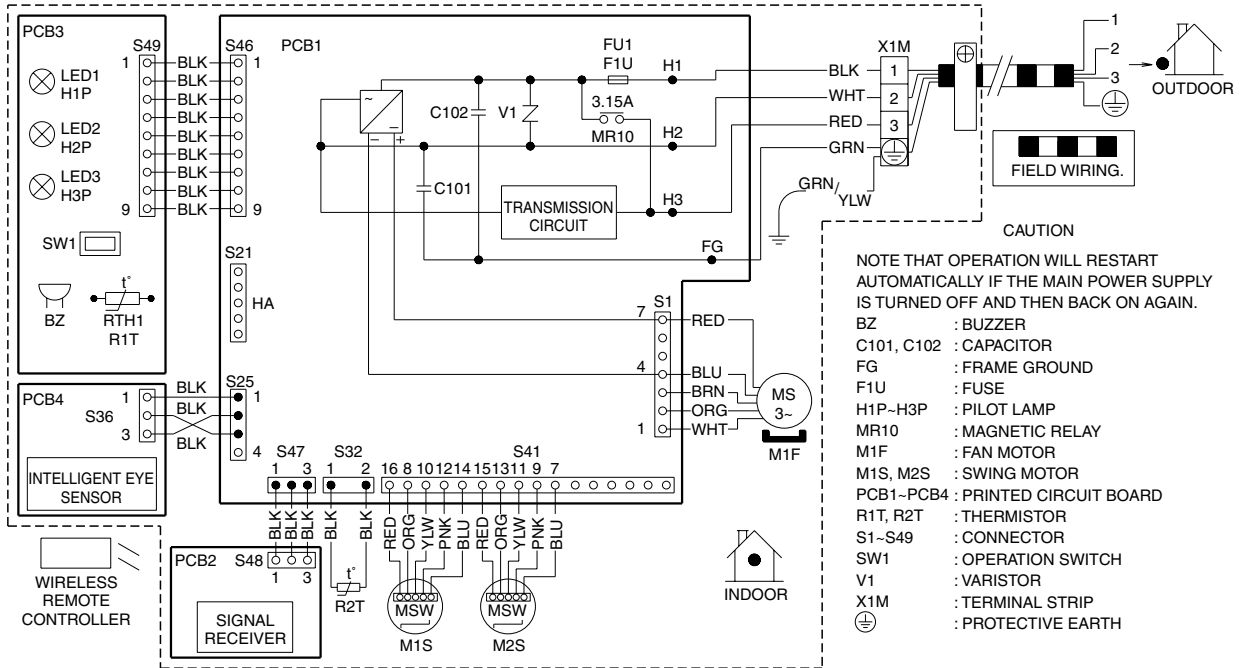

3D064800A

2.1.2 Floor Standing Type


FVXS25/35/50FV1B

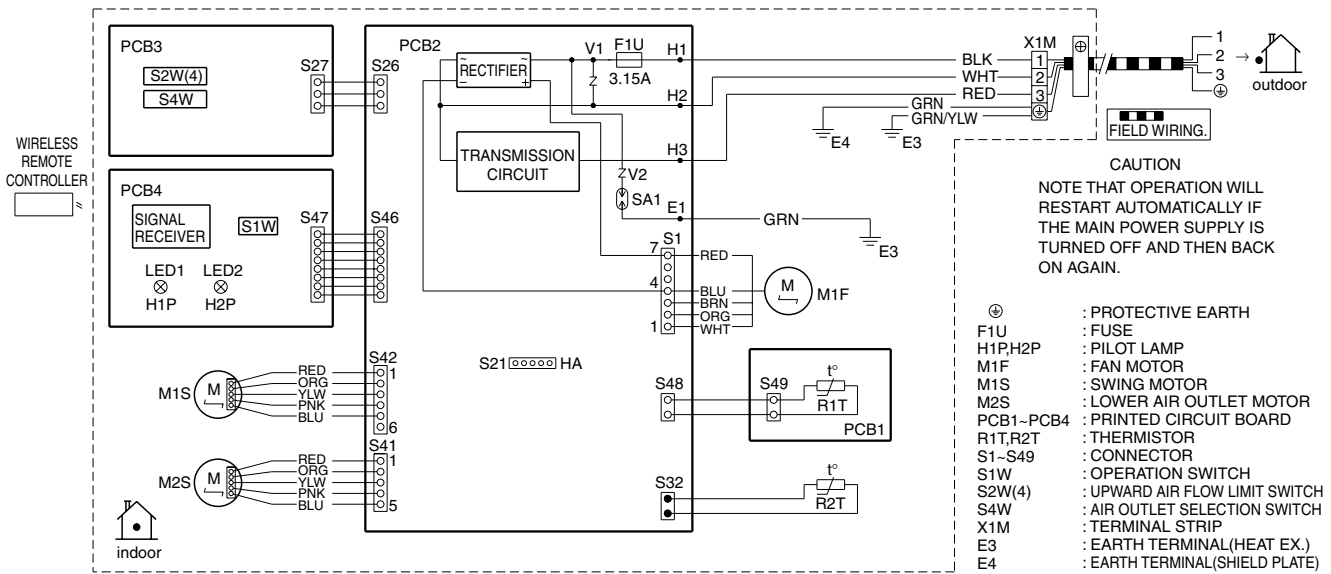

3D055953A

### 2.1.3 Floor / Ceiling Suspended Dual Type


FLK(X)S25/35/50/60BAVMB

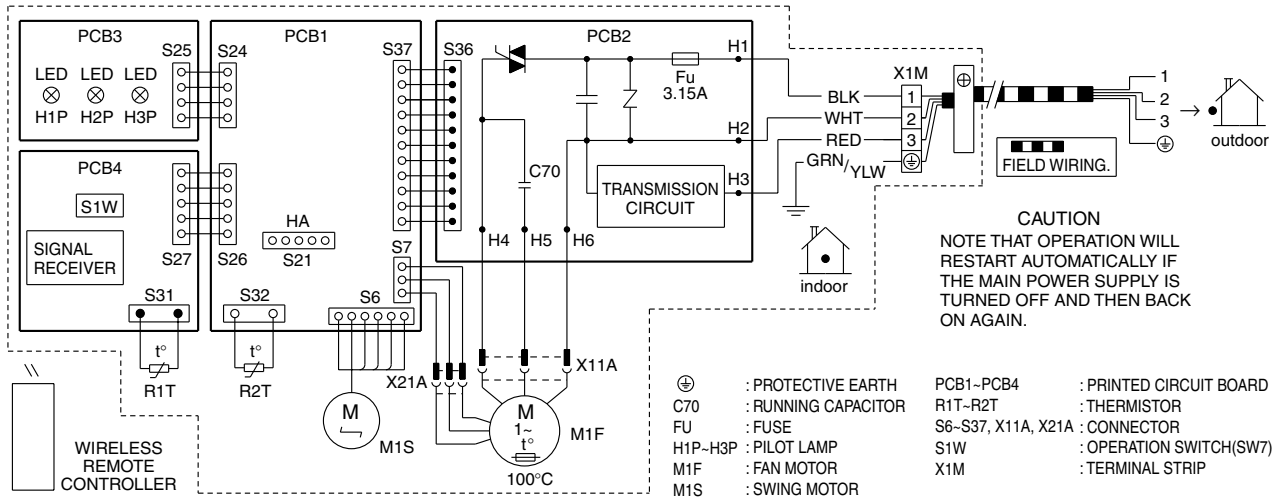

3D033909F

### 2.1.4 Duct Connected Type


FDK(X)S25/35EAVMB, FDK(X)S50/60CVMB

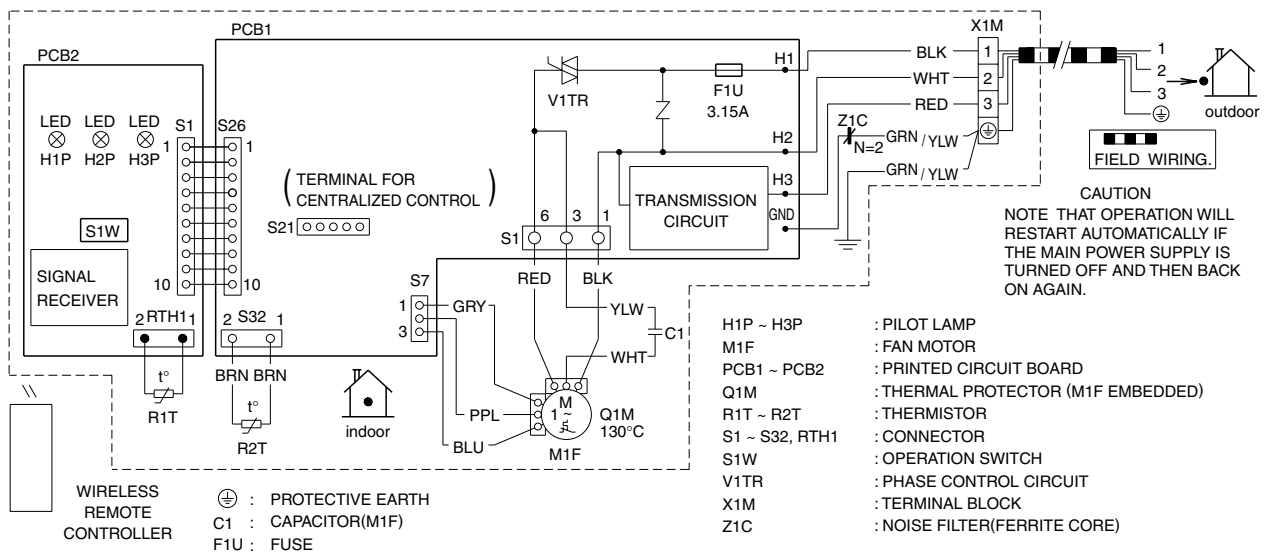

3D045012L

## 2.1.5 Ceiling Mounted Cassette Type


### FFQ25/35/50/60B8V1B

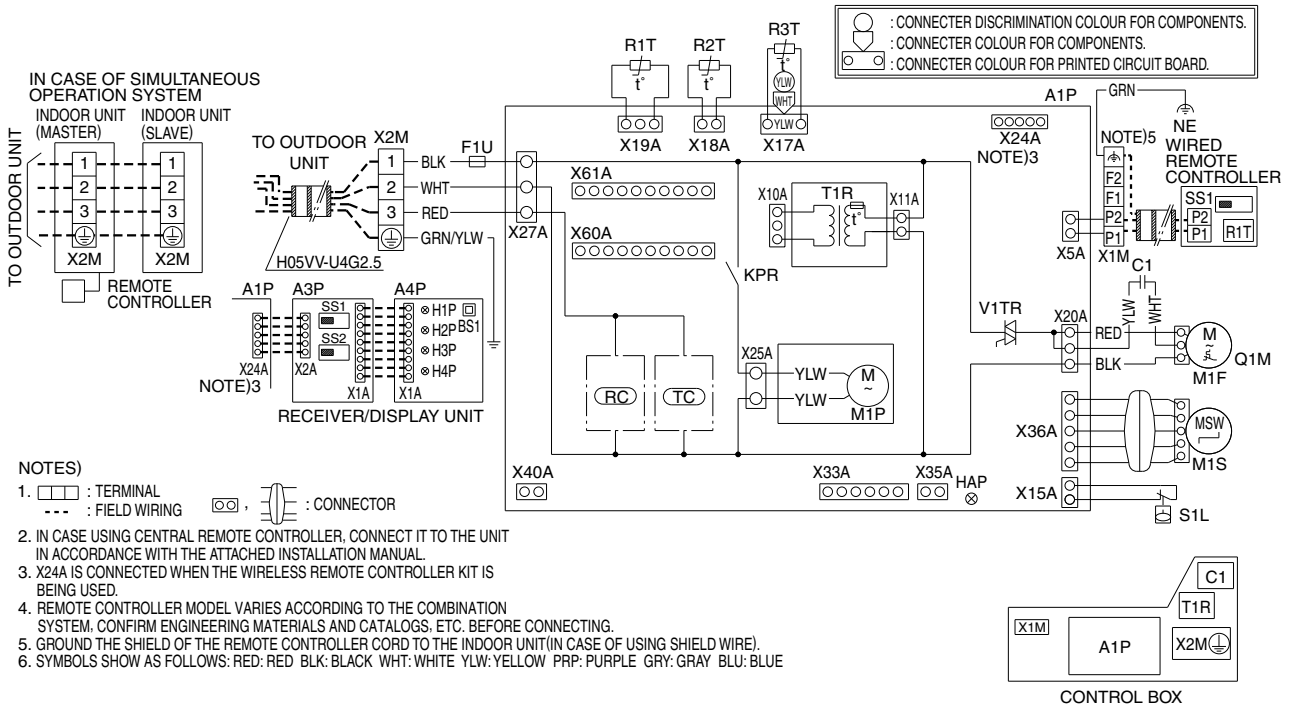

A1P	PRINTED CIRCUIT BOARD	BS1	PUSH BUTTON(ON/OFF)
C1	CAPACITOR(M1F)	H1P	LIGHT EMITTING DIODE (ON-RED)
F1U	FUSE(F5A 250V)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
KPR	MAGNETIC RELAY(M1P)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
M1F	MOTOR(INDOOR FAN)	SS1	SELECTOR SWITCH (MAIN/SUB)
M1P	MOTOR(DRAIN PUMP)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
M1S	MOTOR(SWING FLAP)	CONNECTOR FOR OPTIONAL PARTS	
Q1M	THERMO SWITCH(M1F EMBEDDED)	X33A	CONNECTOR (ADAPTOR FOR WIRING)
R1T	THERMISTOR(AIR)	X35A	CONNECTOR (GROUP CONTROL ADAPTOR)
R2T	THERMISTOR(COIL-1)	X40A	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)
R3T	THERMISTOR(COIL-2)	X60A	CONNECTOR (INTERFACE ADAPTOR FOR SKYAIR SERIES)
S1L	FLOAT SWITCH	X61A	
T1R	TRANSFORMER(220-240V/22V)		
V1TR	PHASE CONTROL CIRCUIT		
X1M	TERMINAL STRIP		
X2M	TERMINAL STRIP		
RC	SIGNAL RECEIVER CIRCUIT		
TC	SIGNAL TRANSMISSION CIRCUIT		
WIRED REMOTE CONTROLLER			
R1T	THERMISTOR(AIR)		
SS1	SELECTOR SWITCH(MAIN/SUB)		
WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)			
A3P	PRINTED CIRCUIT BOARD		
A4P	PRINTED CIRCUIT BOARD		

3D038357B

FCQ35/50/60C7VEB

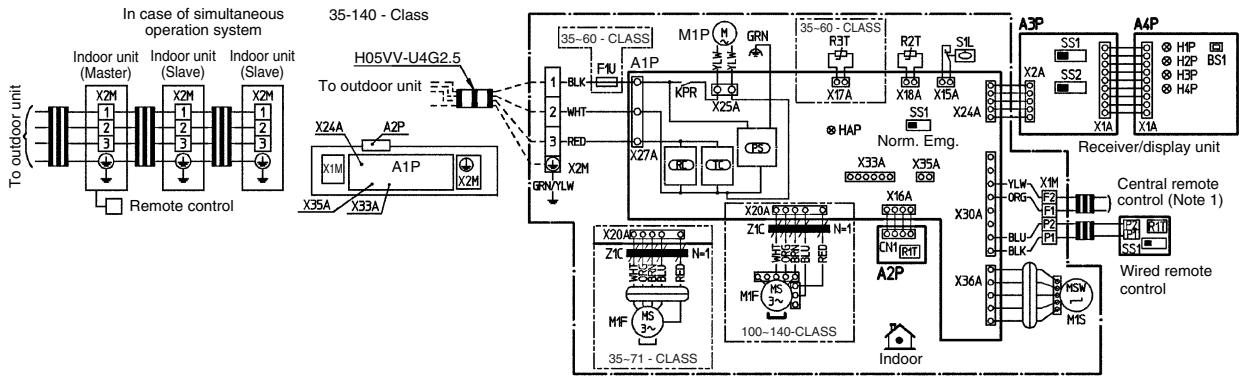

INDOOR UNIT		RECEIVER/DISPLAY UNIT (ATTACHED TO INFRARED REMOTE CONTROL)		WIRED REMOTE CONTROL	
A1P	Printed circuit board	R3T	Thermistor (coil)	H1P	Light emitting diode (on-red)
A2P	Printed circuit board (humidity sensor unit)	RC	Signal receiver circuit	H2P	Light emitting diode (timer-green)
F1U	Fuse (T, 5A, 250V)	S1L	Float switch	H3P	Light emitting diode (filter sign-red)
HAP	Light emitting diode (service monitor green)	SS1	Selector switch (emergency)	H4P	Light emitting diode (defrost-orange)
KPR	Magnetic relay (M1P)	TC	Signal transmission circuit	SS1	Selector switch (main/sub)
M1F	Motor (indoor fan)	X1M	Terminal strip	SS2	Selector switch (wireless address set)
M1P	Motor (drain pump)	X2M	Terminal strip	<b>CONNECTOR FOR OPTIONAL PARTS</b>	
M1S	Motor (swing flap)	Z1C	Ferrite core	X24A	Connector (infrared remote control)
PS	Power supply circuit	<b>RECEIVER/DISPLAY UNIT (ATTACHED TO INFRARED REMOTE CONTROL)</b>		X33A	Connector (adapter for wiring)
R1T	Thermistor (air)	A3P	Printed circuit board	X35A	Connector (group control adapter)
R2T	Thermistor (coil)	A4P	Printed circuit board	<b>WIRED REMOTE CONTROL</b>	
		BS1	Push button (on/off)	R1T	Thermistor (air)
				SS1	Selector switch (main/sub)


□□□□ : Terminal block  
 ⊙, ⊚, ⊛ : Connector  
 ──┬── : Field wiring

Colors: RED: Red GRN: Green  
 BLK: Black ORG: Orange  
 WHT: White BRN: Brown  
 YLW: Yellow GRY: Grey  
 BLU: Blue

NOTES

- 1 In case of using central remote control, connect it to the unit in accordance with the attached installation manual.
- 2 X24A, X33A, and X35A are connected when the optional accessories are being used.
- 3 Remote control model varies according to the combination system, confirm engineering data and catalogs, etc. before connecting
- 4 Confirm the method of setting the selector switch (SS1, SS2) by installation manual and engineering data, etc.

FCQ35/50/60C8VEB

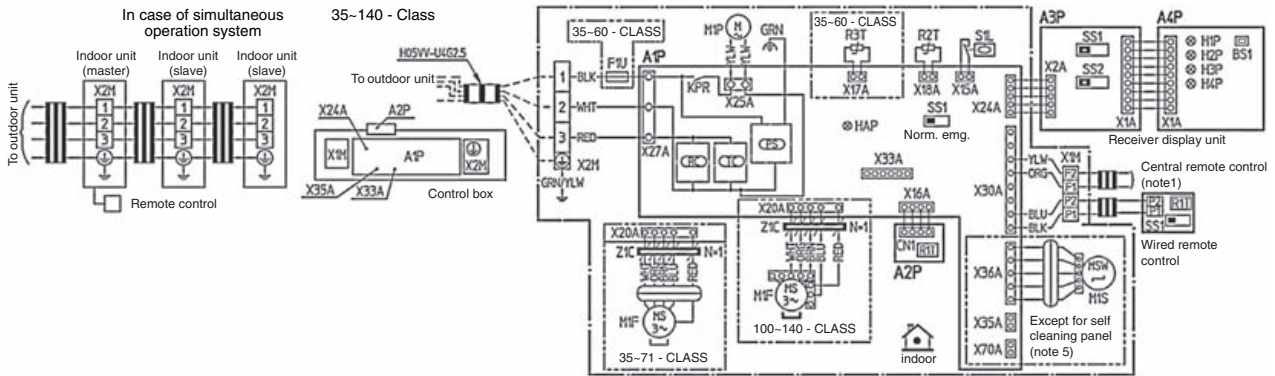

Indoor unit		Receiver display unit (attached to wireless remote controller)	
A1P	Printed circuit board	A3P	Printed circuit board
A2P	Printed circuit board (Humidity sensor unit)	A4P	Printed circuit board
HAP	Light emitting diode (Service monitor green)	BS1	Push button (On/off)
KPR	Magnetic relay (M1P)	H1P	Light emitting diode (On-red)
M1F	Motor (Indoor fan)	H2P	Light emitting diode (Timer-green)
M1P	Motor (Drain pump)	H3P	Light emitting diode (Filter sign-red)
M1S	Motor (Swing ap)	H4P	Light emitting diode (Defrost - orange)
PS	Power supply circuit	SS1	Selector switch (Main/sub)
R1T	Thermistor (Air)	SS2	Selector switch (Wireless address set)
R2T	Thermistor (Coil)	<b>Connector for optional parts</b>	
RC	Signal receiver circuit	X24A	Connector (Wireless remote control)
S1L	Float switch	X33A	Connector (Adapter for wiring)
SS1	Selector switch (Emergency)	X35A	Connector (Group control adapter)
TC	Signal transmission circuit	X70A	Connector (Self cleaning panel)
X1M	Terminal strip	<b>Wired remote control</b>	
X2M	Terminal strip	R1T	Thermistor (Air)
Z1C	Ferrite core	SS1	Selector switch (Main/sub)

- : Terminal strip
- : Connector
- : Field wiring

- Colors:
- RED: Red
  - BLK: Black
  - WHT: White
  - YLV: Yellow
  - GRN: Green
  - ORG: Orange
  - BRN: Brown
  - GRY: Grey
  - BLU: Blue

NOTES

- 1 In case of using a central remote control, connect it to the unit in accordance with the attached installation manual.
- 2 X24A, X33A, X35A and X70A are connected when the optional accessories are being used.
- 3 Remote control model varies according to the combination system, confirm engineering data and catalogs, etc. before connecting.
- 4 Confirm the method of setting the selector switch (SS1, SS2) by installation manual and engineering data, etc.
- 5 In case of self cleaning panel follow the self cleaning panel installation instruction.

C: 3TW32356-1




## 2.1.6 Ceiling Mounted Built-in Type

### FDBQ25B8V1

**Notes**

- When using the central remote control, see manual for connection to the unit.
- The remote control model varies according to the combination system. See technical materials and catalogues, etc. before connecting.


Field wiring     Terminal  
 : Connector  
 : Wire clamp  
 : Protective earth (screw)  
**Colours**  
 BLK: Black / WHT: White / RED: Red / BLU: Blue / ORG: Orange

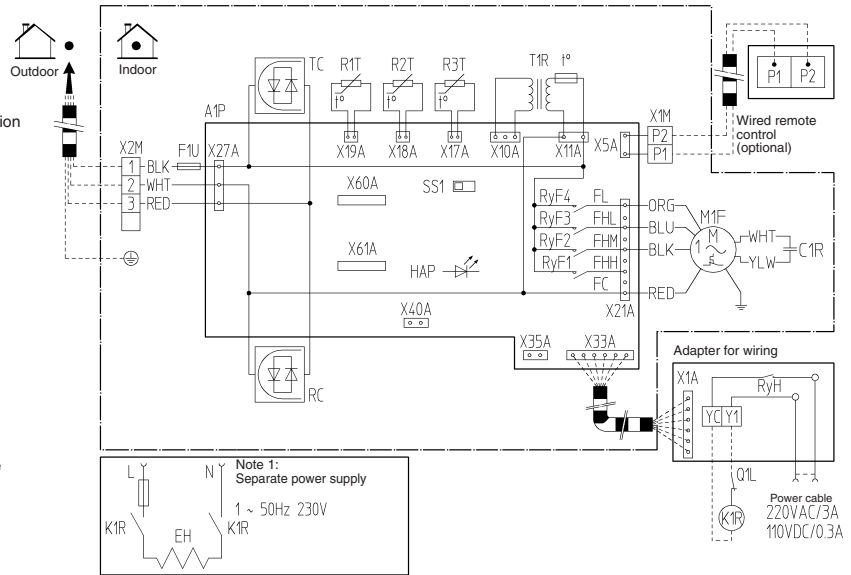

- |  |                                 |  |                          |
|--|---------------------------------|--|--------------------------|
| A1P Printed circuit board                                | R1T Thermistor (air)            | Adapter for wiring   | Field supply             |
| T1R Power supply transformer (transformer 220-240V/218V) | R2T Thermistor (liquid)         | RyH Magnetic relay   | K1R Magnetic relay       |
| C1R Capacitor (fan)                                      | R3T Thermistor (coil)           | Q1L Thermal protector  | EH Electrical heater kit |
| F1U Fuse (5A, 250V)                                      | RyF1-4 Magnetic relay (fan)     | Connector for optional parts                                     |                          |
| F1T Thermal fuse (152°C) (M1F embedded)                  | SS1 Selector switch (emergency) | X60A, X61A Connector (interface adaptor for SKY AIR / US series) |                          |
| HAP Light emitting diode (service monitor green)         | X1M Terminal strip              | X33A Connector (adapter for wiring)                              |                          |
| M1F Motor(Fan)   | X2M Terminal strip              | X35A Connector (group control adapter)                           |                          |
|  | RC Signal receiver circuit      | X40A Connector (remote ON/OFF forced OFF)                        |                          |
|  | TC Signal transmission circuit  |  |                          |

2TW25856-1

### FBQ35/50C7VEB

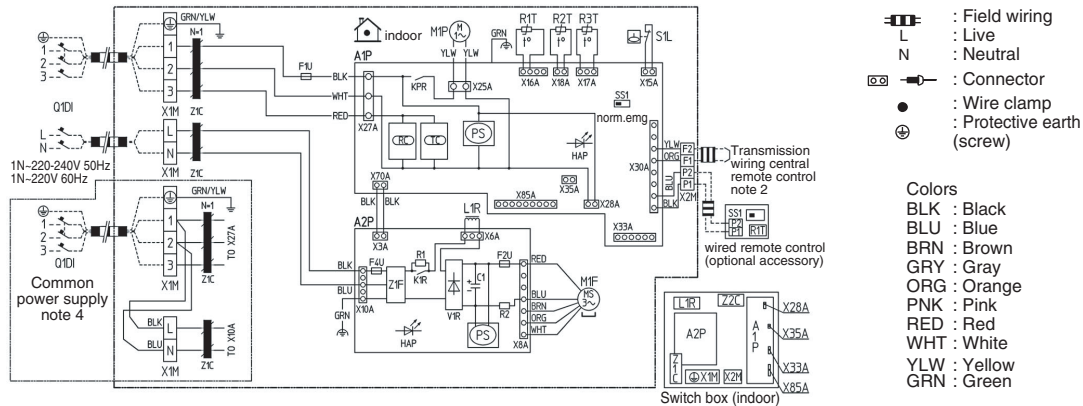


A1P Printed circuit board	M1P Motor (drain pump)	SS1 Selector switch (emergency)	(TC) Signal transmission circuit
A2P Printed circuit board (fan)	PS Switching power supply	S1L Float switch	Connector optional accessory
C1 Capacitor	Q1DI Earth leak detector	V1R Diode bridge	X28A Connector (Power supply for wiring)
F1U, F2U Fuse (T, 5A, 250V)	R1 Resistor (current limiting)	V2R Power module	X33A Connector (for wiring)
F4U Fuse (T, 6.3A, 250V)	R2 Current sensing device	X1M Terminal strip (power supply)	X35A Connector (adapter)
HAP Light emitting diode (Service monitor green)	R1T Thermistor (suction air)	X2M Terminal strip (control)	X85A Connector (for multizoning)
KPR, K1R Magnetic relay	R2T Thermistor (liquid)	Z1F Noise filter	X33A Connector (for wiring)
L1R Heater	R3T Thermistor (gas)	(RC) Signal receiver circuit	Wired remote control
			SS1 Selectorswitch (emergency)

2TW31276-1A

**NOTES**

- Use copper conductors only.
- When using the central remote controller, see manual for connection to the unit.
- The remote control model varies according to the combination system. See technical materials and catalogues, etc. before connecting.
- Refer to installation manual.

FBQ60C7VEB

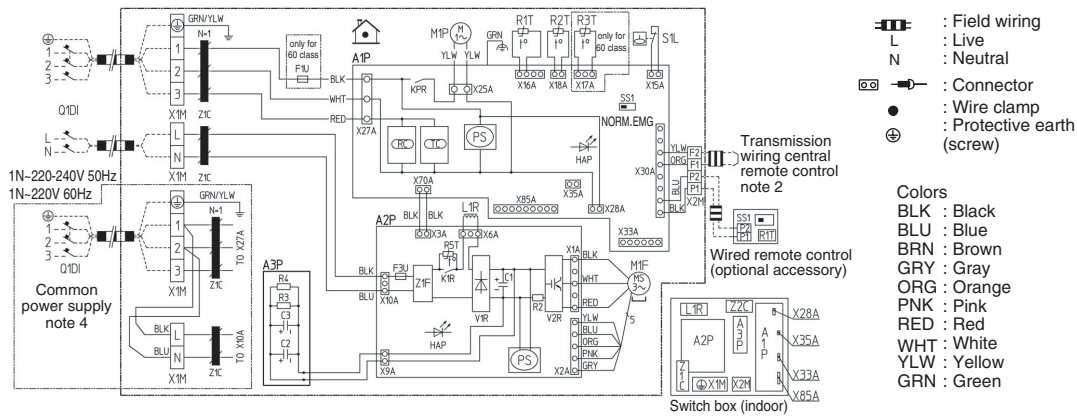

A1P	Indoor unit	L1R	Reactor	R3T	Thermistor (gas)	TC	Terminal strip (control)
A2P	Printed circuit board (fan)	M1F	Motor (fan)	R5T	Thermistor NTC (Current limiting)	Y1E	Electronic expansion valve
A3P	Printed circuit board (capacitor)	M1P	Motor (drain pump)	SS1	Selector switch (emergency)		Connector optional accessory
C1, C2, C3	Capacitor	PS	Switching power supply	S1L	Float switch	X33A	Connector (for wiring)
F1U	Fuse (T, 5A, 250V)	Q1DI	Earth leak detector	V1R	Diode bridge	X35A	Connector (adapter)
F3U	Fuse (T, 6.3A, 250V)	R2	Current sensing device	V2R	Power module	X38A	Connector (for wiring)
HAP	Light emitting diode (service monitor green)	R3, R4	Resistor (electric discharge)	Z1C	Noise filter (ferrite core)		Wired remote control
KPR, K1R	Magnetic relay	R1T	Thermistor (suction air)	Z1F	Noise filter	R1T	Thermistor (air)
		R2T	Thermistor (liquid)	(RC)	Terminal strip (power supply)	SS1	Selector switch (main/sub)


2TW31296-1A

NOTES

- 1 Use copper conductors only.
- 2 When using the central remote controller, see manual for connection to the unit.
- 3 The remote control model varies according to the combination system. See technical materials and catalogues, etc. before connecting.
- 4 Refer to installation manual.

2.1.7 Ceiling Suspended Type

FHQ35/50/60BVV1B

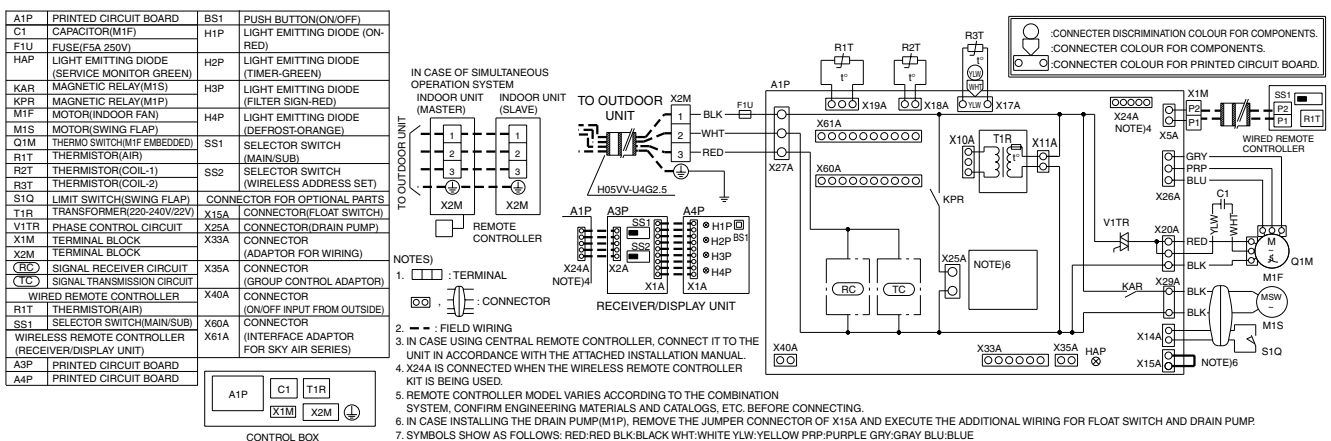


3D037842D

# 2.2 Outdoor Unit

## 2.2.1 Cooling Only


### 3MKS50E3V1B

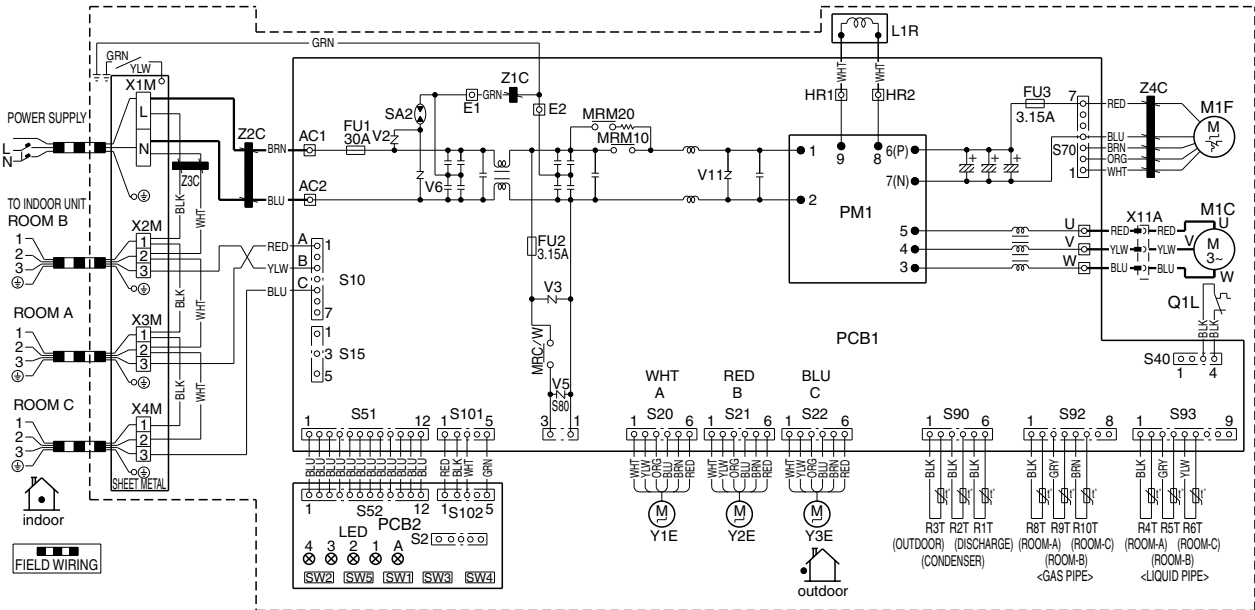

- |                     |                                   |              |                  |     |                                     |             |                              |
|---------------------|-----------------------------------|--------------|------------------|-----|-------------------------------------|-------------|------------------------------|
| Z1C - Z4C           | : FERRITE CORE                    | MRM10, MRM20 | : MAGNETIC RELAY | L   | : LIVE                              | M1C         | : COMPRESSOR MOTOR           |
| X1M - X4M           | : TERMINAL STRIP                  | MRC/W        | : MAGNETIC RELAY | N   | : NEUTRAL                           | M1F         | : FAN MOTOR                  |
| Y1E - Y3E           | : ELECTRONIC EXPANSION VALVE COIL | R1T - R6T    | : THERMISTOR     | SW1 | : FORCED OPERATION ON/OFF SW (SW1)  | L1R         | : REACTOR                    |
| V2, V3, V5, V6, V11 | : VARISTOR                        | R8T - R10T   | : THERMISTOR     | SW2 | : SELECT SW (SW2)                   | Q1L         | : OVERLOAD PROTECTOR         |
| SA2                 | : SURGE ARRESTER                  | S2 - S102    | : CONNECTOR      | SW3 | : WIRING ERROR CHECK SW (SW3)       | PM1         | : POWER MODULE               |
| FU1, FU2, FU3       | : FUSE                            | LED1 - LED4  | : PILOT LAMP     | SW4 | : PRIORITY ROOM SETTING SW (SW4)    | PCB1, 2     | : PRINTED CIRCUIT BOARD      |
| AC1, AC2            | : FUSE                            | LEDA         | : PILOT LAMP     | SW5 | : NIGHT QUIET MODE SETTING SW (SW5) | SHEET METAL | : TERMINAL STRIP FIXED PLATE |
| U, V, W, X11A       |                                   |              |                  |     |                                     |             |                              |
| E1, E2              | : CONNECTOR                       |              |                  |     |                                     |             |                              |
| HR1, HR2            | : CONNECTOR                       |              |                  |     |                                     |             |                              |

3D057135


### 4MKS58E3V1B

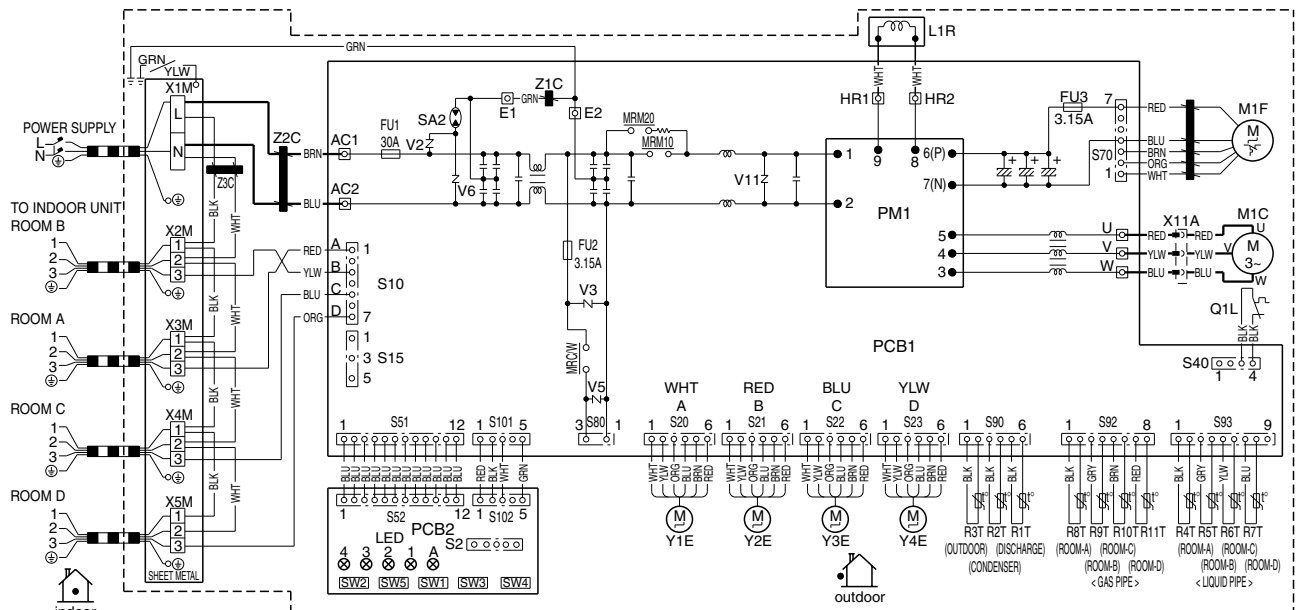


- |                     |                                   |              |                  |     |                                     |             |                              |
|---------------------|-----------------------------------|--------------|------------------|-----|-------------------------------------|-------------|------------------------------|
| Z1C - Z3C           | : FERRITE CORE                    | MRM10, MRM20 | : MAGNETIC RELAY | L   | : LIVE                              | M1C         | : COMPRESSOR MOTOR           |
| X1M - X5M           | : TERMINAL STRIP                  | MRC/W        | : MAGNETIC RELAY | N   | : NEUTRAL                           | M1F         | : FAN MOTOR                  |
| Y1E - Y4E           | : ELECTRONIC EXPANSION VALVE COIL | R1T - R11T   | : THERMISTOR     | SW1 | : FORCED OPERATION ON/OFF SW (SW1)  | L1R         | : REACTOR                    |
| V2, V3, V5, V6, V11 | : VARISTOR                        | S2 - S102    | : CONNECTOR      | SW2 | : SELECT SW (SW2)                   | Q1L         | : OVERLOAD PROTECTOR         |
| SA2                 | : SURGE ARRESTER                  | LED1 - LED4  | : PILOT LAMP     | SW3 | : WIRING ERROR CHECK SW (SW3)       | PM1         | : POWER MODULE               |
| FU1, FU2, FU3       | : FUSE                            | LEDA         | : PILOT LAMP     | SW4 | : PRIORITY ROOM SETTING SW (SW4)    | PCB1, 2     | : PRINTED CIRCUIT BOARD      |
| AC1, AC2            | : FUSE                            |              |                  | SW5 | : NIGHT QUIET MODE SETTING SW (SW5) | SHEET METAL | : TERMINAL STRIP FIXED PLATE |
| U, V, W, X11A       |                                   |              |                  |     |                                     |             |                              |
| E1, E2              | : CONNECTOR                       |              |                  |     |                                     |             |                              |
| HR1, HR2            | : CONNECTOR                       |              |                  |     |                                     |             |                              |

3D051014B

4MKS75F2V1B

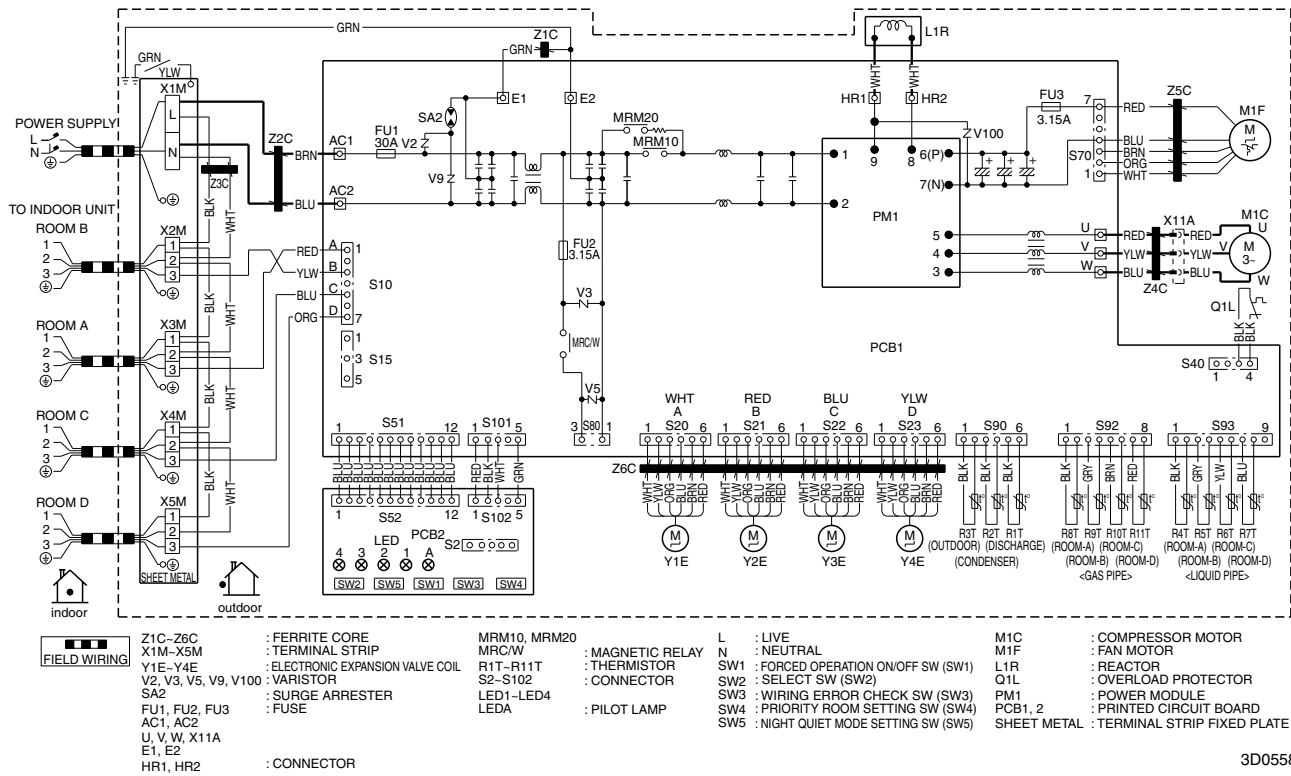


5MKS90E2V3B

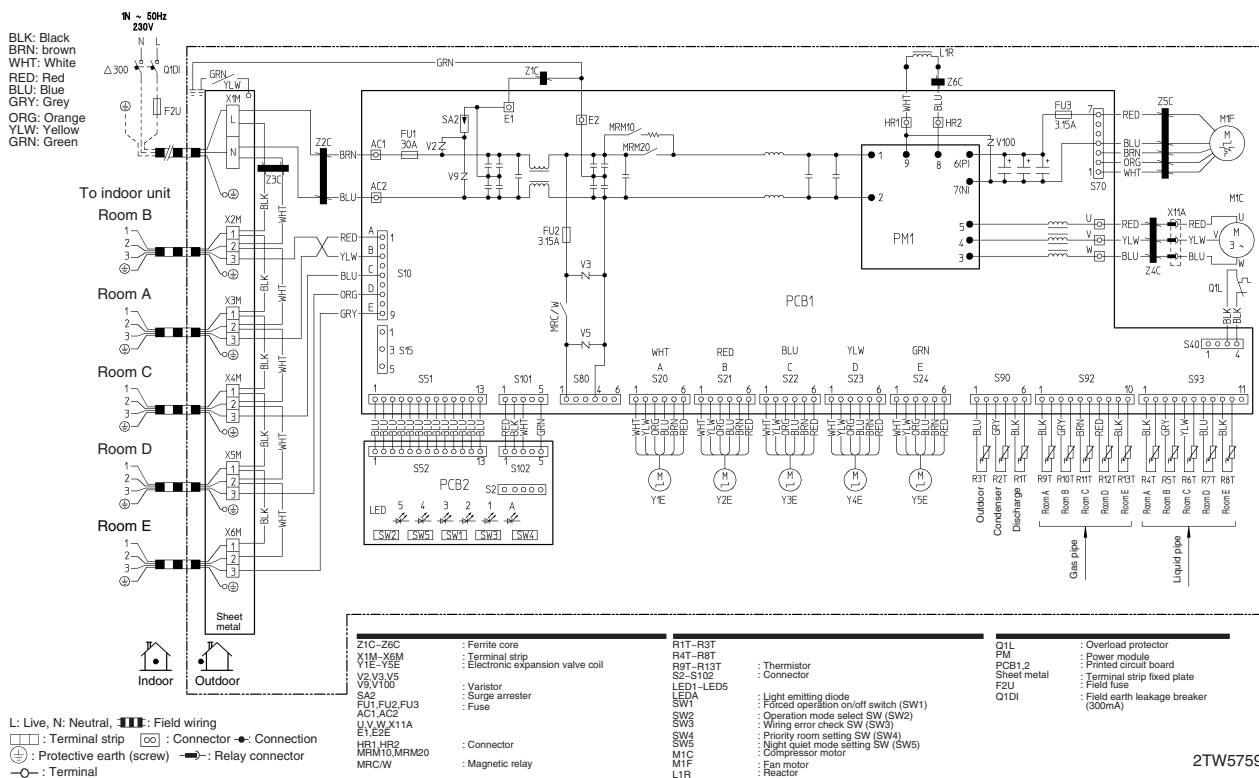


## 2.2.2 Heat Pump


### 3MXS52E3V1B, 3AMX52E3V1B

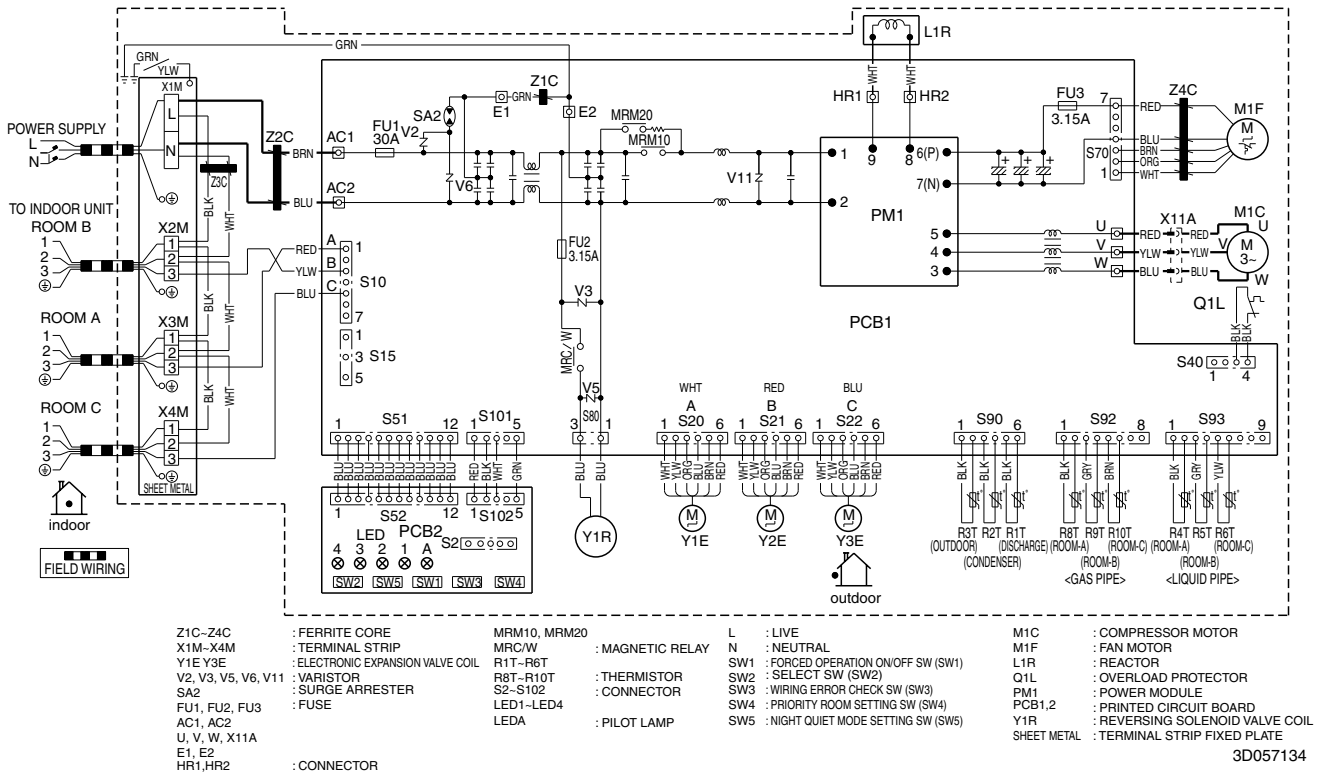


### 3MXS68G2V1B

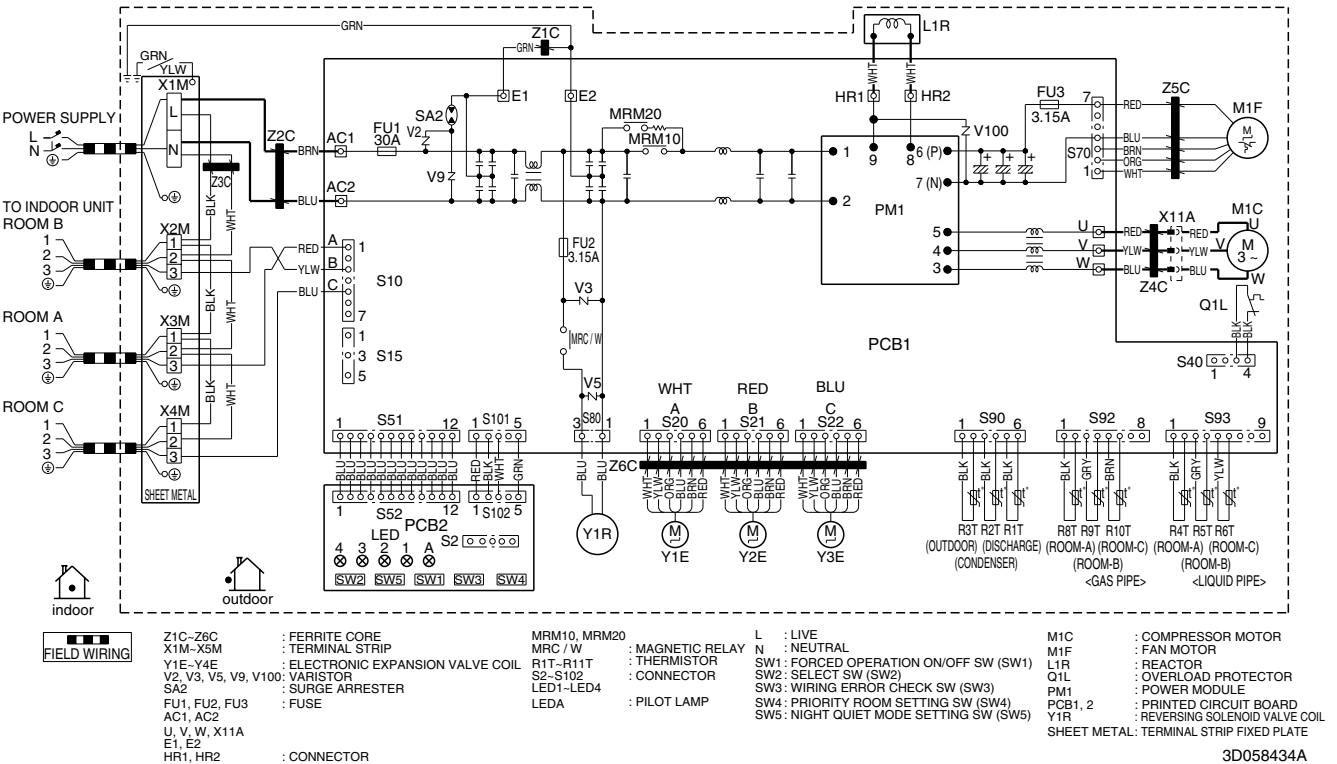


4MXS68F2V1B

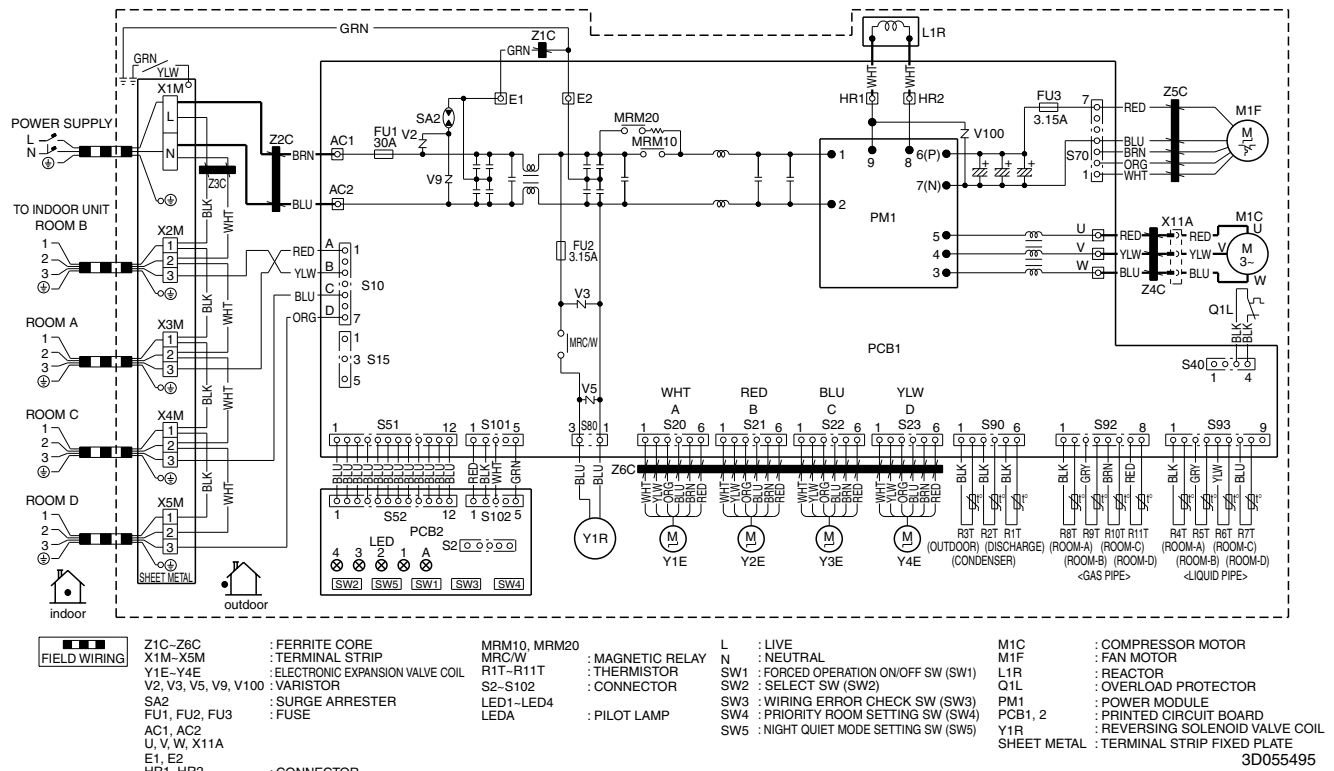

4MXS80E2V3B, 4AMX80E2V3B

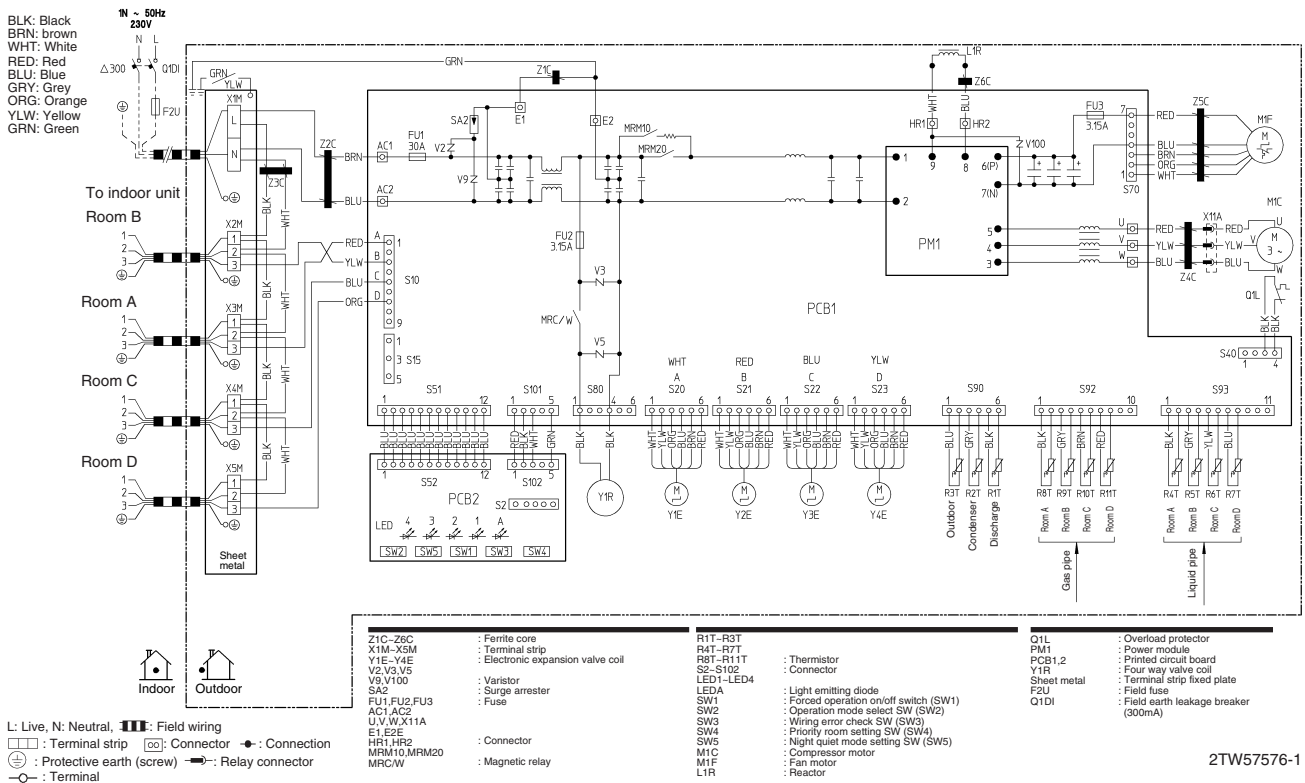

5MXS90E2V3B

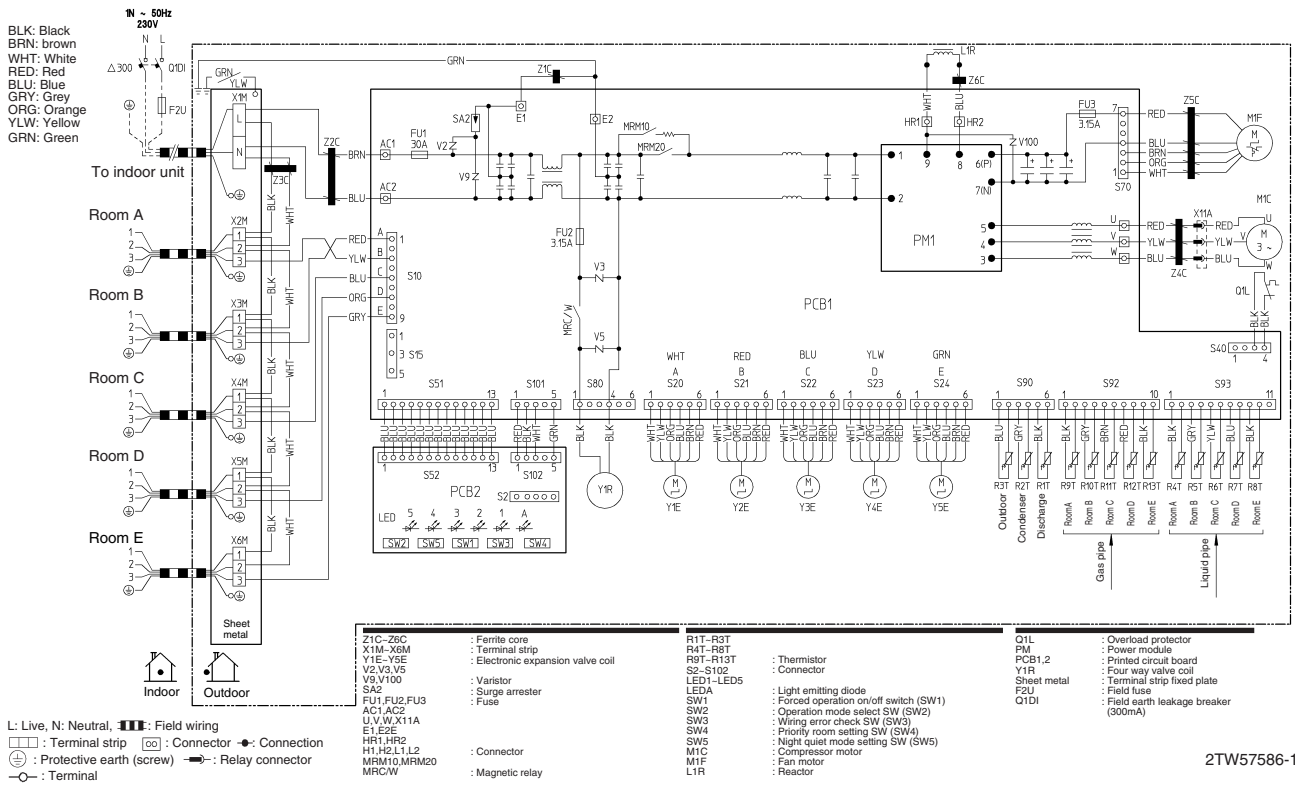

2TW57586-1

# Revision History

Month / Year	Version	Revised contents
07/2010	SiBE121021	–
11/2010	SiBE121021_A	M-10013: Correction of troubleshooting flowchart <del>for</del> for SkyAir models
12/2010	SiBE121021_B	Correction of data
03/2011	SiBE121021_C	Model addition: FTXS-J2 series, FCQ-C8 series, mass-sales route models



Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

### Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107

Organization:  
DAIKIN INDUSTRIES, LTD.  
AIR CONDITIONING MANUFACTURING DIVISION

Scope of Registration:  
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF COMMERCIAL AIR CONDITIONING, HEATING, COOLING, REFRIGERATING EQUIPMENT, COMMERCIAL HEATING EQUIPMENT, RESIDENTIAL AIR CONDITIONING EQUIPMENT, HEAT RECLAIM VENTILATION, AIR CLEANING EQUIPMENT, MARINE TYPE CONTAINER REFRIGERATION UNITS, COMPRESSORS AND VALVES.



JQA-1452

Organization:  
DAIKIN INDUSTRIES  
(THAILAND) LTD.

Scope of Registration:  
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF AIR CONDITIONERS AND THE COMPONENTS INCLUDING COMPRESSORS USED FOR THEM



EC99J2044

All of the Daikin Group's business facilities and subsidiaries in Japan are certified under the ISO 14001 international standard for environment management.

### Dealer

### DAIKIN INDUSTRIES, LTD.

Head Office:  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:  
JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan

[http://www.daikin.com/global\\_ac/](http://www.daikin.com/global_ac/)

©All rights reserved