



INSTALLATION MANUAL

SPLIT SYSTEM

Air Conditioners

MODELS
(Wall mounted type)

FAY71FJV1 FAYP71BV1 FAQ100BUV1B
FAY100FJV1 FAYP100BV1 FAQ100BVV1B

READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION.
KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

LESEN SIE DIESE ANWEISUNGEN VOR DER INSTALLATION SORGFÄLTIG DURCH.
BEWAHREN SIE DIESE ANLEITUNG FÜR SPÄTERE BEZUGNAHME GRIFFBEREIT AUF.

LIRE SOIGNEUSEMENT CES INSTRUCTIONS AVANT L'INSTALLATION.
CONSERVER CE MANUEL A PORTEE DE MAIN POUR REFERENCE ULTERIEURE.

LEA CUIDADOSAMENTE ESTAS INSTRUCCIONES ANTES DE INSTALAR.
GUARDE ESTE MANUAL EN UN LUGAR A MANO PARA LEER EN CASO DE TENER ALGUNA DUDA.

PRIMA DELL'INSTALLAZIONE LEGGERE ATTENTAMENTE QUESTE ISTRUZIONI.
TENERE QUESTO MANUALE A PORTATA DI MANO PER RIFERIMENTI FUTURI.

ΔΙΑΒΑΣΤΕ ΠΡΟΣΕΚΤΙΚΑ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ ΠΡΙΝ ΑΠΟ ΤΗΝ ΕΓΚΑΤΑΣΤΑΣΗ ΕΧΕΤΕ ΑΥΤΟ ΤΟ ΕΓΧΕΙΡΙΔΙΟ ΕΥΚΑΙΡΟ ΓΙΑ ΝΑ ΤΟ ΣΥΜΒΟΥΛΕΥΕΣΤΕ ΣΤΟ ΜΕΛΛΟΝ.

LEES DEZE INSTRUCTIES ZORGVULDIG DOOR VOOR INSTALLATIE. BEWAAR DEZE HANDLEINDING WAAR U HEM KUNT TERUGVINDEN VOOR LATERE NASLAG.

LEIA COM ATENÇÃO ESTAS INSTRUÇÕES ANTES DE REALIZAR A INSTALAÇÃO.
MANTENHA ESTE MANUAL AO SEU ALCANCE PARA FUTURAS CONSULTAS.

ПЕРЕД НАЧАЛОМ МОНТАЖА ВНИМАТЕЛЬНО ОЗНАКОМЬТЕСЬ С ДАННЫМИ ИНСТРУКЦИЯМИ. СОХРАНИТЕ ДАННОЕ РУКОВОДСТВО В МЕСТЕ, УДОБНОМ ДЛЯ ОБРАЩЕНИЯ В БУДУЩЕМ.

English

Deutsch

Français

Español

Italiano

Ελληνικά

Nederlands

Portugues

Русский

DAIKIN INDUSTRIES, LTD.

declares under its sole responsibility that the air conditioning models to which this declaration relates:
erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:
déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:
erklærer under eneansvar, at klimaanlægsmodellene, som denne deklaration vedrører:

deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
erklærer et fullstendig ansvar for at de luftkonditioneringsmodeller som berøres av denne deklarasjon innebærer at:
ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoittamat ilmastointilaitteiden mallit:

- (I) **FAY71FJV1, FAY100FJV1**
FHYK35FJV1, FHYK45FJV1, FHYK60FJV1, FHYK71FJV1, FHK35FJV1, FHK45FJV1, FHK60FJV1
FHY35BJV1, FHY45BJV1, FHY60BJV1, FHY71BJV1, FHY100BJV1, FHY125BJV1, FH35BJV1, FH45BJV1, FH60BJV1
FUY71FJV1, FUY100FJV1, FUY125FJV1
- (II) **FAYP71BV1, FAYP100BV1**
FHYKP35BV1, FHYKP45BV1, FHYKP60BV1, FHYKP71BV1, FHK35BZV1, FHK45BZV1, FHK60BZV1
FHYP35BV1, FHYP45BV1, FHYP60BV1, FHYP71BV1, FHYP100BV1, FHYP125BV1, FH35BZV1, FH45BZV1, FH60BZV1
FUYP71BV1, FUYP100BV1, FUYP125BV1

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:

conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
eatão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instrukser:
vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:

EN60335-2-40,

following the provisions of:
gemäß den Vorschriften der:
conformément aux stipulations des:

overeenkomstig de bepalingen van:
siguiendo las disposiciones de:
secondo le prescrizioni per:

με τήρηση των διατάξεων των:
de acordo com o previsto em:
under iagttagelse af bestemmelserne i:

enligt villkoren i:
gitt i henhold til bestemmelsene i:
noudattaen määräyksiä:

- (I) *Note as set out in the Technical Construction File **DAIKIN.TCF.004** and judged positively by **KEMA** according to the **Certificate 59277-KRQ/ECM95-4233**.
Hinweis wie in der Technischen Konstruktionsakte **DAIKIN.TCF.004** aufgeführt und von **KEMA** positiv ausgezeichnet gemäß **Zertifikat 59277-KRQ/ECM95-4233**.
Remarque tel que stipulé dans le Fichier de Construction Technique **DAIKIN.TCF.004** et jugé positivement par **KEMA** conformément au **Certificat 59277-KRQ/ECM95-4233**.
Bemerk zoals vermeld in het Technisch Constructiedossier **DAIKIN.TCF.004** en in orde bevonden door **KEMA** overeenkomstig **Certificaat 59277-KRQ/ECM95-4233**.
Nota tal como se expone en el Archivo de Construcción Técnica **DAIKIN.TCF.004** y juzgado positivamente por **KEMA** según el **Certificado 59277-KRQ/ECM95-4233**.
Nota delineato nel File Tecnico di Costruzione **DAIKIN.TCF.004** e giudicato positivamente da **KEMA** secondo il **Certificato 59277-KRQ/ECM95-4233**.
Σημείωση όπως προσδιορίζεται στο Αρχείο Τεχνικής Κατασκευής **DAIKIN.TCF.004** και κρίνεται θετικά από το **KEMA** σύμφωνα με το Πιστοποιητικό **59277-KRQ/ECM95-4233**.
Nota tal como estabelecido no Ficheiro Técnico de Construção **DAIKIN.TCF.004** e com o parecer positivo de **KEMA** de acordo com o **Certificado 59277-KRQ/ECM95-4233**.
Bemærk som anført i den Tekniske Konstruktionsfil **DAIKIN.TCF.004** og positivt vurderet af **KEMA** i henhold til **Certifikat 59277-KRQ/ECM95-4233**.
Information utrustningen är utförd i enlighet med den Tekniska Konstruktionsfilen **DAIKIN.TCF.004** som positivt intygas av **KEMA** vilket också framgår av **Certifikat 59277-KRQ/ECM95-4233**.
Merk som det fremkommer i den Tekniske Konstruktionsfilen **DAIKIN.TCF.004** og gjennom positiv bedømmelse av **KEMA** ifølge **Sertifikat 59277-KRQ/ECM95-4233**.
Huom jotka on esitetty Teknisessä Asiakirjassa **DAIKIN.TCF.004** ja jotka **KEMA** on hyväksynyt **Sertifikaatin 59277-KRQ/ECM95-4233**.
- (II) *Note as set out in the Technical Construction File **DAIKIN.TCF.016** and judged positively by **KEMA** according to the **Certificate 81728-KRQ/ECM98-4341**.
Hinweis wie in der Technischen Konstruktionsakte **DAIKIN.TCF.016** aufgeführt und von **KEMA** positiv ausgezeichnet gemäß **Zertifikat 81728-KRQ/ECM98-4341**.
Remarque tel que stipulé dans le Fichier de Construction Technique **DAIKIN.TCF.016** et jugé positivement par **KEMA** conformément au **Certificat 81728-KRQ/ECM98-4341**.
Bemerk zoals vermeld in het Technisch Constructiedossier **DAIKIN.TCF.016** en in orde bevonden door **KEMA** overeenkomstig **Certificaat 81728-KRQ/ECM98-4341**.
Nota tal como se expone en el Archivo de Construcción Técnica **DAIKIN.TCF.016** y juzgado positivamente por **KEMA** según el **Certificado 81728-KRQ/ECM98-4341**.
Nota delineato nel File Tecnico di Costruzione **DAIKIN.TCF.016** e giudicato positivamente da **KEMA** secondo il **Certificato 81728-KRQ/ECM98-4341**.
Σημείωση όπως προσδιορίζεται στο Αρχείο Τεχνικής Κατασκευής **DAIKIN.TCF.016** και κρίνεται θετικά από το **KEMA** σύμφωνα με το Πιστοποιητικό **81728-KRQ/ECM98-4341**.
Nota tal como estabelecido no Ficheiro Técnico de Construção **DAIKIN.TCF.016** e com o parecer positivo de **KEMA** de acordo com o **Certificado 81728-KRQ/ECM98-4341**.
Bemærk som anført i den Tekniske Konstruktionsfil **DAIKIN.TCF.016** og positivt vurderet af **KEMA** i henhold til **Certifikat 81728-KRQ/ECM98-4341**.
Information utrustningen är utförd i enlighet med den Tekniska Konstruktionsfilen **DAIKIN.TCF.016** som positivt intygas av **KEMA** vilket också framgår av **Certifikat 81728-KRQ/ECM98-4341**.
Merk som det fremkommer i den Tekniske Konstruktionsfilen **DAIKIN.TCF.016** og gjennom positiv bedømmelse av **KEMA** ifølge **Sertifikat 81728-KRQ/ECM98-4341**.
Huom jotka on esitetty Teknisessä Asiakirjassa **DAIKIN.TCF.016** ja jotka **KEMA** on hyväksynyt **Sertifikaatin 81728-KRQ/ECM98-4341** mukaisesti.

Directives, as amended.
Direktiven, gemäß Änderung.
Directives, telles que modifiées.
Richtlijnen, zoals geamendeerd.
Directivas, según lo enmendado.
Direttive, come da modifica.
Οδηγιών, όπως έχουν τροποποιηθεί.
Directivas, conforme alteração em.
Direktiver, med senere ændringer.
Direktiv, med företagna ändringar.
Direktiver, med foretatte endringer.
Direktiivellä, sellaisina kuin ne ovat muutettuina.

Low Voltage 73/23/EEC
Machinery Safety 89/392/EEC
Electromagnetic Compatibility 89/336/EEC*

DAIKIN

Y. Hirata

Yoshiaki Hirata
Manager Quality Control Department
Sakai, 1st of December 2000

DAIKIN INDUSTRIES, LTD.

Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,
Kita-ku, Osaka, 530-8323 Japan

DAIKIN INDUSTRIES, LTD.

declares under its sole responsibility that the air conditioning models to which this declaration relates:
erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:
déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:
declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:
erklærer under eneansvar, at klima anlægsmodellerne, som denne deklaration vedrører:
deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
erklærer et fullstendig ansvar for at de luftkonditioneringsmodeller som berøres av denne deklarasjon innebærer at:
ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoittamat ilmastointilaitteiden mallit:

- (I) FHY35BJV1, FHY45BJV1, FHY60BJV1, FHY71BJV1, FHY100BJV1, FHY125BJV1, FH35BJV1, FH45BJV1, FH60BJV1
- (II) FHYP35BV1, FHYP45BV1, FHYP60BV1, FHYP71BV1, FHYP100BV1, FHYP125BV1, FH35BV1, FH45BV1, FH60BV1
- (III) FHQ35BUV1B, FHQ50BUV1B, FHQ60BUV1B, FHQ71BUV1B, FHQ100BUV1B, FHQ125BUV1B
FHQ35BVV1B, FHQ50BVV1B, FHQ60BVV1B, FHQ71BVV1B, FHQ100BVV1B, FHQ125BVV1B
FUQ71BUV1B, FUQ100BUV1B, FUQ125BUV1B, FUQ71BVV1B, FUQ100BVV1B, FUQ125BVV1B
FAQ71BUV1B, FAQ100BUV1B, FAQ71BVV1B, FAQ100BVV1B

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:
respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instrukser:
vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:

EN60335-2-40,

following the provisions of:
gemäß den Vorschriften der:
conformément aux stipulations des:
overeenkomstig de bepalingen van:
siguiendo las disposiciones de:
secondo le prescrizioni per:
με τήρηση των διατάξεων των:
de acordo com o previsto em:
under iagttagelse af bestemmelserne i:
enligt villkoren i:
gitt i henhold til bestemmelsene i:
noudattaen määräyksiä:

Low Voltage 73/23/EEC
Machinery Safety 98/37/EEC
Electromagnetic Compatibility 89/336/EEC*

Directives, as amended.
Direktiven, gemäß Änderung.
Directives, telles que modifiées.
Richtlijnen, zoals geamendeerd.
Directivas, según lo enmendado.
Direttive, come da modifica.
Οδηγιών, όπως έχουν τροποποιηθεί.
Directivas, conforme alteração em.
Direktiver, med senere ændringer.
Direktiv, med företagna ändringar.
Direktiver, med foretatte endringer.
Direktiivejä, sellaisina kuin ne ovat muutettuina.

*Note	as set out in Technical Construction file A and judged positively by KEMA according to The Certificate B .
Hinweis	wie in der Technischen Konstruktionsakte A aufgeführt und von KEMA positiv ausgezeichnet gemäß Zertifikat B .
Remarque	tel que stipulé dans le Fichier de Construction Technique A et jugé positivement par KEMA conformément au Certificat B .
Bemerk	zoals vermeld in het Technisch Constructiedossier A en in orde bevonden door KEMA overeenkomstig Certificaat B .
Nota	tal como se expone en el Archivo de Construcción Técnica A y juzgado positivamente por KEMA según el Certificado B .
Nota	delineato nel File Tecnico di Costruzione A e giudicato positivamente da KEMA secondo il Certificato B .
Σημείωση	όπως προσδιορίζεται στο Αρχείο Τεχνικής Κατασκευής A και κρίνεται θετικά από το KEMA σύμφωνα με το Πιστοποιητικό B .
Nota	tal como estabelecido no Ficheiro Técnico de Construção A e com o parecer positivo de KEMA de acordo com o Certificado B .
Bemærk	som anført i den Tekniske Konstruktionsfil A og positivt vurderet af KEMA i henhold til Certifikat B .
Information	utrustningen är utförd i enlighet med den Tekniska Konstruktionsfilen A som positivt intygas av KEMA vilket också framgår av Certifikat B .
Merk	som det fremkommer i den Tekniske Konstruktionsfilen A og gennem positiv bedømmelse av KEMA ifølge Sertifikat B .
Huom	jotka on esitetty Teknisessä Asiakirjassa A ja jotka KEMA on hyväksynyt Sertifikaatin B .

	A	B
(I)	DAIKIN.TCF.004	59277-KRQ/ECM95-4233
(II)	DAIKIN.TCF.016	81728-KRQ/ECM98-4341
(III)	DAIKIN.TCF.021	2024351-QUA/EMC02-4565



Noboru Murata
Manager Quality Control Department
Sakai, 1st of October 2005

DAIKIN INDUSTRIES, LTD.
Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,
Kita-ku, Osaka, 530-8323 Japan



CONTENTS

1. SAFETY CONSIDERATIONS	1
2. BEFORE INSTALLATION	2
3. SELECTING INSTALLATION SITE	4
4. INDOOR UNIT INSTALLATION	5
5. REFRIGERANT PIPING WORK	7
6. DRAIN PIPING WORK	9
7. ELECTRIC WIRING WORK	10
8. WIRING EXAMPLE	13
9. FIELD SETTING	14
10. TEST OPERATION	16
11. WIRING DIAGRAM	19

1. SAFETY CONSIDERATIONS

Please read these “SAFETY CONSIDERATIONS” carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation.

Please instruct the customer on how to operate the unit and keep it maintained.

Also, inform customers that they should store this installation manual along with the operation manual for future reference.

This air conditioner comes under the term “appliances not accessible to the general public”.

Meaning of warning and caution symbols.



WARNING Failure to observe a warning may result in death or serious injury.



CAUTION Failure to observe a caution may result in injury or damage to the equipment.



WARNING

- Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine yourself.

Improper installation may result in water leakage, electric shocks or fire.

- Perform installation work in accordance with this installation manual.

Improper installation may result in water leakage, electric shocks or fire.

- Be sure to use only the specified accessories and parts for installation work.

Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

- Install the air conditioner on a foundation strong enough to withstand the weight of the unit.

A foundation of insufficient strength may result in the equipment falling and causing injuries.

- Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.

Improper installation work may result in the equipment falling and causing accidents.

- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.

An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

- Make sure that all wiring is secured, the specified wires are used, and no external forces act on the terminal connections or wires.

Improper connections or installation may result in fire.

- When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened.
Improper positioning of the control box lid may result in electric shocks, fire or the terminals overheating.
 - If the refrigerant gas leaks during installation, ventilate the area immediately.
Toxic gas may be produced if the refrigerant gas comes into contact with fire.
 - After completing the installation work, check that the refrigerant gas does not leak.
Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.
 - Before touching electrical parts, turn off the unit.
 - Be sure to establish an earth.
Do not earth the unit to a utility pipe, arrester, or telephone earth.
Incomplete earth may cause electrical shock, or fire.
A high surge current from lightning or other sources may cause damage to the air conditioner.
 - Be sure to install an earth leakage breaker.
Failure to install an earth leakage breaker may result in electric shocks, or fire.
-



CAUTION

- While following the instructions in this installation manual, install drain piping in order to ensure proper drainage and insulate piping in order to prevent condensation.
Improper drain piping may result in water leakage and property damage.
 - Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types).
Install the indoor unit as far away from fluorescent lamps as possible.
 - Do not install the air conditioner in the following locations:
 - (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen
Plastic parts may deteriorate and fall off or result in water leakage.
 - (b) where corrosive gas, such as sulfurous acid gas, is produced
Corroding copper pipes or soldered parts may result in refrigerant leakage.
 - (c) near machinery emitting electromagnetic waves
Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
 - (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.
Operating the unit in such conditions may result in fire.
 - Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals.
Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.
-

2. BEFORE INSTALLATION

Do not exert pressure on the resin parts when opening the unit or when moving it after opening.

- Decide upon a line of transport.
- Leave the unit inside its packaging while moving, until reaching the installation site. Use a sling of soft material, where unpacking is unavoidable or protective plates together with a rope when lifting, to avoid damage or scratches to the unit.
- Refer to the installation manual of the outdoor unit for items not described in this manual.
- Installation should only be carried out after checking in advance the type of refrigerant to be used. (Using the wrong refrigerant will prevent the unit from functioning properly.)
- Do not dispose of any parts necessary for installation until the installation is complete.




1. PRECAUTIONS


- Be sure to read this manual before installing the indoor unit.
- When selecting installation site, refer to the paper pattern.
- This unit is suitable for installation in a household, commercial and light industrial environment.

- Do not install or operate the unit in rooms mentioned below.
 - Laden with mineral oil, or filled with oil vapor or spray like in kitchens. (Plastic parts may deteriorate.)
 - Where corrosive gas like sulfurous gas exists. (Copper tubing and brazed spots may corrode.)
 - Where volatile flammable gas like thinner or gasoline is used.
 - Where machines can generate electromagnetic waves. (Control system may malfunction.)
 - Where the air contains high levels of salt such as that near the ocean and where voltage fluctuates greatly such as that in factories. Also in vehicles or vessels.

2. ACCESSORIES

Check the following accessories are included with the unit.

Name	1) Installation panel	Insulation for fitting (for refrigerant pipe)	4) Insulation tape	5) Paper pattern for installation	(Other) • Operation manual • Installation manual
Quantity	1	1each	2	1	
Shape	 6) Screw×12	2) For liquid pipe  3) For gas pipe 			

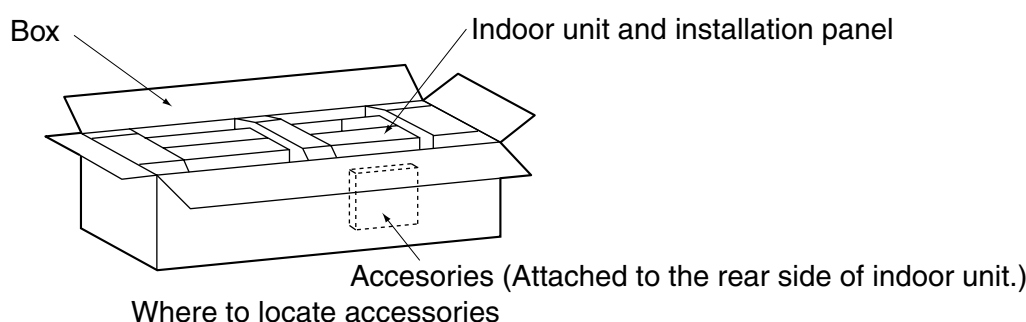

3. OPTIONAL ACCESSORIES

- The remote controller are required for this indoor unit.
(However, the remote controller is not required for the slave unit of a simultaneous operation system.)
- These are two types of remote controllers: wired and wireless. Select a remote controller from Table 1 according to customer request and install in an appropriate place.
(For installation, follow the Installation manual included with the remote controllers.)

Table 1

Remote controller			Model
FAY-FJV1 type	Wired type		BRC1C517, BRC1B517
	Wireless type	Heat pump type	BRC7C54W
		Cooling only type	BRC7C59W
FAYP-BV1 type	Wired type		BRC1C517
	Wireless type	Heat pump type	BRC7C510W, BRC7CA510W
		Cooling only type	BRC7C511W, BRC7CA511W
FAQ type	Wired type		BRC1D527, BRC1D528, BRC1C61
	Wireless type	Heat pump type	BRC7C510W, BRC7CA510W
		Cooling only type	BRC7C511W, BRC7CA511W

NOTE

- If the customer wishes to use a remote controller that is not listed above, select a suitable remote controller after consulting catalogs and technical materials.

FOR THE FOLLOWING ITEMS, TAKE SPECIAL CARE DURING CONSTRUCTION AND CHECK AFTER INSTALLATION IS FINISHED.

1. Items to be checked after completion of work

Items to be checked	If not properly done, what is likely to occur	Check
Is the indoor unit fixed firmly?	The unit may drop, vibrate or make noise.	
Is the gas leak test finished?	It may result in insufficient cooling.	
Is the unit fully insulated?	Condensate water may drip.	
Does drainage flow smoothly?	Condensate water may drip.	
Does the power supply voltage correspond to that shown on the name plate?	The unit may malfunction or the components burn out.	
Are wiring and piping correct?	The unit may malfunction or the components burn out.	
Is the unit safely grounded?	Dangerous at electric leakage.	
Is wiring size according to specifications?	The unit may malfunction or the components burn out.	
Is something blocking the air outlet or inlet of either the indoor or outdoor units?	It may result in insufficient cooling.	
Are refrigerant piping length and additional refrigerant charge noted down?	The refrigerant charge in the system is not clear.	

2. Items to be checked at time of delivery *Also review the “SAFETY CONSIDERATIONS”

Items to be checked	Check
Did you explain about operations while showing the instruction manual to your customer?	
Did you hand the instruction manual over to your customer?	

Points for explanation about operations

The items with **⚠ WARNING** and **⚠ CAUTION** marks in the instruction manual are the items pertaining to possibilities for bodily injury and material damage in addition to the general usage of the product. Accordingly, it is necessary that you make a full explanation about the described contents and also ask your customers to read the instruction manual.

4. NOTE TO THE INSTALLER

Be sure to instruct customers how to properly operate the unit (especially cleaning filters, operating different functions, and adjusting the temperature) by having them carry out operations themselves while looking at the manual.

3. SELECTING INSTALLATION SITE


1. Select an installation site where the following conditions are satisfied and that meets with your customer's approval.

- In the upper space (including the back of the ceiling) of the indoor unit where there is no possible dripping of water from the refrigerant pipe, drain pipe, water pipe, etc.
- Where the wall is strong enough to bear the indoor unit weight.
- Where sufficient clearance for installation and maintenance can be ensured.
- Where optimum air distribution can be ensured.
- Where nothing blocks the air passage.
- Where condensate can be properly drained.
- Where wall surface is not particularly inclined.
- Where not exposed to combustible gases.
- Where piping between indoor and outdoor units is possible within the allowable limit (Refer to the installation manual of the outdoor unit.)

[CAUTION]

Only use the included parts or parts which match the specifications when installing the unit.

- Install the indoor unit no less than 2.5 m above the floor. Where unavoidably lower, take what measures are necessary to keep hands out of the air outlet.

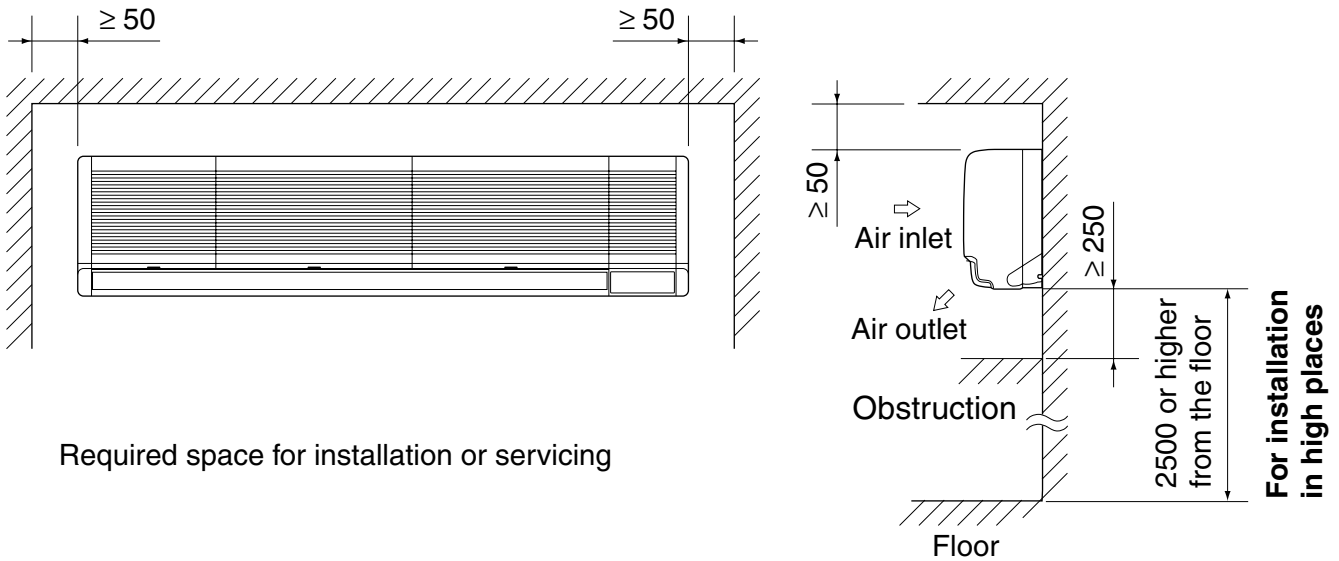

2. Use the installation panel for installation.

Consider whether the location where the unit will be mounted can support its weight, and if necessary, strengthen by adding supporting boards or beams before mounting. Make sure that any reinforcement is strong enough to withstand vibration and loud noise. (The mounting pitch is listed on the mounting pattern paper, so refer to it when considering whether strengthening is necessary or not.)

3. The indoor unit may not be directly installed on the wall.

Use the attached installation panel before installing the unit.

4. INDOOR UNIT INSTALLATION

1. Detach the installation panel from the indoor unit.

- The installation panel is attached to the rear of the unit.
To detach, remove the screws from the bottom of the panel. (Refer to Fig. 1)

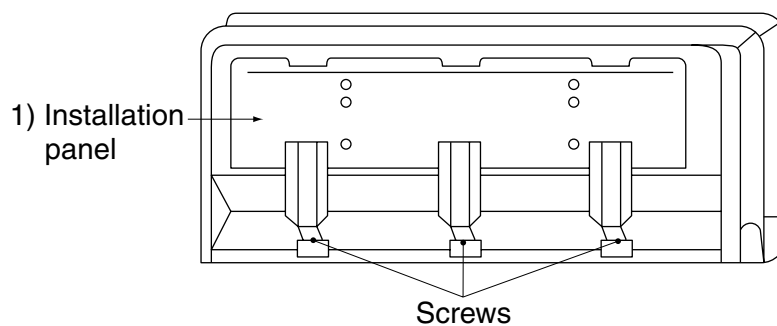


Fig. 1

2. Attach the installation panel to the wall, using the paper pattern for installation.

- (a) Check the position of the drill hole for the piping through-hole using the included pattern paper.
 - Keep approximately 50 mm between the ceiling and the unit.
- (b) Temporarily tack the mounting board, and use a level to make sure that it is either level or slightly tipped down on the side of the drainage pipe.
- (c) Secure the mounting board to the wall with either a screw or a bolt.
 - If using the attached wood screws, fix 4 screws to each the left and right sides (total of 8 or more).
 - If using bolts, attach 2 M8 bolts to each the left and right sides (total of 4).
 - If installing the unit on a concrete wall, attach the panel with a field supplied anchor (M8).

3. Make a through hole in the wall.

- Piping can be led out from the left, right or rear sides. (Refer to Fig. 2)
- The drain hole is on the right side.
- Select the piping route and open a through hole in the wall ($\phi 80$). Ensure the hole slopes gradually downward to the outside. Also, make sure the piping trap can be gotten from the exit (the end).

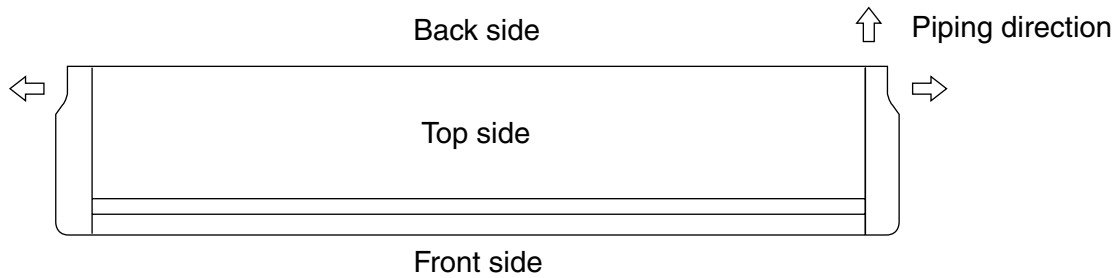


Fig. 2

4. Cut an opening in the left or right side panel for piping. (Refer to Fig. 3)

Ex. For right side piping connections

5. Hang the indoor unit securely from the hook on the installation panel. (Refer to Fig. 4 and 5)

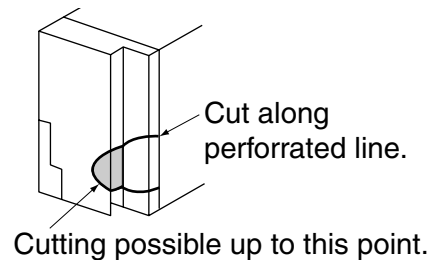


Fig. 3

Hole where to
hook indoor unit

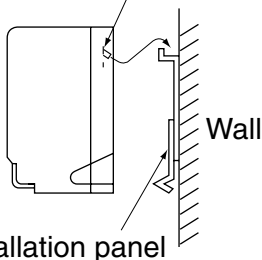


Fig. 4

Hook

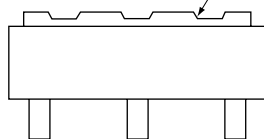


Fig. 5

- If running pipes from the left side or using embedded pipes, remove the bottom panel to make work easier.



CAUTION

Install the unit so that it is level or slanted to the right, and so that it is not tilted forward. Slanting to the left or tilting forward will impede proper water discharge and cause leaking.

Do not hold the horizontal blades when lifting the unit. (This may cause damage to the blades.)

[How to detach side and bottom panels]

- Remove the screws in the side panel and pull the side panel outward (A). Then, while pushing upwards (B), slide the panel towards the front of the unit (C). (Same for both left and right sides)

(Refer to Fig. 6 and 7)

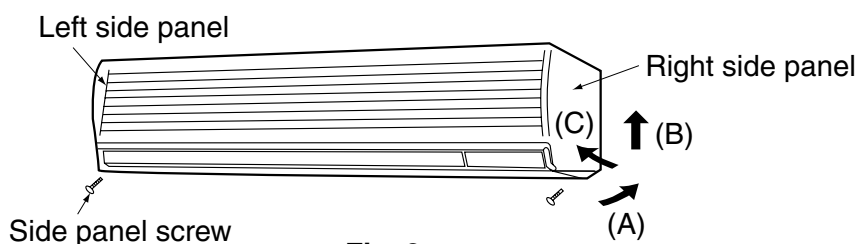


Fig. 6

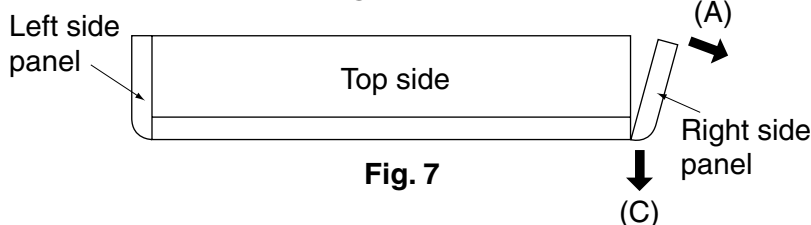


Fig. 7

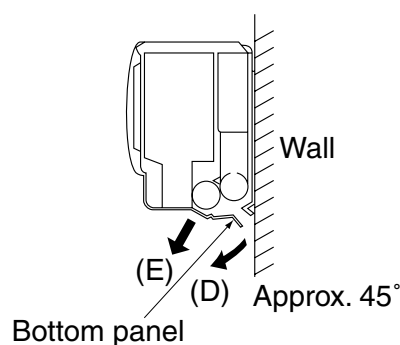


Fig. 8

- After detaching the side panels, turn the bottom panel downward (D) about 45°, and pull it outward (E). (Refer to Fig. 8)

5. REFRIGERANT PIPING WORK

- See the installation manual for the outdoor unit for details on how to connect the refrigerant piping.
- Be sure to insulate both the gas piping as well as the liquid piping.
 - Not doing so may cause leaks. (Use insulation material which can fully resist the 120°C temperature that the gas piping can sometimes reach when using a heat pump.)
 - If the temperature and humidity of the branch piping could possibly exceed 30°C or RH80%, reinforce the refrigerant insulation (20mm or thicker). Condensation may form on the surface of the insulation.
- Installation should only be carried out after checking in advance the type of refrigerant to be used. (Using the wrong refrigerant will prevent the unit from functioning properly.)



CAUTION

- Use a pipe cutter and flare suitable for the type of refrigerant.
- Apply ester oil or ether oil around the flare section before connecting.
- To prevent dust, moisture or other foreign matter from infiltrating the tube, either pinch the end or cover it with tape.
- Do not allow anything other than the designated refrigerant to get mixed into the refrigerant circuit, such as air, etc. If any refrigerant gas leaks while working on the unit, ventilate the room thoroughly right away.

- Use copper alloy seamless pipes (ISO 1337).
- The outdoor unit is charged with refrigerant.
- Be sure to use both a spanner and torque wrench together, when connecting or disconnecting pipes to/from the unit.

(Refer to Fig. 9)

- Refer to the Table 2 for flare dimensions and tightening torque.

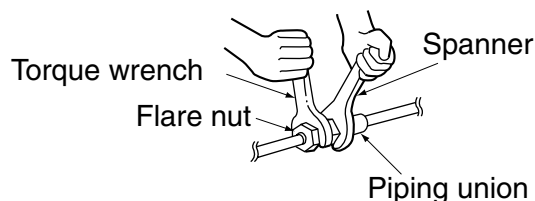


Fig. 9

NOTE

- Use the flare nut included with the unit main body.



CAUTION

Over-tightening the flare nut may break it and/or cause the refrigerant to leak.

- When connecting the flare nut, apply ester oil or ether oil to the flare section (both inside and outside), and spin 3-4 times before screwing in.
(Refer to Fig. 10)

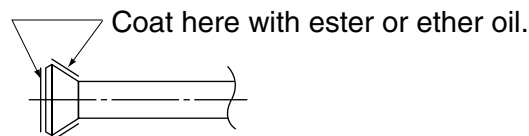


Fig. 10

Table 2

Pipe size	Tightening torque	Type of refrigerant Applicable model	Flare dimensions A (mm)		Flare
			R22, R407C FAY-FJV1 FAYP-BV1	R410A FAQ	
φ9.5(3/8")	32.7-39.9 N • m		12.6 – 13.0	12.8 – 13.2	
φ15.9(5/8")	61.8-75.4 N • m		19.0 – 19.4	19.3 – 19.7	
φ19.1(3/4")	97.2-118.8 N • m		23.3 – 23.7	—	

- Refer to “Table 2” to determine the proper tightening torque.

For reference



If a torque wrench is not available, use the following method as a rule of thumb.
After the work is finished, make sure to check that there is no gas leak.

When you keep on tightening the flare nut with a spanner, there is a point where the tightening torque suddenly increases. From that position, further tighten the flare nut the angle shown below:

Table 3

Pipe size	Further tightening angle	Recommended arm length of tool
φ 9.5 (3/8")	60 to 90 degrees	Approx. 200mm
φ 15.9 (5/8")	30 to 60 degrees	Approx. 300mm
φ 19.1 (3/4")	20 to 35 degrees	Approx. 450mm

- After piping work is done, check all the pipe connections to ensure no nitrogen or other gases are leaking.
- After checking for gas leaks in the pipe connections, insulate them as shown in Fig. 11 and 12.
(Install so that no pipes are exposed, as this may cause leaking.)

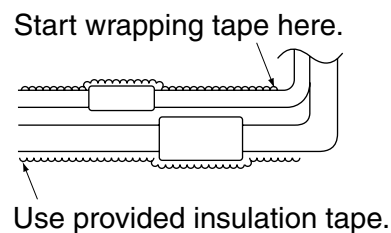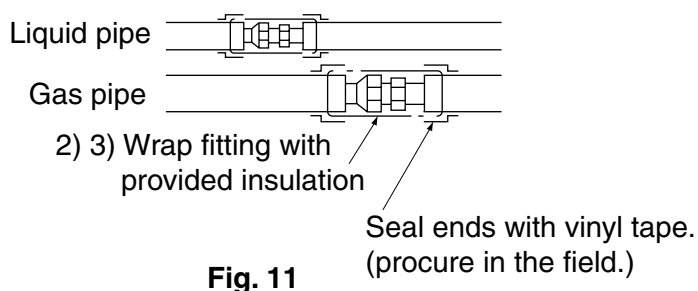

[PRECAUTIONS]

1. Do not overlap insulation for fitting. **(Refer to Fig. 11)**
2. Tape the liquid and gas pipe together from the bend up to where they enter the unit. **(Refer to Fig. 12)**
3. Wrap the drain hose inside the unit with insulation tape, but separate it from the refrigerant pipe. If wrapped together, both pipes may not fit inside the unit. (only when running pipes from the left side)
4. When running pipes from the left side, keep pipes and the drain hose as shown on Fig. 13.
5. Do not bend the liquid pipe within 200 mm of the flare nut, to prevent from damaging the pipe.
6. Make sure the relay connector for the fan motor does not become disengaged during piping work.
7. When doing this, block any gaps between the side panel and the pipes using putty to prevent dust from entering the indoor unit.

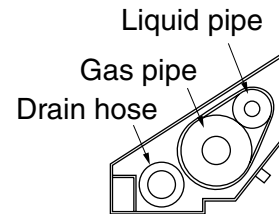


Fig. 13

— ⚠ CAUTION —

CAUTION TO BE TAKEN WHEN BRAZING REFRIGERANT PIPING

“Do not use flux when brazing refrigerant piping. Therefore, use the phosphor copper brazing filler metal (BCuP-2: JIS Z 3264/B-Cu93P-710/795: ISO 3677) which does not require flux.”

(Flux has extremely harmful influence on refrigerant piping systems. For instance, if the chlorine based flux is used, it will cause pipe corrosion or, in particular, if the flux contains fluorine, it will damage the refrigerant oil.)

- Before brazing local refrigerant piping, nitrogen gas shall be blown through the piping to expel air from the piping.
If you brazing is done without nitrogen gas blowing, a large amount of oxide film develops inside the piping, and could cause system malfunction.
- When brazing the refrigerant piping, only begin brazing after having carried out nitrogen substitution or while inserting nitrogen into the refrigerant piping. Once this is done, connect the indoor unit with a flared or a flanged connection.
- Nitrogen should be set to 0.02 MPa with a pressure-reducing valve if brazing while inserting nitrogen into the piping. **(Refer to Fig. 14)**

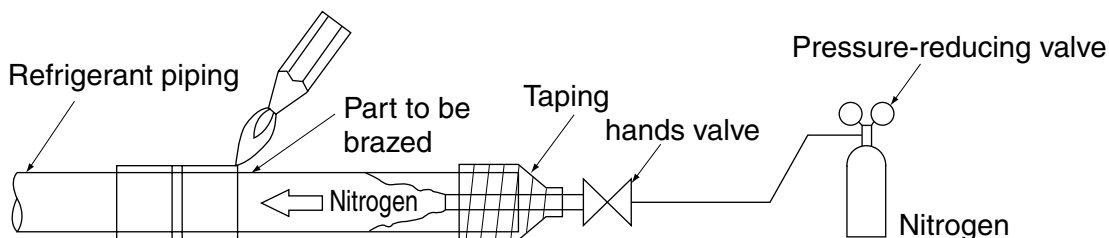


Fig. 14

6. DRAIN PIPING WORK

1. Connect drain piping.

- Be sure to secure reliable drainage for the drain piping.
- Make sure the pipes are short and lead down, to prevent the formation of air pockets.

— ⚠ CAUTION —

Water accumulating in the drain piping can cause the drain to clog.

- Use particular caution when carrying out the steps in the Fig. 15.

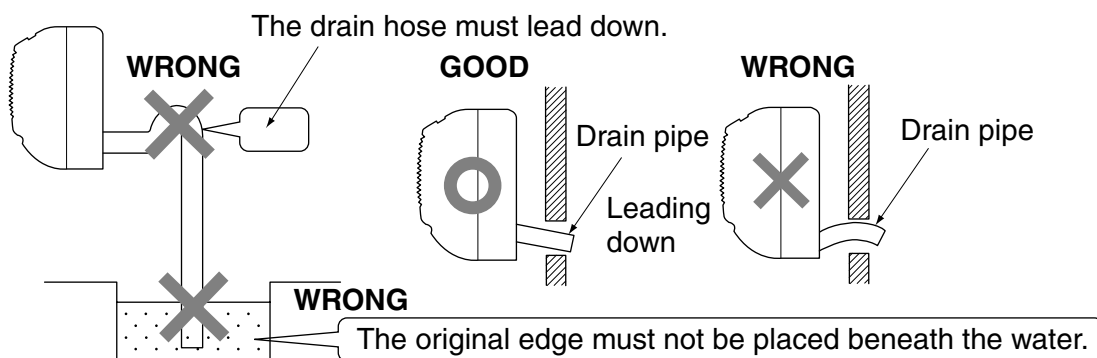


Fig. 15

- When extending the drain pipes, use commercially available extension hose, and be sure to insulate the extended part of the drain hose which is indoors. **(Refer to Fig. 16)**
- Use the same pipe diameter as the connection piping (hard vinyl chloride piping, nominal diameter 20) or higher.
- Use commercially available hard vinyl chloride joints (nominal diameter 20) when connecting hard vinyl chloride piping (nominal diameter 20) directly to drain hoses attached to the indoor unit, such as embedded pipes. **(Refer to Fig. 17)**

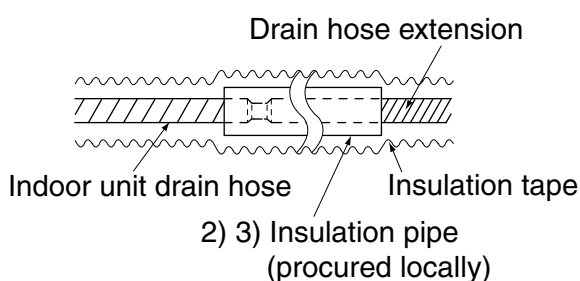


Fig. 16

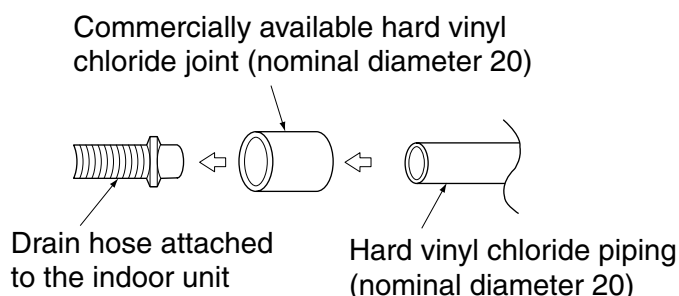


Fig. 17

2. Attach all pipes so as to ensure thorough drainage.

- After connecting all pipes, carry out a drain check by opening the front panel, removing the air filter, pouring some water into the drain pan, and making sure the water drains out of the hose smoothly. **(Refer to Fig. 18)**

[CAUTION]

Drain piping connections

- Do not connect the drain piping directly to sewage pipes that smell of ammonia. The ammonia in the sewage might enter the indoor unit through the drain pipes and corrode the heat exchanger.

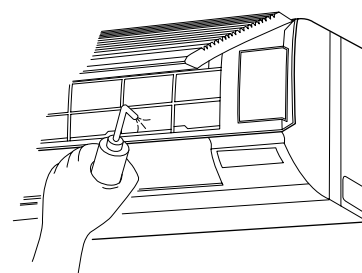


Fig. 18

7. ELECTRIC WIRING WORK

- All field supplied parts and materials and electric works must conform to local codes.
- Use copper wire only.
- For electric wiring work, refer also to "WIRING DIAGRAM" attached to the unit body.
- For remote controller wiring details, refer to the installation manual attached to the remote controller.
- All wiring must be performed by an authorized electrician.
- A circuit breaker capable of shutting down power supply to the entire system must be installed.
- Refer to the installation manual attached to the outdoor unit for the size of power supply electric wire connected to the outdoor unit, the capacity of the circuit breaker and switch, and wiring instructions.

- Be sure to ground the air conditioner.
- Do not connect the ground wire to gas pipes, plumbing pipes, lightning rods, or telephone ground wires.
 - Gas pipes: could explode and cause fires if there was a gas leak.
 - Plumbing pipes: no grounding effect if hard vinyl pipes are used.
 - Telephone ground wires or lightning rods: the ground potential could rise dangerously high if hit by lightning.

• Specifications for field wire

The remote controller cord should be procured locally. Refer to the Table 4 when preparing one.

Table 4

	Wire	Size (mm ²)	Length
Wiring the units	H05VV-U4G (NOTE 1)	2.5	—
Remote controller cord	Vinyl cord with sheath or cable (2 wire) (NOTE 2)	0.75 - 1.25	Max. 500m

NOTE

1. Shows only in case of protected pipes. Use H07RN-F in case of no protection.
2. Insulated thickness: 1 mm or more


〈Method of wiring units and connecting remote controller cords〉

• Wiring the units connections

See “INDOOR UNIT INSTALLATION” and detach the right side panel. Next, remove screw (A) and slide front cover to the right (B) and detach.

When detached, you can see the terminal boards. Feed wires through the clamp and connect to the terminal board.

- Remote controller cord connections (not necessary for slave unit of simultaneous operation system)
Feed wires through the clamp and connect to the terminal board for transmission wiring. (no polarity)

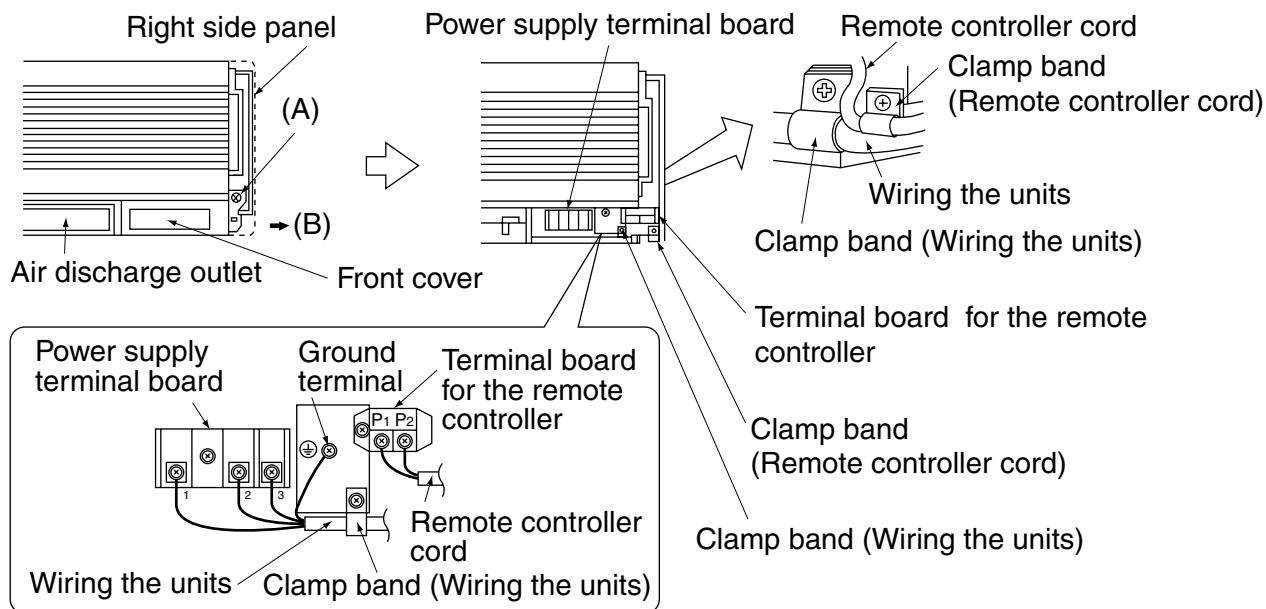

[PRECAUTIONS]

- Do not clamp remote controller cords together with wiring the units. Doing so may cause malfunction.
- Remote controller cords and wiring the units should be located at least 50 mm from other electric wires. Not following this guideline may result in malfunction due to electrical noise.



CAUTION

When clamping wiring, use the included clamping material and clamp firmly to prevent outside pressure being exerted on the wiring connections.

When doing the wiring, make sure the wiring is neat and does not cause the control box lid to stick up, then close the cover firmly.

When attaching the control box lid, make sure you do not pinch any wires.

After all the wiring connections are done, fill in any gaps in the through holes with putty or insulation (procured locally) to prevent small animals and insects from entering the unit from outside.

(If any do get in, they can cause short circuits in the control box.)

Outside of the unit, separate low-voltage wires (remote controller cords) by a minimum of 50 mm from high-voltage wires (inter-unit lines, ground lines, and other electrical lines) to avoid routing the two through the same locations. Proximity may cause electrical interference, malfunctions, and breakage.

[Precautions for wiring]

2 power wires of different diameters cannot be connected to the power terminal block.

(Slack in the power wiring may cause abnormal heating.)

Use sleeve-insulated round pressure terminals for connections to the power terminal block.

If none are available, connect wires of the same diameter to both sides, as shown in the figure.

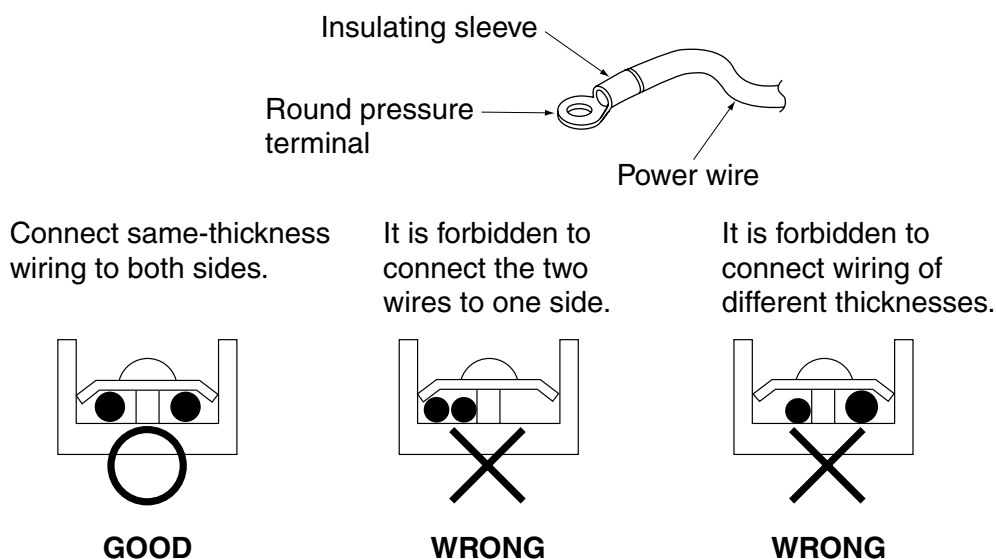


Fig. 19

Follow the instructions are right if the wiring may get very hot due to slack in the power wiring.

- For wiring, use the designated power wire and connect firmly, then secure using the included clamping material to prevent outside pressure being exerted on the terminal board.
- Use the correct size of screwdriver when tightening the terminal screws. A screwdriver with a small head will strip the screw heads and make proper tightening impossible.
- Over-tightening the terminal screws may break them.
- For the tightening torque of the terminal screws, refer to the table below.


Tightening torque (N·m)	
Remote controller wiring terminal block	0.79~0.97
Inter-unit wiring terminal block	1.18~1.44
Ground terminal	1.44~1.94

8. WIRING EXAMPLE

For the wiring of outdoor units, refer to the installation manual attached to the outdoor units.

Confirm the system type.

- **Pair type:** 1 remote controller controls 1 indoor unit (standard system).
- **Simultaneous operation system:** 1 remote controller controls 2 indoor units (2 indoor units operates equally.)
- **Group control:** 1 remote controller controls up to 16 indoor units (All indoor units operate according to the remote controller).
- **2 remote controller control:** 2 remote controller control 1 indoor unit.

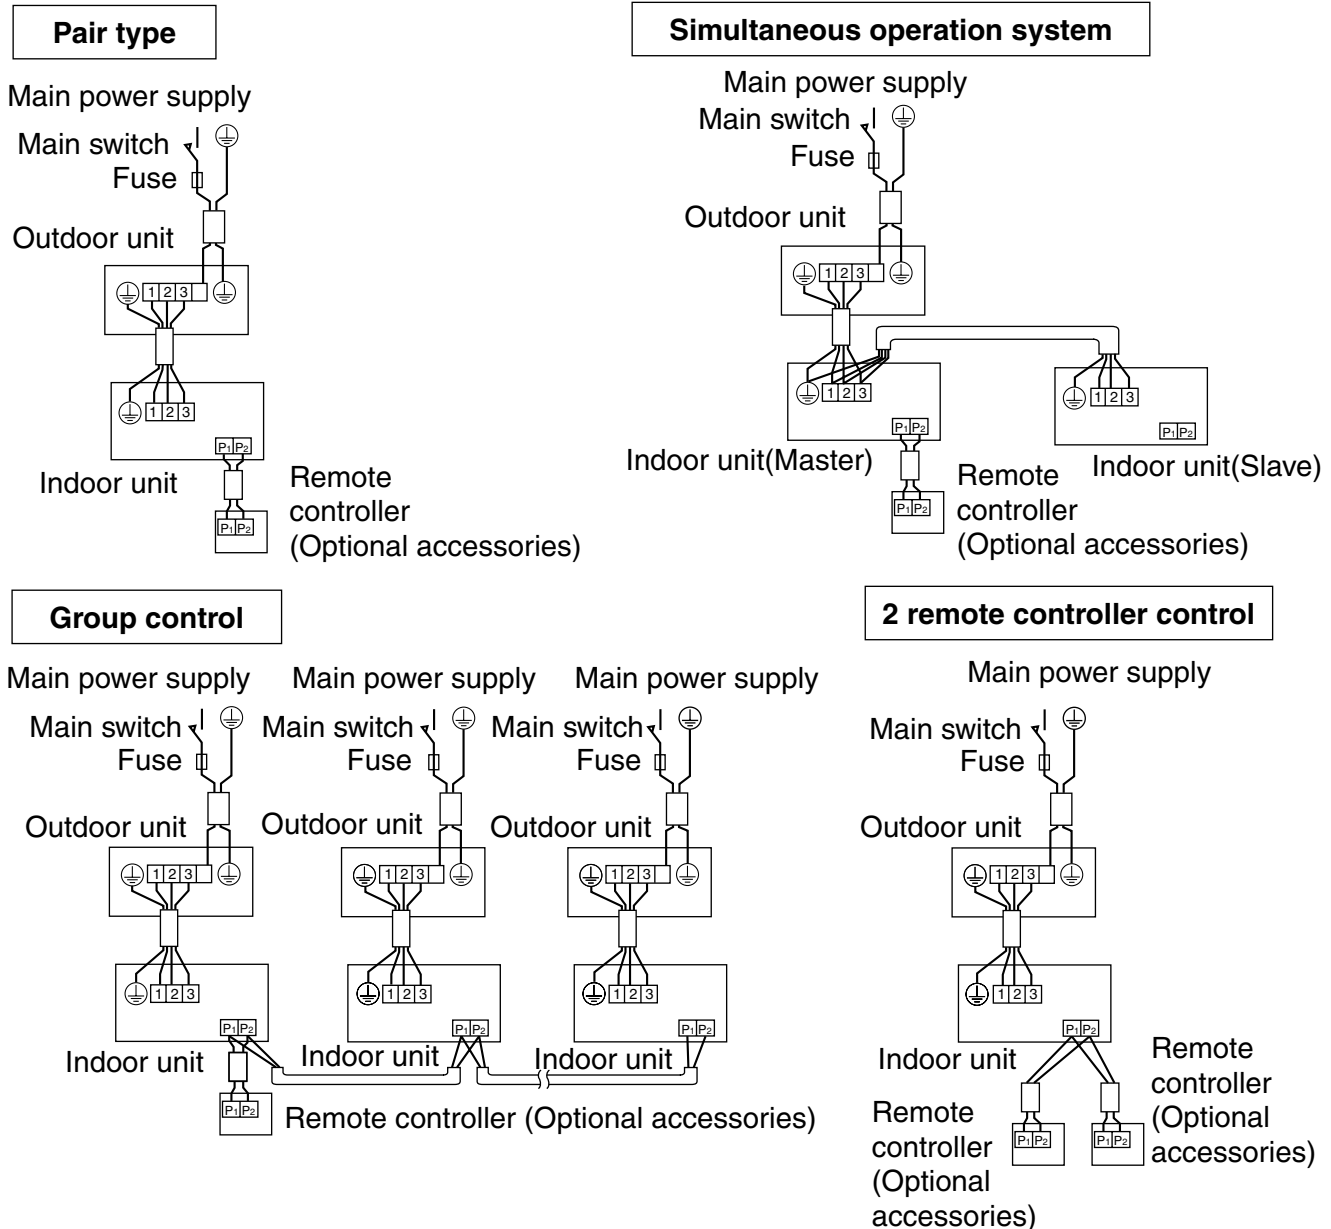

NOTE

1. All transmission wiring except for the remote controller wires is polarized and must match the terminal symbol.
2. In case of group control, perform the remote controller wiring to the master unit when connecting to the simultaneous operation system. (wiring to the slave unit is unnecessary)
3. For group control remote controller, choose the remote controller that suits the indoor unit which has the most functions (as attached swing flap).
4. For simultaneous operation system, connect the remote controller cord to the master unit.

9. FIELD SETTING

Field setting must be made from the remote controller in accordance with the installation condition.

- Setting can be made by changing the “Mode No.”, “FIRST CODE NO.”, and “SECOND CODE NO.”.
- For setting and operation, refer to the “FIELD SETTING” in the installation manual of the remote controller.

1. Setting air filter sign

- Remote controllers are equipped with liquid crystal display air filter signs to display the time to clean air filters.
- Change the SECOND CODE NO. according to Table 5 depending on the amount of dirt or dust in the room.
(SECOND CODE NO. is factory set to “01” for filter contamination-light)

Table 5

Setting	Spacing time of display air filter sign	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Air filter contamination-light	Approx. 200 hrs.	10 (20)	0	01
Air filter contamination-heavy	Approx. 100 hrs.			02

2. Setting air flow rate increase mode

- It is possible to raise set air flow (HIGH and LOW) from the field. Change the SECOND CODE NO. as shown in Table 6 to suit your needs.
(SECOND CODE NO. is factory set to “01” for standard.)

Table 6

Setting	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Standard	13(23)	0	01
A little increase			02
Increase			03

(When using wireless remote controllers)

- When using wireless remote controllers, wireless remote controller address setting is necessary. Refer to the installation manual attached to the wireless remote controller for setting instructions.

3. Setting indoor unit number of simultaneous operation system

- When using in simultaneous operation system mode, change the SECOND CODE NO. as shown in Table 7.
(SECOND CODE NO. is factory set to “01” for pair system.)

Table 7

Setting	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Pair system (1 unit)	11 (21)	0	01
Simultaneous operation system (2-unit)			02
Simultaneous operation system (3-unit)			03

- When using in simultaneous operation system mode, refer to “**Simultaneous Operation System Individual Setting**” section to set master and slave units separately.

(When using wireless remote controllers)

- When using wireless remote controllers, wireless remote controller address setting is necessary. Refer to the installation manual attached to the wireless remote controller for setting instructions.

4. Simultaneous operation system individual setting

It is easier if the optional remote controller is used when setting the slave unit.

- Perform the following procedures when setting the master and slave unit separately.


Procedure

- (1) Change the SECOND CODE NO. to "02", individual setting, so that the slave unit can be individually set. (Refer to Table 8)
(SECOND CODE NO. is factory set to "01", unified setting.)

Table 8

Setting	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Unified setting	11 (21)	1	01
Individual setting			02

- (2) Perform field setting for the master unit.
 - (3) Turn off the main power supply switch after (2).
 - (4) Detach remote controller from the master unit and connect it to the slave unit.
 - (5) Turn on the main power supply switch again, and as in (1), change the SECOND CODE NO. to "02", individual setting.
 - (6) Perform field setting for the slave unit.
 - (7) Turn off the main power supply switch after (6).
 - (8) If there is more than one slave unit, repeat steps 4 to 7.
 - (9) Detach the remote controller from the slave unit after the setting, and reattach to the master unit. This is the end of the setting procedure.
- * You do not need to rewire the remote controller from the master unit if the optional remote controller for slave unit is used.
(However, remove the wires attached to the remote controller terminal board of the master unit.)

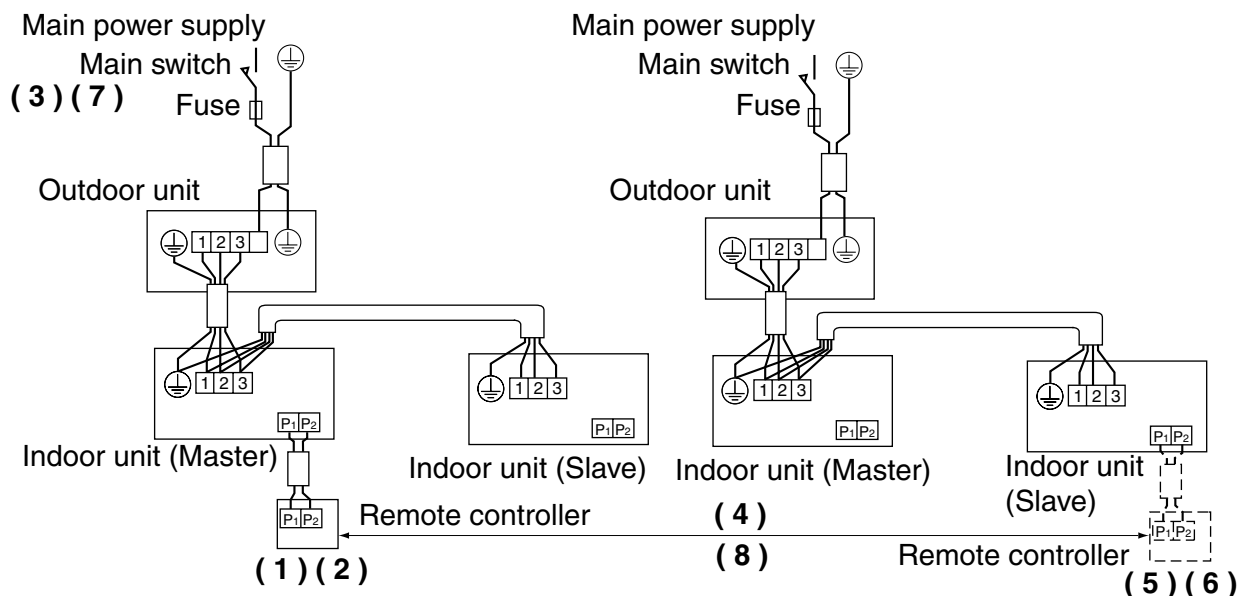

5. CONTROL BY 2 REMOTE CONTROLLERS

(Controlling 1 indoor unit by 2 remote controllers)

- When using 2 remote controllers, one must be set to "MAIN" and the other to "SUB".

MAIN/SUB CHANGEOVER

1. Insert a wedge-head screwdriver into the recess between the upper and lower parts of remote controller and, working from the 2 positions, remove carefully the upper part. (Refer to Fig. 20)
(The remote controller PC board is attached to the upper part of the remote controller.)
2. Turn the MAIN/SUB changeover switch on one of the two remote controller PC board to "S".
(Leave the switch of the other remote controller set to "M".) (Refer to Fig. 21)

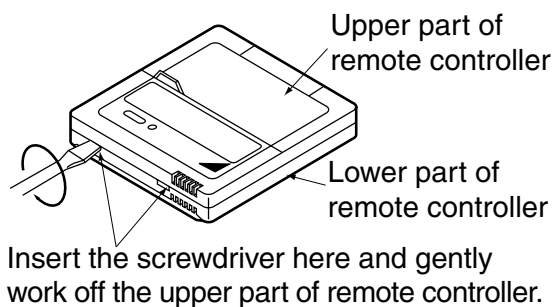


Fig. 20

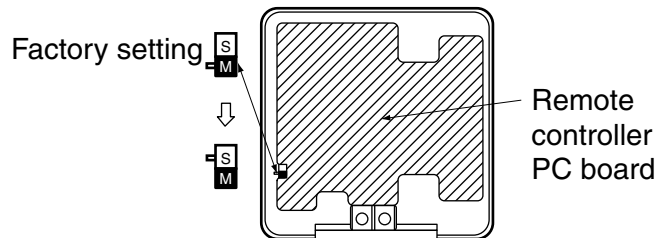


Fig. 21

10. TEST OPERATION

Refer to the section of “FOR THE FOLLOWING ITEMS, TAKE SPECIAL CARE DURING CONSTRUCTION AND CHECK AFTER INSTALLATION IS FINISHED” .

- After finishing the construction of refrigerant piping, drain piping, and electric wiring, conduct test operation accordingly to protect the unit.

1. HOW TO TEST OPERATION

- 1 Open the gas side stop valve.
- 2 Open the liquid side stop valve.
- 3 Electrify crank case heater for 6 hours (Not required in case of a unit exclusively designed for cooling only).
- 4 Set to cooling operation with the remote controller and start operation by pushing ON/OFF button (⏻).
- 5 Press INSPECTION/TEST OPERATION button (👁️ TEST) 4 times (2 times for wireless remote controller) and operate at Test Operation mode for 3 minutes.
- 6 Push AIR FLOW DIRECTION ADJUST button (🌀) to make sure the unit is in operation.
- 7 Press INSPECTION/TEST OPERATION button (👁️ TEST) and operate normally.
- 8 Confirm function of unit according to the operation manual.

PRECAUTIONS

- Refer to the diagnoses below if the unit does not operate properly.
- After completing the test run, press the INSPECTION/TEST OPERATION button once to put the unit in inspection mode, and make sure the malfunction code is “00” (=normal).
If the code reads anything other than “00”, refer to the malfunction diagnoses below.

2. HOW TO DIAGNOSE FOR PROBLEMS

With the power on. Troubles can be monitored on the remote controller or the LED's on the PC board of the indoor unit.

■ Trouble shooting with the display on the liquid crystal display remote controller.

- 1 With the wired remote controller. (NOTE 1)

When the operation stops due to trouble, operation lamp flashed, and “👁️” and the error code are indicated on the liquid crystal display . In such a case, diagnose the fault contents by referring to the table on the Error code list in case of group control, the unit No. is displayed so that the indoor unit no with the trouble can be recognized. (NOTE 2)

- 2 With the wireless remote controller.

(Refer also to the operation manual attached to the wireless remote controller)

When the operation stops due to trouble. the display on the indoor unit flashes. In such a case, diagnose the fault contents with the table on the Error code list looking for the error code which can be found by following procedures. (NOTE 2)

- (1) Press the INSPECTION /TEST OPERATION button, “👁️” is displayed and “0” flashes.

- (2) Press the PROGRAMMING TIME button and find the unit No. which stopped due to trouble.
 Number of beeps 3 short beeps.....Perform all the following operations
 1 short beep.....Perform (3) and (6)
 1 long beepNo trouble
- (3) Press the OPERATION MODE SELECTOR button and upper figure of the error code flashes.
- (4) Continue pressing the PROGRAMMING TIME button unit it makes 2 short beeps and find the upper code.
- (5) Press the OPERATION MODE SELECTOR button and lower figure of the error code flashes.
- (6) Continue pressing the PROGRAMMING TIME button unit it makes a long beep and find the lower code.
- A long beep indicate the error code.
- Trouble shooting with the LEDs on the PC board (Refer to Table 9)
 The following checking can be made with the service monitor LEDs (green). (Normal when flashing)
- ☀ : LED on ● : LED off ⚡ : LED flashing
 — : Not used for trouble shooting

Table 9

Microcomputer normal monitor	Transmission normal monitor	Details	
HAP(H1P)	HBP(H2P)	FA(Y)–F	FAYP-B, FAQ
☀	☀	Indoor unit is normal → Diagnose the outdoor unit	
☀	☀	Malfunction of indoor unit PC board assembly or miswiring between indoor and outdoor units	Miswiring between the indoor and outdoor units
	●	If the outdoor unit HAP(H1P) does not light, diagnose the outdoor unit. If it is flashes, it is due to either miswiring or malfunction of the indoor unit PC board assembly. (NOTE 4)	If the outdoor unit HAP(H1P) does not light, diagnose the outdoor unit. If it is flashed, it is due to either miswiring or malfunction of the indoor or outdoor unit PC board assembly. (NOTE 4)
☀	—	Malfunction of the indoor unit PC board (NOTE 5)	
●		Abnormal power supply, malfunction of PC board assembly or disconnection between the indoor and outdoor units (NOTE 5)	

NOTE 📖

1. In case wired remote controller. Press the INSPECTION /TEST OPERATION button on remote controller, “👁” starts flashing.
2. Keep down the ON/OFF button for 5 seconds or longer in the inspection mode and the above trouble history disappears, after the trouble code goes on and off twice, followed by the code “00”(normal). The display changes from the inspection mode to the normal mode.
3. Depending on the model or the conditions, it may carry out an emergency shut-down.
4. If the HBP(H2P) is off, the branch wiring between each of the indoor and outdoor units may either be incorrectly connected or broken. Before taking any of the diagnostic steps listed above, check the branch wiring.
 If the HBP(H2P) is off on an inverter, there is a possibility that the fuse on the outdoor unit's PC board is burnt out.
5. Cut off the power and wait for 5 seconds or longer. Turn on the power again and see if the LED is in the same state again.

3. Malfunction code

- For places where the error code is left blank, the “” indication is not displayed. Though the system continues operating, be sure to inspect the system and make repairs as necessary.
- Depending on the type of indoor or outdoor unit, the malfunction code may or may not be displayed.

Code	Malfunction/Remarks
A1	Indoor unit's PC board faulty
A3	Drain water level abnormal
A6	Indoor fan motor overloaded, overcurrent or locked
A7	Swing flap motor locked
	Only the air flow direction can not be controlled.
AF	Humidifier faulty
AH	Air cleaner faulty
	Only the air cleaner does not function.
AJ	Type set improper
	Capacity data is wrongly proset. Or there is nothing programmed in the data hold IC.
C4	Sensor for heat exchanger lamp is fault
C9	Sensor for suction air lamp is fault
CJ	Sensor for remote controller is fault
	The remote controller thermistor does not function, but the system thermo run is possible.
E0	Action of safety device (outdoor unit)
E1	Outdoor unit's PC board faulty (outdoor unit)
E3	High pressure abnormal(outdoor unit)
E4	Low pressure abnormal (outdoor unit)
E5	Compressor motor lock malfunction (outdoor unit)
E7	Outdoor fan motor lock malfunction
	Outdoor fan instantaneous overcurrent malfunction (outdoor unit)
E9	Electronic expansion valve faulty (outdoor unit)
F3	Discharge pipe temperature abnormal (outdoor unit)
H3	High pressure switch faulty (outdoor unit)
H4	Low pressure switch faulty (outdoor unit)
H7	Outdoor motor position signal malfunction (outdoor unit)
H9	Outdoor air thermistor faulty (outdoor unit)
	(NOTE 3)
J3	Discharge pipe thermistor faulty (outdoor unit)
	(NOTE 3)
J5	Suction pipe thermistor faulty (outdoor unit)
J6	Heat exchanger thermistor faulty (outdoor unit)
	(NOTE 3)
L4	Overheated heat-radiating fin (outdoor unit)
	Inverter cooling defect.
L5	Instantaneous overcurrent (outdoor unit)
	Possible earth fault or short circuit in the compressor motor.
L8	Electric thermal (outdoor unit)
	Possible electrical overload in the compressor or cut line in the compressor motor.
L9	Stall prevention (outdoor unit)
	Compressor possibly locked.

LC	Transmission malfunction between the outdoor control units' inverters (outdoor unit)
P1	Open-phase (outdoor unit)
P3	PC board temperature sensor malfunction (outdoor unit)
P4	Heat-radiating fin temperature sensor malfunction (outdoor unit)
PJ	Type set improper (outdoor unit)
	Capacity data is wrongly proset. Or there is nothing programmed in the data hold IC.
U0	Suction pipe temperature abnormal
U1	Reverse phase
	Reverse two of the L1,L2 and L3 leads.
U2	Power source voltage malfunction (outdoor unit)
	Includes the defect in K1M.
U4 UF	Transmission error (indoor unit – outdoor unit)
	Wrong wiring between indoor and outdoor units or malfunction of the PC board mounted on the indoor and the outdoor units. If UF is shown, the wiring between the indoor and outdoor units is not properly wired. Therefore, immediately disconnect the power supply and correct the wiring. (The compressor and the fan mounted on the outdoor unit may start operation independent of the remote controller operation.)
U5	Transmission error (indoor unit – remote controller)
	Transmission is improper between the indoor unit and the remote controller.
U8	Malfunction in transmission between main and sub remote controls. (Malfunction in sub remote control.)
UA	Miss setting for multi system
	Setting is wrong for selector switch of multi-system. (see switch SS2 on the main unit's PC board)
UC	Central control address overlapping


11. WIRING DIAGRAM

(Refer to Fig. 22, 23)

1	TO OUTDOOR UNIT	2	NOTE) 4
3	WIRED REMOTE CONTROLLER	4	SWITCH BOX
5	RECEIVER/DISPLAY UNIT	6	IN CASE OF SIMULTANEOUS OPERATION SYSTEM
7	INDOOR UNIT (MASTER)	8	INDOOR UNIT (SLAVE)
9	NOTE) 8	10	CONTROL BOX
11	REMOTE CONTROLLER		

WIRING DIAGRAM


LIMIT SWITCH (SWING FLAP)		WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)	
33A	PRINTED CIRCUIT BOARD	A3P	PRINTED CIRCUIT BOARD
33S		A4P	PRINTED CIRCUIT BOARD
A1P	PRINTED CIRCUIT BOARD	BS	PUSH BUTTON (ON/OFF)
A2P	(TRANSFORMER 230V/16V)	H1P	LIGHT EMITTING DIODE (ON-RED)
C1R	CAPACITOR (M1F)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
HAP	LIGHT EMITTING DIODE	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
H1P	(SERVICE MONITOR-GREEN)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
HBP	LIGHT EMITTING DIODE	SS1	SELECTOR SWITCH (MAIN/SUB)
H2P	(SERVICE MONITOR-GREEN)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
M1A	MOTOR (SWING FLAP)	CONNECTOR FOR OPTIONAL PARTS	
M1F	MOTOR (INDOOR FAN)	X30A	CONNECTOR (INTERFACE ADAPTOR FOR SKY AIR SERIES)
Q1F	THERMO SWITCH (M1F EMBEDDED)	X35A	CONNECTOR (GROUP CONTROL ADAPTOR)
R1T	THERMISTOR (AIR)	X40A	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)
R2T	THERMISTOR (COIL)	TYPE ONLY	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)
RyA	MAGNETIC RELAY (M1A)		
SS1	SELECTOR SWITCH (EMERGENCY)	CONNECTOR FOR OPTIONAL PARTS	
X1M	TERMINAL STRIP	CONNECTOR (INTERFACE ADAPTOR FOR SKY AIR SERIES)	
X2M	TERMINAL STRIP	CONNECTOR (GROUP CONTROL ADAPTOR)	
PC	PHASE CONTROL CIRCUIT	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)	
RC	SIGNAL RECEIVER CIRCUIT	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)	
TC	SIGNAL TRANSMISSION CIRCUIT	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)	
WIRED REMOTE CONTROLLER			

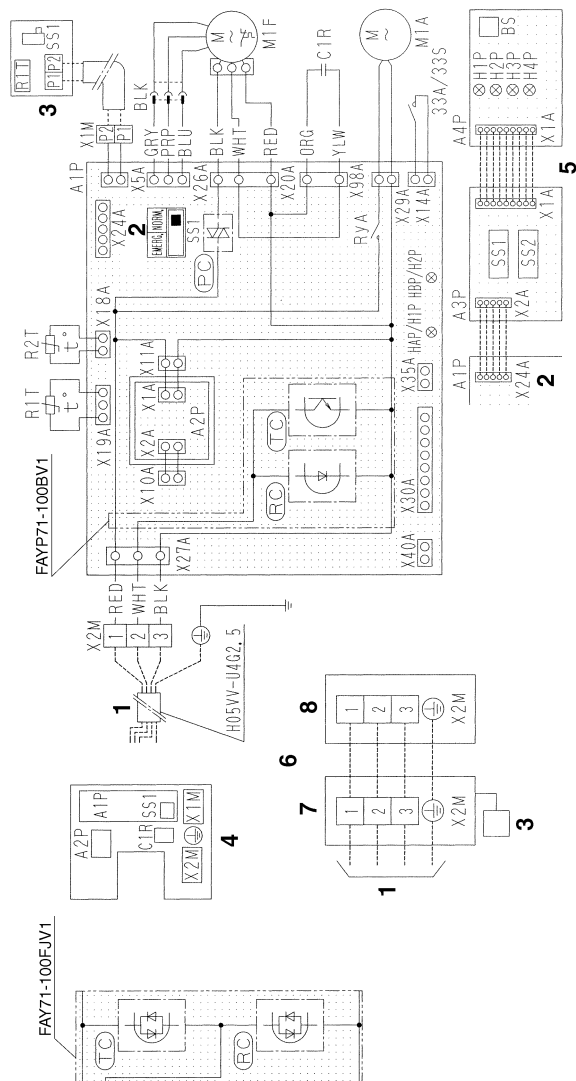

NOTES)

1. : TERMINAL
2. : FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
4. X24A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
5. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM. CONFIRM ENGINEERING MATERIALS AND CATALOGS, ETC. BEFORE CONNECTING.
6. SYMBOLS SHOW AS FOLLOWS:
RED: RED BLK: BLACK WHT: WHITE YLW: YELLOW ORG: ORANGE
GRY: GRAY PRP: PURPLE BLU: BLUE
7. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) BY INSTALLATION MANUAL AND ENGINEERING MATERIALS, ETC.

Fig. 22

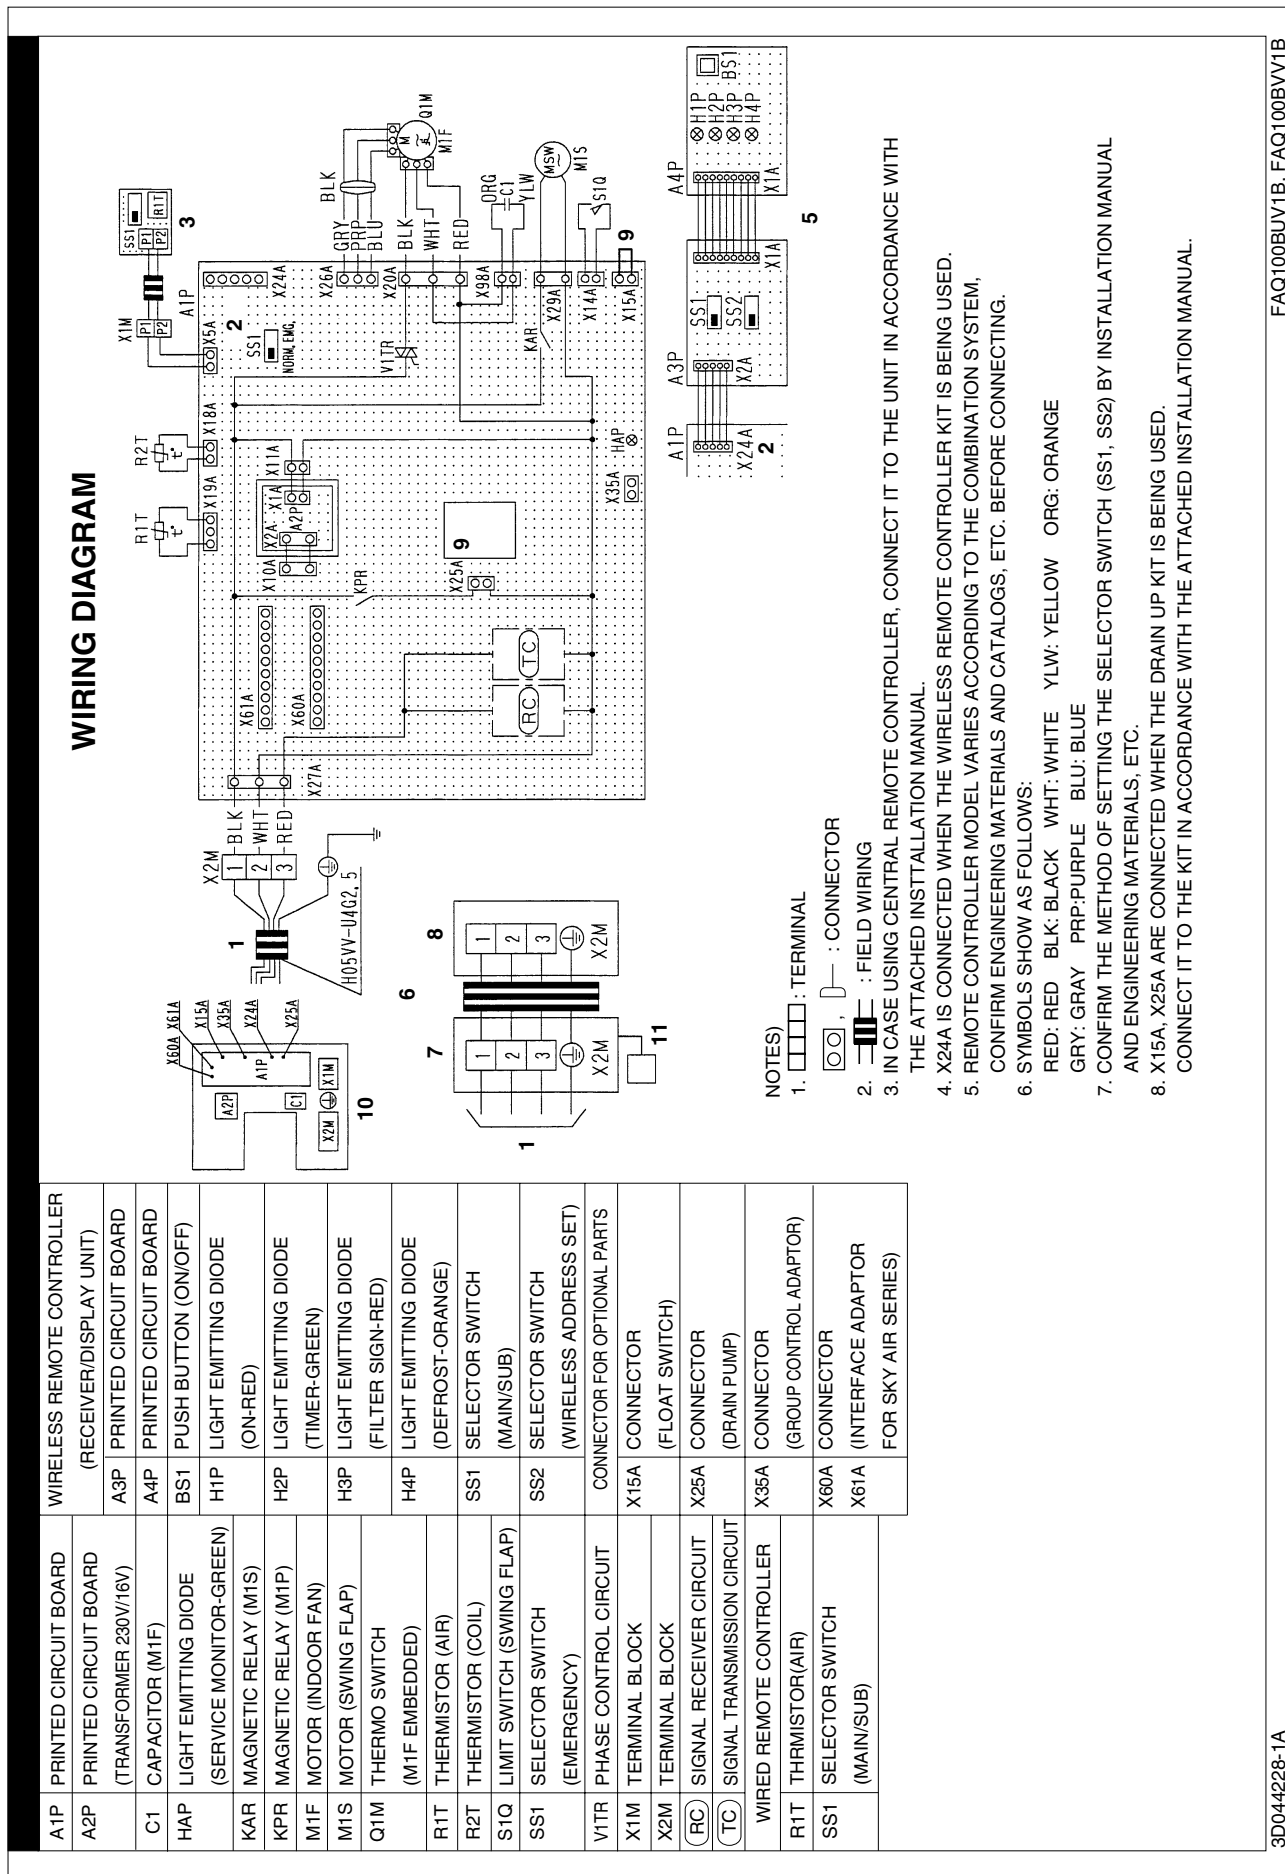

3D044228-1A

FAQ100BUV1B, FAQ100BVV1B

Fig. 23

