


# INSTALLATION MANUAL

# **R410A Split Series**



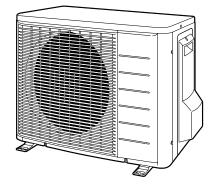

Models RXS20G2V1B RXS25G2V1B RXS35G2V1B RXG25E3V1B RXG35E3V1B ARXS20G2V1B ARXS25G2V1B ARXS35G2V1B ARXS35G2V1B ARXG35E3V1B

## RKS20G2V1B RKS25G2V1B RKS35G2V1B

English	Installation manual R410A Split series
Deutsch	Installationsanleitung Split-Baureihe R410A
Français	Manuel d'installation Série split R410A
Nederlands	Montagehandleiding R410A Split-systeem
Español	Manual de instalación Serie Split R410A
Italiano	Manuale d'installazione Serie Multiambienti R410A
Ελληνικά	Εγχειρίδιο εγκατάστασης διαιρούμενης σειράς R410A
Portugues	Manual de Instalação Série split R410A
Русский	Руководство по монтажу Серия R410A с раздельной установкой
Türkçe	Montaj kılavuzları R410A Split serisi

allation many

CE - DECLARATION-OF-CONFORMITY CE - KONFORMITÄTSERKLÄRUNG CE - DECLARATION-DE-CONFORMITE CE - CONFORMITEITSVERKLARING	CE - DECLARACION-DE-CONFORMIDAD CE - DICHIARAZIONE-DI-CONFORMITA CE - AHAA2H ZYMMOP\$AA2H2	ce - declaraçã ce - 3arbjehúe- ce - Opfyldelse ce - Fôrsãkran-c	CE - DECLARAÇÃO-DE-CONFORMIDADE CE - 3ARB/IEHME-0-COOTBETCTBM CE - OPFYLDELSESERKLÆRING CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE	ce - Erklæring om-Samsvar Ce - Ilmoitus-Yhdenmukaisuudesta Ce - Prohlåsen-0-Shodé	CE - IZJANA-O-USKLADENOSTI CE - MEGFELELŐSÉGI-NYILÁTKOZAT CE - DEKLARACJA-ZGODNÓSCI CE - DECLARAŢIE-DE-CONFORMITATE	CE - IZJAVA O SKLADNOSTI OZAT CE - VASTAVUSDEKLARATSIOON CE - GEKTAPALINA-3A-CBOTBETCTBME MITATE		CE - ATTIKTIES-DEKLARACIJA CE - ATBILSTIBAS-DEKLARACIJA CE - VYHLASENIEZ-HODY CE - UYUMLULUK-BILDIRISI
<ul> <li>DAIKIN INDUSTRIES, LTD.</li> <li>If each decaration relates:</li> <li>existent and service responsibility that the air conditioning models to which this declaration relates:</li> <li>e existent and service responsibility that the air conditionent wises part la présente decaration</li> <li>e existent and service responsabilité que les appareils d'air conditionné vises part la présente decaration</li> <li>e existent relations eventueene verantwordengique du les appareils d'air conditionné vises part la présente decaration</li> <li>e declara topis a suite responsabilité que les appareils d'air conditionné vises part la présente decaration</li> <li>e declara topis sui responsabilité due los modelos de aire acondicionado a los cuales hace reference</li> <li>e declara topis sua responsabilité due los modelos de aire acondicionado a los cuales hace reference</li> <li>e declara topis sua responsabilité due los modelos de aire acondicionado a los cuales hace reference</li> <li>e declara topis sua responsabilité due los modelos de aire acondicionado a los cuales hace reference</li> <li>e declara topis sua responsabilité due los modelos de aire acondicionado a ue esta declaraçãos</li> <li>e declara topis sua responsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis a suaresponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar suaresponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar anter esponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar anter esponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar anter esponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar anter esponsabilité due los modelos de ar condicionado a que esta declaraçãos</li> <li>e declara topis ar anter es</li></ul>	<ul> <li>DAIKIN INDUSTRIES, LTD.</li> <li>Of each declares under its sole responsibility that the air conditioning models to which this declaration relates:</li> <li>0 e within and senie alleringe Verantwortung daß die monolelle der Kimageriate für die diese Erklärung bestimm ist.</li> <li>0 erklärt and senie alleringe Verantwortung daß die arconditioning unde waarop deza werklaring bestimm ist.</li> <li>0 e diedare sous as seuie responsabilitied que les appareils dat conditioning untik waanop deza werklaring betrekking heeft.</li> <li>0 e diedare sous as seuie responsabilitied que les appareils dat conditioning untik waanop deza werklaring betrekking heeft.</li> <li>0 die diedare sous as seuie responsabilitied que les monoléois de alre acconditioning untik waanop deza werklaring betrekking heeft.</li> <li>0 dichana sativ sur ansponsabilitied que les monoléois da al de alroconditioning untik waanop deza werklaring betrekking heeft.</li> <li>0 dichana sativ sur ansponsabilitid che i condicionado a lue esta de delara doir.</li> <li>0 dichana sativ sur ansponsabilitid che i condicionado a que esta de delara doir.</li> <li>0 de declara so sua aeculsvina responsabilitida che i condicionado a que esta de delara doir.</li> <li>0 de declara so sua aeculsvina responsabilidad que los modellos e alive accondicionado a que esta de delara doir.</li> <li>0 de declara so sua aeculsvina responsabilidad que novelutivor era ondo compleptica in moporion privace.</li> <li>0 de declara doit a monolara antiva aecondicionado a que esta de delara doir.</li> <li>0 de declara so sua aeculsvina responsabilidad que novelutivor era ondo compleptica in moporion privace.</li> <li>0 de declara doit a sta aecondicionad o run esta declara doit.</li> <li>0 de declara doit a de declara doit a condicionado a que esta de declara doit.</li> <li>0 de declara doit a sta sua aeconsistiva era modellos de arive condicionado a que esta de desta adoit a declara doit.</li> <li>0 de declara doit a arconsistiva era condicionado a que esta declara doit.</li> &lt;</ul>	22 23 2	<ul> <li>exerce under eneansvar, at klimaanlægmodell (ex) ekklærer under eneansvar, at klimaanlægmodell (ex) ekklærer et fullsendig ansvar for at de luftkonts (ex) indintar vjestionnaan omalat væstuuliaan, ettat otta (ex) prohlešuje ve své piné odpovědnosti, že modely (ex) prohlešuje ve své piné ve své piné (ex) prohlešuje ve své piné odpovědnosti, že modely (ex) prohlešuje ve své piné ve své piné (ex) prohlešuje ve své své své své své své své své své své</li></ul>	<ol> <li>(1) 6: erklærer under enearevar, at klimaanlegomodellerne, som denne dektaration vedrører.</li> <li>(1) 6: dektarerar i egenskap av huvdansvarig, at luftkonditjoneringsmodellerna som berdis av denna dektaration innebår att:</li> <li>(2) 0: erklærer et fullstendig ansvar for at de uttkondisjoneringsmodeller som berores av denne dektaration innebår att:</li> <li>(3) 6: enklærer et fullstendig ansvar for at de uttkondisjoneringsmodeller som berores av denne dektaration innebårer att</li> <li>(3) 6: enklærer et fullstendig ansvar for at de uttkondisjoneringsmodeller som berores av denne dektaration innebårer att</li> <li>(4) 6: prohlašuje ve svie piné odpovédnosti, že modely klimaltizace, k nimž se toto prohlášeni vztahuje.</li> <li>(4) 6: enelles feletissége tudatakan aksition odpovronsku da su model klima urdaja an kole se ova izpara odnosi:</li> <li>(4) 6: enelles feletissége tudatakan et klimaterendezis modellek, melyetre e nyliakozat voraktorik.</li> <li>(4) 6: enelles feletissége tudatakan et al endent, zen av model klimatrzatorów, których otvyczy ninlejsza dektaraje</li> <li>(4) 6: enelles feletissége tudatakan et al endent, av are se reterá acesiá deckaraje.</li> <li>(5) edekaraje na wäsna i wydazna odpowiecziahosk. že modele klimatyzatorów, których otvyczy ninlejsza dektaraje.</li> <li>(2) edekaraje na wäsna i wydazna odpowiecziahosk.</li> </ol>	kkaraton innebär att: jon innebærer at: talit: innsi: innsi: sisza dekkaradja:	<ol> <li>(9) (20) z tyso odgovornosijo tigivlja, da so modeli klimatskih naprav, na kalere se tigiva nanaša.</li> <li>20) (50) kimilab oma tijelikul vastutusel, et klasoleva deklaratsiooni alla kuuluvad klimaseadmele mudelici.</li> <li>21) (50) pastropavpa ka csono roreseptocr, ve kongenivre konwarzwe kukrizanauva, sa kovino se ornakan rasu paskrapauva:</li> <li>22) (50) kizika se on attembar ka ka se on domčionavimo pričeklaji uz kuriems yra takoma ši deklaracija:</li> <li>23) (50) kizika se on adskomivja se belaka katika modeljo, na ktoré sa vztahuje tuto vyhlasenie.</li> <li>24) (50) kizika se ondotovatimo pričeknji na ktoré sa vztahuje tuto vyhlasenie.</li> <li>25) (50) kamaran kendi sorumlutigunda olmak tizere bu bildrinin tigli oldužju klima modellerinin aşağıdaki gibi olduğuru bejan eder.</li> </ol>	kih naprav, na katere se izjava karatsisoni alla kuuluvad kilima komaravvua wucranauva, sa komaravvua wucranauva, sa komdicioneläji, uz ku delu galsa kondicioneläji, uz ku tazačne modely, na ktoré sa vz bildirinh itglii olduĝu klima mode	nanaša: Iseadmele mudelid: iseadmele mudelid: iems yra takikoms ši deklarācija: iriem stratiecas šī deklarācija: iriem attiecas šī deklarācija: tahuje tuto vyhlasenie: tahuje tuto vyhlasenie: elierinin aşaģudaki giti olduģuru beyan eder:
Of are in conformity with the following standard(s) or other r instructions: derived noigenden Norm(en) oder einem anderen Normot daß sie gemäß unseren Anweisungen eingesetzt werden: 30 sont conformes ä kaux norme(s) ou aurreis) document(s) docnforme da kaux norme(s) ou aurreis) document(s) docnforme da kaux norme(s) un aureis) document(s) docnforme da kaux norme(s) un aureis) document(s) docnforme da kaux norme(s) un aureis) document(s) docnform al (s) seguene(s) seguene(s) norma(s) u oth norst e istructiones: 06 sont conform al (s) seguene(s) a autro(i) docu nost e istruction: 07 sivor outpevor µs. Tr qonytec µoc; ENGO335,22,2,400	Of are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions. 26 enciden tolgenden Norm(len) doer einem anderen Normdokument oder -dokumenten entsprichtentsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden. 30 sontommes al akaux normele) ou autreis jocomment(s) normatifis), por utant qu'its soient ufliess conformément à nos instructions: dis sie gemäß unseren Anweisungen eingesetzt werden. 30 sontommes al akaux normele) ou autreis jocomment(s) normatifis), pour autant qu'its soient utilisés conformément à nos instructions: dis sie gemäß unseren Anweisungen eingesetzt werden. 30 sontommes al akaux normele) ou autreis jocomment(s) normatifis), pour autant qu'its soient utilisés conformément à nos instructions: dis sie enconforme al generale) of efer of meer andere bindende document(s), normativo(s), siempre que sean utilizados de acuerdo con nuertas instructiones. 30 sontommes data encomment (s) siguiente(s) normativo(s), asentue que sean utilizados de acuerdo con nuertas instructiones. 40 sonto conform (j) seguente(s) saturdar(s) o atho(j) documento(s) acarative in conformida alle nostruction: 50 sonto conform (j) seguente(s) reportendo() noturne(o) a carative inormativo, uno triv ripolitotecines of acuerdo con unstra situacion: 50 sonto conform (j) seguente(s) reportendo() noturne(o) a caratitere normativo, uno triv ripolitotecen (on xynoucourcus of upword us: rolo) mylics µcq; 51 sonto conform (j) ripolitot(s) noturne(o) a caratitere normativo, uno triv ripolitotecen (on xynoucourcus) acuerdo con acuerdo acuerdo (s) ripolutecen (s) acuerdo (s) rubot situacion: 50 sonto contenin (j) ripolutece) noture (s) noture (s) ripolutecen (s) rubot situacion: 51 sonto contenin (j) ripolutece) noture (s) noture (s) rubot situacion:		Bestão em conformidade com ale) seguine(s) norma acordo com as nossas instruções: acordo com as nossas instruções: 90 coorenorreyor cinaçovoum crantapraw nun други werrpyrcuman. 10 werrbyrcuman. 11 respetive utustrinej ar urtiford i överensstämmelse ficutašitiming at användining sker löverensstämmelse fissus brukes i henhold fil vale instrukser. 13 vastaavat seuraavien standardien ja mulden ohjee disses brukes i henhold fil vale instrukser. 13 vastaavat seuraavien standardien ja mulden ohjee takses brukes i sejou vuztivány v souladus našim 14 za předpokádaí, že jsou vuztivány v souladus našim 15 u skladu sa siljedečim standardom(ima) ili drugim norr	Bestão em conformidade com alis) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acondo com as nossaas instruções. Booroenercreyor citaquovoumor craqapram vim qoyrum Hopwarveleuk дocywentaw, may voroeuw ux voronacoeaeven cornacio nauxum wrCTPyrcurent. To entrophe foigende standard(er) eller andetande retiningosjivende dokument(er), forudast at disse anvendes i henhold til vore trespektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under forustester förseven henhold til vore försteken informa serves anvendes i nenhold til vore försteken informa server eller andra normgivande dokument, under forussening av at 2septektive utstyr et i overensstämmelse med van anstruktioner. 12 respektive utstyret et i overensstämmelse med løgende standard(er) eller andra normgivande dokument, under forutssening av at sese brukes inhenhold tilvare instrusten. 13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellytiden, että nittä käytelään ohjeidemme med løgende standard(en) eller andra normgivande dokument, under forutssetning av at zapädoptokau. <sup>2</sup> si jou vyätivän v soudadus nasimi pokyny, odpovidaji näsledujicim norman moto morativnim dokumenttim. 13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vastimuksia edellytiden, että nittä käytelään ohjeidemme mede as siljedeelin standardien ja muiden ohjendemme vastimuksia edellytiden, että nittä käytelään ohjeidemme vastia seuraavien standardien ja muiden ohjeellisten dokumenttien vastimuksia edellytiden, että nittä käytelään ohjeidemme vastia salidati sa siljedeelin standardien ja muiden ohjendemme vastia seuraavien standardien ja muiden ohjendemme vastia seuraavien standardien ja muiden ohjendemme vastia seuraavien standardien salidati sa siljedeelin standardien seuraavien standardien ja muiden ohjendemme vastia vasti seuraavien standardien seuda se siljedeelin standardien se		<ol> <li>for egelleinek az alabib szehványlok)nak vagy egyeb irányadó dokumentum(ok)nak, ha azokar előírás szerint használják.</li> <li>for spelnáją wymogi następujących nom i imnych dokumentów nomalizacyjnych, pod warunkiem že używane są zgódnie z naszymi instrukcjami:</li> <li>su ni ni conformiate cu umátorul (urmátoarele) standardje) sau alt(e) document(je) normátiv(e), cu condiția ca acestea să fe utilizate în conformiate cu matorul (urmátoarele) standardje) su alt(e) document(je) normátiv(e), cu condiția ca acestea să fe utilizate în conformiate cu matorul (urmátoarele) standardje) su alt(e) document(je) normátiv(e), cu condiția ca acestea să fe utilizate în conformiate cu matorul (urmátoarele) standardje) su alte su porzbijale vastvalt mele juhenditele: 20 or vasteuros signite) el sandardje los standardje) su dove necestea dokumentus su salyga, kad yra naudojami pagal múst nuncotymus:</li> <li>a di necorprenerma ra craguarte crauqaptiv nun gytivi vopmative, povymentu, nun vicipitazi a zabelja noradjiunem, atbitis sekojošiem standardien un citiem normátiviem dokumentiem:</li> <li>21 corprenerma ra craguarte crauqaptiv nun gytivi wopmativem un citiem normátiviem dokumentiem:</li> <li>23 tad, ja lietori abitistosi raziotaja noradjiumiem, atbitis sekojošiem standardien un citiem normátiviem dokumentiem:</li> <li>24 si vzinos s rasiedovnoutým) normoujámi) adelo iným(1) normátivym(1) dokumentunám), za prepokidau, že sa používajú v súlade si vizindio, talimatiarmiza göre kullanilmas koguluja aşaĝidaki standartiar ve nom beihren begleire uyumludur.</li> </ol>	Inyadó dokumentum (dk)nak, ha mentów normalizacy)nych, poo trd(e) sau alt(e) document(e) nc d pogojem, da se uporablajo v d pogojem, da se uporablajo v malúvsete dokumentus su sajvga, ku minius dokumentus su sajvga, ku kojošiem standartian un citiem mi(i) normatívnym(i) dokumento gidaki standartiar ve norm beli gidaki standartiar ve norm beli	a zokat előítás szerint használják: d warunkiem že užywane są zgodnie z naszy omatív(e), cu condíja ca acestea sá fe utilizate skladu z nášimi navodili: nél kasudtakke vastavalt mele juhenditele: w ycnoswe, чe ce wanonsear cs.macko nauur kad yra naudojami pagal műsų hurodymus: nomatíviem dokumentlem: nomatíviem dokumentlem: nomatíviem dokumentlem: nomatíviem dokumentlem:
иг: jons des: igen van: sr de: mm тамт. Hиями:	0 under iggitagelse af bestemmelserne i:         19 ob upoštevanju določis.           11 emityj vilkoren i:         20 vastavali nouvele.           12 gitt i henhold til bestemmelserne i:         21 cnegtasikov krarysvare ka:           13 moudstanen måafayksis:         21 cnegtasikov krarysvare ka:           13 moudstanen måafayksis:         21 sinstin unostatu, pateikiamu;           13 moudstanen måafayksis:         23 ekinstin unostatu, pateikiamu;           14 sodrženi utsanoven ipredpisu:         23 ekinstin unostatu, pateikiamu;           15 prema odrechama:         24 održavajúc utsanovenia:           16 koveti a zjr.         25 bunun kopuliarma urgun olaraki.           17 zodnie z postanovieniami Dyrektyw:         55 bunun kopuliarma urgun olaraki.	t Ha: Mikiamų noteikitas: La un olarak:	Electro	Low Voltage 2006/95/EC Machinery Safety 98/37/EEC Electromagnetic Compatibility 2004/108/EC	01 Directives, as amended 02 Directives, as amended 03 Directives, telles que modifiée 04 Richtignes, zoals geanneidee 05 Direttive, come da modifica 07 Odrywu's (morc s'cuvr poinc 08 Directivas, confer et anotifica	s, d. bo. emn_lPeti. awn.	<ol> <li>Direktiver, med senere ændringer.</li> <li>Direktiver, med foretagne ändringer.</li> <li>Direktiver, med foretagne ändringer.</li> <li>Direktiver, med foretatte endringer.</li> <li>Direktiver, med foretatte endringer.</li> <li>Med parteina kuin ne var muuettuina.</li> <li>Varlatnien, kako je izmijenjeno.</li> <li>Smjenuce, kako je izmijenjeno.</li> <li>Smjenuce, kako je izmijenjeno.</li> <li>Direktivelin, a mendramentele repektive.</li> <li>Direktivelin, cu amedramentele repektive.</li> </ol>	<ol> <li>Direktive z vsemi sprementbarni.</li> <li>Direktivić kosa muddatslega.</li> <li>I. Директиви, с техните изменения.</li> <li>I. Direktivose su polidymais.</li> <li>S. Direktivša un o papidinājumos.</li> <li>S. Beigstinliniş hallenyle Yönetmelikler.</li> </ol>
<ol> <li>Note * as set out in the Technical Construction File Daikin, TC the Certificate 7476-KR0.ERNOST-4657.</li> <li>Hinweis * wien der Technischen Konstructionsakte Daikin, TCFJ Zertifikat 74736-KR0.ERNOST-4657.</li> <li>Remarque * la due sipul darfast Fibher de Construction Techniq au Certificata 74736-KR0.ERNOST-4957.</li> <li>Bemek * zaals weneich in Fibmiosch Construction Techniq au Certificata 74736-KR0.ERNOST-4957.</li> <li>Nola * la Cons se septone en Archino de Construction Téc el certificata 74736-KR0.ERNOST-4957.</li> <li>Nola * la Cons se septone en Archino de Construction Téc delineation 74736-KR0.ERNOST-4957.</li> <li>Jipetionn * Onter poologicitar on Argosin Cistruction de Construc- tion architecta 67478-KR0.ERNOST-4957.</li> <li>Jipetionn * Informorphytic 74736-KR0.ERNOST-4957.</li> <li>Inpreventing to Argosin Construction de Construc- centification 74736-KR0.ERNOST-4957.</li> <li>Inpreventing to Argosin Construction de Construction delineation becalitication 74736-KR0.ERNOST-4957.</li> <li>Inpreventing * argosine a Ligner Fischino de Construction Certification 74736-KR0.ERNOST-4957.</li> <li>Inpreventing * Reveneexon on the generation of the Construc- centification 24736-KR0.ERNOST-4957.</li> <li>Inpreventing * Reveneexon on the generation of the construction Certification 74736-KR0.ERNOST-4957.</li> <li>Inpreventing * Reveneexon on the generation of the construction certification 74736-KR0.ERNOST-4957.</li> <li>Inpreventing * Reveneexon on the generation of the construction of the construction construction Extendeedon on the construction of construction construction Certification 74736-KR0.ERNOST-4957.</li> </ol>	as set out in the Technical Construction File Daikin.TCF.015 and judged positively by KEMA according to the Certificate 7/136.KR0.ElliC97-487. Zarifikat 7/136.KR0.ElliC97-487. Zarifikat 7/136.KR0.ElliC97-487. Zarifikat 7/136.KR0.ElliC97-487. Zarifikat 7/136.KR0.ElliC97-487. Centificat 7/136.KR0.ElliC97-487. Conflication of the de Construction Technique Daikin.TCF.015 et jugis positivement par KEMA conformément au Centification of the de Construction Technique Daikin.TCF.015 y juggado positivement par KEMA conformément au Centification of T736.KR0.ElliC97-4957. Conflication of T736.KR0.ElliC97-4957. C	nt wa jie to bo com o EMA	<ol> <li>Bemærk* som anført i den Tekniske Konstruktions til Certifikar 7478-KROCENC97-4957.</li> <li>Innomation * trutosiningen är utförd i enlighet med der transfår at Certifikar 7438-KROCEINC97-4957.</li> <li>Merk* jak bylo uvelano v souhou tehniske Sertifikarti 74736-KROCEINC97-4957.</li> <li>Huom* jak bylo uvelano v souhou tehniske Sertifikarti 74736-KROCEINC97-4957.</li> <li>Napomena* jak bylo uvelano v souhou tehniske kako je izdosen u Dabteiot enhiskolv Certifikart 17436-KROCEINC97-4957.</li> <li>Meglegyzés * at/2) bakhun 74736-KROCEINC97-4957.</li> <li>Meglegyzés * at/2) bakhun 74736-KROCEINC97-4957.</li> <li>Uwaga* zyzak-KROEINC97-4957.</li> <li>Uwaga* zyzak-KROEINC97-4957.</li> <li>Notá* conform edor stabilite in Dastaul tehnyta zokadecteren 74736-KROEINC97-4957.</li> <li>Notá* conform edor stabilite in Dastaul tehnyta zokadecteren 74736-KROEINC97-4957.</li> </ol>	som anført i den Tekniske Konstruktionslil Daikin TCF.015 og positivi vurderet af KEMA i henhold til Centrifika 17436-KROEKUC97-4957. Irangår av Carbina 17436-KROEKUC97-4957. Strangår av Centrikar 17436-KROEKUC97-4957. Sentrikarin 17436-KROEKUC97-4957.			CF015 in odobreno s strani KEM siconis Dalkin.TCF015 ia heaks k vie balkin.TCF015 v palvirima vioje Dalkin.TCF015 a kl kin.TCF015 a kl konštukcie Dalkin.TCF015 a kl belintidiği gibi ve 74736-KROLEM	kd je določeno v tehmični mapi Daikin, TCF.015 in odobreno s strani KEMA v skladu s certifikatom 74736-KROJEIMC97-4957. nagu on nädatud tehmilises dokumentalsionis Daikin, TCF.015 ja heaks kildetud KEMA järgi vastarakt sertifikaadin 74736-KROJEIMC97-4957. Ceprimétiment 74736-KROJEIMC97-4957. Eksi on uncohra Technineje konstrukcijos byloje Daikin, TCF.015 ir oueneeno nonoxintenko or KEMA cisritacioo Ceprimétiment 74736-KROJEIMC97-4957. Jaco nu uncohra Technineje konstrukcijos byloje Daikin, TCF.015 is kala pagal pazimetiment 74736-KROJEIMC97-4957. Jaco nu uncohra Technineje konstrukcijos byloje Daikin, TCF.015 a kladne posidenké KEMA podria sertifikat 74736-KROJEIMC97-4957. Jaco je o stanovené v Súbore technickej konštrukcie Daikin, TCF.015 a kladne posidenké KEMA podria do je o tstanovené v Súbore technickej konštrukcie Daikin, TCF.015 a kladne posidenké KEMA podria Daikin, TCF.015 Telivať, vpi Dosystanda belindidij gibi ve 74736-KROJEIMC97-4957 seertifikasma gôre KEMA tarafindan olumiu darak degletendrifimistir.
3SB63850-9E	R. ama	R	Noboru Murata Manager Quality Control Department Shiga, 1st of Nov. 2007	rol Department		<b>DAIKIN INDUSTRIES, L</b> Umeda Center Bldg., 2-4-12, Nakazaki-Nishi, Kita-ku, Osaka, 530-8323 Japan	<b>INDUSTRIES</b> Bldg., 2-4-12, Nakazaki-N 530-8323 Japan	<b>ES, LTD.</b> Iki-Nishi,


# **Safety Precautions**

- · Read these Safety Precautions carefully to ensure correct installation.
- This manual classifies the precautions into WARNING and CAUTION.
- Be sure to follow all the precautions below: they are all important for ensuring safety.

#### 

#### 

The following safety symbols are used throughout this manual:

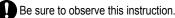

Be sure to establish an earth connection.

Never attempt.

• After completing installation, test the unit to check for installation errors. Give the user adequate instructions concerning the use and cleaning of the unit according to the Operation Manual.


<u> </u>
Installation should be left to the dealer or another professional.     Improper installation may cause water leakage, electrical shock, or fire.
<ul> <li>Install the air conditioner according to the instructions given in this manual. Incomplete installation may cause water leakage, electrical shock, or fire.</li> </ul>
<ul> <li>Be sure to use the supplied or specified installation parts.</li> <li>Use of other parts may cause the unit to come to lose, water leakage, electrical shock, or fire.</li> </ul>
<ul> <li>Install the air conditioner on a solid base that can support the weight of the unit. An inadequate base or incomplete installation may cause injury in the event the unit falls off the base.</li> </ul>
• Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice. Insufficient capacity or incomplete electrical work may cause electrical shock or fire.
Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.
<ul> <li>For wiring, use a cable length enough to cover the entire distance with no connection.</li> <li>Do not use an extension cord. Do not put other loads on the power supply, use a dedicated power circuit.</li> <li>(Failure to do so may cause abnormal heat, electric shock or fire.)</li> </ul>
• Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the interconnecting wires so their terminals receive no external stresses. Incomplete connections or clamping may cause terminal overheating or fire.
• After connecting interconnecting and supply wiring be sure to shape the cables so that they do not put undue force on the electrical covers or panels.
Install covers over the wires. Incomplete cover installation may cause terminal overheating, electrical shock, or fire.
If any refrigerant has leaked out during the installation work, ventilate the room. (The refrigerant produces a toxic gas if exposed to flames.)
After all installation is complete, check to make sure that no refrigerant is leaking out. (The refrigerant produces a toxic gas if exposed to flames.)
When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air. (Any presence of air or other foreign substance in the refrigerant circuit causes an abnormal pressure rise or rupture, resulting in injury.)
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.
• During installation, attach the refrigerant piping securely before running the compressor. If the compressor is not attached and the stop valve is open during pump-down, air will be sucked in when the compressor is run, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.
• Be sure to establish an earth. Do not earth the unit to a utility pipe, arrester, or telephone earth. Incomplete earth may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks, or fire.
CAUTION
Do not install the air conditioner in a place where there is danger of exposure to inflammable gas leakage.     If the gas leaks and builds up around the unit, it may catch fire.
Establish drain piping according to the instructions of this manual. Inadequate piping may cause flooding.
<ul> <li>Tighten the flare nut according to the specified method such as with a torque wrench.</li> </ul>

If the flare nut is tightened too hard, the flare nut may crack after a long time and cause refrigerant leakage.

• Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.

# Accessories

Accessories supplied with the outdoor unit:

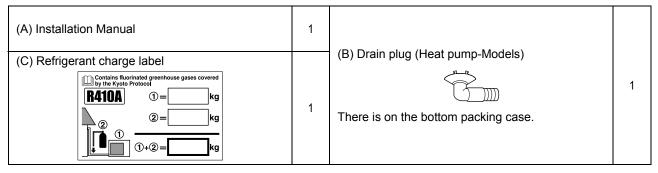

# **Precautions for Selecting the Location**

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operation noise will not be amplified.
- Choose a location where the hot air discharged from the unit or the operation noise will not cause a nuisance to the neighbors of the user.
- 3) Avoid places near a bedroom and the like, so that the operation noise will cause no trouble.
- 4) There must be sufficient spaces for carrying the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must be free from the possibility of flammable gas leakage in a nearby place.
- 7) Install units, power cords and inter-unit cables at least 3 meter away from television and radio sets. This is to prevent interference to images and sounds. (Noises may be heard even if they are more than 3 meter away depending on radio wave conditions.)
- 8) In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the air conditioner.
- 9) Since drain flows out of the outdoor unit, do not place under the unit anything which must be kept away from moisture.


#### NOTE

Cannot be installed hanging from ceiling or stacked.

### 

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- 1) To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- 2) Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- 3) To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.

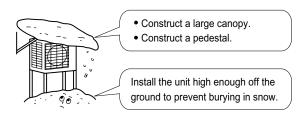


4) In heavy snowfall areas, select an installation site where the snow will not affect the unit.

# **Outdoor Unit Installation Drawings**

г							
	Max. allowable length	20m					
H	Min. allowable length	1.5m					
*	Max. allowable height Additionl refrigerant required for refrigerant pipe exceeding 10m in length.	15m 20g/m					Wrap the insulation pipe with the finishing tape from bottom to top.
-	Gas pipe	0 D 0 5mm				G	
	Liquid pipe * Be sure to add the p Failure to do so may ** The suggested short noise from the outdo (Mechanical noise a the unit is installed a When connecting the	O.D. 9.5mm O.D. 6.4mm roper amount of additional refrigerant. result in reduced performance. test pipe length is 1.5m, in order to avoid our unit and vibration. Ind vibration may occur depending on how ind the environment in which it is used.) a e FVXS indoor unit, the shortest piping less than around 2.5m.			250mm from wall	**Set	CAUTION t the piping length m 1.5m to 20m. Stop valve cover How to remove the stop valve cover. Remove the screw on the stop valve cover. Slide the lid downward to remove it. How to attach the stop valve cover. Insert the upper part of the stop valve cover into the outdoor unit to install. Tighten the screws.
		574 (Foot bolt-hole centres)		Contant 17	<i>%</i>	Allow spa	ce for piping
bases foot h led. O	poor drainage, use for outdoor unit. eight until the unit otherwise, water ooling of water may	(From uni	05.5 ''s side)	Where there is falling, use for	s a danger of the ur t bolts, or wires.		ical servicing.
			unit	t: mm			

# **Installation Guidelines**

Where a wall or other obstacle is in the path of outdoor unit's intake or exhaust airflow, follow the installation guidelines below.
For any of the below installation patterns, the wall height on the exhaust side should be 1200mm or less.

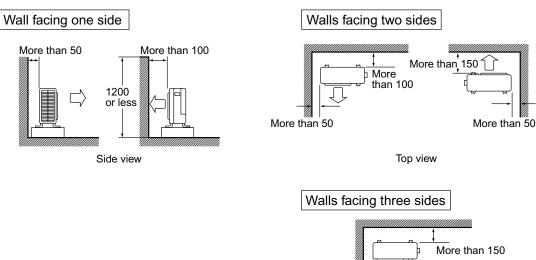


More than 50 More than 300

Top view

Unit: mm

# **Precautions on Installation**

- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installed.
  In accordance with the foundation drawing, fix the unit securely by means of the foundation bolts. (Prepare four sets of M8 or M10
- foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their length are 20mm from the foundation surface.

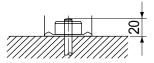


# **Outdoor Unit Installation**

### **1.** Installing outdoor unit.

- 1) When installing the outdoor unit, refer to "Precautions for Selecting the Location" and the "Outdoor Unit Installation Drawings."
- 2) If drain work is necessary, follow the procedures below.

### 2. Drain work. (Heat pump-models.)


- 1) Use drain plug for drainage.
- 2) If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- In cold areas, do not use a drain hose with the outdoor unit. (Otherwise, drain water may freeze, impairing heating performance.)

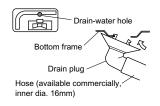


# **Outdoor Unit Installation**


### 3. Flaring the pipe end.

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

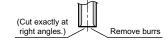

Flaring

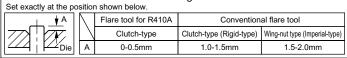



### 🕂 WARNING -


- 1) Do not use mineral oil on flared part.
- 2) Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- 3) Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- 4) Do never install a drier to this R410A unit in order to guarantee its lifetime.
- 5) The drying material may dissolve and damage the system.
- 6) Incomplete flaring may cause refrigerant gas leakage.

#### 4 Refrigerant piping.

### 

- 1) Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- 2) To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- 3) Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.

Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

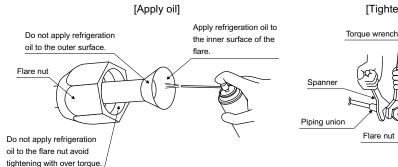

Flare nut tightening torque				
Gas side	Liquid side			
3/8 inch	1/4 inch			
32.7-39.9N • m (333-407kgf • cm)	14.2-17.2N • m (144-175kgf • cm)			

Valve cap tigh	tening torque
Gas side	Liquid side
3/8 inch	1/4 inch
21.6-27.4N • m	21.6-27.4N • m
(220-280kgf • cm)	(220-280kgf • cm)
Service port cap	10.8-14.7N • m

tightening torque

(110-150kgf • cm)

Flare nut


[Tighten]

### 5. Purging air and checking gas leakage.

• When piping work is completed, it is necessary to purge the air and check for gas leakage.

### 

- 1) Do not mix any substance other than the specified refrigerant (R410A) into the refrigeration cycle.
- 2) When refrigerant gas leaks occur, ventilate the room as soon and as much as possible.
- 3) R410A, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.
- If using additional refrigerant, perform air purging from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- · Use a hexagonal wrench (4mm) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

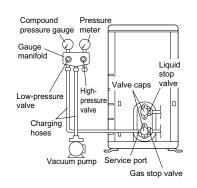

1) Connect projection side of charging hose (which comes from gauge manifold) to gas stop valve's service port.

- Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi). (High-pressure valve subsequently requires no operation.)
- 3) Do vacuum pumping and make sure that the compound pressure gauge reads -0.1MPa (-76cmHg)\*1.

 Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump. (Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)\*2.

5) Remove caps from liquid stop valve and gas stop valve.

6) Turn the liquid stop valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.

 Disconnect charging hose from gas stop valve's service port, then fully open liquid and gas stop valves. (Do not attempt to turn valve rod beyond its stop.)

8) Tighten valve caps and service port caps for the liquid and gas stop valves with a torque wrench at the specified torques.

\*1. Pipe length vs. vacuum pump run time.

Pipe length	Up to 15 metres	More than 15 metres
Run time	Not less than 10 min.	Not less than 15 min.

\*2. If the compound pressure gauge pointer swings back, refrigerant may have water content or a loose pipe joint may exists. Check all pipe joints and retighten nuts as needed, then repeat steps 2) through 4).

# **Outdoor Unit Installation**

#### Refilling the refrigerant. 6.


Check the type of refrigerant to be used on the machine nameplate.

#### Precautions when adding R410A

#### Fill from the liquid pipe in liquid form.


- It is a mixed refrigerant, so adding it in gas form may cause the refrigerant composition to change, preventing normal operation.
- 1) Before filling, check whether the cylinder has a siphon attached or not. (It should have something like "liquid filling siphon attached" displayed on it.)

Filling a cylinder with an attached siphon

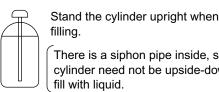

filling. There is a siphon pipe inside, so the cylinder need not be upside-down to fill with liquid.

Filling other cylinders

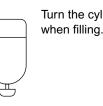

Turn the cylinder upside-down

Be sure to use the R410A tools to ensure pressure and to prevent foreign objects entering.

#### Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.


#### Refrigerant type: R410A

GWP<sup>(1)</sup> value: 1975 <sup>(1)</sup> GWP = global warming potential

#### Please fill in with indelible ink,

- I ① the factory refrigerant charge of the product,
- ! ② the additional refrigerant amount charged in the field and
- (1+2) the total refrigerant charge

on the refrigerant charge label supplied with the product.

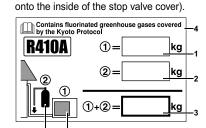

The filled out label must be adhered in the

proximity of the product charging port (e.g.

- 1 factory refrigerant charge of the product . see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

#### 7. Refrigerant piping work.

#### 7-1 Cautions on pipe handling.

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.
  - (Bending radius should be 30 to 40mm or larger.)

#### 7-2 Selection of copper and heat insulation materials.


When using commercial copper pipes and fittings, observe the following:

- 1) Insulation material: Polvethylene foam Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/(mh •°C)) Refrigerant gas pipe's surface temperature reaches 110°C max. Choose heat insulation materials that will withstand this temperature.
- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side	Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
O.D. 9.5mm	O.D. 6.4mm	I.D. 12-15mm	I.D. 8-10mm
Thickness 0.8mm		Thickness 10mm Min.	

3) Use separate thermal insulation pipes for gas and liquid refrigerant pipes.



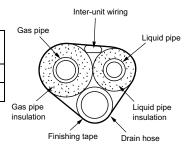

# **Standby Electricity Saving**

The standby electricity saving function turns OFF power supply to the outdoor unit and sets the indoor unit into standby electricity saving mode, thus educing the power consumption of the air conditioner.

The standby electricity saving function works on the following indoor units.


FTXS20G2V1B	ATXS20G2V1B
FTXS25G2V1B	ATXS25G2V1B
FTXS35G2V1B	ATXS35G2V1B

### 


The standby electricity saving function cannot be used for models other than the specified ones.

#### Procedure for turning ON standby electricity saving function

- 1) Check that the main power supply is turned OFF. Turn it OFF if has not been turned OFF.
- 2) Remove the stop valve cover.
- 3) Disconnect the selective connector for standby electricity saving.
- 4) Turn ON the main power supply.

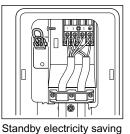

function OFF.

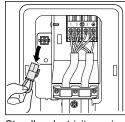

g Standby electricity saving function ON.

The standby electricity saving function is turned OFF before shipping.

### 

- 1) Before connecting or disconnecting the selective connector for standby electricity saving, make sure that the main power supply is turned OFF.
- The selective connector for standby electricity saving is required if an indoor unit other than the above applicable ones is connected.

# **Pump Down Operation**

#### In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from liquid stop valve and gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After five to ten minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After two to three minutes, close the gas stop valve and stop forced cooling operation.

### How to force cooling operation mode

- Using the indoor unit operation/stop button
  - Press the indoor unit operation/stop button for at least five seconds. (Operation will start.)
  - Forced cooling operation will stop automatically after around 15 minutes. To force a test run to stop, press the indoor unit operation/stop button.

#### Using the main unit's remote control

- 1) Press the "operation/stop" button.
- (Operation will start.)
- 2) Press the temperature ▲▼ button and the "operation select" button at the same time.
- 3) Press the "operation select" button twice.
- (  $7^{-}$  will be displayed and the unit will enter test run mode.)
- 4) Press the "operation select" button to return the operation mode to cooling.
- Test run mode will stop automatically after around 30 minutes. To force a test run to stop, press the operation/stop button.

#### ■ Using the outdoor unit forced cooling operation switch (with standby electricity saving function turned OFF)


- 1) Push on " $\square$ " with a screwdriver. The unit will start operating.
- 2) The forced cooling mode is selected, and terminates in approx. 15 minutes.

When pressing the switch, do not touch the terminal block. It has a high voltage, so doing so may cause electric shock.
 After closing the liquid stop valve, close the gas stop valve within three minutes, then stop the forced operation.

# Facility Setting (cooling at low outdoor temperature)


This function is limited only for facilities (the target of air conditioning is equipment (such as computer)). Never use it in a residence or office (the space where there is a human).


1) <u>Cutting jumper 4 (J4)</u> on the circuit board will expand the operation range down to –15°C. However it will stop if the outdoor temperature drops below –20°C and start back up once the temperature rises again.

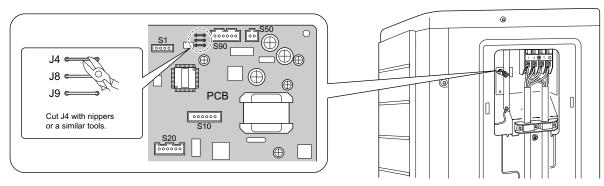

### 

- 1) If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- 2) Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- 3) Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used.
- A humidifier might cause dew jumping from the indoor unit outlet vent.
- 4) Cutting jumper 4 (J4) sets the indoor fan tap to the highest position. Notify the user about this.





The selective connector for standby electricity saving in use (with standby electricity saving function turned OFF)

# Wiring

# 

- 1) Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- 2) Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- 3) Be sure to install an earth leak detector. (One that can handle higher harmonics.) (This unit uses an inverter, which means that it must be used an earth leak detector capable handling harmonics in order to prevent malfunctioning of the earth leak detector itself.)
- 4) Use an all-pole disconnection type breaker with at least 3mm between the contact point gaps.

· Do not turn ON the safety breaker until all work is completed.

1) Strip the insulation from the wire (20mm). Firmly fix the wires with Outdoor unit the terminal screws 2) Connect the connection wires between the indoor and outdoor units so that the terminal When wire length exceeds 10m. use 2.0mm diameter wires Use 2.0mm diameter wires. numbers match. Tighten the terminal screws securely. We recommend a flathead screwdriver be used to tighten the screws. The Indoor Safety breake Earth leakage circuit breaker Power supply 50Hz 220-240V unit screws are packed with the terminal board. H05RN Firmly fix the wires with Safety breaker the terminal screws. Farth RX(K)S 10A ARÌXŚ RXG 16A ARXG ۲ Power supply 1 2 (%) 3 (<u>+</u>) terminal block 6 Shape wires so that the stop valve cover fit securely. Use the specified wire type Firmly secure wire retainer so wire and connect it securely. terminations will not receive external stress.

Observe the notes mentioned below when wiring to the power supply terminal board. Precautions to be taken for power supply wiring.


Use a round crimp-style terminal for connection to the power supply terminal board. In case it cannot be used due to unavoidable reasons, be sure to observe the following instruction.

Round crimp-style terminal Stranded Wire 6

Place the round crimp-style terminals on the wires up to the covered part and secure in place.

### 

When connecting the connection wires to the terminal board using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

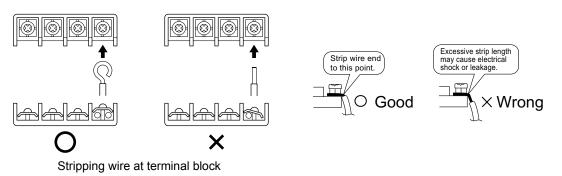

Pull the wire and make sure that it does not disconnect. Then fix the wire in place with a wire stop.

# **Test Run and Final Check**

## **1.** Trial operation and testing.

- 1-1 Measure the supply voltage and make sure that it falls in the specified range.
- 1-2 Trial operation should be carried out in either cooling or heating mode.
- For heat pump
- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
  - 1) Trial operation may be disabled in either mode depending on the room temperature.
  - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
  - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.
- For cooling only
- Select the lowest programmable temperature.
  - 1) Trial operation in cooling mode may be disabled depending on the room temperature.
  - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C).
  - 3) For protection, the unit disables restart operation for 3 minutes after it is turned off.
- 1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.
  - The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
  - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

### 2. Test items.

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for interconnecting wire connections.	Inoperative or burn damage	
Indoor or outdoor unit's air intake or exhaust has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES, LTD.

Head office: Umeda Center Bldg., 2-4-12, Nakazaki-Nishi, Kita-ku, Osaka, 530-8323 Japan

Tokyo office: JR Shinagawa East Bldg., 2-18-1, Konan, Minato-ku, Tokyo, 108-0075 Japan http://www.daikin.com/global\_ac/



Zandvoordestraat 300, B-8400 Oostende, Belgium



3P203824-5A

Two-dimensional bar for manufacturing. ode is a code M07B117

(0711) HT