





Daikin Air conditioning UK – Refreshes your life

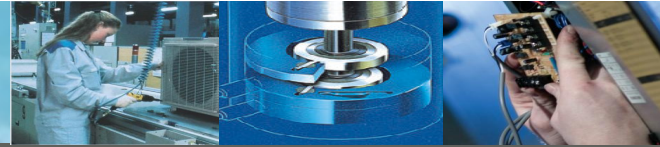


SKY AIR Series VRV II Series


KRP4A53 & KRP2A52

Practical Examples

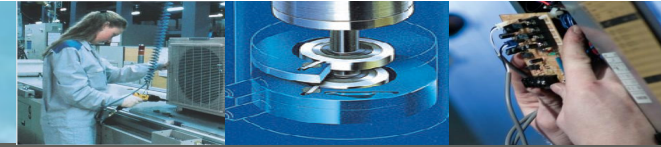


- ▲ **KRP2A52** : Global Connection (Per System)
- ▲ **KRP4A53** : Individual Connection (Per R/C)

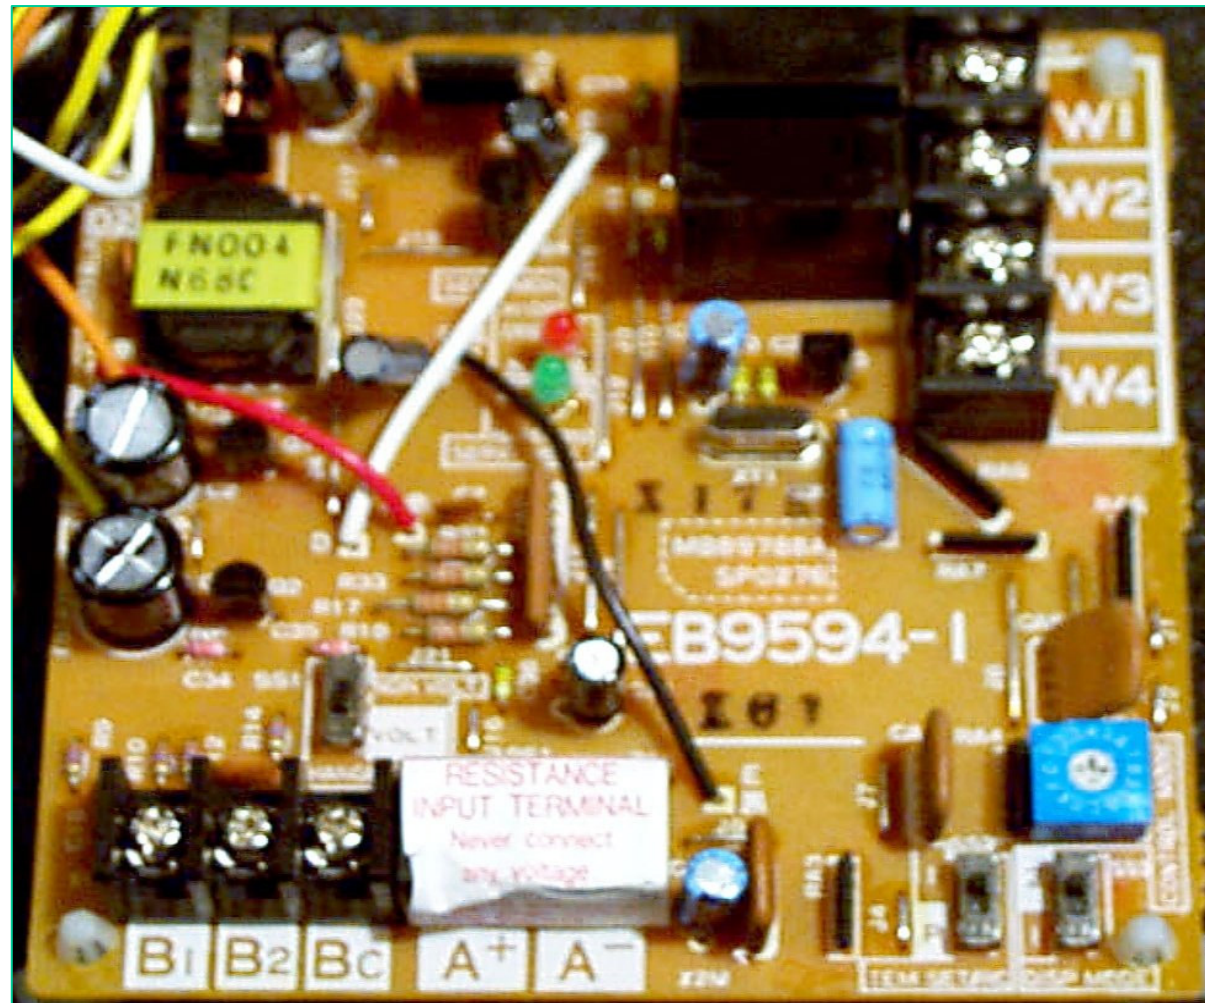

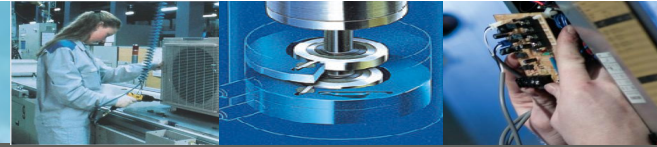

Example – KRP2A52 / KRP4A53 2 Wire Connection = No User On/Off


SETTING
1

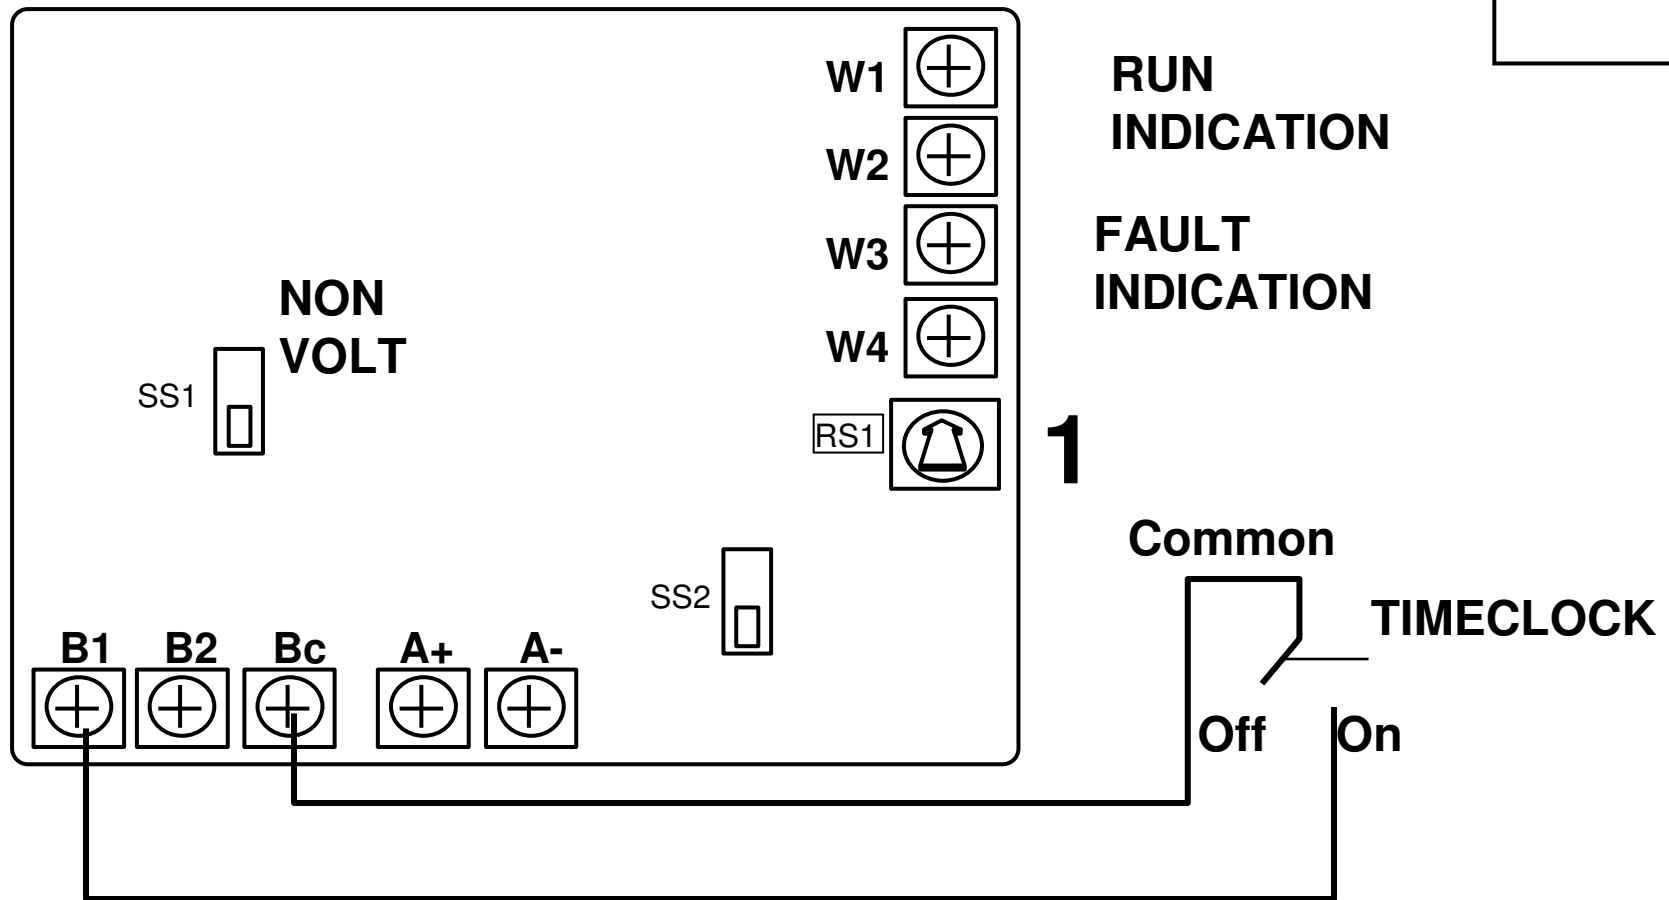




Example – KRP2A52 / KRP4A53 2 Wire Connection = User On/Off During Timed Period Only


**SETTING
2**

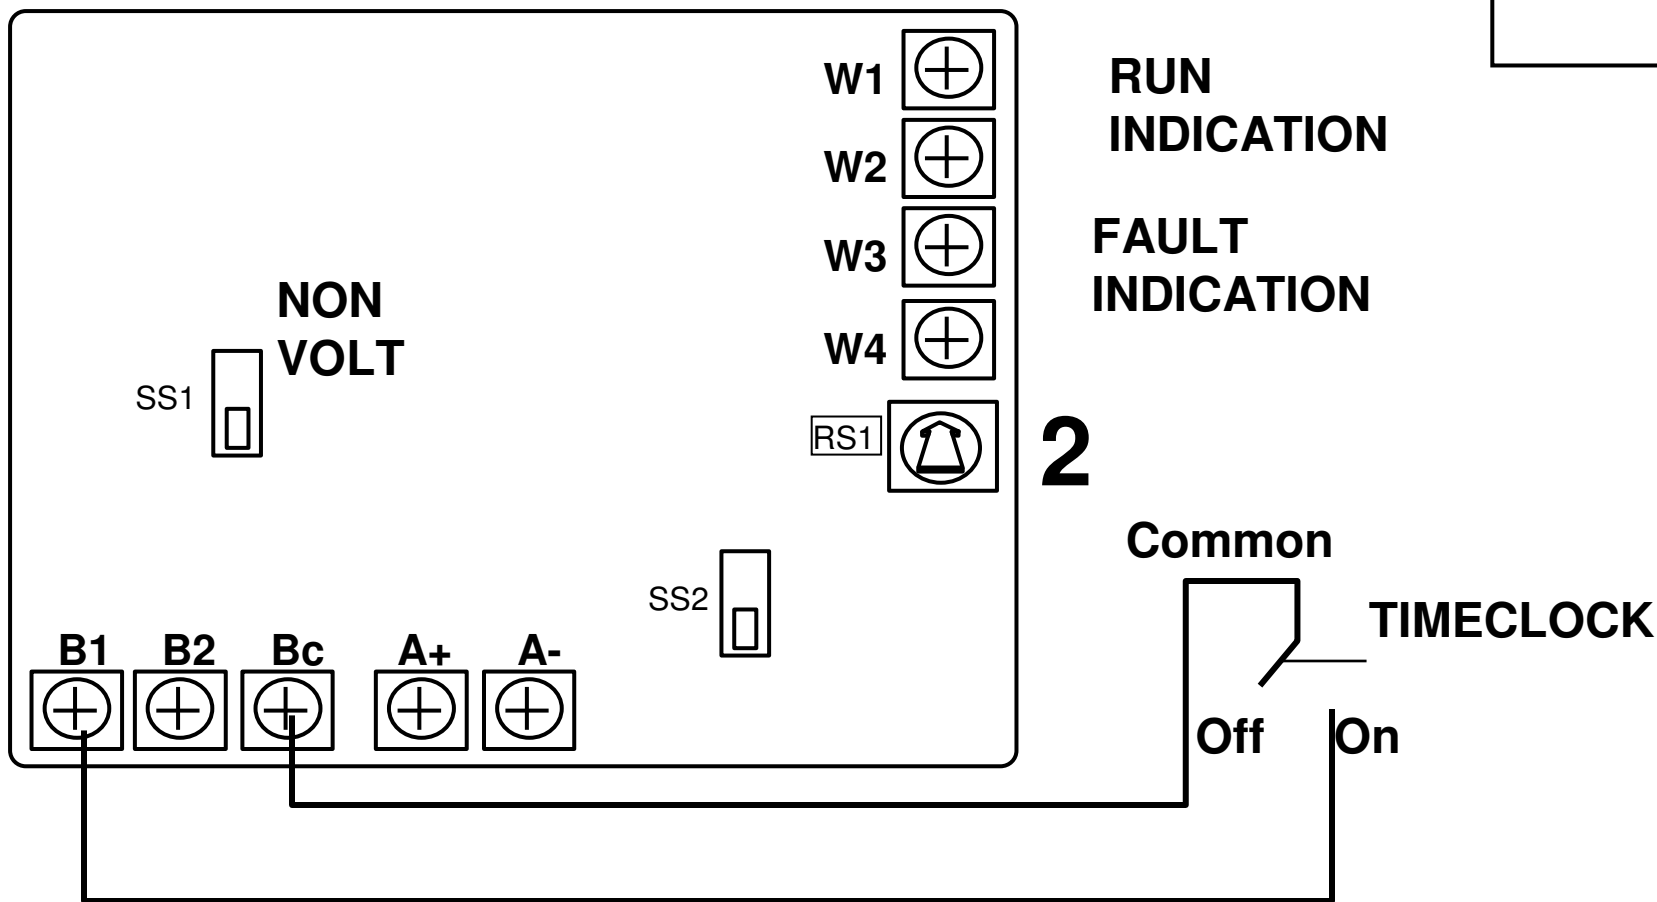

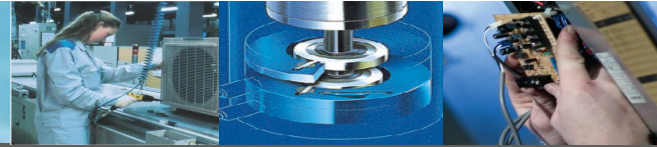

Example – KRP2A52 / KRP4A53 3 Wire Connection = User On/Off


**SETTING
B**

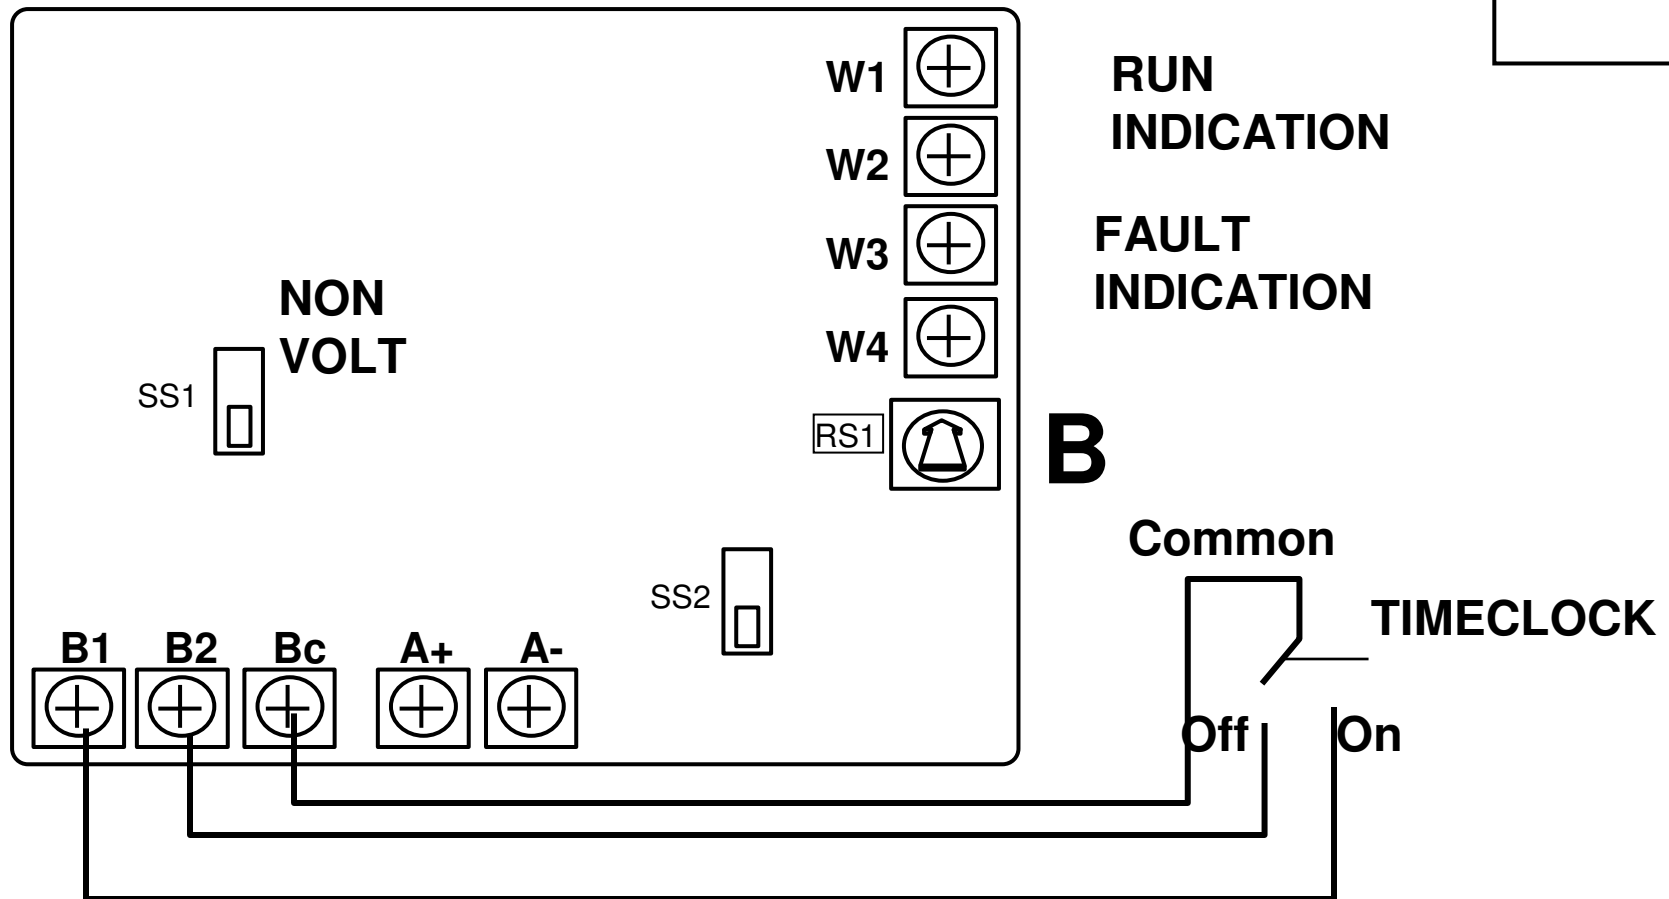



Example – KRP2A52 / KRP4A53 2 Wire Connection = User On/Off Optional During Timed Period Only


**SETTING
4**

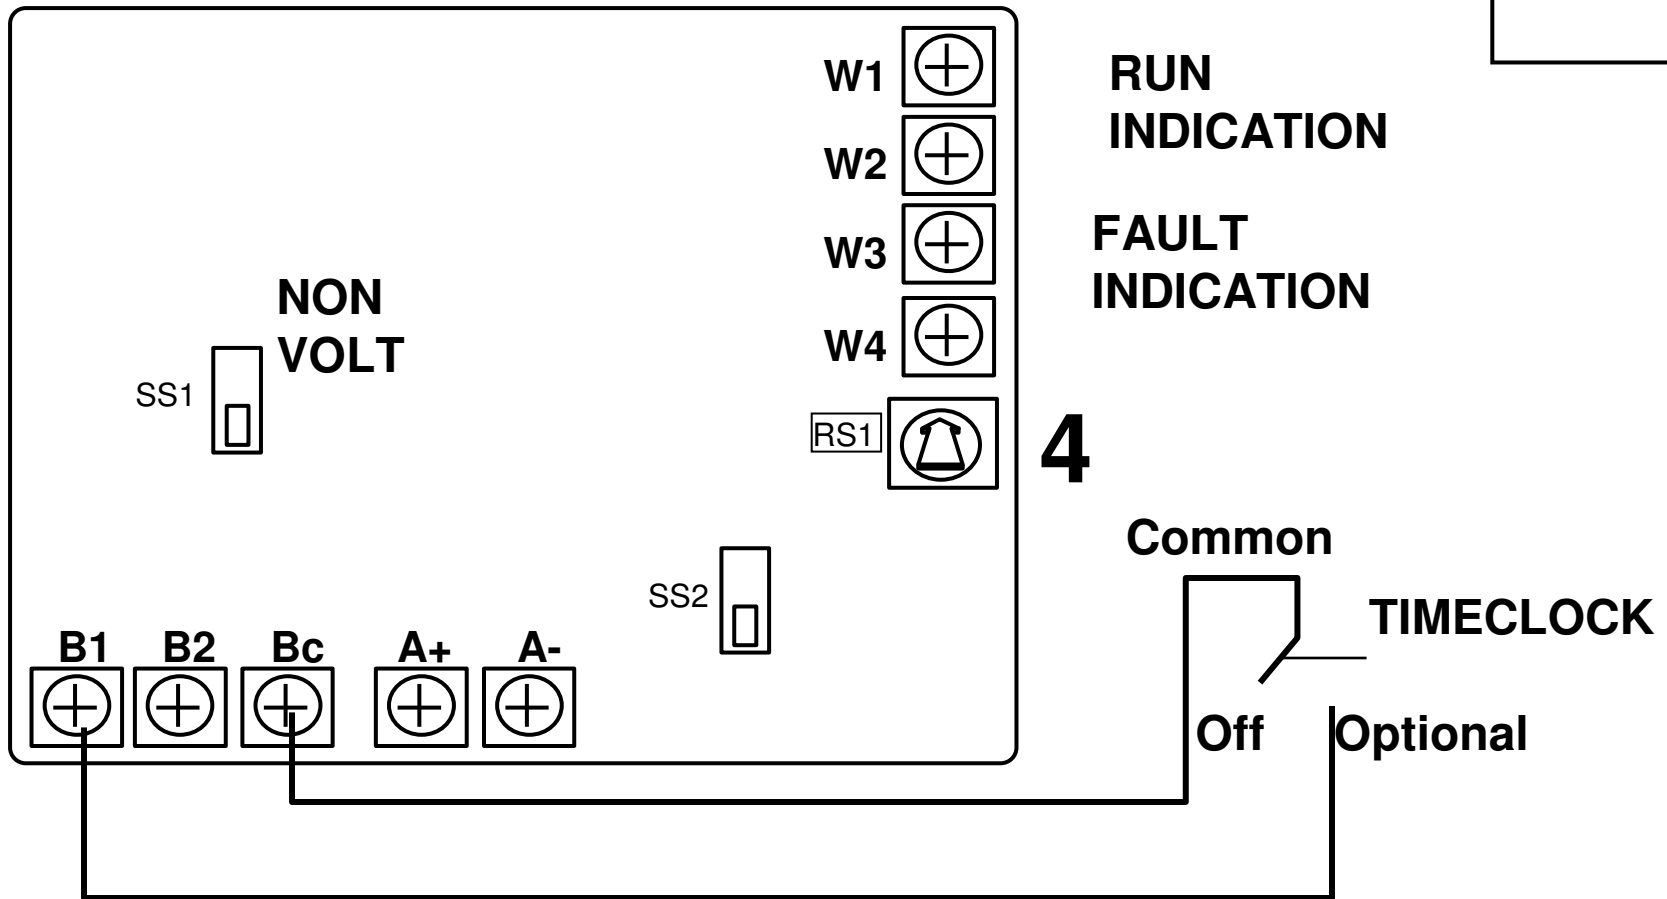

KRP4A53-1 Temperature > Voltage Relationship



Temp oC	Volts DC
16	0.93
17	1.78
18	2.59
19	3.40
20	4.10
21	4.78
22	5.36
23	5.95
24	6.54
25	7.04
26	7.52
27	7.96
28	8.37
29	8.78
30	9.20
31	9.55
32	10.00

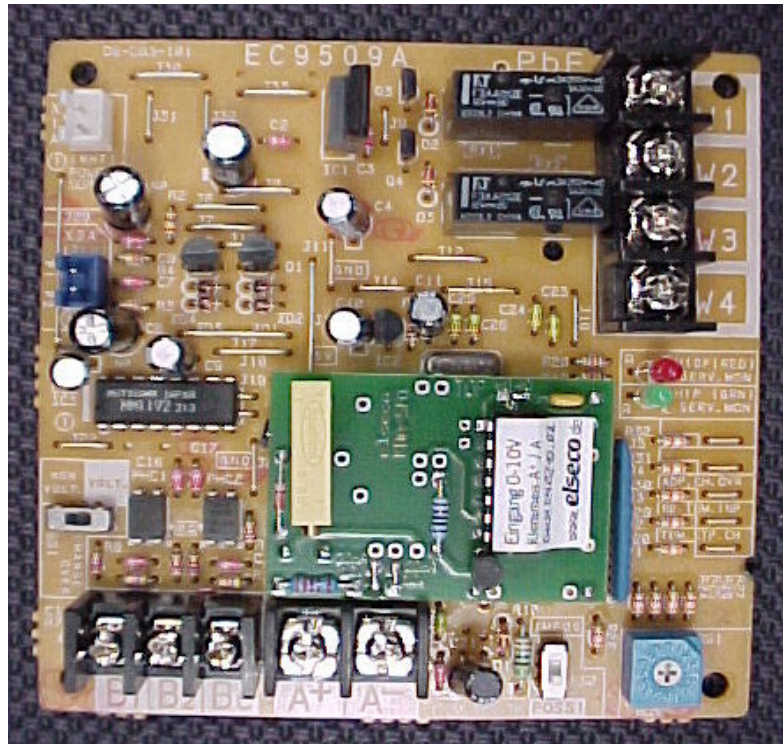

Connect to A+ & A- Terminals with 0-10V DC Signal