




Installation manual

Split system air conditioners

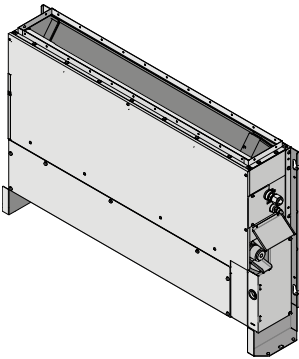

FNA25A2VEB
FNA35A2VEB
FNA50A2VEB
FNA60A2VEB

Installation manual
Split system air conditioners

English

Table of Contents

- 1 About the documentation 3**
 - 1.1 About this document..... 3
- 2 About the box 3**
 - 2.1 Indoor unit 3
 - 2.1.1 To unpack and handle the unit..... 3
 - 2.1.2 To remove the accessories from the indoor unit..... 3
- 3 About the units and options 4**
 - 3.1 System layout..... 4
- 4 Preparation 4**
 - 4.1 Preparing installation site 4
 - 4.1.1 Installation site requirements of the indoor unit 4
 - 4.2 Preparing refrigerant piping 4
 - 4.2.1 Refrigerant piping requirements..... 4
 - 4.2.2 Refrigerant piping insulation 5
 - 4.3 Preparing electrical wiring 5
 - 4.3.1 About preparing electrical wiring 5
- 5 Installation 5**
 - 5.1 Mounting the indoor unit..... 5
 - 5.1.1 Precautions when mounting the indoor unit..... 5
 - 5.1.2 Guidelines when installing the indoor unit..... 5
 - 5.1.3 Guidelines when installing the ducting..... 7
 - 5.1.4 Guidelines when installing the drain piping..... 7
 - 5.2 Connecting the refrigerant piping 8
 - 5.2.1 To connect the refrigerant piping to the indoor unit 8
 - 5.3 Connecting the electrical wiring..... 9
 - 5.3.1 Guidelines when connecting the electrical wiring 9
 - 5.3.2 To connect the electrical wiring on the indoor unit..... 9
 - 5.3.3 Specifications of standard wiring components..... 10
- 6 Commissioning 10**
 - 6.1 Checklist before commissioning 10
 - 6.2 To perform a test run 10
 - 6.3 Error codes when performing a test run 11
- 7 Disposal 11**
- 8 Technical data 11**
 - 8.1 Wiring diagram 12

- **General safety precautions:**
 - Safety instructions that you must read before installing
 - Format: Paper (in the box of the indoor unit)
- **Indoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
 - Preparation of the installation, good practices, reference data,...
 - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin extranet (authentication required).

2 About the box

2.1 Indoor unit



WARNING: FLAMMABLE MATERIAL


The R32 refrigerant (if applicable) in this unit is mildly flammable.¹

2.1.1 To unpack and handle the unit

Use a sling of soft material or protective plates together with a rope when lifting the unit. This to avoid damage or scratches to the unit.

Lift the unit by holding on to the hanger brackets without exerting any pressure on other parts, especially on refrigerant piping, drain piping and other resin parts.

2.1.2 To remove the accessories from the indoor unit

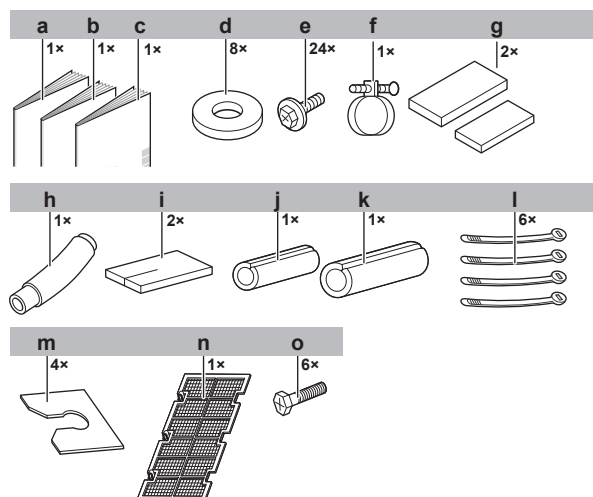

- a Installation manual
- b Operation manual
- c General safety precautions
- d Washers for hanger bracket

1 About the documentation

1.1 About this document



INFORMATION

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers



INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

⁽¹⁾ Only for units using R32 refrigerant. Refer to the outdoor unit specifications for the type of refrigerant to be used.

3 About the units and options


- e Screws for duct flanges
- f Metal clamp
- g Sealing pads: small and large
- h Drain hose
- i Sealing material
- j Insulation piece: Small (liquid pipe)
- k Insulation piece: Large (gas pipe)
- l Tie wraps
- m Washer fixing plate
- n Air filter
- o Levelling screws

3 About the units and options

3.1 System layout

i INFORMATION

The following illustration is an example and might NOT match your system layout.

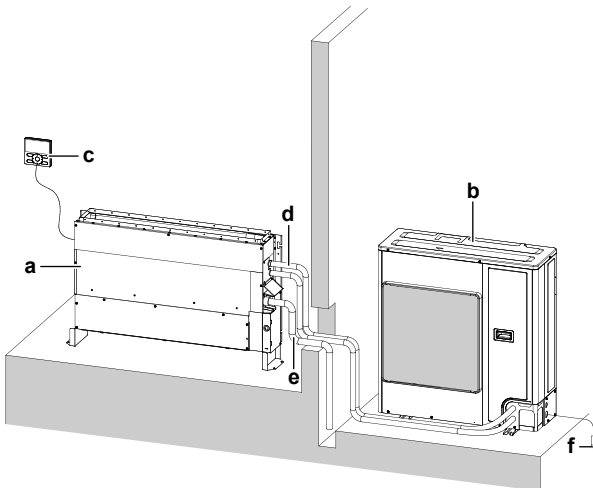

- a Indoor unit
- b Outdoor unit
- c User interface
- d Refrigerant piping + interconnection cable
- e Drain pipe
- f Earth wiring

4 Preparation

4.1 Preparing installation site

- Provide sufficient space around the unit for servicing and air circulation.
- Choose the installation location with sufficient place for carrying the unit in and out of the site.

! CAUTION

Do NOT install or use in places filled with smoke, gas, chemicals etc. Sensors inside the indoor unit may detect these substances, and display a refrigerant leak abnormality.¹

! WARNING

Do NOT install the air conditioner at any place where flammable gas may leak out. If the gas leaks out and stays around the air conditioner, a fire may break out.

! CAUTION

Do NOT install or use in highly airtight spaces, e.g. soundproof chambers or rooms with sealed doors.¹

! CAUTION

This unit is equipped with electrically powered safety measures, such as a refrigerant leak detector. In order to be effective, the unit must be electrically powered at all times after installation, except for short service periods.¹


4.1.1 Installation site requirements of the indoor unit

i INFORMATION


The sound pressure level is less than 70 dBA.

- Use **suspension bolts** for installation.
- Mind the following requirements:

Wall-mounted type

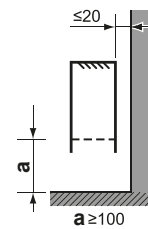


Floor-standing type

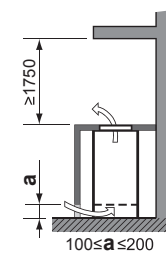

a Minimum clearance

Top view

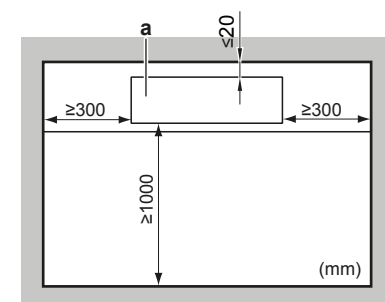

a Indoor unit

- Install the unit with a prebuilt fully enclosed casing with removable access panel, suction air grille and discharge grille. These removable parts shall prevent access to the unit and can ONLY be removed using a removal tool.
- In case of installation under a window sill, make sure that there is no short-circuit of air.


4.2 Preparing refrigerant piping

4.2.1 Refrigerant piping requirements

Refrigerant piping material

- **Piping material:** Phosphoric acid deoxidised seamless copper.
- **Piping temper grade and thickness:**

⁽¹⁾ Only for units using R32 refrigerant. Refer to the outdoor unit specifications for the type of refrigerant to be used.

Outer diameter (Ø)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥0.8 mm	
9.5 mm (3/8")			
12.7 mm (1/2")			

(a) Depending on the applicable legislation and the unit's maximum working pressure (see "PS High" on the unit name plate), larger piping thickness might be required.

Refrigerant piping diameter

Use the same diameters as the connections on the outdoor units:

Class	L1 liquid piping	L1 gas piping
25/35	Ø6.4	Ø9.5
50/60	Ø6.4	Ø12.7

4.2.2 Refrigerant piping insulation

Pipe outer diameter (Ø _p)	Insulation inner diameter (Ø _i)	Insulation thickness (t)
6.4 mm (1/4")	8~10 mm	≥10 mm
9.5 mm (3/8")	12~15 mm	
12.7 mm (1/2")	14~16 mm	



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

4.3 Preparing electrical wiring

4.3.1 About preparing electrical wiring



WARNING

- All wiring must be performed by an authorised electrician and must comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on the site and all electrical construction must comply with the applicable legislation.



WARNING

ALWAYS use multicore cable for power supply cables.

5 Installation

5.1 Mounting the indoor unit

5.1.1 Precautions when mounting the indoor unit



INFORMATION

Also read the precautions and requirements in the following chapters:

- General safety precautions
- Preparation


5.1.2 Guidelines when installing the indoor unit



INFORMATION


Optional equipment. When installing optional equipment, also read the installation manual of the optional equipment. Depending on the field conditions, it might be easier to install the optional equipment first.

- Wall or floor strength.** Check whether the wall or the floor is strong enough to support the weight of the unit. If there is a risk, reinforce the wall or the floor before installing the unit.
- Suspension bolts.** Use W3/8 M10 suspension bolts for installation. Attach the hanger bracket to the suspension bolt. Fix it securely using a nut and washer from the upper and lower sides of the hanger bracket.

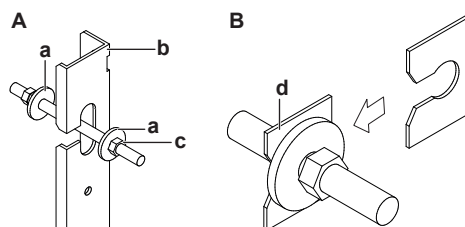

- A** Securing the hanger bracket
- B** Securing the washers
- a** Washer (accessories)
- b** Hanger bracket
- c1** Nut (field supply)
- c2** Double nut (field supply)
- d** Washer fixing plate (accessory)


- Suspension bolt pitch for fastening to the wall:

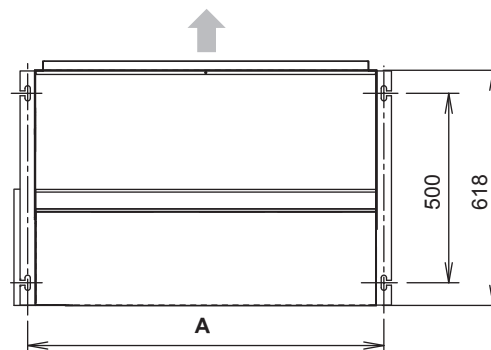

Class	A (mm)
25/35	740
50/60	1140

5 Installation

Floor-standing installation

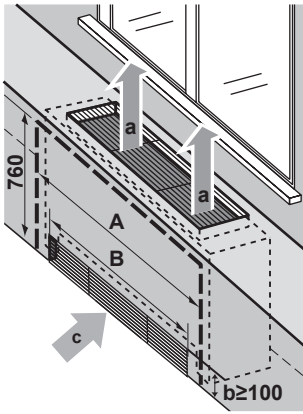


Class	A (mm)	B (mm)
25/35	1350	660
50/60	1750	1060

- A Maintenance area width
- B Air inlet grille width
- a Air outlet direction
- b Air inlet grille height
- c Air inlet direction


- To determine the minimum floor area for **floor-standing** indoor unit installation, refer to the table or graph below.¹

Minimum floor area for indoor unit			
m (kg)	A _{min} (m ²)	m (kg)	A _{min} (m ²)
0.70	No requirements	3.04	78.65
0.76		3.14	83.91
0.86		3.24	89.34
0.96		3.34	94.94
1.06		3.44	100.71
1.16		3.54	106.65
1.26		3.64	112.76
1.36		3.74	119.05
1.46		3.84	125.50
1.56		3.94	132.12
1.66		4.04	138.91
1.76		4.14	145.87
1.84		28.81	4.24
1.94	32.03	4.34	160.31
2.04	35.42	4.44	167.78
2.14	38.98	4.54	175.42
2.24	42.70	4.64	183.23
2.34	46.60	4.74	191.22
2.44	50.67	4.84	199.37
2.54	54.91	4.94	207.69
2.64	59.32	5.04	216.19
2.74	63.90	5.14	224.85
2.84	68.64	5.24	233.69
2.94	73.56	5.34	242.69

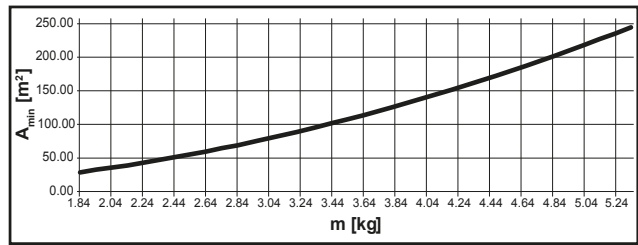

- m Mass of refrigerant
- A_{min} Minimum floor area


Wall-mounted installation

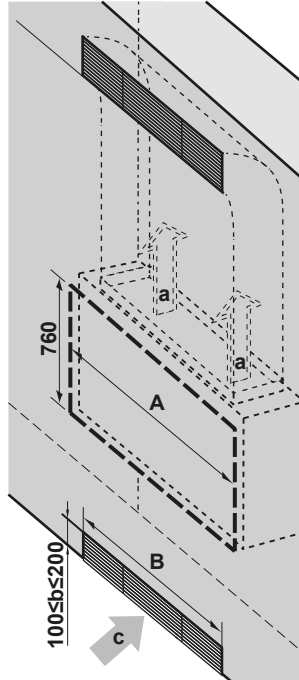

Class	A (mm)	B (mm)
25/35	1350	660
50/60	1750	1060

- A Maintenance area width
- B Air inlet grille width
- a Air outlet direction
- b Air inlet grille height
- c Air inlet direction

- External static pressure.** Refer to technical documentation to ensure that the unit's external static pressure is not exceeded.
- Removing the legs.** If it is necessary to remove the legs, follow these instructions:

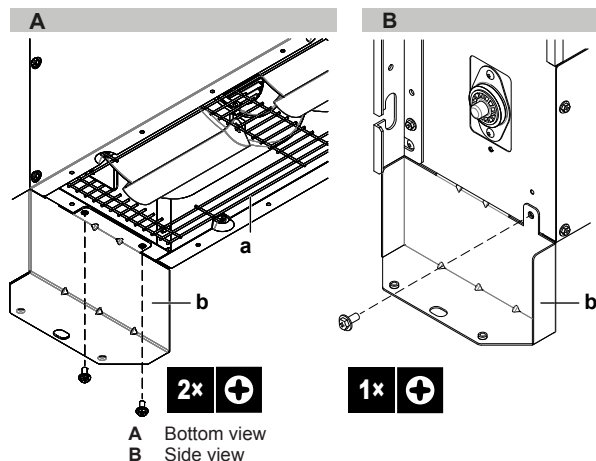

- A Bottom view
- B Side view


⁽¹⁾ Only for units using R32 refrigerant. Refer to the outdoor unit specifications for the type of refrigerant to be used.

- a Protective grille
- b Leg

- 1 In case of bottom suction, remove the air filter.
- 2 Remove 4 screws (2 on each side) that hold both legs on the bottom side of the unit.
- 3 Remove 2 screws (1 on each side) on the side of the unit.
- 4 In case of bottom suction, reattach the filter.
- 5 In case of front suction, reinstall 2 screws on the side of the unit.


▪ **Install suction cover and air filter (accessory)**

- 6 In case of front suction, remove the protective grille and the suction cover from the front side.

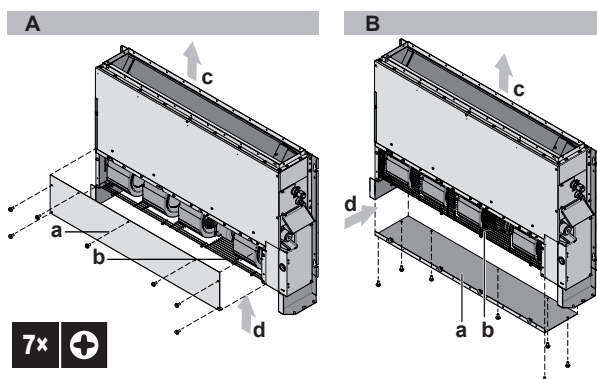

- A Removing the suction cover
- B Reattaching the suction cover
- a Suction cover
- b Protective grille
- c Air inlet
- d Air outlet

- 7 Remove one leg on the opposite side of the electronic component box.
- 8 Reattach the removed suction cover to the bottom side.
- 9 Attach the protective grille to the front side.
- 10 Reattach the leg if necessary.
- 11 Attach the air filter (accessory) by pushing down the hooks (2 hooks for 25/35 type, 3 hooks for 50/60 type).

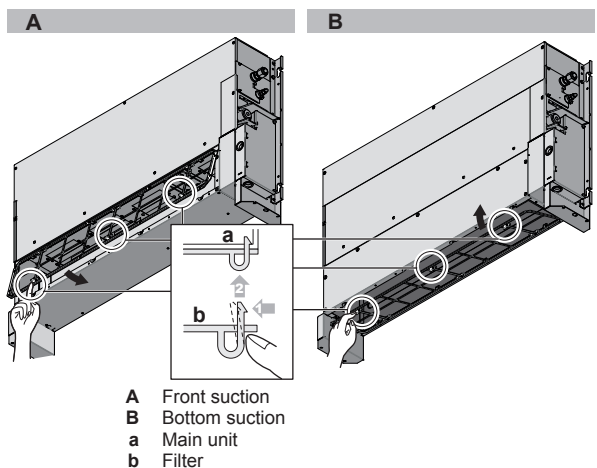

- A Front suction
- B Bottom suction
- a Main unit
- b Filter


▪ **Install the unit temporarily.**

- 12 Attach the hanger bracket to the suspension bolt.
 - 13 Fix the unit securely.
 - 14 Adjust the unit to fit between the walls.
- **Level.** Make sure the unit is level at all four corners using a level or a water-filled vinyl tube.
- 15 Tighten the upper nut.

NOTICE

Do NOT install the unit tilted. **Possible consequence:** If the unit is tilted against the direction of the condensate flow (the drain piping side is raised), the float switch might malfunction and cause water to drip.


- **Fixing the unit.** Level the unit with the levelling screws (accessory). If the floor is too uneven to level the unit, place the unit on a flat and levelled base. If the unit is in danger of falling over, fasten it to the wall using factory-made holes or to the floor using floor fasteners (field supply).

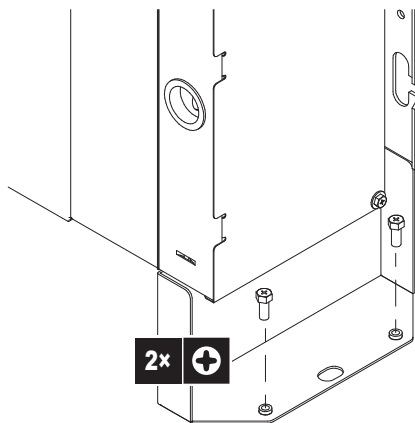

5.1.3 Guidelines when installing the ducting

The ducting is to be field supplied.

- **Air inlet side.** Attach the duct and intake-side flange (field supply). For connecting the flange, use 7 accessory screws.

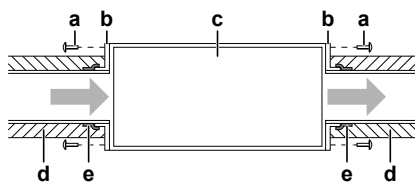

- a Connection screw (accessory)
- b Flange (field supply)
- c Main unit
- d Insulation (field supply)
- e Aluminium tape (field supply)

- **Filter.** Be sure to attach an air filter inside the air passage on the intake side. Use an air filter with dust collecting efficiency $\geq 50\%$ (gravimetric method). The included filter is not used when the intake duct is attached.
- **Air outlet side.** Connect the duct according to the inside dimension of the outlet-side flange.
- **Air leaks.** Wind aluminium tape around the intake side flange and duct connection. Make sure there are no air leaks at any other connection.
- **Insulation.** Insulate the duct to prevent condensation from forming. Use glass wool or polyethylene foam 25 mm thick.

5.1.4 Guidelines when installing the drain piping

Make sure condensation water can be evacuated properly. This involves:


- General guidelines
- Connecting the drain piping to the indoor unit
- Checking for water leaks

General guidelines

- **Pipe length.** Keep drain piping as short as possible.

5 Installation

- **Pipe size.** Keep the pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 20 mm nominal diameter and 26 mm outer diameter).
- **Slope.** Make sure the drain piping slopes down (at least 1/100) to prevent air from being trapped in the piping. Use hanging bars as shown.

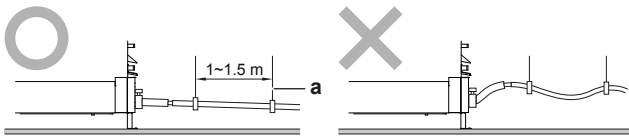

- a Hanging bar
- O Allowed
- X Not allowed


- **Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.

To connect the drain piping to the indoor unit

NOTICE

Incorrect connection of the drain hose might cause leaks, and damage the installation space and surroundings.

- 1 Push the drain hose as far as possible over the drain pipe connection.
- 2 Tighten the metal clamp until the screw head is less than 4 mm from the metal clamp part.
- 3 Check for water leaks (see To check for water leaks).
- 4 Install the insulation piece (drain pipe).
- 5 Wind the large sealing pad (= insulation) around the metal clamp and drain hose, and fix it with cable ties.
- 6 Connect the drain piping to the drain hose.

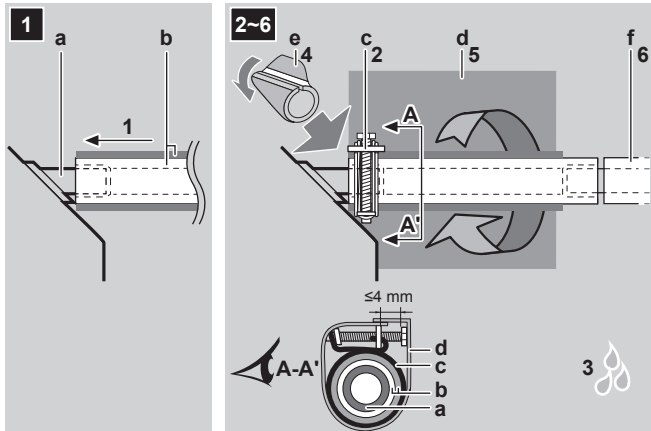


- a Drain pipe connection (attached to the unit)
- b Drain hose (accessory)
- c Metal clamp (accessory)
- d Large sealing pad (accessory)
- e Insulation piece (drain pipe) (accessory)
- f Drain piping (field supply)

NOTICE

- Do NOT remove the drain pipe plug. Water might leak out.
- Use the drain outlet only to discharge the water if the drain pump is not used or before maintenance.
- Insert and remove the drain plug gently. Excessive force may deform the drain socket of the drain pan.


Pull out the plug.

- Do NOT wiggle the plug up and down.

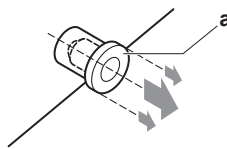

Push in the plug.


- Set the plug and push it in using a Phillips screwdriver.

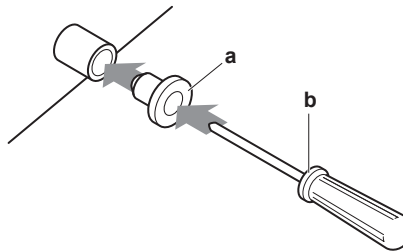

- a Drain plug
- b Phillips screwdriver

To check for water leaks

Gradually pour approximately 1 l of water in the drain pan, and check for water leaks.

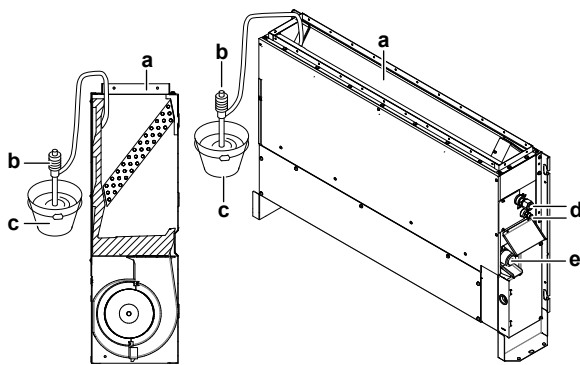

- a Air outlet
- b Portable pump
- c Bucket
- d Refrigerant pipes
- e Drain outlet

5.2 Connecting the refrigerant piping

⚠ DANGER: RISK OF BURNING


5.2.1 To connect the refrigerant piping to the indoor unit

⚠ WARNING: FLAMMABLE MATERIAL

The R32 refrigerant (if applicable) in this unit is mildly flammable.¹

- **Pipe length.** Keep refrigerant piping as short as possible.
- **Flare connections.** Connect refrigerant piping to the unit using flare connections.
- **Insulation.** Insulate the refrigerant piping on the indoor unit as follows:

⁽¹⁾ Only for units using R32 refrigerant. Refer to the outdoor unit specifications for the type of refrigerant to be used.

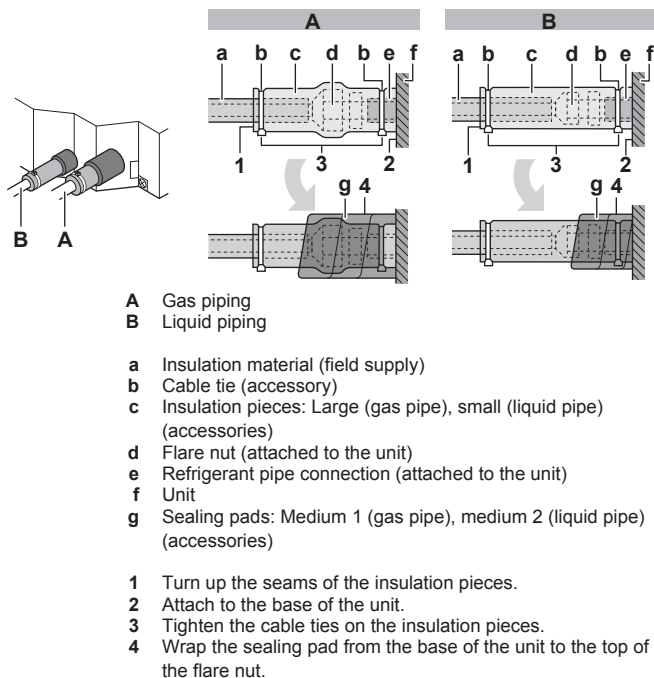

NOTICE

Make sure to insulate all refrigerant piping. Any exposed piping might cause condensation.

5.3 Connecting the electrical wiring



DANGER: RISK OF ELECTROCUTION



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5.3.1 Guidelines when connecting the electrical wiring

Tightening torques

Wiring	Screw size	Tightening torque (N·m)
Interconnection cable (indoor↔outdoor)	M4	1.18~1.44
User interface cable	M3.5	0.79~0.97

- If single-core wires are used, be sure to curl the end of the lead. Improper work may cause heat or fire.
- The earth wire between the pull relief and the terminal must be longer than the other wires.

5.3.2 To connect the electrical wiring on the indoor unit


It is important to keep the power supply and the transmission wiring separated from each other. In order to avoid any electrical interference the distance between both wiring should always be at least 50 mm.



NOTICE


Be sure to keep the power line and transmission line apart from each other. Transmission wiring and power supply wiring may cross, but may not run parallel.

- 1 Remove the service cover.

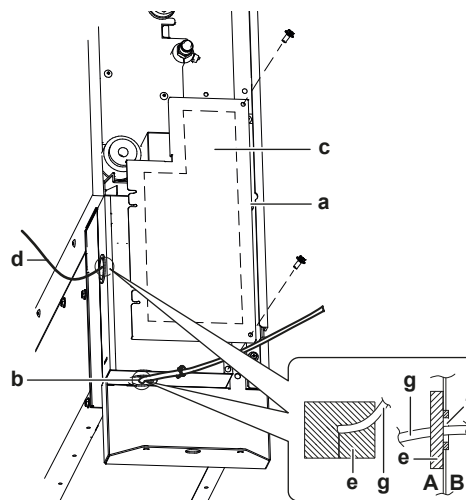

WARNING


Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.

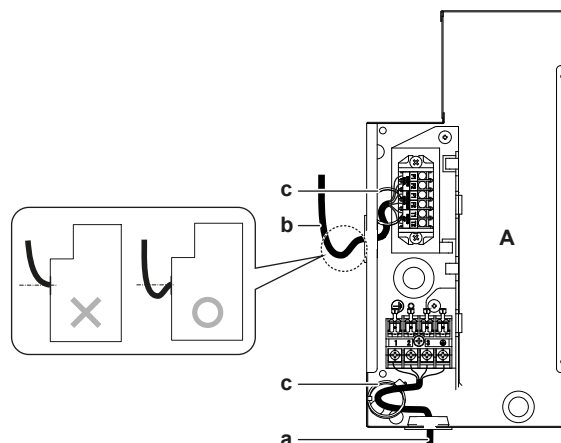

6 Commissioning

○ Allowed

5 Reattach the service cover.

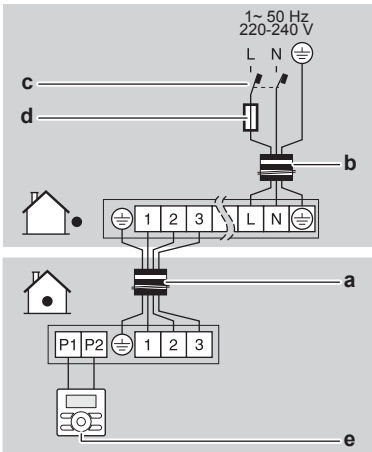

- a Interconnection cable
- b Power supply cable
- c Earth leakage circuit breaker
- d Fuse
- e User interface

5.3.3 Specifications of standard wiring components

Component	Specification
Interconnection cable (indoor↔outdoor)	Minimum cable section of 2.5 mm ² and applicable for 230 V
User interface cable	Vinyl cords with 0.75 to 1.25 mm ² sheath or cables (2-core wires) Maximum 500 m

6 Commissioning



NOTICE

NEVER operate the unit without thermistors and/or pressure sensors/switches. Burning of the compressor might result.

6.1 Checklist before commissioning

Do NOT operate the system before the following checks are OK:

<input type="checkbox"/>	You read the complete installation instructions, as described in the installer reference guide .
<input type="checkbox"/>	The indoor units are properly mounted.
<input type="checkbox"/>	In case a wireless user interface is used: The indoor unit decoration panel with infrared receiver is installed.
<input type="checkbox"/>	The outdoor unit is properly mounted.
<input type="checkbox"/>	There are NO missing phases or reversed phases .
<input type="checkbox"/>	The system is properly earthed and the earth terminals are tightened.
<input type="checkbox"/>	The fuses or locally installed protection devices are installed according to this document, and have not been bypassed.
<input type="checkbox"/>	The power supply voltage matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are NO loose connections or damaged electrical components in the switch box.

<input type="checkbox"/>	The insulation resistance of the compressor is OK.
<input type="checkbox"/>	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
<input type="checkbox"/>	There are NO refrigerant leaks .
<input type="checkbox"/>	The correct pipe size is installed and the pipes are properly insulated.
<input type="checkbox"/>	The stop valves (gas and liquid) on the outdoor unit are fully open.

6.2 To perform a test run

This task is only applicable when using the BRC1E52 or BRC1E53 user interface. When using any other user interface, see the installation manual or service manual of the user interface.



NOTICE


Do not interrupt the test run.







INFORMATION


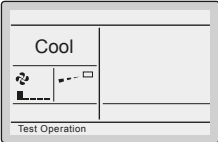

Backlight. To perform an ON/OFF action on the user interface, the backlight does not need to be lit. For any other action, it needs to be lit first. The backlight is lit for ±30 seconds when you press a button.

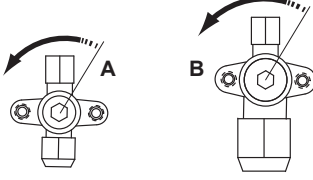1 Perform introductory steps.

#	Action
1	Open the liquid stop valve (A) and gas stop valve (B) by removing the stem cap and turning counterclockwise with a hex wrench until it stops. 
2	Close the service cover to prevent electric shocks.
3	Turn ON power for at least 6 hours before starting operation to protect the compressor.
4	On the user interface, set the unit to cooling operation mode.

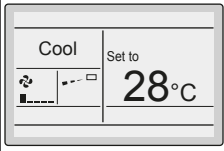
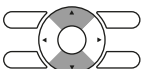
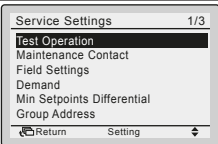

2 Start the test run
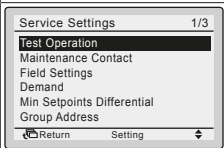
#	Action	Result
1	Go to the home menu.	
2	Press at least 4 seconds. 	The Service Settings menu is displayed.
3	Select Test Operation. 	

#	Action	Result
4	Press. 	Test Operation is displayed on the home menu. 
5	Press within 10 seconds. 	Test run starts.

3 Check operation for 3 minutes.

4 Stop the test run.

#	Action	Result
1	Press at least 4 seconds. 	The Service Settings menu is displayed.
2	Select Test Operation. 	
3	Press. 	The unit returns to normal operation, and the home menu is displayed.



NOTICE

When the indoor unit fan rotates and the operation light flashes after trial operation, there is a risk of refrigerant leakage. In that case, immediately ventilate the room and contact your dealer.¹

6.3 Error codes when performing a test run

If the installation of the outdoor unit has NOT been done correctly, the following error codes may be displayed on the user interface:

Error code	Possible cause
Nothing displayed (the currently set temperature is not displayed)	<ul style="list-style-type: none"> The wiring is disconnected or there is a wiring error (between power supply and outdoor unit, between outdoor unit and indoor units, between indoor unit and user interface). The fuse on the outdoor or indoor unit PCB has blown.
A0	Refrigerant leak detected. ¹
CH	Abnormality of refrigerant leakage sensor. ¹
E3, E4 or L8	<ul style="list-style-type: none"> The stop valves are closed. The air inlet or air outlet is blocked.
E7	<p>There is a missing phase in case of three-phase power supply units.</p> <p>Note: Operation will be impossible. Turn OFF the power, recheck the wiring, and switch two of the three electrical wires.</p>

Error code	Possible cause
L4	The air inlet or air outlet is blocked.
U0	The stop valves are closed.
U2	<ul style="list-style-type: none"> There is a voltage imbalance. There is a missing phase in case of three-phase power supply units. Note: Operation will be impossible. Turn OFF the power, recheck the wiring, and switch two of the three electrical wires.
U4 or UF	The inter-unit branch wiring is not correct.
UA	The outdoor and indoor unit are incompatible.

7 Disposal



NOTICE

Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, oil and other parts must comply with applicable legislation. Units must be treated at a specialised treatment facility for reuse, recycling and recovery.

















8 Technical data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin extranet (authentication required).

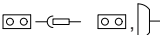⁽¹⁾ Only for units using R32 refrigerant. Refer to the outdoor unit specifications for the type of refrigerant to be used.

8 Technical data

8.1 Wiring diagram

Unified Wiring Diagram Legend					
For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol **a** in the part code.					
	:	CIRCUIT BREAKER		:	PROTECTIVE EARTH
	:	CONNECTION		:	PROTECTIVE EARTH (SCREW)
	:	CONNECTOR		:	RECTIFIER
	:	EARTH		:	RELAY CONNECTOR
	:	FIELD WIRING		:	SHORT CIRCUIT CONNECTOR
	:	FUSE		:	TERMINAL
	:	INDOOR UNIT		:	TERMINAL STRIP
	:	OUTDOOR UNIT		:	WIRE CLAMP
BLK	:	BLACK	GRN	:	GREEN
BLU	:	BLUE	GRY	:	GREY
BRN	:	BROWN	ORG	:	ORANGE
PNK	:	PINK	PRP, PPL	:	PURPLE
WHT	:	WHITE	RED	:	RED
YLV	:	YELLOW			
A*P	:	PRINTED CIRCUIT BOARD	PS	:	SWITCHING POWER SUPPLY
BS*	:	PUSH BUTTON ON / OFF, OPERATION SWITCH	PTC*	:	THERMISTOR PTC
BZ, H*O	:	BUZZER	Q*	:	INSULATED GATE BIPOLAR TRANSISTOR (IGBT)
C*	:	CAPACITOR	Q*DI	:	EARTH LEAK CIRCUIT BREAKER
AC*, CN*, E*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A	:	CONNECTION, CONNECTOR	Q*L	:	OVERLOAD PROTECTOR
D*, V*D	:	DIODE	Q*M	:	THERMO SWITCH
DB*	:	DIODE BRIDGE	R*	:	RESISTOR
DS*	:	DIP SWITCH	R*T	:	THERMISTOR
E*H	:	HEATER	RC	:	RECEIVER
F*U, FL* (FOR CHARACTERISTICS REFER TO PCB INSIDE YOUR UNIT)	:	FUSE	S*C	:	LIMIT SWITCH
FG*	:	CONNECTOR (FRAME GROUND)	S*L	:	FLOAT SWITCH
H*	:	HARNESS	S*NPH	:	PRESSURE SENSOR (HIGH)
H*P, LED*, V*L	:	PILOT LAMP, LIGHT EMITTING DIODE	S*NPL	:	PRESSURE SENSOR (LOW)
HAP	:	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*PH, HPS*	:	PRESSURE SWITCH (HIGH)
HIGH VOLTAGE	:	HIGH VOLTAGE	S*PL	:	PRESSURE SWITCH (LOW)
IES	:	INTELLIGENT EYE SENSOR	S*T	:	THERMOSTAT
IPM*	:	INTELLIGENT POWER MODULE	S*W, SW*	:	OPERATION SWITCH
K*R, KCR, KFR, KHuR	:	MAGNETIC RELAY	SA*	:	SURGE ARRESTOR
L	:	LIVE	SR*, WLU	:	SIGNAL RECEIVER
L*	:	COIL	SS*	:	SELECTOR SWITCH
L*R	:	REACTOR	SHEET METAL	:	TERMINAL STRIP FIXED PLATE
M*	:	STEPPER MOTOR	T*R	:	TRANSFORMER
M*C	:	COMPRESSOR MOTOR	TC, TRC	:	TRANSMITTER
M*F	:	FAN MOTOR	V*, R*V	:	VARISTOR
M*P	:	DRAIN PUMP MOTOR	V*R	:	DIODE BRIDGE
M*S	:	SWING MOTOR	WRC	:	WIRELESS REMOTE CONTROLLER
MR*, MRCW*, MRM*, MRN*	:	MAGNETIC RELAY	X*	:	TERMINAL
N	:	NEUTRAL	X*TM	:	TERMINAL STRIP (BLOCK)
n = *	:	NUMBER OF PASSES THROUGH FERRITE CORE	Y*E	:	ELECTRONIC EXPANSION VALVE COIL
PAM	:	PULSE-AMPLITUDE MODULATION	Y*R, Y*S	:	REVERSING SOLENOID VALVE COIL
PCB*	:	PRINTED CIRCUIT BOARD	Z*C	:	FERRITE CORE
PM*	:	POWER MODULE	ZF, Z*F	:	NOISE FILTER







ERC



DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2017 Daikin

4P456958-1 2017.06