



R-410A

Service Manual



REYQ8-48P8Y1B R-410A Heat Recovery 50Hz



R-410A Heat Recovery 50Hz

	1.	Introduction	vi
Part 1	Genera	1.2 PREFACE	
		Model Names of Indoor/Outdoor Units	
		External Appearance	
	۷.	2.1 Indoor Units	
		2.2 Outdoor Units	4
	3.	Combination of Outdoor Units	5
	4.	Model Selection	6
Part 2	Specific	cations	9
	1.	Specifications	10
		1.1 Outdoor Units	
		1.2 Indoor Units	
		1.3 BS Units	56
Part 3	Refrige	erant Circuit	57
	1.	Refrigerant Circuit	
		1.1 REYQ8P, 10P, 12P	
		1.2 REYQ14P, 16P 1.3 REMQ8P (Multi 8HP)	
		1.4 REMQ10P, 12P (Multi 10, 12HP)	
		1.5 REMQ14P, 16P (Multi 14, 16HP)	
		1.6 BS Unit Functional Parts	
		1.7 Indoor Units	
	2.	Functional Parts Layout	
		2.1 REYQ8P, 10P, 12P	
		2.2 REYQ14P, 16P	
		2.3 REMQ8P 2.4 REMQ10P, 12P	
		2.5 REMQ14P, 16P	
	3.	Refrigerant Flow for Each Operation Mode	
Part 4	Functio	on	103
	1.	Function General	104
		1.1 Symbol	
		1.2 Operation Mode	
	2.	Basic Control	
		2.1 Normal Operation	
		2.2 Compressor PI Control	108

Table of Contents

		2.3 Electronic Expansion Valve PI Control	116
		2.4 Step Control of Outdoor Unit Fans	116
		2.5 Outdoor Unit Fan Control in Cooling Operation	117
		2.6 Heat Exchanger Control	118
	3.	Special Control	119
		3.1 Startup Control	119
		3.2 Large Capacity Start Up Control (Heating)	121
		3.3 Oil Return Operation	122
		3.4 Defrost Operation	126
		3.5 Pump-down Residual Operation	128
		3.6 Standby	130
		3.7 Stopping Operation	131
	4.	Protection Control	132
		4.1 High Pressure Protection Control	132
		4.2 Low Pressure Protection Control	134
		4.3 Discharge Pipe Protection Control	136
		4.4 Inverter Protection Control	137
		4.5 STD Compressor Overload Protection	139
	5.	Other Control.	140
		5.1 Backup Operation	
		5.2 Demand Operation	140
		5.3 Heating Operation Prohibition	140
	6.	Outline of Control (Indoor Unit)	141
		6.1 Operation Flow Chart	
		6.2 Thermostat Control	
		6.3 Drain Pump Control	
		6.4 Control of Electronic Expansion Valve	
		6.5 Freeze Prevention	
		6.6 Heater Control (Optional PC Board KRP1Bis required.)	
		6.7 List of Swing Flap Operations	
		6.8 Hot Start Control (In Heating Operation Only)	
		6.9 Louver Control for Preventing Ceiling Dirt	
		3	
Part 5 Tes	t Op	peration	155
	-		
	1.	Test Operation	
		1.1 Installation Process	
		1.2 Procedure and Outline	
		1.3 Operation when Power is Turned On	
	2.	Outdoor Unit PC Board Layout	201
	3.	Field Setting	
		3.1 Field Setting from Remote Controller	
		3.2 Field Setting from Outdoor Unit	215

ii Table of Contents

Part 6	Trouble	eshooting	245
	1.	. Symptom-based Troubleshooting	248
	2.	. Troubleshooting by Remote Controller	251
		2.1 The INSPECTION / TEST Button	
		2.2 Self-diagnosis by Wired Remote Controller	252
		2.3 Self-diagnosis by Wireless Remote Controller	253
		2.4 Inspection Mode	
		2.5 Remote Controller Service Mode	257
		2.6 Test Run Mode	
		2.7 Remote Controller Self-Diagnosis Function	259
	3.	. Troubleshooting by Indication on the Remote Controller	266
		3.1 "80" Indoor Unit: Error of External Protection Device	266
		3.2 "% " Indoor Unit: PC Board Defect	267
		3.3 "83" Indoor Unit: Malfunction of Drain Level Control System (S1L)	268
		3.4 "%8" Indoor Unit: Fan Motor (M1F) Lock, Overload	270
		"88" Indoor Unit: Malfunction of Indoor Unit Fan Motor	272
		"86" Indoor Uint: Overload / Overcurrent /	
		Lock of Indoor Unit Fan Motor	
		3.5 "R?" Indoor Unit: Malfunction of Swing Flap Motor (M1S)	274
		3.6 "RS" Electronic Expansion Valve Malfunction / Dust Clogging	276
		"83" Indoor Unit: Malfunction of Electronic Expansion Valve Coil	278
		3.7 "%F" Indoor Unit: Drain Level above Limit	280
		3.8 "%" Indoor Unit: Malfunction of Capacity Determination Device	281
		3.9 "ርዣ" Indoor Unit: Malfunction of Thermistor (R2T) for	
		Heat Exchanger	
		3.10 "ES" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes	283
		3.11 "C3" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air	284
		3.12 "[4" Indoor Unit: Malfunction of Thermostat Sensor	
		in Remote Controller	
		3.13 "E !" Outdoor Unit: PC Board Defect	286
		3.14 "E3" Outdoor Unit: Actuation of High Pressure Switch	
		3.15 "EY" Outdoor Unit: Actuation of Low Pressure Sensor	
		3.16 "ES" Outdoor Unit: Inverter Compressor Motor Lock	
		3.17 "E&" Outdoor Unit: STD Compressor Motor Overcurrent/Lock	
		3.18 "E?" Outdoor Unit: Malfunction of Outdoor Unit Fan Motor	
		3.19 "ES" Outdoor Unit: Malfunction of Moving Part of Electronic Expan	
		Valve (Y1E~Y5E)	
		3.20 "F3" Outdoor Unit: Abnormal Discharge Pipe Temperature	
		3.21 "F&" Outdoor Unit: Refrigerant Overcharged	301
		3.22 "F3" Outdoor Unit: Malfunction of	
		BS Unit Electronic Expansion Valve	
		3.23 "X'?" Outdoor Unit: Abnormal Outdoor Fan Motor Signal	
		3.24 "X3" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air	
		3.25 "ವೇ" Outdoor Unit: Current Sensor Malfunction	307
		3.26 "J3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor	
		(R31T, R32T, R33T)	308
		3.27 "ਪੇਖ" Outdoor Unit: Malfunction of Temperature Sensor for	
		Heat Exchanger Gas (R2T or R11T)	309
		3.28 "JS" Outdoor Unit: Malfunction of Thermistor (R8T or R10T) for	
		Suction Pipe	310

Table of Contents iii

3.29	"ఎక" Outdoor Unit: Malfunction of Thermistor (R4T or R12T) for	
	Outdoor Unit Heat Exchanger	.311
3.30	"ມ່າ" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 1	
	(R6T, R9T or R14T)	.312
3.31	"J8" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 2	
	(R7T or R15T)	.313
3.32	"ปร" Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas P	ipe
	Thermistor (R5T or R13T)	.314
3.33	"រដ" Outdoor Unit: Malfunction of High Pressure Sensor	.315
3.34	"كالـ" Outdoor Unit: Malfunction of Low Pressure Sensor	.317
3.35	"L !" Outdoor Unit: Defective Inverter PC Board	.319
3.36	"ኒ ዓ" Outdoor Unit: Malfunction of Inverter Radiating	
	Fin Temperature Rise	.321
3.37	"LS" Outdoor Unit: Momentary Overcurrent of	
	Inverter Compressor	.324
3.38	"L8" Outdoor Unit: Momentary Overcurrent of	
	Inverter Compressor	.326
3.39	"LS" Outdoor Unit: Inverter Compressor Starting Failure	.328
3.40	"LE" Outdoor Unit: Malfunction of Transmission between Inverter and	
	Control PC Board	.331
3.41	"P I" Outdoor Unit: Inverter Over-Ripple Protection	.334
3.42	"দ্ৰম্ন" Outdoor Unit: Malfunction of Inverter Radiating	
	Fin Temperature Rise Sensor	.336
3.43	"คน" Outdoor Unit: Faulty Field Setting after Replacing Main PC Boar	d
	or Faulty Combination of PC Board	.338
3.44	"ປວ" Outdoor Unit: Gas Shortage Alert	.340
3.45	"U!" Reverse Phase, Open Phase	.342
3.46	"⊔≥" Outdoor Unit: Power Supply Insufficient or	
	Instantaneous Failure	.343
3.47	"ปริ" Outdoor Unit: Check Operation not Executed	.346
3.48	"ย่ง" Malfunction of Transmission between Indoor Units	.347
3.49	"US" Indoor Unit: Malfunction of Transmission between	
	Remote Controller and Indoor Unit	.350
3.50	"บา" Outdoor Unit: Transmission Failure (Across Outdoor Units)	.351
3.51	"US" Indoor Unit: Malfunction of Transmission between Main and	
	Sub Remote Controllers	.357
3.52	"US" Indoor Unit: Malfunction of Transmission between Indoor and	
	Outdoor Units in the Same System	.358
3.53	"UR" Improper Combination of Indoor and Outdoor Units,	
	Indoor Units and Remote Controller	
	"UC" Address Duplication of Centralized Controller	
3.55	"UE" Malfunction of Transmission between Centralized Controller and	
	Indoor Unit	
3.56	"UF" System is not Set yet	.369
3.57	"UH" Malfunction of System,	
	Refrigerant System Address Undefined	.370
Trou	bleshooting (OP: Central Remote Controller)	.372
4.1	"M i" PC Board Defect	
4.2	"M8" Malfunction of Transmission between Optional Controllers for	
	Centralized Control	.373
4.3	"MS" Improper Combination of Optional Controllers for	
	Centralized Control	.374

iv Table of Contents

4.

		4.4 "MC" Address Duplication, Improper Setting	376
	5.	Troubleshooting (OP: Unified ON/OFF Controller)	377
		5.1 Operation Lamp Blinks	
		5.2 Display "Under Centralized Control" Blinks	
		(Repeats Single Blink)	379
		5.3 Display "Under Centralized Control" Blinks	000
		(Repeats Double Blink)	382
Part 7	Append	lix	397
	1.	Piping Diagrams	398
		1.1 Outdoor Unit	
		1.2 Indoor Unit	403
		1.3 BS Unit	409
	2.	Wiring Diagrams for Reference	410
		2.1 Outdoor Unit	410
		2.2 Field Wiring	415
		2.3 Indoor Unit	
		2.4 BS Unit	434
	3.	List of Electrical and Functional Parts	
		3.1 Outdoor Unit	
		3.2 Indoor Side	
	4.	Option List	
		4.1 Option List of Controllers	
	_	4.2 Option Lists (Outdoor Unit)	
	5.	Piping Installation Point	
		5.1 Piping Installation Point	
	0	5.2 The Example of a Wrong Pattern	
		Example of connection (R-410A Type)	
		Thermistor Resistance / Temperature Characteristics	
		Pressure Sensor	457
	9.	Method of Checking the Inverter's Power Transistors and	
		Diode Modules	458
		9.1 Method of Checking the Inverter's Power Transistors and	450
		Diode Modules	458
Part 8	Precau	tions for New Refrigerant (R-410A)	461
	4	Propositions for New Petrigorent (P. 410A)	460
	1.	Precautions for New Refrigerant (R-410A)	
		1.2 Refrigerant Cylinders	
		1.3 Service Tools	
Index			i
	_ .		_
Drawin	ne & Fla	ow Charts	V

Table of Contents v

Introduction SiBE37-704

1. Introduction

1.1 Safety Cautions

Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into "♠ Warning" and "♠ Caution". The "♠ Warning" items are especially important since they can lead to death or serious injury if they are not followed closely. The "♠ Caution" items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
- \triangle This symbol indicates an item for which caution must be exercised.
 - The pictogram shows the item to which attention must be paid.
- This symbol indicates a prohibited action.
 - The prohibited item or action is shown inside or near the symbol.
- This symbol indicates an action that must be taken, or an instruction. The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer

1.1.1 Caution in Repair

• Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shook. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	0.5
If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.	\bigcirc
When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.	0
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.	A
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.	\bigcirc

SiBE37-704 Introduction

<u> Caution</u>	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	\bigcirc
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	\bigcirc
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	•
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	B . C
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	0

1.1.2 Cautions Regarding Products after Repair

• Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	

Introduction SiBE37-704

• Warning	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	0
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

<u> </u>	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	\bigcirc
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

1.1.3 Inspection after Repair

• Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	0
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	0
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	\bigcirc

SiBE37-704 Introduction

<u> </u>	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 Mohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.1.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.1.5 Using Icons List

Icon	Type of Information	Description
Note:	Note	A "note" provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
Caution	Caution	A "caution" is used when there is danger that the reader, through incorrect manipulation, may damage equipment, loose data, get an unexpected result or has to restart (part of) a procedure.
(Warning	Warning	A "warning" is used when there is danger of personal injury.
5	Reference	A "reference" guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

Introduction SiBE37-704

1.2 PREFACE

Thank you for your continued patronage of Daikin products.

This is the new service manual for Daikin's Year 2007 VRVIII series Heat Recovery System. Daikin offers a wide range of models to respond to building and office air conditioning needs. We are confident that customers will be able to find the models that best suit their needs.

This service manual contains information regarding the servicing of VRVIII series R-410A Heat Recovery System.

Jan., 2008

After Sales Service Division

Part 1 General Information

1.	Mode	el Names of Indoor/Outdoor Units	2
		rnal Appearance	
		Indoor Units	
	2.2	Outdoor Units	4
3.	Com	bination of Outdoor Units	5
4.	Mode	el Selection	6

1. Model Names of Indoor/Outdoor Units

Indoor Units

Туре													Power Supply
Roundflow Ceiling Mounted Cassette	FXFQ	20P	25P	32P	40P	50P	63P	80P	100P	125P	_	_	VE
600×600 4-Way Blow Ceiling Mounted Cassette	FXZQ	20M	25M	32M	40M	50M	_	_	_		_		V1
2-Way Blow Ceiling Mounted Cassette	FXCQ	20M	25M	32M	40M	50M	63M	80M	_	125M	_	_	V3
Ceiling Mounted Corner Cassette	FXKQ	_	25MA	32MA	40MA	_	63MA	_	_	_	_	_	
Slim Concealed Ceiling	FXDQ- PVE	20P	25P	32P	_	_	_	_	_	_	_	_	VE
Unit	FXDQ- NAVE	_	_	_	40NA	50NA	63NA	_	_	_	_	_	
Concealed Ceiling Unit (Small)	FXDQ	20M	25M	_	_	_	_	_	_	_	_	_	V3
Concealed Ceiling Unit	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M	_	_	
Concealed Ceiling Unit (Large)	FXMQ	_	_	_	40MA	50MA	63MA	80MA	100MA	125MA	200MA	250MA	
Ceiling Suspended Unit	FXHQ	_		32MA	_	_	63MA	_	100MA	_	_	_	
Wall Mounted Unit	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	VE
Floor Standing Unit	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	
Concealed Floor Standing Unit	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	
4-way blow ceiling suspended unit	FXUQ	_	_	_	_	_	_	71MA	100MA	125MA	_	_	V1
Connection Unit for FXUQ	BEVQ	_	_	_	_	_	_	71MA	100MA	125MA	_	_	VE

Note: FXDQ has following 2 Series, as show below.

FXDQ-P, NAVE: with Drain Pump BEV unit is required for FXUQ only.

MA, NA: RoHS Directive models; Specifications, Dimensions and other functions are not changed compared

with M, N type.

BS Units

Type		Model Name							
Heat Recovery Series	BSVQ	100P	160P	250P	V1				

Outdoor Units Normal Series

Series		Model Name									
		8P	10P	12P	14P	16P	18P	20P	22P	24P	
Heat Recovery	REYQ	26P	28P	30P	32P	34P	36P	38P	40P	42P	Y1
		44P	46P	48P							

Power Supply:

VE : 1ϕ , 220~240V, 50Hz, 1ϕ , 220V, 60Hz V1 : 1ϕ , 220~240V, 50Hz V3 : 1ϕ , 230V, 50Hz Y1 : 3ϕ , 380~415V, 50Hz

SiBE37-704 External Appearance


2. External Appearance

2.1 Indoor Units



External Appearance SiBE37-704

2.2 Outdoor Units

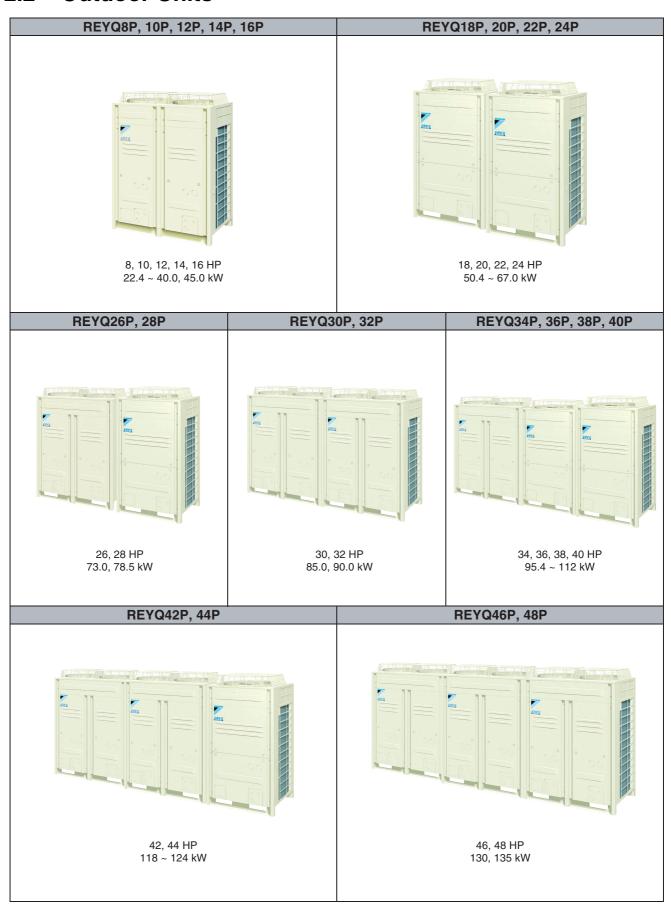

3. Combination of Outdoor Units

Single Use

	Number			Outdoor Unit Multi Connection			
Capacity	of units	8	10	12	14	16	Piping Kit (Option)
8HP	1	•					
10HP	1		•				
12HP	1			•			_
14HP	1				•		
16HP	1					•	

Multiple Use

System	Number		Mul	lti Unit Mo	dule		Outdoor Unit Multi Connection
Capacity	of units	8	10	12	14	16	Piping Kit (Option)
18HP	2	•	•				
20HP	2	•		•			
22HP	2		•	•			
24HP	2			••			Lloot Docovery BUEDOCDOO
26HP	2		•			•	Heat Recovery: BHFP26P90
28HP	2			•		•	
30HP	2				•	•	
32HP	2					••	
34HP	3	•	•			•	
36HP	3	•		•		•	
38HP	3		•	•		•	
40HP	3			••		•	Liest Bassian ii BUEDOCD100
42HP	3		•			••	Heat Recovery: BHFP26P136
44HP	3			•		••	
46HP	3				•	••	
48HP	3					•••	

A Note:

For multiple connection of 18HP system or more, an optional Daikin Outdoor Unit Multi Connection Piping Kit is required.

Model Selection SiBE37-704

4. Model Selection

VRV III Heat Recovery Series

Connectable indoor units number and capacity Normal Series

HP	8HP	10HP	12HP	14HP	16HP	18HP	20HP
System name	REYQ8P	REYQ10P	REYQ12P	REYQ14P	REYQ16P	REYQ18P	REYQ20P
Outdoor unit 1	REYQ8P	REYQ10P	REYQ12P	REYQ14P	REYQ16P	REMQ8P	REMQ8P
Outdoor unit 2	_	-	_	-	-	REMQ10P	REMQ12P
Outdoor unit 3	_	-	-	-	-	-	-
Total number of connectable indoor units	13	16	19	22	26	29	32
Total capacity of connectable indoor units (kW)	10.0~26.0	12.5~32.5	15.0~39.0	17.5~45.5	20.0~52.0	22.5~58.5	25.0~65.0
HP	22HP	24HP	26HP	28HP	30HP	32HP	34HP
System name	REYQ22P	REYQ24P	REYQ26P	REYQ28P	REYQ30P	REYQ32P	REYQ34P
Outdoor unit 1	REMQ10P	REMQ12P	REMQ10P	REMQ12P	REMQ14P	REMQ16P	REMQ8P
Outdoor unit 2	REMQ12P	REMQ12P	REMQ16P	REMQ16P	REMQ16P	REMQ16P	REMQ10P
Outdoor unit 3	-	-	-	_	-	-	REMQ16P
Total number of connectable indoor units	35	39	42	45	48	52	55
Total capacity of connectable indoor units (kW)	27.5~71.5	30.0~78.0	32.5~84.5	35.0~91.0	37.5~97.5	40.0~104.0	42.5~110.5
HP	36HP	38HP	40HP	42HP	44HP	46HP	48HP
System name	REYQ36P	REYQ38P	REYQ40P	REYQ42P	REYQ44P	REYQ46P	REYQ48P
Outdoor unit 1	REMQ8P	REMQ10P	REMQ12P	REMQ10P	REMQ12P	REMQ14P	REMQ16P
Outdoor unit 2	REMQ12P	REMQ12P	REMQ12P	REMQ16P	REMQ16P	REMQ16P	REMQ16P
Outdoor unit 3	REMQ16P						
Total number of connectable indoor units	58	61			64		
Total capacity of connectable indoor units (kW)	45.0~117.0	47.5~123.5	50.0~130.0	52.5~136.5	55.0~143.0	57.5~149.5	60.0~156.0

SiBE37-704 Model Selection

Connectable Indoor Unit

Туре			Model Name										Power Supply
Roundflow Ceiling Mounted Cassette	FXFQ	20P	25P	32P	40P	50P	63P	80P	100P	125P	_	_	VE
600×600 4-Way Blow Ceiling Mounted Cassette	FXZQ	20M	25M	32M	40M	50M	_	_			_		V1
2-Way Blow Ceiling Mounted Cassette	FXCQ	20M	25M	32M	40M	50M	63M	80M	_	125M	_	_	V3
Ceiling Mounted Corner Cassette	FXKQ	_	25MA	32MA	40MA	_	63MA	_	_	_	_	_	
Slim Concealed Ceiling	FXDQ- PVE	20P	25P	32P	_	_	_	_	_	_	_	_	VE
Unit	FXDQ- NAVE	_	_	_	40NA	50NA	63NA	_	_	_	_	_	
Concealed Ceiling Unit (Small)	FXDQ	20M	25M	_	_	_	_	_	_	_	_	_	V3
Concealed Ceiling Unit	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M	_	_	
Concealed Ceiling Unit (Large)	FXMQ	_	_	_	40MA	50MA	63MA	80MA	100MA	125MA	200MA	250MA	
Ceiling Suspended Unit	FXHQ	_	_	32MA	_	_	63MA	_	100MA	_	_	_	
Wall Mounted Unit	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	VE
Floor Standing Unit	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	
Concealed Floor Standing Unit	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	_	_	_	_	_	
4-way blow ceiling suspended unit	FXUQ	_	_	_	_	_	_	71MA	100MA	125MA	_	_	V1
Connection Unit for FXUQ	BEVQ		_	_	_	_	_	71MA	100MA	125MA	_	_	VE

Note: FXDQ has following 2 Series, as shown below.

FXDQ-P, NAVE: with Drain Pump BEV unit is required for FXUQ only.

Indoor unit capacity

New refrigerant model code	P20	P25	P32	P40	P50	P63	P80	P100	P125	P200	P250
	type	type	type	type	type	type	type	type	type	type	type
Selecting model capacity	2.2	2.8	3.5	4.5	5.6	7.0	9.0	11.2	14.0	22.4	28.0
	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
Equivalent output	0.8HP	1HP	1.25HP	1.6HP	2.0HP	2.5HP	3.2HP	4HP	5HP	8HP	10HP

Use the above tables to determine the capacities of indoor units to be connected. Make sure the total capacity of indoor units connected to each outdoor unit is within the specified value (kW).

- The total capacity of connected indoor units must be within a range of 50 to 130% of the rated capacity of the outdoor unit.
- In some models, it is not possible to connect the maximum number of connectable indoor units. Select models so the total capacity of connected indoor units conforms to the specification.

Model Selection SiBE37-704

Differences from Conventional Models

Item		Differences	
nem	Object	New model (P Model)	Conventional model (M Model)
Compressor	Connection of equalizer oil pipe	NONE (No particular changes in terms of service)	• YES
	Equalizer oil pipe for multi- outdoor-unit system	• NONE	• YES
Workability	Procedure for calculating refrigerant refilling quantity	Refilling quantity due to piping length + Adjustment quantity according to models of outdoor units	Refilling quantity due to piping length - Adjustment quantity according to models of outdoor units
Optional accessories	Branch pipe for outdoor unit connection	Y branch Type: BHFP26P90/136	 T branch Type: BHFP26M90+BHFP22M90P BHFP26M135+BHFP22M135P

Part 2 Specifications

1.	Spe	cifications	10
	1.1	Outdoor Units	10
	1.2	Indoor Units	21
	1.3	BS Units	56

Specifications SiBE37-704

1. Specifications

1.1 Outdoor Units

Heat Recovery 50Hz <REYQ-P>

Model Name			REYQ8P8Y1B	REYQ10P8Y1B	
kcal / h			19,400	24,300	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	76,800	96,200	
		kW	22.5	28.2	
★2 Cooling Capacity (19.0°CWB) kW			22.4	28.0	
		kcal / h	21,500	27,100	
★3 Heating Ca	apacity	Btu / h	85,300	107,000	
		kW	25.0	31.5	
0	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×1300×765	1680×1300×765	
Heat Exchang	er	l.	Cross Fin Coil	Cross Fin Coil	
	Туре		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	7.88+10.53	13.34+10.53	
Comp.	Number of Revolutions	r.p.m	3720, 2900	6300, 2900	
Comp.	Motor Output×Number of Units	kW	1.0+4.5	2.2+4.5	
	Starting Method		Soft Start	Soft Start	
	Туре		Propellor Fan	Propellor Fan	
	Motor Output kW		0.35×2	0.35x2	
Fan	Air Flow Rate	l/s	3,166	3,166	
	All Flow Rate	m³/min	190	190	
	Drive		Direct Drive	Direct Drive	
	Liquid Pipe		φ9.5 C1220T (Brazing Connection)	φ9.5 C1220T (Brazing Connection)	
Connecting	Suction Gas Pipe		φ19.1 C1220T (Brazing Connection)	φ22.2 C1220T (Brazing Connection)	
Pipes	High and Low Pressure	Gas Pipe	φ15.9 C1220T (Brazing Connection)	φ19.1 C1220T (Brazing Connection)	
	Pressure Equalizer Tube)	_	_	
Mass (Weight))	kg	331	331	
Safety Device	s		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Cont	rol	%	20~100	14~100	
	Refrigerant Name		R-410A	R-410A	
Refrigerant	Charge	kg	10.3	10.6	
	Control		Electronic Expansion Valve	Electronic Expansion Valve	
Refrigerator O	oil .		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps	
Drawing No.			4D057563B	4D057564B	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.

★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.

★3 Indoor temp.: 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m.

Conversion Formulae kcal/h=kWx860 Btu/h=kWx3412 cfm=m³/minx35.3

The Reference Number C~: Partly corrected drawings.

J~: Original drawing is Japanese

V~: Printing Convenience

SiBE37-704 Specifications

Model Name			REYQ12P8Y1B	REYQ14P8Y1B	
kcal / h		kcal / h	29,000	35,500	
★1 Cooling Capacity (19.5°CWB) Btu / h		Btu / h	115,000	141,000	
		kW	33.7	41.3	
★2 Cooling Ca	apacity (19.0°CWB)	kW	33.5	40.0	
		kcal / h	32,300	38,700	
★3 Heating Ca	apacity	Btu / h	128,000	154,000	
		kW	37.5	45.0	
0	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×1300×765	1680×1300×765	
Heat Exchang	er		Cross Fin Coil	Cross Fin Coil	
	Туре		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	13.34+10.53	16.90+16.90	
Comp.	Number of Revolutions	r.p.m	6300, 2900	7980, 7980	
Comp.	Motor Output×Number of Units	kW	3.3+4.5	3.8+3.8	
	Starting Method		Soft Start	Soft Start	
	Type		Propellor Fan	Propellor Fan	
	Motor Output kW		0.35×2	0.75×2	
Fan	A' E D.	l/s	3,500	3,916	
	Air Flow Rate	m³/min	210	235	
	Drive		Direct Drive	Direct Drive	
	Liquid Pipe		φ12.7 C1220T (Brazing Connection)	φ12.7 C1220T (Brazing Connection)	
Connecting	Suction Gas Pipe		φ28.6 C1220T (Brazing Connection)	φ28.6 C1220T (Brazing Connection)	
Pipes	High and Low Pressure	Gas Pipe	φ19.1 C1220T (Brazing Connection)	φ22.2 C1220T (Brazing Connection)	
	Pressure Equalizer Tube	Э	_	_	
Mass (Weight))	kg	331	339	
Safety Devices	s		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Cont	rol	%	14~100	10~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	10.8	11.1	
	Control	•	Electronic Expansion Valve	Electronic Expansion Valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps	
Drawing No.			4D057565B	4D057566B	

Notes:

 $\star 1$ Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.

 $\bigstar 2$ Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.

★3 Indoor temp.: 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

Specifications SiBE37-704

Model Name	odel Name REYQ16P8Y1B					
kcal / h		kcal / h	40,000			
*1 Cooling Capacity (19.5°CWB) *2 Cooling Capacity (19.0°CWB) *3 Heating Capacity Casing Color Y1 Type Y1E Type Dimensions: (HxWxD) Heat Exchanger Type Piston Displacement Number of Revolution Motor OutputxNumber	apacity (19.5°CWB)	Btu / h	159,000			
			46.5			
★2 Cooling Ca	★2 Cooling Capacity (19.0°CWB) kW		45.0			
		kcal / h	43,000			
★3 Heating Ca	apacity	Btu / h	171,000			
		kW	50.0			
Casing Color			Ivory White 5Y7.5/1			
Casing Color	Y1E Type	-	Light Camel 2.5Y6.5/1.5			
Dimensions: (I	H×W×D)	mm	1680×1300×765			
Heat Exchange	er		Cross Fin Coil			
	Type		Hermetically Sealed Scroll Type			
	Piston Displacement	m³/h	16.90+16.90			
Comp.	Number of Revolutions	r.p.m	7980, 7980			
Comp.	Motor Output×Number of Units	kW	4.4+4.4			
	Starting Method		Soft Start			
	Туре		Propellor Fan			
	Motor Output	kW	0.75×2			
Fan	Air Flow Rate	l/s	4,000			
	All I low hate	m³/min	240			
	Drive		Direct Drive			
	Liquid Pipe		φ12.7 C1220T (Brazing Connection)			
Connecting	Suction Gas Pipe		φ28.6 C1220T (Brazing Connection)			
Pipes	High and Low Pressure	Gas Pipe	φ22.2 C1220T (Brazing Connection)			
	Pressure Equalizer Tube)	_			
Mass (Weight)		kg	339			
Safety Devices	S		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector			
Defrost Metho	d		Deicer			
Capacity Cont	rol	%	10~100			
	Refrigerant Name		R-410A			
Refrigerant	Charge	kg	11.1			
	Control		Electronic Expansion Valve			
Refrigerator O	il		Refer to the nameplate of compressor			
Standard Acce	essories		Installation Manual, Operation Manual, Connection Pipes, Clamps			
Drawing No.			4D057567B			

Notes:

 $\star 1$ Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.

*2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.

*3 Indoor temp.: 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

SiBE37-704 **Specifications**

Model Name (Combination Unit)			REYQ18P8Y1B	REYQ20P8Y1B	
Model Name (Independent Unit)			REMQ8P8Y1B+REMQ10P8Y1B	REMQ8P8Y1B+REMQ12P8Y1B	
kcal / h			43,600	48,300	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	173,000	192,000	
		kW	50.7	56.2	
★2 Cooling Ca	apacity (19.0°CWB)	kW	50.4	55.9	
		kcal / h	48,600	53,800	
★3 Heating Ca	apacity	Btu / h	193,000	213,000	
		kW	56.5	62.5	
0 1 0 1	Y1 Type	•	Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×930×765+1680×930×765	1680×930×765+1680×930×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
·	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53)+16.90	(13.34+10.53)+16.90	
Comp.	Number of Revolutions	r.p.m	(6300, 2900), 7980	(6300, 2900), 7980	
Comp.	Motor Output×Number of Units	kW	(2.2+4.5)×1+4.7×1 (3.5+4.5)×1+4.7×1		
	Starting Method		Soft start	Soft start	
	Туре		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.75×1)	(0.75×1)+(0.75×1)	
Fan	Air Flam Data	l/s	3,000+3,083	3,000+3,333	
	Air Flow Rate	m³/min	180+185	180+200	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ15.9 C1220T (Brazing connection)	φ15.9 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ28.6 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ22.2 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
	Pressure Equalizer Tube)	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight))	kg	204+254	204+254	
Safety Devices	s		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Control %		%	9~100	7~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	8.2+9.0	8.2+9.1	
	Control	•	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes, Cramps	
Drawing No.			4D057568A	4D057569A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

Specifications SiBE37-704

Model Name (Combination Unit)			REYQ22P8Y1B	REYQ24P8Y1B	
Model Name (Independent Unit)			REMQ10P8Y1B+REMQ12P8Y1B	REMQ12P8Y1B+REMQ12P8Y1B	
kcal / h			53,200	58,000	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	211,000	230,000	
		kW	61.9	67.4	
★2 Cooling Ca	apacity (19.0°CWB)	kW	61.5	67.0	
		kcal / h	59,300	64,500	
★3 Heating Ca	apacity	Btu / h	235,000	256,000	
		kW	69.0	75.0	
Casing Calar	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (H	H×W×D)	mm	1680×930×765+1680×930×765	1680×930×765+1680×930×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
	Type		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53)×2	(13.34+10.53)×2	
Comp.	Number of Revolutions	r.p.m	(6300, 2900)×2	(6300, 2900)×2	
Comp.	Motor Output×Number of Units	kW	(3.5+4.5)×1+(2.2+4.5)×1	(3.5+4.5)×2	
	Starting Method		Soft start	Soft start	
	Туре		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.75×1)	0.75×2	
Fan	Air Flow Rate	l/s	3,083+3,333	3,333+3,333	
	All Flow Hale	m³/min	185+200	200+200	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ15.9 C1220T (Brazing connection)	φ15.9 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ28.6 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ28.6 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
	Pressure Equalizer Tube)	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	254+254	254+254	
Safety Devices	3		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Control %		%	7~100	6~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	9.0+9.1	9.1+9.1	
	Control	-	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes, Cramps	
Drawing No.			4D057570A	4D057571A	
				•	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

SiBE37-704 **Specifications**

Model Name (Combination Unit)			REYQ26P8Y1B	REYQ28P8Y1B	
Model Name (Independent Unit)			REMQ10P8Y1B+REMQ16P8Y1B	REMQ12P8Y1B+REMQ16P8Y1B	
kcal / h			63,100	67,900	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	250,000	270,000	
		kW	73.4	79.0	
★2 Cooling Ca	apacity (19.0°CWB)	kW	73.0	78.5	
		kcal / h	70,100	75,300	
★3 Heating Ca	apacity	Btu / h	278,000	299,000	
		kW	81.5	87.5	
0.1.01.	Y1 Type	•	Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×930×765+1680×1240×765	1680×930×765+1680×1240×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)+(13.34+10.53)	(13.34+10.53+10.53)+(13.34+10.53)	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)+(6300, 2900)	(6300, 2900, 2900)+(6300, 2900)	
Comp.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×1+(2.2+4.5)×1	(3.2+4.5+4.5)×1+(3.5+4.5)×1	
	Starting Method		Soft start	Soft start	
	Туре		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.35×2)	(0.75×1)+(0.35×2)	
Fan	Air Flour Data	l/s	3,083+3,833	3,333+3,833	
	Air Flow Rate	m³/min	185+230	200+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ34.9 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ28.6 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
	Pressure Equalizer Tube)	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight))	kg	254+334	254+334	
Safety Device	s		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Method			Deicer	Deicer	
Capacity Control %		%	6~100	6~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	9.0+11.7	9.1+11.7	
	Control	•	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes, Cramps	
Drawing No.			4D057572A	4D057808A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

Specifications SiBE37-704

Model Name (Combination Unit)			REYQ30P8Y1B	REYQ32P8Y1B	
Model Name (Independent Unit)			REMQ14P8Y1B+REMQ16P8Y1B	REMQ16P8Y1B+REMQ16P8Y1B	
		kcal / h	73,500	77,800	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	292,000	309,000	
		kW	85.5	90.5	
★2 Cooling Ca	apacity (19.0°CWB)	kW	85.0	90.0	
		kcal / h	81,700	86,000	
★3 Heating Ca	apacity	Btu / h	324,000	341,000	
		kW	95.0	100	
Casing Calar	Y1 Type	•	Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×1240×765+1680×1240×765	1680×1240×765+1680×1240×765	
Heat Exchang	er	•	Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)×2	(13.34+10.53+10.53)×2	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)×2	(6300, 2900, 2900)×2	
Comp.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×1+(1.9+4.5+4.5)×1	(3.2+4.5+4.5)×2	
	Starting Method		Soft start	Soft start	
	Туре		Propellor fan	Propellor fan	
	Motor Output	kW	(0.35×2)+(0.35×2)	(0.35×2)×2	
Fan	Air Flow Rate	l/s	3,833+3,833	3,833+3,833	
	All Flow hate	m³/min	230+230	230+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ34.9 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ28.6 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
	Pressure Equalizer Tube)	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	334+334	334+334	
Safety Devices	3		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Cont	Capacity Control %		5~100	5~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	11.7+11.7	11.7+11.7	
	Control	-	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes, Cramps	
Drawing No.			4D057809A	4D057810A	
			I .	1	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

SiBE37-704 **Specifications**

Model Name (Combination Unit)			REYQ34P8Y1B	REYQ36P8Y1B	
Model Name (Independent Unit)			REMQ8P8Y1B+REMQ10P8Y1B+REMQ16P8Y1B	REMQ8P8Y1B+REMQ12P8Y1B+REMQ16P8Y1B	
kcal / h			82,600	87,700	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	328,000	348,000	
		kW	96.0	102	
★2 Cooling Ca	apacity (19.0°CWB)	kW	95.4	101	
		kcal / h	92,000	97,200	
★3 Heating Ca	apacity	Btu / h	365,000	386,000	
		kW	107	113	
0 1 0 1	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×930×765+1680×930×765+1680×1240×765	1680×930×765+1680×930×765+1680×1240×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)+(13.34+10.53)+16.90	(13.34+10.53+10.53)+(13.34+10.53)+16.90	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)+(6300, 2900)+7980	(6300, 2900, 2900)+(6300, 2900)+7980	
Comp.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×1+(2.2+4.5)×1+4.7×1 (3.2+4.5+4.5)×1+(3.5+4.5)×1+4.		
	Starting Method		Soft start	Soft start	
	Type		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.75×1)+(0.35×2)	(0.75×1)+(0.75×1)+(0.35×2)	
Fan	Air Flanc Data	l/s	3,000+3,083+3,833	3,000+3,333+3,833	
	Air Flow Rate	m³/min	180+185+230	180+200+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ34.9 C1220T (Brazing connection)	φ41.3 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ28.6 C1220T (Brazing connection)	φ28.6 C1220T (Brazing connection)	
	Pressure Equalizer Tube	Э	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	204+254+334	204+254+334	
Safety Devices	S		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Method			Deicer	Deicer	
Capacity Cont	rol	%	5~100	5~100	
	Refrigerant Name		R-410A	R-410A	
Refrigerant	Charge	kg	8.2+9.0+11.7	8.2+9.1+11.7	
	Control	•	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes, Cramps	
Drawing No.			4D057811A	4D057812A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

Specifications SiBE37-704

Model Name (Combination Unit)			REYQ38P8Y1B	REYQ40P8Y1B	
Model Name (Independent Unit)			REMQ10P8Y1B+REMQ12P8Y1B+REMQ16P8Y1B	REMQ12P8Y1B+REMQ12P8Y1B+REMQ16P8Y1B	
kcal / h			92,900	97,200	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	368,000	386,000	
		kW	108	113	
★2 Cooling Ca	apacity (19.0°CWB)	kW	107	112	
		kcal / h	102,000	108,000	
★3 Heating Ca	apacity	Btu / h	406,000	427,000	
		kW	119	125	
0.1.01	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×930×765+1680×930×765+1680×1240×765	1680×930×765+1680×930×765+1680×1240×765	
Heat Exchang	er	l.	Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)+(13.34+10.53)×2	(13.34+10.53+10.53)+(13.34+10.53)×2	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)+(6300, 2900)×2	(6300, 2900, 2900)+(6300, 2900)×2	
Somp.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×1+(3.5+4.5)×1+(2.2+4.5)×1 (3.2+4.5+4.5)×1+(3.5+4.5)		
	Starting Method		Soft start	Soft start	
	Туре		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.75×1)+(0.35×2)	(0.75×2)+(0.35×2)	
-an	Air Flow Rate	l/s	3,083+3,333+3,833	3,333+3,333+3,833	
	Air Flow Hate	m³/min	185+200+230	200+200+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connectina	Suction Gas Pipe		φ41.3 C1220T (Brazing connection)	φ41.3 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ34.9 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
	Pressure Equalizer Tube		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	254+254+334	254+254+334	
Safety Devices			High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Method			Deicer	Deicer	
Capacity Control %		%	5~100	4~100	
	Refrigerant Name		R-410A	R-410A	
Refrigerant	Charge	kg	9.0+9.1+11.7	9.1+9.1+11.7	
Control			Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes Cramps	
Drawing No.			4D057813A	4D057814A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

SiBE37-704 **Specifications**

Model Name (Combination Unit)			REYQ42P8Y1B	REYQ44P8Y1B	
Model Name (Independent Unit)			REMQ10P8Y1B+REMQ16P8Y1B+REMQ16P8Y1B	REMQ12P8Y1B+REMQ16P8Y1B+REMQ16P8Y1B	
kcal / h			102,000	108,000	
*1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	406,000	427,000	
		kW	119	125	
★2 Cooling Ca	apacity (19.0°CWB)	kW	118	124	
		kcal / h	114,000	119,000	
★3 Heating Ca	apacity	Btu / h	450,000	471,000	
		kW	132	138	
0 1 0 1	Y1 Type		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×930×765+1680×1240×765+1680×1240×765	1680×930×765+1680×1240×765+1680×1240×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)×2+(13.34+10.53)	(13.34+10.53+10.53)×2+(13.34+10.53)	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)×2+(6300, 2900)	(6300, 2900, 2900)×2+(6300, 2900)	
сопр.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×1+(2.2+4.5)×1 (3.2+4.5+4.5)×2+(3.5+4.5		
	Starting Method		Soft start	Soft start	
	Type		Propellor fan	Propellor fan	
	Motor Output	kW	(0.75×1)+(0.35×2)×2	(0.75×1)+(0.35×2)×2	
Fan	A' El D.I.	l/s	3,083+3,833+3,833	3,333+3,833+3,833	
	Air Flow Rate	m³/min	185+230+230	200+230+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ41.3 C1220T (Brazing connection)	φ41.3 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ34.9 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
	Pressure Equalizer Tube	9	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	254+334+334	254+334+334	
Safety Device	s		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Cont	rol	%	4~100	4~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	9.0+11.7+11.7	9.1+11.7+11.7	
Control		•	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes Cramps	
Drawing No.			4D057815A	4D057816A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

Specifications SiBE37-704

Model Name (Combination Unit)			REYQ46P8Y1B	REYQ48P8Y1B	
Model Name (Independent Unit)			REMQ14P8Y1B+REMQ16P8Y1B+REMQ16P8Y1B	REMQ16P8Y1B+REMQ16P8Y1B+REMQ16P8Y1B	
kcal / h			113,000	117,000	
★1 Cooling Capacity (19.5°CWB) Btu / h kW		Btu / h	447,000	464,000	
		kW	131	136	
★2 Cooling Ca	apacity (19.0°CWB)	kW	130	135	
		kcal / h	124,000	129,000	
★3 Heating Ca	apacity	Btu / h	495,000	512,000	
		kW	145	150	
0 1 0 1	Y1 Type	•	Ivory White 5Y7.5/1	Ivory White 5Y7.5/1	
Casing Color	Y1E Type		Light Camel 2.5Y6.5/1.5	Light Camel 2.5Y6.5/1.5	
Dimensions: (I	H×W×D)	mm	1680×1240×765+1680×1240×765+1680×1240×765	1680×1240×765+1680×1240×765+1680×1240×765	
Heat Exchang	er		Cross fin coil	Cross fin coil	
	Туре		Hermetically sealed scroll type	Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34+10.53+10.53)×3	(13.34+10.53+10.53)×3	
Comp.	Number of Revolutions	r.p.m	(6300, 2900, 2900)×3	(6300, 2900, 2900)×3	
Comp.	Motor Output×Number of Units	kW	(3.2+4.5+4.5)×2+(1.9+4.5+4.5)×1 (3.2+4.5+4.5)×3		
	Starting Method		Soft start	Soft start	
	Type		Propellor fan	Propellor fan	
	Motor Output	kW	(0.35×2)+(0.35×2)×2	(0.35×2)×3	
Fan	A' El D.I.	l/s	3,833+3,833+3,833	3,833+3,833+3,833	
	Air Flow Rate	m³/min	230+230+230	230+230+230	
	Drive		Direct drive	Direct drive	
	Liquid Pipe		φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Connecting	Suction Gas Pipe		φ41.3 C1220T (Brazing connection)	φ41.3 C1220T (Brazing connection)	
Pipes	High and Low Pressure	Gas Pipe	φ34.9 C1220T (Brazing connection)	φ34.9 C1220T (Brazing connection)	
	Pressure Equalizer Tube	9	φ19.1 C1220T (Brazing connection)	φ19.1 C1220T (Brazing connection)	
Mass (Weight)		kg	334+334+334	334+334+334	
Safety Device	s		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Metho	d		Deicer	Deicer	
Capacity Control %		%	4~100	4~100	
	Refrigerant Name	•	R-410A	R-410A	
Refrigerant	Charge	kg	11.7+11.7+11.7	11.7+11.7+11.7	
	Control	•	Electronic expansion valve	Electronic expansion valve	
Refrigerator O	il		Refer to the nameplate of compressor	Refer to the nameplate of compressor	
Standard Acce	essories		Installation manual, Operation manual, Connection pipes, Cramps	Installation manual, Operation manual, Connection pipes Cramps	
Drawing No.			4D057817A	4D057818A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
 ★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level

difference : 0m.
★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae kcal/h=kW×860 Btu/h=kW×3412 cfm=m³/min×35.3

SiBE37-704 Specifications

1.2 Indoor Units

Roundflow Ceiling Mounted Cassette

1-1 TECHNICAL SPECIFICATIONS			FXFQ20PVEB	FXFQ25PVEB	FXFQ32PVEB	FXFQ40PVEB	FXFQ50PVEB	
Capacity	Cooling		kW	2.2	2.8	3.6	4.5	5.6
	Heating		kW	2.5	3.2	4.0	5.0	6.3
ower Input	Cooling		kW	0.053	0.053	0.053	0.063	0.083
	Heating		kW	0.045	0.045	0.045	0.055	0.067
asing	Material					Galvanised steel		
Dimensions	Packing	Height	mm	220	220	220	220	220
		Width	mm	882	882	882	882	882
		Depth	mm	882	882	882	882	882
	Unit	Height	mm	204	204	204	204	204
		Width	mm	840	840	840	840	840
		Depth	mm	840	840	840	840	840
Veight	Unit		kg	20.0	20.0	20.0	20.0	21.0
_	Packed Uni	t	kg	24.0	24.0	24.0	24.0	26.0
imensions	Length	Inside	mm		l	2,096		
		Outside	mm			2,152		
leat	Dimensions	Nr of Rows	1	2	2	2	2	2
xchanger		Fin Pitch	mm	1.2	1.2	1.2	1.2	1.2
		Nr of Passes		2	2	3	3	7
		Face Area	m²	0.267	0.267	0.267	0.267	0.357
		Nr of Stages		6	6	6	6	8
		Empty Tube		4	4		Ů	
		Hole	piato	•	'			
	Fin	Fin type		Cross fin coil (Multi louver fins and Hi-XSS tubes)				
an	Туре		Turbo fan					
	Quantity			1	1	1	1	1
ir Flow	Cooling	High	m³/min	12.5	12.5	12.5	13.5	15.5
Rate		Low	m³/min	9.0	9.0	9.0	9.0	10.0
	Heating	High	m³/min	12.5	12.5	12.5	13.5	15.0
		Low	m³/min	9.0	9.0	9.0	9.0	9.5
an	Motor	Model		QTS48D11M				
		Steps		2	2	2	2	2
			W	56	56	56	56	56
		Output (high)						
Refrigerant	Name			R-410A				
Sound Level	Cooling	Sound power (nominal)	dBA	49	49	49	50	51
Cooling	Sound	High	dBA	31	31	31	32	33
•	Pressure	Low	dBA	28	28	28	28	28
leating	Sound	High	dBA	31	31	31	32	33
3	Pressure	Low	dBA	28	28	28	28	28
riping	Liquid	Туре		-	-	Flare connection	-	-
onnections	(OD)	Diameter	mm	6.35	6.4	6.4	6.4	6.4
	Gas	Туре	1		1	Flare connection		
		Diameter	mm	12.7	12.7	12.7	12.7	12.7
	Drain	Diameter	mm			VP25 (I.D. 25/O.D. 32)		
	Heat Insula		1		Fna	med polystyrene/polyethy	/lene	
		orbing insulati	on	(Foamed Polyurethane)				
ecoration	Model	noning in isulati	0.1			BYCQ140CW1		
anel	Colour					RAL9010		
	Dimensions	Hoight	mm	50	50		50	EO
	DITTIENSIONS	Height Width	mm			50	50	50
			mm	950	950	950	950	950
			+	050	050	050	050	000
	Weight	Depth	mm kg	950 5.5	950 5.5	950 5.5	950 5.5	950 5.5

Specifications SiBE37-704

Roundflow Ceiling Mounted Cassette

1-1 TECHNICAL SPECIFICATIONS		FXFQ20PVEB	FXFQ25PVEB	FXFQ32PVEB	FXFQ40PVEB	FXFQ50PVEB			
Standard _.	Standard Accessories		Installation and operation manual						
Accessories		Drain hose							
			Washer for hanging bracket						
			Screws						
			Sealing Pads						
		Insulation for fitting							
				Clamp for drain hose					
				Installation guide					
				Drain sealing pad					
Notes		The sound pressure values are mentioned for a unit installed with rear suction							
		The sound	The sound power level is an absolute value indicating the power wich a sound source generates.						
		Nominal cooling capacities are based on: indoor temperature: 27°CDB,19°CWB, outdoor temperature: 35°CDB, equivalent refrigerant piping: 5m, level difference: 0m.							
		Nominal heating of	Nominal heating capacities are based on: indoor temperature: 20°CDB, outdoor temperature: 7°CDB, 6°CWB, equivalent refrigerant piping: 5m (horizontal)						
		Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							

1-1 TECHNICAL SPECIFICATIONS				FXFQ63PVEB	FXFQ80PVEB	FXFQ100PVEB	FXFQ125PVEB		
Capacity	Cooling		kW	7.1	9.0	11.2	14.0		
	Heating		kW	8.0	10.0	12.5	16.0		
Power Input	Cooling		kW	0.095	0.120	0.173	0.258		
Heating			kW	0.114	0.108	0.176	0.246		
Casing	Material			Galvanised steel					
Dimensions	Packing	Height	mm	220	262	262	304		
		Width	mm	882	882	882	882		
		Depth	mm	882	882	882	882		
	Unit	Height	mm	204	246	246	288		
		Width	mm	840	840	840	840		
		Depth	mm	840	840	840	840		
Weight	Unit kg			21.0	24.0	24.0	26.0		
	Packed Unit		kg	26.0	28.0	28.0	31.0		
Dimensions	Length Inside		mm	2,096					
	_	Outside mm			2,1	52			
Heat	Dimensions	Nr of Rows		2	2	2	2		
Exchanger		Fin Pitch	mm	1.2	1.2	1.2	1.2		
		Nr of Passes	3	7	9	9	11		
		Face Area	m²	0.357	0.446	0.446	0.535		
		Nr of Stages	;	8	10	10	12		
	Fin	Fin type			Cross fin coil (Multi louve	i louver fins and Hi-XSS tubes)			
Fan	Туре			Turbo fan					
	Quantity			1	1	1	1		
Air Flow	Cooling	High	m³/min	16.5	23.5	26.5	33.0		
Rate		Low	m³/min	11.0	14.5	17.0	20.0		
	Heating	High	m³/min	17.5	23.5	28.0	33.0		
		Low	m³/min	12.0	14.5	17.5	20.0		
Fan	Motor	Model		QTS48D11M	QTS48C15M	QTS48C15M	QTS48C15M		
		Steps		2	2	2	2		
		Output (high)	W	56	120	120	120		
Refrigerant	Name			R-410A					
Sound Level	Cooling	Sound power (nominal)	dBA	52	55	58	61		
Cooling	Sound	High	dBA	34	38	41	44		
-	Pressure	Low	dBA	29	32	33	34		
Heating	Sound	High	dBA	36	38	42	44		
3	Pressure	Low	dBA	30	32	34	34		

SiBE37-704 Specifications

Roundflow Ceiling Mounted Cassette

1-1 TECHNICAL SPECIFICATIONS				FXFQ63PVEB	FXFQ80PVEB	FXFQ100PVEB	FXFQ125PVEB		
Piping	Liquid (OD)	uid Type		Flare connection					
connections	(OD)	Diameter	mm	9.5	9.5	9.5	9.5		
	Gas	Туре		Flare connection					
		Diameter	mm	15.9	15.9	15.9	15.9		
	Drain	Diameter	mm		25/O.D. 32)				
	Heat Insula	tion		Foamed polystyrene/polyethylene					
	Sound abso	orbing insulati	on		(Foamed P	olyurethane)			
Decoration	Model				BYCQ ⁻	140CW1			
Panel	Colour				RAL	.9010			
	Dimensions	Height	mm	50	50	50	50		
		Width	mm	950	950	950	950		
		Depth	mm	950	950	950	950		
	Weight		kg	5.5	5.5	5.5	5.5		
Air Filter				Resin net with mold resistance					
Standard Accessories	Standard Accessories			Installation and operation manual					
Accessories				Drain hose					
				Washer for hanging bracket					
				Screws					
				Sealing Pads					
				Insulation for fitting					
				Clamp for drain hose					
				Installation guide					
				Drain sealing pad					
Notes				The sound pressure values are mentioned for a unit installed with rear suction					
				'		cating the power wich a sound	U		
				Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m, level difference : 0m.					
				Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 5m (horizontal)					
				Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.					

Specifications SiBE37-704

1-2 ELECTRICAL SPECIFICATIONS			FXFQ20PVEB	FXFQ25PVEB	FXFQ32PVEB	FXFQ40PVEB	FXFQ50PVEB		
Power	Name		VE						
Supply	Frequency	Hz	50/60						
	Voltage	V	220-240/220						
Current	Minimum circuit amps (MCA)	Α	0.4	0.4	0.4	0.5	0.6		
	Maximum fuse amps (MFA)	Α	16	16	16	16	16		
	Full load amps (FLA)	Α	0.3	0.3	0.3	0.4	0.5		
Voltage	Minimum	V	-10%						
range	Maximum	V			+10%				
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.						
				Maximum allowable v	oltage range variation b	etween phases is 2%.			
				MC	CA/MFA : MCA = 1.25 ×	FLA			
MFA <= 4 × FLA next lower standard fuse rating minimum 16A									
			select wire size based on the MCA						
				instea	d of a fuse,use a circuit	oreaker			

1-2 ELECTRICAL SPECIFICATIONS		FXFQ63PVEB	FXFQ80PVEB	FXFQ100PVEB	FXFQ125PVEB				
Power	Name		VE						
Supply	Frequency	Hz	50/60						
	Voltage	V	220-240/220						
Current	Minimum circuit amps (MCA)	Α	0.9	0.9	1.4	1.9			
	Maximum fuse amps (MFA)	Α	16	16	16	16			
	Full load amps (FLA)	Α	0.7	0.7	1.1	1.5			
Voltage	Minimum	V	-10%						
range	Maximum	V	+10%						
Notes Voltage range: units are suitable for use on electrical systems where volt above listed range limits.				ems where voltage supplied to range limits.	unit terminals is not below or				
			Ma	aximum allowable voltage range	e variation between phases is	2%.			
				MCA/MFA : MC	CA = 1.25 × FLA				
				MFA <=	4×FLA				
next lower standard fuse rating minimum 16									
				select wire size b	ased on the MCA				
			instead of a fuse, use a circuit breaker						

SiBE37-704 Specifications

600×600 4-Way Blow Ceiling Mounted Cassette

1-1 TECHNIC	AL SPECIFI	CATIONS		FXZQ20MV1B	FXZQ25MV1B	FXZQ32MV1B	FXZQ40MV1B	FXZQ50MV1B		
Nominal	Cooling		kW	2.20	2.80	3.60	4.50	5.60		
Capacity	Heating kW		kW	2.50	3.20	4.00	5.00	6.30		
Power input (Nominal)	Cooling		kW	0.073	0.073	0.076	0.089	0.115		
	Heating		kW	0.064	0.064	0.068	0.080	0.107		
Casing	Material			Galvanised steel						
Dimensions	Unit	Height	mm	286	286	286	286	286		
		Width	mm	575	575	575	575	575		
		Depth	mm	575	575	575	575	575		
Weight	Unit		kg	18	18	18	18	18		
Heat	Dimensions	Nr of Rows		2	2	2	2	2		
Exchanger		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50		
		Face Area	m²	0.269	0.269	0.269	0.269	0.269		
		Nr of Stages	;	10	10	10	10	10		
-an	Type				•	Turbo fan		•		
	Quantity			1	1	1	1	1		
Air Flow	Cooling	High	m³/min	9.00	9.00	9.50	11.00	14.00		
Rate		Low	m³/min	7.00	7.00	7.50	8.00	10.00		
-an	Motor	Quantity	•	1	1	1	1	1		
		Model			•	QTS32C15M		•		
		Output (high)	W	55	55	55	55	55		
		Drive		Direct drive						
Refrigerant	Name				R-410A					
Sound Level	Cooling	Sound power (nominal)	dBA	47.0	47.0	49.0	53.0	58.0		
Cooling	Sound Pressure	High	dBA	30.0	30.0	32.0	36.0	41.0		
		Low	dBA	25.0	25.0	26.0	28.0	33.0		
Piping	Liquid (OD)	Туре		Flare connection						
connections		Diameter	mm	6.4	6.4	6.4	6.4	6.4		
		Туре		Flare connection				_		
	5.5.5	Diameter	mm	12.7	12.7	12.7	12.7	12.7		
	Drain	Diameter	mm	26	26	26	26	26		
	Heat Insulation			Foamed polystyrene/polyethylene						
Decoration	Model			BYFQ60B7W1						
Panel	Colour			White (Ral 9010)						
	Dimensions	Height	mm	55	55	55	55	55		
		Width	mm	700	700	700	700	700		
		Depth	mm	700	700	700	700	700		
	Weight	· ·	kg	2.7	2.7	2.7	2.7	2.7		
Air Filter					Re	esin net with mold resista	nce	I		
Refrigerant co	ontrol			Electronic expansion valve						
Temperature						ssor thermostat for cooling				
Safety device				PC board fuse						
,			F	Fan motor thermal protector						
Standard	Standard A	ccessories		Installation and operation manual						
Accessories			F	Paper pattern for installation						
			F	Drain hose						
				Clamp metal						
			 	Washer fixing plate						
			 			Sealing Pads				
			F			Clamps				
			-			Screws				
			-	Screws Washer for hanger bracket						

1-1 TECHNICAL SPECIFICATIONS	FXZQ20MV1B FXZQ25MV1B FXZQ32MV1B FXZQ40MV1B FXZQ50MV1B							
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35 equivalent refrigerant piping : 7.5m (horizontal)							
	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)							
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							

1-2 ELECT	RICAL SPECIFICATIONS		FXZQ20MV1B	FXZQ25MV1B	FXZQ32MV1B	FXZQ40MV1B	FXZQ50MV1B	
Power	Name				V1			
Supply	Phase		1	1	1	1	1	
	Frequency	Hz	50	50	50	50	50	
	Voltage	V			220-240			
Current	Minimum circuit amps (MCA)	Α	0.80	0.80	0.80	0.80	0.90	
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00	15.00	
	Full load amps (FLA)	Α	0.60	0.60	0.60	0.60	0.70	
Voltage range	Minimum	V	-10%					
	Maximum	V	+10%					
Notes			Voltage range : units	are suitable for use on el	ectrical systems where v above listed range limits	oltage supplied to unit te	rminals is not below or	
				Maximum allowable	oltage range variation be	etween phases is 2%.		
				MC	CA/MFA : MCA = 1.25 × I	-LA		
					$MFA \le 4 \times FLA$			
				next lower	standard fuse rating mir	nimum 15A		
			select wire size based on the MCA					
			instead of a fuse, use a circuit breaker					
			For more details concerning conditional connections, see http://extranet. daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.					

2-Way Blow Ceiling Mounted Cassette

1-1 TECHNIC	CAL SPECIF	ICATIONS		FXCQ20MV3B	FXCQ25MV3B	FXCQ32MV3B	FXCQ40MV3B	FXCQ50MV3B		
Nominal	Cooling		kW	2.20	2.80	3.60	4.50	5.60		
Capacity	Heating		kW	2.50	3.20	4.00	5.00	6.30		
Power input	Cooling		kW	0.077	0.092	0.092	0.130	0.130		
(Nominal)	Heating		kW	0.044	0.059	0.059	0.097	0.097		
Casing	Colour				·	Non painted				
	Material					Galvanised steel				
Dimensions	Packing	Height	mm	405	405	405	405	405		
		Width	mm	1,060	1,060	1,060	1,280	1,280		
		Depth	mm	665	665	665	665	665		
	Unit	Height	mm	305	305	305	305	305		
		Width	mm	780	780	780	995	995		
		Depth	mm	600	600	600	600	600		
Weight Unit		•	kg	26	26	26	31	32		
	Packed Unit kg		kg	30	30	30	37	38		
Required Cei	ling Void		mm	350	350	350	350	350		
Heat	Dimensions Length mm			475 × 2	475×2	475×2	690 × 2	475×2		
Exchanger		Nr of Rows	•		•	2×2		•		
		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50		
		Nr of Passes	S		I.	3×2		I.		
		Face Area	m²	0.1 × 2	0.1 × 2	0.1 × 2	0.145 × 2	0.145 × 2		
		Nr of Stages	3		l .	10×2		l .		
		Empty Tube Hole	plate				6			
	Tube type	1.0.0			l	Hi-XSS (7)		l .		
	Fin	Fin type		Symmetric waffle louvre						
		Treatment				Hydrophilic				
Fan	Туре	Trodunoni				Sirocco fan				
ı alı	Quantity			1	1	1	2	2		
Air Flow	Cooling High m³/min		m³/min	7.0	9.0	9.0	12.0	12.0		
Rate	Cooming	Low	m³/min	5.0	6.5	6.5	9.0	9.0		
	Heating	High	m³/min	7.0	9.0	9.0	12.0	12.0		
	riodanig	Low	m³/min	5.0	6.5	6.5	9.0	9.0		
Fan	Motor	Quantity	1117111111	1 1 1 1 1						
r carr	Wiotoi	Steps		Phase cut control						
			W	10 15 15 20 20						
		Output (high)		10	10	10	20	20		
		Drive		Direct drive						
Refrigerant	Name					R-410A				
Sound Level	Cooling	Sound power	dBA	45.0			50.0	50.0		
		(nominal)								
Cooling	Sound	(nominal) High	dBA	33.0	35.0	35.0	35.5	35.5		
Cooling	Sound Pressure	` '	dBA dBA	33.0 28.0	35.0 29.0	35.0 29.0	35.5 30.5	35.5 30.5		
Cooling Heating	Pressure	High	1 1							
		High Low	dBA	28.0	29.0	29.0	30.5	30.5		
Heating	Pressure Sound Pressure	High Low High	dBA dBA	28.0 33.0	29.0 35.0	29.0 35.0	30.5 35.5	30.5 35.5		
	Pressure	High Low High Low	dBA dBA	28.0 33.0	29.0 35.0	29.0 35.0 29.0	30.5 35.5	30.5 35.5		
Heating	Pressure Sound Pressure	High Low High Low Type	dBA dBA dBA	28.0 33.0 28.0	29.0 35.0 29.0	29.0 35.0 29.0 Flare connection	30.5 35.5 30.5	30.5 35.5 30.5		
Heating	Sound Pressure Liquid (OD)	High Low High Low Type Diameter	dBA dBA dBA	28.0 33.0 28.0	29.0 35.0 29.0	29.0 35.0 29.0 Flare connection 6.35	30.5 35.5 30.5	30.5 35.5 30.5		
Heating	Sound Pressure Liquid (OD)	High Low High Low Type Diameter Type	dBA dBA dBA	28.0 33.0 28.0 6.35	29.0 35.0 29.0	29.0 35.0 29.0 Flare connection 6.35 Flare connection	30.5 35.5 30.5 6.35	30.5 35.5 30.5 6.35		
Heating	Pressure Sound Pressure Liquid (OD) Gas	High Low High Low Type Diameter Type Diameter Diameter Diameter	dBA dBA dBA mm	28.0 33.0 28.0 6.35	29.0 35.0 29.0 6.35	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7	30.5 35.5 30.5 6.35	30.5 35.5 30.5 6.35		
Heating Piping connections Decoration	Pressure Sound Pressure Liquid (OD) Gas Drain	High Low High Low Type Diameter Type Diameter Diameter Diameter	dBA dBA dBA mm	28.0 33.0 28.0 6.35	29.0 35.0 29.0 6.35	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32	30.5 35.5 30.5 6.35	30.5 35.5 30.5 6.35		
Heating Piping connections	Pressure Sound Pressure Liquid (OD) Gas Drain Heat Insula	High Low High Low Type Diameter Type Diameter Diameter Diameter	dBA dBA dBA mm	28.0 33.0 28.0 6.35	29.0 35.0 29.0 6.35	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32 Both liquid and gas pipes BYBC32GJW1	30.5 35.5 30.5 6.35	30.5 35.5 30.5 6.35		
Heating Piping connections Decoration	Pressure Sound Pressure Liquid (OD) Gas Drain Heat Insula Model Colour	High Low High Low Type Diameter Type Diameter Diameter Diameter Diameter	dBA dBA dBA mm	28.0 33.0 28.0 6.35	29.0 35.0 29.0 6.35	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32 Both liquid and gas pipes	30.5 35.5 30.5 6.35	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1		
Heating Piping connections Decoration	Pressure Sound Pressure Liquid (OD) Gas Drain Heat Insula Model	High Low High Low Type Diameter Type Diameter Diameter Diameter Height	dBA dBA dBA mm mm mm	28.0 33.0 28.0 6.35 12.7 32 BYBC32GJW1	29.0 35.0 29.0 6.35 12.7 32	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32 Both liquid and gas pipes BYBC32GJW1 White (10Y9/0,5) 53	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1		
Heating Piping connections Decoration	Pressure Sound Pressure Liquid (OD) Gas Drain Heat Insula Model Colour	High Low High Low Type Diameter Type Diameter Diameter Diameter Unimeter Diameter Unimeter	dBA dBA dBA mm	28.0 33.0 28.0 6.35 12.7 32 BYBC32GJW1	29.0 35.0 29.0 6.35 12.7 32 BYBC32GJW1	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32 Both liquid and gas pipes BYBC32GJW1 White (10Y9/0,5)	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1		
Heating Piping connections Decoration	Pressure Sound Pressure Liquid (OD) Gas Drain Heat Insula Model Colour	High Low High Low Type Diameter Type Diameter Diameter Diameter Height	dBA dBA dBA mm mm mm	28.0 33.0 28.0 6.35 12.7 32 BYBC32GJW1	29.0 35.0 29.0 6.35 12.7 32 BYBC32GJW1 53 1,030	29.0 35.0 29.0 Flare connection 6.35 Flare connection 12.7 32 Both liquid and gas pipes BYBC32GJW1 White (10Y9/0,5) 53 1,030	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1	30.5 35.5 30.5 6.35 12.7 32 BYBC50GJW1		

2-Way Blow Ceiling Mounted Cassette

1-1 TECHNIC	CAL SPECIFICATIONS	FXCQ20MV3B	FXCQ25MV3B	FXCQ32MV3B	FXCQ40MV3B	FXCQ50MV3B			
Air Filter			Re	sin net with mold resista	nce				
Air direction of	control		Up and downwards						
Refrigerant co	ontrol		E	Electronic expansion valv	re				
Temperature	control		Microproces	sor thermostat for cooling	g and heating				
Safety device	S			PC board fuse					
				Fan motor thermal fuse					
				Drain pump fuse					
Standard	Standard Accessories		Screws for f	xing the paper pattern for	or installation				
Accessories	Quantity	4	4	4	4				
	Standard Accessories	Washer for hanging bracket							
	Quantity	8	8	8					
-	Standard Accessories	Clamps							
	Quantity	1 1 1 1 1							
	Standard Accessories	Installation and operation manual							
	Quantity	1	1	1	1	1			
	Standard Accessories		P	aper pattern for installation	on	•			
	Quantity	1	1	1	1	1			
	Standard Accessories		•	Insulation for fitting	•	•			
	Quantity	2	2	2	2	2			
	Standard Accessories		•	Drain hose	•	•			
	Quantity	1	1	1	1	1			
Notes		Nominal cooling cap	Nominal cooling capacities are based on: indoor temperature: 27°CDB, 19°CWB, outdoor temperature: 35°CDB, equivalent refrigerant piping: 8m, level difference: 0m.						
		Nominal heating ca	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.						
		Capacities are	net, including a deduction	on for cooling (an addition	n for heating) for indoor f	an motor heat.			

1-1 TECHNIC	AL SPECIFI	CATIONS		FXCQ63MV3B	FXCQ80MV3B	FXCQ125MV3B		
Nominal	Cooling		kW	7.10	9.00	14.00		
Capacity	Heating		kW	8.00	10.00	16.00		
Power input	Cooling		kW	0.161	0.209	0.256		
(Nominal)	Heating		kW	0.126	0.176	0.223		
Casing	Colour				Non painted			
J	Material				Galvanised steel			
Dimensions	Packing	Height	mm	405	405	405		
		Width	mm	1,460	1,808	1,808		
		Depth	mm	665	645	645		
	Unit	Height	mm	305	305	305		
		Width	mm	1,180	1,670	1,670		
		Depth	mm	600	600	600		
Weight	Unit		kg	35	47	48		
3	Packed Uni	ŧ	kg	42	55	56		
Required Ce			mm	350	350	350		
Heat	Dimensions	Length	mm	875×2	1,365	1,365		
Exchanger		Nr of Rows			2×2	1,555		
		Fin Pitch	mm	1.50	1.50	1.50		
		Nr of Passes		6×2	5×2	6		
		Face Area	m ²	0.184×2	0.287 × 2	0.287×2		
		Nr of Stages		0.101 A E	10×2	0.237 \ 2		
		Empty Tubeplate			8	T		
	<u></u>	Hole						
	Tube type				Hi-XSS (7)			
	Fin	Fin type			Symmetric waffle louvre			
		Treatment			Hydrophilic			
Fan	Туре			Sirocco fan				
	Quantily			2	3	3		
Air Flow	Cooling	High	m³/min	16.5	26.0	33.0		
Rate		Low	m³/min	13.0	21.0	25.0		
	Heating	High	m³/min	16.5	26.0	33.0		
	J	Low	m³/min	13.0	21.0	25.0		
Fan	Motor	Quantity		1	1	1		
		Steps			Phase cut control			
		Output	W	30	50	85		
		(high)						
		Drive			Direct drive			
Refrigerant	Name				R-410A			
Sound Level	Cooling	Sound power (nominal)	dBA	52.0	54.0	60.0		
Cooling	Sound	High	dBA	38.0	40.0	45.0		
J	Pressure	Low	dBA	33.0	35.0	39.0		
Heating	Sound	High	dBA	38.0	40.0	45.0		
3	Pressure	Low	dBA	33.0	35.0	39.0		
Piping	Liquid	Туре	 		Flare connection			
connections	(OD)	Diameter	mm	9.5	9.5	9.5		
	Gas	Туре			Flare connection	1 3.0		
		Diameter	mm	15.9	15.9	15.9		
	Drain	Diameter	mm	32	32	32		
	Heat Insulat			<u> </u>	Both liquid and gas pipes	<u> </u>		
Decoration	Model		-	BYBC63GJW1	BYBC125GJW1	BYBC125GJW1		
Panel	Colour		+	DIDOCCUVVI	White (10Y9/0,5)	D10012000W1		
		Hoight	mm	53	53	53		
	Dimensions	Height Width	mm	1,430	1,920	1,920		
			mm	1,430		·		
	\Maia-+	Depth	mm		680	680		
D	Weight		kg	9.5	12.0	12.0		
Drain-up Heig	ınt		mm	600	600	600		

1-1 TECHNIC	CAL SPECIFICATIONS	FXCQ63MV3B	FXCQ80MV3B	FXCQ125MV3B				
Air Filter			Resin net with mold resistance					
Air direction of	control		Up and downwards					
Refrigerant co	ontrol		Electronic expansion valve					
Temperature	control	Micr	oprocessor thermostat for cooling and he	ating				
Safety device	es .		PC board fuse					
		Fan motor thermal fuse	Fan motor thermal protector	Fan motor thermal protector				
			Drain pump fuse					
Standard	Standard Accessories	Scre	Screws for fixing the paper pattern for installation					
Accessories	Quantity	4	4	4				
	Standard Accessories	Washer for hanging bracket						
<u> </u>	Quantity	8	8 8					
	Standard Accessories	Clamps						
	Quantity	1	1 1 1					
	Standard Accessories		Installation and operation manual					
	Quantity	1	1	1				
	Standard Accessories		Paper pattern for installation					
	Quantity	1	1	1				
	Standard Accessories		Insulation for fitting					
	Quantity	2	2	2				
	Standard Accessories		Drain hose					
	Quantity	1	1	1				
Notes		Nominal cooling capacities are base equiva	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 8m, level difference : 0m.					
		Nominal heating capacities are base equiva	Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 8m, level difference : 0m.					
		Capacities are net, including a	deduction for cooling (an addition for hea	ating) for indoor fan motor heat.				

1-2 ELECT	RICAL SPECIFICATIONS		FXCQ20MV3B	FXCQ25MV3B	FXCQ32MV3B	FXCQ40MV3B	FXCQ50MV3B		
Power	Name				V3				
Supply	Phase		1	1	1	1	1		
	Frequency	Hz	50	50	50	50	50		
	Voltage	V	230	230	230	230	230		
Current	Minimum circuit amps (MCA)	Α	0.50	0.50	0.50	0.80	0.80		
	Maximum fuse amps (MFA)	Α	16.00	16.00	16.00	16.00	16.00		
	Full load amps (FLA)	Α	0.40	0.40	0.40	0.60	0.60		
	Minimum	V	-10%						
range	Maximum	V	+10%						
Power Sup	ply Intake		Both indoor and outdoor unit						
Notes			Voltage range: units a	are suitable for use on ele	ectrical systems where vo above listed range limits	oltage supplied to unit te	rminals is not below or		
				Maximum allowable v	oltage range variation be	etween phases is 2%.			
				MC	CA/MFA : MCA = 1.25 × I	-LA			
					MFA <= 4 × FLA				
			select wire size based on the MCA						
			instead of a fuse, use a circuit breaker						
			For more details con	For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally click on the document title of your choice.					

1-2 ELECT	RICAL SPECIFICATIONS		FXCQ63MV3B	FXCQ80MV3B	FXCQ125MV3B			
Power	Name			V3				
Supply	Phase		1	1	1			
	Frequency	Hz	50	50	50			
	Voltage	V	230	230	230			
Current	Minimum circuit amps (MCA)	Α	0.90	1.10	1.30			
	Maximum fuse amps (MFA)	Α	16.00	16.00	16.00			
\	Full load amps (FLA)	Α	0.70	0.90	1.00			
Voltage	Minimum	V	-10%					
range	Maximum	V	+10%					
Power Sup	ply Intake		Both indoor and outdoor unit					
Notes			Voltage range : units are suitable fo	r use on electrical systems where voltage su above listed range limits.	pplied to unit terminals is not below or			
			Maximum	allowable voltage range variation between pl	hases is 2%.			
				MCA/MFA : MCA = $1.25 \times FLA$				
				$MFA \le 4 \times FLA$				
			select wire size based on the MCA					
			instead of a fuse, use a circuit breaker					
			For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally click on the document title of your choice.					

Ceiling Mounted Corner Cassette

1-1 TECHNIC	AL SPECIFI	CATIONS		FXKQ25MAVE	FXKQ32MAVE	FXKQ40MAVE	FXKQ63MAVE		
Nominal Consoit	Cooling		kW	2.80	3.60	4.50	7.10		
Capacity	Heating		kW	3.20	4.00	5.00	8.00		
Power input	Cooling		kW	0.066	0.066	0.076	0.105		
(Nominal)	Heating		kW	0.046	0.046	0.056	0.085		
Casing	Material	erial Galvanised steel							
Dimensions	Unit	Height	mm	215	215	215	215		
		Width	mm	1,110	1,110	1,110	1,310		
		Depth	mm	710	710	710	710		
Weight	Unit kg			31	31	31	34		
Heat	Dimensions	Nr of Rows	19	2	2	2	3		
Exchanger	Birrioriolorio	Fin Pitch mm		1.75	1.75	1.75	1.75		
		Face Area	m²	0.180	0.180	0.180	0.226		
	Nr of Stages			11	11	11	11		
Fan	Tuno	TVI OI Stages	'			co fan	- 11		
rali	Type			4			4		
Air Flatt	Quantity	Lliada	ma3/m-!	1 11 00	1 11.00	12.00	1 19.00		
Air Flow Rate	Cooling	High	m³/min	11.00	11.00	13.00	18.00		
	14.1	Low	m³/min	9.00	9.00	10.00	15.00		
Fan	Motor	Quantity		1	1	1	1		
	<u>_</u>	Model		3D12H1AN1V1	3D12H1AN1V1	3D12H1AP1V1	4D12H1AJ1V1		
		Output (high)	W	15	15	20	45		
		Drive		Direct drive					
Refrigerant	Name			R-410A					
Cooling	Sound Pressure	High	dBA	38.0	38.0	40.0	42.0		
	riessuie	Low	dBA	33.0	33.0	34.0	37.0		
Piping connections	Liquid (OD)	Type			Flare co	nnection			
connections	(OD)	Diameter	mm	6.4	6.4	6.4	9.5		
•	Gas	Туре			Flare co	nnection			
		Diameter	mm	12.7	12.7	12.7	15.9		
	Drain	Diameter	mm	32	32	32	32		
	Heat Insulat	tion			Foamed Po	olyethylene			
Decoration	Model			BYK45FJW1 BYK45FJW1 BYK71FJW1					
Panel	Colour			White					
	Dimensions	Height	mm	70	70	70	70		
		Width	mm	1,240	1,240	1,240	1,440		
		Depth	mm	800	800	800	800		
	Weight		kg	8.5	8.5	8.5	9.5		
Air Filter				-		mold resistance			
Refrigerant co	ontrol				Electronic ex				
Temperature					Microprocessor thermost				
Safety device						ard fuse			
	-		F			imp fuse			
			F	Fan motor t	hermal fuse	•	rmal protector		
Standard	Standard Ad	coecorios		i aii iii0l0i l		pperation manual	ina protector		
Accessories	Jiai luai u Al	00000011CD	-		Metal clamp t				
			F		•				
			-			mps			
			-	Insulation for hangar bracket Positioning Jig for Installation					
			<u> </u>						
			<u> </u>			for installation			
			<u> </u>			hose			
			<u> </u>	Insulation for fitting					
			<u> </u>			g Pads			
			Screws						
		Washer							
					Air Outlet b				

1-1 TECHNICAL SPECIFICATIONS	FXKQ25MAVE	FXKQ32MAVE	FXKQ40MAVE	FXKQ63MAVE			
Notes	Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)						
	Nominal heating capacities are based on: indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)						
	Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.						
	Sound pressure levels are measured at 220V						

1-2 ELECT	RICAL SPECIFICATIONS		FXKQ25MAVE	FXKQ32MAVE	FXKQ40MAVE	FXKQ63MAVE		
Power	Name			V	E	•		
Supply	Phase		1	1	1	1		
	Frequency Hz		50	50	50	50		
	Voltage	V		220-240				
Current	Minimum circuit amps (MCA)	Α	0.30	0.30	0.30	0.50		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	0.20	0.20	0.20	0.40		
Voltage	Minimum V			-10	0%			
range	Maximum	٧	+10%					
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.					
			Ma	aximum allowable voltage range	e variation between phases is 2	2%.		
				MCA/MFA : MC	CA = 1.25 × FLA			
				MFA <=	4×FLA			
				next lower standard fu	se rating minimum 15A			
			select wire size based on the MCA					
			instead of a fuse, use a circuit breaker					
			For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.					

Slim Concealed Ceiling Unit (with Drain Pump)

1-1 TECHNIC	AL SPECIFI	CATIONS		FXDQ20PVE	FXDQ25PVE	FXDQ32PVE	FXDQ40NAVE	FXDQ50NAVE	FXDQ63NAVE	
Nominal	Cooling		kW	2.20	2.80	3.60	4.50	5.60	7.10	
Capacity	Heating		kW	2.50	3.20	4.00	5.00	6.30	8.00	
Power input	Cooling		kW	0.086	0.086	0.089	0.160	0.165	0.181	
(Nominal)	Heating		kW	0.067	0.067	0.070	0.147	0.152	0.168	
Casing	Material			0.007	0.007		d steel plate	0.102	0.100	
Dimensions	Unit	Height	mm	200	200	200	200	200	200	
Dirierisions	Offic	Width	mm	700	700	700	900	900	1,100	
		Depth	mm	620	620	620	620	620	620	
Weight	Unit	Берит	kg	23.0	23.0	23.0	27.0	28.0	31.0	
Heat	Dimensions	Nr of Rows	ĸg	2	2	3	3	3	3	
Exchanger	Difficiolorio	Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50	1.50	
		Face Area	m²	0.126	0.126	0.126	0.176	0.176	0.227	
				12	12	12	12	12	12	
	Nr of Stages Fin Fin type		12	12		fin coil	12	12		
Fan	Type	тптуре					co fan			
ган	Quantity			1	1	1	1	1	1	
Air Flow	Cooling	High	m³/min	8.0	8.0	8.0	10.50	12.50	16.50	
Rate	_	Low	m³/min	6.4	6.4	6.4	8.50	12.50	13.00	
Fan	External	High	Pa	30	30	30	44	10.00	44	
Ган	static	Standard	Pa	10	10	10	15	15	15	
	pressure									
	Motor	Output (high)	W	62	62	62	62	130	130	
		Drive		Direct drive						
Refrigerant	Name	Dilve					10A			
Cooling	Sound	High	dBA	33.0	33.0	33.0	34.0	35.0	36.0	
Cooming	Pressure	Low	dBA	29.0	29.0	29.0	30.0	31.0	32.0	
Dining	Liquid	Type	abr	20.0	25.0		onnection	01.0	0L.0	
Piping I connections ((OD)	Diameter	mm	6.4	6.4	6.4	6.4	6.4	9.5	
	Gas	Type	111111	0.4	0.4	_	onnection	0.4	9.5	
	Cas	Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9	
	Drain	Diameter	mm	12.7	12.7		20/O.D. 26)	12.7	10.9	
Air Filter	Dialii	Diameter	111111			,	able/Mildew proof			
Refrigerant co	ontrol						pansion valve			
Temperature					Micr		at for cooling and he	ating		
Safety device					IVIIOI	•	use	atting		
Jaioty device	~						ermal protector			
Standard	Standard Ad	ccessories					operation manual			
Accessories							h hose			
							g Pads			
							mps			
							sher			
							n for fitting			
							o metal			
						•	ixing plate			
							duct flanges			
							filter			
Notes				Nominal cooling	capacities are base	d on · indoor temper	ature · 27°CDB 10°C	CWB, outdoor tempe tal)	rature : 35°CDB,	
				equivalent refrigerant piping : 7.5m (horizontal) Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)						
				Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.						
				External static pressure can be changed by the remote control.						
				The operation sound levels are conversion values in anechoic chamber. In practice, sound levels tend to be higher than the specified values due to ambient noise or reflection. When the suction place is changed to bottom suction, sound level will increase by approximately 5dBA.						

Slim Concealed Ceiling Unit (with Drain Pump)

1-2 ELECT	TRICAL SPECIFICATIONS		FXDQ20PVE	FXDQ25PVE	FXDQ32PVE	FXDQ40NAVE	FXDQ50NAVE	FXDQ63NAVE		
Power	Name		VE							
Supply	Phase		1	1	1	1	1	1		
	Frequency	Hz	50	50	50	50	50	50		
	Voltage	V			220	-240				
Current	Minimum circuit amps (MCA)	Α	0.80	0.80	0.80	1.00	1.00	1.10		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	0.60	0.60	0.60	0.80	0.80	0.90		
Voltage	Minimum	V	-10%							
range	Maximum	V			+1	0%				
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.							
			Maximum allowable voltage range variation between phases is 2%.							
			MCA/MFA: MCA = 1.25 × FLA							
					MFA <=	4×FLA				
				ne	ext lower standard fu	se rating minimum 1	5A			
			select wire size based on the MCA							
					instead of a fuse, u	se a circuit breaker				
			For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.							

Concealed Ceiling Unit (Small)

1-1 TECHNIC	AL SPECIFI	CATIONS		FXDQ20MV3B	FXDQ25MV3B			
Nominal	Cooling		kW	2.20	2.80			
Capacity	Heating		kW	2.50	3.20			
Power input (Nominal)	Cooling		kW	0.050	0.050			
(Nominal)	Heating		kW	0.050	0.050			
Casing	Colour			Non p	ainted			
	Material			Galvanis	sed steel			
Dimensions	Packing	Height	mm	301	301			
		Width	mm	584	584			
		Depth	mm	753	753			
	Unit	Height	mm	230	230			
		Width	mm	502	502			
		Depth	mm	652	652			
Weight	Unit		kg	17	17			
	Packed unit		kg	18	18			
Required Ceil	ing Void		mm	250	250			
Heat	Dimensions	Length	mm	430	430			
Exchanger		Nr of Rows		2	2			
		Fin Pitch	mm	1.40	1.40			
		Nr of Passe	S	2	2			
		Face Area	m²	0.108	0.108			
		Nr of Stages		12	12			
		Empty Tube Hole	plate	4	4			
	Tube type	I		Hi-XS	SS (7)			
	Fin type			Symmetric v	waffle louvre			
		Treatment		Hydro	philic			
Fan	Туре			Siroco	co fan			
	Quantity			1 1				
Air Flow	Cooling	High	m³/min	6.70	7.40			
Rate		Low	m³/min	5.20	5.80			
	Heating	High	m³/min	6.70	7.40			
		Low	m³/min	5.20	5.80			
Fan	Motor	Quantity		1	1			
		Steps		step ı	motor			
		Output (high)	W	10	10			
		Drive		Direct	t drive			
Refrigerant	Name			R-4	10A			
Sound Level	Cooling	Sound power (nominal)	dBA	50.0	50.0			
Cooling	Sound	High	dBA	37.0	37.0			
-	Pressure	Low	dBA	32.0	32.0			
Heating	Sound Pressure	High	dBA	37.0	37.0			
-	Pressure	Low	dBA	32.0	32.0			
Piping connections	Liquid (OD)	Туре		Flare co	nnection			
connections	(OD)	Diameter	mm	6.4	6.4			
	Gas	Туре		Flare co	nnection			
		Diameter	mm	12.7	12.7			
	Drain	Diameter	mm	27.2	27.2			
Air Filter		•		Resin net with r	mold resistance			
Air direction o	ontrol			Up and do	ownwards			
Refrigerant co				Electronic exp	pansion valve			
Temperature				Microprocessor thermost				
Safety device					ard fuse			
			-	Fan motor the				

1-1 TECHNIC	CAL SPECIFICATIONS	FXDQ20MV3B	FXDQ25MV3B			
Standard _.	Standard Accessories	Installation and operation manual				
Accessories		Fu	se			
		Caution for se	ervicing sticker			
		Suction air filter				
Notes		Nominal cooling capacities are based on : indoor tempera equivalent refrigerant piping	ature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, g : 8m, level difference : 0m.			
		Nominal heating capacities are based on : indoor tempe equivalent refrigerant piping	rature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, g : 8m, level difference : 0m.			
		Capacities are net, including a deduction for cooling	g (an addition for heating) for indoor fan motor heat.			

1-2 ELECT	RICAL SPECIFICATIONS		FXDQ20MV3B	FXDQ25MV3B			
Power	Name		٧	/1			
Supply	Phase		1	1			
	Frequency	Hz	50	50			
	Voltage	V	230	230			
Current	Minimum circuit amps (MCA)	Α	0.20	0.20			
	Maximum fuse amps (MFA)	Α	16.00	16.00			
	Full load amps (FLA)	Α	0.10	0.10			
Voltage	Minimum	V	-10%				
range	Maximum	V	+10%				
Power Sup	ply Intake		Both indoor and outdoor unit				
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.				
			Maximum allowable voltage range variation between phases is 2%.				
			MCA/MFA : MC	CA = 1.25 × FLA			
			MFA < 4 × FLA				
			next lower standard fu	se rating minimum 16A			
			select wire size b	ased on the MCA			
			instead of a fuse, use a circuit breaker				
			For more details concerning conditional connections, see Finally, click on the docu	http://extranet.daikineurope.com, select "E-Data Books". Iment title of your choice.			

Concealed Ceiling Unit

1-1 TECHNIC	INICAL SPECIFICATIONS			FXSQ20MV3B	FXSQ25MV3B	FXSQ32MV3B	FXSQ40MV3B	FXSQ50MV3B		
Capacity	Cooling		kW	2.20	2.80	3.60	4.50	5.60		
Conditions specified in 1)	Heating		kW	2.50	3.20	4.00	5.00	6.30		
Power input	Cooling		kW	0.110	0.110	0.114	0.127	0.143		
(Nominal)	Heating		kW	0.090	0.090	0.094	0.107	0.123		
Casing	Colour		1	Non painted						
Ü	Material					Galvanised steel				
Dimensions	Packing	Height	mm	354	354	354	354	354		
		Width	mm	742	742	742	892	892		
		Depth	mm	936	936	936	936	936		
	Unit	Height	mm	300	300	300	300	300		
		Width	mm	550	550	550	700	700		
		Depth	mm	800	800	800	800	800		
Veight	Unit		kg	30	30	30	30	31		
	Packed Un	it	kg	34	34	34	34	35		
Required Cei	ling Void		mm	350	350	350	350	350		
leat	Dimensions	Length	mm	300	300	300	450	450		
Exchanger		Nr of Rows	•	3	3	3	3	3		
		Fin Pitch	mm	1.75	1.75	1.75	1.75	1.75		
		Nr of Passe	s	3	3	3	4	4		
		Face Area	m²	0.088	0.088	0.088	0.132	0.132		
		Nr of Stages	5	14	14	14	14	14		
		Empty Tube			l	14		I		
		Hole '								
	Tube type					Hi-XSS (7)				
	Fin type					Symmetric waffle louvre	!			
	Treatment					Hydrophilic				
- an	Type			Sirocco fan						
	Quantity			1	1	1	1	1		
Air Flow Rate	Cooling	High	m³/min	9.00	9.00	9.50	11.50	15.00		
iaic		Low	m³/min	6.50	6.50	7.00	9.00	11.00		
	Heating	High	m³/min	9.00	9.00	9.50	11.50	15.00		
		Low	m³/min	6.50	6.50	7.00	9.00	11.00		
-an	External static	High	Pa	125	125	104	116	136		
	pressure	Standard	Pa	105	105	88	98	114		
		Low	Pa	96	96	78	85	99		
	Motor	Quantity		1	1	1	1	1		
		Model		D18H3AA1V1	D18H3AA1V1	D18H3AA1V1	D18H2AC1V1	D18H2AB1V1		
		Steps				step motor				
		Output (high)	W	50	50	50	65	85		
		Drive	1			Direct drive				
Refrigerant	Name	Dilve				R-410A				
Sound Level	Cooling	Sound	dBA	50.0	50.0	51.0	56.0	58.0		
Souria Levei	Cooling	power (nominal)	UDA	30.0	30.0	31.0	30.0	30.0		
Cooling	Sound	High	dBA	32.0	32.0	33.0	33.0	35.0		
3	Sound Pressure	Low	dBA	28.0	28.0	28.0	29.0	31.0		
Heating	Sound	High	dBA	32.0	32.0	33.0	33.0	35.0		
3	Pressure	Low	dBA	28.0	28.0	28.0	29.0	31.0		
Piping	Liquid	Туре	1	2.2	1	Flare connection	1	1		
Piping connections	Liquid (OD)	Diameter	mm	6.35	6.35	6.35	6.35	6.35		
	Gas	Туре	1		1.00	Flare connection	1.00	0.00		
	300	Diameter	mm	12.7	12.7	12.7	12.7	12.7		
	i		_		32	32		32		
	Drain	Drain Diameter mm Heat Insulation		32	352	32	32	:32		

Concealed Ceiling Unit

1-1 TECHNIC	CAL SPECIFIC	CATIONS		FXSQ20MV3B	FXSQ25MV3B	FXSQ32MV3B	FXSQ40MV3B	FXSQ50MV3B		
Decoration	Model			BYBS32DJW1	BYBS32DJW1	BYBS32DJW1	BYBS45DJW1	BYBS45DJW1		
Panel	Colour				•	White (10Y9/0,5)	•	•		
	Dimensions	Height	mm	55	55	55	55	55		
		Width	mm	650	650	650	800	800		
		Depth	mm	500	500	500	500	500		
	Weight		kg	3	3	3	3.5	3.5		
Drain-up Hei	ght		mm	600	600	600	600	600		
Air Filter			•	Resin net with mold resistance						
Air direction o	control			Up and downwards						
Refrigerant c	ontrol					Electronic expansion valv	/e			
Temperature	control				Microproces	sor thermostat for cooling	g and heating			
Safety device	es					PC board fuse				
						Drain pump fuse				
					Fan motor thermal fuse					
Standard	Standard Ad	ccessories				Metal clamp for drain hos	np for drain hose			
Accessories	S Quantity			1	1	1	1	1		
	Standard Ad	ccessories		Paper pattern for installation						
	Quantity			1	1	1	1	1		
	Standard Ad	ccessories				Drain hose		.1		
	Quantity			1	1	1	1	1		
	Standard Ad	ccessories			•	Insulation for fitting				
	Quantity			2	2	2	2	2		
	Standard Ad	ccessories			,	Washer for hanger brack	et			
	Quantity			8	8	8	8	8		
	Standard Ad	ccessories				Screws for duct flanges				
	Quantity			6	6	6	8	8		
	Standard Ad	ccessories			Screws for	fixing the paper pattern for	or installation			
	Quantity			6	6	6	6	6		
	Standard Ad	ccessories				Fuse				
					Inst	allation and operation ma	anual			
	Quantity			1	1	1	1	1		
Notes				Nominal cooling cap	pacities are based on : in equivalent refr	door temperature : 27°C igerant piping : 8m, level	DB, 19°CWB, outdoor te difference : 0m.	mperature : 35°CDB,		
				Nominal heating ca	apacities are based on : equivalent refr	indoor temperature : 20°0 igerant piping : 8m, level	CDB, outdoor temperatur difference : 0m.	re: 7°CDB, 6°CWB,		
				The external static p	oressure is changeable : High static	change the connectors in pressure-standard-low st	nside the electrical box, t atic pressure	his pressure means :		
				The external static p		change the connectors in igh static pressure-stand		his pressure means :		
				Capacities are	e net, including a deducti	on for cooling (an additio	n for heating) for indoor	fan motor heat.		
				T	he sound pressure value	s are mentioned for a un	it installed with rear sucti	ion		

Concealed Ceiling Unit

1-1 TECHNIC	AL SPECIFICATIONS			FXSQ63MV3B	FXSQ80MV3B	FXSQ100MV3B	FXSQ125MV3B		
Capacity	Cooling		kW	7.10	9.00	11.20	14.00		
(Conditions specified in 1)	Heating		kW	8.00	10.00	12.50	16.00		
Power input (Nominal)	Cooling		kW	0.189	0.234	0.242	0.321		
(Nominal)	Heating		kW	0.169	0.214	0.222	0.301		
Casing	Colour				Non p	painted			
	Material				Galvani	sed steel			
Dimensions	Packing	Height	mm	354	356	356	356		
		Width	mm	1,192	1,596	1,596	1,596		
		Depth	mm	936	938	938	938		
	Unit	Height	mm	300	300	300	300		
		Width	mm	1,000	1,400	1,400	1,400		
		Depth	mm	800	800	800	800		
Veight	Unit	.4	kg	41	51	51	52		
	Packed Un	it	kg	47	58	58	59		
Required Ceil	ing Void		mm	350	350	350	350		
Heat	Dimensions	Length	mm	750	1,150	1,150	1,150		
Exchanger		Nr of Rows	1	3	3	3	3		
		Fin Pitch mm		1.75	1.75	1.75	1.75		
	Nr of Passes		7	10	10	10			
		Face Area	m²	0.221	0.338	0.338	0.338		
		Nr of Stages	3	14	14	14	14		
	Tube type	1			Hi-XS				
	Fin Fin type					waffle louvre			
	Treatment				•	ophilic			
-an	Туре					co fan			
	Quantity			2 3 3 3					
Air Flow	Cooling	· · · · · · · · · · · · · · · · · · ·		21.00	27.00	28.00	38.00		
Rate		Low	m³/min	15.50	20.00	20.50	28.00		
	Heating	High	m³/min	21.00	27.00	28.00	38.00		
		Low	m³/min	15.50	20.00	20.50	28.00		
-an	External	High	Pa	123	141	141	109		
	static	Standard	Pa	111	125	125	93		
	pressure	Low	Pa)8			
	Motor	Quantity	1	1	1	1	1		
		Model		2D18H2AB1V1	3D18H2AH1V1	3D18H2AH1V1	3D18H2AG1V1		
		Steps				motor			
		Output (high)	W	125	135	135	225		
		Drive		Direct drive					
Refrigerant	Name					10A			
Sound Level	Cooling	Sound power (nominal)	dBA	56.0	55.0	56.0	65.0		
Cooling	Sound	High	dBA	35.0	37.0	38.0	40.0		
-	Pressure	Low	dBA	30.0	31.0	33.0	35.0		
Heating	Sound	High	dBA	35.0	37.0	38.0	40.0		
3	Pressure	Low	dBA	30.0	31.0	33.0	35.0		
Piping	Liquid	Туре	1			nnection			
Piping connections	Liquid (OD)	Diameter	mm	9.5	9.5	9.5	9.5		
	Gas	Туре	1 1			nnection			
		Diameter	mm	15.9	15.9	15.9	15.9		
	Drain	Diameter	1						
	Drain Diameter mm Heat Insulation			32 32 32 32					

1-1 TECHNIC	CAL SPECIFIC	CATIONS		FXSQ63MV3B	FXSQ80MV3B	FXSQ100MV3B	FXSQ125MV3B			
Decoration	Model			BYBS71DJW1	BYBS125DJW1	BYBS125DJW1	BYBS125DJW1			
Panel	Colour				White (1	0Y9/0,5)				
	Dimensions	Height	mm	55	55	55	55			
		Width	mm	1,100	1,500	1,500	1,500			
		Depth	mm	500	500	500	500			
	Weight		kg	4.5	6.5	6.5	6.5			
Drain-up Heig	ght		mm	600	600	600	600			
Air Filter				Resin net with mold resistance						
Air direction of	control			Up and downwards						
Refrigerant o	ontrol				Electronic ex	pansion valve				
Temperature	control				Microprocessor thermost	at for cooling and heating				
Safety device	s				PC box	ard fuse				
					Drain pu	ımp fuse				
				Fan motor thermal fuse	Fan motor thermal protector	Fan motor thermal protector	Fan motor thermal protector			
Standard	Standard Ad	cessories			Metal clamp	for drain hose				
Accessories	Quantity		1	1	1	1				
	Standard Ad	cessories			Paper pattern	for installation				
	Quantity			1	1	1	1			
	Standard Accessories				Drain	hose				
	Quantity			1	1	1	1			
	Standard Ad	cessories			Insulation	r fitting				
	Quantity			2 2 2			2			
	Standard Ad	cessories			Washer for h	anger bracket				
	Quantity	Quantity		8	8	8	8			
	Standard Ad	cessories			Screws for	duct flanges				
	Quantity			12	16	16	16			
	Standard Ad	cessories			Screws for fixing the par	per pattern for installation				
	Quantity			6	6	6	6			
	Standard Ad	ocessories			Fi	ise .				
					Installation and	pperation manual				
	Quantity			1	1	1	1			
Notes				Nominal cooling capacitie	es are based on : indoor temper equivalent refrigerant piping	ature : 27°CDB, 19°CWB, outd g : 8m, level difference : 0m.	oor temperature : 35°CDB,			
				Nominal heating capacities a	are based on : indoor temperatur equivalent refrigerant pipin	e : 20°CDB,19°CWB, outdoor to g : 8m, level difference : 0m.	emperature: 7°CDB, 6°CWB,			
				The external static pressu	ure is changeable : change the o High static pressure - star	connectors inside the electrical ndard - low static pressure	box, this pressure means :			
				The external static pressu	ure is changeable : change the o High static pres	connectors inside the electrical ssure - standard	box, this pressure means :			
				Capacities are net,	including a deduction for cooling	g (an addition for heating) for ir	ndoor fan motor heat.			
				The so	und pressure values are mentio	ned for a unit installed with rea	r suction			

1-2 ELECT	TRICAL SPECIFICATIONS		FXSQ20MV3B	FXSQ25MV3B	FXSQ32MV3B	FXSQ40MV3B	FXSQ50MV3B		
Power	Name			•	V3	•	•		
Supply	Phase		1	1	1	1	1		
	Frequency	Hz	50	50	50	50	50		
	Voltage	V	230	230	230	230	230		
Current	Minimum circuit amps (MCA)	Α	0.50	0.50	0.50	0.60	0.90		
	Maximum fuse amps (MFA)	Α	16.00	16.00	16.00	16.00	16.00		
	Full load amps (FLA)	Α	0.40	0.40	0.40	0.50	0.70		
Voltage	Minimum	V	-10%						
range	Maximum	V	+10%						
Notes	•		Voltage range: units a	are suitable for use on ele	ectrical systems where v above listed range limits	oltage supplied to unit te	rminals is not below or		
			Maximum allowable voltage range variation between phases is 2%						
				MC	CA/MFA : MCA = 1.25 ×	FLA			
					$MFA < 4 \times FLA$				
				next lower	standard fuse rating mi	nimum 16A			
			select wire size based on the MCA						
				instead	d of a fuse, use a circuit	breaker			
			For more details co	ncerning conditional con Finally, click	nections, see http://extra on the document title of	net.daikineurope.com, se your choice.	elect"E-Data Books".		

1-2 ELECT	TRICAL SPECIFICATIONS		FXSQ63MV3B	FXSQ80MV3B	FXSQ100MV3B	FXSQ125MV3B			
Power	Name			\	/3				
Supply	Phase		1	1	1	1			
	Frequency	Hz	50	50	50	50			
	Voltage	V	230	230	230	230			
Current	Minimum circuit amps (MCA)	Α	1.10	1.40	1.50	2.00			
	Maximum fuse amps (MFA)	Α	16.00	16.00	16.00	16.00			
	Full load amps (FLA)	Α	0.90	1.10	1.20	1.60			
Voltage	Minimum	V	-10%						
range	Maximum	V		+10%					
Notes			Voltage range : units are sui	oltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.					
			Maximum allowable voltage range variation between phases is 2%.						
				MCA/MFA : MC	CA = 1.25 × FLA				
				MFA <	4×FLA				
				next lower standard fu	se rating minimum 16A				
				select wire size b	pased on the MCA				
				instead of a fuse, u	use a circuit breaker				
			For more details concerning	ng conditional connections, se Finally, click on the doc	e http://extranet.daikineurope.c ument title of your choice.	om, select"E-Data Books".			

Concealed Ceiling Unit (Large)

1-1 TECHNIC	AL SPECIFI	CATIONS		FXMQ40MAVE	FXMQ50MAVE	FXMQ63MAVE	FXMQ80MAVE	
Nominal	Cooing		kW	4.50	5.60	7.10	9.00	
Capacitry	Heating		kW	5.00	6.30	8.00	10.00	
Power input Nominal)	Cooing		kW	0.211	0.211	0.211	0.284	
Nominal)	Heating		kW	0.211	0.211	0.211	0.284	
Casing	Material				Galvani	sed steel		
Dimensions	Unit	Height	mm	390	390	390	390	
		Width	mm	720	720	720	720	
		Depth	mm	690	690	690	690	
Veight	Unit		kg	44	44	44	45	
leat	Dimensions	Nr of Rows		3	3	3	3	
Exchanger		Fin Pitch	mm	2.00	2.00	2.00	2.00	
		Face Area	m²	0.181	0.181	0.181	0.181	
		Nr of Stages	3	16	16	16	16	
an	Type				Siroc	co fan		
	Quantity			1	1	1	1	
ir Flow	Cooling	High	m³/min	14.00	14.00	14.00	19.50	
Rate		Low	m³/min	11.50	11.50	11.50	16.00	
-an	External	High	Pa	157	157	157	157	
	static pressure	Standard	Pa	118	118	118	108	
	Motor	Quantity		1	1	1	1	
		Model		D11/2D3AB1VE	D11/2D3AB1VE	D11/2D3AB1VE	D11/2D3AA1VE	
		Output (high)	W	100	100	100	160	
		Drive			Direc	drive		
Refrigerant	Name				R-4	10A		
Cooling	Sound	High	dBA	39.0	39.0	39.0	42.0	
	Pressure	Low	dBA	35.0	35.0	35.0	38.0	
Piping	Liquid	Туре			Flare co	nnection		
connections	(OD)	Diameter	mm	6.4	9.5			
	Gas Type			Flare connection				
		Diameter	mm	12.7	12.7	15.9	15.9	
	Drain	Diameter	mm	32	32	32	32	
	Heat Insulat	tion			Glass	fiber		
Refrigerant co	ontrol					oansion valve		
Temperature	control				Microprocessor thermost			
Safety device	s				PC box	urd fuse		
					Fan motor the	rmal protector		
Standard	Standard A	ccessories			Installation and	•		
Accessories						hose		
						g Pads		
					Cla	mps		
					Scr	ews		
					Insulation			
					Clamp			
Votes				Nominal cooling capacities	are based on : indoor temper equivalent refrigerant p	ature : 27°CDB, 19°CWB, outdo iping : 7.5m (horizontal)	oor temperature : 35°CDE	
					equivalent refrigerant p	rature : 20°CDB, outdoor temp ping : 7.5m (horizontal)		
				<u> </u>		g (an addition for heating) for in		
				·	High static pre	connectors inside the electrical ssure-standard		
				Air filter is not st	andard accessory, but please Select its colorimetric method	mount it in the duct system of t (gravity method) 50% or more.	he suction side.	
			Ī		Sound pressure levels	are measured at 220V	·	

Concealed Ceiling Unit (Large)

Nominal Capacity	CAL SPECIF	ICATIONS		FXMQ100MAVE	FXMQ125MAVE	FXMQ200MAVE	FXMQ250MAVE			
anacity	Cooling		kW	11.20	14.00	22.40	28.00			
apaony	Heating		kW	12.50	16.00	25.00	31.50			
Power input	Cooling		kW	0.411	0.619	1.294	1.465			
Nominal)	Heating		kW	0.411	0.619	1.294	1.465			
Casing	Material			<u>"</u>	Galvanis	ed steel				
Dimensions	Unit	Height	mm	390	390	470	470			
		Width	mm	1,110	1,110	1,380	1,380			
		Depth	mm	690	690	1,100	1,100			
Veight	Unit		kg	63	65	137	137			
Heat	Dimensions	Nr of Rows		3	3	3	3			
Exchanger		Fin Pitch	mm	2.00	2.00	2.00	2.00			
		Face Area	m²	0.319	0.319	0.68	0.68			
		Nr of Stages	;	16	16	26	26			
an	Туре	J			Siroco	o fan				
	Quantity			1	1	2	2			
ir Flow	Cooling	High	m³/min	29.00	36.00	58.00	72.00			
Rate		Low	m³/min	23.00	29.00	50.00	62.00			
an	External	High	Pa	157	191	221	270			
	static	Standard	Pa	98	152	132	147			
	pressure		١. ٣							
	Motor	Quantity		1	1	2	2			
		Model		2D11/2D3AG1VE	2D11/2D3AF1VE	D13/4G2DA1	D13/4G2DA1			
		Output (high)	W	270	430	380	380			
		Drive			Direct	drive				
Refrigerant	Name				R-41	10A				
ooling	Sound	High	dBA	43.0	45.0	48.0	48.0			
	Pressure	Low	dBA	39.0	42.0	45.0	45.0			
iping	Liquid	Type			Flare cor	nnection				
connections	(OD) Diameter mm		9.5	9.5	9.5	9.5				
	Gas	Type		Flare connection	Flare connection	Braze connection	Braze connection			
		Diameter	mm	15.9	15.9	19.1	22.2			
	Drain	Diameter	mm	32	32	PS1B	PS1B			
	Heat Insula	ition			Glass	fiber				
Refrigerant co	ontrol			Electronic expansion valve						
emperature	control			Microprocessor thermostat for cooling and heating						
Safety device	es				PC boa	rd fuse				
			Ţ		Fan motor the	mal protector				
	Standard A	ccessories			Installation and o	peration manual				
			Ī	Drain	hose	Connection	on pipes			
			Ī		Sealing	Pads				
	i .				Clamps					
				Screws						
			}		Scre	ews				
			-	Insulation		ews				
			- - -	Insulation Clamp	for fitting	PWS				
Accessories				Clamp	for fitting metal are based on : indoor tempera	ture : 27°CDB, 19°CWB, outdo	or temperature : 35°CD			
Accessories			-	Clamp Nominal cooling capacities	for fitting metal are based on : indoor tempera equivalent refrigerant pi s are based on : indoor temper	ture: 27°CDB, 19°CWB, outdo ping: 7.5m (horizontal) rature: 20°CDB, outdoor tempe	•			
Accessories				Clamp Nominal cooling capacities Nominal heating capacitie	for fitting metal are based on : indoor tempera equivalent refrigerant pi s are based on : indoor temper equivalent refrigerant pi	ture: 27°CDB, 19°CWB, outdo ping: 7.5m (horizontal) rature: 20°CDB, outdoor tempe	erature : 7°CDB, 6°CWE			
Accessories				Clamp Nominal cooling capacities Nominal heating capacitie Capacities are net, in	for fitting metal are based on : indoor tempera equivalent refrigerant pi s are based on : indoor temper equivalent refrigerant pi cluding a deduction for cooling e is changeable : change the or	ture: 27°CDB, 19°CWB, outdooing: 7.5m (horizontal) rature: 20°CDB, outdoor tempering: 7.5m (horizontal) (an addition for heating) for inconnectors inside the electrical between the connectors in the connectors in the electrical between the connectors in the electrical between the connectors in the electrical between the electrical be	erature : 7°CDB, 6°CWE			
Standard Accessories				Clamp Nominal cooling capacities Nominal heating capacitie Capacities are net, in The external static pressure Air filter is not st	for fitting metal are based on : indoor tempera equivalent refrigerant pi s are based on : indoor tempera equivalent refrigerant pi cluding a deduction for cooling e is changeable : change the co High static pres andard accessory, but please re	ture: 27°CDB, 19°CWB, outdoping: 7.5m (horizontal) ature: 20°CDB, outdoor tempering: 7.5m (horizontal) (an addition for heating) for inconnectors inside the electrical because the connectors inside the sure-standard	prature : 7°CDB, 6°CWE door fan motor heat. pox, this pressure mean			
Accessories				Clamp Nominal cooling capacities Nominal heating capacitie Capacities are net, in The external static pressure Air filter is not st	for fitting metal are based on : indoor tempera equivalent refrigerant pi s are based on : indoor temper equivalent refrigerant pi cluding a deduction for cooling e is changeable : change the co High static pres	ture: 27°CDB, 19°CWB, outdoping: 7.5m (horizontal) ature: 20°CDB, outdoor tempering: 7.5m (horizontal) (an addition for heating) for inconnectors inside the electrical because the sure-standard mount it in the duct system of the gravity method) 50% or more.	prature: 7°CDB, 6°CWE door fan motor heat. box, this pressure mean			

1-2 ELECTRICAL SPECIFICATIONS		FXMQ40MAVE	FXMQ50MAVE	FXMQ63MAVE	FXMQ80MAVE			
Power	Name			V	E			
Supply	Phase		1	1	1	1		
	Frequency	Hz	50	50	50	50		
	Voltage	V		220	-240			
Current	Minimum circuit amps (MCA)	Α	1.30	1.30	1.30	1.50		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	1.00	1.00	1.00	1.20		
Voltage	Minimum V			-10	0%			
range	Maximum V		+10%					
Notes			Voltage range : units are sui	itable for use on electrical syste above listed	ems where voltage supplied to range limits.	unit terminals is not below or		
			Maximum allowable voltage rang variation between phases is 2%.					
				MCA/MFA : MC	CA = 1.25 × FLA			
				MFA <=	4×FLA			
				next lower standard fu	se rating minimum 15A			
				select wire size b	ased on the MCA			
				instead of a fuse, u	se a circuit breaker			
			For more details concerning	g conditional connections, see Finally, click on the docu	http://extranet. daikineurope. oment title of your choice.	com, select "E-Data Books".		

1-2 ELECTRICAL SPECIFICATIONS			FXMQ100MAVE	FXMQ125MAVE	FXMQ200MAVE	FXMQ250MAVE			
Power	Name		VE						
Supply	Phase		1	1	1	1			
	Frequency	Hz	50	50	50	50			
	Voltage	V		220	-240				
Current	Minimum circuit amps (MCA)	Α	2.50	3.80	8.10	9.00			
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00			
	Full load amps (FLA)	Α	2.00	3.00	6.50	7.20			
Voltage	Minimum V		-10%						
range	Maximum V		+10%						
Notes	·		Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.						
			Maximum allowable voltage range variation between phases is 2%.						
			MCA/MFA: MCA = 1.25 x FLA						
			MFA <= 4 × FLA						
			next lower standard fuse rating minimum 15A						
			select wire size based on the MCA						
			instead of a fuse, use a circuit breaker						
			For more details concerning conditional connections, see http://extranet. daikineurope.com, select"E-Data Books". Finally, click on the document title of your choice.						

Ceiling Suspended Unit

1-1 TECHNIC	AL SPECIFI	CATIONS		FXHQ32MAVE	FXHQ63MAVE	FXHQ100MAVE		
Nominal	Cooling		kW	3.60	7.10	11.20		
Capacity	Heating		kW	4.00	8.00	12.50		
Power input	Cooling		kW	0.111	0.115	0.135		
(Nominal)	Heating		kW	0.111	0.115	0.135		
Casing	Colour				White (10Y9/0.5)			
Dimensions	Unit	Height	mm	195 195		195		
		Width	mm	960	1,160	1,400		
		Depth	mm	680	680	680		
Weight	Unit		kg	24	28	33		
Heat	Dimensions	Nr of Rows		2	3	3		
Exchanger		Fin Pitch	mm	1.75	1.75	1.75		
		Face Area	m²	0.182	0.233	0.293		
		Nr of Stages	;	12	12	12		
Fan	Type				Sirocco fan			
	Quantity			1	1	1		
Air Flow	Cooling	High	m³/min	12.00	17.50	25.00		
Rate		Low	m³/min	10.00	14.00	19.50		
Fan	Motor	Quantity		1	1	1		
		Model		3D12K1AA1	4D12K1AA1	3D12K2AA1		
		Output (high)	W	62	62	130		
		Drive			Direct drive			
Refrigerant	Name				R-410A			
Cooling	Sound	High	dBA	36.0	39.0	45.0		
	Pressure	Low	dBA	31.0	34.0	37.0		
Piping	Liquid (OD)	Туре		Flare connection				
connections	(OD)	Diameter	mm	6.4	9.5	9.5		
	Gas	Туре			Flare connection			
		Diameter	mm	12.7	15.9	15.9		
	Drain	Diameter	mm	26	26	26		
	Heat Insula	tion			Glass wool			
Air Filter					Resin net with mold resistance			
Refrigerant o	ontrol				Electronic expansion valve			
Temperature	control			Micr	oprocessor thermostat for cooling and hea	ting		
Safety device	S				PC board fuse			
					Fan motor thermal protector			
Standard	Standard A	ccessories			Installation and operation manual			
Accessories					Drain hose			
					Paper pattern for installation			
					Clamp metal			
					Insulation for fitting			
					Clamps			
					Washer			
Notes				Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)				
				eq	sed on : indoor temperature : 20°CDB, outc uivalent refrigerant piping : 7.5m (horizonta	al)		
				Capacities are net, including a	deduction for cooling (an addition for heat	ing) for indoor fan motor heat.		

1-2 ELECT	RICAL SPECIFICATIONS		FXHQ32MAVE	FXHQ63MAVE	FXHQ100MAVE			
Power	Name			VE				
Supply	Phase		1	1	1			
	Frequency	Hz	50	50				
	Voltage V			220-240				
Current	Minimum circuit amps (MCA)	Α	0.80	0.80	0.90			
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00			
	Full load amps (FLA)	Α	0.60	0.60	0.70			
Voltage	Minimum V		-10%					
range	Maximum V		+10%					
Notes			Voltage range : units are suitable for u	se on electrical systems where voltage su above listed range limits.	upplied to unit terminals is not below or			
			Maximum allowable voltage range variation between phases is 2%					
				MCA/MFA : MCA = 1.25 × FLA				
				MFA <= 4 × FLA				
		ext lower standard fuse rating minimum 15	5A					
			select wire size based on the MCA					
		instead of a fuse, use a circuit breaker						
			For more details concerning condition	nal connections, see http://extranet.daikir ally, click on the document title of your cho	neurope.com, select "E-Data Books". pice.			

Wall Mounted Unit

1-1 TECHNIC	AL SPECIFIC	CATIONS		FXAQ20MAVE	FXAQ25MAVE	FXAQ32MAVE	FXAQ40MAVE	FXAQ50MAVE	FXAQ63MAVE		
Nominal	Cooling kW			2.20	2.80	3.60	4.50	5.60	7.10		
Capacity	Heating		kW	2.50	3.20	4.00	5.00	6.30	8.00		
Power input	Cooling	kW		0.016	0.022	0.027	0.020	0.027	0.050		
(Nominal)	Heating		kW	0.024	0.027	0.032	0.020	0.032	0.060		
Casing	Colour				white (3.0Y8.5/0.5)						
Dimensions	Unit	Height mm		290	290	290	290	290	290		
		Width	mm	795	795	795	1,050	1,050	1,050		
		Depth	mm	230	230	230	230	230	230		
Weight	Unit		kg	11	11	11	14	14	14		
Heat	Dimensions	Nr of Rows		2	2	2	2	2	2		
Exchanger		Fin Pitch	mm	1.40	1.40	1.40	1.40	1.40	1.40		
		Face Area	m²	0.161	0.161	0.161	0.213	0.213	0.213		
		Nr of Stages		14	14	14	14	14	14		
Fan	Туре	· ii oi oiagoo	,				low fan				
	Quantity			1	1	1	1				
Air Flow	Cooling	High	m³/min	7.50	8.00	9.00	12.00	15.00	19.00		
Rate	Cooming	Low	m³/min	4.50	5.00	5.50	9.00	12.00	14.00		
Fan	Motor	Quantity	111/111111	1	1	1	1	1	1		
ı an	Wiotoi	Model		QCL9661M	QCL9661M	QCL9661M	QCL9686M	QCL9686M	QCL9686M		
		Output	W	40	40	40	43	43	43		
		(high)				.0	.0		.0		
		Drive				Direc					
Refrigerant	Name			R-410A							
Cooling	Sound Pressure	High	dBA	35.0	36.0	37.0	39.0	42.0	46.0		
		Low	dBA	29.0	29.0	29.0	34.0	36.0	39.0		
Piping connections	Liquid (OD)	Туре				Flare co	nnection				
COLLIGECTIONS	(OD)	Diameter	mm	6.4	6.4	6.4	6.4	6.35	9.5		
	Gas	Type				Flare co	nnection				
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9		
	Drain	Diameter	mm	18	18	18	18	18	18		
	Heat Insulat	ion				Foamed polystyr	ene/polyethylene				
Air Filter						Washable	e resin net				
Refrigerant co	ontrol					Electronic ex	pansion valve				
Temperature	control				Micr	oprocessor thermost	at for cooling and he	ating			
Safety device	s					PC box	ard fuse				
Standard	Standard Ad	ccessories				Installation and	peration manual				
Accessories						Installati	on panel				
						Paper pattern	for installation				
						Insulati	on tape				
						Cla	mps				
						Scr	ews				
Notes				Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 5m (horizontal)							
				Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 5m (horizontal)							
				Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							

Wall Mounted Unit

1-2 ELECTRICAL SPECIFICATIONS			FXAQ20MAVE	FXAQ25MAVE	FXAQ32MAVE	FXAQ40MAVE	FXAQ50MAVE	FXAQ63MAVE		
Power	Name		VE							
Supply	Phase		1	1	1	1	1	1		
	Frequency	Hz	50	50	50	50	50	50		
	Voltage	V			220	-240				
Current	Minimum circuit amps (MCA)	Α	0.30	0.40	0.40	0.40	0.40	0.60		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	0.20	0.30	0.30	0.30	0.30	0.50		
Voltage	Minimun V		-10%							
range	Maximum V		+10%							
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.							
			Maximum allowable voltage range variation between phases is 2%.							
					MCA/MFA : MC	CA = 1.25 × FLA				
			MFA <= 4 × FLA							
next lower standard fuse rating minimum										
			select wire size based on the MCA							
			instead of a fuse, use a circuit breaker							
			For more details concerning conditional connections, see http://extranet. daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.							

Floor Standing Unit

1-1 TECHNIC	AL SPECIFIC	CATIONS		FXLQ20MAVE	FXLQ25MAVE	FXLQ32MAVE	FXLQ40MAVE	FXLQ50MAVE	FXLQ63MAVE		
Nominal	Cooling		kW	2.20	2.80	3.60	4.50	5.60	7.10		
Capacity	Heating		kW	2.50	3.20	4.00	5.00	6.30	8.00		
Power input	Cooling		kW	0.049	0.049	0.090	0.090	0.110	0.110		
(Nominal)	Heating		kW	0.049	0.049	0.090	0.090	0.110	0.110		
Casing	Colour		ı			lvory white	(5Y7, 5/1)	I .			
Dimensions	Unit	Height	mm	600	600	600	600	600	600		
		Width	mm	1,000	1,000	1,140	1,140	1,420	1,420		
		Depth	mm	222	222	222	222	222	222		
Weight	Unit		kg	25	25	30	30	36	36		
Heat	Dimensions	Nr of Rows		3	3	3	3	3	3		
Exchanger		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50	1.50		
		Face Area	m²	0.159	0.159	0.200	0.200	0.282	0.282		
		Nr of Stages	3	14	14	14	14	14	14		
Fan	Туре					Siroc	co fan	I			
	Quantity			1	1	1	1	1	1		
Air Flow	Cooling	High	m³/min	7.00	7.00	8.00	11.00	14.00	16.00		
Rate	9	Low	m³/min	6.00	6.00	6.00	8.50	11.00	12.00		
Fan	Motor	Quantity	,	1	1	1	1	1	1		
		Model		D14B20	D14B20	2D14B13	2D14B13	2D14B20	2D14B20		
		Output	W	15	15	25	25	35	35		
		(high)	"	10	10		20	00	00		
		Drive				Direc	t drive				
Refrigerant	Name				R-410A						
Cooling	Sound	High	dBA	35.0	35.0	35.0	38.0	39.0	40.0		
	Pressure	Low	dBA	32.0	32.0	32.0	33.0	34.0	35.0		
Piping connections	Liquid	Туре		Flare connection							
connections	(OD)	Diameter	mm	6.4 6.4 6.4 6.4					9.5		
	Gas	Туре				Flare co	nnection		•		
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9		
	Drain	Diameter	mm			O. D	D. 21	•	•		
	Heat Insulat	ion				Glass Fiber/U	rethane Foam				
Air Filter						Resin net with	mold resistance				
Refrigerant c	ontrol					Electronic ex	pansion valve				
Temperature	control				Micr	oprocessor thermost	at for cooling and he	ating			
Safety device	!S					PC boa	ard fuse				
						Fan motor the	ermal protector				
Standard	Standard Ad	cessories				Installation and	peration manual				
Accessories						Insulation	for fitting				
						Drain	hose				
						Cla	mps				
				Clamps Screws							
				Level adjustment screw							
				Washer							
Notes				Wasner Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)							
				Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)							
				Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							
				Sound pressure levels are measured at 220V							

Floor Standing Unit

1-2 ELECTRICAL SPECIFICATIONS			FXLQ20MAVE	FXLQ25MAVE	FXLQ32MAVE	FXLQ40MAVE	FXLQ50MAVE	FXLQ63MAVE		
Power	Name		VE							
Supply	Phase		1	1	1	1	1	1		
	Frequency Hz		50	50	50	50	50	50		
	Voltage	V			220	-240				
Current	Minimum circuit amps (MCA)	Α	0.30	0.30	0.60	0.60	0.60	0.60		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	0.20	0.20	0.50	0.50	0.50	0.50		
Voltage	Minimum V		-10%							
range	Maximum V		+10%							
Notes			Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminals is not below or above listed range limits.							
			Maximum allowable voltage range variation between phases is 2%.							
					MCA/MFA : MC	CA = 1.25 × FLA				
					MFA <=	4×FLA				
next lower standard fuse rating minimum 15A										
			select wire size based on the MCA							
			instead of a fuse, use a circuit breaker							
			For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.							

Concealed Floor Standing Unit

1-1 TECHNIC	CAL SPECIFIC	CATIONS		FXNQ20MAVE	FXNQ25MAVE	FXNQ32MAVE	FXNQ40MAVE	FXNQ50MAVE	FXNQ63MAVE		
Nominal	Cooling		kW	2.20	2.80	3.60	4.50	5.60	7.10		
Capacity	Heating		kW	2.50	3.20	4.00	5.00	6.30	8.00		
Power input	Cooling		kW	0.049	0.049	0.090	0.090	0.110	0.110		
(Nominal)	Heating		kW	0.049	0.049	0.090	0.090	0.110	0.110		
Casing	Material		1				sed steel	5.1.10			
Dimensions	Unit	Height	mm	610	610	610	610	610	610		
		Width	mm	930	930	1,070	1,070	1,350	1,350		
		Depth	mm	220	220	220	220	220	220		
Weight	Unit		kg	19	19	23	23	27	27		
Heat	Dimensions	Nr of Rows	J	3	3	3	3	3	3		
Exchanger		Fin Pitch	mm	1.50	1.50	1.50	1.50	1.50	1.50		
		Face Area	m²	0.159	0.159	0.200	0.200	0.282	0.282		
		Nr of Stages	;	14	14	14	14	14	14		
Fan	Туре					Siroco	co fan	l			
	Quantity			1	1	1	1	1	1		
Air Flow	Cooling	High	m³/min	7.00	7.00	8.00	11.00	14.00	16.00		
Rate	9	Low	m³/min	6.00	6.00	6.00	8.50	11.00	12.00		
Fan	Motor	Quantity	,	1	1	1	1	1	1		
		Model		D14B20	D14B20	2D14B13	2D14B13	2D14B20	2D14B20		
		Output	W	15	15	25	25	35	35		
		(high)		10	15	25	20	00	00		
		Drive				Direct	t drive				
Refrigerant	Name				R-410A						
Cooling	Sound	High	dBA	35.0	35.0	35.0	38.0	39.0	40.0		
	Pressure	Low	dBA	32.0	32.0	32.0	33.0	34.0	35.0		
Piping	Liquid	Туре		Flare connection				•			
connections	(OD)	Diameter	mm	6.4 6.4 6.4 6.4					9.5		
	Gas	Туре				Flare co	nnection	•			
		Diameter	mm	12.7	12.7	12.7	12.7	12.7	15.9		
	Drain	Diameter	mm			O.D). 21	l .	I		
	Heat Insulat	ion				Glass Fiber/U	rethane Foam				
Air Filter						Resin net with I	mold resistance				
Refrigerant c	ontrol					Electronic ex	pansion valve				
Temperature					Micr	oprocessor thermost	at for cooling and he	ating			
Safety device							ard fuse				
							ermal protector				
Standard	Standard Ad	cessories					pperation manual				
Accessories							for fitting				
							hose				
							mps				
							•				
				Screws Washer							
]										
Notes				Level adjustment screw Nominal cooling capacities are based on : indoor temperature : 27°CDB, 19°CWB, outdoor temperature : 35°CDB, equivalent refrigerant piping : 7.5m (horizontal)							
				Nominal heating capacities are based on : indoor temperature : 20°CDB, outdoor temperature : 7°CDB, 6°CWB, equivalent refrigerant piping : 7.5m (horizontal)							
				Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.							
				Capacities are net, including a deduction for cooling (an addition for neating) for indoor fan motor neat. Sound pressure levels are measured at 220V							

Concealed Floor Standing Unit

1-2 ELECTRICAL SPECIFICATIONS			FXNQ20MAVE	FXNQ25MAVE	FXNQ32MAVE	FXNQ40MAVE	FXNQ50MAVE	FXNQ63MAVE		
Power	Name				V	É				
Supply	Phase		1	1	1	1	1	1		
	Frequency Hz		50	50	50	50	50	50		
	Voltage	V			220	-240				
Current	Minimum circuit amps (MCA)	Α	0.30	0.30	0.60	0.60	0.60	0.60		
	Maximum fuse amps (MFA)	Α	15.00	15.00	15.00	15.00	15.00	15.00		
	Full load amps (FLA)	Α	0.20	0.20	0.50	0.50	0.50	0.50		
Voltage	Minimum	V	-10%							
range	Maximum	V	+10%							
Notes			Voltage range : ur	nits are suitable for u		ems where voltage si range limits.	upplied to unit termin	als is not below or		
			Maximum allowable voltage range variation between phases is 2%							
			MCA/MFA: MCA = 1.25 × FLA							
					MFA <=	4×FLA				
				ne	ext lower standard fu	se rating minimum 1	5A			
			select wire size based on the MCA							
			instead of a fuse, use a circuit breaker							
			For more details concerning conditional connections, see http://extranet.daikineurope.com, select "E-Data Books". Finally, click on the document title of your choice.							

4-way Blow Ceiling Suspended Unit

Model Indoor l		Indoor Unit		FXUQ71MAV1	FXUQ100MAV1	FXUQ125MAV1
iviodei		Connection	Unit	BEVQ71MAVE	BEVQ100MAVE	BEVQ125MAVE
			kcal/h	7,100	10,000	12,500
★1 Cooling Capacity (19.5°CWB		CWB)	Btu/h	28,300	39,600	49,500
		kW 8.3 11.6		11.6	14.5	
★2 Cooling Ca	★2 Cooling Capacity (19.0°CWB)			8.0	11.2	14.0
	, , , ,		kcal/h	7,700	10,800	12,000
★3 Heating Ca	apacity		Btu/h	30,700	42,700	47,800
. ,			kW	9.0	12.5	14.0
Casing Color				White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
Dimensions: (I	H×W×D)		mm	165×895×895	230×895×895	230×895×895
Coil (Cross	Rows×Stag	es×Fin Pitch	mm	3x6×1.5	3×8×1.5	3×8×1.5
Fin Coil)	Face Area		m²	0.265	0.353	0.353
	Model			QTS48A10M	QTS50B15M	QTS50B15M
	Type			Turbo Fan	Turbo Fan	Turbo Fan
Fan	Motor Outp of Units	ut × Number	W	45×1	90×1	90×1
	Air Flow Ra	to (Ц/L)	m³/min	19/14	29/21	32/23
	All I low na	ile (I VL)	cfm	671/494	1,024/741	1,130/812
	Drive			Direct Drive Direct Drive		Direct Drive
Temperature 0	Control			Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorb	ing Thermal	Insulation Mate	erial	Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene	Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene	Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene
	Liquid Pipe	S	mm	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
Piping Connections	Gas Pipes		mm	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe		mm	I.Dφ20×O.Dφ26	I.Dφ20×O.Dφ26	I.Dφ20×O.Dφ26
Machine Weig	ht (Mass)		kg	25	31	31
★5 Sound Lev	★5 Sound Level (H/L) dBA		dBA	40/35	43/38	44/39
Safety Devices			Thermal Protector for Fan Motor	Thermal Protector for Fan Motor	Thermal Protector for Fan Motor	
Standard Accessories				Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate. Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate.		Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate.
Drawing No.					C:4D045395A	

Notes:

★1 Indoor temp.: 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.

★2 Indoor temp.: 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.

★3 Indoor temp.: 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)

4 Capacities are net, including a deduction for cooling (an additional for heating) for indoor fan motor heat.

★5 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae kcal/h=kWx860 Btu/h=kWx3412 cfm=m³/minx35.3

BEV Units

Model				BEVQ71MAVE	BEVQ100MAVE	BEVQ125MAVE
Power Supply	Power Supply			1 Phase 50Hz 220~240V 1 Phase 50Hz 220~240V		1 Phase 50Hz 220~240V
Casing				Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm	100×350×225	100×350×225	100×350×225
Sound Absorb	oing Thermal	Insulation Mat	erial	Flame and Heat Resistant Foamed Polyethylene	Flame and Heat Resistant Foamed Polyethylene	Flame and Heat Resistant Foamed Polyethylene
	Indoor	Liquid Pipes		9.5mm (Flare Connection)	9.5mm (Flare Connection)	9.5mm (Flare Connection)
Piping	Unit	Gas Pipes		15.9mm (Flare Connection)	15.9mm (Flare Connection)	15.9mm (Flare Connection)
Connection	Outdoor	r Liquid Pipes		9.5mm (Flare Connection)	9.5mm (Flare Connection)	9.5mm (Flare Connection)
	Unit	Suction Gas	s Pipes	15.9mm (Flare Connection)	15.9mm (Flare Connection)	15.9mm (Flare Connection)
Machine Weig	ght (Mass)		kg	3.0	3.0	3.5
Standard Accessories				Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps		Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps
Drawing No.				4D045387A		

1.3 **BS Units**

Model				BSVQ100PV1 BSVQ160PV1		BSVQ250PV1	
Power Supply				1 Phase 50Hz 200-240V 1 Phase 50Hz 200-240V		1 Phase 50Hz 200-240V	
Total Capacity Index of Indoor Unit				20 to 100	More than 100 but 160 or less	More than 160 but 250 or less	
No. of Connectable Indoor Units				Max. 5 Max. 8		Max. 8	
Casing				Galvanized steel plate Galvanized steel plate Galvanized		Galvanized steel plate	
Dimensions: (H×W×D) mm		207×388×326	207×388×326	207×388×326			
Sound Absorbing Thermal Insulation Material		Foamed polyurethane, Flame resistant needle felt	Foamed polyurethane, Flame resistant needle felt Foamed polyurethane, Flame re needle felt				
	Indoor Unit	Liquid Pipes		9.5mm C1220T (brazing connection) ★1	9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)	
		Gas Pipes		15.9mm C1220T (brazing connection) ★1	15.9mm C1220T (brazing connection) ★2	22.2mm C1220T (brazing connection) ★3	
Piping Connection	Outdoor	Liquid Pipes		9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)	
0000		Suction Gas Pipes		15.9mm C1220T (brazing connection)	15.9mm C1220T (brazing connection) ★2	22.2mm C1220T (brazing connection) ★3	
	0	HP/LP Gas Pipe		12.7mm C1220T (brazing connection)	12.7mm C1220T (brazing connection) ★2	19.1mm C1220T (brazing connection) ★3	
Weight kg		14	14	15			
Standard Accessories				Installation manual, Attached pipe Insulation pipe cover, Clamps	Installation manual, Attached pipe Insulation pipe cover, Clamps	Installation manual, Attached pipe Insulation pipe cover, Clamps	
Drawing No.			,	C: 4D057926 C: 4D057927 C: 4D0579.		C: 4D057928	

Note:

- \star 1 When connecting with a 20 to 50 class indoor unit, connect to the attached pipe to the field pipe. (Braze the connection between the attached and field pipe.)
- ★2 When connecting with an indoor unit of 150 or more and 160 or less, connect to the attached pipe to the field pipe.
- (Braze the connection between the attached and field pipe.)
 ★3 When connecting with a 200 class, or more than 160 and less than 200 class indoor unit, connect to the attached pipe to the field pipe. (Braze the connection between the attached and field pipe.)

Connection Range for BS Unit

Components	Outdoor unit model name	Total capacity of connectable indoor units		of connectable oor units
	REYQ8P	100 to 260 (400)	13 (20)	Same number of BS units
	REYQ10P	125 to 325 (500)	16 (25)	
	REYQ12P	150 to 390 (600)	19 (30)	
	REYQ14P	175 to 455 (700)	22 (35)	
	REYQ16P	200 to 520 (800)	26 (40)	
	REYQ18P	225 to 585 (720)	29 (36)	
	REYQ20P	250 to 650 (800)	32 (40)	
	REYQ22P	275 to 715 (880)	35 (44)	
	REYQ24P	300 to 780 (960)	39 (48)	
	REYQ26P	325 to 845 (1,040)	42 (52)	
Indoor unit total capacity	REYQ28P	350 to 910 (1,120)	45 (56)	
	REYQ30P	375 to 975 (1,200)	48 (60)	
	REYQ32P	400 to 1,040 (1,280)	52 (64)	
	REYQ34P	425 to 1,105 (1,105)	55 (55)	
	REYQ36P	450 to 1,170 (1,170)	58 (58)	
	REYQ38P	475 to 1,235 (1,235)	61 (61)	
	REYQ40P	500 to 1,300 (1,300)]
	REYQ42P	525 to 1,365 (1,365)]	
	REYQ44P	550 to 1,430 (1,430)	64 (64)	
	REYQ46P	575 to 1,495 (1,495)	, ,	
	REYQ48P	600 to 1,560 (1,560)		

Note:

Values inside brackets are based on connection of indoor units rated at maximum capacity, 200% from single outdoor units, 160% from double outdoor units, 130% from triple outdoor units.

Part 3 Refrigerant Circuit

1.	Refr	igerant Circuit	58
		REYQ8P, 10P, 12P	
		REYQ14P, 16P	
	1.3	REMQ8P (Multi 8HP)	62
		REMQ10P, 12P (Multi 10, 12HP)	
		REMQ14P, 16P (Multi 14, 16HP)	
	1.6	BS Unit Functional Parts	68
	1.7	Indoor Units	69
2.	Fund	ctional Parts Layout	70
	2.1	REYQ8P, 10P, 12P	70
	2.2	REYQ14P, 16P	71
	2.3	REMQ8P	72
	2.4	REMQ10P, 12P	73
	2.5	REMQ14P, 16P	74
3.	Refr	igerant Flow for Each Operation Mode	75

Refrigerant Circuit SiBE37-704


1. Refrigerant Circuit

1.1 REYQ8P, 10P, 12P

No. in refrigerant system diagram	Symbol	Name	Major Function	
1	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 210Hz by using	
2	M2C Standard compressor 1 (STD1)		the inverter, while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Standard compressor. REYQ8P: 30 steps, REYQ10, 12P: 37 steps	
3	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.	
4	M2F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.	
5(6)	Y1E (Y3E)	Electronic expansion valve (Main: EVM)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.	
7(8)	Y2E (Y5E)	Electronic expansion valve (Subcool: EVT)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.	
9	Y4E	Electronic expansion valve (Refrigerant charge EVJ)	This is used to open/close refrigerant charge port.	
10(11)	Y5S (Y10S)	Solenoid valve (Main bypass SVE)	This opens in cooling operation.	
12	Y4S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.	
13	Y3S	Solenoid valve (Refrigerant regulator liquid pipe SVL)	This is used to collect refrigerant to the refrigerant regulator.	
14	Y1S	Solenoid valve (Refrigerant regulator gas purging pipe SVG)	This is used to collect refrigerant to the refrigerant regulator.	
15	Y7S	Solenoid valve (Refrigerant regulator discharge pipe SVO)	This is used to discharge refrigerant from the refrigerant regulator.	
16	Y6S	Solenoid valve (Discharge pipe of refrigerant regulator)	Bypass the high pressure gas to the refrigerant regulator.	
17(18)	Y2S (Y9S)	4 way valve (Heat exchanger switch 20SA)	This is used to switch outdoor heat exchanger to evaporator or condenser.	
19	Y8S	4 way valve (Dual pressure gas pipe switch 20SB)	This is used to switch dual pressure gas pipe to high pressure or low pressure.	
20	S1NPH	High pressure sensor	Used to detect high pressure.	
21	S2NPL	Low pressure sensor	Used to detect low pressure.	
22	S1PH S2PH	HP pressure switch (For INV) HP pressure switch (For STD)	This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.	
24	_	Pressure regulating valve (Liquid pipe)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
25		Pressure regulating valve (Refrigerant regulator)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
26		Subcooling heat exchanger	Apply subcooling to liquid refrigerant.	
27	_	Refrigerant regulator	Surplus refrigerant is held according to the operation conditions.	
28		Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.	
29	_	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD1 compressor.	
30		Capillary tube	This is used to discharge refrigerant from the refrigerant regulator.	
31	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.	
32(42)	R8T (R10T)	Thermistor (Suction pipe: TsA)	Used to detect suction pipe temperature.	
33	R31T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature. Used for compressor temperature	
34	R32T	Thermistor (STD1 discharge pipe: Tds1)	protection control.	
35(45)	R4T (R12T)	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation.	
36(46)	R2T (R11T)	Thermistor (Heat exchanger gas pipe Tg)	This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging.	
37(47)	R7T (R15T)	Thermistor (Heat exchanger liquid pipe Tf)	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator.	
38(48)	R5T (R13T)	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger.	
39	R6T	Thermistor (Subcooling heat exchanger liquid pipe TI)	This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger.	
40(50)	R9T (R14T)	Thermistor (Liquid pipe Tsc)	This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	
		•		

SiBE37-704 Refrigerant Circuit

REYQ8P, 10P, 12P (8HP, 10HP, 12HP Single Type) (INV Unit + STD Unit)

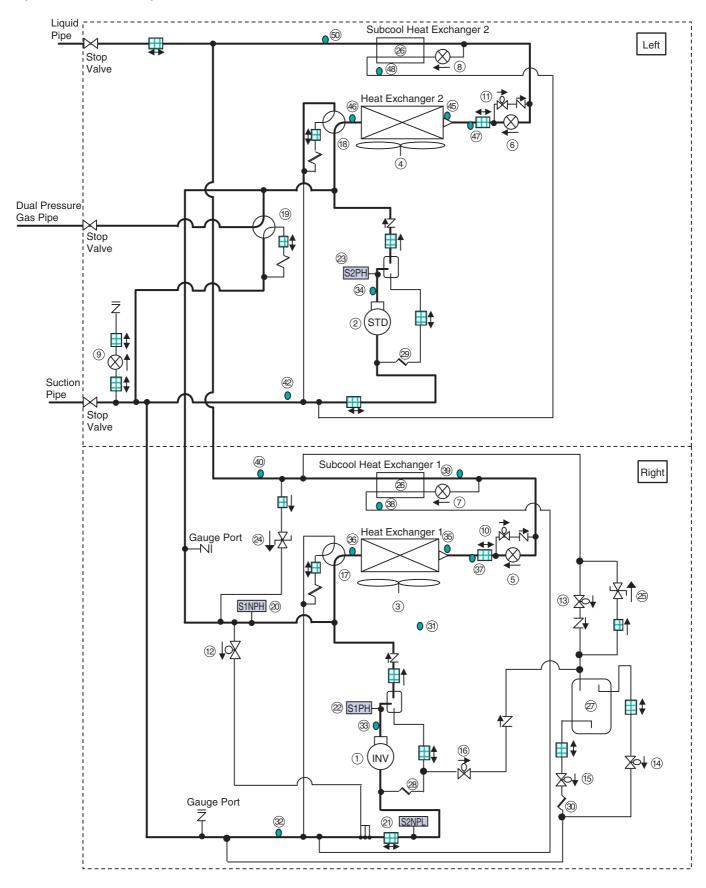


Refrigerant Circuit SiBE37-704

1.2 REYQ14P, 16P

No. in refrigerant system diagram	Symbol	Name	Major Function
1	M1C	Inverter compressor (INV1)	Inverter compressor is operated on frequencies between 52Hz and 266Hz by using the inverter. The number of operating steps is as follows.
2	M2C	Standard compressor 1 (INV2)	REYQ14P or 16P : 26 step
3	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.
4	M2F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.
5(6)	Y1E (Y3E)	Electronic expansion valve (Main: EVM)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
7(8)	Y2E (Y5E)	Electronic expansion valve (Subcool: EVT)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
9	Y4E	Electronic expansion valve (Refrigerant charge EVJ)	This is used to open/close refrigerant charge port.
10(11)	Y5S (Y10S)	Solenoid valve (Main bypass SVE)	This opens in cooling operation.
12	Y4S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
13	Y3S	Solenoid valve (Refrigerant regulator liquid pipe SVL)	This is used to collect refrigerant to the refrigerant regulator.
14	Y1S	Solenoid valve (Refrigerant regulator gas purging pipe SVG)	This is used to collect refrigerant to the refrigerant regulator.
15	Y7S	Solenoid valve (Refrigerant regulator discharge pipe SVO)	This is used to discharge refrigerant from the refrigerant regulator.
16	Y6S	Solenoid valve (Discharge pipe of refrigerant regulator)	Bypass the high pressure gas to the refrigerant regulator.
17(18)	Y2S (Y9S)	4 way valve (Heat exchanger switch 20SA)	This is used to switch outdoor heat exchanger to evaporator or condenser.
19	Y8S	4 way valve (Dual pressure gas pipe switch 20SB)	This is used to switch dual pressure gas pipe to high pressure or low pressure.
20	S1NPH	High pressure sensor	Used to detect high pressure.
21	S2NPL	Low pressure sensor	Used to detect low pressure.
22(23)	S1PH (S2PH)	HP pressure switch (For INV compressor)	This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.
24	_	Pressure regulating valve (Liquid pipe)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.
25	_	Pressure regulating valve (Refrigerant regulator)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.
26		Subcooling heat exchanger	Apply subcooling to liquid refrigerant.
27	_	Refrigerant regulator	Surplus refrigerant is held according to the operation conditions.
28	_	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.
29	_	Capillary tube	This is used to discharge refrigerant from the refrigerant regulator.
30	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
31(41)	R8T (R10T)	Thermistor (Suction pipe: TsA)	Used to detect suction pipe temperature.
32	R31T	Thermistor (INV1 discharge pipe: Tdi)	Used to detect discharge pipe temperature. Used for compressor temperature
33	R32T	Thermistor (INV2 discharge pipe: Tds1)	protection control.
35(45)	R4T (R12T)	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation.
36(46)	R2T (R11T)	Thermistor (Heat exchanger gas pipe Tg)	This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging.
37(47)	R7T (R15T)	Thermistor (Heat exchanger liquid pipe Tf)	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator.
38(48)	R5T (R13T)	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	This detects temperature of gas pipe on the evaporator side for the subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger.
39	R6T	Thermistor (Subcooling heat exchanger liquid pipe TI)	This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger.
40(50)	R9T (R14T)	Thermistor (Liquid pipe Tsc)	This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.

SiBE37-704 Refrigerant Circuit

REYQ14P, 16P (14HP, 16HP Single Type) (INV Unit × 2)

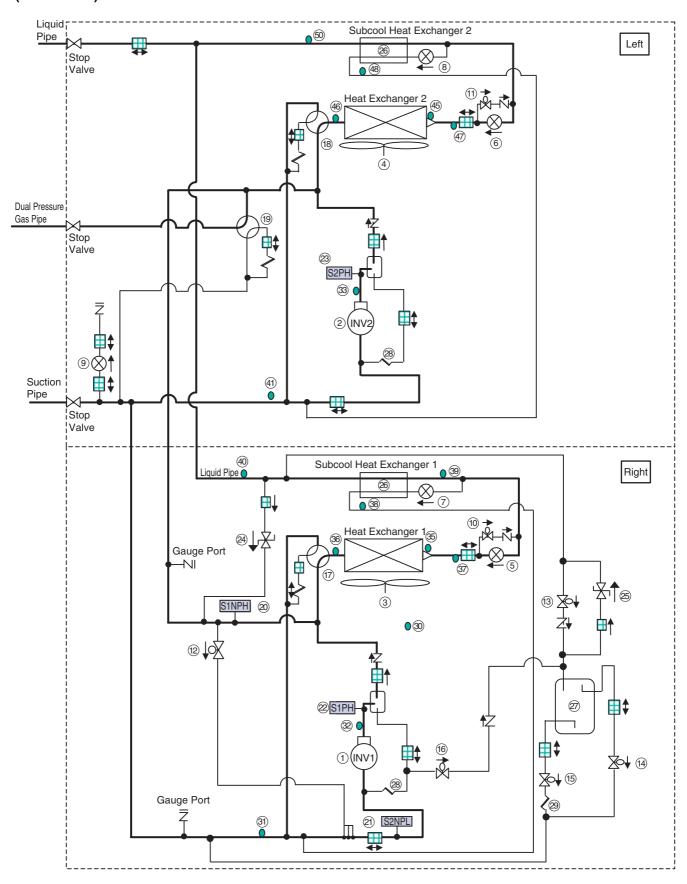


Refrigerant Circuit SiBE37-704

1.3 REMQ8P (Multi 8HP)

No in		-	-	
No. in refrigerant system diagram	Symbol	Name	Major Function	
1	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 210Hz by using the inverter. Compressor operation steps: Refer to page 111~115.	
4	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.	
6	Y1E	Electronic expansion valve (Main: EVM)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.	
7	Y3E	Electronic expansion valve (Subcool: EVT)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.	
8	Y2E	Electronic expansion valve (Refrigerant charge EVJ)	This is used to open/close refrigerant charge port.	
9	Y6S	Solenoid valve (Main bypass SVE)	This opens in cooling operation.	
10	Y5S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.	
11	Y4S	Solenoid valve (Refrigerant regulator liquid pipe SVL)	This is used to collect refrigerant to the refrigerant regulator.	
12	Y1S	Solenoid valve (Refrigerant regulator gas purging pipe SVG)	This is used to collect refrigerant to the refrigerant regulator.	
13	Y7S	Solenoid valve (Refrigerant regulator discharge pipe SVO)	This is used to discharge refrigerant from the refrigerant regulator.	
14	Y8S	Solenoid valve (Discharge pipe of refrigerant regulator)	Bypass the high pressure gas to the refrigerant regulator.	
15	Y3S	4 way valve (Heat exchanger switch 20SA)	This is used to switch outdoor heat exchanger to evaporator or condenser.	
16	Y2S	4 way valve (Dual pressure gas pipe switch 20SB)	This is used to switch dual pressure gas pipe to high pressure or low pressure.	
17	S1NPH	High pressure sensor	Used to detect high pressure.	
18	S2NPL	Low pressure sensor	Used to detect low pressure.	
19	S1PH	HP pressure switch (For INV compressor)	This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.	
22	_	Pressure regulating valve (Liquid pipe)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
23	_	Pressure regulating valve (Refrigerant regulator)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
24	_	Subcooling heat exchanger	Apply subcooling to liquid refrigerant.	
25		Refrigerant regulator	Surplus refrigerant is held according to the operation conditions.	
26	-	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.	
29	_	Capillary tube	This is used to discharge refrigerant from the refrigerant regulator.	
30	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature.	
31	R8T	Thermistor (Suction pipe: TsA)	Used to detect suction pipe temperature.	
32	R31T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature. Used for compressor temperature protection control.	
35	R4T	Thermistor (Heat exchanger deicer Tb)	This detects temperature of some of the liquid pipes for air heat exchanger. Used to make judgments on defrosting operation.	
36	R2T	Thermistor (Heat exchanger gas pipe Tg)	This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging.	
37	R7T	Thermistor (Heat exchanger liquid pipe Tf)	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator.	
38	R5T	Thermistor (Subcooling heat exchanger gas pipe Tsh)	This detects temperature of gas pipe on the evaporator side for the subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger.	
39	R6T	Thermistor (Subcooling heat exchanger liquid pipe TI)	This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger.	
40	R9T	Thermistor (Liquid pipe Tsc)	This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	

SiBE37-704 Refrigerant Circuit

REMQ8P

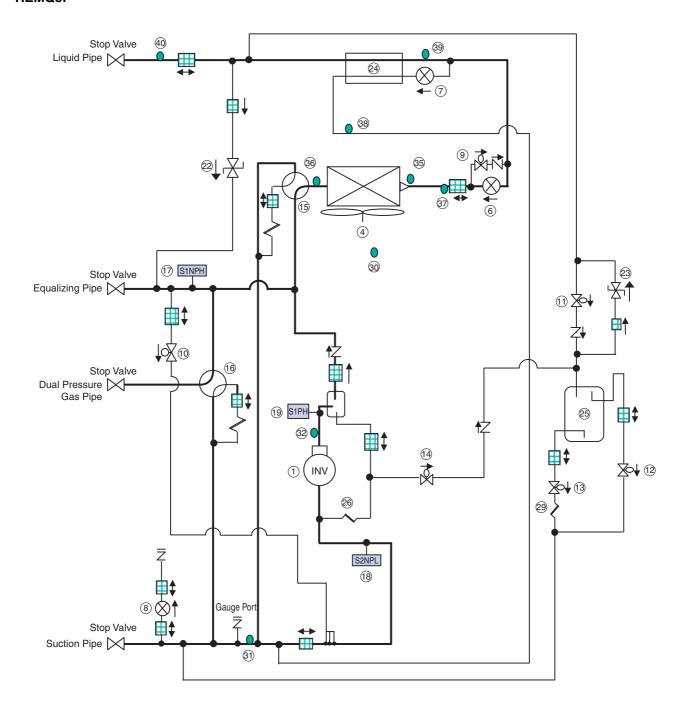


Refrigerant Circuit SiBE37-704

1.4 REMQ10P, 12P (Multi 10, 12HP)

refrigerant system of more system of the properties of the propert			· · · · · · · · · · · · · · · · · · ·	-	
the inverter, while Standard compressor i (STDI) ### MIFF Inverter fan		Symbol	Name	Major Function	
only. The number of operating steps is as follows when inverter compressor is operated in combination with Stanzbed compressor. MIF Inverter fan Special compressor. Inverter fan Special compressor. Since the system is of air heat acchanging type, the fan is operated at 9-step rotation special compressor. The special compressor is operated at 9-step rotation special compressor. The special compressor is operated at 9-step rotation special to the special compressor. The special compressor is operated at 9-step rotation special to special to keep the cutlet superheated degree of subcooling heat exchanger (Subcool EVT) This is used to openciose refrigerant charge port. Price Solenoid valve (Refrigerant regulator (Facility) pine 5VL) This opens in cooling operation. This opens in cooling operation. Solenoid valve (Refrigerant regulator (Subcool Verlager) pine 5VL) Solenoid valve (Refrigerant regulator (Subcool Verlager) pine 5VL) This is used to collect refrigerant to the refrigerant regulator. Solenoid valve (Refrigerant regulator) This is used to discharge ortrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to discharge refrigerant from the refrigerant regulator. This is used to dester high pressure. Low pressure requisiting	1	M1C	Inverter compressor (INV)	the inverter, while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Standard compressor.	
## Will in Neutrie to a speak by using the inverter. Yes Electronic expansion valve (Natin: EVM) While in heating operation, PI control is applied to keep the outlet superheated degree of all heat exchanger constant. Yes Electronic expansion valve (Subcoot: EVT) PI control is applied to keep the outlet superheated degree of all heat exchanger constant. Person Yes Solencid valve (Main Expans SVP) Pil control is applied to keep the outlet superheated degree of subcooling heat exchanger constant. Yes Solencid valve (Rinfogrant charge EVJ) Used to prevent the low pressure from transient falling. Yes Solencid valve (Rinfogrant regulator (Rinfogrant regulator) Pil si used to collect refrigerant to the refrigerant regulator. Yes Solencid valve (Rinfogrant regulator) Pil si used to collect refrigerant to the refrigerant regulator. Yes Solencid valve (Rinfogrant regulator) Pil si used to collect refrigerant to the refrigerant regulator. Yes Solencid valve (Rinfogrant regulator) Pil si used to collect refrigerant to the refrigerant regulator. Yes Solencid valve (Diecharge pilps SVC) Pil si used to collect refrigerant to the refrigerant regulator. Yes Solencid valve (Diecharge pilps SVC) Pil si used to switch dual pressure gas to the refrigerant regulator. Yes Avey valve (Pilot exchanger valve) Pil si used to switch dual pressure gas pilps to high pressure or low pressure. Yes Avey valve (Pilot exchanger valve) Pil si used to switch dual pressure gas pilps to high pressure or low pressure. Yes Pil pressure switch (For INV compressor) Used to detect high pressure increases to stop operation and avoid high pressure increases in the fault operation. Yes Pilot	2	M2C			
Vac Electronic expansion valve Floornois as populated to keep the outlet superheated degree of subcooling heat exchanger constant.	4	M1F	Inverter fan		
Second	6	Y1E		While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.	
1	7	Y3E		PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.	
10	8	Y2E	Electronic expansion valve (Refrigerant charge EVJ)	This is used to open/close refrigerant charge port.	
11 Y4S Solenoid valve (Refrigerant regulator. 12 Y1S Solenoid valve (Refrigerant solution of the refrigerant to the refrigerant regulator. 13 Y7S Solenoid valve (Refrigerant solution of the refrigerant to the refrigerant regulator. 14 Y8S Solenoid valve (Discharge ple SVO) 15 Solenoid valve (Refrigerant regulator. 16 Y7S Solenoid valve (Discharge ple SVO) 16 Y8S Solenoid valve (Discharge ple SVO) 17 Solenoid valve (Discharge ple SVO) 18 Solenoid valve (Discharge ple SVO) 19 Solenoid valve (Discharge ple SVO) 19 Solenoid valve (Discharge ple SVO) 10 Y8S Solenoid valve (Discharge ple SVO) 10 Y8S Solenoid valve (Discharge ple SVO) 11 Y8S Solenoid valve (Discharge ple SVO) 11 Y8S Solenoid valve (Discharge ple SVO) 11 Y8S Solenoid valve (Discharge ple SVO) 12 Solenoid valve (Discharge ple SVO) 13 Y8S Solenoid valve (Discharge ple SVO) 14 Y8S Solenoid valve (Discharge ple SVO) 15 Y8S Solenoid valve (Discharge ple SVO) 16 Y8S Solenoid valve (Discharge ple SVO) 17 Solenoid valve (Discharge ple SVO) 18 Y8S Solenoid valve (Discharge ple SVO) 18 Y8S Solenoid valve (Discharge ple SVO) 19 Solenoid valve (Discharge ple SVO) 19 Solenoid valve (Discharge ple SVO) 10 Solenoid valve (Discharge ple SVO) 10 Solenoid ple Svolenoid ple Svolenoid ple Svolenoid valve (Discharge ple SVO) 11 Solenoid ple Svolenoid ple Svolenoid ple Svolenoid valve (Discharge ple SVO) 11 Solenoid ple Svolenoid ple Svolenoid ple Svolenoid ple Svolenoid valve (Discharge ple Tish) 12 Solenoid ple set exchanger (Apply subcooling to liquid refrigerant. 18 Solenoid ple set exchanger (Apply subcooling to liquid refrigerant (Program the SVO) 19 Solenoid ple set exchanger (Apply subcooling to liquid refrigerant (Program the SVO) 19 Solenoid ple set exchanger (Apply subcooling to liquid refrigerant (Program the SVO) 19 Solenoid ple set exchanger (Apply subcooling to liquid refrigerant from the refrigerant regulator. 19 Solenoid ple set exchanger (Note to several set of solenoid ple set set of	9	Y6S	Solenoid valve (Main bypass SVE)	This opens in cooling operation.	
12	10	Y5S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.	
This is used to collect refrigerant regulator. Yes Solenoid valve (Refrigerant regulator.) Yes Solenoid valve (Refrigerant regulator.) Yes Solenoid valve (Refrigerant regulator.) Pys Solenoid valve (Pleat exchanger switch 20SA) Pys Solenoid valve (Refrigerant regulator.) Pys Solenoid valve (Refrigerant regulator.) Pys Solenoid valve (Refrigerant regulator.) Pys Solenoid valve (Pleat exchanger switch 20SA) Pys Solenoid valve (Pleat exchanger switch 20SB) Pys Solenoid valve (Pleat exchanger switch 20SB) Pys Solenoid valve (Pleat exchanger switch (For IV) Pys Solenoid valve (Pleat exchanger switch (For IV) Pys Solenoid valve (Pleat exchanger switch (For IV) Pys Solenoid valve (Pleat exchanger spipe 10 for pys Solenoid valve switch (For IV) Pys Solenoid valve (Pleat exchanger switch (Por IV) Pys Solenoid valve (Pleat exchanger switch and pressure increases, to prevent any damage on components caused by pressure increases, to prevent any damage on components caused by pressure increases, to prevent any damage on components caused by pressure increases, to prevent any damage on components caused by pressure increases	11	Y4S	Solenoid valve (Refrigerant regulator liquid pipe SVL)	This is used to collect refrigerant to the refrigerant regulator.	
14 Y8S Solenoit valve (Discharge pipe SVO) 15 Y3S Solenoit valve (Discharge pipe SVO) 16 Y2S Solenoit valve (Discharge pipe of refrigerant regulator) 16 Y2S 4 way valve (Heat exchanger switch 20SA) 17 SINPH High pressure sensor 18 S2NPL Low pressure sensor 18 S2NPL Low pressure sensor 19 S1PH Hyperssure switch (For INV compressor) 19 S1PH Hyperssure switch (For INV compressor) 20 S2PH Hyperssure witch (For STD (Liquid pipe) 21 Pressure regulating valve (Liquid pipe) 22 Pressure regulating valve (Participerant regulator) 23 Pressure regulating valve (Participerant regulator) 24 Subcooling heat exchanger (Refrigerant regulator) 25 Pressure switch (For STD (Participerant regulator) 26 Pressure regulating valve (Liquid pipe) 27 Pressure regulating valve (Liquid pipe) 28 Pressure regulating valve (Netrigerant regulator) 29 Pressure regulating valve (Netrigerant regulator) 30 R1T Thermistor (Subcooling heat exchanger gas pipe Tg) 31 R8T Thermistor (Heat exchanger gas pipe Tg) 32 R8T Thermistor (Heat exchanger gas pipe Tg) 33 R8T Thermistor (Heat exchanger gas pipe Tg) 34 R8T Thermistor (Subcooling heat exchanger liquid pipe Tf) 35 Thermistor (Subcooling heat exchanger liquid pipe Tf) 36 Thermistor (Subcooling heat exchanger liquid pipe Tf) 37 Thermistor (Subcooling heat exchanger liquid pipe Tf) 38 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 39 R8T Thermistor (Subcooling heat exchanger liquid pipe Tf) 40 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 40 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 40 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 40 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 40 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 41 Thermistor (Subcooling heat exchanger liquid pipe Tg) 42 Thermistor (Subcooling heat exchanger liquid pipe Tg) 43 R8T Thermistor (Subcooling heat exchanger liquid pipe Tg) 44 Thermistor (Subcooling heat exchanger) 55 R8T Thermistor (Subcooling heat exchanger) 57 Thermistor (Subcooling heat exchanger) 58	12	Y1S	regulator gas purging pipe	This is used to collect refrigerant to the refrigerant regulator.	
Possible of effigerant regulatory Possible size of the temperature of switch 20SA	13	Y7S	Solenoid valve (Refrigerant regulator discharge pipe SVO)	This is used to discharge refrigerant from the refrigerant regulator.	
16 Y2S 4 way valve (Dual pressure gas pipe switch 20SB) 17 SINPH High pressure sensor Used to detect high pressure. 18 S2NPL Low pressure sensor Used to detect high pressure. 19 S1PH High pressure switch (For INV compressor) 19 S1PH Hy pressure switch (For INV compressor) 20 S2PH Hy pressure switch (For INV compressor) 21 Pressure regulating valve (Liquid pipe) 22 Pressure regulating valve (Refrigerant regulator) 23 Pressure regulating valve (Refrigerant regulator) 24 Subcooling heat exchanger 25 Refrigerant regulator) 26 Pressure resultating valve (Refrigerant regulator) 27 Pressure regulator 28 Subcooling heat exchanger 29 Capillary tube Used to return the refrigerating oil separated through the oil separator to the STD1 compressor. 29 Pressure regulator (Subcooling heat exchanger pipe: Tigh) 30 R1T Thermistor (Suction pipe: TSA) 31 R8T Thermistor (Suction pipe: TSA) 32 R3T Thermistor (Heat exchanger gas pipe: Tsh) 33 R8T Thermistor (Heat exchanger liquid pipe Ti) 34 PAT Thermistor (Heat exchanger gas pipe: Tsh) 35 R7T Thermistor (Heat exchanger gas pipe: Tsh) 36 R8T Thermistor (Gubcooling heat exchanger liquid pipe Ti) 37 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 38 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 39 R8T Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Subcooling heat exchanger liquid pipe Ti) 40 PAT Thermistor (Invited pipe Ti)	14	Y8S	pipe of refrigerant regulator)	Bypass the high pressure gas to the refrigerant regulator.	
17 SINPH High pressure sensor Used to detect high pressure. 18 S2NPL Low pressure switch (For INV compressor) Used to detect high pressure. 19 S1PH HP pressure switch (For INV compressor) Used to detect low pressure. 20 S2PH HP pressure switch (For STD compressor 1) This functions when pressure increases to stop operation and avoid high pressure increases in the fault operation. 22 — Pressure regulating valve (Liquid pipe) This is used when pressure increases, to prevent any damage on components caused by pressure increases in transport or storage. 23 — Pressure regulating valve (Refrigerant regulator) This is used when pressure increases, to prevent any damage on components caused by pressure increases in transport or storage. 24 — Subcooling heat exchanger Apply subcooling to liquid refrigerant. 25 — Refrigerant regulator Surplus refrigerant is held according to the operation conditions. 26 — Capillary tube Used to return the refrigerating oil separated through the oil separator to the INV compressor. 27 — Capillary tube Used to detect outdoor temperature, correct discharge pipe temperature, and others. 30 RRT Thermistor (Outdoor air: Ta) Used to detect outdoor temperature, correct discharge pipe temperature protection control. 31 RRT Thermistor (Subcooling pier TsA) Used to detect discharge pipe temperature. 32 R3T Thermistor (Heat exchanger dicier: Tb) Used to detect diquid pipe temperature of air heat exchanger. Used to exercise the content of superheated degree when an evaporator is used for outdoor unit heat exchanger gas pipe Tsh) 35 RAT Thermistor (Heat exchanger liquid pipe Tf) Thermistor (Subcooling heat exchanger liquid pipe Tf) 36 RAT Thermistor (Subcooling heat exchanger liquid pipe Tf) Thermistor (Subcooling heat exchanger liquid pipe Tf) 37 Thermistor (Subcooling heat exchanger liquid pipe the exchanger liquid pipe the exchanger liquid pipe the exchanger. Used to exercise the constant control of superheated degree at the outlet oxchanger. Used to exercise the constant control of s	15	Y3S	switch 20SA)	This is used to switch outdoor heat exchanger to evaporator or condenser.	
18 S2NPL Low pressure sensor Used to detect low pressure.	16	Y2S	4 way valve (Dual pressure gas pipe switch 20SB)	This is used to switch dual pressure gas pipe to high pressure or low pressure.	
S1PH HP pressure switch (For INV compressor) This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.	17	S1NPH	High pressure sensor	Used to detect high pressure.	
This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation. This functions when pressure increases to stop operation and avoid high pressure increases in the fault operation. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increases in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This detect timesport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport	18	S2NPL	Low pressure sensor	Used to detect low pressure.	
20 S2PH compressor 1) 22 — Pressure regulating valve (Liquid pipe) 23 — Pressure regulating valve (Refrigerant regulator) 24 — Subcooling heat exchanger appipe: Td1) 25 — Refrigerant regulator 26 — Capillary tube 27 — Capillary tube 28 — Capillary tube 29 — Capillary tube 30 R1T Thermistor (Suction pipe: TsA) 31 R8T Thermistor (Suction pipe: TsA) 32 R31T Thermistor (Heat exchanger pipe: Td1) 35 R4T Thermistor (Heat exchanger pipe: Td1) 36 R2T Thermistor (Heat exchanger pipe: Tsh) 37 R7T Thermistor (Subcooling heat exchanger pipe: Tsh) 38 R5T Thermistor (Subcooling heat exchanger gas pipe: Tsh) 39 R6T Thermistor (Subcooling heat exchanger gas pipe: Tsh) 40 R9T Thermistor (Introduction Tsc) 4 Thermistor (Introduction pipe Tsc) 4 Thermistor (Subcooling heat exchanger gas pipe: Tsc) 4 Thermistor (Subcooling heat exchanger gas pipe: Tsh) 5 Thermistor (Subcooling heat exchanger gas pipe: Tsh) 6 Thermistor (Subcooling heat exchanger gas pipe: Tsh) 7 Thermistor (Subcooling heat exchanger gas pi	19	S1PH	compressor)	This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.	
Pressure regulating valve (Refrigerant regulator) Pressure regulating valve (Refrigerant regulator) Pressure increase in transport or storage. This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage. Apply subcooling to liquid refrigerant. Pressure increase in transport or storage. Apply subcooling to liquid refrigerant. Pressure increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling to liquid refrigerant. Bright increase in transport or storage. Apply subcooling heat exchanger increases in transport or storage. Bright increase in transport or	20	S2PH	HP pressure switch (For STD compressor 1)		
Capillary tube Capillary tube Used to return the refrigerating oil separated through the oil separator to the STD1 compressor.	22	_	(Liquid pipe)	71	
25 — Refrigerant regulator Surplus refrigerant is held according to the operation conditions. 26 — Capillary tube Used to return the refrigerating oil separated through the oil separator to the INV compressor. 27 — Capillary tube Used to return the refrigerating oil separated through the oil separator to the STD1 compressor. 29 — Capillary tube This is used to discharge refrigerant from the refrigerant regulator. 30 R1T Thermistor (Outdoor air: Ta) Used to detect outdoor temperature, correct discharge pipe temperature, and others. 31 R8T Thermistor (Suction pipe: TsA) Used to detect suction pipe temperature. 32 R31T Thermistor (INV discharge pipe: Tds1) Used to detect discharge pipe temperature. 33 R32T Thermistor (STD1 discharge pipe: Tds1) Used to detect discharge pipe temperature. Used for compressor temperature protection control. 35 R4T Thermistor (Heat exchanger desicer: Tb) Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. 36 R2T Thermistor (Heat exchanger liquid pipe Tg) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger liquid pipe T1) 38 R5T Thermistor (Subcooling heat exchanger. Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger liquid pipe T1) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling peeds to the constant control of superheated degree at the outlet of supercooled heat exchanger. 39 R6T Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. Thermistor (Iquid pipe T1) This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.		_	(Refrigerant regulator)	by pressure increase in transport or storage.	
Used to return the refrigerating oil separated through the oil separator to the INV compressor.	24		Subcooling heat exchanger	11.7	
27 — Capillary tube Used to return the refrigerating oil separated through the oil separator to the STD1 compressor. 29 — Capillary tube This is used to discharge refrigerant from the refrigerant regulator. 30 R1T Thermistor (Outdoor air: Ta) Used to detect outdoor temperature, correct discharge pipe temperature, and others. 31 R8T Thermistor (Suction pipe: TsA) Used to detect suction pipe temperature. 32 R31T Thermistor (INV discharge pipe: Tdi) Used to detect discharge pipe temperature. 33 R32T Thermistor (STD1 discharge pipe: Tds1) Used to detect discharge pipe temperature. Used for compressor temperature protection control. 35 R4T Thermistor (Heat exchanger deicer: Tb) Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. 36 R2T Thermistor (Heat exchanger gas pipe Tg) This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging. 37 R7T Thermistor (Heat exchanger liquid pipe Tf) This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerant regulator. 38 R5T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. 39 R6T Thermistor (Subcooling heat exchanger liquid pipe Tl) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. 39 Thermistor (Liquid pipe Ts) This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger. 39 Thermistor (Liquid pipe Ts) This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	25	_	Refrigerant regulator	Surplus refrigerant is held according to the operation conditions.	
compressor. 29 — Capillary tube This is used to discharge refrigerant from the refrigerant regulator. 30 R1T Thermistor (Outdoor air: Ta) Used to detect outdoor temperature, correct discharge pipe temperature, and others. 31 R8T Thermistor (Suction pipe: TsA) Used to detect suction pipe temperature. 32 R31T Thermistor (INV discharge pipe: Tdi) Used to detect discharge pipe temperature. 33 R32T Thermistor (STD1 discharge pipe: Tds1) Used to detect discharge pipe temperature. Used for compressor temperature protection control. 35 R4T Thermistor (Heat exchanger deicer: Tb) Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. 36 R2T Thermistor (Heat exchanger gas pipe Tg) This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging. 37 R7T Thermistor (Heat exchanger liquid pipe temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerant regulator. 38 R5T Thermistor (Subcooling heat exchanger as pipe: Tsh) 39 R6T Thermistor (Subcooling heat exchanger liquid pipe Tl) Thermistor (Subcooling heat exchanger liquid pipe Tl) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger liquid pipe Tl) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. This detects temperature of liquid pipe between the liquid stop valve and subcooling	26	_	Capillary tube		
R1T Thermistor (Outdoor air: Ta) R8T Thermistor (Suction pipe: TsA) Used to detect outdoor temperature, correct discharge pipe temperature, and others. Used to detect suction pipe temperature. Used to detect suction pipe temperature. Used to detect discharge pipe temperature. Used for compressor temperature protection control. Used to detect discharge pipe temperature. Used for compressor temperature protection control. Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. Thermistor (Heat exchanger gas pipe Tg) Thermistor (Heat exchanger liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging. Thermistor (Heat exchanger liquid pipe temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator. Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger gas pipe: Tsh) Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger liquid pipe Ti) Thermistor (Subcooling heat exchanger.) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	27	_	Capillary tube		
R8T Thermistor (Suction pipe: TsA) Used to detect suction pipe temperature. R31T Thermistor (INV discharge pipe: Tdi) R32T Thermistor (STD1 discharge pipe: Tds1) R33 R32T Thermistor (Heat exchanger deicer: Tb) R4T Thermistor (Heat exchanger gas pipe Tg) R7T Thermistor (Heat exchanger liquid pipe Tf) R8T Thermistor (Subcooling heat exchanger liquid pipe: Tsh) R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R8T Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of superheated degree at the outlet of superheated degree at the out	29		Capillary tube	This is used to discharge refrigerant from the refrigerant regulator.	
R31T Thermistor (INV discharge pipe: Tdi) R32T Thermistor (STD1 discharge protection control. R33 R32T Thermistor (STD1 discharge protection control. R44T Thermistor (Heat exchanger deicer: Tb) R55 R47 Thermistor (Heat exchanger gas pipe Tg) R56 R77 Thermistor (Heat exchanger liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. R57 Thermistor (Heat exchanger liquid pipe Tf) R58 R57 Thermistor (Subcooling heat exchanger gas pipe: Tsh) R58 R69 Thermistor (Subcooling heat exchanger liquid pipe Tl) R59 R60 R60 R60 Thermistor (Liquid pipe Tsc) R60 R60 Thermistor (Liquid pipe Tsc) R60 R60 Thermistor (Liquid pipe Tsc) L50 Discharge pipe temperature. Used for compressor temperature on the exchanger. Used to make judgments on unit heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator. R60 R60 Thermistor (Subcooling heat exchanger.) L50 Discharge pipe temperature. Used for compressor temperature on the exchanger. Used to exercise the constant exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator. L50 Discharge pipe Tsh L51 Discharge pipe temperature on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. R62 Thermistor (Liquid pipe Tsc) T63 Discharge pipe temperature on the evaporation side of subcooling heat exchanger. T64 Discharge pipe Tg) L56 Discharge pipe Tg) L57 Discharge pipe temperature on the evaporation side of subcooling heat exchanger. L58 Discharge pipe Tsh L58 Discharge pipe Tsh L59 Discharge pipe Tsh L50 Discharge pipe temperature on the evaporation side of subcooling heat exchanger. L57 Discharge pipe Tsh L58 Discharge pipe Tsh L58 Discharge pipe Tsh L58 Discharge pipe Tsh L59 Discharge pipe Tsh L59 Discharge pipe Tsh L59 Discharge pipe Tsh L50 Discharge p	30	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.	
Dispect Tdi	31	R8T	Thermistor (Suction pipe: TsA)	Used to detect suction pipe temperature.	
R32T pipe: Tds1) R4T Thermistor (Heat exchanger deicer: Tb) R2T Thermistor (Heat exchanger gas pipe Tg) R5T Thermistor (Heat exchanger liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation. R6T Thermistor (Heat exchanger gas pipe Tg) R7T Thermistor (Heat exchanger liquid pipe Tf) R6T Thermistor (Subcooling heat exchanger gas pipe: Tsh) R6T Thermistor (Subcooling heat exchanger liquid pipe Tl) R6T Thermistor (Subcooling heat exchanger liquid pipe Tl) R6T Thermistor (Subcooling heat exchanger liquid pipe Tl) R6T Thermistor (Subcooling heat exchanger. R6T Thermistor (Subcooling heat exchanger.) This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger. This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	32	R31T		Used to detect discharge pipe temperature. Used for compressor temperature	
deicer: Tb) on defrosting operation. Thermistor (Heat exchanger gas pipe Tg) Thermistor (Heat exchanger gas pipe Tg) Thermistor (Heat exchanger liquid pipe Tf) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger liquid pipe Tf) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. Thermistor (Liquid pipe Tsc) This detects temperature of liquid pipe between the liquid stop valve and subcooling	33	R32T	Thermistor (STD1 discharge pipe: Tds1)		
constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging. R7T Thermistor (Heat exchanger liquid pipe Tf) Thermistor (Subcooling heat exchanger gas pipe: Tsh) R8T Thermistor (Subcooling heat exchanger gas pipe: Tsh) R8T Thermistor (Subcooling heat exchanger gas pipe: Tsh) R8T Thermistor (Subcooling heat exchanger gas pipe: Tsh) Thermistor (Subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. Thermistor (Liquid pipe Tsc) This detects temperature of liquid pipe between the liquid stop valve and subcooling	35	R4T		Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation.	
R7T Inermistor (Reat exchanger liquid pipe Tf) electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator. R5T Thermistor (Subcooling heat exchanger gas pipe: Tsh) Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger.	36	R2T		This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit	
R5T Thermistor (Subcooling heat exchanger gas pipe: Tsh) exchanger gas pipe: Tsh) exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger. Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger. Thermistor (Subcooling heat exchanger. This detects temperature of liquid pipe between the liquid stop valve and subcooling	37	R7T		electronic expansion valve. Used to make judgments on the recover or discharge	
exchanger liquid pipe TI) subcooling heat exchanger. Thermister (Liquid pipe Tsc) This detects temperature of liquid pipe between the liquid stop valve and subcooling	38	R5T	exchanger gas pipe: Tsh)	exchanger. Used to exercise the constant control of superheated degree at the outlet	
	39	R6T			
	40	R9T	Thermistor (Liquid pipe Tsc)		

SiBE37-704 Refrigerant Circuit

REMQ10P, 12P

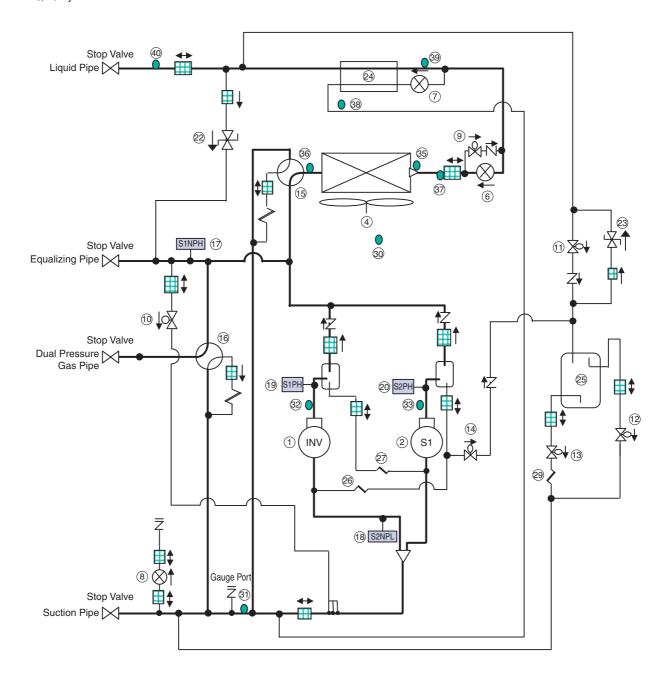


Refrigerant Circuit SiBE37-704

1.5 REMQ14P, 16P (Multi 14, 16HP)

			-	
No. in refrigerant system diagram	Symbol	Name	Major Function	
1	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 210Hz by using the inverter,	
2	M2C	Standard compressor 1 (STD1)	while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Stan	
3	МЗС	Standard compressor 2 (STD2)	compressor.	
	11100	Staridard Compressor E (C12E)	Compressor operation steps : Refer to page 111~115.	
4	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.	
5	M2F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.	
6	Y1E	Electronic expansion valve (Main: EVM)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.	
7	Y3E	Electronic expansion valve (Subcool: EVT)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.	
8	Y2E	Electronic expansion valve (Refrigerant charge EVJ)	This is used to open/close refrigerant charge port.	
9	Y6S	Solenoid valve (Main bypass SVE)	This opens in cooling operation.	
10	Y5S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.	
11	Y4S	Solenoid valve (Refrigerant regulator liquid pipe SVL)	This is used to collect refrigerant to the refrigerant regulator.	
12	Y1S	Solenoid valve (Refrigerant regulator gas purging pipe SVG)	This is used to collect refrigerant to the refrigerant regulator.	
13	Y7S	Solenoid valve (Refrigerant regulator discharge pipe SVO)	This is used to discharge refrigerant from the refrigerant regulator.	
14	Y8S	Solenoid valve (Discharge pipe of refrigerant regulator)	Bypass the high pressure gas to the refrigerant regulator.	
15	Y3S	4 way valve (Heat exchanger switch 20SA)	This is used to switch outdoor heat exchanger to evaporator or condenser.	
16	Y2S	4 way valve (Dual pressure gas pipe switch 20SB)	This is used to switch dual pressure gas pipe to high pressure or low pressure.	
17	S1NPH	High pressure sensor	Used to detect high pressure.	
18	S2NPL	Low pressure sensor	Used to detect low pressure.	
19	S1PH	HP pressure switch (For INV compressor)		
20	S2PH	HP pressure switch (For STD compressor 1)	This functions when pressure increases to stop operation and avoid high pressure increase in the fault operation.	
21	S3PH	HP pressure switch (For STD compressor 2)		
22		Pressure regulating valve (Liquid pipe)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
23		Pressure regulating valve (Refrigerant regulator)	This is used when pressure increases, to prevent any damage on components caused by pressure increase in transport or storage.	
24	_	Subcooling heat exchanger	Apply subcooling to liquid refrigerant.	
25		Refrigerant regulator	Surplus refrigerant is held according to the operation conditions.	
26		Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.	
27		Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD1 compressor.	
28		Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD2 compressor.	
29		Capillary tube	This is used to discharge refrigerant from the refrigerant regulator.	
30	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.	
31	R8T	Thermistor (Suction pipe: TsA)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.	
32	R31T	, , , ,	Osca to acteut suction pipe temperature.	
		Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature. Used for compressor temperature	
33	R32T	Thermistor (STD1 discharge pipe: Tds1)	protection control.	
34	R33T	Thermistor (STD2 discharge pipe: Tds2)		
35	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger. Used to make judgments on defrosting operation.	
36	R2T	Thermistor (Heat exchanger gas pipe Tg)	This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging.	
37	R7T	Thermistor (Heat exchanger liquid pipe Tf)	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator.	
38	R5T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	This detects temperature of gas pipe on the evaporator side for the subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of supercooled heat exchanger.	
39	R6T	Thermistor (Subcooling heat exchanger liquid pipe TI)	This detects temperature of liquid pipe between the main expansion valve and subcooling heat exchanger.	
40	R9T	Thermistor (Liquid pipe Tsc)	This detects temperature of liquid pipe between the liquid stop valve and subcooling heat exchanger.	

SiBE37-704 Refrigerant Circuit

REMQ14P, 16P

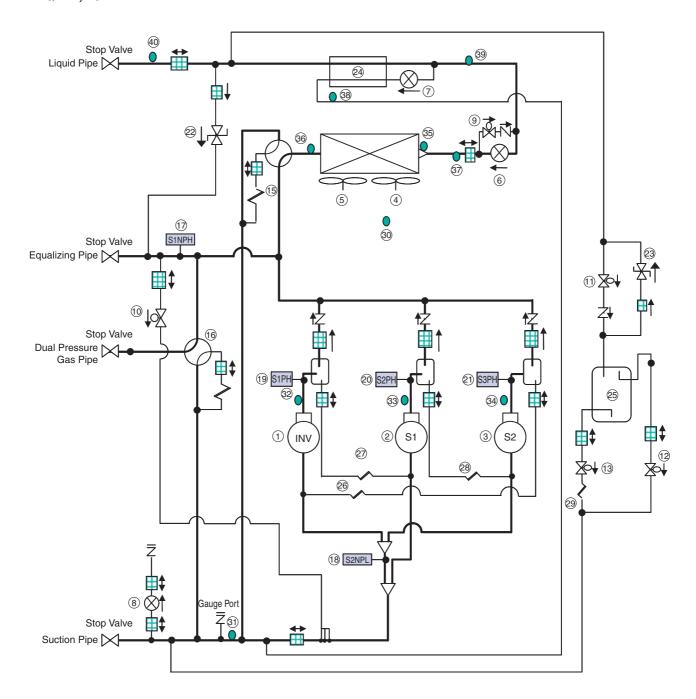


Refrigerant Circuit SiBE37-704

1.6 BS Unit Functional Parts

BSVQ100, 160, 250PV1

No.	Name	Symbol	Function
1	Electronic expansion valve (EVH)	Y4E	Opens while in heating operation or all indoor units are in cooling operation. (Max: 760pls)
2	Electronic expansion valve (EVL)	Y5E	Opens while in cooling operation. (Max : 760pls)
3	Electronic expansion valve (EVHS)	Y2E	Opens while in heating operation or all indoor units are in cooling operation. (Max: 480pls)
4	Electronic expansion valve (EVLS)	Y3E	Opens while in cooling operation. (Max : 480pls)
5	Electronic expansion valve (EVSC)	Y1E	In simultaneous cooling and heating operation, it is used to subcool liquid refrigerants when an indoor unit downstream of this BS unit is in heating operation.(Max: 480pls)
6	Capillary tube		Used to bypass high pressure gas to low pressure side to protect "Refrigerant accumulation" in high and low pressure gas pipes.


Note: Factory set of all EV opening: 60pls

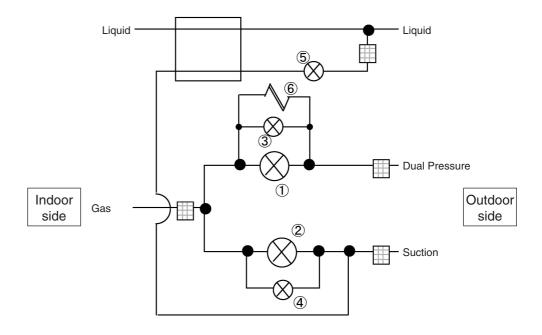

SiBE37-704 Refrigerant Circuit

1.7 Indoor Units

FXCQ, FXFQ, FXZQ, FXKQ, FXDQ, FXSQ, FXMQ, FXHQ, FXAQ, FXLQ, FXNQ

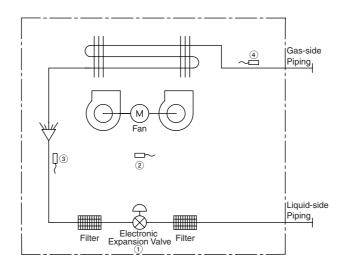


No.	Name	Symbol	Function
1)	Electronic expansion valve	Y1E	Used to control superheated degree of gas when cooling and subcooled degree when heating. (Max. 2000 pls)
2	Suction air thermistor	R1T	Used for thermostat control.
3	Liquid pipe thermistor R2T		Used to control superheated degree of gas when cooling and subcooled degree when heating.
4	Gas pipe H3T		Used for gas superheated degree control when cooling.

Functional Parts Layout SiBE37-704


2. Functional Parts Layout

2.1 REYQ8P, 10P, 12P

Plan

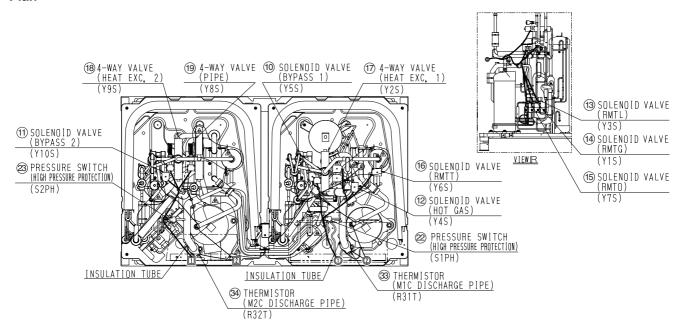


Front View

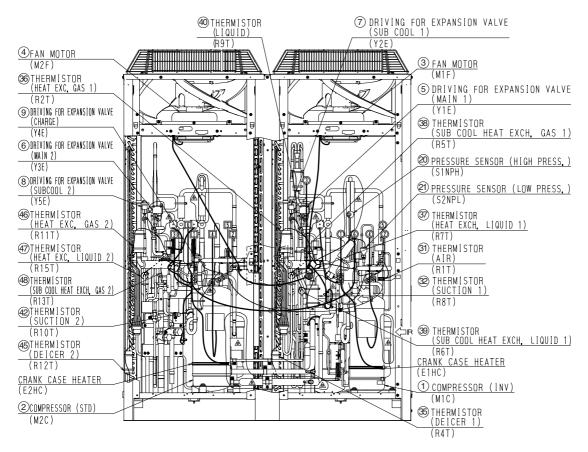


Note: For reference numbers, refer to page 58.

2.2 REYQ14P, 16P

Plan

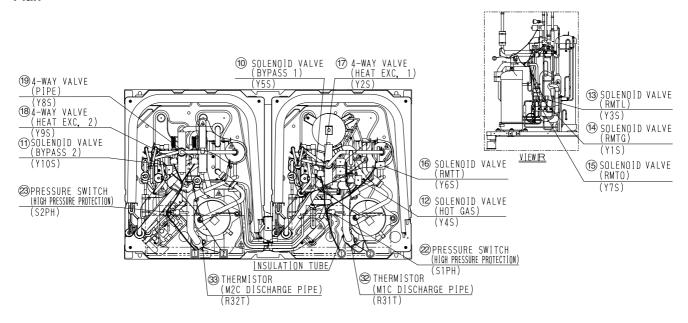

Front View

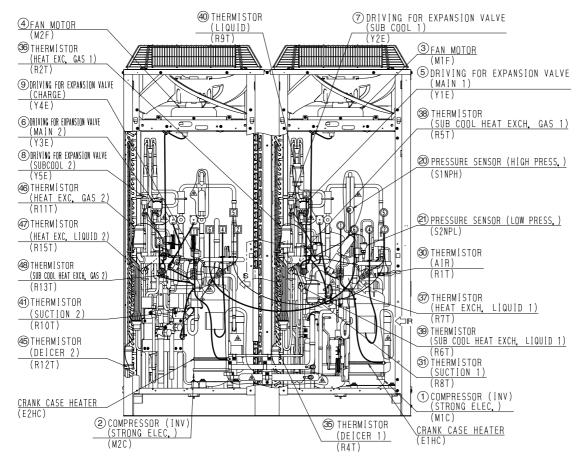


Note: For reference numbers, refer to page 60.


Functional Parts Layout SiBE37-704

2.3 REMQ8P

Plan

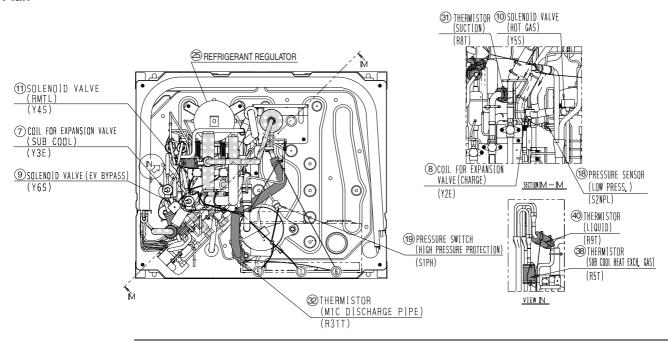

Front View

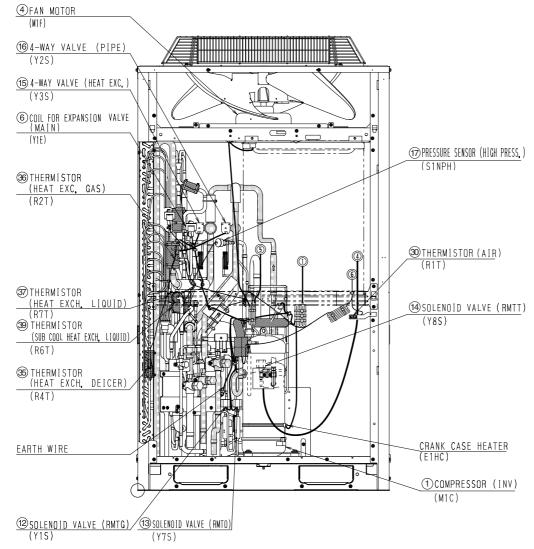


Note: For reference numbers, refer to page 62.

2.4 REMQ10P, 12P

Plan ③ THERMISTOR ① SOLENOID VALVE (SUCTION) (HOT GAS) **EXECUTION**STREET RESIDENCE TO THE STREET RESIDENCE 11SOLENOID VALVE (RMTL) (0) (Y4S) 8 COIL FOR EXPANSION (SUB COOL) (Y3E) ®PRESSURE SENSOR VALVE(CHARGE) SECTION IM — IM (LOW PRESS.) (Y2E) 9 SOLENOID VALVE (S2NPL) INSULATION TUBE (EV BYPASS) (Y6S) 0 ② PRESSURE SWITCH (HIGH PRESSURE PROTECTION) 40THERMISTOR (LIQUID) (19) PRESSURE SWITCH (HIGH PRESSURE PROTECTION) ₹ THERMISTOR (SUB COOL HEAT EXCH, GAS) (S1PH) (R5T) ③ THERMISTOR (M2C DISCHARGE PIPE) VIEW IN ③1)THERMISTOR ((M1C DISCHARGE PIPE) (R32T) (R31T)

Front View

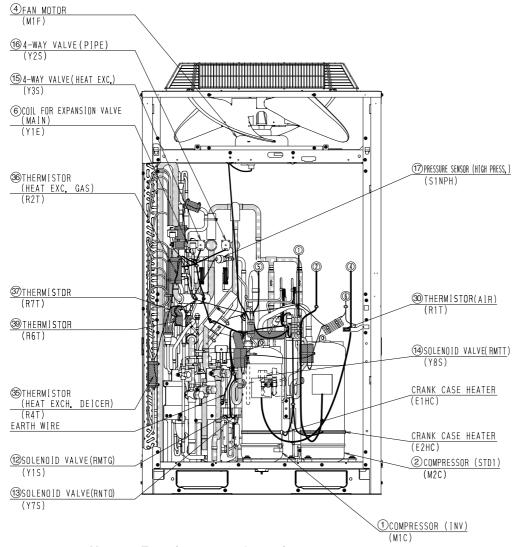


Note: For reference number, refer to page 64.


Functional Parts Layout SiBE37-704

2.5 **REMQ14P**, 16P

Plan

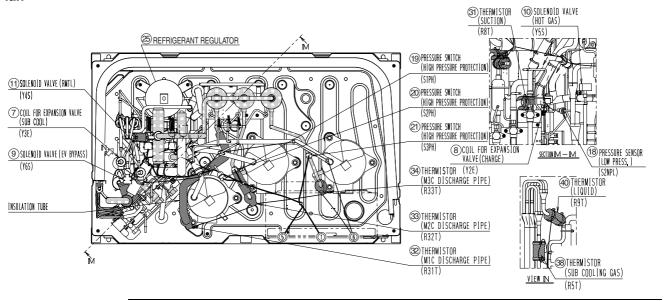

Front View

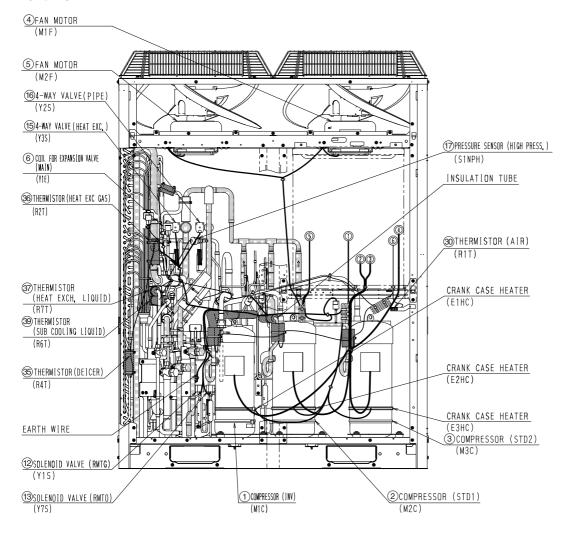


Note: For reference number, refer to page 66.


3. Refrigerant Flow for Each Operation Mode

REYQ8P, 10P, 12P


Cooling Operation

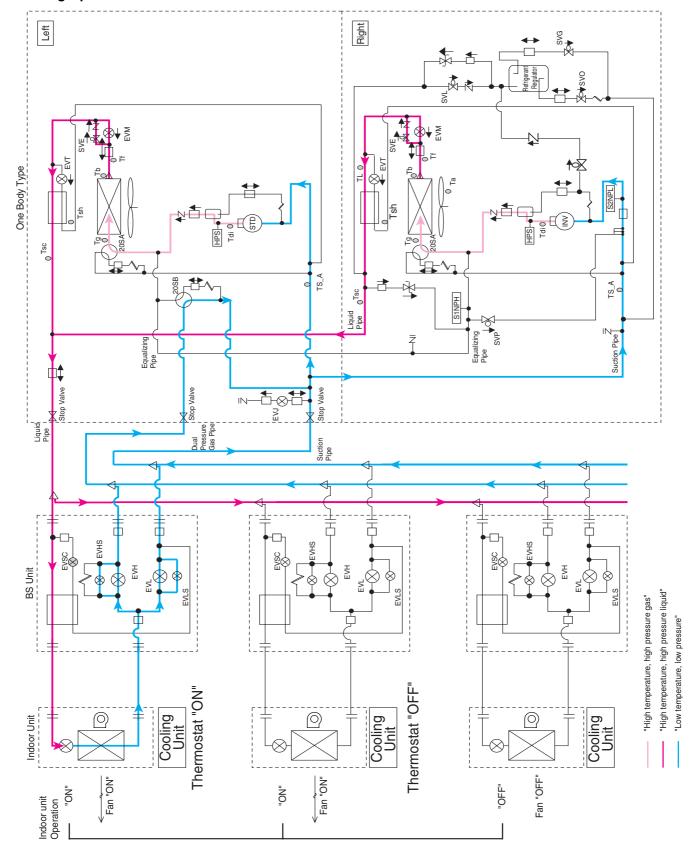


Heating Operation

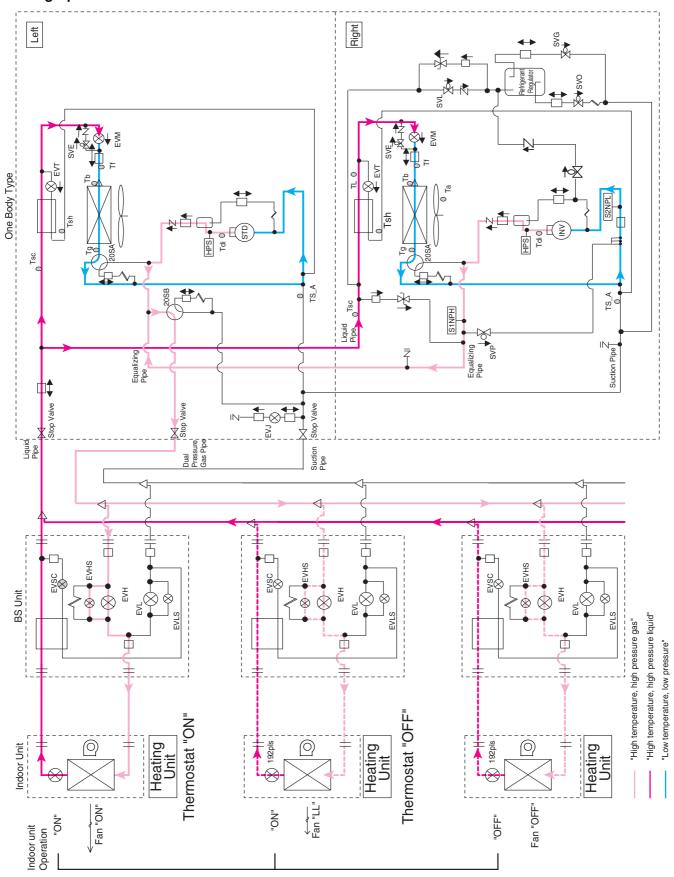

Simultaneous Cooling / Heating Operation

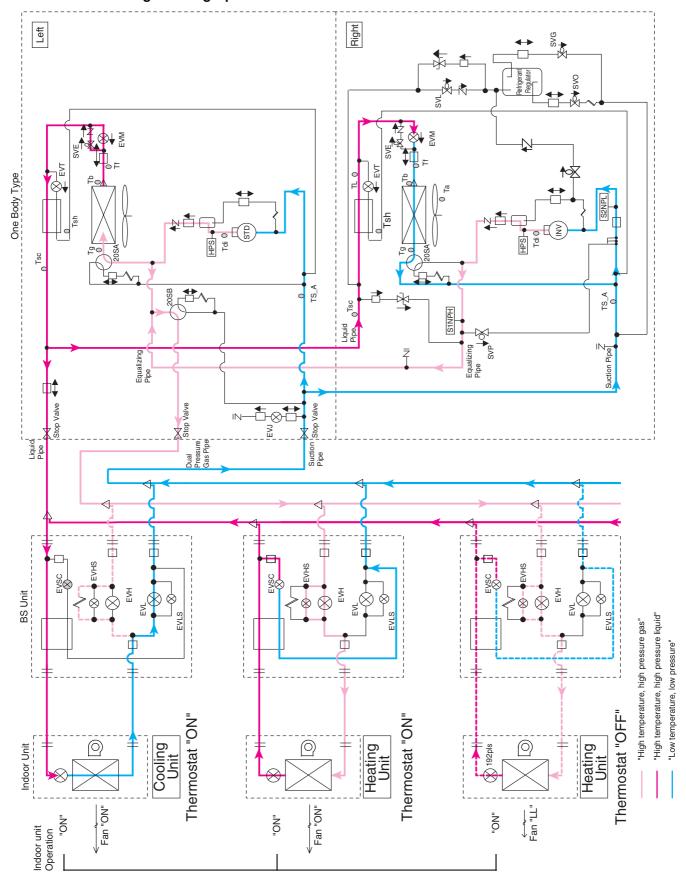


Cooling Oil Return Operation

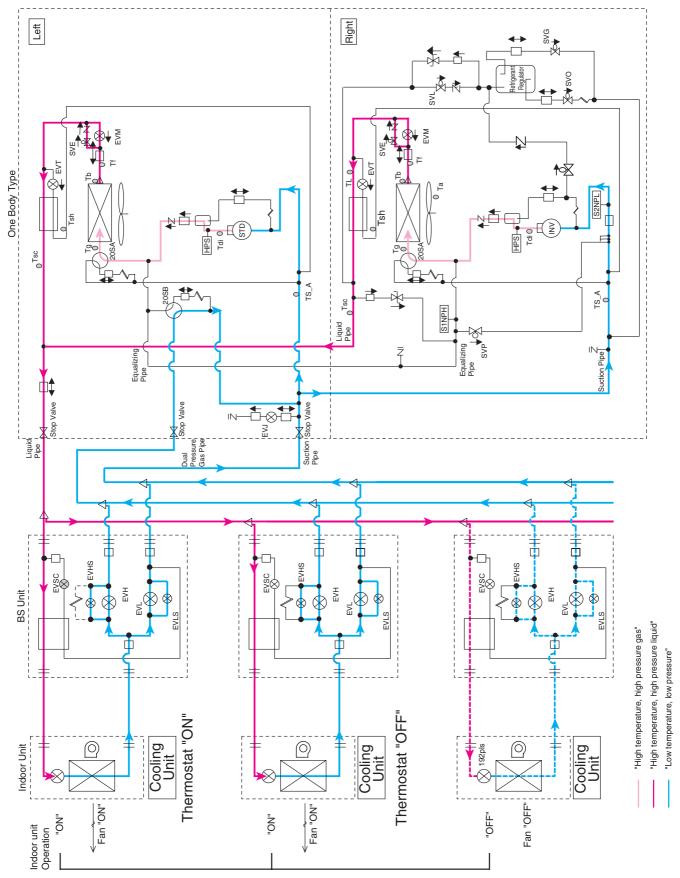

Heating Oil Return Operation Right Left One Body Type Tdi o HPS H Suction Pipe Equalizing Pipe Equalizing Pipe Dual Pressure Gas Pipe Suction Pipe BS Unit BS Unit BS Unit


"High temperature, high pressure liquid" "High temperature, high pressure gas" "Low temperature, low pressure" Thermostat "OFF" Thermostat "ON" Heating Unit Heating Unit Heating Unit Indoor Unit Indoor Unit ndoor Unit Fan "ON" Fan "OFF" NO NO "OFF" Indoor unit Operation

Oil Return Operation at Simultaneous Cooling / Heating Operation

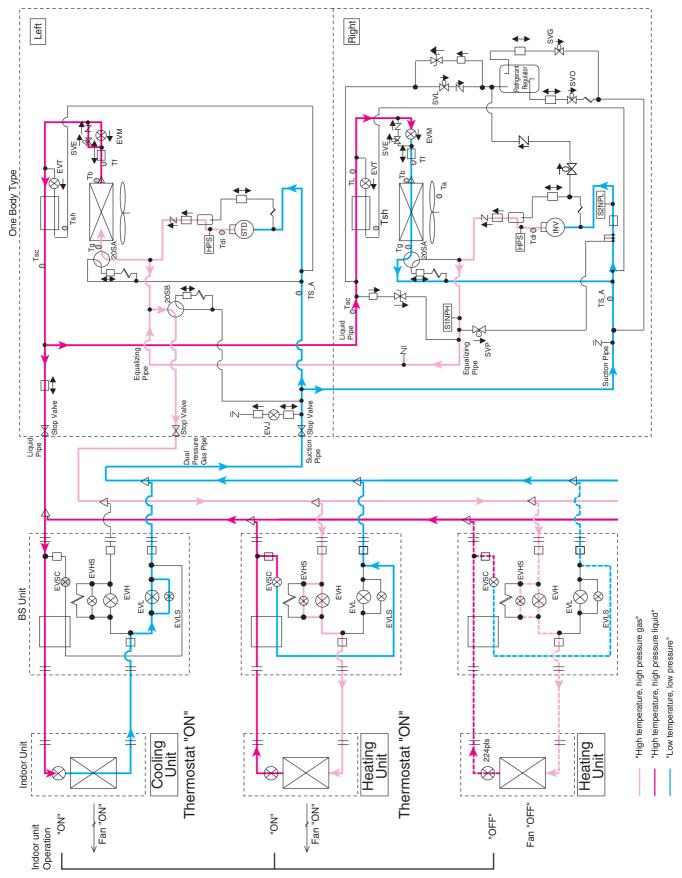


Partial Defrosting 1 (Defrosting in the Right Unit) Right Left One Body Type HPS H HPS HPS Tdi O TS_A TS_A Equalizing Pipe Stop Valve Liquid Pipe Dual Pressure Gas Pipe Suction Pipe BS Unit "High temperature, high pressure liquid" "High temperature, high pressure gas" Thermostat "ON" Thermostat "ON" "Low temperature, low pressure" Cooling Unit Heating Unit Indoor Unit Fan "ON" Fan "OFF" NO NO Indoor unit Operation

Partial Defrosting 2 (Defrosting in the Left Unit)

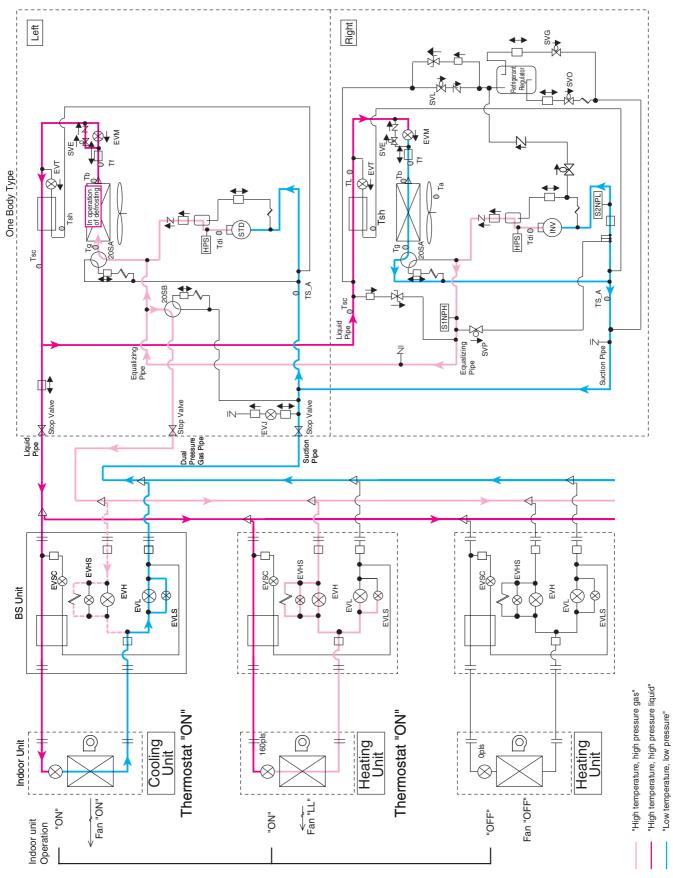


REYQ14P, 16P


Cooling Operation

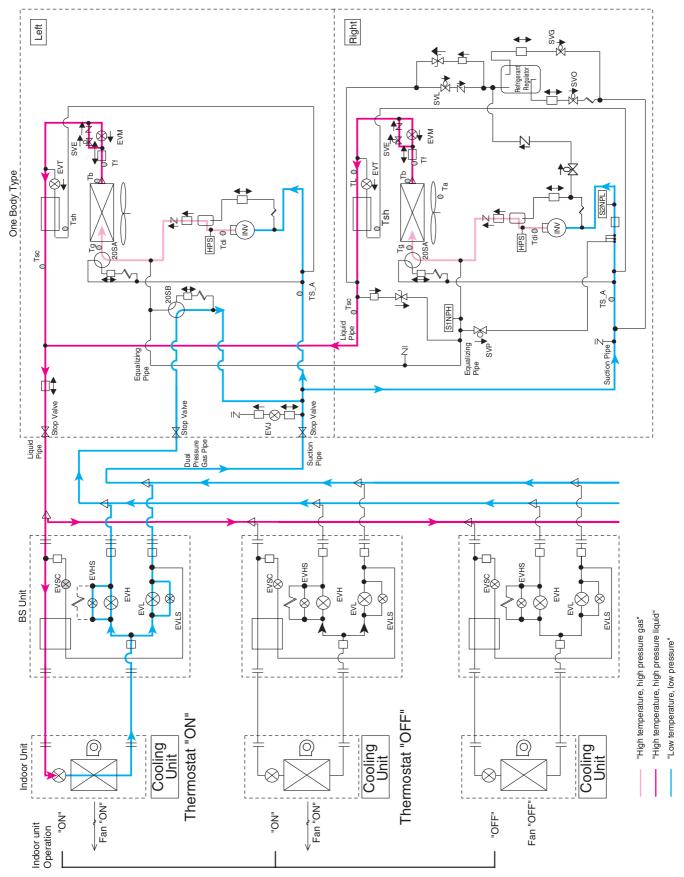


Heating Operation

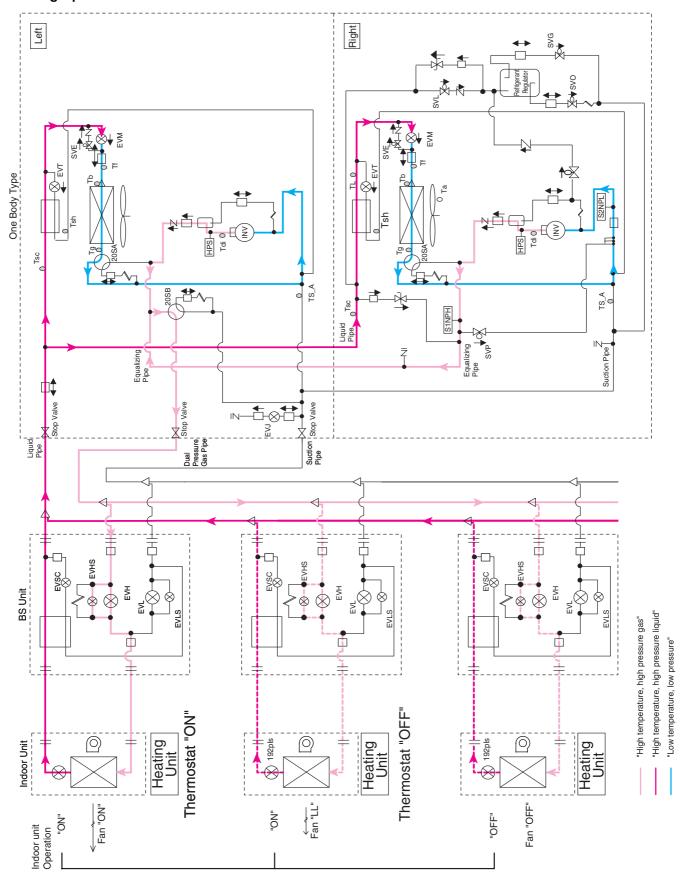


Simultaneous Cooling / Heating Operation

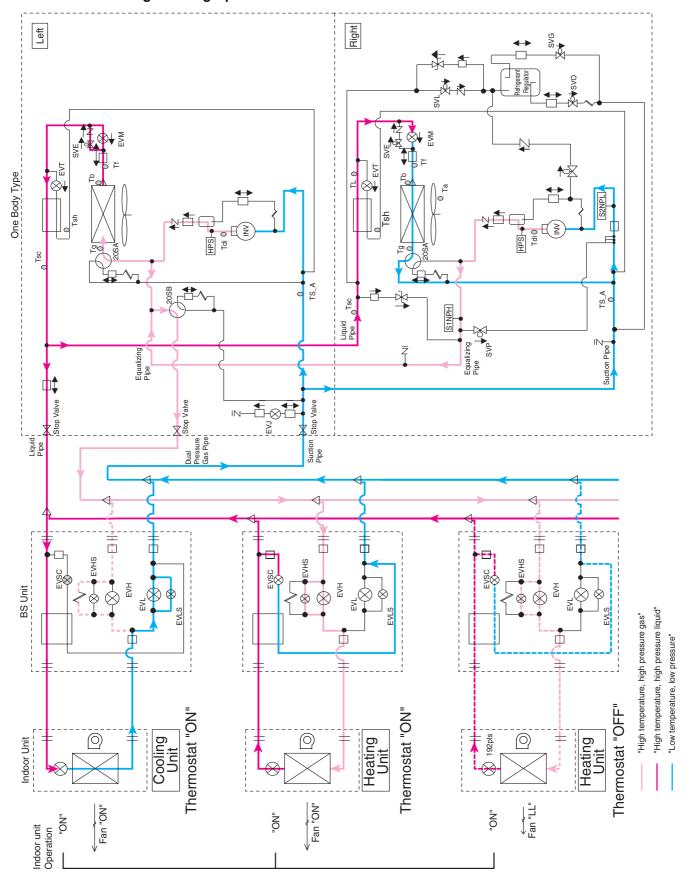


Cooling Oil Return Operation

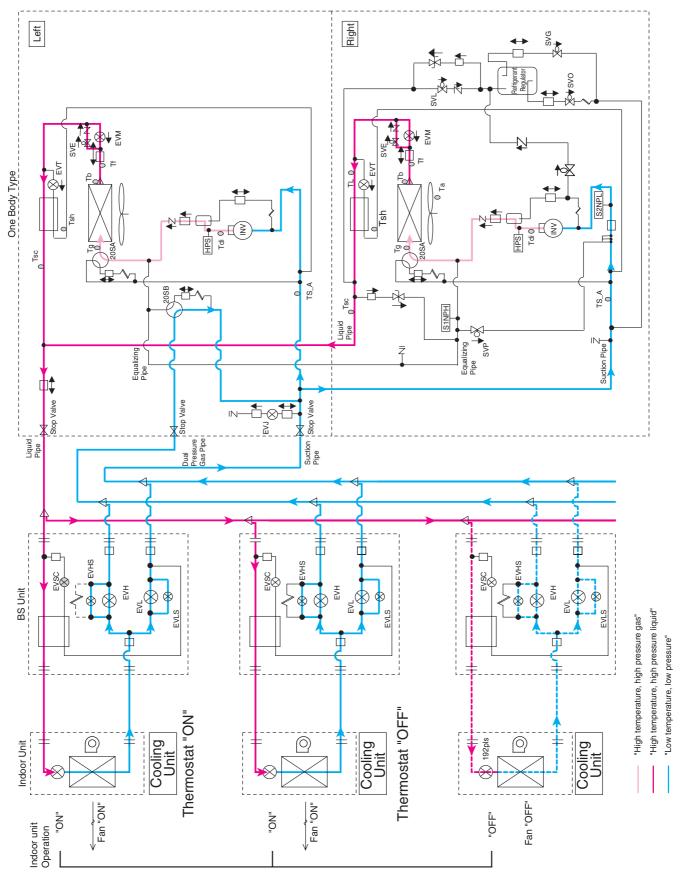


Heating Oil Return Operation

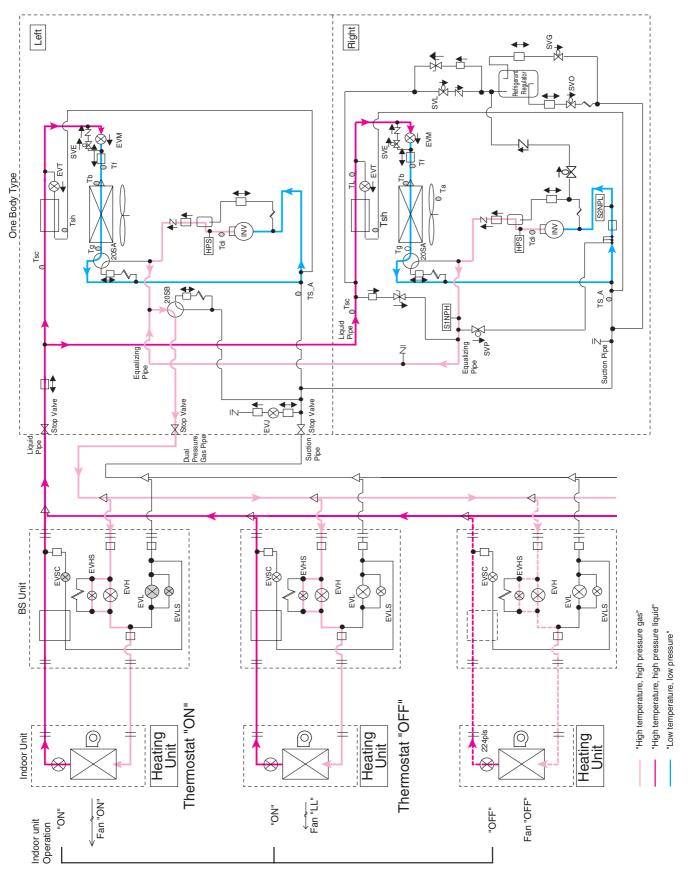


Oil Return Operation at Simultaneous Cooling / Heating Operation

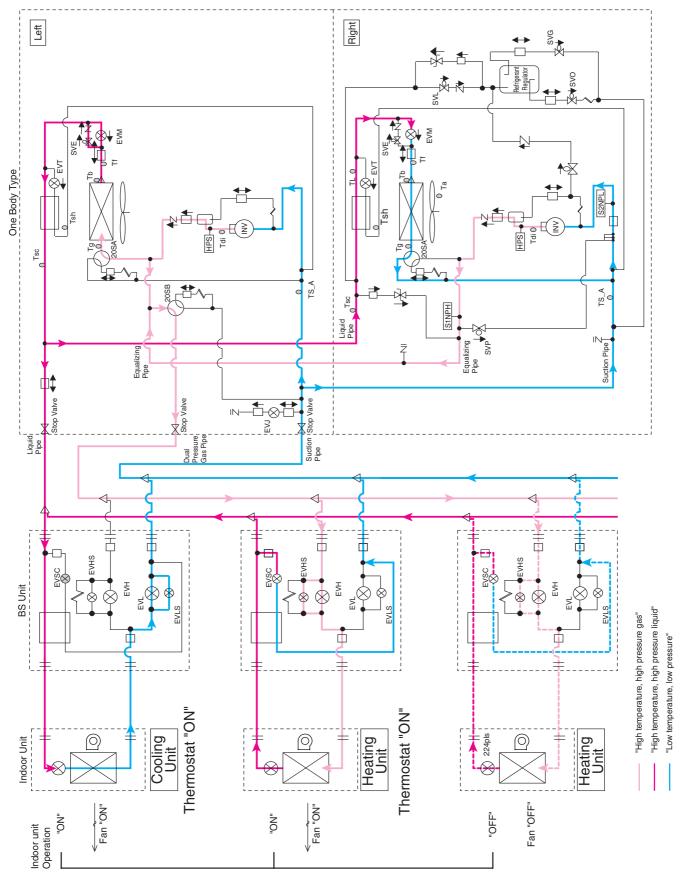


Partial Defrosting 1 (Defrosting in the Right Unit)

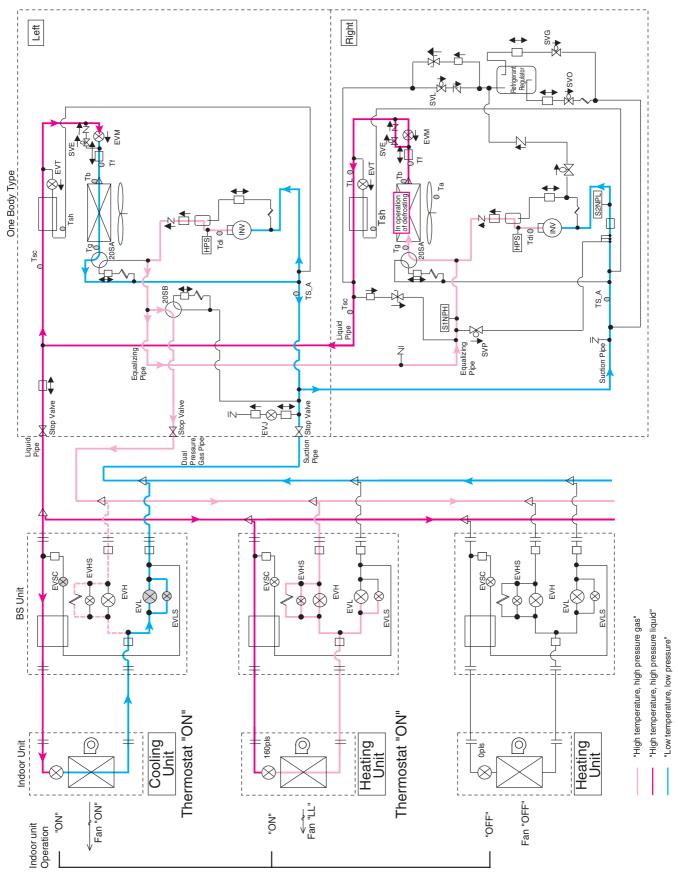


Partial Defrosting 2 (Defrosting in the Left Unit)

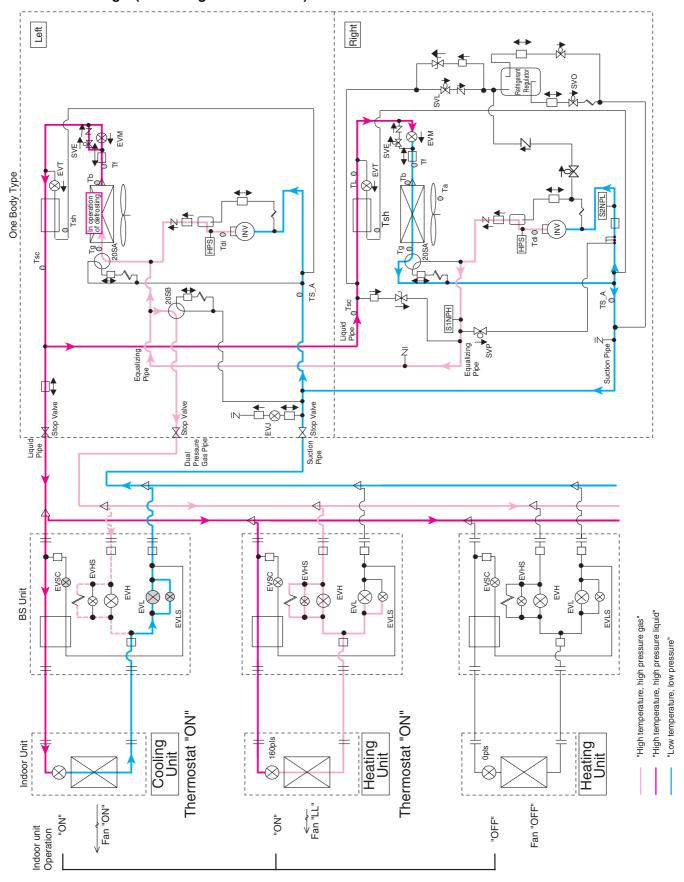


REYQ18P, 20P Cooling Operation

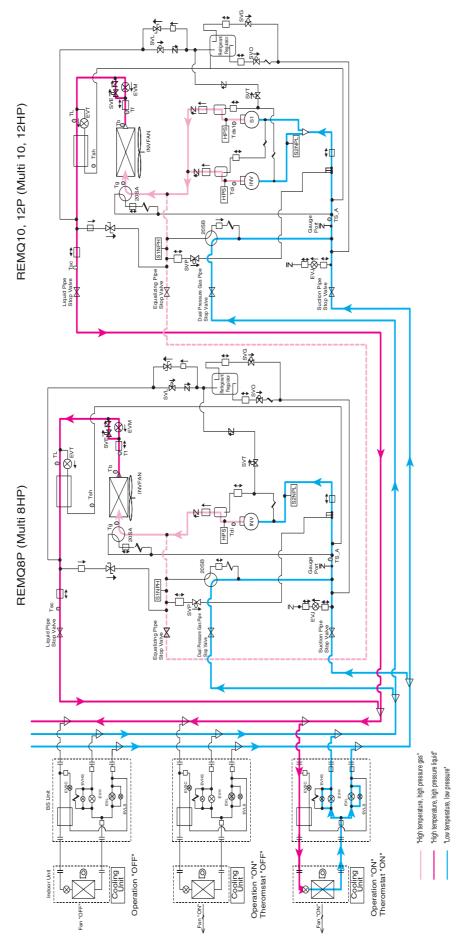


Heating Operation

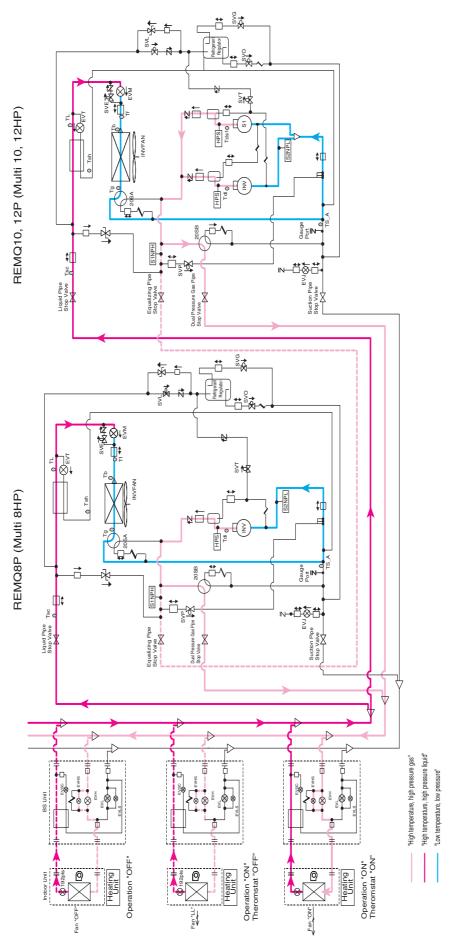


Simultaneous Cooling / Heating Operation

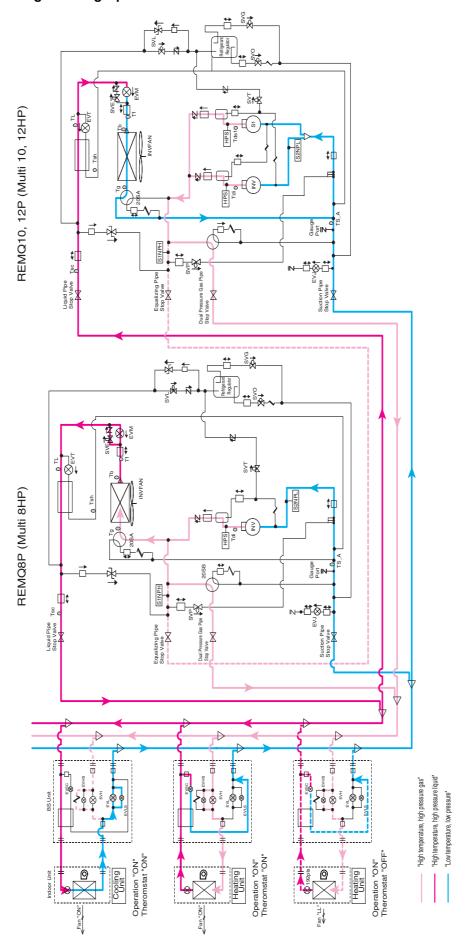


Cooling Oil Return Operation

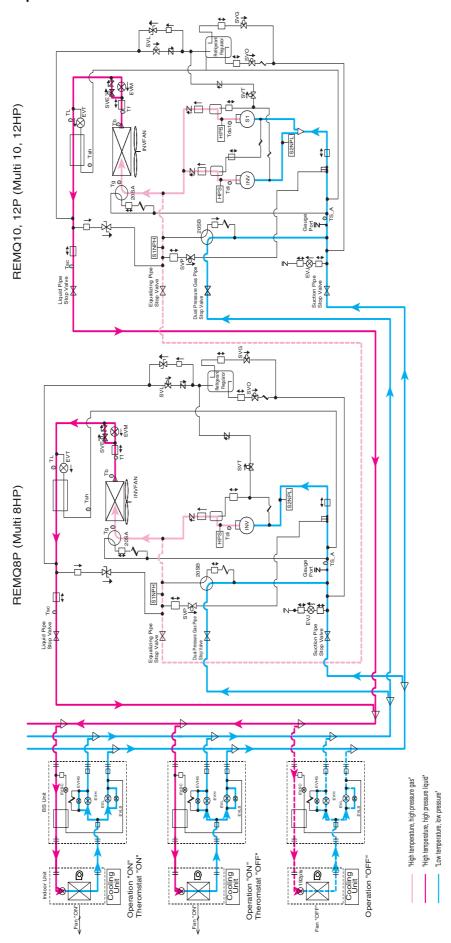


Heating Oil Return Operation

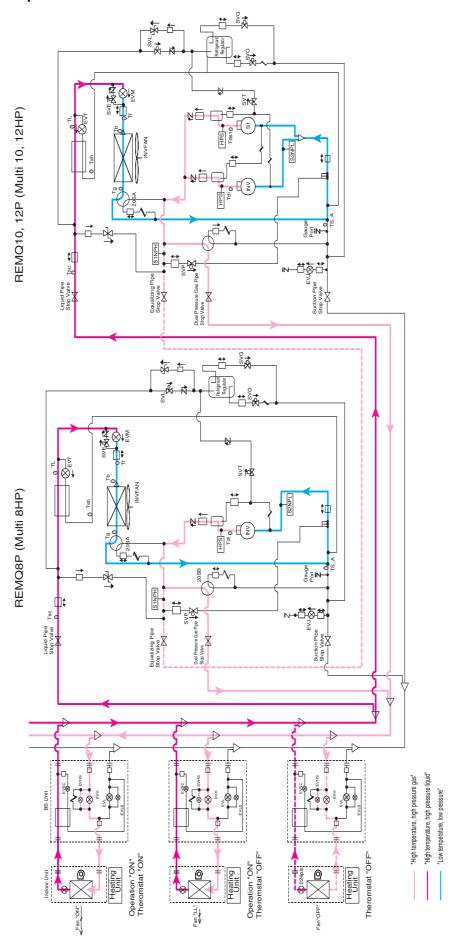


Oil Return Operation at Simultaneous Cooling / Heating Operation

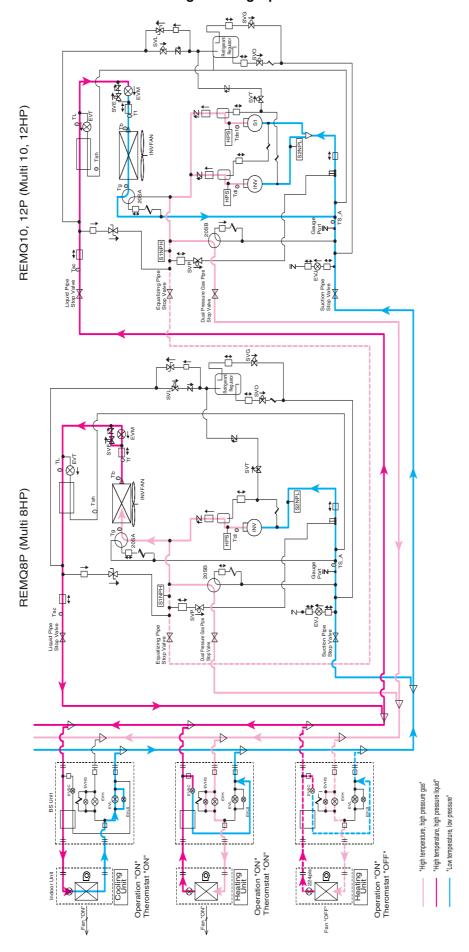

Partial Defrosting 1 (Defrosting in the Right Unit)

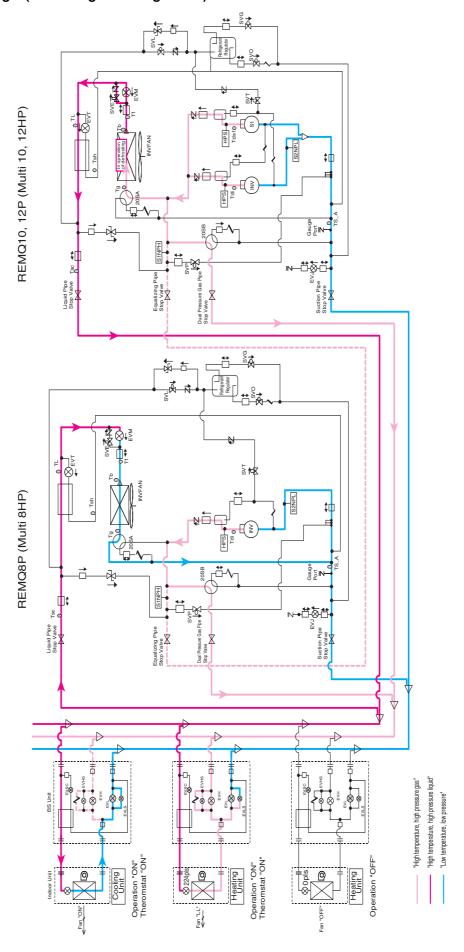


Partial Defrosting 2 (Defrosting in the Left Unit)

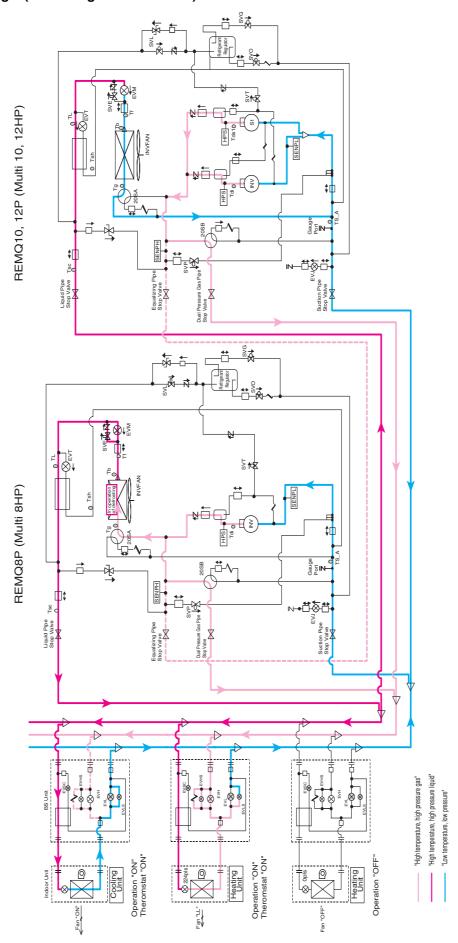

Operation of refrigerant regulator


1. Recovery of refrigerant

Surplus refrigerant is recovered to refrigerant regulator by opening of SVL and SVG when the indoor unit load is small.

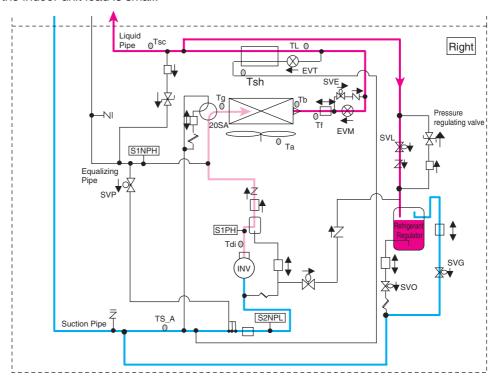

2. Discharge of refrigerant

Discharge refrigerant from refrigerant regulator by opening of SVC when the load of the outdoor unit is large.

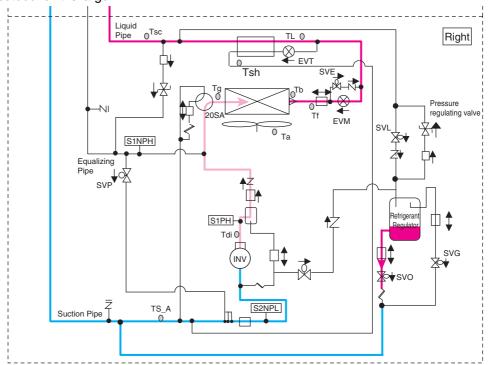

3. Pressure regulating valve (Refrigerant regulator)

The circuit will be closed when SVL, SVO, SVG are all closed. In this case, the increased pressure in the refrigerant regulator will be transferred to the liquid refrigerant pipe side, to regulate the pressure.

Pressure equalizing when switching operation cooling / heating


1. When switching operation from to cooling to heating

First, the electric expansion valves for EVHS, EVH, EVL and EVLS of the indoor unit will be closed.


Next, open the EVHS, and it makes to balance the system pressure.

Finally, EVH and EVHS are opened and the electric expansion valve of the indoor unit is opened to start the operation as a heating circuit.


In cooling operation

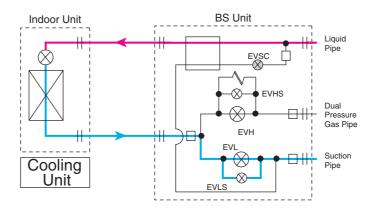

In equalization

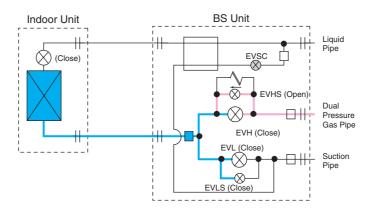

To heating operation

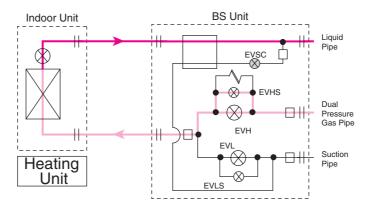


2. When switching operation from heating to cooling

First, the electric expansion valve and the solenoid valve for EVHS, EVH, EVL and EVLS of the indoor unit will be closed.


Next, open the EVLS, and it makes to balance the system pressure.

Finally, EVL and EVLS are opened and the electric expansion valve of the indoor unit is opened to start the operation as a cooling circuit.


In heating operation

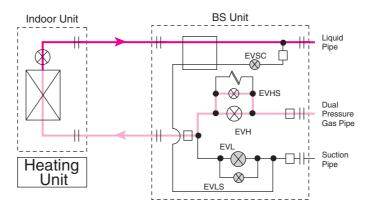

In equalization

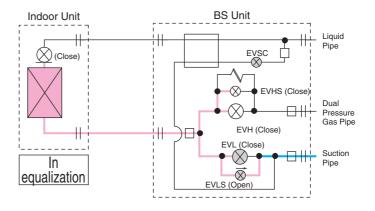

To cooling operation

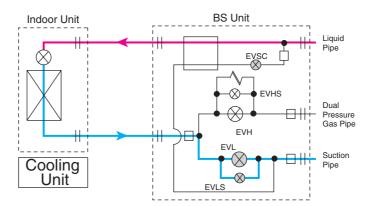

Part 4 Function

1.	Fund	ction General	104
	1.1	Symbol	104
	1.2	Operation Mode	106
2.	Basi	c Control	107
	2.1	Normal Operation	
	2.2	Compressor PI Control	
	2.3	Electronic Expansion Valve PI Control	116
	2.4	Step Control of Outdoor Unit Fans	
	2.5	Outdoor Unit Fan Control in Cooling Operation	117
	2.6	Heat Exchanger Control	
3.	Spec	cial Control	119
	3.1	Startup Control	
	3.2	Large Capacity Start Up Control (Heating)	121
	3.3	Oil Return Operation	
	3.4	Defrost Operation	
	3.5	Pump-down Residual Operation	128
	3.6	Standby	130
	3.7	Stopping Operation	131
4.	Prote	ection Control	132
	4.1	High Pressure Protection Control	132
	4.2	Low Pressure Protection Control	134
	4.3	Discharge Pipe Protection Control	136
	4.4	Inverter Protection Control	137
	4.5	STD Compressor Overload Protection	139
5.	Othe	er Control	140
	5.1	Backup Operation	
	5.2	Demand Operation	140
	5.3	Heating Operation Prohibition	140
6.	Outli	ne of Control (Indoor Unit)	141
	6.1	Operation Flow Chart	
	6.2	Thermostat Control	
	6.3	Drain Pump Control	147
	6.4	Control of Electronic Expansion Valve	
	6.5	Freeze Prevention	
	6.6	Heater Control (Optional PC Board KRP1Bis required.)	151
	6.7	List of Swing Flap Operations	
	6.8	Hot Start Control (In Heating Operation Only)	153
	6.9	Louver Control for Preventing Ceiling Dirt	154

Function General SiBE37-704

1. Function General

1.1 Symbol


Symbol	Electric	symbol	Description or function
Symbol	REYQ8~16P	REMQ8~16P	Description or function
20SA	Y2S (Heat exchanger1) Y9S (Heat exchanger2)	· Y3S	Four way valve (Heat exchanger switch)
20SB	Y8S	Y2S	Four way valve (High/low pressure gas pipe switch)
DSH	_	_	Discharge pipe superheated degree
DSHi	_	_	Discharge pipe superheat of inverter compressor
DSHs	_	_	Discharge pipe superheat of standard compressor
EV	_	_	Opening of electronic expansion valve
EVM	Y1E (Main1) Y3E (Main2)	Y1E	Electronic expansion valve for main heat exchanger
EVT	Y2E (Subcooling1) Y5E (Subcooling2)	Y3E	Electronic expansion valve for sub-cooling heat exchanger
EVJ	Y4E	Y2E	Electronic expansion valve at the refrigerant charge port
HTDi	_	_	Value of INV compressor discharge pipe temperature compensated with outdoor air temperature
HTDs	_	_	Value of STD compressor discharge pipe temperature compensated with outdoor air temperature
Pc	S1NPH	S1NPH	Value detected by high pressure sensor
Pe	S2NPL	S2NPL	Value detected by low pressure sensor
SH	_	_	Evaporator outlet superheat
SHS	_	_	Target evaporator outlet superheat
SVE	Y5S (Bypass1) Y10S (Bypass2)	Y6S	Main bypass solenoid valve
SVP	Y4S	Y5S	Solenoid valve for hot gas
SVL	Y3S	Y4S	Refrigerant regulator liquid pipe solenoid valve
SVG	Y1S	Y1S	Refrigerant regulator gas pipe solenoid valve
SVO	Y7S	Y7S	Refrigerant regulator exhaust pipe solenoid valve
SVT	Y6S	Y8S	Refrigerant regulator discharge pipe solenoid valve

SiBE37-704 Function General

Cumbal	Electric	symbol	Deparintion or function				
Symbol	REYQ8~16P	REMQ8~16P	Description of function				
Та	R1T (A1P)	R1T (A1P)	Outdoor air temperature				
TeΔ	R8T (Suction pipe1)	BEMQ8-16P BEMQ8-16P Description or function					
13/1	R10T (Suction pipe2)	1101	outsion pipe temperature				
Th	REYQB-16P REMOR-16P Rat	Heat exchanger outlet temperature at cooling					
10		1141	Treat exchanger outlet temperature at cooling				
REYQ8-16P REMQ8-16P REMQ8-16P RIT (A1P) Outdoor air temperature							
		1121	Treat exemanger gas pipe temperature				
Tf (Liquid pipe1) R15T R7T Temperature of liquid pipe between heat exchanger and main elect valve		Temperature of liquid pipe between heat exchanger and main electronic expansion					
11		1171	valve				
R15T (Liquid pipe2) R5T R5T (Gas pipe1) R13T (Gas pipe2) R5T Temperature detected with the subcooling heat exchanger outlet thermi	Temperature detected with the subcooling heat exchanger outlet thermister						
		1101	Tomporatare detected with the subcooming fleat exchanger outlet themistor				
TI	REYQ8-16P REMQ8-16P RIT (A1P) RIT (A1P) RIT (A1P) Quidoor air temperature						
11		NOT	Liquid pipe temperature detected with the liquid pipe themistor				
Tsc	R9T	R9T					
Тс	_	_	High pressure equivalent saturation temperature				
TcS	_	_	Target temperature of Tc				
Те			Low pressure equivalent saturation temperature				
TeS	-	-	Target temperature of Te				
Tfin	REYQ8-16P REMQ8-16P RIT (A1P) RIT (A1P) Outdoor air temperature RBT (Suction pipe1) R10T (Suction pipe2) R10T (Suction pipe2) R11T (Deicer1) R12T (Deicer2) R2T (Gas pipe1) R11T (Gas pipe2) R7T (Liquid pipe1) R15T (Liquid pipe1) R15T (Liquid pipe2) R5T (Gas pipe1) R13T (Gas pipe2) R6T (Liquid pipe2) R7T (Liquid pipe2) R11T (Gas pipe2) R6T (Liquid pipe3) R13T (Gas pipe3) R14T (Liquid pipe4) R15T (Liquid pipe4) R15T (Liquid pipe6) R14T (Liquid pipe7) R14T (Liquid pipe8) R9T R9T Temperature detected with the subcooling heat exchanger outlet thermistor R14T (Liquid pipe6) R9T R9T Temperature of liquid pipe between liquid shutoff valve and supercooled heat exchanger High pressure equivalent saturation temperature Target temperature of Tc Target temperature of Tc R1T (APP)(ASP) R1T (A3P) Inverter fin temperature Calculated value of compressor port temperature - Calculated value of compressor port temperature - Calculated value of compressor port temperature						
REYQ8-16P REMQ8-16P REMQ8-16P RIT (A1P) RIT (A1P) Outdoor air temperature							
REYQ8-16P REMQ8-16P Description or function							
Ta							

Function General SiBE37-704

1.2 Operation Mode

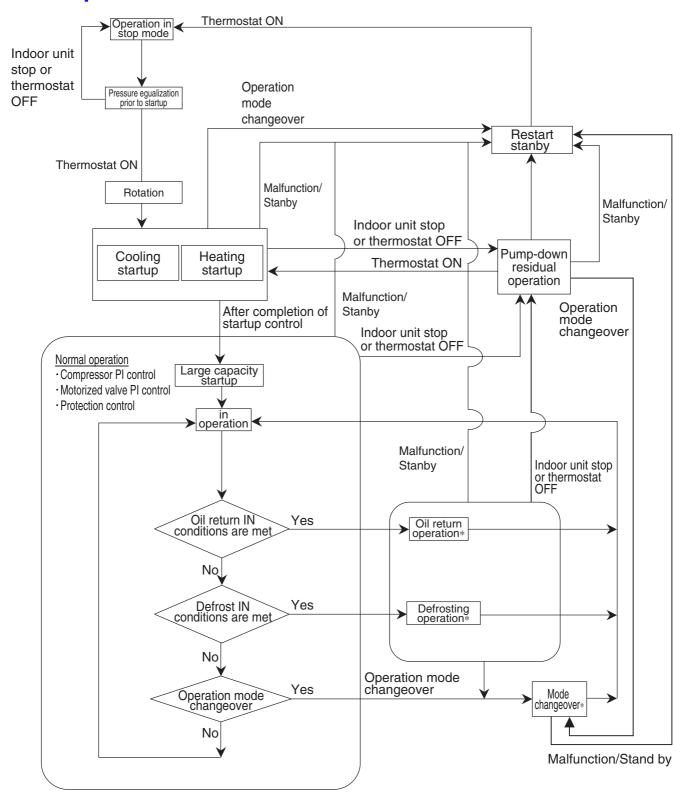

* "Oil return", "Defrost" and "Mode changeover" move on to the next process after the completion of above function in progress even if the thermostat is OFF during the operation.

SiBE37-704 **Basic Control**

2. Basic Control

Normal Operation 2.1

List of Functions in Normal Operation 2.1.1

Part Name	Symbol		ctric nbol)	F	unction of Functional Pa	ırt
Part Name	Symbol	REYQ	REMQ	Normal Cooling	Normal Heating	Normal Simultaneous Cooling / Heating
Compressor 1		M1C	M1C	PI control, High pressure protection,	PI control, High pressure protection,	PI control, High pressure protection,
Compressor 2	_	M2C	M2C	Low pressure protection,	Low pressure protection,	Low pressure protection,
Compressor 3		_	МЗС	Td protection, INV protection,	Td protection, INV protection,	Td protection, INV protection,
Outdoor unit fan 1		M1F	M1F	Cooling fan control	Outdoor unit heat exchanger: Condenser / Cooling fan control	Outdoor unit heat exchanger: Condenser / Cooling fan control
Outdoor unit fan 2		M2F	M2F	Cooling lan control	Outdoor unit heat exchanger: Evaporator / Fan step	Outdoor unit heat exchanger: Evaporator / Fan step
Electronic expansion valve	EVM	Y1E	Y1E	1375 pls	Outdoor unit heat exchanger: Condenser / Liquid pressure control	Outdoor unit heat exchanger: Condenser / Liquid pressure control
(Main)		Y3E			Outdoor unit heat exchanger: Evaporator / PI control	Outdoor unit heat exchanger: Evaporator / PI control
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	PI control PI control		PI control
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls	80 pls	80 pls
Four way valve	20SA	Y2S	Y3S	OFF	Outdoor unit heat exchanger: Condenser / OFF	Outdoor unit heat exchanger: Condenser / OFF
(Heat exchanger switch)	200A	Y9S	130	OH	Outdoor unit heat exchanger: Evaporator / ON	Outdoor unit heat exchanger: Evaporator / ON
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	ON	OFF	OFF
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	ON	OFF	OFF
Solenoid valve (Hot gas)	SVP	Y4S	Y5S	OFF	OFF	OFF
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	ON for refrigerant recovery	ON for refrigerant recovery	ON for refrigerant recovery
Solenoid valve (Refrigerant regulator gas vent pipe)	svg	Y1S	Y1S	ON for refrigerant recovery	ON for refrigerant recovery	ON for refrigerant recovery
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	ON for refrigerant discharge	ON for refrigerant discharge	ON for refrigerant discharge
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	ON for oil level control	ON for oil level control	ON for oil level control

Indoor unit a	actuator	Normal cooling	Normal heating
	Thermostat ON unit	t Remote controller setting OFF it Remote controller setting t Normal opening *1 0 pls	Remote controller setting
Fan	Stopping unit	OFF	OFF
	Thermostat OFF unit	Remote controller setting	LL
Electronic	Thermostat ON unit	Normal opening *1	Normal opening *2
expansion	Stopping unit	0 pls	192 pls
valve	Thermostat OFF unit	0 pls	192 pls

^{*1.} PI control: Evaporator outlet superheated degree (SH) constant.
*2. PI control: Condenser outlet subcooled degree (SC) constant.
*1 and 2: Refer to "6.4 Control of Electronic Expansion Valve" on page 149.

BS unit actuatior	Electoric symbol	Normal cooling	Nomal heating / Nomal simultaneous Cooling / Heating operation
Electronic expantion valve (EVH)	Y4E	760 pls (fully opened)	760 pls (fully opened)
Electronic expantion valve (EVL)	Y5E	760 pls (fully opened)	0 pls
Electronic expantion valve (EVHS)	Y2E	480 pls (fully opened)	480 pls (fully opened)
Electronic expantion valve (EVLS)	Y3E	480 pls (fully opened)	0 pls
Electronic expantion valve (EVSC)	Y1E	0 pls	0 pls (simultaneous Cooling / Heating operation : Pl control)

Basic Control SiBE37-704

2.2 Compressor PI Control

Compressor PI Control

Carries out the compressor capacity PI control to maintain Te at constant during cooling operation and Tc at constant during heating operation to ensure stable unit performance.

[Cooling operation]

Controls compressor capacity to adjust Te to achieve target value (TeS).

Te set value (Make this setting while in Setting mode 2.)

Te setting

	•					
L	M (Normal) (factory setting)			Н		
3	6	7	8	9	10	11

Te: Low pressure equivalent saturation temperature (°C)

TeS: Target Te value

(Varies depending on Te setting, operating frequency, etc.)

*On multi-outdoor-unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

[Heating operation]

Controls compressor capacity to adjust Tc to achieve target value (TcS).

Te set value (Make this setting while in Setting mode 2.)

Tc setting

L	M (Normal) (factory setting)	H
43	46	48

c: High pressure equivalent saturation temperature (°C)

TcS: Target Tc value

(Varies depending on Tc setting, operating frequency, etc.)

*On multi-outdoor-unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

Rotation of outdoor units

In order to make operating time equal for each compressor of multi connection outdoor units, outdoor units are used in rotation.

However this is not applicable to single units.

[Rotation of outdoor units]

[System with two outdoor units]

	Outdoor Unit 1	Outdoor Unit 2
Previous time	Priority 1	Priority 2
This time	Priority 2	Priority 1
Next time	Priority 1	Priority 2

[System with three outdoor units]

	Outdoor Unit 1	Outdoor Unit 2	Outdoor Unit 3
Previous time	Priority 1	Priority 2	Priority 3
This time	Priority 3	Priority 1	Priority 2
Next time	Priority 2	Priority 3	Priority 1
One time after the next	Priority 1	Priority 2	Priority 3

[Timing of outdoor rotation]

In start of startup control

SiBE37-704 **Basic Control**

Operating Priority and Rotation of Compressors

No. 2

INV

INV

STD1


INV

STD1


STD2

Each compressor operates in the following order of priority. In the case of multi-outdoor-unit system, each compressor operates in any of Pattern 1 INV: Inverter compressor through Pattern 3 according to the rotation of outdoor units. STD1: Standard compressor 1 STD2: Standard compressor 2 Pattern 1 Pattern 2 Pattern 3 REYQ8P, 10P, 12P REYQ14P, 16P No. 2 No. 1 No. 2 No. 1 STD1 INV2 INV1 INV REYQ18P, 20P REYQ22P, 24P No. 1 No. 3 No. 1 No. 2 No. 3 No. 2 No. 4 No. 1 No. 3 No. 2 No. 4 No. 1 No. 3 No. 2 INV INV STD1 INV STD1 INV STD1 REYQ26P, 28P REYQ30P, 32P ! No. 1 No. 3 No. 2 No. 4 No. 5 No. 1 No. 3 No. 5 No. 2 No. 4 No. 6 No. 2 No. 4 No. 1 No. 3 No. 5 No. 2 No. 4 No. 6 No. 1 No. 3 No. 5 INV STD1 INV (STD1) STD2 INV STD1 STD2 INV STD1 STD2 REYQ34P, 36P No. 1 No. 2 No. 4 No. 3 No. 5 No. 6 No. 3 No. 4 No. 2 No. 5 No. 6 No. 1 No. 3 No. 5 No. 1 No. 4 No. 6

Basic Control SiBE37-704

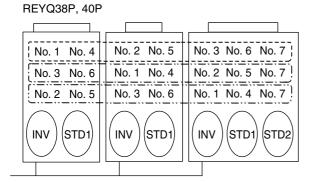


REYQ42P, 44P

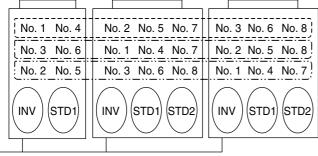

→REYQ8PY1 upper limit

REYQ46P, 48P

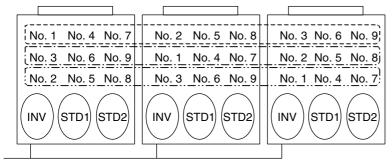


- *
- In the case of combination of 3 outdoor units, the above diagram shows master unit, slave unit 1, and slave unit 2 from left to right.
- Compressors may operate in any pattern other than those mentioned above according to the operating status.

SiBE37-704 Basic Control

■ Compressor Step Control Compressor operations vary with the following steps according to information in "2.2 Compressor PI Control". Furthermore, the operating priority of compressors is subject to information in "■ Operating Priority and Rotation of Compressors".

Single unit installation

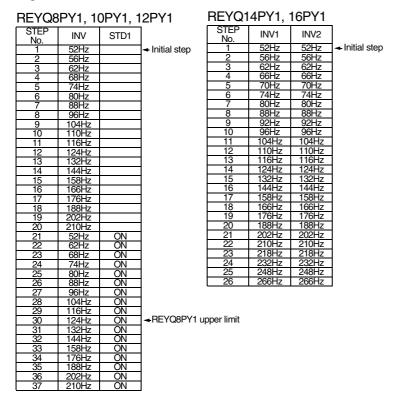

Notes:

INV : Inverter compressor
 STD1 : Standard compressor

STD1 : Standard compressor 1 STD2 : Standard compressor 2

2. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

Basic Control SiBE37-704

REYQ22PY1, 24PY1 (10/12+12HP)

Two-unit multi system

REYQ18PY1, 20PY1 (8+10/12HP)

1121 (0110)	,	1121 3221 11, 211 11 (10, 12	,			
(To increase Step No.)	(To decrease Step No.)	(To increase Step No.)	(To decrease Step No.)			
STEP unit 1 unit 2 STD	STEP unit 1 unit 2 STD	STEP unit 1 unit 2 STD	STEP unit 1 unit 2 STD No. INV INV			
1 52Hz 52Hz ←Initial step	1 52Hz	1 52Hz 52Hz ←Initial step				
2 56Hz 56Hz	2 56Hz	2 56Hz 56Hz	1 52Hz 2 56Hz			
3 62Hz 62Hz	3 62Hz	3 62Hz 62Hz	3 62Hz			
4 66Hz 66Hz	4 68Hz	4 66Hz 66Hz	4 68Hz			
5 70Hz 70Hz	5 74Hz	5 70Hz 70Hz	5 74Hz			
6 74Hz 74Hz	6 80Hz	6 74Hz 74Hz	6 80Hz			
7 80Hz 80Hz	7 88Hz	7 80Hz 80Hz	7 88Hz			
8 88Hz 88Hz	8 96Hz	8 88Hz 88Hz	8 96Hz			
9 92Hz 92Hz	9 104Hz	9 92Hz 92Hz	9 104Hz			
10 96Hz 96Hz	10 52Hz 52Hz	10 96Hz 96Hz	10 52Hz 52Hz			
11 104Hz 104Hz	11 56Hz 56Hz	11 104Hz 104Hz	11 56Hz 56Hz			
12 110Hz 110Hz	12 62Hz 62Hz	12 110Hz 110Hz	12 62Hz 62Hz			
13 116Hz 116Hz	13 66Hz 66Hz	13 116Hz 116Hz	13 66Hz 66Hz			
14 124Hz 124Hz	14 70Hz 70Hz	14 124Hz 124Hz 15 132Hz 132Hz	14 70Hz 70Hz			
15 132Hz 132Hz	15 74Hz 74Hz	15 132Hz 132Hz	15 74Hz 74Hz			
16 144Hz 144Hz	16 80Hz 80Hz	16 144Hz 144Hz	16 80Hz 80Hz			
17 158Hz 158Hz 18 166Hz 166Hz	17 88Hz 88Hz 18 92Hz 92Hz	17 158Hz 158Hz	17 88Hz 88Hz			
19 176Hz 176Hz	19 96Hz 96Hz	18 166Hz 166Hz	18 92Hz 92Hz			
20 80Hz 80Hz ON	20 104Hz 104Hz	19 176Hz 176Hz	19 96Hz 96Hz			
21 88Hz 88Hz ON	21 110Hz 110Hz	20 80Hz 80Hz ON1 21 88Hz 88Hz ON1	20 104Hz 104Hz			
22 96Hz 96Hz ON	22 116Hz 116Hz	22 96Hz 96Hz ON1	21 110Hz 110Hz			
23 104Hz 104Hz ON	23 124Hz 124Hz	23 104Hz 104Hz ON1	22 116Hz 116Hz 23 124Hz 124Hz			
24 116Hz 116Hz ON	24 132Hz 132Hz	24 116Hz 116Hz ON1	23 124Hz 124Hz 24 132Hz 132Hz			
25 124Hz 124Hz ON	25 52Hz 52Hz ON	25 124Hz 124Hz ON1				
26 132Hz 132Hz ON	26 62Hz 62Hz ON	26 132Hz 132Hz ON1	25 52Hz 52Hz ON1 26 62Hz 62Hz ON1			
27 144Hz 144Hz ON	27 68Hz 68Hz ON	27 88Hz 88Hz ON2	27 68Hz 68Hz ON1			
28 158Hz 158Hz ON	28 74Hz 74Hz ON	28 96Hz 96Hz ON2	28 74Hz 74Hz ON1			
29 176Hz 176Hz ON	29 80Hz 80Hz ON	29 104Hz 104Hz ON2	29 80Hz 80Hz ON1			
30 188Hz 188Hz ON	30 88Hz 88Hz ON	30 124Hz 124Hz ON2	30 88Hz 88Hz ON1			
31 202Hz 202Hz ON	31 96Hz 96Hz ON	31 144Hz 144Hz ON2	31 96Hz 96Hz ON1			
▼ 32 210Hz 210Hz ON	32 104Hz 104Hz ON	32 158Hz 158Hz ON2	32 104Hz 104Hz ON1			
	33 116Hz 116Hz ON	33 166Hz 176Hz ON2	33 52Hz 52Hz ON2			
	34 124Hz 124Hz ON	34 176Hz 158Hz ON2	34 62Hz 62Hz ON2			
	35 132Hz 132Hz ON	35 188Hz 188Hz ON2	35 74Hz 74Hz ON2			
	36 144Hz 144Hz ON	36 202Hz 202Hz ON2	36 88Hz 88Hz ON2			
	37 158Hz 158Hz ON	37 210Hz 210Hz ON2	37 96Hz 96Hz ON2			
	38 176Hz 176Hz ON	38 202Hz 202Hz ON2	38 104Hz 104Hz ON2			
	39 188Hz 188Hz ON	▼ 39 210Hz 210Hz ON2	39 124Hz 124Hz ON2			
	40 202Hz 202Hz ON		40 144Hz 144Hz ON2			
	41 210Hz 210Hz ON		41 158Hz 158Hz ON2			
			42 166Hz 166Hz ON2			
			43 176Hz 176Hz ON2			
			44 188Hz 188Hz ON2			
			45 202Hz 202Hz ON2			
			46 210Hz 210Hz ON2			
			47 202Hz 202Hz ON2 48 210Hz 210Hz ON2			
		I	40 210HZ 210HZ UNZ			

Notes:

1. INV : Inverter compressor

STD: Standard compressor

Figures after ON represent the number of STD compressors in operation.

- 2. "Master unit", and "slave unit" in this section are the names for control, and they will be transferred according to the priority of rotation system.
- 3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

SiBE37-704 Basic Control

Three-unit multi system

REYQ26PY1, 28PY1 (10/12+16HP)

REYQ 30PY1, 32PY1 (14/16+16HP)

,		se Step N	0.)		•	To decrea	•	0.)		,	To increas	•	0.)		(To decrea		lo.)
STEP No.	unit 1 INV	unit 2 INV	STD	A	STEP No.	unit 1 INV	unit 2 INV	STD		STEP No.	unit 1 INV	unit 2 INV	STD	STEP No.	unit 1 INV	unit 2 INV	STI
1	52Hz	52Hz	Initial step	П	1	52Hz				1	52Hz	52Hz	Initial step	1	52Hz		
2	56Hz	56Hz		П	2	56Hz				2	56Hz	56Hz		3	56Hz		
3	62Hz	62Hz		П	3	62Hz				3	62Hz	62Hz		3	62Hz		
4	66Hz	66Hz		П	4	68Hz				4	66Hz	66Hz		4	68Hz		
5	70Hz	70Hz		П	5	74Hz				5	70Hz	70Hz		5	74Hz		
6	74Hz	74Hz		П	6	80Hz				6	74Hz	74Hz		6	80Hz		
7	80Hz	80Hz		П	7	88Hz				7	80Hz	80Hz		7	88Hz		
8	88Hz	88Hz		П	8	96Hz				8	88Hz	88Hz		8	96Hz		
9	92Hz	92Hz		П	9	104Hz	FOLI			9	92Hz	92Hz		9	104Hz	FOLI	
10	96Hz	96Hz		П	10	52Hz	52Hz			10	96Hz	96Hz		10	52Hz	52Hz	
11 12	104Hz	104Hz 110Hz		П	11	56Hz	56Hz 62Hz			11 12	104Hz 110Hz	104Hz 110Hz		11 12	56Hz	56Hz 62Hz	
13	110Hz 116Hz	116Hz		П	12 13	62Hz 66Hz	66Hz			13	116Hz	116Hz		13	62Hz 66Hz	66Hz	
14	124Hz	124Hz	_	П	14	70Hz	70Hz			14	124Hz	124Hz	_	14	70Hz	70Hz	
15	132Hz	132Hz	_	П	15	74Hz	74Hz			15	132Hz	132Hz		15	74Hz	74Hz	
16	144Hz	144Hz			16	80Hz	80Hz			16	144Hz	144Hz	 	16	80Hz	80Hz	
17	158Hz	158Hz		П	17	88Hz	88Hz			17	158Hz	158Hz	 	17	88Hz	88Hz	<u> </u>
18	166Hz	166Hz			18	92Hz	92Hz			18	166Hz	166Hz	t	18	92Hz	92Hz	
19	176Hz	176Hz		Т	19	96Hz	96Hz			19	176Hz	176Hz		19	96Hz	96Hz	
20	80Hz	80Hz	ON1	П	20	104Hz	104Hz			20	80Hz	80Hz	ON1	20	104Hz	104Hz	
21	88Hz	88Hz	ON1	П	21	110Hz	110Hz			21	88Hz	88Hz	ON1	21	110Hz	110Hz	
22	96Hz	96Hz	ON1	П	22	116Hz	116Hz			22	96Hz	96Hz	ON1	22	116Hz	116Hz	
23 24	104Hz	104Hz	ON1	П	23 24	124Hz	124Hz			23 24	104Hz	104Hz	ON1	23	124Hz	124Hz 132Hz	
	116Hz	116Hz	ON1	П	24	132Hz	132Hz				116Hz	116Hz	ON1	24	132Hz	132Hz	
25	124Hz	124Hz	ON1	П	25	52Hz	52Hz	ON1		25	124Hz	124Hz	ON1	25	52Hz	52Hz	01
26	132Hz	132Hz	ON1	П	26	62Hz	62Hz	ON1		26	132Hz	132Hz	ON1	26 27	62Hz	62Hz	00
27	88Hz 96Hz	88Hz 96Hz	ON2 ON2	П	27	68Hz 74Hz	68Hz 74Hz	ON1 ON1		27	88Hz	88Hz 96Hz	ON2	28	68Hz	68Hz	00
28 29	90FZ 104Hz	104Hz	ON2	П	28 29	80Hz	80Hz	ON1		28 29	96Hz 104Hz	90FIZ 104Hz	ON2 ON2	29	74Hz 80Hz	74Hz 80Hz	01
30	124Hz	124Hz	ON2	П	30	88Hz	88Hz	ON1		30	124Hz	124Hz	ON2	30	88Hz	88Hz	ON
31	144Hz	144Hz	ON2	П	31	96Hz	96Hz	ON1		31	144Hz	144Hz	ON2	31	96Hz	96Hz	ON
32	92Hz	92Hz	ON3	П	32	104Hz	104Hz	ON1		32	92Hz	92Hz	ON3	32	104Hz	104Hz	OI/
33	104Hz	104Hz	ON3	П	33	52Hz	52Hz	ON2		33	104Hz	104Hz	ON3	33	52Hz	52Hz	ŎN
34	116Hz	116Hz	ON3	П	34	62Hz	62Hz	ON2		34	116Hz	116Hz	ON3	34	62Hz	62Hz	Ó١
35	124Hz	124Hz	ON3	П	35 36	74Hz	74Hz	ON2		35	124Hz	124Hz	ON3	35 36	74Hz	74Hz	OI
36	144Hz	144Hz	ON3	П	36	88Hz	88Hz	ON2		36	144Hz	144Hz	ON3		88Hz	88Hz	01
37	158Hz	158Hz	ON3		37	96Hz	96Hz	ON2		37	96Hz	96Hz	ON4	37	96Hz	96Hz	01
38	166Hz	166Hz	ON3	Т	38	52Hz	52Hz	ON3		38	104Hz	104Hz	ON4	38	52Hz	52Hz	Ó١
39	176Hz	176Hz	ON3		39	62Hz	62Hz	ON3		39	116Hz	116Hz	ON4	39	62Hz	62Hz	ON.
40	188Hz	188Hz	ON3	Т	40	74Hz	74Hz	ON3		40	124Hz	124Hz	ON4	40	74Hz	74Hz	00
41 42	202Hz 210Hz	202Hz	ON3		41 42	92Hz 104Hz	92Hz 104Hz	ON3 ON3		41 42	144Hz 158Hz	144Hz 158Hz	ON4 ON4	41 42	96Hz 104Hz	96Hz 104Hz	10
42	21002	210Hz	ON3	П	43	116Hz	104Hz	ON3		43	166Hz	166Hz	ON4 ON4	43	52Hz	52Hz	ON
				П	44	124Hz	124Hz	ON3		44	176Hz	176Hz	ON4	43	62Hz	62Hz	01
					45	144Hz	144Hz	ON3		45	188Hz	188Hz	ON4	45	74Hz	74Hz	01
				П	46	158Hz	158Hz	ON3		46	202Hz	202Hz	ON4	46	96Hz	96Hz	01
					47	166Hz	166Hz	ON3	•	47	210Hz	210Hz	ON4	47	104Hz	104Hz	ON
					48	176Hz	176Hz	ON3	,					48	116Hz	116Hz	ON
					49	188Hz	188Hz	ON3						49	124Hz	124Hz	OI/
					50	202Hz	202Hz	ON3						50	144Hz	144Hz	ON
					51	210Hz	210Hz	ON3						51	158Hz	158Hz	Ó١
				-										52	166Hz	166Hz	٩Ó
														53	176Hz	176Hz	01
														54	188Hz	188Hz	ON.
														55	202Hz 210Hz	202Hz 210Hz	0N
														56			

Notes:

1. INV: Inverter compressor

STD: Standard compressor

Figures after ON represent the number of STD compressors in operation.

- 2. "Master unit", and "slave unit" in this section are the names for control, and they will be transferred according to the priority of rotation system.
- 3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

Basic Control SiBE37-704

REYQ34PY1, 36PY1 (8+10/12+16HP)

REYQ38PY1, 40PY1 (10/12+12+16HP)

(To increase Step No.)	(To decrease Step No.)	(To increase Step No.)	(To decrease Step No.)
STEP unit 1 unit 2 unit 3 STD	STEP unit 1 unit 2 unit 3 STD	STEP unit 1 unit 2 unit 3 STD A	STEP unit 1 unit 2 unit 3 STD
1 52Hz 52Hz 52Hz ← Initial step	1 52Hz	1 52Hz 52Hz 52Hz → Initial step	1 52Hz
2 56Hz 56Hz 56Hz 3 62Hz 62Hz 62Hz	2 56Hz 3 62Hz	2 56Hz 56Hz 56Hz 3 62Hz 62Hz 62Hz	2 56Hz 3 62Hz
4 66Hz 66Hz 66Hz	4 68Hz	4 66Hz 66Hz 66Hz	4 68Hz
5 68Hz 68Hz 68Hz 6 70Hz 70Hz 70Hz	5 74Hz 6 80Hz	5 68Hz 68Hz 68Hz 6 70Hz 70Hz 70Hz	5 74Hz 6 80Hz
7 74Hz 74Hz 74Hz	7 88Hz	7 74Hz 74Hz 74Hz	7 88Hz
8 80Hz 80Hz 80Hz	8 96Hz	8 80Hz 80Hz 80Hz	8 96Hz
9 88Hz 88Hz 88Hz 10 96Hz 96Hz 96Hz	9 104Hz 10 52Hz 52Hz	9 88Hz 88Hz 88Hz 10 96Hz 96Hz 96Hz	9 104Hz 10 52Hz 52Hz
11 104Hz 104Hz 104Hz	11 56Hz 56Hz	11 104Hz 104Hz 104Hz	11 56Hz 56Hz
12 110Hz 110Hz 110Hz 110Hz 13 116Hz 116H	12 62Hz 62Hz	12 110Hz 110Hz 110Hz 13 116Hz 116H	
13 116Hz 116Hz 116Hz 124Hz 1	13 66Hz 66Hz 14 70Hz 70Hz	13 116Hz 116Hz 116Hz 14 124Hz 124H	13 66Hz 66Hz 14 70Hz 70Hz
15 80Hz 80Hz 80Hz ON1	15 74Hz 74Hz	15 80Hz 80Hz 80Hz ON1	15 74Hz 74Hz
16 88Hz 88Hz 88Hz ON1 17 96Hz 96Hz 96Hz ON1	16 52Hz 52Hz 52Hz 17 56Hz 56Hz 56Hz	16 88Hz 88Hz 88Hz ON1 17 96Hz 96Hz 96Hz ON1	16 52Hz 52Hz 52Hz 17 56Hz 56Hz
18 104Hz 104Hz 104Hz ON 1	18 62Hz 62Hz 62Hz	18 104Hz 104Hz 104Hz ON1	18 62Hz 62Hz 62Hz
19 116Hz 116Hz 116Hz ON1	19 66Hz 66Hz 66Hz	19 116Hz 116Hz 116Hz ON1	19 66Hz 66Hz 66Hz
20 124Hz 124Hz 124Hz ON1 21 132Hz 132Hz 132Hz ON1	20 68Hz 68Hz 68Hz 21 70Hz 70Hz 70Hz	20 124Hz 124Hz 124Hz ON1 21 132Hz 132Hz 132Hz ON1	20 68Hz 68Hz 68Hz 21 70Hz 70Hz 70Hz
22 88Hz 88Hz 88Hz ON2	22 74Hz 74Hz 74Hz	22 88Hz 88Hz 88Hz ON2	22 74Hz 74Hz 74Hz
23 96Hz 96Hz 96Hz ON2 24 104Hz 104Hz 104Hz ON2	23 80Hz 80Hz 80Hz 24 88Hz 88Hz 88Hz	23 96Hz 96Hz 96Hz ON2 24 104Hz 104Hz 104Hz ON2	23 80Hz 80Hz 80Hz 24 88Hz 88Hz 88Hz
25 124Hz 124Hz 124Hz ON2	25 96Hz 96Hz 96Hz	25 124Hz 124Hz 124Hz ON2	25 96Hz 96Hz 96Hz
26 144Hz 144Hz 144Hz ON2 27 92Hz 92Hz 92Hz ON3	26 52Hz 52Hz 52Hz ON1 27 62Hz 62Hz 62Hz ON1	26 144Hz 144Hz 144Hz ON2 27 92Hz 92Hz 92Hz ON3	26 52Hz 52Hz 52Hz ON1 27 62Hz 62Hz 62Hz ON1
27 92Hz 92Hz 92Hz ON3 28 104Hz 104Hz 104Hz ON3	27 62HZ 62HZ 62HZ ON1 28 68HZ 68HZ 68HZ ON1	27 92Hz 92Hz 92Hz ON3 28 104Hz 104Hz 104Hz ON3	27 62HZ 62HZ 62HZ 0N1 28 68HZ 68HZ 68HZ 0N1
29 116Hz 116Hz 116Hz ON3	29 74Hz 74Hz 74Hz ON1	29 116Hz 116Hz 116Hz ON3	
30 124Hz 124Hz 124Hz ON3 31 144Hz 144Hz 144Hz ON3	30 80Hz 80Hz 80Hz ON1 31 88Hz 88Hz 88Hz ON1	30 124Hz 124Hz 124Hz ON3 31 144Hz 144Hz 144Hz ON3	30 80Hz 80Hz 80Hz 0N1 31 88Hz 88Hz 88Hz 0N1
32 158Hz 158Hz 158Hz ON3		32 96Hz 96Hz 96Hz ON4	32 96Hz 96Hz 96Hz ON1
33 166Hz 166Hz 166Hz ON3 34 176Hz 176Hz 176Hz ON3	II 33 104Hz 104Hz 104Hz ON1	33 104Hz 104Hz 104Hz ON4 34 116Hz 116Hz 116Hz ON4	33 104Hz 104Hz 104Hz ON1 34 52Hz 52Hz 52Hz ON2
35 188Hz 188Hz 188Hz ON3	34 52Hz 52Hz 52Hz 0N2 35 62Hz 62Hz 62Hz 0N2 36 74Hz 74Hz 74Hz 0N2	34 116Hz 116Hz 116Hz ON4 35 124Hz 124Hz 124Hz ON4	35 62Hz 62Hz 62Hz ON2
36 202Hz 202Hz 202Hz ON3	35 62Hz 62Hz 62Hz ON2 36 74Hz 74Hz 74Hz ON2	36 144Hz 144Hz 144Hz ON4	36 74Hz 74Hz 74Hz ON2
37 210Hz 210Hz 210Hz ON3	37 88Hz 88Hz 88Hz ON2 38 96Hz 96Hz 96Hz ON2	37 158Hz 158Hz 158Hz ON4 38 166Hz 166Hz 166Hz ON4	37 88Hz 88Hz 88Hz ON2 38 96Hz 96Hz 96Hz ON2
	39 52Hz 52Hz 52Hz ON3	39 176Hz 176Hz 176Hz ON4	39 52Hz 52Hz 52Hz ON3
	40 62Hz 62Hz 62Hz ON3	40 188Hz 188Hz 188Hz ON4	40 62Hz 62Hz 62Hz ON3
	42 92Hz 92Hz 92Hz ON3 1	41 202Hz 202Hz 202Hz ON4 42 210Hz 210Hz 210Hz ON4	41 74Hz 74Hz 74Hz 0N3 42 92Hz 92Hz 92Hz 0N3
	43 104Hz 104Hz 104Hz ON3	,	43 104Hz 104Hz 104Hz ON3
	44 116Hz 116Hz 116Hz ON3 45 124Hz 124Hz 124Hz ON3		44 52Hz 52Hz 52Hz ON4 45 62Hz 62Hz 62Hz ON4
	46 144Hz 144Hz 144Hz ON3		46 74Hz 74Hz 74Hz ON4
	47 158Hz 158Hz 158Hz ON3		47 96Hz 96Hz 96Hz ON4
	48 166Hz 166Hz 166Hz ON3 49 176Hz 176Hz 176Hz ON3		48 104Hz 104Hz 104Hz ON4 49 116Hz 116Hz 116Hz ON4
	50 188Hz 188Hz 188Hz ON3		50 124Hz 124Hz 124Hz ON4
	51 202Hz 202Hz 202Hz ON3 52 210Hz 210Hz 210Hz ON3		51 144Hz 144Hz 144Hz ON4 52 158Hz 158Hz 158Hz ON4
	1 32 21012 21012 21012 0143		53 166Hz 166Hz 166Hz ON4
			54 176Hz 176Hz 176Hz ON4
			55 188Hz 188Hz 188Hz ON4 56 202Hz 202Hz 202Hz ON4
			57 210Hz 210Hz 210Hz ON4

Notes:

1. INV: Inverter compressor STD: Standard compressor

Figures after ON represent the number of STD compressors in operation.

- 2. "Master unit", and "slave unit" in this section are the names for control, and they will be transferred according to the priority of rotation system.
- 3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

SiBE37-704 Basic Control

REYQ42PY1, 44PY1 (10/12+16+16HP)

REYQ46PY1, 48PY1 (14/16+16+16HP)

	(To incr	ease S	tep No.))			(To ded	rease S	Step No.)			(To inc	rease S	tep No.))			(To de	crease S	Step No.)
STEP		unit 2 INV	unit3 INV	STD	A	STEP	unit 1	unit 2	unit3	STD	ΙE	STEP	unit 1	unit 2 INV	unit 3 INV	STD	A	STEP	unit 1	unit 2	unit 3	STD
No.	INV	INV	INV		T	No.	INV	INV	INV	310	⊢	No.	INV	INV	INV		Τ	No.	INV	INV	INV	310
2	52Hz 56Hz	52Hz 56Hz	52HZ 56Hz	←Initial step		2	52Hz 56Hz				⊢	1 2	52Hz 56Hz	52Hz 56Hz	52Hz 56Hz	→ Initial step	1	2	52Hz 56Hz			
3	56Hz 62Hz	62Hz	56Hz 62Hz			3	62Hz				I⊨	2	62Hz	62Hz	56Hz 62Hz		1	3	62Hz			
4	62Hz 66Hz 68Hz 70Hz 74Hz 80Hz 88Hz 96Hz 110Hz 116Hz 124Hz	66Hz	66Hz			4	68Hz					4	66Hz	CCL I-	CCI I-		1	4	68Hz			
<u>5</u>	68Hz	68Hz	68Hz			<u>5</u>	74Hz 80Hz				I⊦	5 6	68Hz 70Hz	68Hz	68Hz		1	<u>5</u>	74Hz 80Hz			
1 7	70Hz	70Hz	70Hz			7	88Hz				I⊦	7	74Hz	70Hz	70Hz		1	7	88Hz			
8	80Hz	80Hz	80Hz			8	96Hz					8	80Hz	80Hz	80Hz		1	8	96Hz			
9	88Hz	88Hz	88Hz			9	104Hz	FOL 1				9	80Hz 88Hz 96Hz	88Hz	68Hz 70Hz 74Hz 80Hz 88Hz 96Hz 110Hz		1	9	104Hz	5011		
10	96HZ	96HZ	96HZ			10 11	52HZ	52HZ			I⊦	10 11	96HZ	96HZ	96HZ		1	10 11	52HZ	52HZ		
12	110Hz	110Hz	110Hz			12	62Hz	62Hz				12	104Hz 110Hz	110Hz	110Hz		1	12	62Hz	62Hz		
13	116Hz	116Hz	116Hz			13	52Hz 56Hz 62Hz 66Hz 70Hz 74Hz 52Hz	66Hz				13	110112				1	13	52Hz 56Hz 62Hz 66Hz	66Hz		
14 15	124Hz	124Hz	124Hz	ONII		14 15	70Hz	70Hz			I⊦	14 15	124Hz 80Hz	124Hz	124Hz 80Hz 88Hz	ON1	1	14 15	70Hz	70Hz 74Hz 52Hz		
16	88Hz	88Hz	88Hz	ON1		16	74HZ 52Hz	74Hz	52Hz		I⊦	16	88Hz	88Hz	88Hz	ON1	1	16	74HZ	74Hz	52Hz	
17	96Hz	96Hz	96Hz	ON1		17	56Hz	56Hz	56Hz			17	96Hz	96HZ	96HZ	ON1	1	17	56Hz	56Hz	56Hz	
18	104Hz	104Hz	104Hz	ON1		18	62Hz	62Hz	62Hz			18	104Hz	104Hz	104Hz	ON1		18	62Hz	56Hz 62Hz	56Hz 62Hz	
19	116Hz	116Hz	116Hz	ON1		19	66Hz	66Hz	66Hz		-	19	116Hz	116Hz	116Hz	ON1		19	66Hz	66Hz	66Hz	
20 21	116Hz 124Hz 80Hz 88Hz 96Hz 104Hz 116Hz 124Hz 132Hz 88Hz 96Hz 104Hz 124Hz 144Hz 124Hz 144Hz 144Hz 144Hz 144Hz 116Hz	132Hz	132Hz	ON1		20 21 22 23 24	52Hz 56Hz 62Hz 66Hz 68Hz 70Hz 74Hz 80Hz 88Hz	70Hz	70Hz			20	124Hz 132Hz	132Hz	124Hz 132Hz	ON1 ON1 ON2		20 21	70Hz	68Hz 70Hz 74Hz	68Hz 70Hz	
22 23 24	88Hz	88Hz	88Hz	ON2		22	74Hz	74Hz	74Hz			22 23 24	88Hz	1 88Hz	1 88Hz	ON2		22 23 24	74Hz	74Hz	74Hz	
23	96Hz	96Hz	96Hz	ON2		23	80Hz	80Hz	80Hz		ΙF	23	96Hz 104Hz	96Hz 104Hz	96Hz 104Hz	ON2 ON2		23	80Hz	80Hz 88Hz	80HZ	
25	104HZ	104HZ	104HZ	ON2		24	88HZ	88HZ	88HZ		I⊩	24	104Hz 124Hz	104HZ 124Hz	104Hz 124Hz	ON2	1	25	88HZ	88HZ	88Hz 96Hz	
26	124Hz 144Hz 92Hz 104Hz 116Hz	144Hz	144Hz	ON2		25 26 27	52Hz	52Hz	96Hz 52Hz 62Hz	ON1		25 26	144Hz	144Hz	144Hz	ONS	1	26	52Hz	96Hz 52Hz 62Hz	52Hz	ON1
27	92Hz	92Hz	92Hz	ON3		27	62Hz	62Hz	62Hz	ON1 ON1 ON1 ON1		27	92Hz	144Hz 92Hz	92Hz	ON3	1	27	62Hz	62Hz	62Hz	ON1 ON1 ON1 ON1 ON1
28	104Hz	104Hz	104Hz	ON3		28	68HZ	68HZ	68HZ	ON1	⊢	28	104Hz	104Hz	104Hz	ON3	1	28	68HZ	68HZ	68HZ	ON1
29 30	116HZ 124Hz	124Hz	124Hz	ONIS		29 30	74Hz 80Hz	80Hz	74Hz 80Hz	ON1	I⊢	29 30	116Hz 124Hz	116Hz 124Hz	116Hz 124Hz	ON3 ON3	1	29 30	74Hz 80Hz	74Hz 80Hz	74Hz 80Hz	ON1
31		144Hz		ON3		31	88Hz	88Hz	88Hz 96Hz 104Hz 52Hz	ON1		31	144Hz	144Hz	144Hz	UNI3	1	31	88Hz	88Hz	88Hz	ON1 ON1 ON1
31 32 33	96Hz 104Hz	96Hz	96Hz	ON3 ON4 ON4		32 33	96Hz	96Hz	96Hz	ON1 ON1		32 33	96Hz	96Hz	96Hz 104Hz	ON4 ON4 ON4	1	32 33	96Hz	88Hz 96Hz	88Hz 96Hz	ON1
33	104Hz 116Hz	104Hz	104Hz	ON4 ON4		33 34	104Hz	104Hz	104Hz	()N1	I⊦	33 34	104Hz	104Hz	104Hz	ON4	1	33	104Hz	104Hz	104Hz	ON1
35	124Hz	124Hz	116Hz 124Hz	ON4		35	62Hz	62Hz	62Hz	ON2 ON2 ON2	I⊦	35	116Hz 124Hz	116Hz 124Hz	116Hz 124Hz	ON4	1	34 35	52Hz 62Hz	52Hz 62Hz	52Hz 62Hz	ON2
36	144Hz	144Hz	144Hz	ON4		36	74Hz	74Hz	62Hz 74Hz	ON2		36	144Hz	1///Hz	1///Hz	ONA	1	36	74Hz	74Hz	62Hz 74Hz	ON2 ON2
37	96Hz	96Hz	96Hz 104Hz	ON5		37				ON2		37	96Hz	96Hz	96Hz	ON5	Т	37	88Hz	88Hz	88Hz	ON2
38	96Hz 104Hz 116Hz	104Hz	104Hz 116Hz	ON5 ON5		38 39	88Hz 96Hz 52Hz 62Hz 74Hz 92Hz 104Hz 52Hz 62Hz 74Hz 96Hz	96Hz	96Hz	ON2 ON2 ON3 ON3 ON3 ON3 ON3 ON3	I⊩	38 39	104Hz 116Hz	104Hz	96Hz 104Hz 116Hz	ON5 ON5	1	<u>38</u> 39	96Hz	96Hz 52Hz	96Hz 52Hz	ON2 ON2 ON3 ON3 ON3 ON3
40				ON5		40	62Hz	62Hz	62Hz	ON3	I⊦	40	124Hz	124Hz	124Hz 124Hz 144Hz 96Hz 104Hz 116Hz	ON5	1	40	62Hz	62Hz	62Hz	ON3
41	124Hz 144Hz 158Hz 166Hz 176Hz	144Hz	144Hz	ON5		41	74Hz	74Hz	74Hz	ON3		41	144Hz	144Hz	144Hz	ON5	1	41	74Hz	74Hz	74Hz	ON3
42	158Hz	158Hz	158Hz	ON5		42	92Hz	92Hz	92Hz	ON3		42	96Hz	96Hz	96Hz	ON6 ON6 ON6	1	42	92Hz	92Hz	92Hz	ON3
43 44	156HZ	156HZ	166Hz 176Hz	ON5		43 44	104HZ	104HZ	104HZ	ON3	- ⊢	43 44	104Hz 116Hz	104HZ	104HZ	ON6	Т	43 44	104HZ	104Hz 52Hz 62Hz 74Hz	104Hz 52Hz	ON3 ON4
45	188Hz	188Hz	188Hz	ON5		45	62Hz	62Hz	62Hz	ON4	∃⊢	45	124Hz	124Hz	124Hz	ON6	1	45	62Hz	62Hz	62Hz	ON4
46	188Hz 202Hz 210Hz	202Hz	188Hz 202Hz	ON5 ON5		46	74Hz	74Hz	74Hz	ON4 ON4		46	124Hz 144Hz	144Hz	144Hz	ON6 ON6	1	46	74Hz	74Hz	74Hz	ON4 ON4
47	210Hz	210Hz	210Hz	ON5			96Hz	96Hz	96Hz	ON4	ΠĒ	47	158Hz	158Hz	158Hz	ON6		47	96H7	96HZ	96HZ	ON4
					1	48 49	52HZ 68Hz	52Hz 68Hz 80Hz	52HZ 68Hz	ON5	I⊦	48 49	166Hz 176Hz	166Hz 176Hz	166Hz 176Hz	ON6 ON6 ON6	1	48 49	104HZ	104Hz 52Hz	104Hz 52Hz 68Hz	ON4 ON5
					1	50	80Hz	80Hz	80Hz	ON5		50	188Hz	188Hz	188Hz	ON6	Т	50	68Hz	68Hz	68Hz	ON5
						51 52	96Hz 104Hz	96Hz 104Hz	52Hz 68Hz 80Hz 96Hz 104Hz	ON5 ON5 ON5 ON5 ON5	1 [51	202Hz	202Hz	202Hz	ON6		51	80Hz 96Hz	80Hz 96Hz	80Hz 96Hz	ON5 ON5 ON5 ON5 ON6
						52	104Hz	104Hz	104Hz	ON5	▼ _	52	210Hz	210Hz	210Hz	ON6		52	96Hz	96Hz	96Hz	ON5
						53 54	116Hz 124Hz	116Hz 124Hz	110HZ	ON5 ON5 ON5 ON5 ON5 ON5								53 54	104Hz 52Hz	104Hz 52Hz	104Hz 52Hz	ONS
						54 55 56	124Hz 144Hz 158Hz	144Hz	124Hz 144Hz 158Hz	ON5								54 55 56	68Hz	52Hz 68Hz 80Hz	52Hz 68Hz 80Hz	ON6
						56	158Hz	158Hz	158Hz	ON5								56	80Hz	80Hz	80Hz	ON6
						57 58	166Hz 176Hz	166Hz 176Hz	166Hz 176Hz	ON5								57 58	96Hz 104Hz	96HZ	96HZ	ON6
						59	188Hz	188Hz	188Hz	ON5								59	116Hz	116Hz	116Hz	ON6
						60	188Hz 202Hz 210Hz	202Hz	202Hz	ON5								60	124Hz	124Hz	124Hz	ON6
						61	210Hz	210Hz	210Hz	ON5								61	144Hz	144Hz	144Hz	ON6
																		62 63	158Hz 166Hz	158Hz 166Hz	158Hz 166Hz	ON6
																		64	176Hz	176Hz	176Hz	ON6
																		65	188Hz	188Hz	188Hz	ON6
																		66 67	202Hz 210Hz	202Hz	202Hz 210Hz	ON6
																	- 1	6/	ZIUMZ	ZIUMŽ	ZIUHZ	ON6

Notes:

1. INV : Inverter compressor

STD: Standard compressor

Figures after ON represent the number of STD compressors in operation.

- 2. "Master unit", and "slave unit" in this section are the names for control, and they will be transferred according to the priority of rotation system.
- 3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

Basic Control SiBE37-704

2.3 Electronic Expansion Valve PI Control

Main electronic expansion valve EVM control

When the outdoor unit heat exchanging is performed via the evaporator (20SA is set to ON), this function is used to exert PI control on the electronic expansion valve (Y1E or Y3E) so that the evaporator outlet superheated degree (SH) will become constant.

SH = Tq - Te

SH: Evaporator outlet superheated degree

(°C)

Tg: Suction pipe temperature (°C) detected by the heat exchanger gas pipe thermistor R2T.

Te: Low pressure equivalent saturated temperature (°C)

Subcooling electronic expansion valve EVT control

In order to make the maximum use of the subcool heat exchanger, this function is used to exert PI control on the electronic expansion valve (Y2E, Y5E or Y3E) so that the evaporator-side gas pipe superheated degree (SH) will become constant.

SH = Tsh - Te

SH: Evaporator outlet superheated degree

(°C)

Tsh:Suction pipe temperature (°C) detected by the subcool heat exchanger outlet thermistor R5T

Te: Low pressure equivalent saturated temperature (°C)

Refrigerant charge electronic expansion valve EVJ control

While in automatic refrigerant charge mode, this function is used to exert PI control on the opening degree of the electronic expansion valve (Y2E or Y4E) in response to outdoor temperature and close the valve after the completion of refrigerant charge.

For normal operation, fully open this electronic expansion valve.

2.4 Step Control of Outdoor Unit Fans

Used to control the revolutions of outdoor unit fans in the steps listed in table below, according to condition changes.


		Fan revolutions (rpm)													
STEP No.			Single type			Multiple type									
	8HP	10HP	12HP	14HP	16HP	M8	M10	M12	M14	M16					
0	0	0	0	0	0	0	0	0	0/0	0/0					
1	285/255	285/255	285/255	285/255	285/255	350	350	350	230/0	230/0					
2	315/285	315/285	315/285	360/315	360/315	370	370	370	380/0	380/0					
3	360/330	360/330	360/330	395/365	395/365	400	400	400	290/260	290/260					
4	430/400	430/400	430/400	480/440	480/440	450	450	450	375/345	375/345					
5	590/560	590/560	590/560	560/530	560/530	540	560	560	570/540	570/540					
6	690/660	690/660	690/660	760/730	760/730	610	680	680	720/690	720/690					
7	820/790	820/790	820/790	960/930	960/930	680	710	710	910/880	910/880					
8	920/890	920/890	951/931	1125/1095	1155/1125	710	750	775	1091/1061	1091/1061					
9	920/890	920/890	1020/990	1125/1095	1200/1170	796	821	870	1136/1106	1136/1106					
	Fan1/Fan2	Fan1/Fan2	Fan1/Fan2	Fan1/Fan2	Fan1/Fan2				Fan1/Fan2	Fan1/Fan2					

^{*} Figures listed above are all those controlled while in standard mode, which vary when the system is set to high static pressure or capacity precedence mode.

SiBE37-704 Basic Control

2.5 Outdoor Unit Fan Control in Cooling Operation

While in cooling operation, if the outdoor temperature is low, this mode provides high-pressure control using the outdoor unit fan to retain appropriate liquid pressure, thus ensuring refrigerant circulation rate to be supplied to indoor units.

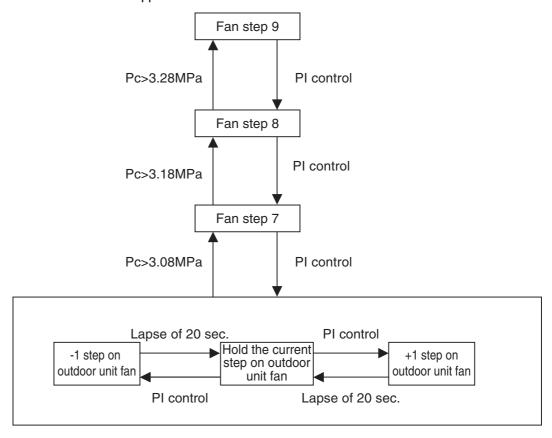


Basic Control SiBE37-704

2.6 Heat Exchanger Control


While in heating or cool/heat simultaneous operation, ensure target condensing and evaporating temperature by changing over the air heat exchange of outdoor unit to the evaporator or the condenser in response to loads.

[Single system]

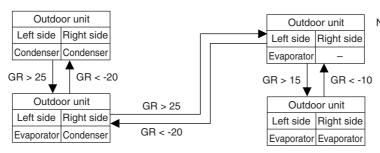

Note 1. "GR" is a numeric value representing the current balanced condition and calculated from target condensing temperature, target evaporating temperature, current condensing temperature, and current evaporating temperature.

[Multi outdoor unit system]

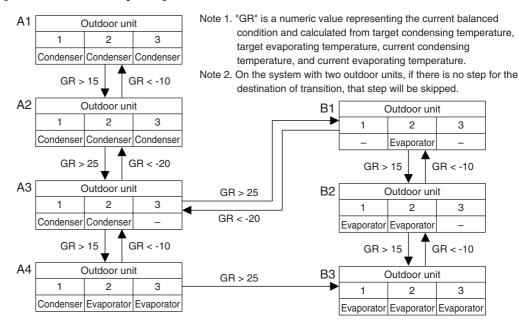

SiBE37-704 Special Control

3. Special Control

3.1 Startup Control

This control is used to equalize the pressure in the front and back of the compressor prior to the startup of the compressor, thus reducing startup loads. Furthermore, the inverter is turned ON to charge the capacitor. In addition, to avoid stresses to the compressor due to oil return or else after the startup, the following control is made and the position of the four way valve is also determined. To position the four way valve, the master and slave units simultaneously start up.

3.1.1 Startup Control in Cooling Operation

Actuator	Symbol	Elect. symbol		Control before	Startup control				
		REYQ	REMQ	startup	STEP1	STEP2			
Compressor 1		M1C	M1C			52Hz+OFF+OFF+2STEP / 20			
Compressor 2	_	M2C	M2C	0 Hz	52 Hz+OFF+OFF	sec. (Until it reaches			
Compressor 3		_	МЗС			Pc-Pe>0.39 MPa)			
Outdoor unit fan 1	_	M1F	M1F	STEP4	Ta<20°C: OFF	+1step/15 sec. (When Pc_max>2.16 MPa)			
Outdoor unit fan 2		M2F	M2F		Ta≥20°C: STEP4	-1step/15 sec. (When Pc_max<1.77 MPa)			
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E	0 pls	1375 pls	1375 pls			
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls	0 pls	0 pls			
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls	80 pls	80 pls			
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	OFF	OFF	OFF			
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	ON	ON	ON			
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	OFF	ON	ON			
Solenoid valve (Hot gas)	SVP	Y4S	Y5S	OFF	OFF	OFF			
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF	OFF	OFF			
Solenoid valve (Refrigerant regulator gas vent pipe)	SVG	Y1S	Y1S	OFF	OFF	OFF			
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	OFF	OFF	OFF			
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF	OFF	OFF			
Ending conditions				A lapse of 60 sec.	A lapse of 15 sec.	OR • A lapse of 90 sec. • Pc - Pe>0.39 MPa			

Special Control SiBE37-704


3.1.2 Startup Control in Heating Operation

Actuator	Symbol	Ele	ect. nbol	Control before		control		
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	REYQ	REMQ	startup	STEP1	STEP2		
Compressor 1		M1C	M1C			52Hz+OFF+OFF+2STEP / 20		
Compressor 2	_	M2C	M2C	0 Hz	52 Hz+OFF+OFF	sec. (Until it reaches		
Compressor 3		_	МЗС			Pc-Pe>0.39 MPa)		
Outdoor unit fan 1	_	M1F	M1F	STEP4	20SA=ON: STEP7 20SA=OFF +1step/15 sec. (When Pc_max>2.16 MPa)	20SA=ON: STEP7 20SA=OFF +1step/15 sec. (When Pc_max>2.16 MPa)		
Outdoor unit fan 2		M2F	M2F		-1step/15 sec. (When Pc_max<1.77 MPa)	-1step/15 sec. (When Pc_max<1.77 MPa)		
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E	0 pls	20SA=ON: SH Control 20SA=OFF: 1375 pls	20SA=ON: SH Control 20SA=OFF: 1375 pls		
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls	0 pls	0 pls		
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls	80 pls	80 pls		
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	When outdoor heat exchanger is evaporator: ON When outdoor heat exchanger is condenser: OFF	When outdoor heat exchanger is evaporator: ON When outdoor heat exchanger is condenser: OFF	When outdoor heat exchanger is evaporator: ON When outdoor heat exchanger is condenser: OFF		
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	OFF	OFF	OFF		
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	OFF	OFF	OFF		
Solenoid valve (Hot gas)	SVP	Y4S	Y5S	OFF	OFF	OFF		
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF	OFF	OFF		
Solenoid valve (Refrigerant regulator gas vent pipe)	svg	Y1S	Y1S	OFF	OFF	OFF		
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	OFF	OFF	OFF		
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF	OFF	OFF		
Ending conditions				A lapse of 60 sec.	A lapse of 15 sec.	OR • A lapse of 90 sec. • Pc - Pe>0.39 MPa		

SiBE37-704 Special Control

3.2 Large Capacity Start Up Control (Heating)

For startup, oil return operation, or setup after defrosting, start up multiple compressors at a high speed according to the conditions of indoor units with thermostat ON, thus maximizing the equipment capacity.

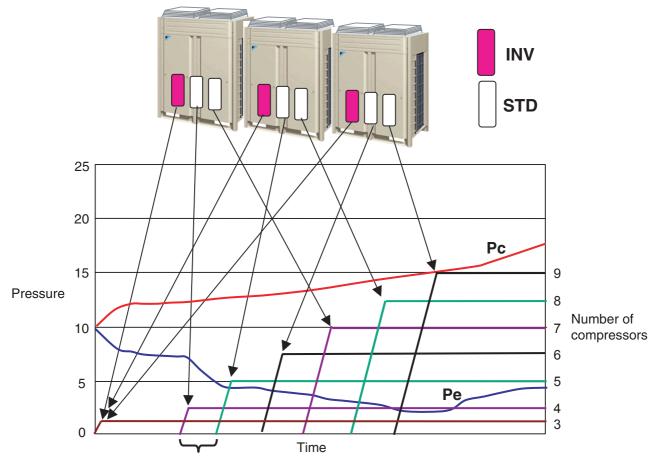

Start up STD compressors at intervals of 15 seconds.

[Starting conditions]

- The system starts heating operation with thermostat ON at a high load.
- The system completes defrosting operation.

• The system switches the operation mode from cooling to heating or simultaneous cooling and heating operation.

[Control]

- 1. Start multiple INV compressors in the system at one time.
- 2. Start multiple STD compressors in the system at intervals of 15 seconds.

Special Control SiBE37-704

Oil Return Operation 3.3

This function is used to recover refrigerant oil that flows out from the compressor to the system side by conducting oil return operation in order to prevent the compressor from running out of refrigerant oil.

3.3.1 Cooling Oil Return Operation

[Start conditions]

Referring to the following conditions, start cooling oil return operation.

• Integral oil rise rate is reached to specified level.

• When cumulative compressor operating time exceeds 8 hours (2 hours when the power supply turns ON for the first time)

Furthermore, the integral oil rise rate is calculated by Tc, Te, and compressor loads.

The higher the compressor operating step No., the cumulative refrigerant oil consumption increases.

Outdoor unit actuator	Symbol		symbol REMQ	Oil return operation	Operation after oil return	
Compressor 1		M1C	M1C	52Hz+ON+ON (Subsequently, constant low	52Hz+ON+ON (Subsequently, constant low	
Compressor 2	_	M2C	M2C	pressure control) Maintain the number of	pressure control) Maintain the number of	
Compressor 3		_	МЗС	compressors that were used before oil return operation)	compressors that were used before oil return operation)	
Outdoor unit fan 1		M1F	M1F	Cooling fan control	Cooling fan control	
Outdoor unit fan 2		M2F	M2F	Cooling lan control	Cooling lair control	
Four way valve (for heat exchanger selection)	20SA	Y2S Y9S	Y3S	OFF	OFF	
Four way valve (for high- and low-pressure gas pipe selection)	20SB	Y8S	Y2S	ON	ON	
Electronic expansion valve (main)	EVM	Y1E Y3E	Y1E	1375pls	1375pls	
Electronic expansion valve (subcooling)	EVT	Y2E Y5E	Y3E	SH control	SH control	
Electronic expansion valve (refilling refrigerant)	EVJ	Y4E	Y2E	80pls	80pls	
Solenoid valve (main bypass)	SVE	Y5S Y10S	Y6S	ON	ON	
Solenoid valve (hot gas)	SVP	Y4S	Y5S	OFF	OFF	
Solenoid valve (liquid pipe of refrigerant regulator)	SVL	Y3S	Y4S	0pls	0pls	
Solenoid valve (gas discharge pipe of refrigerant regulator)	SVG	Y1S	Y1S	0pls	0pls	
Solenoid valve (drain pipe of refrigerant regulator)	svo	Y7S	Y7S	0pls	0pls	
Solenoid valve (discharge pipe of refrigerant regulator)	SVT	Y6S	Y8S	0pls	0pls	
End conditions				or • After a lapse of 5 min. • TsA - Te<5°C	or • After a lapse of 3 min. • Pe_min<5°C • Pc_max>3.63MPa • HTdmax>100°C	

^{*1:} In case of multi outdoor unit system:

Master unit: It conducts the operation listed in the table above.

Slave units: Operating units conduct the operation listed in the table above.

Non-operating units conduct the operation listed in the table above after the "Oil returning" process. (Non-operating units stop while in "Preparation" mode.)

SiBE37-704 Special Control

Cooling i	ndoor unit actuator	Oil return operation			
	Thermo ON unit	Remote controller setting			
Fan	Unit not in operation	OFF			
	Thermo OFF unit	Remote controller setting			
	Thermo ON unit	Normal opening degree			
Motorized valve	Unit not in operation	192pls			
	Thermo OFF unit	Normal opening degree for forced thermostat ON			

Cooling BS unit actuator	Elect. symbol	Oil return operation
Electronic expansion vale (EVH)	Y4E	600pls
Electronic expansion vale (EVL)	Y5E	760pls
Electronic expansion vale (EVHS)	Y2E	480pls
Electronic expansion vale (EVLS)	Y3E	480pls
Electronic expansion vale (EVSC)	Y1E	Opls

Special Control SiBE37-704

3.3.2 Heating Oil Return Operation (including cooling / heating simultaneous operation)

[Start conditions]

OR

Referring to the following conditions, start heating oil return operation.

• Integral oil rise rate is reached to specified level.

• When cumulative compressor operating time exceeds 8 hours (2 hours when the power supply turns ON for

Furthermore, the integral oil rise rate is calculated by Tc, Te, and compressor loads.

The higher the compressor operating step No., the cumulative refrigerant oil consumption increases.

Actuator	Symbol	Elect.	symbol REMQ	Oil return operation
Compressor 1		M1C	M1C	Maintain load that was applied before oil return
Compressor 2	_	M2C	M2C	operation. When current circulation rate < circulation rate required
Compressor 3		_	МЗС	for oil return operation, turn ON the STD compressor every 10 seconds (up to 3 units at maximum).
Outdoor unit fan 1	_	M1F	M1F	When outdoor unit heat exchanger is condenser, the fan will run under cooling fan control.
Outdoor unit fan 2		M2F	M2F	When outdoor unit heat exchanger is evaporator, the fan will run at the fan step 7 or 8.
Electronic expansion valve (main)	EVM	Y1E Y3E	Y1E	20SA=ON : PI control 20SA=OFF : 418pls
Electronic expansion valve (subcooling)	EVT	Y2E Y5E	Y3E	PI control
Electronic expansion valve (refilling refrigerant)	EVJ	Y4E	Y2E	80pls
Four way valve (for heat changer selection)	20SA	Y2S Y9S	Y3S	When outdoor unit heat exchanger is condenser, the valve will turn OFF. When outdoor unit heat exchanger is evaporator, the valve will turn ON.
Four way valve (for high- and low- pressure gas pipe selection)	20SB	Y8S	Y2S	OFF
Solenoid valve (main bypass)	SVE	Y5S Y10S	Y6S	OFF
Solenoid valve (hot gas)	SVP	Y4S	Y5S	0pls
Solenoid valve (liquid pipe of refrigerant regulator)	SVL	Y3S	Y4S	0pls
Solenoid valve (gas discharge pipe of refrigerant regulator)	SVG	Y1S	Y1S	0pls
Solenoid valve (drain pipe of refrigerant regulator)	SVO	Y7S	Y7S	0pls
Solenoid valve (discharge pipe of refrigerant regulator)	SVT	Y6S	Y8S	0pls
End conditions				or Pe_min<0.22MPa • After a lapse of 9 min.

^{*1:} In case of multi outdoor unit system:

Master unit: It conducts the operation listed in the table above.

Slave units: Operating units conduct the operation listed in the table above.

Non-operating units conduct the operation listed in the table above after the "Oil returning" process.

(Non-operating units stop while in "Preparation" mode.)

SiBE37-704 Special Control

Cooling indoo	r unit actuator		Oil return operation		
	Therm	o ON unit	Remote controller setting		
Fan	Unit not i	n operation	OFF		
	Thermo	OFF unit	Remote controller setting		
	Therm	o ON unit	Normal opening degree		
Motorized valve	Unit not i	n operation	192pls		
	Thermo	OFF unit	Normal opening degree for forced thermostat ON		
Heating indoo	r unit actuator		Oil return operation		
	Therm	o ON unit	Remote controller setting		
Fan	Unit not i	n operation	OFF		
	Thermo	OFF unit	Remote controller setting		
	Therm	o ON unit	Normal opening degree		
Motorized valve	Unit not i	n operation	224 pls		
	Thermo	OFF unit	Normal opening degree for forced thermostat ON		
Cooling BS unit actuate	or	Elect. symbol	Oil return operation		
Electronic expansion vale (EVH)		Y4E	0pls		
Electronic expansion vale (EVL)		Y5E	760pls		
Electronic expansion vale (EVHS)		Y2E	Opls (60pls when Pc_max>2.85MPa)		
Electronic expansion vale (EVLS)		Y3E	480pls		
Electronic expansion vale (EVSC)		Y1E	PI control		
Heating BS unit actuate	or	Elect. symbol	Oil return operation		
Electronic expansion vale (EVH)		Y4E	760pls		
Electronic expansion vale (EVL)		Y5E	0pls		
Electronic expansion vale (EVHS)		Y2E	60pls		
Electronic expansion vale (EVLS)		Y3E	0pls (60pls when Pc_max>2.85MPa)		
Electronic expansion vale (EVSC)		Y1E	PI control		

Special Control SiBE37-704

Defrost Operation 3.4

[Start conditions]

Referring to the following conditions, start defrost operation.

- When there is a decrease in the coefficient of heat transfer of outdoor unit heat exchanger
- When there is a drop in the temperature of outdoor unit heat exchanger outlet (Tb)

• When the low pressure stays low for a certain amount of time (2 hours minimum)

Furthermore, the thermal conductivity of outdoor unit heat exchanger is calculated by Tc, Te, and compressor loads.

Defrosting outdoor unit actuator	Symbol		ect. nbol	Defrost operation	Operation after defrost		
Compressor 1		M1C	M1C	REYQ8•10•12P: 232Hz+ON	REYQ8•10•12P: upper limit 124Hz(STD Holds)		
Compressor 2	_	M2C	M2C	REYQ14•16P: 232Hz+232Hz REMQ8P: 210Hz	REYQ14•16P: 232Hz+232Hz REMQ8P: 210Hz		
Compressor 3			МЗС	REMQ10•12P: 210Hz+ON REMQ14•16P: 202Hz+ON+ON	REMQ10•12P: 210Hz+ON REMQ14•16P: 210Hz+ON+ON		
Outdoor unit fan 1		M1F	M1F	Pcmax>2.45MPa Pcmax<2.36MPa FANSTEP4	Pcmax>2.45MPa Pcmax<2.36MPa FANSTEP4		
Outdoor unit fan 2		M2F	M2F	Pcmax>3.04MPa ↑ Pcmax<2.95MPa FANSTEP6	Pcmax>3.04MPa ↑ Pcmax<2.95MPa FANSTEP6		
Four way valve (for heat changer selection)	20SA	Y2S Y9S	Y3S	OFF	OFF		
Four way valve (for high- and low- pressure gas pipe selection)	20SB	Y8S	Y2S	Holds	Holds		
Electronic expansion valve (main)	EVM	Y1E Y3E	Y1E	1375pls	0pls		
Electronic expansion valve (subcooling)	EVT	Y2E Y5E	Y3E	SH control	0pls		
Electronic expansion valve (refilling refrigerant)	EVJ	Y4E	Y2E	80pls	80pls		
Solenoid valve (main bypass)	SVE	Y5S Y10S	Y6S	ON	OFF		
Solenoid valve (hot gas)	SVP	Y4S	Y5S	OFF	OFF		
Solenoid valve (liquid pipe of refrigerant regulator)	SVL	Y3S	Y4S	0pls	0pls		
Solenoid valve (gas discharge pipe of refrigerant regulator)	SVG	Y1S	Y1S	0pls	0pls		
Solenoid valve (drain pipe of refrigerant regulator)	SVO	Y7S	Y7S	0pls	0pls		
Solenoid valve (discharge pipe of refrigerant regulator)	SVT	Y6S	Y8S	0pls	0pls		
End conditions				REYP8 to 16P (by unit) or • 6 min. and 30 sec. • Tb > 11°C continues for a period of 90 consecutive sec. • Pc_max > 3.04MP REMQ8 to 12P (by unit) or • 5 min. and 30 sec. • Tb > 11°C for a period of 10 consecutive sec. • Pc_max > 3.04MPa REMQ14 and16P (by unit) or • 5 min. and 30 sec. • Tb > 11°C for a period of 30 consecutive sec. • Pc_max > 3.04MPa	• 30 sec. • Pc_max>3.04MPa		

SiBE37-704 Special Control

		Elect.	symbol	Defendance	On anation of the order of	
Evaporating outdoor unit actuator	Symbol	REYQ	REMQ	Defrost operation	Operation after defrost	
Compressor 1		M1C	M1C	REYQ8•10•12P: 232Hz+ON REYQ14•16P: 232Hz+232Hz	Upper limit 124Hz (STD Holds) REYP400•480A: 232Hz+232Hz	
Compressor 2	_	M2C	M2C	REMQ8P: 210Hz REMQ10•12P: 210Hz+ON	REMP224A: 210Hz REMP280•335A: 210Hz+ON	
Compressor 3		МЗС	МЗС	REMQ14•16P: 210Hz+ON+ON	REMP400•450A: 210Hz+ON+ON	
Outdoor unit fan 1		M1F	M1F	Fan control	Fan control	
Outdoor unit fan 2	_	M2F	M2F		Fair Control	
Four way valve (for heat changer selection)	20SA	Y2S Y9S	Y3S	ON	ON	
Four way valve (for high- and low- pressure gas pipe selection)	20SB	Y8S	Y2S	Holds	Holds	
Electronic expansion valve (main)	EVM	Y1E Y3E	Y1E	PI control	PI control	
Electronic expansion valve (subcooling)	EVT	Y2E Y5E	Y3E	SH control	0pls	
Electronic expansion valve (refilling refrigerant)	EVJ	Y4E	Y2E	80pls	80pls	
Solenoid valve (main bypass)	SVE	Y5S Y10S	Y6S	OFF	OFF	
Solenoid valve (hot gas)	SVP	Y4S	Y5S	OFF	OFF	
Solenoid valve (liquid pipe of refrigerant regulator)	SVL	Y3S	Y4S	0pls	0pls	
Solenoid valve (gas discharge pipe of refrigerant regulator)	svg	Y1S	Y1S	0pls	0pls	
Solenoid valve (drain pipe of refrigerant regulator)	svo	Y7S	Y7S	0pls	0pls	
Solenoid valve (discharge pipe of refrigerant regulator)	SVT	Y6S	Y8S	0pls	0pls	

Cooling	g indoor unit actuator	Defrost operation
	Thermo ON unit	Remote controller setting
Fan	Unit not in operation	OFF
	Thermo OFF unit	Remote controller setting
	Thermo ON unit	Normal opening degree
Motorized valve	Unit not in operation	0pls
	Thermo OFF unit	0pls

Heating	indoor unit actuator	Defrost operation			
rieating	indoor unit actuator	REYQ	REMQ		
	Thermo ON unit	LL	LL		
Fan	Unit not in operation	OFF	OFF		
	Thermo OFF unit	LL	LL		
	Thermo ON unit	160pls	224pls		
Motorized valve	Unit not in operation	0pls	0pls		
	Thermo OFF unit	160pls	224pls		

Cooling BS unit actuator	Elect. symbol	Defrost operation
Electronic expansion vale (EVH)	Y4E	0pls
Electronic expansion vale (EVL)	Y5E	760pls
Electronic expansion vale (EVHS)	Y2E	0pls
Electronic expansion vale (EVLS)	Y3E	480pls
Electronic expansion vale (EVSC)	Y1E	0pls

Heating BS unit actuator	Elect. symbol	Defrost operation
Electronic expansion vale (EVH)	Y4E	760pls
Electronic expansion vale (EVL)	Y5E	0pls
Electronic expansion vale (EVHS)	Y2E	60pls
Electronic expansion vale (EVLS)	Y3E	0pls (REYQ8~16P) 60pls (REMQ8~16P)
Electronic expansion vale (EVSC)	Y1E	Opls (PI control for cool/heat concurrent operation)

Special Control SiBE37-704

3.5 Pump-down Residual Operation

3.5.1 Pump-down Residual Operation in Cooling Operation

If the liquid refrigerant stays in the Evaporator at the startup of a compressor, this liquid refrigerant enters the compressor, thus resulting in diluted oil in the compressor and then degraded lubrication performance. Consequently, in order to recover the refrigerant in the Evaporator while the compressor stops, the pump-down residual operation is conducted.

operation is conducted.		Elect. symbol				
Actuator	Symbol	REYQ	REMQ	Master unit operation	Slave unit operation	
Compressor 1		M1C	M1C			
Compressor 2	<u> </u>	M2C	M2C	124 Hz+OFF+OFF	OFF	
Compressor 3		МЗС	МЗС			
Outdoor unit fan 1		M1F	M1F	Fan control	For control	
Outdoor unit fan 2	_	M2F	M2F	Fan control	Fan control	
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E	1375 pls	1375 pls	
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls	0 pls	
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls	80 pls	
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	OFF	OFF	
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	ON	ON	
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	ON	ON	
Solenoid valve (Hot gas)	SVP	Y4S	Y5S	OFF	OFF	
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF	OFF	
Solenoid valve (Refrigerant regulator gas vent pipe)	SVG	Y1S	Y1S	OFF	OFF	
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	OFF	OFF	
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF	OFF	
Ending conditions				or		

^{*} Pe_min and Pc_max indicate the minimum and maximum values in the system, respectively.

SiBE37-704 Special Control

3.5.2 Pump-down Residual Operation in Heating Operation and Simultaneous Cooling / Heating Operation

Actuator	Symbol Elect			Master unit operation	Slave unit operation	
riolado	- Cymber	REYQ	REMQ	inacior anni operation		
Compressor 1		M1C	M1C			
Compressor 2]_	M2C	M2C	124 Hz+OFF+OFF	OFF	
Compressor 3		МЗС	МЗС			
Outdoor unit fan 1		M1F	M1F	Fan control	Fan control	
Outdoor unit fan 2		M2F	M2F	Fair control	ran control	
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E	When 20SA=ON: 0 pls When 20SA=OFF: 1375 pls	When 20SA=ON: 0 pls When 20SA=OFF: 1375 pls	
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls	0 pls	
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls	80 pls	
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	When outdoor heat exchanger is evaporator: ON When outdoor heat exchanger is condenser: OFF	When outdoor heat exchanger is evaporator: ON When outdoor heat exchanger is condenser: OFF	
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	OFF	OFF	
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	OFF	OFF	
Solenoid valve (Hot gas)	SVP	Y4S	Y5S	OFF	OFF	
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF	OFF	
Solenoid valve (Refrigerant regulator gas vent pipe)	SVG	Y1S	Y1S	OFF	OFF	
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	OFF	OFF	
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF	OFF	
Ending conditions				or • 3 min. • Pe_min<0.25 MPa * • Pc_max<3.13 MPa * • Master unit Tdi>110°C • Master unit Tp>140°C		

^{*} Pe_min and Pc_max indicate the minimum and maximum values in the system, respectively.

Special Control SiBE37-704

3.6 Standby


3.6.1 Restart Standby

Used to forcedly stop the compressor for a period of 2 minutes, in order to prevent the frequent ON/OFF of the compressor and equalize the pressure within the refrigerant system.

Actuator	Symbol	Ele	ect. nbol	,		ration			
		REYQ	REMQ	REYQ8~16P REMQ8P		REMQ10•12P	REMQ14•16P		
Compressor1	_	M1C	M1C	OFF	OFF	OFF	OFF		
Compressor2	_	M2C	M2C	OFF	_	OFF	OFF		
Compressor3	_	МЗС	МЗС	_	_	_	OFF		
Outdoor unit fan1	_	MF1	MF1	Ta>30°C: STEP4 Ta≤30°C: OFF	Ta>30°C: STEP4 Ta≤30°C: OFF	Ta>30°C: STEP4 Ta≤30°C: OFF	Ta>30°C: STEP4 Ta≤30°C: OFF		
Outdoor unit fan2	_	MF2	MF2	Ta>30°C: STEP4 Ta≤30°C: OFF	_	_	Ta>30°C: STEP4 Ta≤30°C: OFF		
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E		0	pls			
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls					
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls					
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	Holds					
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	Holds					
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	OFF					
Solenoid valve (Hot gas)	SVP	Y4S	Y5S		O	FF			
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF					
Solenoid valve (Refrigerant regulator gas vent pipe)	SVG	Y1S	Y1S	OFF					
Solenoid valve (Refrigerant regulator exhaust pipe)	SVO	Y7S	Y7S	OFF					
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF					
Ending conditions				2 min.					

3.6.2 Crankcase Heater Control

In order to prevent the refrigerant from melting in the compressor oil in the stopped mode, this mode is used to control the crankcase heater.

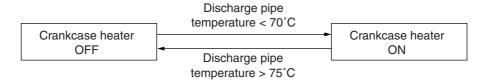

SiBE37-704 Special Control

3.7 Stopping Operation

3.7.1 When System is in Stop Mode (Normal operation stop)

This mode is used to define actuator operations when the system stops.

Actuator	Symbol	Elect. symbol		Operation				
		REYQ	REMQ	REYQ8~16P	REMQ8P	REMQ10•12P	REMQ14•16P	
Compressor1	_	M1C	M1C	OFF	OFF	OFF	OFF	
Compressor2	_	M2C	M2C	OFF		OFF	OFF	
Compressor3	_	МЗС	МЗС	_		_	OFF	
Outdoor unit fan1	_	M1F	M1F	OFF	OFF	OFF	OFF	
Outdoor unit fan2	_	M2F	M2F	OFF	_	_	OFF	
Electronic expansion valve (Main)	EVM	Y1E Y3E	Y1E		0	pls		
Electronic expansion valve (Supercooling)	EVT	Y2E Y5E	Y3E	0 pls				
Electronic expansion valve (Refrigerant charge)	EVJ	Y4E	Y2E	80 pls				
Four way valve (Heat exchanger switch)	20SA	Y2S Y9S	Y3S	Holds				
Four way valve (High/low pressure gas pipe switch)	20SB	Y8S	Y2S	Holds				
Solenoid valve (Main bypass)	SVE	Y5S Y10S	Y6S	OFF				
Solenoid valve (Hot gas)	SVP	Y4S	Y5S		OI	FF		
Solenoid valve (Refrigerant regulator liquid pipe)	SVL	Y3S	Y4S	OFF				
Solenoid valve (Refrigerant regulator gas vent pipe)	SVG	Y1S	Y1S	OFF				
Solenoid valve (Refrigerant regulator exhaust pipe)	svo	Y7S	Y7S	OFF				
Solenoid valve (Refrigerant regulator discharge pipe)	SVT	Y6S	Y8S	OFF				
Ending conditions	_			Indoor unit thermostat is turned ON.				

3.7.2 Stop due to Malfunction

In order to protect compressors, if any of the following items has an abnormal value, the system will make "stop with thermostat OFF" and the malfunction will be determined according to the number of retry times.

Item	Judgment Criteria	Malfunction Code
1. Abnormal low pressure level	0.07MPa	E4
2. Abnormal high pressure level	4.0MPa	E3
3. Abnormal discharge pipe temperature level	135°C	F3
4. Abnormal power supply voltage	Reverse-phase power supply	U1
5. Abnormal inverter current level	16.1A: 260 sec.	L8
6. Abnormal radiator fin temperature level	93°C	L4

Protection Control SiBE37-704


4. Protection Control

4.1 High Pressure Protection Control

This high pressure protection control is used to prevent the activation of protection devices due to abnormal increase of high pressure and to protect compressors against the transient increase of high pressure.

[In cooling operation]


★ The following control is performed in the entire system. Pc_max indicates the maximum value within the system.

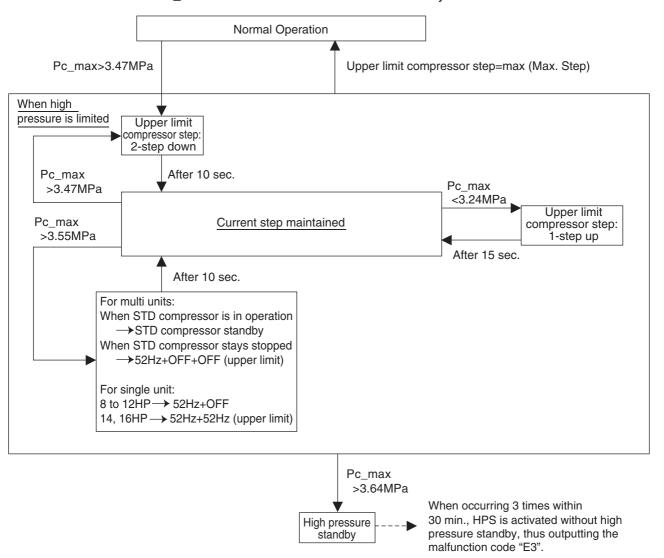

SiBE37-704 Protection Control

[Heating Operation and Simultaneous Cooling / Heating Operation]

★ The following control is performed in the entire system. Pc_max indicates the maximum value within the system.

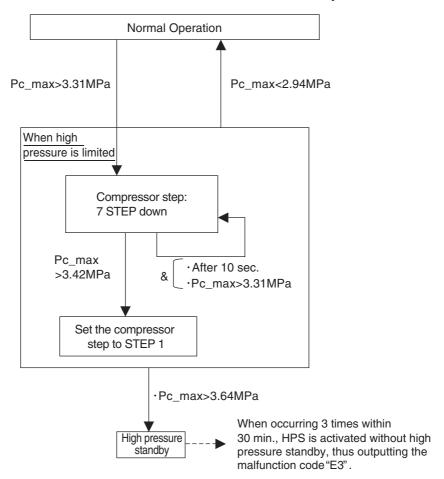


Protection Control SiBE37-704

4.2 Low Pressure Protection Control

This low pressure protection control is used to protect compressors against the transient decrease of low pressure.

[In cooling operation]


★ Because of common low pressure, the following control is performed in the system.
Pe_min indicates the minimum value within the system.

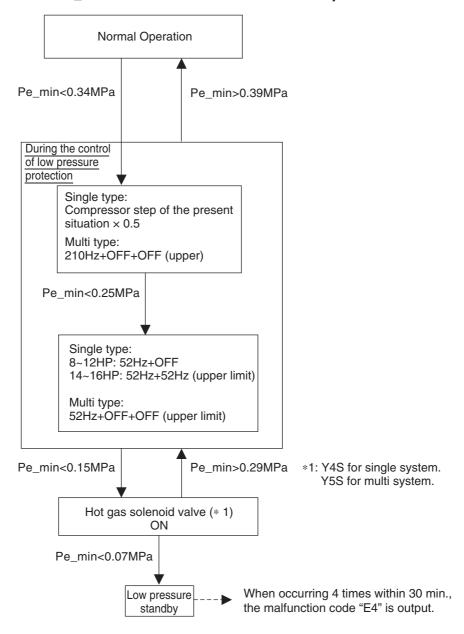

SiBE37-704 Protection Control

[In heating operation and Simultaneous Cooling / Heating Operation]

★ The following control is performed in the system.
Pe_min indicates the minimum value within the system.

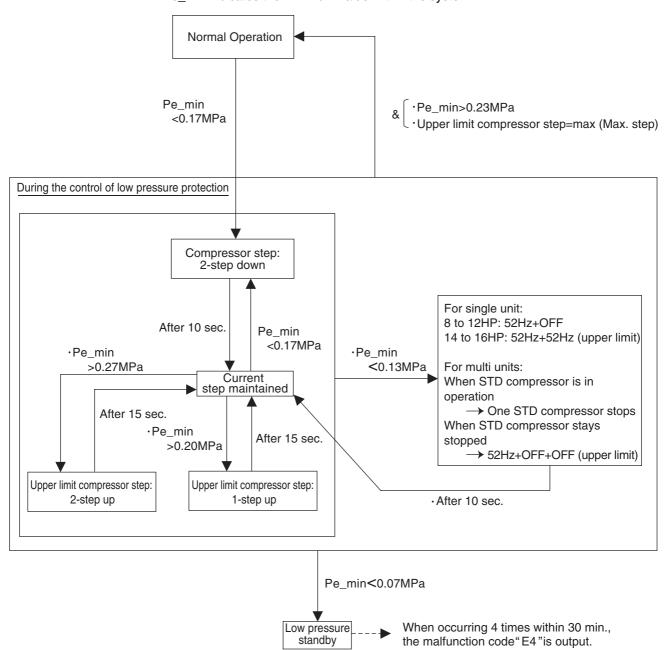

Protection Control SiBE37-704


4.3 Discharge Pipe Protection Control

This discharge pipe protection control is used to protect the compressor internal temperature against a malfunction or transient increase of discharge pipe temperature.

[Contents]

★ The following control is performed for each compressor of single unit as well as multi units.


[INV compressor]

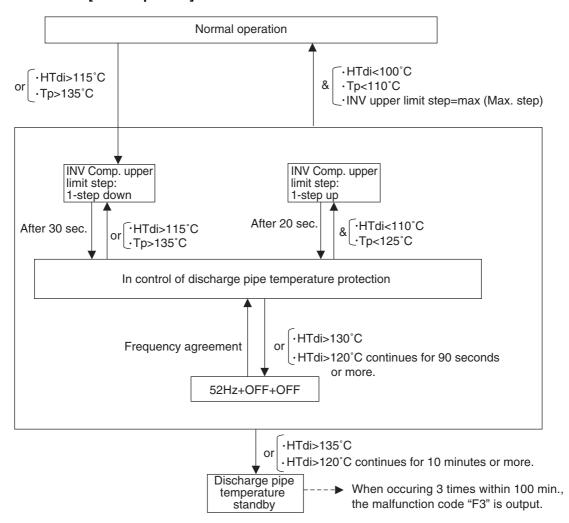

[STD compressor]

HTds: Value of STD compressor discharge pipe temperature (Tds) compensated with outdoor air temperature

Tp: Value of compressor port temperature calculated by Tc and Te, and suction superheated degree.

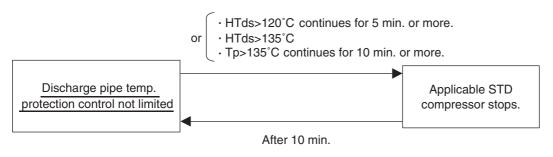

SiBE37-704 Protection Control


4.4 Inverter Protection Control

Inverter current protection control and inverter fin temperature control are performed to prevent tripping due to a malfunction, or transient inverter overcurrent, and fin temperature increase.

★ In the case of multi-outdoor-unit system, each INV compressor performs these controls in the following sequence.

[Inverter overcurrent protection control]


★ Perform the following control of integrated as well as multi units for each INV compressor.

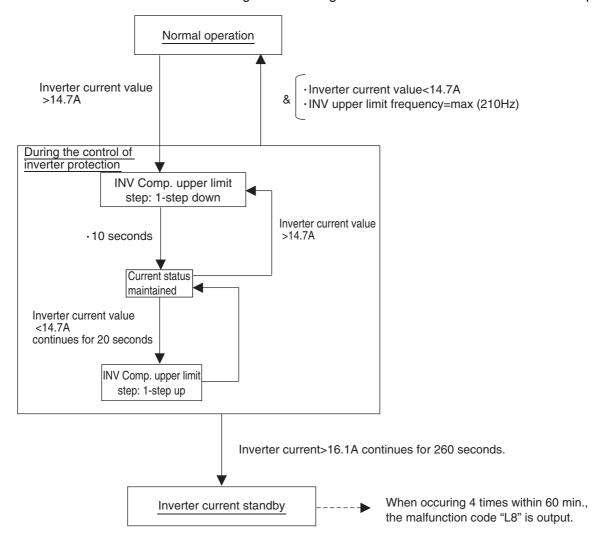

Protection Control SiBE37-704

[Inverter fin temperature control]


★ Perform the following control of integrated as well as multi units for each INV compressor.

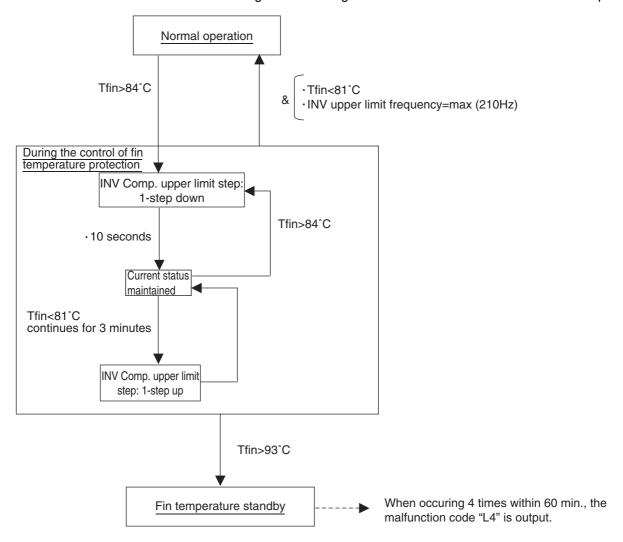

SiBE37-704 Protection Control

4.5 STD Compressor Overload Protection

This control is used to prevent abnormal heating due to overcurrent to the compressor resulting from failures of STD compressor such as locking.

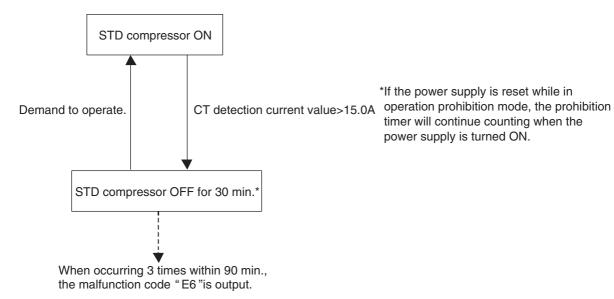

Other Control SiBE37-704

5. Other Control

5.1 Backup Operation

If any of the compressors goes wrong, disable the relevant compressor or the relevant outdoor unit from operating, and then conduct emergency operation only with operational compressors or outdoor units.

"Emergency operation with remote controller reset" and "Emergency operation with outdoor unit PC board setting" are available

Operating method Applicable model	(1) Emergency operation with remote controller reset (Auto backup operation)	(2) Emergency operation with outdoor unit PC board setting (Manual backup operation)
REYQ8 ~ 16PY1	_	Backup operation by the compressor
REYQ18 ~ 48PY1	Backup operation by the indoor unit	Backup operation by the outdoor unit

(1) Emergency operation with remote controller reset

[Operating method]

Reset the remote controller. (Press the RUN/STOP button for 4 seconds or more.) [Details of operation]

Disable the defective outdoor unit from operating, and then only operate other outdoor units.

(On systems with 1 outdoor unit, this emergency operation is not available.)

(2) Emergency operation with outdoor unit PC board setting

[Setting method]

Make setting of the compressor, "the operation of which is to be disabled", in field setting mode (setting mode 2).

(For detail of the setting method, refer to page 239.)

[Details of operation]

Disable the compressor with "operation disable setting" made from operating and only operate other compressors.

(On the system with 1 compressor "REYQ8PY1", this emergency operation is not available.)

5.2 **Demand Operation**

In order to save the power consumption, the capacity of outdoor unit is saved with control forcibly by using "Demand 1 Setting" or "Demand 2 Setting".

To operate the unit with this mode, additional setting of "Continuous Demand Setting" or external input by external control adapter is required.


Set item	Condition	Content
Demand 1	Mode 1	The compressor operates at approx. 60% or less of rating.
	Mode 2	The compressor operates at approx. 70% or less of rating.
	Mode 3	The compressor operates at approx. 80% or less of rating.
Demand 2	_	The compressor operates at approx. 40% or less of rating.

5.3 Heating Operation Prohibition

Heating operation is prohibited above 24°C ambient temperature.


6. Outline of Control (Indoor Unit)

6.1 Operation Flow Chart

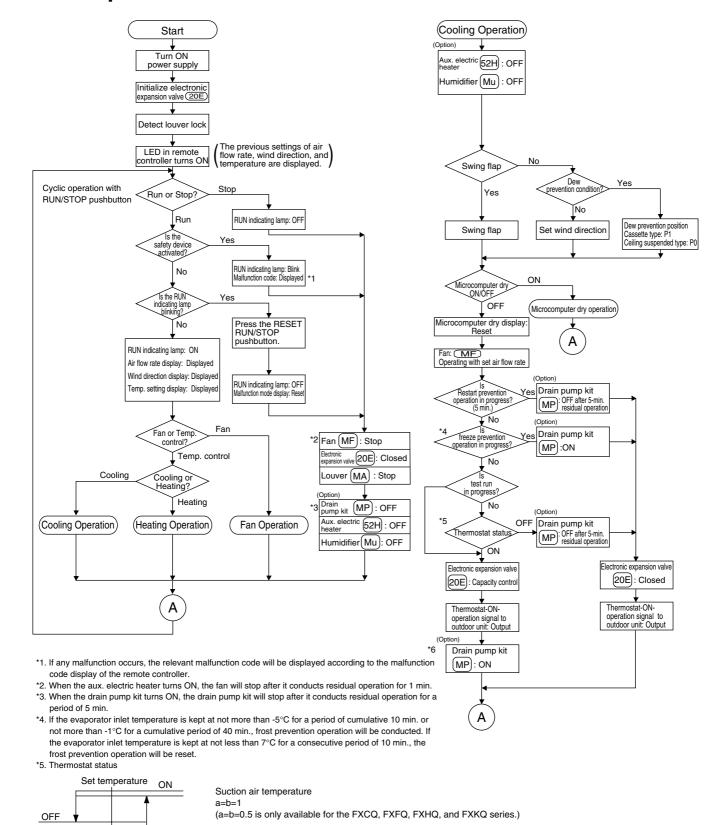

^{*6.} The FXCQ, FXFQ, FXKQ, and FXSQ series have the drain pump as standard equipment.

- h -

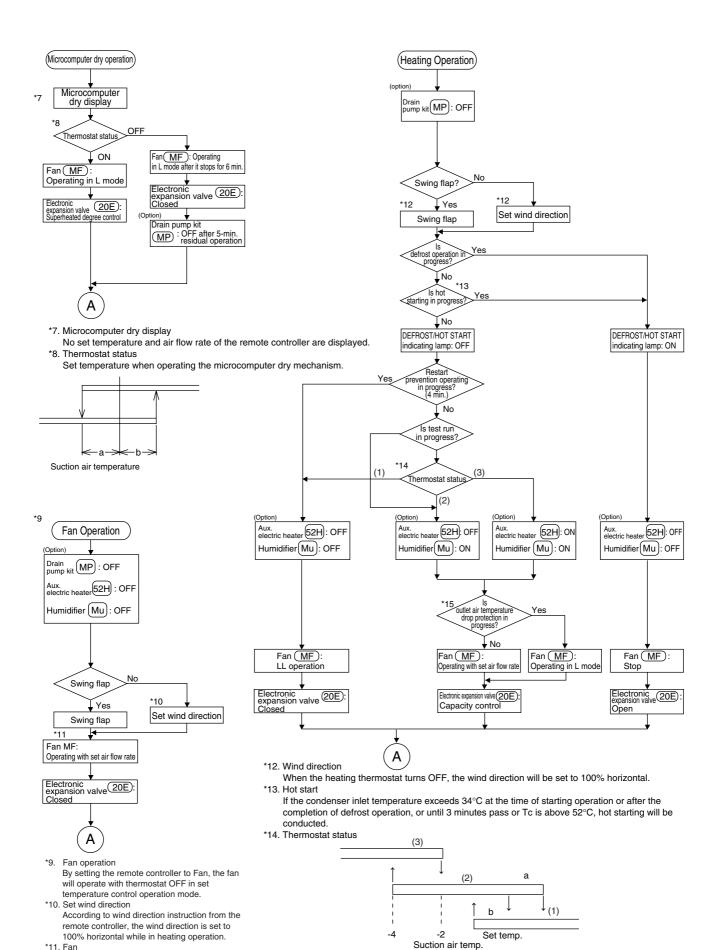

According to fan speed instruction from the *15. Outlet air temperature drop protection remote controller, the fan is put into operation in When the set temperature is below 24°C or the electronic expansion valve opening is small, the protection will be activated.

LL mode while in heating operation.


6.2 Thermostat Control

6.2.1 Thermostat Sensor in Remote Controller

Temperature is controlled by both the thermostat sensor in remote controller and air suction thermostat in the indoor unit. (This is however limited to when the field setting for the thermostat sensor in remote controller is set to "Use" .)

Cooling

If there is a significant difference in the preset temperature and the suction temperature, fine adjustment control is carried out using a body thermostat sensor, or using the sensor in the remote controller near the position of the user when the suction temperature is near the preset temperature.

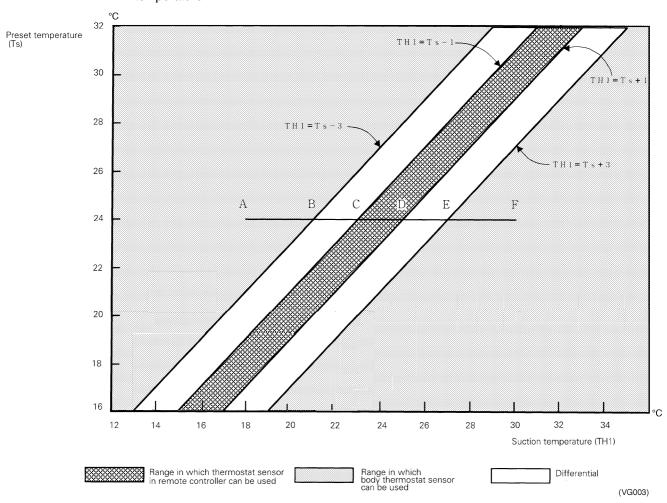

■ Ex: When cooling

Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 30°C (A \rightarrow F):

(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 23°C (A \rightarrow C).

Remote controller thermostat sensor is used for temperatures from 23°C to 27°C (C \rightarrow E).

Body thermostat sensor is used for temperatures from 27°C to 30°C (E \rightarrow F).

And, assuming suction temperature has changed from 30°C to 18°C (F \rightarrow A):


Body thermostat sensor is used for temperatures from 30°C to 25°C (F \rightarrow D).

Remote controller thermostat sensor is used for temperatures from 25°C to 21°C (D \rightarrow B).

Body thermostat sensor is used for temperatures from 21°C to 18°C (B \rightarrow A).

Heating

When heating, the hot air rises to the top of the room, resulting in the temperature being lower near the floor where the occupants are. When controlling by body thermostat sensor only, the unit may therefore be turned off by the thermostat before the lower part of the room reaches the preset temperature. The temperature can be controlled so the lower part of the room where the occupants are doesn't become cold by widening the range in which thermostat sensor in remote controller can be used so that suction temperature is higher than the preset temperature.

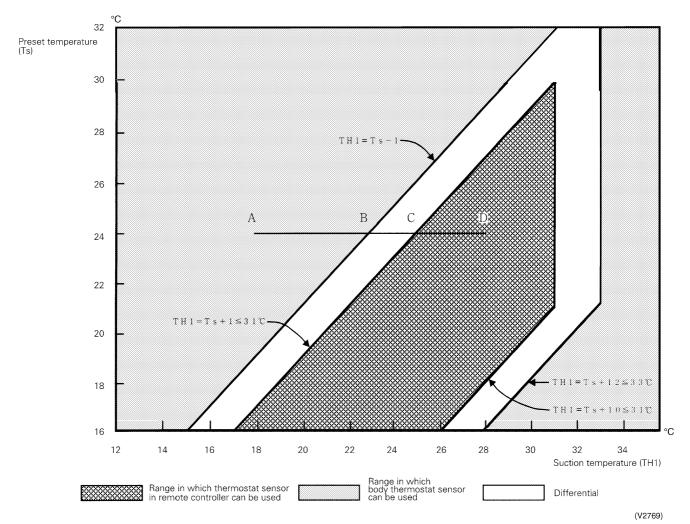

Ex: When heating Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 28°C (A \rightarrow D):


(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat sensor is off.) Body thermostat sensor is used for temperatures from 18°C to 25°C (A \rightarrow C). Remote controller thermostat sensor is used for temperatures from 25°C to 28°C (C \rightarrow D).

And, assuming suction temperature has changed from 28°C to 18°C (D \rightarrow A): Remote controller thermostat sensor is used for temperatures from 28°C to 23°C (D \rightarrow B).

Body thermostat sensor is used for temperatures from 23°C to 18°C (B \rightarrow A).

6.2.2 Thermostat Control while in Normal Operation

VRV multi systems are set at factory to thermostat control mode using the remote controller. While in normal thermostat differential control mode (i.e., factory set mode), the thermostat turns OFF when the system reaches a temperature of -1° C from the set temperature while in cooling operation or of $+1^{\circ}$ C from that while in heating operation.

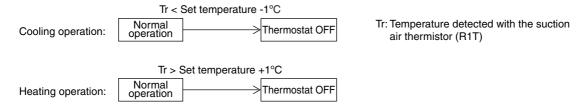


While in a single remote controller group control, the body thermostat is only used for this control.

Furthermore, while in heating operation, cassette-mounted indoor units conduct the thermostat control by a value compensated by -2°C for the value detected with the body thermostat. (Through field settings, the thermostat differential setting can be changed from 1°C to 0.5°C. For details on the changing procedure, refer to information on page onward.)

6.2.3 Thermostat Control in Dry Operation

While in dry operation, the thermostat control is conducted according to a suction temperature at the time of starting the dry operation.

Assuming that the suction air temperature at the time of starting the dry operation is Tro and the suction air temperature in operation is Tr,

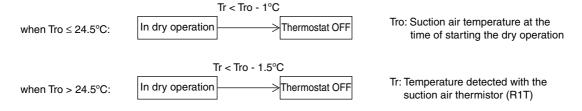

Furthermore, while in dry operation mode, fans operate at L flow rate, stops for a period of six minutes while the thermostat is OFF, and then return to operation at L flow rate. (This control is used to prevent a rise in indoor temperature while in thermostat OFF mode.)


6.2.4 Thermostat Control with Operation Mode Set to "AUTO"

When the operation mode is set to "AUTO" on the remote controller, the system will conduct the temperature control shown below.


Furthermore, setting changes of the differential value (D°C) can be made according to information in the "Field settings with remote controller (p. 160 and later)" section.


Mode	Setting	Contents of setting	Setting position No.								
No.	No. switch No.	Contents of Setting	01	02	03	04	05	06	07	08	
12	4	Differential value while in "AUTO" operation mode	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C	


: Factory setting

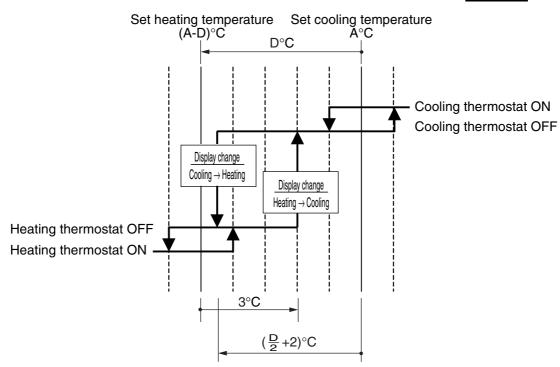



(Ex.) When automatic cooling temperature is set to 27°C:

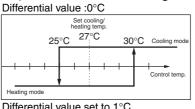


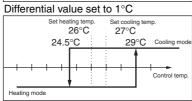


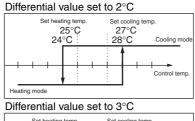

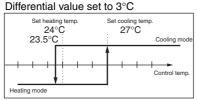

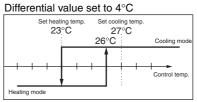

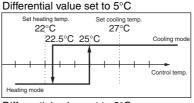


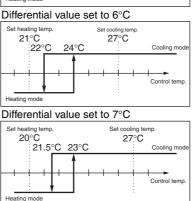

6.3 Drain Pump Control


1. The drain pump is controlled by the ON/OFF buttons (4 button (1) - (4) given in the figure below).

6.3.1 When the Float Switch is Tripped while the Cooling Thermostat is ON:

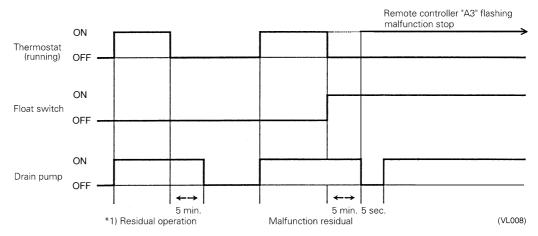


* 1. The objective of residual operation is to completely drain any moisture adhering to the fin of the indoor unit heat exchanger when the thermostat goes off during cooling operation.

6.3.2 When the Float Switch is Tripped while the Cooling Thermostat is OFF:

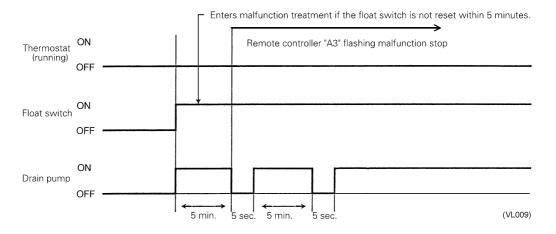


6.3.3 When the Float Switch is Tripped During Heating Operation:

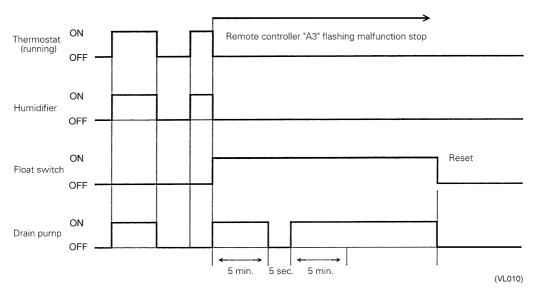

During heating operation, if the float switch is not reset even after the 5 minutes operation, 5 seconds stop, 5 minutes operation cycle ends, operation continues until the switch is reset.

6.3.4 When the Float Switch is Tripped and "AF" is Displayed on the Remote Controller:

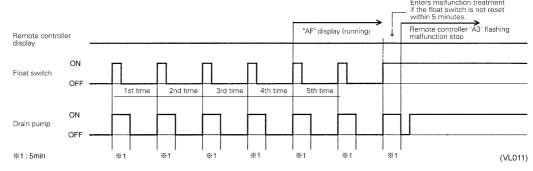

Note:

If the float switch is tripped five times in succession, a drain malfunction is determined to have occurred. "AF" is then displayed as operation continues.

Control of Electronic Expansion Valve 6.4

Electronic expansion valves in indoor units have the functions of conducting superheated degree control in cooling operation and subcooled degree control in heating operation. However, if the indoor units receive any control command such as a protection control command or a special control command from the outdoor unit, the units will give a priority to the control command.

Superheated degree control in cooling operation

This function is used to adjust the opening of the electronic expansion valve so that superheated degree (SH), which is calculated from the detection temperature (Tg) of the gas pipe thermistor (R3T) and the detection temperature (T1) of the liquid temperature thermistor (R2T) of the indoor unit, will come close to a target superheated degree (SHS). At that time, correction to the superheated degree is made according to the differences (ΔT) between set temperature and suction air thermistor temperature.

SH = Tg - T1SH:Evaporator outlet superheated degree (°C)

> Tg:Indoor unit gas pipe temperature (R3T) T1:Indoor unit liquid pipe temperature (R2T)

SHS (Target SH value) SHS:Target superheated degree

• Normally 5°C.

- As ΔT (Remote controller set temp. Suction air temp.) becomes larger, SHS becomes
- As ΔT (Remote controller set temp. Suction air temp.) becomes samller, SHS becomes higher.
- Sub cooled degree control in heating operation

This function is used to adjust the opening of the electronic expansion valve so that the highpressure equivalent saturated temperature (Tc), which is converted from the detected pressure of the high pressure sensor in the outdoor unit, and the subcooled degree (SC), which is calculated from the detected temperature (T1) of the liquid temperature thermistor (R2T) in the indoor unit, will come close to the target subcooled degree (SCS).

At that time, corrections to the subcooled degree are made according to differences (ΔT) between set temperature and suction air thermistor temperatures.

SC = Tc - T1SC:Condenser outlet subcooled degree (°C)

> Tc:High pressure equivalent saturated temperature detected by the high pressure sensor (S1NPH) T1:Indoor unit liquid pipe temperature (R2T)

SCS (Target SC value) SCS:Target supercooled degree

• Normally 5°C.

- As ΔT (Remote controller set temp. Suction air temp.) becomes larger, SCS becomes
- As ΔT (Remote controller set temp. Suction air temp.) becomes lower, SCS becomes larger.


6.5 Freeze Prevention

Freeze Prevention by Off Cycle (Indoor Unit) When the temperature detected by liquid pipe temperature thermistor (R2T) of the indoor unit heat exchanger drops too low, the unit enters freeze prevention operation in accordance with the following conditions, and is also set in accordance with the conditions given below.


When freeze prevention is activated, the electronic expansion valve is closed, the drain pump turns ON and the fan tap is fixed to L air flow. When the following conditions for stopping are satisfied, it returns.

Conditions for starting freeze prevention: Temperature is -1°C or less for total of 40 min., or temperature is -5°C or less for total of 10 min.

Conditions for stopping freeze prevention: Temperature is +7°C or more for 10 min. continuously

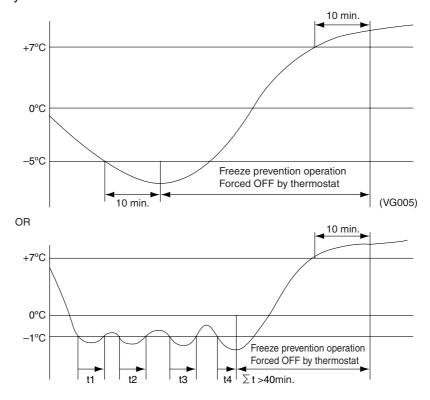

[Conditions for starting when air flow direction is two-way or three-way] Conditions for starting: Temperature is 1°C or less for a total of 15 minutes or 0°C or less for 1 minute continuously.

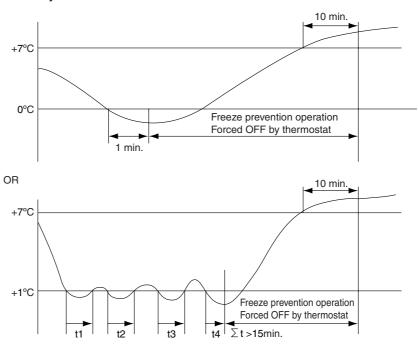

Condensing pressure

equivalent saturated

OFF

temperature

Heater Control (Optional PC Board KRP1B...is required.) 6.6

The heater control is conducted in the following manner.

[Normal control]

While in heating operation, the heater control (ON/OFF) is conducted as shown on the right.


[Overload control]

When the system is overloaded in heating operation, the heater will be turned OFF in the following two manners.

- (1) The heater control (ON/OFF) is conducted through the liquid pipe temperature (R2T) of the indoor unit.
- (2) The heater control (ON/OFF) is conducted by converting the heater temperature into the condensing pressure equivalent saturated temperature (Tc) according to the temperature detection through the high pressure sensor (SINPH) of the outdoor unit.

ON

ON Set temperature OFF 2°C 2°C

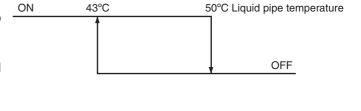

60°C

[Fan residual operation]

While the heater turns OFF, in order to prevent the activation of the thermal protector, the fan conducts residual operation for a given period of time after the heater turns OFF. (This operation is conducted regardless of with or without heater equipped.)

50°C

Residual operation time = 100 seconds on ceiling suspended type or 60 seconds on other types

6.7 List of Swing Flap Operations

Swing flaps operate as shown in table below.


				Flap			
			Fan	FXFQ	FXCQ FXHQ FXKQ	FXAQ	
	Hot start from defrosting	Swing	OFF	Horizontal	Horizontal	Horizontal	
	operation	Wind direction set	OFF	Horizontal	Horizontal	Horizontal	
	Defrecting eneration	Swing	OFF	Horizontal	Horizontal	Horizontal	
	Defrosting operation	Wind direction set	OFF	Horizontal	Horizontal	Horizontal	
Llooting	Thermostat OFF	Swing	LL	Horizontal	Horizontal	Horizontal	
Heating	Thermostat OFF	Wind direction set	LL	Horizontal	Horizontal	Horizontal	
	Hot start from thermostat	Swing	LL	Horizontal	Horizontal	Horizontal	
	OFF mode (for prevention of cold air)	Wind direction set	LL	Horizontal	Horizontal	Horizontal	
	Stop	Swing	OFF	Horizontal	Horizontal	Totally closed	
		Wind direction set	OFF	Horizontal	Horizontal	Totally closed	
	Thermostat ON in dry	Swing	L*1	Swing	Swing	Swing	
	operation using micro computer	Wind direction set	L* ¹	Set	Set	Set	
	Thermostat OFF in dry	Swing	OFF or L	Swing	Swing	Swing	
	operation using micro computer	Wind direction set	OFF OF L	Set	Set	Set	
Cooling	Thermostat OFF in	Swing	Set	Swing	Swing	Swing	
Cooling	cooling	Wind direction set	Set	Set	Set	Set	
	Ston	Swing	OFF	Horizontal	Horizontal	Totally closed	
	Stop	Wind direction set	OFF	Set	Horizontal	Totally closed	
	Micro computer control	Swing	L	Swing	Swing	Swing	
	(including cooling operation)	Wind direction set	L	Set	Set	Set	

^{*1.} L or LL only on FXFQ models

6.8 Hot Start Control (In Heating Operation Only)

At startup with thermostat ON or after the completion of defrosting in heating operation, the indoor unit fan is controlled to prevent cold air from blasting out and ensure startup capacity. **[Detail of operation]**

When either the **start condition 1** or the **start condition 2** is established, the operations shown below will be conducted.

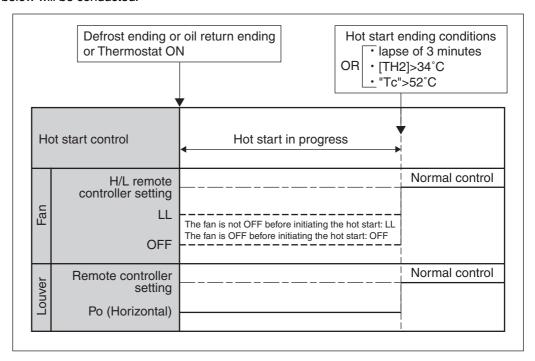


 TH_2 : Temperature (°C) detected with the gas thermistor

TC : High pressure equivalent saturated temperature

6.9 Louver Control for Preventing Ceiling Dirt

We have added a control feature that allows you to select the range of in which air direction can be adjusted in order to prevent the ceiling surrounding the air discharge outlet of ceiling mounted cassette type units from being soiled. (This feature is available on double flow, multiflow and corner types.)

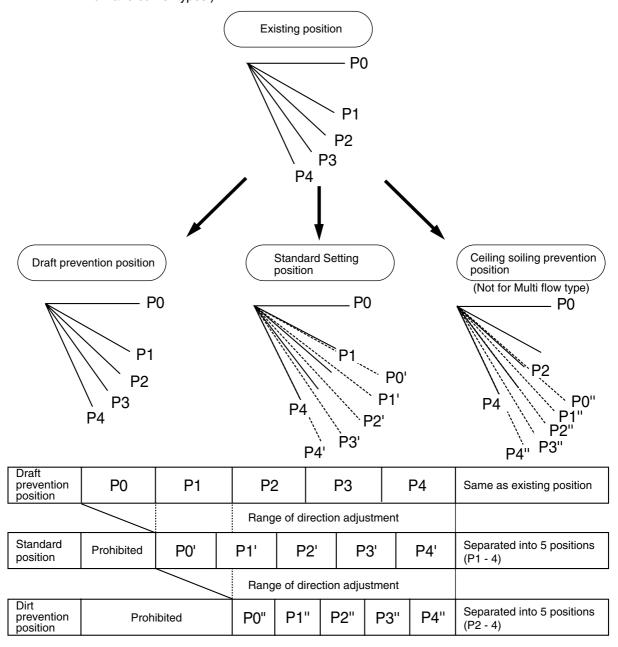

The factory set position is standard position.

(VL012)

Part 5 Test Operation


1.	Test	Operation	156
		Installation Process	
		Procedure and Outline	
		Operation when Power is Turned On	
2.	Outo	loor Unit PC Board Layout	201
3.	Field	I Setting	202
		Field Setting from Remote Controller	
		Field Setting from Outdoor Unit	

Test Operation SiBE37-704

1. Test Operation

1.1 Installation Process

Below Figure shows the installation process. Install in the order of the steps shown.

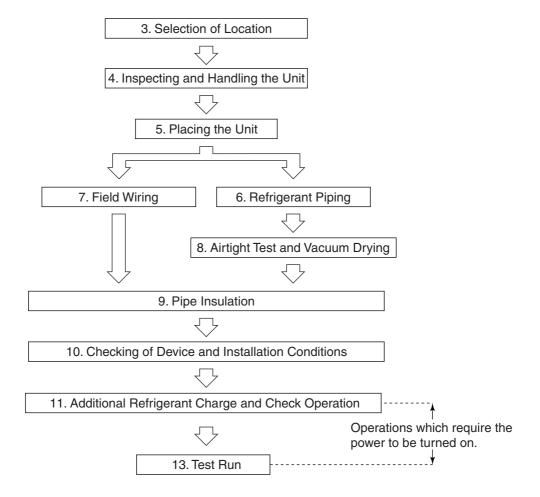

SiBE37-704 Test Operation

1.2 Procedure and Outline

Follow the following procedure to conduct the initial test operation after installation.

1.2.1 Check Work Prior to Turn Power Supply On

Check the below items.

- · Power wiring
- Control transmission wiring between units
- · Earth wire




O Is the wiring performed as specified?

- O Is the designated wire used?
- O Is the wiring screw of wiring not loose?
- O Is the grounding work completed?
- O Is the insulation of the main power supply circuit deteriorated? Use a 500V megger tester to measure the insulation. (*1)
 - Do not use a megger tester for other circuits than 200V (or 240V) circuit.

*1:Measure to be taken against decreased insulation resistance in the compressor

If the compressor is left to stand for an extended period of time after the refrigerant charge with the stop valve open and the power supply OFF, the refrigerant may be mixed in the compressor, thus decreasing the insulation resistance.

Heat the compressor as shown on the right and then recheck the insulation.

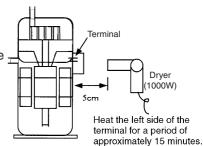

Check on refrigerant piping / insulation materials



Check airtight test and vacuum drying.



O Is the pipe size proper?


- O Are the design pressures for the liquid pipe, suction pipe, dual pressure gas pipe, and pressure equalizer pipe (in case of multi units) all not less than 4.0 MPa?
- O Is the pipe insulation material installed securely? Liquid, suction and high & low pressure gas pipe need to be insulated. (Otherwise causes water leak.)
- O Have the airtight test and the vacuum drying been conducted according to the procedure in the Installation Manual?

Test Operation SiBE37-704

Check on amount of refrigerant charge



- Is a proper quantity of refrigerant charged?
 The following method is available for additional charging of refrigerant.
 - (1) Calculate additional refrigerant quantity.
- Calculate a necessary additional refrigerant charging amount according to the procedure for calculation shown below.
- * Procedure for calculating additional refrigerant charging amount (Unit: 0.1 kg)

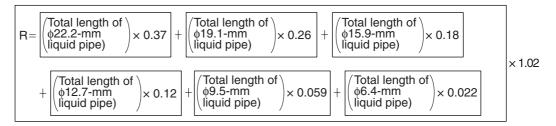

Correction amount with indoor unit

Correction amount with a total capacity of indoor units

	Correction amount with	indoor arm		Correction amount with a to	indoor drinto			
	System name	Correction amount			Correction amount			
	Model REYQ8-16P8Y1B	3.6 kg		Ratio of total capacity of the connected indoor units to				
	Model REYQ18-20P8Y1B	1.0kg	.0kg the rated capacity of the	Model REYQ18 -	Model REYQ34 -			
	Model REYQ22-24P8Y1B	1.5kg		outdoor unit (A)	32P8Y1B	48P8Y1B		
+	Model REYQ26P8Y1B	2.0kg	+					
_	Model REYQ28-30P8Y1B	2.5kg	Т	100% <a≤120%< td=""><td>0.5</td><td>skg</td></a≤120%<>	0.5	skg		
	Model REYQ32-40P8Y1B	3.0kg		120% <a≤130%< td=""><td>0.5kg</td><td>1.0kg</td></a≤130%<>	0.5kg	1.0kg		
	Model REYQ42P8Y1B	3.5kg						
	Model REYQ44-46P8Y1B	4.0kg						
	Model REYQ48P8Y1B	4.5kg						

- If there is a refrigerant shortage, charge a liquid refrigerant through the stop valve service port with the stop valves of liquid and those of gas closes after the completion of vacuum drying.
- If the refrigerant charging is still insufficient, "turn ON the power supply" following the information on the page 162 ~.
 - O Has the additional refrigerant charging amount been recorded on the "Precautions for servicing" label?

Check the stop valves for conditions.

O Check to be sure the stop valves are under the following conditions.

Liquid-pipe stop valve	Equalizing pipe stop valve	Dual pressure gas pipe stop valve	Suction pipe stop valve
Open	Open	Open	Open

SiBE37-704 Test Operation

1.2.2 Turn Power On

Turn outdoor unit and indoor unit power on.



Check the LED display of the outdoor unit PC board.



O Be sure to turn the power on 6 hours before starting operation to protect compressors. (to power on clankcase heater)

 Check to be sure the transmission is normal.
 The transmission is normal if the LEDs display conditions as shown in table below.

LED display ○ ON ● OFF ● Blinking COOL / HEAT select Micro-Low computer LED display MODE TEST Demand Multi operation noise (Default status before IND MASTER SLAVE monitor delivery) H1P H2P **Н3Р** H4P H5P H7P H8P HAP H₆P One outdoor unit installed • • • 0 • • • • • • 0 • • • 0 When multiple outdoor unit Slave 1 0 • • • • • • •

(*) The master unit is the outdoor unit to which the transmission wiring for the indoor units is conncted.

The other outdoor units are slave units.

•

•

Make field settings with outdoor unit PC board.



O Make field settings if needed.


Slave 2

installed (*)


(For the setting procedure, refer to information in "3.2. Field Setting from Outdoor Unit" on page 215 onward.)

For the outdoor-multi system, make field settings with the master unit. (Field settings made with the slave unit will be all invalid.)


<REYQ8~16P8Y1B>

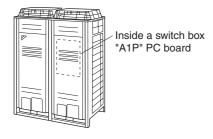

<REMQ8~12P8Y1B>

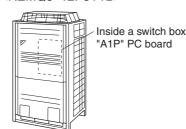

<REMQ14, 16P8Y1B>

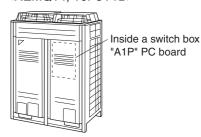

•

* Another switch box is provided on the front left side of the unit, but it requires no field settings.

Conduct check operations.



Check for normal operation.

The check operations shown below will be automatically initiated.

- Check for erroneous wirings
- Check for failure to open stop valves
- Check for excessive refrigerant refilling
- Automatic judgment of piping length

O Before starting the normal operation after the completion of check operations, make sure indoor and outdoor units normally operate.

Test Operation SiBE37-704

1.2.3 Air Tight Test and Vacuum Drying

Note:

- Always use nitrogen gas for the airtightness test.
- Absolutely do not open the shutoff valve until the main power circuit insulation measurement has been completed. (measuring after the shutoff valve is opened will cause the insulation value to drop.)

<Needed tools>


Gauge manifold Charge hose valve	 To prevent entry of any impurities and insure sufficient pressure resistance, always use the special tools dedicated for R-410A. Use charge hose that have pushing stick for connecting to service port of shutoff valves or refrigerant charge port. 	
Vacuum pump	 The vacuum pump for vacuum drying should be able to lower the pressure to -100.7kPa (5 Torr -755mm Hg). Take care the pump oil never flow backward into the refrigerant pipe during the pump stops. 	

<The system for air tight test and vacuum drying>


 Referring to next figure, connect an nitrogen tank, refrigerant tank, and a vacuum pump to the outdoor unit.

The refrigerant tank and the charge hose connection to refrigerant charge port or the valve A in next figure are needed in "1.2.5 Additional Refrigerant Charge and Check Operation".

REYQ8~16P8Y1

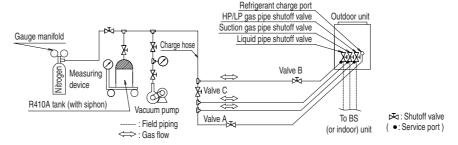

REYQ18~48P8Y1

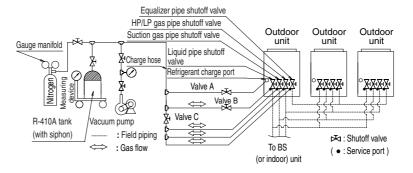

Note:

The airtightness test and vacuum drying should be done using the service ports of equalizer pipe, HP/LP gas pipe, suction gas pipe and liquid pipe shutoff valve.

See the [R-410A] Label attached to the front plate of the outdoor unit for details on the location of the service port (see figure at right)

See [Shutoff valve operation procedure] in "1.2.5.1 Before Working" for details on handling the shutoff valve.

The refrigerant charge port is connected to unit pipe.
When shipped, the unit contains the refrigerant, so use caution when attaching the charge hose.



SiBE37-704 Test Operation

<Air tight test>

Pressurize the liquid pipe, suction gas pipe, HP/LP gas pipe and equalizer pipe from the service ports of each shutoff valve to 4.0MPa (40bar) (do not pressurize more than 4.0MPa (40bar)). If the pressure does not drop within 24 hours, the system passes the test. If there is a pressure drop, check for leaks, make repairs and perform the airtight test again.

<Vacuum drying>

Evacuate the system from the liquid and gas pipes by using a vacuum pump for more than 2 hours and bring the system to -100.7kPa or less. After keeping the system under that condition for more than 1 hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.

Note:


- If moisture might enter the piping, follow below. (I.e., if doing work during the rainy season, if the actual work takes long enough that condensation may form on the inside of the pipes, if rain might enter the pipes during work, etc.)
- 1. After performing the vacuum drying for two hours, pressurize to 0.05 MPa (i.e., vacuum breakdown) with nitrogen gas, then depressurize down to –100.7 kPa for an hour using the vacuum pump (vacuum drying).
- 2. If the pressure does not reach –100.7 kPa even after depressurizing for at least two hours, repeat the vacuum breakdown vacuum drying process.


After vacuum drying, maintain the vacuum for an hour and make sure the pressure does not rise by monitoring with a vacuum gauge.

1.2.4 Pipe Insulation

- Insulation of pipes should be done after performing "1.2.3. Air Tight Test and Vacuum Drying".
- Always insulate the liquid piping, the HP/LP gas piping, the gas piping, the equalizer pipe (between the outdoor units for the outdoor multi system) and these pipe connections. Failing to insulate the pipes may cause leaking or burns.
 - Especially, be sure to insulate the HP/LP gas piping as withstanding as the suction pipe because the suction gas follows in the HP/LP gas piping when the system is whole cooling mode.
 - And be sure to use the insulation which can withstand such temperatures of 120°C or more for the HP/LP gas piping, the equalizer pipe and the gas piping because the HP/LP gas follows in these pipings.
- Reinforce the insulation on the refrigerant piping according to the installation environment. Condensation might form on the surface of the insulation. Refer to the below.
 - Ambient temperature: 30°C, humidity: 75% to 80% RH: min. thickness: 15mm.
 - If the ambient temperature exceeds 30°C and the humidity 80% RH, then the min. thickness is 20mm.
 - See the Engineering data book for detail.
- If there is a possibility that condensation on the shutoff valve might drip down into the indoor unit through gaps in the insulation and piping because the outdoor unit is located higher than the indoor unit, etc., this must be prevented by caulking the connections, etc. (Refer to next figure)
- The piping lead-out hole lid should be attached after opening a knock hole. (Refer to next figure)
- If small animals and the like might enter the unit through the piping lead-out hole, close the hole with blocking material (procured on site) after completion of "1.2.5 Additional Refrigerant Charge and Check Operation". (Refer to next figure)

Test Operation SiBE37-704

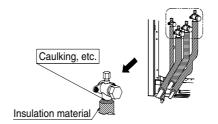

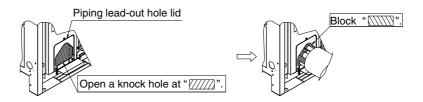

Note:

■ After knocking out the holes, we recommend you remove burrs in the knock holes (See above figure) and paint the edges and areas around the edges using the repair paint.

1.2.5 Charging Refrigerant

- REYQ8~16P8Y1B

The outdoor unit is factory charged, but depending on the length of the piping when installed, the outdoor unit may require additional charging.

For charging the additional refrigerant follow the procedure as described in this chapter.



Refrigerant cannot be charged until all field wiring and field piping has been completed. Refrigerant may only be charged after performing the leak test and the vacuum drying.

1.2.5.1 Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R-410A GWP⁽¹⁾ value: 1975


(1) GWP = global warming potential

Please fill in with indelible ink,

- (1) the factory refrigerant charge of the product,
- (2) the additional refrigerant amount charged in the field and
- (1) + (2) the total refrigerant charge

on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the service cover).

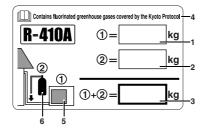

- 1 factory refrigerant charge of the product: see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

SiBE37-704 Test Operation

1.2.5.2 Precautions when adding R-410A

Be sure to charge the specified amount of refrigerant in liquid state.

Since this refrigerant is a mixed refrigerant, adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

Before charging, check whether the refrigerant cylinder is equipped with a siphon tube or not.

Charge the liquid refrigerant with the cylinder in upright position.



Charge the liquid refrigerant with the cylinder in up-side-down position.

■ Be sure to use tools exclusively for R-410A to ensure required pressure resistance and to prevent foreign materials from mixing into the system.



Charging with an unsuitable substance may cause explosions and accidents, so always make sure that the appropriate refrigerant (R-410A) is charged.

Refrigerant containers must be opened slowly.

1.2.5.3 Stop valve operation procedure

Size of stop valve

The sizes of the stop valves connected to the system are as listed in the table below.

Type of stop valve	8 Hp	10 Hp	12 Hp	14 Hp	16 Hp
Liquid pipe		φ9.5 ^(a)		φ1:	2.7
Suction gas pipe			φ25.4 ^(b)		
High pressure/low pressure gas pipe			φ19.1 ^(c)		

- (a) The 12 Hp model supports field piping of φ12.7 on the accessory pipe supplied with the unit.
- (b) The 8 Hp model supports field piping of ϕ 19.1 on the accessory pipe supplied with the unit. The 10 Hp model supports field piping of ϕ 22.2 on the accessory pipe supplied with the unit. The 12~16 Hp models support field piping of ϕ 28.6 on the accessory pipe supplied with the unit.
- (c) The 8 Hp model supports field piping of ϕ 15.9 on the accessory pipe supplied with the unit. The 14 and 16 Hp models support field piping of ϕ 22.2 on the accessory pipe supplied with the unit.



- Do not open the stop valve until all piping and electrical steps of "1.2.4 Pipe Insulation" on page 161 are completed. If the stop valve is left open without turning on the power, it may cause refrigerant to build up in the compressor, leading to insulation degradation.
- Always use a charge hose for service port connection.
- After tightening the cap, check that no refrigerant leaks are present.

Opening stop valve (See figure 19)

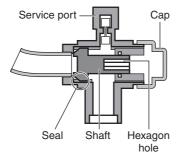


figure 19

- 1. Remove the cap and turn the valve counterclockwise with the hexagon wrench.
- 2. Turn it until the shaft stops.



Do not apply excessive force to the stop valve. Doing so may break the valve body.

Test Operation SiBE37-704

3. Make sure to tighten the cap securely. Refer to the table below.

	Tightening torque N•m (Turn clockwise to close)							
Stop valve size	5	Shaft						
	Valve body	Hexagonal wrench	Cap (valve lid)	Service port				
φ9.5	5.4~6.6	4 mm	13.5~16.5					
φ12.7	8.1~9.9	4 111111	18.0~22.0	11.5~13.9				
ф22.2	27.0~33.0	8 mm	22.5~27.5	11.5~15.9				
φ25.4	27.0~00.0	0 111111	22.5~21.5					

Closing stop valve (See figure 19)

- 1. Remove the cap and turn the valve clockwise with the hexagon wrench.
- 2. Securely tighten the valve until the shaft contacts the main body seal.
- Make sure to tighten the cap securely.For the tightening torque, refer to the table above.

1.2.5.4 How to check how many units are connected

It is possible to find out how many indoor units are active and connected by operating the pushbutton switch on the printed circuit board (A1P) of the working outdoor unit.

Make sure that all the indoor units connected to the outdoor unit are active.

Follow the 5-step procedure as explained below.

- The LEDs on the A1P shows the operating status of the outdoor unit and the number of indoor units that are active.
 - OFF ⇔ ON → Blinking
- The number of units that are active can be read from the LED display in the "Monitor Mode" procedure below.

Example: in the following procedure there are 22 units active:


Note:

Wherever during this procedure, press the **BS1 MODE** button if something becomes unclear. You will return to setting mode 1 (H1P= ● "OFF").

1 Setting mode 1 (default system status)

Press the **BS1 MODE** button to switch from setting mode 1 to monitor mode.

2 Monitor mode

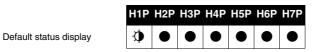


To check the number of indoor units, press the BS2 SET button 5 times.

3 Monitor mode

	H1P	H2P	НЗР	H4P	H5P	H6P	H7P
Selection status of how many connected indoor units to display.	Φ	•	•	•	Þ	•	Ф

Pressing the **BS3 RETURN** button causes the LED display to show the data on the number of indoor units that are connected.

4 Monitor mode

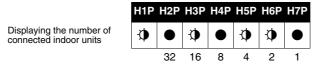

Calculate the number of connected indoor units by adding the values of all ($H2P\sim H7P$) blinking (\mathfrak{P}) LEDs together.

In this example: 16+4+2=22 units

Press the **BS1 MODE** button to return to step 1, setting mode 1 (H1P= ● "OFF").

SiBE37-704 Test Operation

1.2.5.5 Additional refrigerant charge



Adding refrigerant using the automatic refrigerant charging function is recommended.

Follow the procedures below.



- When charging a system, charging over the permissible quantity can cause liquid hammer.
- Always use protective gloves and protect your eyes when charging refrigerant.
- When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately.
 - The refrigerant charge port has a electric expansion valve and will be closed at the end of the refrigerant charging. However, the valve will be opened when operating the unit after refrigerant charging.
 - If the tank is left with the valve open, the amount of refrigerant which is properly charged may get off point. More refrigerant may be charged by any remaining pressure after the unit has stopped.



Electric shock warning

- Close the electric component box lid before turning on the main power.
- Perform the settings on the circuit board (A1P) of the outdoor unit and check the LED display after the power is on via the service lid which is in the lid of the electric component box.



Operate switches with an insulated stick (such as a ball-point pen) to avoid touching the life parts.

Make sure to re-attach the inspection cover into the switch box cover after the job is finished.



- If the power of some units is turned off, the charging procedure can not be finished properly.
- Make sure to turn ON the power 6 hours before starting the operation. This is necessary to warm the crankcase by the electric heater.
- If operation is performed within 12 minutes after the indoor units, BS units and outdoor unit are turned on, the H2P-LED will be lit and the compressor will not operate.



- See " 1.2.5.3 Stop valve operation procedure" on page 163 for details on how to handle stop valves.
- The refrigerant charging port is connected to the piping inside the unit.

 The unit's internal piping is already factory charged with refrigerant, so be careful when connecting the charge hose.
- After adding the refrigerant, do not forget to close the lid of the refrigerant charging port. The tightening torque for the lid is 11.5 to 13.9 N•m.
- In order to ensure uniform refrigerant distribution, it may take the compressor ±10 minutes to start up after the unit has started operation. This is not a malfunction.

1. Procedure for additional refrigerant charge

The automatic refrigerant charging has limits as described below.

At out of limit, the system can not operate the automatic refrigerant charging.

Outdoor temperature : 0°C DB~43°C DB Indoor temperature : 10°C DB~32°C DB

Total indoor unit capacity : ≥80%

Pre-charging

To speed up the process of charging refrigerant for large systems, it is recommended to first manually charge a portion of the refrigerant first before performing automatic charging.

- 1. Calculate how much refrigerant to be added using the formula explained in the chapter "How to calculate the additional refrigerant to be charged" on page 158.
- 2. The amount of pre-charging is 10 kg less than the calculated amount.

Test Operation SiBE37-704

 Open valve B (the valves A and C, the liquid pipe, the suction gas pipe and the high pressure/low pressure gas pipe stop valves must be left closed) and charge the refrigerant in liquid form via the liquid pipe stop valve service port. (See figure 23)

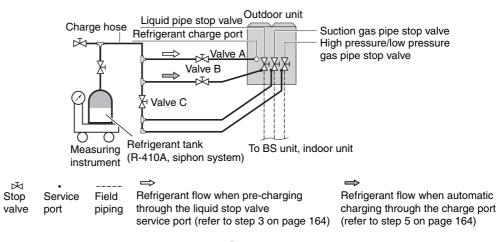


figure 23

4. If the calculated amount of pre-charging is reached, close valve B.



At least the unit should be charged with its original amount of refrigerant (refer to the nameplate on the unit), before starting the automatic charging.

Note:

When the leak detection function is not required, complete charging when using the previous described method (unit is not operating) can be done.

If it is not possible to charge the entire quantity through the service port of the liquid pipe stop valve with the unit not operating, refer to " 1.2.5.8.7 Additional refrigerant charging method" on page 180.

5. After pre-charging, perform the refrigerant charge operation as shown below and charge the remaining refrigerant of the additional charging amount through valve A. (See figure 23)

Note:

The refrigerant will be charged with ± 30 kg in 1 hour time at an outdoor temperature of 30°C DB or with ± 12 kg at an outdoor temperature of 0°C DB.

During the automatic charging operation, you can force the operation to a halt by pushing the **BS1 MODE** button.

1. Start of automatic charging refrigerant

- Open the liquid pipe, suction gas pipe and high pressure/low pressure gas pipe stop valves and the service port stop valve. (Valves A, B and C must be closed.)
- Close all front panels except the electric component box front panel and turn the power ON.
- Make sure all indoor units are connected, refer to " 1.2.5.4 How to check how many units are connected" on page 164.
- If the H2P LED is not flashing (in 12 minutes time after turning on the power), make sure it is displayed as shown in the "2. Normal system display" on page 169.
 If the H2P LED is flashing, check the malfunction code on the remote controller
 "3. Remote controller malfunction code display" on page 170.



If you perform the refrigerant charging operation within the refrigerant system with one or more units with power OFF, the refrigerant charging operation can not be accomplished properly.

For confirming the number of indoor units with power ON, refer to "1.2.5.4 How to check how many units are connected" on page 164.

SiBE37-704 Test Operation

■ To energize the crankcase heater, make sure to turn the power ON at least 6 hours before starting operation.

2. Press the BS1 MODE button once if the LEDs combination is not as in the figure below.



Press the BS4 TEST button once.



- 4. Hold the **BS4 TEST** button down for 5 seconds or more.
- 5. Charging mode judgement

However, if the indoor temperature is 10°C DB or lower, in some cases the unit will charge in heating mode to increase the indoor temperature.

The unit will automatically select the cooling mode or heating mode for charging.



- When charging in cooling mode, the unit will stop operating when the required amount of refrigerant is charged.
- During charging in heating mode, a person must manually close valve A before complete charging is finished. The required amount is the calculated amount (see "6. Example of connection (R-410A Type)" on page 451), therefore, the weight must be monitored constantly.

<Charging in heating mode >

6. Start up

Wait while the unit is preparing for charging in heating mode.

Pressure control (for the first minute)

Start up control (for the next 2 minutes)

Waiting for stable heating conditions (for the next ±15 minutes (according to the system))

It takes about 2 to 10 minutes for the system to become stable.

In case of a small charging amount, the system will start charging the refrigerant before the system reaches the stable state. It may disturb a correct decision and may cause overcharging.

7. Ready



Press the BS4 TEST button once within 5 minutes.

If the **BS4 TEST** button is not pushed within 5 minutes, P_c^2 will be displayed on the remote controller. Refer to "3. Remote controller malfunction code display" on page 170.

8. Operation

When the following LED display is shown, open valve A and close the front panel. If the front panel is left open, the system can not operate properly during the refrigerant charging.



When the refrigerant tank is not connected or is left with the valve closed for 30 minutes or more, the outdoor unit will stop operation and the "?" code will be displayed on the remote controller of the indoor unit. Follow the procedure as described in "3. Remote controller malfunction code display" on page 170.



^{* =} The state of this LED is not important.

Test Operation SiBE37-704



When a malfunction occurs, check the display of the remote controller and refer to "3. Remote controller malfunction code display" on page 170.

9. Complete

If the calculated amount of refrigerant is reached, close valve A and press the **BS3 RETURN** button once.



Always close valve A and remove the refrigerant tank immediately after finishing the refrigerant charge operation.





Beware of the fan blades when you open the frontpanel.

The fan may still rotate for a while after unit operation has stopped.

10. In case leak detection function is required

Press the **BS4 TEST** button once for post-processing with regard to the leak detection function and press the **BS1 MODE** button to confirm that charging is completed.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 170.

10. In case leak detection function is not required

Press the **BS1 MODE** button once and the charging is complete.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.


Perform the procedure " 1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 170.

<Charging in cooling mode>

6. Start up

Wait while the unit is preparing for charging in cooling mode.

Pressure control (for the first minute) Start up control (for the next 2 minutes) Waiting for stable cooling conditions (for the next ±15 minutes (according to the system))

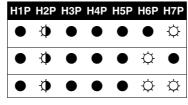

It takes about 2 to 10 minutes for the system to become stable.

In case of a small charging amount, the system will start charging the refrigerant before the system reaches the stable state. It may disturb a correct decision and may cause overcharging.

7. Ready



Press the **BS4 TEST** button once within 5 minutes.

If the **BS4 TEST** button is not pushed within 5 minutes, P_c^2 will be displayed on the remote controller. Refer to "3. Remote controller malfunction code display" on page 170.

8. Operation

When the following LED display is shown, open valve A and close the front panel. If the front panel is left open, the system can not operate properly during the refrigerant charging.



When the refrigerant tank is not connected or is left with the valve closed for 30 minutes or more, the outdoor unit will stop operation and the \$\frac{P}{c}\$ code will be displayed on the remote controller of the indoor unit. Follow the procedure as described in "3. Remote controller malfunction code display" on page 170.

SiBE37-704 Test Operation







When a malfunction occurs, check the display of the remote controller and refer to "3. Remote controller malfunction code display" on page 170.

9. Complete



The display on the remote controller shows a flashing PE code for signalling that automatic charging will be finished in about 10 minutes.

When the unit stops operating, close valve A immediately and check the LEDs and check if the PS code is displayed on the remote controller.



Always close valve A and remove the refrigerant tank immediately after finishing the refrigerant charge operation.

The refrigerant charge port of these units have electric expansion valves that will close automatically when refrigerant charging operation has finished. However, the electric expansion valves will be opened when other operations start after finishing refrigerant charging operation. If the refrigerant tank is left with the valve open, the amount of refrigerant which is properly charged may be off the point.



If the LED indication is not as shown above, correct the malfunction (as indicated in the display of the remote controller) and restart the complete charging procedure. When the charging amount is little, the PE code may not be displayed, but instead the PE code will be displayed immediately.



Beware of the fan blades when you open the front panel.

The fan may still rotate for a while after unit operation has stopped.

10. In case leak detection function required

Press the **BS4 TEST** button once for post-processing with regard to the leak detection function and press the **BS1 MODE** button to confirm that charging is completed.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 170.

10. In case leak detection function not required

Press the **BS1 MODE** button once and the charging is complete.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 170.

2. Normal system display

LED display (Default status before delivery)	Micro- computer operation monitor	Mode	Ready/ Error	Cooling/Heating changeover			Low	Demand
				Indivi- dual	Bulk (master)	Bulk (slave)	noise	Demand
	HAP	H1P	H2P	НЗР	H4P	H5P	Н6Р	H7P
Outdoor unit system	•	•	•	₽	•	•	•	•

3. Remote controller malfunction code display

Remote controller heating mode malfunction codes

Error code		
PB recharge operation	Close valve A immediately and press the TEST OPEF The operation will restart from the charging mode judg	RATION button once. ement onwards.
P2 charge hold	Close valve A immediately. Check following items: - Check if the gas stop valve is opened correctly - Check if the valve of the refrigerant cylinder is opened - Check if the air inlet and outlet of the indoor unit are not obstructed	After correcting the abnormality, restart the automatic charging procedure again.

Remote controller cooling mode malfunction codes

Error code							
PE	Charging is almost finished. Ready to close valve A.	Charging is almost finished. Ready to close valve A.					
<i>P</i> 9	Charging is finished. Close valve A and remove the ref	rigerant tank.					
PR, PH replace cylinder	Close valve A and replace the empty cylinder. After replacing the cylinder, open valve A again and continue the work (the outdoor unit will not stop operating).						
PB recharge operation	Close valve A immediately. Restart the automatic charging procedure again.						
ዖያ charge hold	Close valve A immediately. Check following items: - Check if the high pressure/low pressure gas pipe, suction gas pipe and liquid pipe stop valves are opened correctly - Check if the valve of the refrigerant cylinder is opened - Check if the air inlet and outlet of the indoor unit are not obstructed After correcting the abnormality, restart the automatic charging						
* abnormal stop	not obstructed Close valve A immediately. Confirm the malfunction code by the remote controller and correct the abnormality by following the "Correcting after abnormal completion of the test operation" on page 178.						

1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board

Availability of the leak detection function feature requires input of the additional refrigerant charge amount immediately after finishing the automatic charging. The input must be executed before performing the test operation.



If a wrong value is input for the additional charged refrigerant weight, the accuracy of the leak detection function will decrease.

Procedure

- 1. Close the electric box lid and all front panels except the one on the side of the electric box.
- 2. Press and hold the **BS1 MODE** button for 5 seconds to enter into setting mode 2. The H1P LED is on ☼.
- Press the BS2 SET button 14 times.The LED display must be as follows:



Press the **BS3 RETURN** button once as confirmation of the LEDs combination.

LEDs will be blinking in function of the last entered setting (factory setting = 0 kg).

The weighed and already recorded amount of additional refrigerant charge (not the

4. The weighed and already recorded amount of additional refrigerant charge (not the total amount of refrigerant present in the system) must be entered by selecting the corresponding LED display.

Scroll through the possible LED combinations by pressing the **BS2 SET** button until the LED combination corresponds to the weight of additional refrigerant charge you must input. Select the required input by pressing the **BS3 RETURN** button and confirm the input into the PCB by pressing the **BS3 RETURN** button again.

Possible LED combinations in function of weight of additional refrigerant charge (= x) to input;

	kg	H1P	H2P	НЗР	H4P	H5P	H6P	Н7Р
0	x=0	\Diamond						
1	0 <x<5< th=""><th>♡</th><th></th><th>•</th><th>•</th><th>•</th><th></th><th>\Diamond</th></x<5<>	♡		•	•	•		\Diamond
2	5≤x<10	♡		•	•	•	♡	•
3	10≤x<15	♡		•	•	•	♡	♡
4	15≤x<20	♡		•	•	♡		•
5	20≤x<25	♡		•	•	♡		\Diamond
6	25≤x<30	♡	•	•	•	¢	\Diamond	•
7	30≤x<35	♡		•	•	♡	♡	\Diamond
8	35≤x<40	♡		•	♡	•		•
9	40≤x<45	♡	•	•	♡	•	•	♡
10	45≤x<50	♡	•	•	♡	•	₽	•
11	50≤x<55	♡	•	•	♡	•	₽	♡
12	55≤x<60	♡	•	•	♡	♡	•	•
13	60≤x<65	♡	•	•	♡	♡	•	♡
14	65≤x<70	♡	•	•	♡	♡	₽	•
15	70≤x<75	♡	•	•	♡	♡	♡	♡
16	75≤x<80	♡	•	₽	•	•	•	•
17	80≤x<85	♡	•	₽	•	•	•	♡
18	85≤x<90	♡	•	♡	•	•	♡	•
19	90≤x<95	♡	•	♡	•		♡	♡
20	95≤x<100	♡	•	♡	•	Þ	•	•
21	100≤x	≎	•	\Diamond	•	Þ	•	♡

5. Return to setting mode 1 (= initial state) by pressing the **BS1 MODE** button.



If you get confused in the middle of the input process, press the **BS1 MODE** button to return to setting mode 1 (= initial state).

The H1P LED is off ●.

Resume the input procedure from step 2 onwards.

Perform a test operation as described in "1.2.5.8.4 Test operation" on page 177.

1.2.5.7 Checks after adding refrigerant

- Are the stop valves for both liquid and gas open?
- Is the amount of refrigerant, that has been added, recorded on the refrigerant charge label?



Make sure to open the stop valves after charging the refrigerant.

Operating with the stop valves closed will damage the compressor.

1.2.5.8 Before operation

1.2.5.8.1



Service precautions




WARNING: ELECTRIC SHOCK /4



Caution when performing service to inverter equipment

- 1. Do not open the electric component box cover for 10 minutes after the power supply is turned off.
- 2. Measure the voltage between terminals on the terminal block for power supply with a tester and confirm that the power supply is shut off.

In addition, measure the points, as shown in the figure below, with a tester and confirm that the voltage of the capacitor in the main circuit is less than 50 V DC.

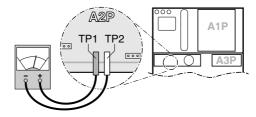

- 3. To prevent damaging the PC-board, touch a non-coated metal part to eliminate static electricity before pulling out or plugging in connectors.
- 4. Pull out junction connectors X1A, X2A, X3A, X4A (X3A and X4A of REYQ14+16P are inside the electric component box (2), refer to the wiring diagram) for the fan motors in the outdoor unit before starting service operation on the inverter equipment. Be careful not to touch the live parts.
 - (If a fan rotates due to strong wind, it may store electricity in the capacitor or in the main circuit and cause electric shock.)
- 5. After the service is finished, plug the junction connecter back in. Otherwise the error code \mathcal{E}^{r} will be displayed on the remote controller and normal operation will not be performed.

For details refer to the wiring diagram labelled on the back of the electric component box cover.

Pay attention to the fan. It is dangerous to inspect the unit while the fan is running. Be sure to turn off the main switch and to remove the fuses from the control circuit located in the outdoor unit.



Note:

Play it safe!

For protection of the PC board, touch the switch box casing by hand in order to eliminate static electricity from your body before performing service.

1.2.5.8.2 Checks before initial start-up



Note:

Remark that during the first running period of the unit, required power input may be higher than stated on the nameplate of the unit. This phenomenon originates from the compressor that needs elapse of a 50 hours run in period before reaching smooth operation and stable power consumption.



- Make sure that the circuit breaker on the power supply panel of the installation is switched off.
- Attach the power wire securely.
- Introducing power with a missing N-phase or with a mistaken N-phase will break the equipment.

After the installation, check the following before switching on the circuit breaker:

- The position of the switches that require an initial setting
 Make sure that switches are set according to your application needs before turning the power supply on.
- Power supply wiring and transmission wiring
 Use a designated power supply and transmission wiring and make sure that it has been
 carried out according to the instructions described in this manual, according to the wiring
 diagrams and according to local and national regulations.
- Pipe sizes and pipe insulation
 Make sure that correct pipe sizes are installed and that the insulation work is properly executed.
- Air tight test and vacuum drying
 Make sure the air tight test and vacuum drying were completed.
- Additional refrigerant charge
 The amount of refrigerant to be added to the unit should be written on the included "Added Refrigerant" plate and attached to the rear side of the front cover.
- Insulation test of the main power circuit
 Measure the insulation resistance and check if the value is in accordance with relevant local and national regulations..
- 7. Installation date and field setting

 Be sure to keep record of the installation date on the sticker on the rear of the upper front panel according to EN60335-2-40. and keep record of the contents of the field setting.

1.2.5.8.3 Field setting


If required, carry out field settings according to the following instructions. Refer to the service manual for more details.

Opening the switch box and handling the switches

When carrying out field settings, remove the inspection cover (1).

Operate the switches with an insulated stick (such as a ball-point pen) to avoid touching live parts.



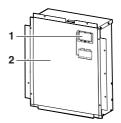


Make sure to re-attach the inspection cover (1) into the switch box cover (2) after the job is finished.



Make sure that all outside panels, except for the panel on the electric component box (1), are closed while working.

Close the lid of the electric component box firmly before turning on the power.

Location of the DIP switches, LEDs and buttons

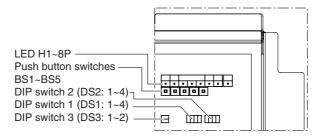


LED state

Throughout the manual the state of the LEDs is indicated as follows:

- OFF
- ⇔ ON
- Blinking

Setting the push button switch (BS1~5)

Function of the push button switch which is located on the outdoor unit PC board (A1P):

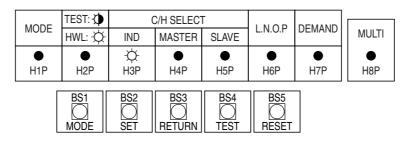

BS1 MODE For changing the set mode

BS3 RETURN For field setting
BS4 TEST For test operation

BS5 RESET For resetting the address when the wiring is changed or when an

additional indoor unit is installed

The figure shows state of the LED indications when the unit is shipped from the factory.

Check operation procedure

- Turn the power on for the outdoor unit and the indoor unit.
 Be sure to turn the power on at least 6 hours before operation in order to have power running to the crankcase heater.
- 2. Make sure that transmission is normal by checking the LED display on the outdoor unit circuit board (A1P). (If transmission is normal, each LED will be displayed as shown below.)

LED display	Micro- computer	Mode	Ready/		oling/Heat hangeove	Low	Demand	
(Default status before delivery)	operation monitor	Mode	Error	Indivi- dual	Bulk (master)	Bulk (slave)	noise	Demand
	HAP	H1P	H2P	НЗР	H4P	H5P	H6P	H7P
Outdoor unit system	•	•	•	♡	•	•	•	•

Setting the mode

The set mode can be changed with the **BS1 MODE** button according to the following procedure:

■ For setting mode 1: Press the BS1 MODE button once, the H1P LED is off ●. This mode is not available for heat recovery units.

■ For setting mode 2: Press the BS1 MODE button for 5 seconds, the H1P LED is on ۞. If the H1P LED is blinking ۞ and the BS1 MODE button is pushed once, the setting mode will change to setting mode 1.



If you get confused in the middle of the setting process, push the **BS1 MODE** button. Then it returns to setting mode 1 (H1P LED is off).

Setting mode 2

The H1P LED is on.

Setting procedure

1. Push the **BS2 SET** button according to the required function (A~H). The LED indication that matches the required function is shown below in the field marked ::

Possible functions

- A additional refrigerant charging operation.
- B refrigerant recovery operation/vacuuming operation.
- **C** automatic low noise operation setting at nighttime.
- **D** low noise operation level setting (**L.N.O.P**) via the external control adapter.
- **E** power consumption limitation setting (**DEMAND**) via the external control adapter.
- F enabling function of the low noise operation level setting (L.N.O.P) and/or power consumption limitation setting (DEMAND) via the external control adapter (DTA104A61/62).
- G high static pressure setting
- **H** evaporating temperature setting

	H1P	H2P	НЗР	H4P		H6P	Н7Р
Α	♡	•	\Diamond	•	\Diamond		•
В	\Diamond		\Diamond		\Diamond		\Diamond
С	♡	•	₽	•	₽	\(\Phi\)	•
D	♡		\(\Phi\)	\(\Phi\)	•	•	\(\Phi\)
E	♡	•	♡	♡	♡	\rightarrow	•
F	♡	•	•	₽	₽	•	•
G	♡	•	₽	•	•	\(\Phi\)	•
н	₽	•	•	₽	•	•	•

- 2. When the BS3 RETURN button is pushed, the current setting is defined.
- 3. Push the **BS2 SET** button according to the required setting possibility as shown below in the field marked _____.
- 3.1Possible settings for function A, B, F, and G are ON (ON) or OFF (OFF).

	H1P	H2P	Н3Р	H4P	H5P	H6P	H7P
ON	♡	•	•	•	•	(•
OFF ^(a)	♡	•	•	•	•		(

(a) This setting = factory setting

3.2 Possible settings for function C

The noise of level 3 < level 2 < level 1 (→1).

	H1P	H2P	НЗР	H4P	H5P	H6P	Н7Р
OFF ^(a)	\Diamond	•	•	•	•	•	•
_ 1	\Diamond	•	•	•	•		(
_2	\Diamond	•	•	•	•	(•
3	¢	•	•	•	•	((

(a) This setting = factory setting

3.3 Possible settings for function D and E

For function D (**L.N.O.P**) only: the noise of level $3 < \text{level } 2 < \text{level } 1 \pmod{1}$.

For function E (**DEMAND**) only: the power consumption of level 1< level 2 < level 3 (-3).



(a) This setting = factory setting

3.4 Possible settings for function H

The evaporating temperature level H (high) < level M (medium) < level L (low) (L).



(a) This setting = factory setting

- 4. Push the **BS3 RETURN** button and the setting is defined.
- 5. When the **BS3 RETURN** button is pushed again, the operation starts according to the setting.

Refer to the service manual for more details and for other settings.

Confirmation of the set mode

The following items can be confirmed by setting mode 1 (H1P LED is off)

Check the LED indication in the field marked

- 1. Indication of the present operation state
 - ●, normal
 - 🜣, abnormal
 - , under preparation or under test operation



- 2. Indication of low noise operation state L.N.O.P
 - • standard operation (= factory setting)
 - 🜣 L.N.O.P operation



- 3. Indication of power consumption limitation setting **DEMAND**
 - standard operation (= factory setting)
 - 🜣 **DEMAND** operation



1.2.5.8.4 Test operation



Do not insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.



Do not perform the test operation while working on the indoor units.

When performing the test operation, not only the outdoor unit, but the connected indoor unit will operate as well. Working on a indoor unit while performing a test operation is dangerous.

- In case the unit is operated with the leak detection function available:
 - the outdoor temperature must be 0°C DB~43°C DB
 - the indoor temperature must be 20°C DB~32°C DB

In case the unit is operated out of the temperature range as instructed above, the display of the remote controller shows U3 and the unit operates without the availability of the leak detection function.

- In the test operation, the following checks and judgement will be performed:
 - Check of the stop valve opening
 - Check for wrong wiring
 - Check of refrigerant overcharge
 - Initial refrigerant detection
- In case the leak detection function is available, the check operation will last 2 hours, otherwise it takes between 40 and 60 minutes to complete the check operation.
- Make sure to carry out the test operation after the first installation. Otherwise, the malfunction code 🛂 will be displayed on the remote controller and normal operation can not be carried out.
- Abnormalities on indoor units can not be checked for each unit individual. After the test operation is finished, check the indoor units one by one by performing a normal operation using the remote controller.



A test operation can not be carried out when the outdoor temperature is less than -5° C.

Test operation procedure

- 1. Close all front panels except the front panel of the electric component box.
- Turn ON the power to the outdoor unit and the connected indoor units.Be sure to turn on the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.
- 3. Make the field setting as described in the paragraph "1.2.5.8.3 Field setting" on page 173.
- 4. Press the **BS1 MODE** button once, and set to the SETTING MODE (H1P LED = OFF).
- In case the leak detection function is required, press and hold the BS4 TEST button down for 5 seconds or more. The unit will start the test operation.

In case the leak detection function is not required,

go into setting mode 2 by pressing the **BS1 MODE** button for 5 seconds. The H1P LED is on \diamondsuit . Perform following steps.

1. Press the BS2 SET button 3 times.



2. Press the BS3 RETURN button once to confirm.



3. Press the BS2 SET button in order to change the LED display to the following display.



Press the BS3 RETURN button once to confirm.

5. Press the **BS3 RETURN** button a second time to start the test operation. The unit will start the test operation.

- The test operation is automatically carried out in cooling mode, the H2P LED will light up and the messages "Test operation" and "Under centralized control" will display on the remote controller.
- It may take 10 minutes to bring the state of the refrigerant uniform before the compressor starts.
- During the test operation, the refrigerant running sound or the magnetic sound of a solenoid valve may become loud and the LED display may change, but these are not malfunctions.
- During the test operation, it is not possible to stop the unit operation from a remote controller. To abort the operation, press the BS3 RETURN button. The unit will stop after ±30 seconds.
- 6. Close the front panel in order to let it not be the cause of misjudgement.
- 7. Check the test operation results by the LED display on the outdoor unit.



8. When the test operation is fully completed, normal operation will be possible after 5 minutes. Otherwise, refer to "Correcting after abnormal completion of the test operation" on page 178 to take actions for correcting the abnormality.

Correcting after abnormal completion of the test operation

The test operation is only completed if there is no malfunction code displayed on the remote controller. In case of a displayed malfunction code, perform the following actions to correct the abnormality:

Confirm the malfunction code on the remote controller

Installation error	Error code	Remedial action
The stop valve of an outdoor unit is left closed.	83 84 83 88 86 UF	Open the stop valve.
The phases of the power to the outdoor unit is reversed.	u:	Exchange two of the three phases (L1, L2, L3) to make a positive phase connection.
No power is supplied to an outdoor or indoor unit (including phase interruption).	84 81 82	Check if the power wiring for the outdoor units are connected correctly.
Incorrect interconnections between units.	IJ₽	Check if the refrigerant line piping and the unit wiring are consistent with each other.
Refrigerant overcharge.	83 86 UF	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
Insufficient refrigerant.	84 83	Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
The added amount of refrigerant was not inputted after automatic charging.	PF	Availability of the leak detection function feature requires input of the additional refrigerant charge amount immediately after finishing the automatic charging. Refer to " 1.2.5.6 Procedure for inputting the additional refrigerant charge weight into the PC board" on page 170.
In case the test operation was interrupted or the unit was operating out of the instructed temperature range, the initial refrigerant detection has failed.	U3	In case the test operation was interrupted, perform the test operation again. In case the unit was operating out of the instructed temperature range, the unit can still be operated normally, but the leak detection function will not be available. Perform the test operation again within the instructed temperature range.

After correcting the abnormality, press the BS3 RETURN button and reset the malfunction

Carry out the test operation again and confirm that the abnormality is properly corrected.

1.2.5.8.5 Final check after installation

After all installation works are completed, operate the unit normally and check the following:

- Make sure the indoor units and outdoor unit are operating normally.
- Operate each indoor unit separately and make sure the corresponding outdoor unit is also operating properly.
- Check if cold or hot air is coming out from the indoor unit.
- Push the fan direction and fan strength buttons on the remote controller to check if they are operating properly.



- Heating is not possible if the outdoor temperature is 24°C or higher. Refer to the operation manual.
- If a knocking sound is heard in the liquid compression of the compressor, stop the unit immediately and then energize the crankcase heater for a sufficient length of time before restarting the operation.
- Once stopped, the compressor will not restart in about 5 minutes, even if the ON/OFF button on the remote controller is pushed.
- When the system operation is stopped by the remote controller, the outdoor unit may continue operation for a maximum of 5 minutes.
- The outdoor fan may rotate at low speeds in the night-time low noise setting or the external low noise level setting is made; but this is not a malfunction.

1.2.5.8.6 Service mode operation



Do not shut off the power and do not reset the setting of mode 2 when vaccuuming or recovering refrigerant. Otherwise the expansion valves will close making it impossible to vaccuum the system or to recover the refrigerant.

Vacuuming method

At the first installation, this vacuuming is not required. It is required only for repair purposes.

- 1. When the unit is at standstill and under the setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - The indoor unit, BS units and the outdoor unit expansion valves will fully open.
 - The H1P LED is on and the remote controller indicates **TEST** (test operation) and (external control) and the operation will be prohibited.
- 2. Evacuate the system with a vacuum pump.
- 3. Press the **BS1 MODE** button and reset the setting mode 2.

Refrigerant recovery operation method

by a refrigerant reclaimer

- 1. When the unit is at standstill and under the setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - The indoor unit, BS unit and the outdoor unit expansion valves will fully open.
 - The H1P LED is on and the remote controller indicates **TEST** (test operation) and $\overline{\ }$ (external control) and the operation will be prohibited.
- 2. Recover the refrigerant by a refrigerant reclaimer. For details, see the operation manual delivered with the refrigerant reclaimer.
- 3. Press the BS1 MODE button and reset the setting mode 2.

1.2.5.8.7 Additional refrigerant charging method

When the leak detection function is not required and the entire refrigerant quantity can not be charged through the liquid pipe stop valve service port with the unit not operating (refer to "Precharging" on page 165), make sure to charge the remaining charging quantity using the following procedure:

- 1. Turn the power of the indoor unit, the BS unit and the outdoor unit on.
- 2. Make sure to open the stop valves of the suction gas pipe, the high pressure/low pressure gas pipe and the liquid pipe completely.
- 3. Connect the refrigerant charge hose to the refrigerant charging port (for additionaly charging).
- 4. When the unit is not operating, push the **BS2 SET** button until the additional refrigerant charging operation function A in setting mode 2 can be defined (refer to "Setting the mode" on page 175), the H1P LED is on (\$\ightarrow\$).
- The operation starts automatically.
 The H2P LED will start flashing (♠) and the messages "Test operation" and "Under centralized control" will display on the remote controller.
- 6. After charging the specified quantity of refrigerant, press the **BS3 RETURN** button to stop the operation.

The operation will stop within 30 minutes.

- If charging is not completed after 30 minutes, set and perform the additional refrigerant charging operation again.
- If the additional refrigerant charging operation stops before the passing of 30 minutes, the system may be overcharged.



Never charge extra refrigerant.

- 7. Disconnect the refrigerant charge hose.
- 8. Perform " 1.2.5.7 Checks after adding refrigerant" as explained on page 171.

1.2.6 Charging Refrigerant

- REMQ8~16P8Y1B

The outdoor unit is factory charged, but depending on the length of the piping when installed, the outdoor unit may require additional charging.

For charging the additional refrigerant follow the procedure as described in this chapter.



Refrigerant cannot be charged until all field wiring and field piping has been completed. Refrigerant may only be charged after performing the leak test and the vacuum drying.



The refrigerant charge of the system must be less than 100 kg. This means that in case the calculated refrigerant charge is equal to or more than 95 kg you must divide your multiple outdoor system into smaller independent systems, each containing less than 95 kg refrigerant charge.

For factory charge, refer to the unit name plate.

1.2.6.1 Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R-410A GWP⁽¹⁾ value: 1975


(1) GWP = global warming potential

Please fill in with indelible ink,

- 1 the factory refrigerant charge of the product,
- ② the additional refrigerant amount charged in the field and
- (1) + (2) the total refrigerant charge

on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the service cover).

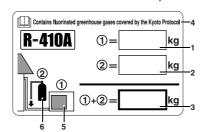

- 1 factory refrigerant charge of the product: see unit name plate⁽²⁾
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

(2) In case of multiple outdoor systems, only 1 label must be adhered, mentioning the total factory refrigerant charge of all outdoor units connected on the refrigerant system.

1.2.6.2 Precautions when adding R-410A

Be sure to charge the specified amount of refrigerant in liquid state to the liquid pipe. Since this refrigerant is a mixed refrigerant, adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

Before charging, check whether the refrigerant cylinder is equipped with a siphon tube or not.

Charge the liquid refrigerant with the cylinder in upright position.



Charge the liquid refrigerant with the cylinder in up-side-down position.

■ Be sure to use tools exclusively for R-410A to ensure required pressure resistance and to prevent foreign materials from mixing into the system.



Charging with an unsuitable substance may cause explosions and accidents, so always make sure that the appropriate refrigerant (R-410A) is charged.

Refrigerant containers must be opened slowly.

1.2.6.3 Stop valve operation procedure

Size of stop valve

The sizes of the stop valves connected to the system are as listed in the table below.

Type of stop valve	8 Hp	10 Hp	12 Hp	14 Hp	16 Hp	
Liquid pipe		φ9.5 ^(a)		φ1:	2.7	
Suction gas pipe	φ25.4 ^(b)					
HP/LP gas pipe			φ19.1 ^(c)			
Equalizer pipe	φ19.1					

- (a) The 12 Hp model supports field piping of φ12.7 on the accessory pipe supplied with the unit.
- (b) The 8 and 10 Hp models support field piping of φ22.2 on the accessory pipe supplied with the unit.
 - The 12~16 Hp models support field piping of φ28.6 on the accessory pipe supplied with the unit.
- (c) The 14 and 16 Hp models support field piping of φ22.2 on the accessory pipe supplied with the unit.



- Do not open the stop valve until all piping and electrical steps of "1.2.4 Pipe Insulation" on page 161 are completed. If the stop valve is left open without turning on the power, it may cause refrigerant to build up in the compressor, leading to insulation degradation.
- Always use a charge hose for service port connection.
- After tightening the cap, check that no refrigerant leaks are present.

Opening stop valve (See figure 13)

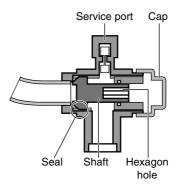


figure 13

- 1. Remove the cap and turn the valve counterclockwise with the hexagon wrench.
- 2. Turn it until the shaft stops.



Do not apply excessive force to the stop valve. Doing so may break the valve body.

3. Make sure to tighten the cap securely. Refer to the table below.

	Tighte	to close)		
Stop valve size		Shaft		
	Valve body	Hexagonal wrench	Cap (valve lid)	Service port
ф9.5	5.4~6.6	4 mm	13.5~16.5	
φ12.7	8.1~9.9	4 111111	18.0~22.0	11.5~13.9
ф22.2	27.0~33.0 8 mm		22.5~27.5	11.5~15.9
ф25.4	27.0~33.0	O IIIIII	22.5~21.5	

Closing stop valve (See figure 13)

- 1. Remove the cap and turn the valve clockwise with the hexagon wrench.
- 2. Securely tighten the valve until the shaft contacts the main body seal.
- Make sure to tighten the cap securely.For the tightening torque, refer to the table above.

1.2.6.4 How to check how many units are connected

It is possible to find out how many indoor units are active and connected by operating the pushbutton switch on the printed circuit board (A1P) of the working outdoor unit. In a multiple outdoor unit system, you can find out how many outdoor units are connected to the system by using the same procedure.

Make sure that all the indoor units connected to the outdoor unit are active.

Follow the 5-step procedure as explained below.

■ The LEDs on the A1P shows the operating status of the outdoor unit and the number of indoor units that are active.

● OFF ⇔ ON → Blinking

■ The number of units that are active can be read from the LED display in the "Monitor Mode" procedure below.

Example: in the following procedure there are 22 units active:

Note:

Wherever during this procedure, press the **BS1 MODE** button if something becomes unclear. You will return to setting mode 1 (H1P= ● "OFF").

1 Setting mode 1 (default system status)




Press the **BS1 MODE** button to switch from setting mode 1 to monitor mode.

2 Monitor mode




To check the number of indoor units, press the **BS2 SET** button 5 times. To check the number of outdoor units, press the **BS2 SET** button 8 times.

3 Monitor mode

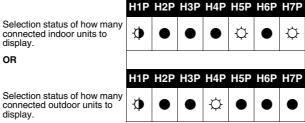

Pressing the **BS3 RETURN** button causes the LED display to show the data on the number of indoor units that are connected or how many outdoor units that are connected in a multiple outdoor unit system.

4 Monitor mode

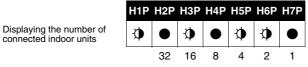

Calculate the number of connected indoor units by adding the values of all (H2P~H7P) blinking (🏵) LEDs together.

In this example: 16+4+2=22 units

Press the **BS1 MODE** button to return to step 1, setting mode 1 (H1P= ● "OFF").

1.2.6.5 Additional refrigerant charge



Adding refrigerant using the automatic refrigerant charging function is recommended.

Follow the procedures below.



- When charging a system, charging over the permissible quantity can cause liquid hammer.
- Always use protective gloves and protect your eyes when charging refrigerant.
- When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately.
 - The refrigerant charge port has a electric expansion valve and will be closed at the end of the refrigerant charging. However, the valve will be opened when operating the unit after refrigerant charging.
 - If the tank is left with the valve open, the amount of refrigerant which is properly charged may get off point. More refrigerant may be charged by any remaining pressure after the unit has stopped.



Electric shock warning

- Close the electric box lid before turning on the main power.
- Perform the settings on the circuit board (A1P) of the outdoor unit and check the LED display after the power is on via the service lid which is in the lid of the electric box.



Operate switches with an insulated stick (such as a ball-point pen) to avoid touching the life parts.

Make sure to re-attach the inspection cover into the switch box cover after the job is finished.



- If the power of some units is turned off, the charging procedure can not be finished properly.
- In case of a multiple outdoor system, turn on the power of all outdoor units.
- Make sure to turn ON the power 6 hours before starting the operation. This is necessary to warm the crankcase by the electric heater.
- If operation is performed within 12 minutes after the indoor, BS unit and outdoor units are turned on, the H2P-LED will be lit and the compressor will not operate.



- See " 1.2.6.3 Stop valve operation procedure" on page 182 for details on how to handle stop valves.
- The refrigerant charging port is connected to the piping inside the unit.

 The unit's internal piping is already factory charged with refrigerant, so be careful when connecting the charge hose.
- After adding the refrigerant, do not forget to close the lid of the refrigerant charging port. The tightening torque for the lid is 11.5 to 13.9 N•m.
- In order to ensure uniform refrigerant distribution, it may take the compressor ±10 minutes to start up after the unit has started operation. This is not a malfunction.

1. Procedure for additional refrigerant charge

The automatic refrigerant charging has limits as described below.

At out of limit, the system can not operate the automatic refrigerant charging.

Outdoor temperature : 0°C DB~43°C DB Indoor temperature : 10°C DB~32°C DB

Total indoor unit capacity : ≥80%

Pre-charging

To speed up the proces of charging refrigerant for large systems, it is recommended to first manually charge a portion of the refrigerant first before performing automatic charging.

- 1. Calculate how much refrigerant to be added using the formula explained in the chapter "How to calculate the additional refrigerant to be charged" on page 158.
- 2. The amount of pre-charging is 10 kg less than the calculated amount.

3. Open valve B (the valves A and C, the liquid pipe, the suction gas pipe, the high pressure/ low pressure gas pipe and the equalizer pipe stop valves must be left closed) and charge the refrigerant in liquid form via the liquid pipe stop valve service port. (See figure 24)

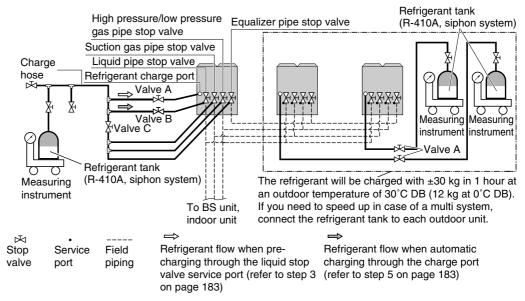


figure 24

4. If the calculated amount of pre-charging is reached, close valve B.



At least the unit should be charged with its original amount of refrigerant (refer to the nameplate on the unit), before starting the automatic charging.

Note

When the leak detection function is not required, complete charging when using the previous described method (unit is not operating) can be done.

If it is not possible to charge the entire quantity through the service port of the liquid pipe stop valve with the unit not operating, refer to " 1.2.6.8.7 Additional refrigerant charging method" on page 199.

5. After pre-charging, perform the refrigerant charge operation as shown below and charge the remaining refrigerant of the additional charging amount through valve A. (See figure 24)

Note:

For a multi outdoor unit system, it is not required to connect all charge ports to a refrigerant tank.

The refrigerant will be charged with ± 30 kg in 1 hour time at an outdoor temperature of 30°C DB or with ± 12 kg at an outdoor temperature of 0°C DB.

If you need to speed up in case of a multiple outdoor system, connect the refrigerant tanks to each outdoor unit as shown in figure 24.

1. Start of automatic charging refrigerant

- Open the liquid pipe, suction gas pipe, high pressure/low pressure gas pipe and equalizer pipe stop valves and the service port stop valve. (Valves A, B and C must be closed.)
- Close all front panels except the electric box front panel and turn the power ON.
- Make sure all indoor units are connected, refer to " 1.2.6.4 How to check how many units are connected" on page 183.
- If the H2P LED is not flashing (in 12 minutes time after turning on the power), make sure it is displayed as shown in the "2. Normal system display" on page 188.
 If the H2P LED is flashing, check the malfunction code on the remote controller
 "3. Remote controller malfunction code display" on page 189.



■ If you perform the refrigerant charging operation within the refrigerant system with one or more units with power OFF, the refrigerant charging operation can not be accomplished properly. For confirming the number of outdoor units and indoor units with power ON, refer to " 1.2.6.4 How to check how many units are connected" on page 183. In case of a multi system, turn the power ON to all outdoor units in the refrigerant system.

■ To energize the crankcase heater, make sure to turn the power ON at least 6 hours before starting operation.

2. Press the **BS1 MODE** button once if the LEDs combination is not as in the figure below.



Press the BS4 TEST button once.



- 4. Hold the **BS4 TEST** button down for 5 seconds or more.
- 5. Charging mode judgement


However, if the indoor temperature is 10°C DB or lower, in some cases the unit will charge in heating mode to increase the indoor temperature.

The unit will automatically select the cooling mode or heating mode for charging.



- When charging in cooling mode, the unit will stop operating when the required amount of refrigerant is charged.
- During charging in heating mode, a person must manually close valve A before complete charging is finished. The required amount is the calculated amount (see "6. Example of connection (R-410A Type)" on page 452), therefore, the weight must be monitored constantly.
- Charging in heating mode
- 6. Start up

Wait while the unit is preparing for charging in heating mode.

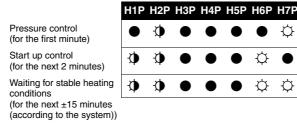

It takes about 2 to 10 minutes for the system to become stable.

In case of a small charging amount, the system will start charging the refrigerant before the system reaches the stable state. It may disturb a correct decision and may cause overcharging.

7. Ready



Press the BS4 TEST button once within 5 minutes.

If the **BS4 TEST** button is not pushed within 5 minutes, P_c^2 will be displayed on the remote controller. Refer to "3. Remote controller malfunction code display" on page 189.

8. Operation

When the following LED display is shown, open valve A and close the front panel. If the front panel is left open, the system can not operate properly during the refrigerant charging.



When the refrigerant tank is not connected or is left with the valve closed for 30 minutes or more, the outdoor unit will stop operation and the Pc code will be displayed on the remote controller of the indoor unit. Follow the procedure as described in "3. Remote controller malfunction code display" on page 189.



^{* =} The state of this LED is not important.



When a malfunction occurs, check the display of the remote controller and refer to "3. Remote controller malfunction code display" on page 189.

9. Complete

If the calculated amount of refrigerant is reached, close valve A and press the **BS3 RETURN** button once.



Always close valve A and remove the refrigerant tank immediately after finishing the refrigerant charge operation.



10. In case leak detection function is required

Press the **BS4 TEST** button once for post-processing with regard to the leak detection function and press the **BS1 MODE** button to confirm that charging is completed.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 189.

10. In case leak detection function is not required

Press the **BS1 MODE** button once and the charging is complete.


Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 189.

■ Charging in cooling mode

6. Start up

Wait while the unit is preparing for charging in cooling mode.

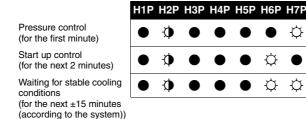

It takes about 2 to 10 minutes for the system to become stable.

In case of a small charging amount, the system will start charging the refrigerant before the system reaches the stable state. It may disturb a correct decision and may cause overcharging.

7. Ready



Press the **BS4 TEST** button once within 5 minutes.

If the **BS4 TEST** button is not pushed within 5 minutes, P_c^2 will be displayed on the remote controller. Refer to "3. Remote controller malfunction code display" on page 189.

8. Operation

When the following LED display is shown, open valve A and close the front panel. If the front panel is left open, the system can not operate properly during the refrigerant charging.



When the refrigerant tank is not connected or is left with the valve closed for 30 minutes or more, the outdoor unit will stop operation and the "?" code will be displayed on the remote controller of the indoor unit. Follow the procedure as described in "3. Remote controller malfunction code display" on page 189.



^{* =} The state of this LED is not important.



When a malfunction occurs, check the display of the remote controller and refer to "3. Remote controller malfunction code display" on page 189.

9. Complete



The display on the remote controller shows a flashing $\mathcal{F}_{\varepsilon}$ code for signalling that automatic charging will be finished in about 10 minutes.

When the unit stops operating, close valve A immediately and check the LEDs and check if the PS code is displayed on the remote controller.



Always close valve A and remove the refrigerant tank immediately after finishing the refrigerant charge operation.

The refrigerant charge port of these units have electric expansion valves that will close automatically when refrigerant charging operation has finished. However, the electric expansion valves will be opened when other operations start after finishing refrigerant charging operation. If the refrigerant tank is left with the valve open, the amount of refrigerant which is properly charged may be off the point.



If it is not as shown above, correct the malfunction (as indicated in the display of the remote controller) and restart the complete charging procedure. When the charging amount is little, the PE code may not be displayed, but instead the PE code will be displayed immediately.

10. In case leak detection function required

Press the **BS4 TEST** button once for post-processing with regard to the leak detection function and press the **BS1 MODE** button to confirm that charging is completed.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 189.

10. In case leak detection function not required

Press the **BS1 MODE** button once and the charging is complete.

Record the amount that was added on the additional refrigerant charge label provided with the unit and attach it on the back side of the front panel.

Perform the procedure " 1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board" as described on page 189.

2. Normal system display

LED di	isplay	Micro- computer	Mode	Ready/		ling/Hea nangeov		Low	Demand	Multi
(Default before d	status	operation monitor	wode	Error	Indivi- dual	Bulk (master)	Bulk (slave)	noise	Demand	Muiti
		HAP	H1P	H2P	НЗР	H4P	H5P	H6P	H7P	H8P
Single out syst		⋫	•	•	≎	•	•	•	•	•
Multiple	Master unit ^(a)	♦	•	•	≎	•	•	•	•	♡
outdoor unit	Slave unit 1 ^(a)	♦	•	•	•	•	•	•	•	(
system	Slave unit 2 ^(a)	•	•	•	•	•	•	•	•	•

(a) The state of the H8P (multi) LED in a multi-system shows which unit is the master unit (♦), slave 1 unit (♦) or slave 2 unit (●).

Only the master unit is connected to the indoor units with interunit wiring.

3. Remote controller malfunction code display

Remote controller heating mode malfunction codes

Error code						
P8 recharge operation	Close valve A immediately and press the TEST OPERATION button once. The operation will restart from the charging mode judgement onwards.					
P2 charge hold	Close valve A immediately. Check following items: - Check if the gas side stop valve is opened correctly - Check if the valve of the refrigerant cylinder is opened - Check if the air inlet and outlet of the indoor unit are not obstructed	After correcting the abnormality, restart the automatic charging procedure again.				

Remote controller cooling mode malfunction codes

Error code								
<i>PR</i> , <i>PH</i> , <i>PC</i> replace	Close valve A and replace the empty cylinder. When renewed, open valve A (the outdoor unit will not stop operating). The code on the display shows the unit where a cylinder is to be renewed: PS = master unit, PS = slave unit 1, PE = slave unit 2, flashing PS, PS and PE = all units After recplacing the cylinder, open valve A again and continue the work.							
cylinder	In case of an outdoor multi system, replacing the refrigerant tank of the outdoor unit during the refrigerant charging operation when the display on the remote controller is not showing PR, PR or PC, may cause an abnormal stop of the refrigerant charging operation.							
P8 recharge operation	Close valve A immediately. Restart the automatic charging procedure again.							
₽₽ charge hold	Close valve A immediately. Check following items: Check if the high pressure/low pressure gas pipe, suction gas pipe, liquid pipes and equalizer pipe stop valves are opened correctly Check if the valve of the refrigerant cylinder is opened Check if the air inlet and outlet of the indoor unit are not obstructed	After correcting the abnormality, restart the automatic charging procedure again.						
* abnormal stop	Close valve A immediately. Confirm the malfunction code by the remote controller and correct the abnormality by following the "Correcting after abnormal completion of the test operation" on page 197.	,						

1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board

Availability of the leak detection function feature requires input of the additional refrigerant charge amount immediately after finishing the automatic charging. The input must be executed before performing the test operation.



If a wrong value is inputted for the additional charged refrigerant weight, the accuracy of the leak detection function will decrease.

Procedure

- 1. Close the electric box lid and all front panels except the one on the side of the electric box.
- 2. Press and hold the **BS1 MODE** button for 5 seconds to enter into setting mode 2. The H1P LED is on \circlearrowleft .
- Press the BS2 SET button 14 times. The LED display must be as follows:



Press the **BS3 RETURN** button once as confirmation of the LEDs combination. LEDs will be blinking in function of the last entered setting (factory setting = 0 kg).

 The weighed and already recorded amount of additional refrigerant charge (not the total amount of refrigerant present in the system) must be entered by selecting the corresponding LED display.

Scroll through the possible LED combinations by pressing the BS2 SET button until the LED

combination corresponds to the weight of additional refrigerant charge you must input. Select the required input by pressing the **BS3 RETURN** button and confirm the input into the PCB by pressing the **BS3 RETURN** button again.

Possible LED combinations in function of weight of additional refrigerant charge (= x) to input;

	kg	H1P	H2P	Н3Р	H4P	H5P	H6P	Н7Р
0	x =0	\Diamond			lacktriangle			
1	0 <x<5< th=""><th>≎</th><th>•</th><th>•</th><th>•</th><th>•</th><th></th><th>♡</th></x<5<>	≎	•	•	•	•		♡
2	5≤x<10	≎	•	•	•	•	♡	•
3	10≤x<15	≎	•	•	•	•	♡	♡
4	15≤x<20	₽	•	•	•	♡	•	•
5	20≤x<25	₽	•	•	•	♡	•	♡
6	25≤x<30	≎	•	•	•	₽	♡	•
7	30≤x<35	₽	•	•	•	♡	₽	♡
8	35≤x<40	₽	•	•	♡	•	•	•
9	40≤x<45	\Diamond			\Diamond			\Diamond
10	45≤x<50	₽	•	•	♡	•	₽	•
11	50≤x<55	\Diamond	•	•	Þ		\Diamond	Þ
12	55≤x<60	\Diamond			\Diamond	\Diamond		
13	60≤x<65	\Diamond	•	•	Þ	Þ	•	Þ
14	65≤x<70	\Diamond	•	•	Þ	Þ	\Diamond	•
15	70≤x<75	\Diamond			\Diamond	\Diamond	\Diamond	\Diamond
16	75≤x<80	₽	•	♡	•	•	•	•
17	80≤x<85	₽	•	♡	•	•	•	♡
18	85≤x<90	≎	•	₽	•		\	•
19	90≤x<95	≎	•	Þ			♡	Þ
20	95≤x<100	≎	•	Þ	•	¢	•	•
21	100≤x	\Diamond	•	Þ	•	Þ	•	Þ

5. Return to setting mode 1 (= initial state) by pressing the **BS1 MODE** button.



If you get confused in the middle of the input process, press the **BS1 MODE** button to return to setting mode 1 (= initial state).

The H1P LED is off ●.

Resume the input procedure from step 2 onwards.

Perform a test operation as described in "1.2.6.8.4 Test operation" on page 196.

1.2.6.7 Checks after adding refrigerant

- Are the stop valves for both liquid and gas open?
- Is the amount of refrigerant, that has been added, recorded?



Make sure to open the stop valves after charging the refrigerant. Operating with the stop valves closed will damage the compressor.

Before operation 1.2.6.8

1.2.6.8.1



Service precautions




WARNING: ELECTRIC SHOCK



Caution when performing service to inverter equipment

- 1. Do not open the electric box cover for 10 minutes after the power supply is turned off.
- 2. Measure the voltage between terminals on the terminal block for power supply with a tester and confirm that the power supply is shut off. In addition, measure the points, as shown in the figure below, with a tester and confirm that

the voltage of the capacitor in the main circuit is less than 50 V DC.

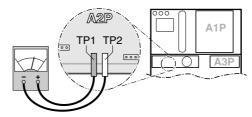

- 3. To prevent damaging the PC-board, touch a noncoated metal part to eliminate static electricity before pulling out or plugging in connectors.
- 4. The performing of the service to the inverter equipment must be started after the junction connectors X1A, X2A, X3A, X4A (X3A and X4A are for 14+16 unit type only) for the fan motors in the outdoor unit are been pulled out. Be careful not to touch the live parts. (If a fan rotates due to strong wind, it may store electricity in the capacitor or in the main circuit and cause electric shock.)
- 5. After the service is finished, plug the junction connecter back in. Otherwise the error code ξ ? will be displayed on the remote controller and normal operation will not be performed.

For details refer to the wiring diagram labelled on the back of the electric box cover.

Pay attention to the fan. It is dangerous to inspect the unit while the fan is running. Be sure to turn off the main switch and to remove the fuses from the control circuit located in the outdoor unit.



Play it safe!

For protection of the PC board, touch the switch box casing by hand in order to eliminate static electricity from your body before performing service.

1.2.6.8.2 Checks before initial start-up



Note:

Remark that during the first running period of the unit, required power input may be higher than stated on the nameplate of the unit. This phenomenon originates from the compressor that needs elapse of a 50 hours run in period before reaching smooth operation and stable power consumption.



- Make sure that the circuit breaker on the power supply panel of the installation is switched off.
- Attach the power wire securely.
- Introducing power with a missing N-phase or with a mistaken N-phase will break the equipment.

After the installation, check the following before switching on the circuit breaker:

- The position of the switches that require an initial setting
 Make sure that switches are set according to your application needs before turning the power supply on.
- Power supply wiring and transmission wiring
 Use a designated power supply and transmission wiring and make sure that it has been
 carried out according to the instructions described in this manual, according to the wiring
 diagrams and according to local and national regulations.
- Pipe sizes and pipe insulation
 Make sure that correct pipe sizes are installed and that the insulation work is properly executed.
- Air tight test and vacuum drying
 Make sure the air tight test and vacuum drying were completed.
- 5. Additional refrigerant charge
 The amount of refrigerant to be added to the unit should be written on the included "Added Refrigerant" plate and attached to the rear side of the front cover.
- Insulation test of the main power circuit
 Measure the insulation resistance and check if the value is in accordance with relevant local and national regulations.
- 7. Installation date and field setting

 Be sure to keep record of the installation date on the sticker on the rear of the upper front panel according to EN60335-2-40. and keep record of the contents of the field setting.

1.2.6.8.3 Field setting


If required, carry out field settings according to the following instructions. Refer to the service manual for more details.

Opening the switch box and handling the switches

When carrying out field settings, remove the inspection cover (1).

Operate the switches with an insulated stick (such as a ball-point pen) to avoid touching live parts.



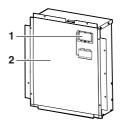


Make sure to re-attach the inspection cover (1) into the switch box cover (2) after the job is finished.



Make sure that all outside panels, except for the panel on the electric box, are closed while working.

Close the lid of the electric box firmly before turning on the power.

Location of the dip switches, LEDs and buttons

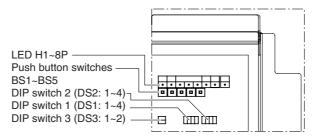


LED state

Throughout the manual the state of the LEDs is indicated as follows:

- OFF
- ⇔ ON
- Blinking

Setting the push button switch (BS1~5)

Function of the push button switch which is located on the outdoor unit PC board (A1P):

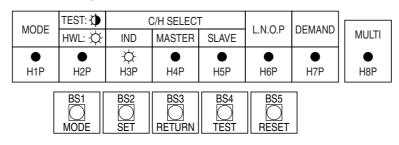

BS1 MODE For changing the set mode

BS3 RETURN For field setting
BS4 TEST For test operation

BS5 RESET For resetting the address when the wiring is changed or when an

additional indoor unit is installed

The figure shows state of the LED indications when the unit is shipped from the factory.

Check operation procedure

- Turn the power on for the outdoor unit and the indoor unit.
 Be sure to turn the power on at least 6 hours before operation in order to have power running to the crankcase heater.
- 2. Make sure that transmission is normal by checking the LED display on the outdoor unit circuit board (A1P). (If transmission is normal, each LED will be displayed as shown below.)

LED display (Default status before delivery)		Micro- computer	Mode	Ready/ Error		ling/Hea nangeov		Low	Demand	Multi
		operation monitor	Mode		Indivi- dual	Bulk (master)	Bulk (slave)	noise	Demand	Watti
		HAP	H1P	H2P	НЗР	H4P	H5P	H6P	H7P	H8P
Single outdoor unit system		•	•	•	≎	•	•	•	•	•
Multiple outdoor unit system	Master unit ^(a)	⋫	•	•	≎	•	•	•	•	♡
	Slave unit 1 ^(a)	Φ	•	•	•	•	•	•	•	•
	Slave unit 2 ^(a)	•	•	•	•	•	•	•	•	•

(a) The state of the H8P (multi) LED in a multi-system shows which unit is the master unit (☼), slave 1 unit (❖) or slave 2 unit (♠).

Only the master unit is connected to the indoor units with interunit wiring.

Setting the mode

The set mode can be changed with the **BS1 MODE** button according to the following procedure:

■ For setting mode 1: Press the BS1 MODE button once, the H1P LED is off ●. This mode is not available for heat recovery units.

■ For setting mode 2: Press the BS1 MODE button for 5 seconds, the H1P LED is on ۞. If the H1P LED is blinking ۞ and the BS1 MODE button is pushed once, the setting mode will change to setting mode 1.



If you get confused in the middle of the setting process, push the **BS1 MODE** button. Then it returns to setting mode 1 (H1P LED is off).

Setting mode 2

The H1P LED is on.

Setting procedure

1. Push the **BS2 SET** button according to the required function (A~H). The LED indication that matches the required function is shown below in the field marked ::

Possible functions

- A additional refrigerant charging operation.
- B refrigerant recovery operation/vacuuming operation.
- **C** automatic low noise operation setting at nighttime.
- **D** low noise operation level setting (**L.N.O.P**) via the external control adapter.
- **E** power consumption limitation setting (**DEMAND**) via the external control adapter.
- F enabling function of the low noise operation level setting (L.N.O.P) and/or power consumption limitation setting (DEMAND) via the external control adapter (DTA104A61/62).
- **G** high static pressure setting
- H evaporating temperature setting

	H1P	H2P	Н3Р	H4P	H5P	H6P	H7P
Α	♡	•	₽	•	₽	•	
В	♡	•	₽	•	₽	•	\Diamond
С	♡	•	₽	•	₽	₽	
D	\Diamond	•	\Diamond	\Diamond	•	•	\rightarrow
E	♡		\Diamond	\Diamond	\Diamond	\Diamond	
F	♡	•	•	₽	₽	•	
G	♡	•	₽	•	•	₽	
н	♡	•	•	♡	•	•	•

- 2. When the BS3 RETURN button is pushed, the current setting is defined.
- 3.1Possible settings for function A, B, F, and G are **ON** (ON) or **OFF** (OFF).

	H1P	H2P	НЗР	H4P	H5P	Н6Р	Н7Р
ON	♡	•	•	•	•	(•
OFF ^(a)	♡	•	•	•	•	•	Þ

(a) This setting = factory setting

3.2 Possible settings for function C

The noise of level 3 < level 2 < level 1 (1).

	H1P	H2P	Н3Р	H4P	H5P	H6P	H7P
OFF ^(a)	\Diamond	•	•	•	•	•	•
_1	≎	•	•	•	•	•	(
_2	\Diamond	•	•	•	•	(•
3	♦					((

(a) This setting = factory setting

3.3 Possible settings for function D and E

For function D (L.N.O.P) only: the noise of level 3 < level 2 < level 1 (1).

For function E (**DEMAND**) only: the power consumption of level 1< level 2 < level 3 (-3).



(a) This setting = factory setting

3.4 Possible settings for function H

The evaporating temperature level H (high) < level M (medium) < level L (low) (L).



(a) This setting = factory setting

- 4. Push the **BS3 RETURN** button and the setting is defined.
- 5. When the **BS3 RETURN** button is pushed again, the operation starts according to the setting.

Refer to the service manual for more details and for other settings.

Confirmation of the set mode

The following items can be confirmed by setting mode 1 (H1P LED is off)

Check the LED indication in the field marked

- 1. Indication of the present operation state
 - ●, normal
 - 🜣, abnormal
 - , under preparation or under test operation



- 2. Indication of low noise operation state L.N.O.P
 - • standard operation (= factory setting)
 - 🜣 L.N.O.P operation



- 3. Indication of power consumption limitation setting **DEMAND**
 - • standard operation (= factory setting)
 - DEMAND operation



1.2.6.8.4 Test operation



Do not insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.



Do not perform the test operation while working on the indoor units.

When performing the test operation, not only the outdoor unit, but the connected indoor unit will operate as well. Working on a indoor unit while performing a test operation is dangerous.

- In case the unit is operated with the leak detection function available:
 - the outdoor temperature must be 0°C DB~43°C DB
 - the indoor temperature must be 20°C DB~32°C DB

In case the unit is operated out of the temperature range as instructed above, the display of the remote controller shows $U\vec{s}$ and the unit operates without the availability of the leak detection function.

- In the test operation, the following checks and judgement will be performed:
 - Check of the stop valve opening
 - Check for wrong wiring
 - Check of refrigerant overcharge
 - Initial refrigerant detection
- In case the leak detection function is available, the check operation will last 2 hours, otherwise it takes between 40 and 60 minutes to complete the check operation.
- Make sure to carry out the test operation after the first installation. Otherwise, the malfunction code 🛂 will be displayed on the remote controller and normal operation can not be carried out.
- In case of a multi system, check the settings and results on the master unit.
- Abnormalities on indoor units can not be checked for each unit individual. After the test operation is finished, check the indoor units one by one by performing a normal operation using the remote controller.



A test operation can not be carried out when the outdoor temperature is less than -5°C.

Test operation procedure

- 1. Close all front panels except the front panel of the electric box.
- Turn ON the power to all outdoor units and the connected indoor units.
 Be sure to turn on the power 6 hours before operation in order to have power running to the crank case heater and to protect the compressor.
- 3. Make the field setting as described in the paragraph "1.2.6.8.3 Field setting" on page 192.
- 4. Press the **BS1 MODE** button once, and set to the SETTING MODE (H1P LED = OFF).
- 5. In case the leak detection function is required,

press and hold the **BS4 TEST** button down for 5 seconds or more. The unit will start the test operation.

In case the leak detection function is not required,

go into setting mode 2 by pressing the **BS1 MODE** button for 5 seconds. The H1P LED is on \diamondsuit . Perform following steps.

1. Press the BS2 SET button 3 times.



2. Press the BS3 RETURN button once to confirm.



3. Press the **BS2 SET** button in order to change the LED display to the following display.



4. Press the BS3 RETURN button once to confirm.

5. Press the **BS3 RETURN** button a second time to start the test operation. The unit will start the test operation.

- The test operation is automatically carried out in cooling mode, the H2P LED will light up and the messages "Test operation" and "Under centralized control" will display on the remote controller.
- It may take 10 minutes to bring the state of the refrigerant uniform before the compressor starts.
- During the test operation, the refrigerant running sound or the magnetic sound of a solenoid valve may become loud and the LED display may change, but these are not malfunctions.
- During the test operation, it is not possible to stop the unit operation from a remote controller. To abort the operation, press the BS3 RETURN button. The unit will stop after ±30 seconds.
- 6. Close the front panel in order to let it not be the cause of misjudgement.
- 7. Check the test operation results by the LED display on the outdoor unit.



8. When the test operation is fully completed, normal operation will be possible after 5 minutes. Otherwise, refer to "Correcting after abnormal completion of the test operation" on page 197 to take actions for correcting the abnormality.

Correcting after abnormal completion of the test operation

The test operation is only completed if there is no malfunction code displayed on the remote controller. In case of a displayed malfunction code, perform the following actions to correct the abnormality:

■ Confirm the malfunction code on the remote controller

Installation error	Error code	Remedial action
The stop valve of an outdoor unit is left closed.	83 84 83 88 UF	Open the stop valve.
The phases of the power to the outdoor units are reversed.	u :	Exchange two of the three phases (L1, L2, L3) to make a positive phase connection.
No power is supplied to an outdoor or indoor unit (including phase interruption).	LC U I UY	Check if the power wiring for the outdoor units are connected correctly.
Incorrect interconnections between units	LIF	Check if the refrigerant line piping and the unit wiring are consistent with each other.
Refrigerant overcharge	83 88 UF	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
Insufficient refrigerant	84 83	Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
The added amount of refrigerant was not inputted after automatic charging.	PF	Availability of the leak detection function feature requires input of the additional refrigerant charge amount immediately after finishing the automatic charging. Refer to " 1.2.6.6 Procedure for inputting the additional refrigerant charge weight into the PC board" on page 189.
In case the test operation was interrupted or the unit was operating out of the instructed temperature range, the initial refrigerant detection has failed.	U3	In case the test operation was interrupted, perform the test operation again. In case the unit was operating out of the instructed temperature range, the unit can still be operated normally, but the leak detection function will not be available. Perform the test operation again within the instructed temperature range.

After correcting the abnormality, press the BS3 RETURN button and reset the malfunction

Carry out the test operation again and confirm that the abnormality is properly corrected.

1.2.6.8.5 Final check after installation

After all installation works are completed, operate the unit normally and check the following:

- Make sure the indoor units and outdoor unit are operating normally.
- Operate each indoor unit separately and make sure the corresponding outdoor unit is also operating properly.
- Check if cold or hot air is coming out from the indoor unit.
- Push the fan direction and fan strength buttons on the remote controller to check if they are operating properly.



- Heating is not possible if the outdoor temperature is 24°C or higher. Refer to the operation manual.
- If a knocking sound is heard in the liquid compression of the compressor, stop the unit immediately and then energize the crankcase heater for a sufficient length of time before restarting the operation.
- Once stopped, the compressor will not restart in about 5 minutes, even if the ON/OFF button on the remote controller is pushed.
- When the system operation is stopped by the remote controller, the outdoor unit may continue operation for a maximum of 5 minutes.
- The outdoor fan may rotate at low speeds in the night-time low noise setting or the external low noise level setting is made; but this is not a malfunction.

1.2.6.8.6 Service mode operation



Do not shut off the power and do not reset the setting of mode 2 when vaccuuming or recovering refrigerant. Otherwise the expansion valves will close making it impossible to vaccuum the system or to recover the refrigerant.

Vacuuming method

At the first installation, this vacuuming is not required. It is required only for repair purposes.

- 1. When the unit is at standstill and under the setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - The indoor unit, BS unit and the outdoor unit expansion valves will fully open.
 - The H1P LED is on and the remote controller indicates **TEST** (test operation) and (external control) and the operation will be prohibited.
- 2. Evacuate the system with a vacuum pump.
- 3. Press the **BS1 MODE** button and reset the setting mode 2.

Refrigerant recovery operation method

by a refrigerant reclaimer

- 1. When the unit is at standstill and under the setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - The indoor unit, BS unit and the outdoor unit expansion valves will fully open.
 - The H1P LED is on and the remote controller indicates **TEST** (test operation) and $\overline{\ }$ (external control) and the operation will be prohibited.
- 2. Recover the refrigerant by a refrigerant reclaimer. For details, see the operation manual delivered with the refrigerant reclaimer.
- 3. Press the BS1 MODE button and reset the setting mode 2.

1.2.6.8.7 Additional refrigerant charging method

When the leak detection function is not required and the entire refrigerant quantity can not be charged through the liquid pipe stop valve service port with the unit not operating (refer to "Precharging" on page 184), make sure to charge the remaining charging quantity using the following procedure:

- 1. Turn the power of the indoor unit, the BS unit and the outdoor unit on.
- 2. Make sure to open the stop valves of the suction gas pipe, the high pressure/low pressure gas pipe and the liquid pipe completely.
- 3. Connect the refrigerant charge hose to the refrigerant charging port (for additionaly charging).
- 4. When the unit is not operating, push the **BS2 SET** button until the additional refrigerant charging operation function A in setting mode 2 can be defined (refer to "Setting the mode" on page 194), the H1P LED is on (\$\ightarrow\$).
- The operation starts automatically.
 The H2P LED will start flashing (♠) and the messages "Test operation" and "Under centralized control" will display on the remote controller.
- 6. After charging the specified quantity of refrigerant, press the **BS3 RETURN** button to stop the operation.

The operation will stop within 30 minutes.

- If charging is not completed after 30 minutes, set and perform the additional refrigerant charging operation again.
- If the additional refrigerant charging operation stops before the passing of 30 minutes, the system may be overcharged.



Never charge extra refrigerant.

- 7. Disconnect the refrigerant charge hose.
- 8. Perform " 1.2.6.7 Checks after adding refrigerant" as explained on page 190.

Operation when Power is Turned On 1.3

1.3.1 When Turning On Power First Time

The unit cannot be run for up to 12 minutes to automatically set the master power and address (indoor-outdoor address, etc.).

Status

Outdoor unit

Test lamp H2P Blinks

Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the "UH"

malfunction indicator blinks.

(Returns to normal when automatic setting is complete.)

1.3.2 When Turning On Power the Second Time and Subsequent

Tap the RESET button on the outdoor unit PC board. Operation becomes possible for about 2 minutes. If you do not push the RESET button, the unit cannot be run for up to 10 minutes to automatically set master power.

Status

Outdoor unit

Test lamp H2P Blinks

Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the operation lamp lights but the compressor does not operate. (Returns to normal when automatic setting is complete.)

1.3.3 When an Indoor Unit or Outdoor Unit has been Added, or Indoor or Outdoor Unit PC Board has been Changed

Be sure to push and hold the RESET button for 5 seconds. If not, the addition cannot be recognized. In this case, the unit cannot be run for up to 12 minutes to automatically set the address (indoor-outdoor address, etc.)

Status


Outdoor unit

Test lamp H2P ON

Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the "UH" or "U4" malfunction indicator blinks. (Returns to normal when automatic setting is complete.)

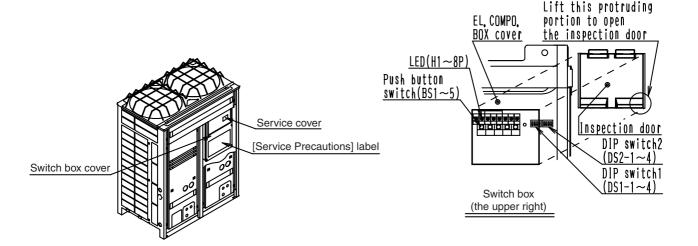


Caution When the 400 volt power supply is applyed to "N" phase by mistake, replace Inverter PC board (A2P) and control transformer (T1R, T2R) in switch box together.

(V0847)

2. Outdoor Unit PC Board Layout

Outdoor unit PC board

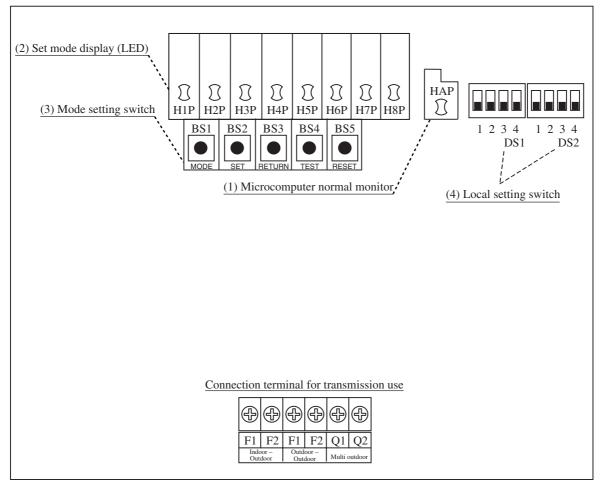

(V3054)

- (1) Microcomputer normal monitor This monitor blinks while in normal operation, and turns on or off when a malfunction occurs.
- (2) Set mode display (LED) LEDs display mode according to the setting.
- (3) Mode setting switch Used to change mode.
- (4) Local setting switch Used to make field settings.

Field Setting SiBE37-704

3. Field Setting


Field Setting from Remote Controller 3.1

Individual function of indoor unit can be changed from the remote controller. At the time of installation or after service inspection / repair, make the local setting in accordance with the following description.

Wrong setting may cause malfunction.

(When optional accessory is mounted on the indoor unit, setting for the indoor unit may be required to change. Refer to information in the option handbook.)

3.1.1 Wired Remote Controller <BRC1C61, 62>

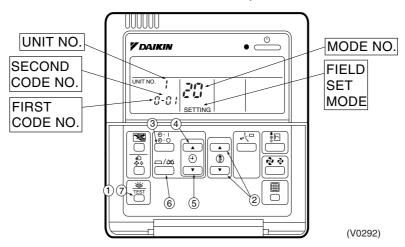

- 1. When in the normal mode, press the " with the normal mode, press the normal mode, press the normal mode, press the " with the normal mode, press the normal FIELD SET MODE is entered.
- 2. Select the desired MODE NO. with the " 🐧 " button (2).
- 3. During group control, when setting by each indoor unit (mode No. 20, 22 and 23 have been selected), push the " $\frac{0}{0}$ " button (3) and select the INDOOR UNIT NO to be set. (This operation is unnecessary when setting by group.)
- 4. Push the " and select FIRST CODE NO.
- 6. Push the " button (6) once and the present settings are SET.
 7. Push the " button (7) to return to the NORMAL MODE.


(Example)

If during group setting and the time to clean air filter is set to FILTER CONTAMINATION, HEAVY, SET MODE NO. to "10" FIRST CODE NO. to "0", and SECOND CODE NO. to "02".

SiBE37-704 **Field Setting**

3.1.2 Wireless Remote Controller - Indoor Unit

BRC7C type **BRC7E** type **BRC4C** type

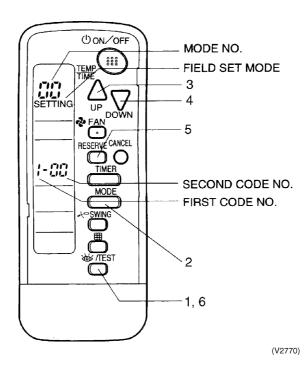

- 1. When in the normal mode, push the " button for 4 seconds or more, and operation then enters the "field set mode."
- 2. Select the desired "mode No." with the " button.
- 3. Pushing the " \bigcirc " button, select the first $\overline{\text{code}}$ No.
- 4. Pushing the " button, select the second code No.
 5. Push the timer " button and check the settings.
- 6. Push the " button to return to the normal mode.


(Example)

When setting the filter sign time to "Filter Dirtiness-High" in all group unit setting, set the Mode No. to "10", Mode setting No. to "0" and setting position No. to "02".

Field Setting SiBE37-704

3.1.3 Simplified Remote Controller

BRC2A51 BRC2C51

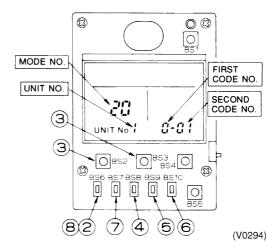

- 1. Remove the upper part of remote controller.
- 2. When in the normal mode, press the [BS6] BUTTON (2) (field set), and the FIELD SET MODE is entered.
- 3. Select the desired MODE No. with the [BS2] BUTTON (③) (temperature setting ▲) and the [BS3] BUTTON (③) (temperature setting ▼).
- 4. During group control, when setting by each indoor unit (mode No. 20, 22, and 23 have been selected), push the [BS8] (4) BUTTON (unit No.) and select the INDOOR UNIT NO. to be set. (This operation is unnecessary when setting by group.)
- 5. Push the [BS9] BUTTON (5) (set A) and select FIRST CODE NO.
- 6. Push the [BS10] BUTTON (6) (set B) and select SECOND CODE NO.
- 7. Push the [BS7] BUTTON ((7)) (set/cancel) once and the present settings are SET.
- 8. Push the [BS6] BUTTON (8) (field set) to return to the NORMAL MODE.
- 9. (Example) If during group setting and the time to clean air filter is set to FILTER CONTAMINATION HEAVY, SET MODE NO. to "10", FIRST CODE NO. to "0", and SECOND CODE NO. to "02".

SiBE37-704 Field Setting

3.1.4 Setting Contents and Code No. – VRV Indoor unit

VRV	Mode						Second	d Code No	o.(Note 3	Second Code No.(Note 3)							
system indoor	No. Note 2	No.		C)1	C)2	03		04		No					
unit settings	10(20)	0	Filter contamination heavy/ light (Setting for display time to clean air filter)	Super long life filter	Light	Approx. 10,000 hrs.	Heavy	Approx. 5,000 hrs.	_		_	_	(1)				
			(Sets display time to clean air filter to half when there is heavy filter contamination.)	Long life filter		Approx. 2,500 hrs.		Approx. 1,250 hrs.									
				Standard filter		Approx. 200 hrs.		Approx. 100 hrs.									
		1	Long life filter type		Long I	ife filter	Super lon	g life filter	_	_	_	_	(2)				
		2	Thermostat sensor in remote	controller	controlle	note er + Body nostat		body nostat	cont	emote roller nostat	_	_	(3)				
		3	Display time to clean air filter calculation (Set when filter si to be displayed.)		Dis	play	No d	isplay	_	_	_	_	(4)				
	12(22)	0	Optional accessories output (field selection of output for a wiring)	turned	or unit ON by nostat	-	_		ation put	Malfunction output		(5)					
		1 ON/OFF input from outs ON/OFF is to be controll outside.)			Forced OFF		ON/OFF control		External protection device input		protection		(6)				
		2	Thermostat differential chang (Set when remote sensor is to	1'	1°C 0.5°C		_		_		(7)						
		3	Air flow setting when heating thermostat is OFF	Air flow setting when heating thermostat is OFF		.L	Set fan speed		_		-		(8)				
		4	Automatic mode differential (temperature differential settir system heat recovery series	ng for VRV	01:0	02:1	03:2	04:3	05:4	06:5	07:6	08:7	_				
		5	Power failure automatic reset		Not ec	uipped	Equipped		-	_	-	_	(9)				
		6	Air flow setting when Cooling thermostat is OFF	L	.L	Set fan speed		_		_		(10)					
	13(23)	0	Setting of normal air flow	I	N	Н		S				(11)					
		1	Selection of air flow direction (Set when a blocking pad kit has been installed.)		F (4 dir	ections)	T (3 directions)		W (2 directions)		_		(12)				
		3 Operation of downward flow flap: Yes/No		Equipped		Not equipped		_				(13)					
		4	Field set air flow position set	ield set air flow position setting		raft prevention Standard		Ceiling Soiling prevention		_		(14)					
		5	Setting of static pressure sel	ection	Star	ndard		static sure	_				(15)				
	15(25)	1	Thermostat OFF excess hun	nidity	Not eq	luipped	Equi	pped					(16)				
		2	Direct duct connection (when the indoor unit and he ventilation unit are connected directly.) *Note 6	d by duct		luipped	·	pped	_	_	_	_	(17)				
		3	Drain pump humidifier interloselection		Not ec	luipped	· ·	pped	_	_	_	_	(18)				
		5	Field set selection for individ ventilation setting by remote		Not ed	luipped	Equi	pped	_	_	_	_	(19)				



- 1. Settings are made simultaneously for the entire group, however, if you select the mode No. inside parentheses, you can also set by each individual unit. Setting changes however cannot be checked except in the individual mode for those in parentheses.
- 2. The mode numbers inside parentheses cannot be used by wireless remote controllers, so they cannot be set individually. Setting changes also cannot be checked.
- 3. Marked are factory set.
- 4. Do not make settings other than those described above. Nothing is displayed for functions the indoor unit is not equipped with.
- 5. "88" may be displayed to indicate the remote controller is resetting when returning to the normal mode.
- 6. If the setting mode to "Equipped", heat reclaim ventilation fan conducts the fan residual operation by linking to indoor unit.

3.1.5 Applicable Range of Field Setting

	Ceiling mounted cassette		Slim	Slim Concealed Conceal ceiling unit ceiling u		Concealed	Ceiling	Wall Floor		Concealed	4-way blow		
	Round- flow	4-way blow	2-way blow	Corner type	concealed ceiling unit	(small)	ceiling unit	(large)	suspended unit	mounted unit	standing unit	floor standing unit	ceiling suspended unit
	FXFQ	FXZQ	FXCQ	FXKQ	FXDQ	FXDQ	FXSQ	FXMQ	FXHQ	FXAQ	FXLQ	FXNQ	FXUQ
Filter sign	0	0	0	0	0	0	0	0	0	0	0	0	0
Ultra long life filter sign	0	0	0	_	_	_	_	_	_	_	_	_	_
Remote controller thermostat sensor	0	0	0	0	0	0	0	0	0	0	0	0	0
Set fan speed when thermostat OFF	0	0	0	0	0	0	0	0	0	0	0	0	0
Air flow adjustment Ceiling height	0	_	_	_	_	_	_	_	0	_	_	_	0
Air flow direction	0	0	_	_	_	_	_	_	_	_	_	_	0
Air flow direction adjustment (Down flow operation)	_	_	_	0	_	_	_	_	_	_	_	_	_
Air flow direction adjustment range	0	0	0	0	_	_	_	_	_	_	_	_	_
Field set fan speed selection	0	_	_	_	O* 1	_	_	_	0	_	_	_	_
Discharge air temp. (Cooling)	_	_	_	_	_	_	_	_	_	_	_	_	_
Discharge air temp. (Heating)	_	_	_	_	_	_	_	_	_	_	_	_	_

^{*1} Static pressure selection

3.1.6 Detailed Explanation of Setting Modes

(1) Filter Sign Setting

If switching the filter sign ON time, set as given in the table below.

Set Time

Filter Specs. Setting	Standard	Long Life	Ultra Long Life Filter
Contamination Light	200 hrs.	2,500 hrs.	10,000 hrs.
Contamination Heavy	100 hrs.	1,250 hrs.	5,000 hrs.

(2) Ultra-Long-Life Filter Sign Setting

When a Ultra-long-life filter is installed, the filter sign timer setting must be changed.

Setting Table

Mode No.	Setting Switch No.	Setting Position No.	Setting
		01	Long-Life Filter
10 (20)	1	02	Ultra-Long-Life Filter (1)
		03	_

(3) Selection of Thermistor

Select the thermistor to control room temperature.

Mode No.	First Code No.	Second Code No.	Thermistor that controls room temperature
(22)		01	Indoor air thermistor for remote controller and suction air thermistor for indoor unit
10 (20)	2	02	Suction air thermistor for indoor unit
		03	Thermistor for remote controller

The factory setting for the Second Code No. is "01" and room temperature is controlled by the indoor unit suction air thermistor and remote controller thermistor.

When the Second Code No. is set to "02", room temperature is controlled by the suction air thermistor.

When the Second Code No. is set to "03", room temperature is controlled by the remote controller thermistor.

(4) "Filter Cleaning" Displayed or Not Displayed

Whether or not to display "Filter Cleaning" after operation of certain duration can be selected.

Mode No.	First Code No.	Second Code No.	"Filter Cleaning" display	
10 (20)	2	01	Display	
	3	02	No display	


(5) Optional Output Switching

Using this setting, "operation output signal" and "abnormal output signal" can be provided. Output signal is output between terminals K1 and K2 of "customized wiring adapter," an optional accessory.

Mode No.	First Code No.	Second Code No.	Remarks
12 (22)		01	Indoor unit thermostat ON/OFF signal is provided.
	0	03	Output linked with "Start/Stop" of remote controller is provided.
		04	In case of "Malfunction Display" appears on the remote controller, output is provided.

(6) External ON/OFF input

This input is used for "ON / OFF operation" and "Protection device input" from the outside. The input is performed from the T1-T1 terminal of the operation terminal block (X1A) in the electric component box.

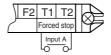

Setting Table

Mode No.	Setting Switch No.	Setting Position No.	Operation by input of the signal A
		01	ON: Forced stop (prohibition of using the remote controller) OFF: Permission of using the remote controller
12 (22)	1	02	
		03	ON: Operation OFF: The system stops, then the applicable unit indicates "A0". The other indoor units indicate "U9".

(7) Thermostat Switching

Differential value during thermostat ON/OFF control can be changed. (For details, refer to "6.4 Thermostat Control while in Normal Operation" on page 149.)

Mode No.	First Code No.	Second Code No.	Differential value	
12(22)	2	01	1°C	
12(22)	2	02	0.5°C	

(8) Air Flow Setting When Heating Thermostat is OFF

This setting is used to set air flow when heating thermostat is OFF.

* When thermostat OFF air flow volume up mode is used, careful consideration is required before deciding installation location. During heating operation, this setting takes precedence over "(7) Fan Stop When Thermostat is OFF."

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	2	01	LL air flow
	3	02	Preset air flow

(9) Setting of operation mode to "AUTO"

This setting makes it possible to change differential values for mode selection while in automatic operation mode.

Mode No.	Setting switch No.	Setting position No.							
Mode No.		01	02	03	04	05	06	07	08
12 (22)	4	0°C	1°C	2°C	3°C	4°C	5°C	6°C	7°C

The automatic operation mode setting is made by the use of the "Operation Mode Selector" button.

(10) Auto Restart after Power Failure Reset

For the air conditioners with no setting for the function (same as factory setting), the units will be left in the stop condition when the power supply is reset automatically after power failure reset or the main power supply is turned on again after once turned off. However, for the air conditioners with the setting, the units may start automatically after power failure reset or the main power supply turned on again (return to the same operation condition as that of before power failure).

For the above reasons, when the unit is set enabling to utilize "Auto restart function after power failure reset", utmost care should be paid for the occurrence of the following situation.



- Caution 1. The air conditioner starts operation suddenly after power failure reset or the main power supply turned on again. Consequently, the user might be surprised (with question for the reason why).
 - 2. In the service work, for example, turning off the main power switch during the unit is in operation, and turning on the switch again after the work is completed start the unit operation (the fan rotates).

(11) Air Flow When Cooling Thermostat is OFF

This is used to set air flow to "LL air flow" when cooling thermostat is OFF.

Mode No.	First Code No.	Second Code No.	Contents	
12 (22)	6	01	LL air flow	
12 (22)	0	02	Preset air flow	

(12) Setting of Normal Air Flow

Make the following setting according to the ceiling height. The setting position No. is set to "01" at the factory.

■ In the Case of FXAQ, FXHQ

Mode No.	Setting Switch No.	Setting Position No.	Setting
		01	Wall-mounted type: Standard
13(23)	13(23) 0		Wall-mounted type: Slight increase
		03	Wall-mounted type: Normal increase

■ In the Case of FXFQ25~80

Mode Firs		Second		Ceiling height			
No.	code No.	code No.	Setting	4-way Outlets	3-way Outlets	2-way Outlets	
		01	Standard (N)	Lower than 2.7 m	Lower than 3.0 m	Lower than 3.5 m	
13 (23)	0	02	High Ceiling (H)	Lower than 3.0 m	Lower than 3.3 m	Lower than 3.8 m	
		03 H		Higher Ceiling (S)	Lower than $3.5\mathrm{m}$	Lower than 3.5 m	_

■ In the Case of FXFQ100~125

Mode	First Second			Ceiling height			
No.	code No.	code No.	Setting	4-way Outlets	3-way Outlets	2-way Outlets	
13 (23) 0		01	Standard (N)	Lower than 3.2 m	Lower than 3.6 m	Lower than 4.2 m	
	0	0 02 H	High Ceiling (H)	Lower than 3.6 m	Lower than 4.0 m	Lower than 4.2 m	
		03	Higher Ceiling (S)	Lower than 4.2 m	Lower than 4.2 m	_	

■ In the Case of FXUQ71~125

Mode	First			Ceiling height			
No.	code No.	code No.	Setting	4-way Outlets	3-way Outlets	2-way Outlets	
		01	Standard (N)	Lower than 2.7 m	Lower than 3.0 m	Lower than 3.5 m	
13 (23)	0	02	High Ceiling (H)	Lower than 3.0 m	Lower than 3.5 m	Lower than 3.8 m	
		03	Higher Ceiling (S)	Lower than 3.5 m	Lower than 3.8 m	_	

(13) Air Flow Direction Setting

Set the air flow direction of indoor units as given in the table below. (Set when optional air outlet blocking pad has been installed.) The second code No. is factory set to "01."

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
		01	F: 4-direction air flow
13 (23)	1	02	T: 3-direction air flow
		03	W : 2-direction air flow

(14) Operation of Downward Flow Flap: Yes/No

Only the model FXKQ has the function.


When only the front-flow is used, sets yes/no of the swing flap operation of down-flow.

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	2	01	Down-flow operation: Yes
13 (23)	3	02	Down-flow operation: No

(15) Setting of Air Flow Direction Adjustment Range

Make the following air flow direction setting according to the respective purpose.

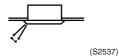

Setting Table

Mode No.	First Code No.	Second Code No.	Setting
		01	Upward (Draft prevention)
13 (23)	4	02	Standard
		03	Downward (Ceiling soiling prevention)

^{*} Some indoor unit models are not equipped with draft prevention (upward) function.

(16) Setting of the Static Pressure Selection (for FXDQ model)

Model No.	First Code No.	Second Code No.	External static pressure
13 (23)	5	01	Standard (15Pa)
13 (23)	3	02	High static pressure (44Pa)

(17) Humidification When Heating Thermostat is OFF

Setting to "Humidification Setting" turns ON the humidifier if suction temperature is 20°C or above and turns OFF the humidifier if suction temperature is 18°C or below when the heating thermostat is OFF.

Mode No.	First Code No.	Second Code No.	Setting
15 (25)	1	01	_
15 (25)	I	02	Setting of humidifier

(18) Setting of Direct Duct Connection

This is used when "fresh air intake kit equipped with fan" is connected. The indoor fan carries out residual operation for one minute after the thermostat is stopped. (For the purpose of preventing dust on the air filter from falling off.)

Mode No.	First Code No.	Second Code No.	Contents
		01	Without direct duct connection
15 (25)	2	02	With direct duct connection equipped with fan

(19) Interlocked Operation between Humidifier and Drain Pump

This is used to interlock the humidifier with the drain pump. When water is drained out of the unit, this setting is unnecessary.

Mode No.	First Code No.	Second Code No.	Contents
		01	Individual operation of humidifier
15 (25)	3	02	Interlocked operation between humidifier and drain pump

(20) Individual Setting of Ventilation

This is set to perform individual operation of heat reclaim ventilation using the remote controller/central unit when heat reclaim ventilation is built in.

(Switch only when heat reclaim ventilation is built in.)

Mode No.	First Code No.	Second Code No.	Contents
		01	_
15 (25)	5	02	Individual operation of ventilation

3.1.7 Centralized Control Group No. Setting


BRC1C Type

In order to conduct the central remote control using the central remote controller and the unified ON/OFF controller, Group No. settings should be made by group using the operating remote controller.

Make Group No. settings for central remote control using the operating remote controller.

- While in normal mode, press and hold the " switch for a period of four seconds or more to set the system to "Field Setting Mode".
- 2. Select the MODE No. "DD" with the " 🀧 " button.
- 3. Use the " button to select the group No. for each group.

 (Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 4-15.)
- 4. Press " a " to set the selected group No.
- 5. Press " it o return to the NORMAL MODE.

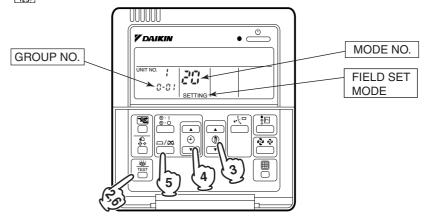

Note:


- For wireless remote controller, see the following.
- For setting group No. of HRV and wiring adaptor for other air conditioners, etc., refer to the instruction manual attached.

NOTICE


Enter the group No. and installation place of the indoor unit into the attached installation table. Be sure to keep the installation table with the operation manual for maintenance.

BRC7C Type BRC7E Type BRC4C Type

- Group No. setting by wireless remote controller for centralized control
- 1. When in the normal mode, push " button for 4 seconds or more, and operation then enters the "field set mode."
- 2. Set mode No. "00" with " MODE " button.
- 3. Set the group No. for each group with " \triangle " " \bigcup_{DMN} " button (advance/backward).
- 4. Enter the selected group numbers by pushing " button.
- 5. Push " "button and return to the normal mode.

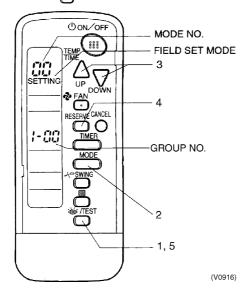

Group No. Setting Example

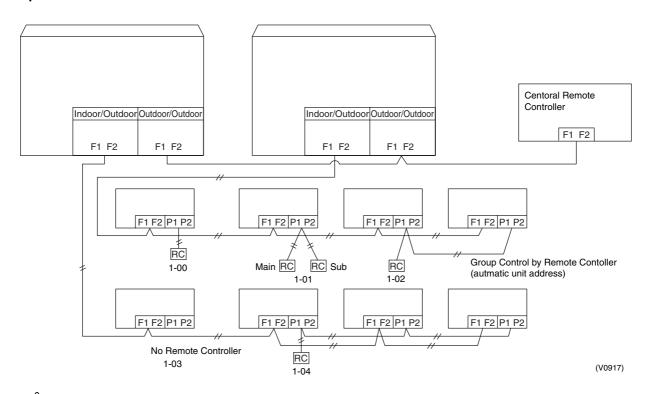



When turning the power supply on, the unit may often not accept any operation while "88" is displaying after all indications were displayed once for about 1 minute on the liquid crystal display. This is not an operative fault.

3.1.8 Setting of Operation Control Mode from Remote Controller (Local Setting)

The operation control mode is compatible with a variety of controls and operations by limiting the functions of the operation remote controller. Furthermore, operations such as remote controller ON/OFF can be limited in accordance with the combination conditions. (Refer to information in the next page.)

Central remote controller is normally available for operations. (Except when centralized monitor is connected)


3.1.9 Contents of Control Modes

Twenty modes consisting of combinations of the following five operation modes with temperature and operation mode setting by remote controller can be set and displayed by operation modes 0 through 19.

- ◆ ON/OFF control impossible by remote controller Used when you want to turn on/off by central remote controller only. (Cannot be turned on/off by remote controller.)
- OFF control only possible by remote controller
 Used when you want to turn on by central remote controller only, and off by remote controller only.
- Centralized
 Used when you want to turn on by central remote controller only, and turn on/off freely by remote controller during set time.
- Individual
 Used when you want to turn on/off by both central remote controller and remote controller.
- ◆ Timer operation possible by remote controller Used when you want to turn on/off by remote controller during set time and you do not want to start operation by central remote controller when time of system start is programmed.

How to Select Operation Mode


Whether operation by remote controller will be possible or not for turning on/off, controlling temperature or setting operation mode is selected and decided by the operation mode given on the right edge of the table below.

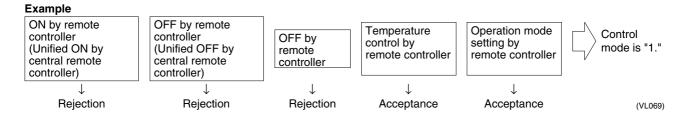

		Control by remote controller				
	Oper	ration				
Control mode	Unified operation, individual operation by central remote controller, or operation controlled by timer	Unified OFF, individual stop by central remote controller, or timer stop	OFF	Temperature control	Operation mode setting	Control mode
				Dejection	Acceptance	0
ON/OFF control			Daiastian	Rejection	Rejection	10
impossible by remote controller			Rejection (Example)	Acceptance	Acceptance (Example)	1(Example)
	Rejection (Example)			(Example)	Rejection	11
		Rejection (Example)		Dejection	Acceptance	2
OFF control only possible by remote controller				Rejection	Rejection	12
				Acceptance	Acceptance	3
					Rejection	13
				Dejection	Acceptance	4
Centralized				Rejection	Rejection	14
Centralized				At	Acceptance	5
	Aggertance		Acceptones	Acceptance	Rejection	15
	Acceptance		Acceptance	Dejection	Acceptance	6
Individual		Aggartance		Rejection	Rejection	16
individual		Acceptance		Assentance	Acceptance	7 *1
				Acceptance	Rejection	17
				Rejection	Acceptance	8
Timer operation	Acceptance	Acceptance			Rejection	18
possible by remote controller	(During timer at ON position only)	(During timer at ON position only)		Acceptons	Acceptance	9
				Acceptance	Rejection	19

Do not select "timer operation possible by remote controller" if not using a remote controller. Operation by timer is impossible in this case.

*1. Factory setting

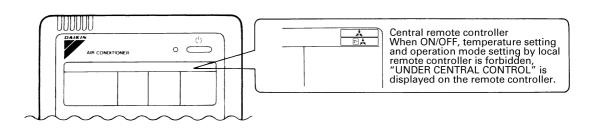

3.2 Field Setting from Outdoor Unit

3.2.1 Field Setting from Outdoor Unit

■ List of Field Setting Items

This following section indicates the list of field setting items. For the lists of dip switch contents, Setting mode 1, and Setting mode 2, refer to information in tables shown on the following page onward.

For setting items of (*1), refer to detailed information provided on page 232 onward.

	Set	ting item	Content and objective of setting	Overview of setting procedure	Reference page
		0 (1	A. Use external input to step down the upper limit of the fan (factory set to Step 8), providing low noise level. (1) Mode 1: Step 5 or lower (2) Mode 2: Step 4 or lower (3) Mode 3: Step 3 or lower	■ Use the "External control adaptor for outdoor unit". Set to "External control adaptor for outdoor unit" with No. 12 of "Setting mode 2" and select the mode with No. 25. If necessary, set the "Capacity priority setting" to ON with No. 29.	231~235
	2		B. The low noise operation aforementioned is enabled in nighttime automatic low noise operation mode. Start time: Possible to select in the range of 20:00 to 24:00 hours. End time: Possible to select in the range of 06:00 to 08:00 hours. (Use the said time as a guide since the start time and the end time are estimated according to outdoor temperatures.)	■ Make this setting while in "Setting mode 2". Select a mode with No. 22 of "Setting mode 2". Select the start time with No. 26 and the end time with No. 27. If necessary, set the "Capacity priority setting" to ON with No. 29.	231~235
ß	3	Setting of demand operation (*1)	 Used to place limits on the compressor operating frequency to control the upper limit of power consumption. (1) Mode 1 of Demand 1: 60% or less of rating (2) Mode 2 of Demand 1: 70% or less of rating 	■ For setting with the use of "external control adapter": Set the system to "External control adaptor for outdoor unit" with No. 12 of Setting mode 2" and select the mode with No. 30.	231~235
Function setting		operation (1)	rating (3) Mode 3 of Demand 1: 80% or less of rating (4) Demand 2: 40% or less of rating	■ For setting only in "Setting mode 2": Set the system to Normal demand mode with No. 32 of "Setting mode 2" and select the mode with No. 30.	231~235
Func	4	Setting of AirNet address	Used to make address setting with AirNet connected.	Set the AirNet to an intended address using binary numbers with No. 13 of "Setting mode 2".	224~227
	6	Setting of high static pressure	 Make this setting to operate a system with diffuser duct while in high static pressure mode. (Use this setting mode when shields are installed on upper floors or balconies.) * In order to mount the diffuser duct, remove the cover from the outdoor unit fan. 	■ Set No. 18 of "Setting mode 2" to ON.	224~227
	7	Prevention of minute heating operation by heating thermostat OFF unit or non-heating-operation unit	■ Make this setting to prevent a rise in room temperature due to minute heating capacity generated by heating thermostat OFF unit or non-heating-operation unit while in heating operation.	■ Set the Setting item No. 41 of "Setting mode 2" to heating thermostat OFF unit or non-heating-operation unit. (Overseas unit: Default set to "ON")	224~227
	8	Setting of BS Cool-Heat selection control time	Make this setting to shorten the BS Cool- Heat selection control time.	■ Set the Setting item No. 42 of "Setting mode 2" to "ON".	224~227

	Set	ting item	Content and objective of setting	Overview of setting procedure	Reference page
	1	Indoor unit fan forced H operation	Used to operate the indoor unit in the stopped state in forced H operation mode.	■ Set No. 5 of "Setting mode 2" to indoor unit forced fan H.	224~227
	2	Indoor unit forced operation	Used to operate the indoor unit in forced operation mode.	■ Set No. 6 of "Setting mode 2" to indoor unit forced operation mode.	224~227
	3	Change of targeted evaporating temperature (in cooling)	In cooling operation, used to change the targeted evaporating temperature for compressor capacity control.	Select high side or low side with No. 8 of "Setting mode 2".	224~227
	4	Change of targeted condensing temperature (in heating)	In heating operation, used to change the targeted condensing temperature for compressor capacity control.	Select high side or low side with No. 9 of "Setting mode 2".	224~227
	5	Setting of defrost selection	Used to change a temperature at which the defrost operation is initiated, thus making the initiation easy or hard.	Select fast side or slow side with No. 10 of "Setting mode 2".	224~227
	6	Setting of sequential startup	Used to start units not in sequence but simultaneously.	■ Set No. 11 of "Setting mode 2" to NONE.	224~227
etting	7	Emergency operation (*1)	If the compressor has a failure, used to prohibit the operation of outdoor unit(s) concerned and to conduct emergency operation of the system only with operable or outdoor unit(s).	■ Make this setting while in "Setting mode 2". For system with multiple outdoor units: Set with No. 38, 39, or 40.	239~242
Service setting	8	Additional refrigerant charging (*1)	If a necessary amount of refrigerant cannot be charged due to the stop of outdoor unit, operate the outdoor unit and then refill refrigerant.	■ Set No. 20 of "Setting mode 2" to ON and then charge refrigerant.	165~170
	9	Refrigerant recovery mode (*1)	■ Used to recover refrigerant on site. With operations of indoor and outdoor units prohibited, open the outdoor/indoor expansion valve fully while indoor/outdoor operation is prohibited and turn ON some of the solenoid valves.	■ Set No. 21 of "Setting mode 2" to ON.	237
	10	Vacuuming mode (*1)	■ Used to conduct vacuuming on site. Open the outdoor/indoor expansion valve fully while indoor/outdoor operation is prohibited and turn ON some of the solenoid valves. Use a vacuum pump to conduct vacuuming.	■ Set No. 21 of "Setting mode 2" to ON.	238
	11	ENECUT test operation	Used to forcedly turn ON the ENECUT. (Be noted this mode is not functional with the indoor unit remote controller turned ON.)	■ Set No. 24 of "Setting mode 2" to ON.	224~227
	12	Power transistor check mode	■ Used for the troubleshooting of DC compressors. Inverter waveform output makes it possible to judge whether a malfunction results from the compressor or the PC board.	■ Set No. 28 of "Setting mode 2" to ON.	224~227
	13	Setting of model with spare PC board	■ In order to replace the PC board by a spare one, be sure to make model setting.	■ For this setting, set the DS2-2, -3, and-4 switches on the PC board to the model concerned.	217~220

For setting items of (*1), refer to detailed information provided on page 223 onward.

3.2.2 Setting by Dip Switches

(1) Factory setting of initial PC board.

Do not make any changes in all factory settings of the DIP switches on the control PC board.

Status of DIP switches





Represents the factory setting positions of the switches.

Setting at replacement by spare PC board



Caution

DIP switch Setting after changing the main PC board(A1P) to spare parts PC board

After the replacement by the spare PC board, be sure to make settings shown below. When you change the main PC board(A1P) to spare parts PC board, please carry out the following setting.

Initial conditions of dip switches





DIP Switch Detail


DS No.	Item			ALCHI DE	Cont	tents				
DS1-2	Power supply	ON	2	200V clas	ss (220V))				
	specification	OFF (Factory setting of spare PC board)	4	100V clas	ss (380V))				
DS1-3	Cooling only/Heat-	ON	Cooling only setting							
Except Multiple use	pump setting	OFF (Factory setting of spare PC board)	Heat pump setting							
DS1-4	Unit allocation setting	ON	N	Make the unit. (All r	following nodels a	g settings ac re set to Of	ccording to a FF at factory	allocation of y.)		
DS2-1		OFF (Factory		Multiple use Single use (Main)	Single use (sab)	Domestic Japan	Overseas General	Europe		
		setting of spare		DS1-4	DS1-3	OFF	OFF	ON		
		PC board)		DS2-1	DS1-4	OFF	ON	OFF		
DS2-2	Model setting									
DS2-3		Make the following settings according to models of outdoor units. (All models are set to OFF at factory.) * Refer to following pages for setting detail.								
DS2-4										


* For detail of the setting procedure, refer to information on the following pages.
While the PC board assembly is replaced, the "U3" malfunction (Test run not carried out yet) code is displayed. In this case, carry out the test run again.


If the "PJ", "UA", or "U7" malfunction code is displayed, recheck for DIP switch settings.

After the completion of rechecking for the settings, turn ON the power supply again.

"Detail of DS1-1~4, DS2-1~4 setting"

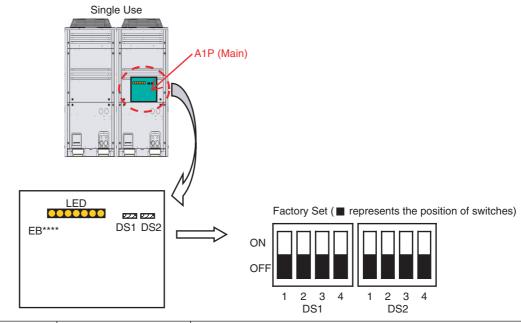

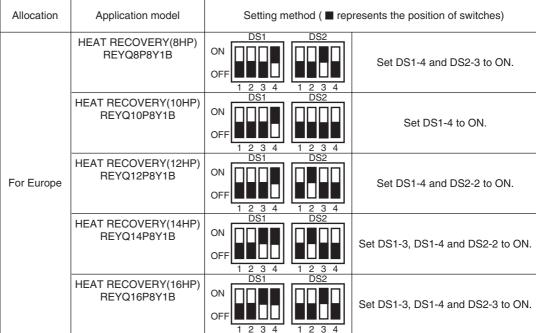

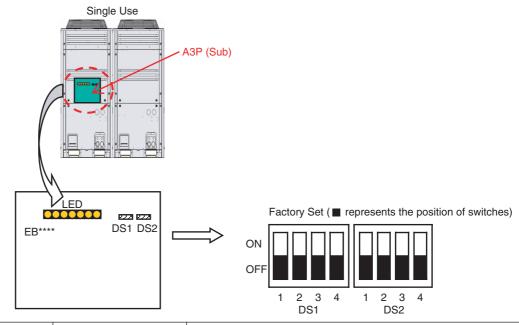

Allocation	Application model	Setting method (■ rep	resents the position of switches)
	HEAT RECOVERY(8HP) REYQ8PY1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-3 and DS2-2 to ON.
	HEAT RECOVERY(10HP) REYQ10PY1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-3 and DS2-2 to ON.
For Europe	HEAT RECOVERY(12HP) REYQ12PY1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-3 and DS2-2 to ON.
	HEAT RECOVERY(14HP) REYQ14PY1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-3, DS2-1 and DS2-4 to ON.
	HEAT RECOVERY(16HP) REYQ16PY1B	ON OFF 1 2 3 4 1 2 3 4	Set DS1-3, DS2-1 and DS2-3 to ON.

Multiple Type

Allocation	Application model	Setting method (■ repr	resents the position of switches)
	HEAT RECOVERY(8HP) REMQ8P8Y1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-4, DS2-2 and DS2-3 to ON.
	HEAT RECOVERY(10HP) REMQ10P8Y1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-4 and DS2-4 to ON.
For Europe	HEAT RECOVERY(12HP) REMQ12P8Y1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-4, DS2-2 and DS2-4 to ON.
	HEAT RECOVERY(14HP) REMQ14P8Y1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-4, DS2-3 and DS2-4 to ON.
	HEAT RECOVERY(16HP) REMQ16P8Y1B	ON DS1 DS2 OFF 1 2 3 4 1 2 3 4	Set DS1-4, DS2-2, DS2-3 and DS2-4 to ON.

3.2.3 Setting by Push Button Switches

The following settings are made by push button switches on PC board.

In case of multi-outdoor unit system, various items should be set with the master unit. (Setting with the slave unit is disabled.)


The master unit and slave unit can be discriminated with the LED display as shown below.

LED display

		MODE	TEST	CO	OL/HEAT se	elect	Low	Demand	Multi;
		H1P	H2P	IND H3P	MASTER H4P	SLAVE H5P	noise H6P	H7P	H8P
Single-outdoor-unit system		•	•	0	•	•	•	•	•
Outdoor	Master	•	•	0	•	•	•	•	0
Outdoor- multi system	Slave 1	•	•	•	•	•	•	•	•
System	Slave 2	•	•	•	•	•	•	•	•

(Factory setting)

Pushbutton switches

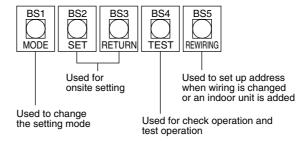

There are the following three setting modes.

① Setting mode 1 (H1P off)

Initial status (when normal): Used to select the cool/heat setting. Also indicates during "abnormal", "low noise control" and "demand control".


② Setting mode 2 (H1P on)

Used to modify the operating status and to set program addresses, etc. Usually used in servicing the system.


3 Monitor mode (H1P blinks)

Used to check the program made in Setting mode 2.

■ Mode changing procedure 1

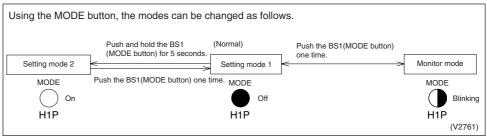

■ Mode changing procedure 2

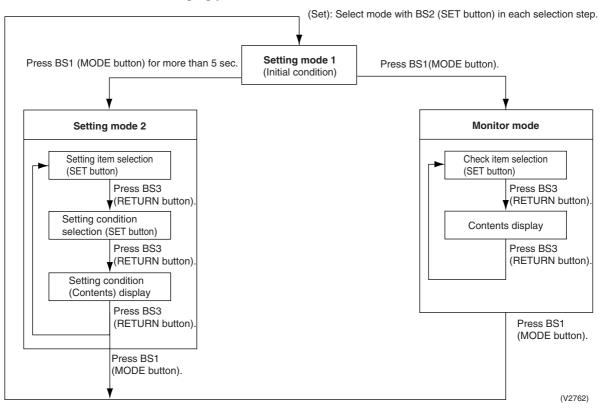


a. "Setting mode 1"

This mode is used to set and check the following items.

Check items The following items can be checked.

- (1) Current operating conditions (Normal / Abnormal / In check operation)
- (2) Low noise operating conditions (In normal operation / In low noise operation)
- (3) Demand operating conditions (In normal operation / In demand operation)

Procedure for checking check items

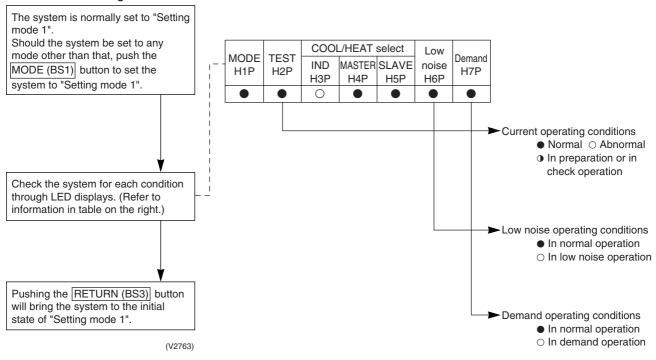

b. "Setting mode 2"

Push and hold the MODE (BS1) button for 5 seconds and set to "Setting mode 2".

<Selection of setting items>

Push the SET (BS2) button and set the LED display to a setting item shown in the table on the right.

Push the RETURN (BS3) button and decide the item. (The present setting condition is blinked.)

<Selection of setting conditions>

Push the SET (BS2) button and set to the setting condition you want.

Push the RETURN (BS3) button and decide the condition.

Push the RETURN (BS3) button and set to the initial status of "Setting mode 2".

* If you become unsure of how to proceed, push the MODE (BS1) button and return to setting mode 1.

(V2764)

No.	Setting item	Description
0	Digital pressure gauge kit display	Used to make setting of contents to display on the digital pressure gauges (e.g. pressure sensors and temperature sensors)
1	Cool/heat unified address	Sets address for cool/heat unified operation.
2	Low noise/demand address	Address for low noise/demand operation
3	Test operation settings	Used to conduct test operation without making changes to the PC board and replacing the refrigerant, after the completion of maintenance.
5	Indoor unit forced fan H	Allows forced operation of indoor unit fan while unit is stopped. (H tap)
6	Indoor unit forced operation	Allows forced operation of indoor unit. (Forced thermostat ON)
8	Te setting	Target evaporation temperature for cooling
9	Tc setting	Target condensation temperature for heating
10	Defrost changeover setting	Changes the temperature condition for defrost and sets to quick defrost or slow defrost.
11	Sequential operation setting	Sets sequential operation (Factory set to ON)
12	External low noise setting / Demand setting	Reception of external low noise or demand signal
13	AIRNET address	Set address for AIRNET.
18	High static pressure setting	Make this setting in the case of operating in high static pressure mode with diffuser duct mounted. (In order to mount the diffuser duct, remove the cover from the outdoor unit fan.)
20	Additional refrigerant charge operation setting	Carries out additional refrigerant charge operation.
21	Refrigerant recovery/ vacuuming mode setting	Sets to refrigerant recovery or vacuuming mode.
22	Night-time low noise setting	Sets automatic nighttime low noise operation in a simple way. The operating time is based on "Starting set" and "Ending set".
24	ENECUT test operation	Used to forcedly turn ON the ENECUT. (Be noted that the ENECUT is only functional with outdoor unit in the stopped state - Japanese domestic model only.)
25	Setting of external low noise level	Sets low noise level when the low noise signal is input from outside.
26	Night-time low noise operation start setting	Sets starting time of nighttime low noise operation. (Night-time low noise setting is also required.)
27	Night-time low noise operation end setting	Sets ending time of nighttime low noise operation. (Night-time low noise setting is also required.)
28	Power transistor check mode *Check after disconnection of compressor wires	Used for trouble diagnosis of DC compressor. Since the waveform of inverter is output without wiring to the compressor, it is convenient to probe whether the trouble comes from the compressor or PC board.
29	Capacity precedence setting	If the capacity control is required, the low noise control is automatically released by this setting during carrying out low noise operation and nighttime low noise operation.
30	Demand setting 1	Changes target value of power consumption when demand control 1 is input.
32	Normal demand setting	Normally enables demand control 1 without external input. (Effective to prevent a problem that circuit breaker of small capacity is shut down due to large load.)

No.	Setting item	Description
38	Emergency operation (Setting for the unit 1 operation prohibition in multi- outdoor-unit system)	
39	Emergency operation (Setting for the unit 2 operation prohibition in multi- outdoor-unit system)	Used to temporarily prohibit the applicable outdoor unit from operating should there be any faulty part in multi-outdoor-unit system. Since the comfortable environment is extremely impaired, prompt replacement of the part is required.
40	Emergency operation (Setting for the unit 3 operation prohibition in multi- outdoor-unit system)	
41	Prevention of minute heating operation by heating thermostat OFF unit or non-heating-operation unit	Make this setting to shorten the BS Cool-Heat selection control time. However, make the setting, pay careful attention to the following: If the refrigerant piping between each BS unit connected to outdoor unit and indoor unit is not more than 10 m in length, this setting will be enabled. If the refrigerant piping between BS unit and indoor unit is long in length, refrigerant passing sounds may become louder at the time of BS Cool-Heat selection. This setting shortens the Cool-Heat selection time of all BS units provided in the same refrigerant system.
42	Setting of BS Cool- Heat selection control time	Make this setting to prevent a rise in room temperature due to minute heating capacity generated by heating thermostat OFF unit or non-heating-operation unit while in heating operation. Used to prevent minute heating operation by setting the BS unit to COOL while in heating thermostat OFF or non-heating-operation mode. With the BS unit set to default, enabling the minute heating prevention setting of outdoor unit will enable the minute heating prevention setting of all BS units connected to the outdoor unit. (BS unit default setting) To make this setting by BS unit, make a change to the minute heating prevention setting of the BS unit. (In this case, enable the outdoor unit setting.)
51	Set-up of master and slave units for multi outdoor units	Set up master and slave units for multi-connection outdoor units. After setting up, press the BS5 (REWIRING) button for 5 seconds or more.

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

		1	Setting	g item dis			1	1						
No.	Setting item	MODE H1P	TEST	IND	/H selection	on Slave	Low noise	Demand	Setting c	ondi	tion display			
	Coung tom	Н1Р	H1P H2P	H3P	H4P	H5P	H6P	H7P				:	k Fact	ory set
									Address	0	$\bigcirc \bullet \bullet$	•	•	• *
^	Digital pressure								Binary number	1	$\bigcirc \bullet \bullet$	•		C
0	Digital pressure gauge kit display	0			•	•	•	_	(4 digits)		~			
										15	$\circ \bullet \bullet$	00) (\circ
									Address	0				*
	Cool / Heat		_	_	_	_	_		Binary number	1				
1	Unified address	0	•	•		•	•	0	(6 digits)		~			<i></i>
										31	$\circ \bullet \circ$	00) (\circ
									Address	0	$\circ \bullet \bullet$	• (• *
0	Low noise/demand	0							Binary number	1	$\bigcirc \bullet \bullet$	• •		\circ
2	address						0		(6 digits)		~			
										31	$\bigcirc \bullet \bigcirc$	00) (\sim
3	Test operation	0					0	0	Test operation: OFF		$\bigcirc \bullet \bullet$	•	0	*
3	rest operation								Test operation: ON		$\bigcirc \bullet \bullet$	•		0
F	Indoor forced for II								Normal operation		$\circ \bullet \bullet$	• •		O *
5	Indoor forced fan H	0				0		0	Indoor forced fan H		$\bigcirc \bullet \bullet$	•		
^	Indoor forced								Normal operation		$\circ \bullet \bullet$	• •		> *
6	operation	0				0	0		Indoor forced operation		$\bigcirc \bullet \bullet$	•		
									Low (Level L)		$\bigcirc \bullet \bullet$	• •		
									Normal (Level M)		$\bigcirc \bullet \bullet$	•		*
									High① \		$\bigcirc \bullet \bullet$	•		0
8	Te setting	0	•	•	0	•		•	High@		$\bigcirc \bullet \bullet$	• () • (
									High③ (Level H)		$\circ \bullet \bullet$) • (0
									High4		$\circ \bullet \bullet$	• 0	0	
									High ₅			•		$\tilde{\mathcal{O}}$
									Low		$\bigcirc \bullet \bullet$	• (O
9	Tc setting	0	•	•	0	•		0	Normal (factory setting)		$\circ \bullet \bullet$		0	*
									High		$\circ \bullet \bullet$	• 0) • (
									Slow defrost		$\bigcirc \bullet \bullet$	• (0
10	Defrost changeover setting	0	•	•	0	•	0	•	Normal (factory setting)		$\bigcirc \bullet \bullet$	•		*
									Quick defrost		$\bigcirc \bullet \bullet$		_	_
	Sequential operation								OFF		$\bigcirc \bullet \bullet$	• •		 O
11	setting	0	•	•	0	•	0	0	ON		$\circ \bullet \bullet$	• •		*
									External low noise/demand:		0 • •	• (O *
12	External low noise/ demand setting	0	•	•	0	0	•	•	NO External low noise/demand:					_
	_								YES TO					
									Address	0	$\bigcirc \bullet \bullet$	•	•	• *
13	Airnet address	0	•	•	0	0	•	0	Binary number	1	$\bigcirc \bullet \bullet$	•		\supset
									(6 digits)		~			
										63	000	<u> </u>		
40	High static pressure								High static pressure setting: OFF		$\bigcirc \bullet \bullet$	•	• (> *
18	setting	0	•	0	•	•	0	_	High static pressure setting: ON		$\bigcirc \bullet \bullet$	• •		•
	Additional refrigerant								Refrigerant charging: OFF					
20	charging operation	0	•	0	•	0	•	•					_) *
	setting						-		Refrigerant charging: ON					
21	Refrigerant recovery/vacuuming	0	•	0	•	0	•	0	Refrigerant recovery / vacuuming: OFF				, – () *
	mode setting								Refrigerant recovery / vacuuming: ON				<u>, () (</u>	
									OFF) 😈 (• *
22	Night-time low noise setting	0	•	0	•	0	0	•	Level 1 (outdoor fan with 6 step or lower)					_
									Level 2 (outdoor fan with 5 step or lower)		$\bigcirc \bullet \bullet$		0 (_
					1	1			Level 3 (outdoor fan with 4 step or lower)		\bigcirc \bigcirc \bigcirc			\mathcal{C}

			Settin	g item dis	play								
No.	Setting item	MODE	TEST H2P		C/H selection		Low	Demand	Setting condition display				
	Setting item	H1P	H2P	IND H3P	Master H4P	Slave H5P	noise H6P	H7P			*	actor	y set
24	ENECUT test operation (Domestic	0		0	0				ENECUT output OFF	$\bigcirc \bullet \bullet \bullet$			* (
24	Japan only)								ENECUT output forced ON	$\bigcirc \bullet \bullet \bullet$		\bigcirc)
									Level 1 (outdoor fan with 6 step or lower)	$\bigcirc \bullet \bullet \bullet$)
25	Low noise setting	0	•	0	0	•	•	0	Level 2 (outdoor fan with 5 step or lower)	$\bigcirc \bullet \bullet \bullet$		\bigcirc $lacktriangle$	*
									Level 3 (outdoor fan with 4 step or lower)	$\bigcirc \bullet \bullet \bullet$		• •)
	Night-time low noise								About 20:00	$\bigcirc \bullet \bullet \bullet$)
26	operation start setting	0	•	0	0	•	0	•	About 22:00 (factory setting)	$\bigcirc \bullet \bullet \bullet$			*
	cotting								About 24:00	$\bigcirc \bullet \bullet \bullet$		• •)
	Night-time low noise								About 6:00	$\bigcirc \bullet \bullet \bullet$)
27	operation end setting	0	•	0	0	•	0	0	About 7:00	$\bigcirc \bullet \bullet \bullet$		\bigcirc $lacktriangle$,
	cotting								About 8:00 (factory setting)	$\bigcirc \bullet \bullet \bullet$		• •	*
28	Power transistor	0		0	0	0			OFF	$\bigcirc \bullet \bullet \bullet$) *
	check mode								ON	$\bigcirc \bullet \bullet \bullet$		\bigcirc $lacktriangle$)
29	Capacity	0		0	0	0		0	OFF	$\bigcirc \bullet \bullet \bullet$) *
	precedence setting								ON	$\bigcirc \bullet \bullet \bullet$		\bigcirc $lacktriangle$)
									60 % demand	$\bigcirc \bullet \bullet \bullet$)
30	Demand setting 1	0	•	0	0	0	0	•	70 % demand	$\bigcirc \bullet \bullet \bullet$		\bigcirc	*
									80 % demand	$\bigcirc \bullet \bullet \bullet$		• •)
	No I do								OFF	$\bigcirc \bullet \bullet \bullet$) *
32	Normal demand setting	0	0	•	•	•	•	•	Demand 1	$\bigcirc \bullet \bullet \bullet$		\bigcirc)
									Demand 2	$\bigcirc \bullet \bullet \bullet$		• •)
	Emergency								OFF	$\circ \bullet \bullet \bullet$) *
38	operation (Master unit is	0	0	•	•	0	0	•					
	inhibited to operate.)								Master unit operation: Inhibited	$\bigcirc \bullet \bullet \bullet$		\bigcirc)
												<u> </u>	
	Emergency operation								OFF	$\circ \bullet \bullet \bullet$) *
39	(Slave unit 1 is inhibited to operate.)	0	0	•		0	0	0	Slave unit 1 operation: Inhibited			\circ	
	т								Slave unit i operation. Initibited				
	Emergency								OFF	$\bigcirc \bullet \bullet \bullet$) *
40	operation (Slave unit 2 is	0	0	•	0	•	•	•					
	inhibited to operate.)								Slave unit 2 operation: Inhibited	\bigcirc \bigcirc \bigcirc \bigcirc		\bigcirc $lacktriangle$)
	Prevention of minute								OFF	$\bigcirc \bullet \bullet \bullet$			
	heating operation by heating thermostat			_					Non-heating-operation unit)
41	OFF unit or non- heating-operation	0	0		0	•	•	0	Heating thermostat OFF unit				,
	unit								Non-heating-operation + Thermostat OFF unit) *
	Setting of BS Cool-								6 min.				*
42	Heat selection control time	0	0		0		0		4 min.)
									Automatic judgment				*
_	Master-slave set-up								Master)
51	for multi outdoor units	0	0	0			0	0	Slave 1) ()	,
									Slave 2			0.0)

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

c. Monitor mode

To enter the monitor mode, push the MODE (BS1) button when in "Setting mode 1".

<Selection of setting item>

Push the SET (BS2) button and set the LED display to a setting item.

<Confirmation on setting contents>

Push the RETURN (BS3) button to display different data of set items.

Push the RETURN (BS3) button and switches to the initial status of "Monitor mode".

^{*} Push the MODE (BS1) button and returns to "Setting mode 1".

	0 111 11			LE	D disp	lay			Data diaminu	
No.	Setting item	H1P	H2P	НЗР	H4P	H5P	H6P	H7P	Data display	
0	Various settings	•	•	•	•	•	•	•	Lower 4 digits	
1	C/H unified address	•	•	•	•	•	•	0		
2	Low noise/demand address	•	•	•	•	•	0	•		
3	Not used	•	•	•	•	•	0	0		
4	Airnet address	•	•	•	•	0	•	•		
5	Number of connected indoor units *1	•	•	•	•	0	•	0	Lower 6 digits	
6	Number of connected BS units *2	•	•	•	•	0	0	•		
7	Number of connected zone units (Fixed to "0")	•	•	•	•	0	0	0		
8	Number of outdoor units *3	•	•	•	0	•	•	•		
9	Number of BS units *4	•	•	•	0	•	•	0	Lower 4 digits: upper	
10	Number of BS units *4	•	•	•	0	•	0	•	Lower 4 digits: lower	
11	Number of zone units	•	•	•	0	•	0	0	Lower 6 digits	
12	Number of terminal units *5	•	•	•	0	0	•	•	Lower 4 digits: upper	
13	Number of terminal units *5	•	•	•	0	0	•	0	Lower 4 digits: lower	
14	Contents of malfunction (the latest)	•	•	•	0	0	0	•	Malfunction code table	
15	Contents of malfunction (1 cycle before)	•	•	•	0	0	0	0	Refer page 262.	
16	Contents of malfunction (2 cycle before)	•	•	0	•	•	•	•		
20	Contents of retry (the latest)	•	•	0	•	0	•	•		
21	Contents of retry (1 cycle before)	•	•	0	•	0	•	0		
22	Contents of retry (2 cycle before)	•	•	0	•	0	0	•		
25	Number of multi connection outdoor units	•	•	0	0	•	•	0	Lower 6 digits	

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

(V2765)

- *1: Number of connected indoor units
 - Used to make setting of the number of indoor units connected to an outdoor unit.
- *2: Number of connected BS units
 Used to make setting of the number of BS units connected to an outdoor unit.
- *3: Number of outdoor units

Used to make setting of the number of outdoor units connected to DIII-NET that is one of the communication lines.

- *4: Number of BS units
 - Used to make setting of the number of BS units connected to DIII-NET that is one of the communication lines.
- *5: Number of terminal units


Used to make setting of the number of indoor units connected to DIII-NET that is one of the communication lines.

(Only available for VRV indoor units)

0 111 11 0 01 1 1 1		
Setting item 0 Display contents	of "Number of units	tor various settings"


EMG operation / backup operation	ON	•	•	•	0	•	•	•
setting	OFF	•	•	•	•	•	•	•
Defrost select setting	Short	•	•	•	•	0	•	•
	Medium	•	•	•	•	•	•	•
	Long	•	•	•	•	•	•	•
Te setting	L	•	•	•	•	•	•	•
	М	•	•	•	•	•	•	•
	H ①~⑤	•	•	•	•	•	0	•
Tc setting	L	•	•	•	•	•	•	•
	М	•	•	•	•	•	•	•
	Н	•	•	•	•	•	•	0

★ Data such as addresses and number of units is expressed as binary numbers; the two ways of expressing are as follows:

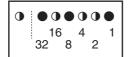

The No. 1 cool/heat unified address is expressed as a binary number consisting of the lower 6 digits. (0 - 63)

In ① the address is 010110 (binary number), which translates to 16 + 4 + 2 = 22 (base 10 number). In other words, the address is 22.

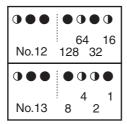

The number of terminal blocks for No. 12 and 13 is expressed as an 8-digit binary number, which is the combination of four upper, and four lower digits for No. 12 and 13 respectively. (0 - 128) In ② the address for No. 12 is 0101, the address for No. 13 is 0110, and the combination of the two is 01010110 (binary number), which translates to 64 + 16 + 4 + 2 = 86 (base 10 number). In other words, the number of terminal block is 86.

★ See the preceding page for a list of data, etc. for No. 0 - 25.

3.2.4 Cool / Heat Mode Switching

Set Cool/Heat Separately for Each BS Unit by Cool/Heat Selector.

Set remote controller change over switch (SS1, SS2) as following:


• When using COOL/HEAT selector, turn this switch to the BS side.




When using cool/heat selector, connect to the terminal A, B and C on the EC of the electric parts box.

EXAMPLE OF TRANSMISSION LINE CONNECTION

Example of connecting transmission wiring.
 Connect the transmission wirings as shown in the Fig. 1.

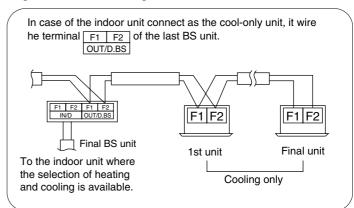

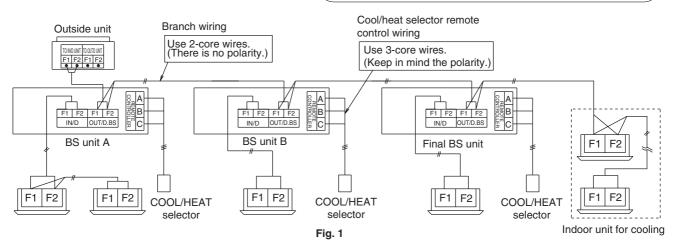

3.2.5 Setting of Low Noise Operation and Demand Operation

Setting of Low Noise Operation

By connecting the external contact input to the low noise input of the outdoor unit external control adaptor (optional), you can lower operating noise.

Setting	Content
Level 1	Set the outdoor unit fan to Step 5 or lower.
Level 2	Set the outdoor unit fan to Step 4 or lower.
Level 3	Set the outdoor unit fan to Step 3 or lower.


A. When the low noise operation is carried out by external instructions (with the use of the external control adaptor for outdoor unit)

- Connect the external adaptor for the outdoor unit, and then connect the external input wiring to the low-noise operation input terminal on the terminal block (X1M). (Refer to the figure shown below.)
- 2. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/demand operation) to "YES".
- 3. If necessary, while in "Setting mode 2", select the setting condition (i.e., Level 1", "Level 2", or "Level 3") for set item No. 25 (Setting of external low noise level).
- 4. If necessary, while in "Setting mode 2", set the setting condition for the set item No. 29 (Setting of capacity precedence) to "ON".
 (If the condition is set to "ON", when the air-conditioning load reaches a high level, the low noise operation command will be ignored to put the system into normal operation mode.)

B. When the low noise operation is carried out automatically at night (The external control adaptor for outdoor unit is not required)


- 1. While in "Setting mode 2", select the setting condition (i.e., "Level 1", "Level 2", or "Level 3") for set item No. 22 (Setting of nighttime low noise level).
- If necessary, while in "Setting mode 2", select the setting condition (i.e., "20:00", "22:00", or "24:00") for set item No. 26 (Setting of start time of nighttime low noise operation).
 (Use the start time as a guide since it is estimated according to outdoor temperatures.)
- If necessary, while in "Setting mode 2", select the setting condition (i.e., "06:00", "07:00", or "08:00") for set item No. 27 (Setting of end time of nighttime low noise operation).
 (Use the end time as a guide since it is estimated according to outdoor temperatures.)
- 4. If necessary, while in "Setting mode 2", set the setting condition for set item No. 29 (Setting of capacity precedence) to "ON".
 (If the condition is set to "ON", when the air-conditioning load reaches a high level, the system will be put into normal operation mode even during nighttime.)

If carrying out demand or low-noise input, connect the terminals of the external control adaptor for outdoor unit as shown below.

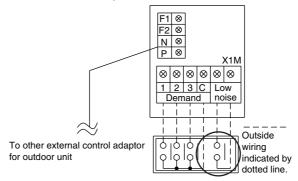

Host computer monitor panel or demand controller

Image of operation in the case of A

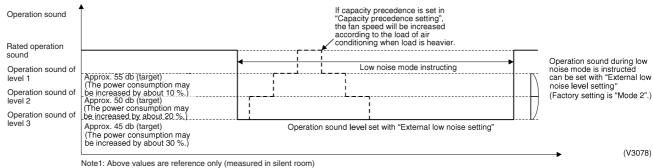

Note2: Above values are for 1 module only

Image of operation in the case of B


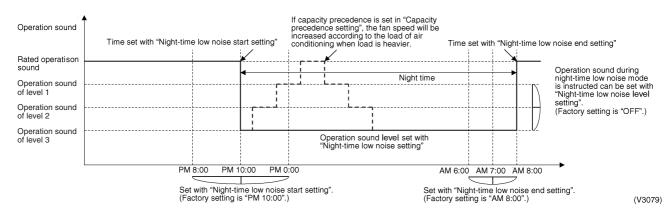


Image of operation in the case of A and B

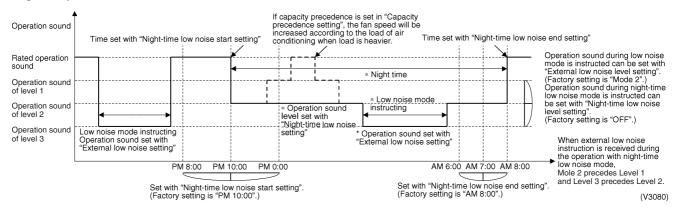

Setting of Demand Operation

By connecting the external contact input to the demand input of the outdoor unit external control adaptor (optional), the power consumption of unit operation can be saved suppressing the compressor operating condition.

	Description	of setting	Setting procedure						
Setting item	Condition	Description	External control adaptor	Outdoor unit PC board					
	Level 1 Operate with power of approx. 60% or less of the rating.		Short-circuit	Set the setting item No. 32 to "Demand 1" and the setting item No. 30 to "Level 1".					
Demand 1 Lo	Level 2	Operate with power of approx. 70% or less of the rating.	between "1" and "C" of the terminal block	Set the setting item No. 32 to "Demand 1" and the setting item No. 30 to "Level 2".					
	Level 3	Operate with power of approx. 80% or less of the rating.	(TeS1).	Set the setting item No. 32 to "Demand1" and the setting item No. 30 to "Level 3".					
Demand 2	_	Operate with power of approx. 40% or less of the rating.	Short-circuit between "2" and "C".	Set the setting item No. 32 to "Demand 2".					
Demand 3	_	Operate with forced thermostat OFF	Short-circuit between "3" and "C"	-					


A. When the demand operation is carried out by external instructions (with the use of the external control adaptor for outdoor unit).

- Connect the external adaptor of the outdoor unit, and then connect the external input wiring to the low-noise operation input terminal on the terminal block (X1M). (Refer to the figure shown below.)
- 2. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/demand operation) to "YES".
- 3. If necessary, while in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.

B. When the Normal demand operation is carried out. (Use of the external control adapter for outdoor unit is not required.)

- While in "Setting mode 2", make setting of the set item No. 32 (Setting of constant demand) to "ON"
- 2. While in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.

If carrying out demand or low-noise input, connect the terminals of the external control adaptor for outdoor unit as shown below.

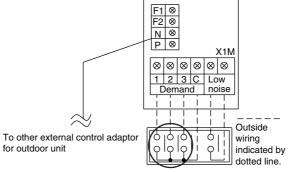

Host computer monitor panel or demand controller

Image of operation in the case of A

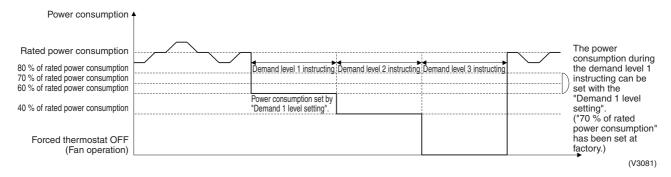


Image of operation in the case of B


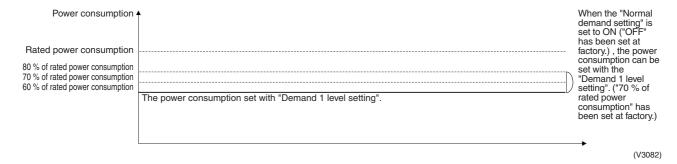


Image of operation in the case of A and B

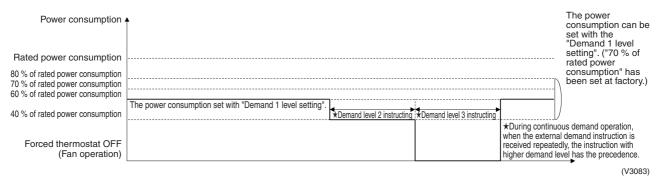

Detailed Setting Procedure of Low Noise Operation and Demand Control

1. Setting mode 1 (H1P off)

 \odot In setting mode 2, push the BS1 (MODE button) one time. \rightarrow Setting mode 2 is entered and H1P lights.

During the setting mode 1 is displayed, "In low noise operation" and "In demand control" are displayed.

2. Setting mode 2 (H1P on)

- \odot In setting 1, push and hold the BS1 (MODE button) for more than 5 seconds. \rightarrow Setting mode 2 is entered and H1P lights.
- ② Push the BS2 (SET button) several times and match the LED display with the Setting No. vou want.
- ③ Push the BS3 (RETURN button) one time, and the present setting content is displayed. → Push the BS2 (SET button) several times and match the LED display with the setting content (as shown below) you want.
- 9 Push the BS3 (RETURN button) two times. \rightarrow Returns to 0.
- $\ \ \$ Push the BS1 (MODE button) one time. $\ \rightarrow$ Returns to the setting mode 1 and turns H1P off.

O: ON ●: OFF •: Blink

		①							2								3																
Setting No.	Setting contents		S	Setting No. indication Setting No. indication Setting contents					Setting contents indication (Initial setting)																								
		H1P	H2P	НЗР	H4P	H5P	H6P	H7P	H1P	H2P	НЗР	H4P	H5P	H6P	H7P		H1P	H2P	НЗР	H4P	H5P	H6P	H7P										
12	External low noise / Demand setting	0	•	•	•	•	•	• • •	0	•	•	0	0	•	•	NO (Factory setting)	0	•	•	•	•	•	•										
	Setting														YES	0	•	•	•	•	•	•											
22	Night-time low noise setting								0	•	0	•	0	0	•	OFF (Factory setting)	0	•	•	•	•	•	•										
																Mode 1	0	•	•	•	•	•	•										
																Mode 2	0	•	•	•	•	•	•										
																Mode 3	0	•	•	•	•	•	•										
25	External								0	•	0	0	•	•	0	Mode 1	0	•	•	•	•	•	•										
	low noise setting															Mode 2 (Factory setting)	0	•	•	•	•	•	•										
																Mode 3	0	•	•	•	•	•	•										
26	Night-time								0	•	0	0	•	0	•	PM 8:00	0	•	•	•	•	•	•										
	low noise start setting								Ш							PM 10:00 (Factory setting)	0	•	•	•	•	•	•										
																PM 0:00	0	•	•	•	•	•	•										
27	Night-time													0	•	0	0	•	0	0	AM 6:00	0	•	•	•	•	•	•					
	low noise end setting															AM 7:00	0	•	•	•	•	•	•										
	ond soung																									AM 8:00 (Factory setting)	0	•	•	•	•	•	•
29	Capacity precedence setting																	0	•	0	0	0	•	0	Low noise precedence (Factory setting)	0	•	•	•	•	•	•	
																Capacity precedence	0	•	•	•	•	•	•										
30	Demand setting 1								0	•	0	0 0	0	0	•	60 % of rated power consumption	0	•	•	•	•	•	•										
																						70 % of rated power consumption (Factory setting)	0	•	•	•	•	•	•				
																80 % of rated power consumption	0	•	•	•	•	•	•										
32	Normal demand setting								0	•	•	•	•	•	•	OFF (Factory setting)	0	•	•	•	•	•	•										
																ON	0	•	•	•	•	•	•										
			Settin	g mod	e indi	cation	sectio	n		Settin	g No.	indica	tion se	ection				Set co	ontent	s indic	ation s	ection											

3.2.6 Setting of Refrigerant Recovery Mode

When carrying out the refrigerant collection on site, fully open the respective expansion valve of indoor and outdoor units.

All indoor and outdoor unit's operation are prohibited.

[Operation procedure]

- ① In setting mode 2 with units in stop mode, set "Refrigerant Recovery / Vacuuming mode" to ON. The respective expansion valve of indoor and outdoor units are fully opened. (H2P turns to display "TEST OPERATION" (blinks), "TEST OPERATION" and "UNDER CENTRALIZED CONTROL" are displayed on the remote controller, and the all indoor / outdoor unit operation is prohibited.
 - After setting, do not cancel "Setting Mode 2" until completion of refrigerant recovery operation.
- ② Collect the refrigerant using a refrigerant recovery unit. (See the instruction attached to the refrigerant recovery unit for more detal.)
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

3.2.7 Setting of Vacuuming Mode

In order to perform vacuuming operation at site, fully open the expansion valves of indoor and outdoor units and turn on some solenoid valves.

[Operating procedure]


- With Setting Mode 2 while the unit stops, set "Refrigerant recovery / Vacuuming mode" to ON. The expansion valves of indoor and outdoor units fully open and some of solenoid valves open.
 - (H2P blinks to indicate the test operation, and the remote controller displays "Test Operation" and "Under centralized control", thus prohibiting operation.)

 After setting, do not cancel "Setting Mode 2" until completion of Vacuuming operation.
- ② Use the vacuum pump to perform vacuuming operation.
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

3.2.8 Check Operation Detail

CHECK OPERATION FUNCTION

(Press the MODE button BS1 once and set to SETTING MODE 1 (H1P: OFF))

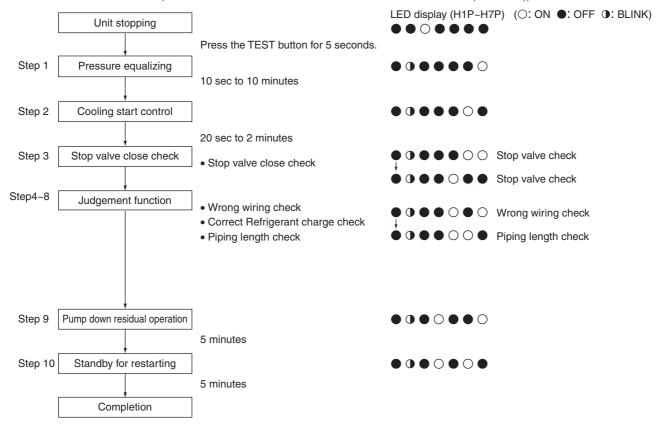

3.2.9 Emergency Operation

If any of the compressors goes wrong, disable the relevant compressor or the relevant outdoor unit from operating, and then conduct emergency operation only with operational compressors or outdoor units.

There are two ways of conducting the Emergency operation : ① with remote controller reset and ② by setting outdoor unit PC board.

Operating method Applicable model	Emergency operation with remote controller reset (Auto backup operation)	(2) Emergency operation with outdoor unit PC board setting (Manual backup operation)
REYQ8 to 16PY1	-	Backup operation by the compressor
REYQ18 to 48PY1	Backup operation by the indoor unit	Backup operation by the outdoor unit

(1) Emergency operation with remote controller reset

On the multi outdoor unit system, if any of the outdoor unit line causes a malfunction (in this case, the system will stop and the relevant malfunction code will be displayed on the indoor remote controller), disable only the relevant outdoor unit from operating for a 8 hours using the indoor remote controller, and then conduct emergency operation with operational outdoor units.

[Emergency operation method]

• Reset the remote controller (i.e., press the RUN/STOP button on the remote controller for 4 seconds or more) when the outdoor unit stops because of malfunction state.

[Details of operation]

- Automatically disable the defective outdoor unit from operating, and then operate other outdoor units.
- The following section shows malfunction codes on which this emergency operation is possible.

E3, E4, E5, E7 (*1) F3 H7 (*1), H9 J2, J3, J5, J6, J7, J9, JA, JC L1, L4, L5, L8, L9, LC U2, UJ *1: When malfunction codes E7 and H7 are shown, the possibility of emergency operation is decided as follows.

While in heating or cooling-heating concurrent operation

- One out of three connected outdoor units malfunctions. → Emergency operation is possible.
- Two out of three connected outdoor units malfunction. → Emergency operation is not possible.
- One out of two connected outdoor units malfunctions. → Emergency operation is not possible.

(2) Emergency operation by setting outdoor unit PC board

In malfunction stop state of the outdoor unit due to defective compressor, by setting the relevant compressor or relevant outdoor unit to "Disabling operation setting", the emergency operation is conducted with operational compressors or outdoor units.

<REYQ8 to 16PY1>

Disabling the compressor 1 (on the right side) from operating:
 Set No. 38 of setting mode 2 to "Disable-compressor-1 operation".

LED display (○: ON, ♠: OFF, ♠: Blink)

H1P-------H7P

(1) Press and hold the PAGE button (BS1) for 5 sec. or more.

(2) Press the OPERATE button (BS2) 38 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

Disabling the compressor 2 (on the left side) from operating:
 Set No. 39 of setting mode 2 to "Disable-compressor-2 operation".

LED display (○: ON, ♠: OFF, ♠: Blink)

(Step) H1P-------H7P

(1) Press the PAGE button (BS1) for 5 seconds or more.

(2) Press the OPERATE button (BS2) 39 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

<REYQ18 to 48PY1>

Make disable-operation setting by each outdoor unit.

(6) Press the PAGE button (BS1) once.

Make the following setting on the outdoor unit 1. (If this setting is made on an outdoor unit other than the outdoor unit 2, the setting will become invalid.)

* It is possible to tell the outdoor units 1, 2, and 3 according the LED displays shown below.

 $\bullet \bullet \circ \bullet \bullet \bullet \bullet$

Outdoor unit 3: ● ● ● ● ● ● ● (Factory setting)

O Disabling the outdoor unit 1 to operate:

Set No. 38 of setting mode 2 to "Disable outdoor unit 1 operation".

LED display (○: ON, ●: OFF, ●: Blink)

(Step)

(1) Press and hold the PAGE button (BS1) for 5 sec. or more.

(2) Press the OPERATE button (BS2) 38 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

O Disabling the outdoor unit 2 from operating:

Set No. 39 of setting mode 2 to "Disable-outdoor-unit-2 operation".

LED display (○: ON, ●: OFF, ●: Blink)

(Step)

(1) Press the PAGE button (BS1) for 5 seconds or more.

(2) Press the OPERATE button (BS2) 39 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

O Disabling the outdoor unit 3 from operating:

Set No. 40 of setting mode 2 to "Disable-outdoor-unit-1 operation".

(Step)	LED display (○: ON, ●: OFF, ①: Blink) H1PH7P
(1) Press the PAGE button (BS1) for 5 seconds or more.	$\circ \bullet \bullet \bullet \bullet \bullet$
(2) Press the OPERATE button (BS2) 40 times.	$\circ \circ \bullet \circ \bullet \bullet \bullet$
(3) Press the CHECK button (BS3) once.	$\bigcirc \bullet \bullet \bullet \bullet \bullet \bullet \bullet$ (Factory setting)
(4) Press the OPERATE button (BS2) once.	$\circ \bullet \bullet \bullet \bullet \circ \bullet$
(5) Press the CHECK button (BS3) twice.	$\circ \bullet \bullet \bullet \bullet \bullet \bullet$
(6) Press the PAGE button (BS1) once.	$\bullet \bullet \circ \bullet \bullet \bullet \bullet$

[Cancel of Emergency Operation]

To cancel the emergency operation, conduct the following setting. (Return to Factory setting.)

<REYQ8 to 16PY1>

Cancel disabling the compressor 1 (on the right side) from operating:
 Set No. 38 "Disable-compressor-1 operation" of setting mode 2 to "OFF".

LED display (○: ON, ●: OFF, ●: Blink)

(Step)

(1) Press and hold the PAGE button (BS1) for 5 sec. or more.

(2) Press the OPERATE button (BS2) 38 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

○ Cancel disabling the compressor 2 (on the left side) from operating: Set No. 39 "Disable-compressor-2 operation" of setting mode 2 to "OFF".

LED display (○: ON, ♠: OFF, ♠: Blink)

(Step)

(1) Press the PAGE button (BS1) for 5 seconds or more.

(2) Press the OPERATE button (BS2) 39 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

<REYQ18 to 48PY1>

Cancel the disable-operation setting by each outdoor unit.

Make the following setting on the outdoor unit 1. (If this setting is made on an outdoor unit other than the outdoor unit 2, the setting will become invalid.)

*It is possible to tell the outdoor units 1, 2, and 3 according the LED displays shown below.

○ Cancel disabling the outdoor unit 1 from operating:

Set No. 38 "Disable outdoor unit 1 operation" of setting mode 2 to "OFF".

LED display (○: ON, ♠: OFF, ♠: Blink)

(Step)

(1) Press and hold the PAGE button (BS1) for 5 sec. or more.

(2) Press the OPERATE button (BS2) 38 times.

(3) Press the CHECK button (BS3) once.

(4) Press the OPERATE button (BS2) once.

(5) Press the CHECK button (BS3) twice.

(6) Press the PAGE button (BS1) once.

Field Setting SiBE37-704

O Cancel disabling the outdoor unit 2 from operating:

Set No. 39 "Disable-outdoor-unit-2 operation" of setting mode 2 to "OFF".

(3) Press the CHECK button (BS3) once. $\bigcirc \bullet \bullet \bullet \bullet \bullet \bullet$

(4) Press the OPERATE button (BS2) once. ○ ● ● ● ● ● ● (Factory setting)

(5) Press the CHECK button (BS3) twice.
(6) Press the PAGE button (BS1) once.
(7) Once.
(8) Once.
(9) Once.
(10) Once.
(2) Once.
(3) Once.
(4) Once.
(5) Once.
(6) Once.
(7) Once.
(8) Once.
(9) Once.
(9) Once.
(10) Once.</

 \bigcirc Cancel disabling the outdoor unit 3 from operating:

Set No. 40 "Disable-outdoor-unit-3 operation" of setting mode 2 to "OFF".

LED display (○: ON, ●: OFF, Φ: Blink) (Step)

(1) Press the PAGE button (BS1) for 5 seconds or more.

(3) Press the CHECK button (BS3) once. $\bigcirc \bullet \bullet \bullet \bullet \bullet \bullet$

(4) Press the OPERATE button (BS2) once. $\bigcirc \bullet \bullet \bullet \bullet \bullet \bullet$ (Factory setting)

242 Test Operation

SiBE37-704 Field Setting

3.2.10 Prevention of Micro Heating in Non-operating Unit


In heating operation, this setting is made to prevent room temperature from rising due to micro heating capacity generated in the unit with its heating thermostat OFF or in the unit with its heating operation stopped.

- By switching the BS units to cooling when the system turns OFF the heating thermostat or stops heating operation, micro heating is prevented.
- By enabling the micro heating prevention setting of the outdoor unit, prevention of micro heating of all BS units connected to the outdoor unit is enabled. (Default setting of BS unit)
- Setting by BS unit is enabled by changing the micro heating prevention setting of every BS unit. (In this case, enable the outdoor unit setting.)

3.2.11 Reduction of Cooling/Heating Selection Time of BS Units

Make this setting to reduce selection time between cooling and heating of the BS units, with careful attention paid to the following points.

- This setting is only enabled in case the refrigerant piping length between every BS unit connected to the outdoor unit and the indoor unit is not more than 10 m. (Refer to the figure shown below: (a)≤10 m and (b)+(c)≤10 m and ...)
- In case the refrigerant piping length between the BS units and the indoor units is long, refrigerant passing sounds may become louder when the BS unit selects operation mode between cooling and heating.
- This setting reduces the operation mode selection time in all the BS units within the same refrigerant circuit.

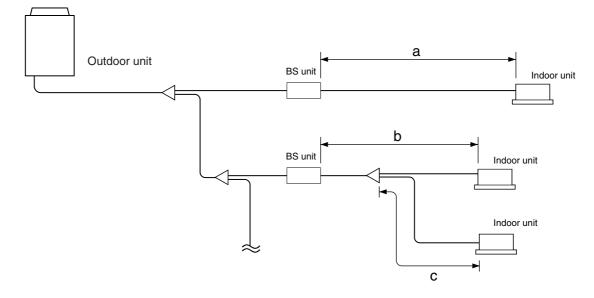

Test Operation 243

Field Setting SiBE37-704

244 Test Operation

Part 6 Troubleshooting

1.	Sym	ptom-based Troubleshooting	248
2.	Trou	bleshooting by Remote Controller	251
	2.1	The INSPECTION / TEST Button	
	2.2	Self-diagnosis by Wired Remote Controller	252
	2.3	Self-diagnosis by Wireless Remote Controller	253
	2.4	Inspection Mode	256
	2.5	Remote Controller Service Mode	257
	2.6	Test Run Mode	
	2.7	Remote Controller Self-Diagnosis Function	259
3.	Trou	bleshooting by Indication on the Remote Controller	266
	3.1	"SG" Indoor Unit: Error of External Protection Device	266
	3.2	"R !" Indoor Unit: PC Board Defect	
	3.3	"អ3" Indoor Unit: Malfunction of Drain Level Control System (S1L)	
	3.4	"%" Indoor Unit: Fan Motor (M1F) Lock, Overload	
		"%" Indoor Unit: Malfunction of Indoor Unit Fan Motor	272
		"৪६" Indoor Uint: Overload / Overcurrent /	
		Lock of Indoor Unit Fan Motor	
	3.5	"ខិទី" Indoor Unit: Malfunction of Swing Flap Motor (M1S)	
	3.6	"89" Electronic Expansion Valve Malfunction / Dust Clogging	
		"89" Indoor Unit: Malfunction of Electronic Expansion Valve Coil	
	3.7	"%" Indoor Unit: Drain Level above Limit	
	3.8	"84" Indoor Unit: Malfunction of Capacity Determination Device	281
	3.9	"ビィ" Indoor Unit: Malfunction of Thermistor (R2T) for	000
	0.40	Heat Exchanger	
		"ES" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes	
		"Es" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air	284
	3.12	"Lu" Indoor Unit: Malfunction of Thermostat Sensor in	005
	0.10	Remote Controller	
		"E!" Outdoor Unit: PC Board Defect	
		"ᢄᢋ" Outdoor Unit: Actuation of High Pressure Switch "ᢄᢋ" Outdoor Unit: Actuation of Low Pressure Sensor	
		"£5" Outdoor Unit: Inverter Compressor Motor Lock	
		"£8" Outdoor Unit: STD Compressor Motor Overcurrent/Lock	
		"E" Outdoor Unit: Malfunction of Outdoor Unit Fan Motor	
		"£\$" Outdoor Unit: Malfunction of Moving Part of Electronic	234
	5.19	Expansion Valve (Y1E~Y5E)	207
	3 20	"F3" Outdoor Unit: Abnormal Discharge Pipe Temperature	
		"F\$" Outdoor Unit: Refrigerant Overcharged	
		"F3" Outdoor Unit : Malfunction of BS Unit Electronic	001
	0.22	Expansion Valve	302
	3 23	"หา" Outdoor Unit: Abnormal Outdoor Fan Motor Signal	
		"#5" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air	
		"" Outdoor Unit: Current Sensor Malfunction	
		"#3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor	507
	5.25	(R31T, R32T, R33T)	308
		, - , ,	

3.27	"ਪ੍ਰਾਪ" Outdoor Unit: Malfunction of Temperature Sensor for	
	Heat Exchanger Gas (R2T or R11T)	.309
3.28	"45" Outdoor Unit: Malfunction of Thermistor (R8T or R10T) for	
	Suction Pipe	.310
3.29	"J5" Outdoor Unit: Malfunction of Thermistor (R4T or R12T) for	
	Outdoor Unit Heat Exchanger	.311
3.30	"ผู้" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 1	
	(R6T, R9T or R14T)	.312
3.31	"J8" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 2	
	(R7T or R15T)	.313
3.32	"ปร" Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas Pi	ре
	Thermistor (R5T or R13T)	-
3.33	"រដ្ឋ" Outdoor Unit: Malfunction of High Pressure Sensor	.315
	"JE" Outdoor Unit: Malfunction of Low Pressure Sensor	
3.35	"L !" Outdoor Unit: Defective Inverter PC Board	.319
	"ኒ ዓ" Outdoor Unit: Malfunction of Inverter Radiating Fin	
	Temperature Rise	.321
3.37	"£5" Outdoor Unit: Momentary Overcurrent of Inverter Compressor	
	"£8" Outdoor Unit: Momentary Overcurrent of Inverter Compressor	
	"£9" Outdoor Unit: Inverter Compressor Starting Failure	
	"LC" Outdoor Unit: Malfunction of Transmission between Inverter and	
0	Control PC Board	
3 41	"?" Outdoor Unit: Inverter Over-Ripple Protection	
	"ੰਮ" Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature	
0	Rise Sensor	
3.43	"ரீய" Outdoor Unit: Faulty Field Setting after Replacing Main PC Boar	
00	Faulty Combination of PC Board	
3 44	"ມີວ່" Outdoor Unit: Gas Shortage Alert	
	"" Reverse Phase, Open Phase	
	"นะ" Outdoor Unit: Power Supply Insufficient or	.0
0.10	Instantaneous Failure	343
3 47	"U3" Outdoor Unit: Check Operation not Executed	
	"มีรู" Malfunction of Transmission between Indoor Units	
	"U5" Indoor Unit: Malfunction of Transmission between	.041
0.40	Remote Controller and Indoor Unit	350
3 50	"Lir" Outdoor Unit: Transmission Failure (Across Outdoor Units)	
	"US" Indoor Unit: Malfunction of Transmission between Main and	.001
5.51	Sub Remote Controllers	357
3 52	"US" Indoor Unit: Malfunction of Transmission between Indoor and	.001
3.32	Outdoor Units in the Same System	358
3 53	"US" Improper Combination of Indoor and Outdoor Units,	.556
0.55	Indoor Units and Remote Controller	250
2 5/	"UE" Address Duplication of Centralized Controller	
	"UE" Malfunction of Transmission between Centralized Controller and	
3.55		
2 56	Indoor Unit	
	"UF" System is not Set yet	
	"ដុក្ល" Malfunction of System, Refrigerant System Address Undefined	
	bleshooting (OP: Central Remote Controller)	
	"11 !" PC Board Defect	.372
4.2	"M8" Malfunction of Transmission between Optional Controllers for	0=5
	Centralized Control	373

4.

	4.3	"MS" Improper Combination of Optional Controllers for	
		Centralized Control	374
	4.4	"Mt" Address Duplication, Improper Setting	376
5.	Trou	bleshooting (OP: Unified ON/OFF Controller)	377
	5.1	Operation Lamp Blinks	377
	5.2	Display "Under Centralized Control" Blinks (Repeats Single Blink)	379
	5.3	Display "Under Centralized Control" Blinks (Repeats Double Blink)	382

1. Symptom-based Troubleshooting

		Symptom	Supposed Cause	Countermeasure					
1	The system does	not start operation at all.	Blowout of fuse(s)	Turn Off the power supply and					
			Cutout of breaker(s)	 then replace the fuse(s). If the knob of any breaker is in its OFF position, turn ON the power supply. If the knob of any circuit breaker is in its tripped position, do not turn ON the power supply. 					
				ON Knob Tripped OFF					
			Power failure	After the power failure is reset, restart the system.					
2	The system starts immediate stop.	operation but makes an	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).					
			Clogged air filter(s)	Clean the air filter(s).					
3	The system does	not cool or heat air well.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).					
			Clogged air filter(s)	Clean the air filter(s).					
			Enclosed outdoor unit(s)	Remove the enclosure.					
			Improper set temperature	Set the temperature to a proper degree.					
			Airflow rate set to "LOW"	Set it to a proper airflow rate.					
			Improper direction of air diffusion	Set it to a proper direction.					
		<u> </u>	Open window(s) or door(s)	Shut it tightly.					
		[In cooling]	Direct sunlight received	Hang curtains or shades on windows.					
		[In cooling]	Too many persons staying in a room						
		[In cooling]	Too many heat sources (e.g. OA equipment) located in a room						
4	The system does not operate.	The system stops and immediately restarts operation.	If the OPERATION lamp on the remote controller turns ON, the system will be normal. These	Normal operation. The system will automatically start operation after					
		Pressing the TEMP ADJUST button immediately resets the system.	symptoms indicate that the system is controlled so as not to put unreasonable loads on the system.	a lapse of five minutes.					
		The remote controller displays "UNDER CENTRALIZED CONTROL", which blinks for a period of several seconds when the OPERATION button is depressed.	The system is controlled with centralized controller. Blinking display indicates that the system cannot be operated using the remote controller.	Operate the system using the COOL/HEAT centralized remote controller.					
		The system stops immediately after turning ON the power supply.	The system is in preparation mode of micro computer operation.	Wait for a period of approximately one minute.					
5	The system makes intermittent stops.	The remote controller displays malfunction codes "U4" and "U5", and the system stops but restarts after a lapse of several minutes.	The system stops due to an interruption in communication between units caused by electrical noises coming from equipment other than air conditioners.	Remove causes of electrical noises. If these causes are removed, the system will automatically restart operation.					
6	COOL-HEAT selection is disabled.	The remote controller displays "UNDER CENTRALIZED CONTROL".	This remote controller has no option to select cooling operation.	Use a remote controller with option to select cooling operation.					
		The remote controller displays "UNDER CENTRALIZED CONTROL", and the COOL- HEAT selection remote controller is provided.	COOL-HEAT selection is made using the COOL-HEAT selection remote controller.	Use the COOL-HEAT selection remote controller to select cool or heat.					


		Symptom	Supposed Cause	Countermeasure
7	The system conducts fan operation but not cooling or heating operation.	This symptom occurs immediately after turning ON the power supply.	The system is in preparation mode of operation.	Wait for a period of approximately 10 minutes.
8	The airflow rate is not reproduced according to the setting.	Even pressing the AIRFLOW RATE SET button makes no changes in the airflow rate.	In heating operation, when the room temperature reaches the set degree, the outdoor unit will stop while the indoor unit is brought to fan LL operation so that no one gets cold air. Furthermore, if fan operation mode is selected when other indoor unit is in heating operation, the system will be brought to fan LL operation. (The fan LL operation is also enabled while in oil return mode in cooling operation.)	Normal operation.
9	The airflow direction is not reproduced according to the setting.	The airflow direction is not corresponding to that displayed on the remote controller. The flap does not swing.	Automatic control	Normal operation.
10	A white mist comes out from the system.	<pre><indoor unit=""> In cooling operation, the ambient humidity is high. (This indoor unit is installed in a place with much oil or dust.)</indoor></pre>	Uneven temperature distribution due to heavy stain of the inside of the indoor unit	Clean the inside of the indoor unit.
		<indoor unit=""> Immediately after cooling operation stopping, the ambient temperature and humidity are low.</indoor>	Hot gas (refrigerant) flown in the indoor unit results to be vapor from the unit.	Normal operation.
		<indoor and="" outdoor="" units=""> After the completion of defrosting operation, the system is switched to heating operation.</indoor>	Defrosted moisture turns to be vapor and comes out from the units.	Normal operation.
11	The system produces sounds.	<indoor unit=""> Immediately after turning ON the power supply, indoor unit produces "ringing" sounds.</indoor>	These are operating sounds of the electronic expansion valve of the indoor unit.	Normal operation. This sound becomes low after a lapse of approximately one minute.
		<indoor and="" outdoor="" units=""> "Hissing" sounds are continuously produced while in cooling or defrosting operation.</indoor>	These sounds are produced from gas (refrigerant) flowing respectively through the indoor and outdoor units.	Normal operation.
		<indoor and="" outdoor="" units=""> "Hissing" sounds are produced immediately after the startup or stop of the system, or the startup or stop of defrosting operation.</indoor>	These sounds are produced when the gas (refrigerant) stops or changes flowing.	Normal operation.
		<indoor unit=""> Faint sounds are continuously produced while in cooling operation or after stopping the operation.</indoor>	These sounds are produced from the drain discharge device in operation.	Normal operation.
		<pre><indoor unit=""> "Creaking" sounds are produced while in heating operation or after stopping the operation.</indoor></pre>	These sounds are produced from resin parts expanding and contracting with temperature changes.	Normal operation.
		<pre><indoor unit=""> Sounds like "trickling" or the like are produced from indoor units in the stopped state.</indoor></pre>	On VRV systems, these sounds are produced when other indoor units in operation. The reason is that the system runs in order to prevent oil or refrigerant from dwelling.	Normal operation.
		<outdoor unit=""> Pitch of operating sounds changes.</outdoor>	The reason is that the compressor changes the operating frequency.	Normal operation.

		Symptom	Countermeasure	
12	Dust comes out from the system.	Dust comes out from the system when it restarts after the stop for an extended period of time.	Dust, which has deposited on the inside of indoor unit, is blown out from the system.	Normal operation.
13	Odors come out from the system.	In operation	Odors of room, cigarettes or else adsorbed to the inside of indoor unit are blown out.	The inside of the indoor unit should be cleaned.
14	Outdoor unit fan does not rotate.	In operation	The reason is that fan revolutions are controlled to put the operation to the optimum state.	Normal operation.
15	LCD display "88" appears on the remote controller.	Immediately after turning ON the power supply	The reason is that the system is checking to be sure the remote controller is normal.	Normal operation. This code is displayed for a period of approximately one minute at maximum.
16	The outdoor unit compressor or the outdoor unit fan does not stop.	After stopping operation	It stops in order to prevent oil or refrigerant from dwelling.	Normal operation. It stops after a lapse of approximately 5 to 10 minutes.
17	The outdoor gets hot.	While stopping operation	The reason is that the compressor is warmed up to provide smooth startup of the system.	Normal operation.
18	Hot air comes out from the system even though it stops.	Hot air is felt while the system stops.	On VRV systems, small quantity of refrigerant is fed to indoor units in the stopped state when other indoor units are in operation.	Normal operation.
19	The system does not cool air well.	The system is in dry operation.	The reason is that the dry operation serves not to reduce the room temperature where possible.	Change the system to cooling operation.

2. Troubleshooting by Remote Controller

2.1 The INSPECTION / TEST Button


The following modes can be selected by using the [Inspection/Test Operation] button on the remote control.

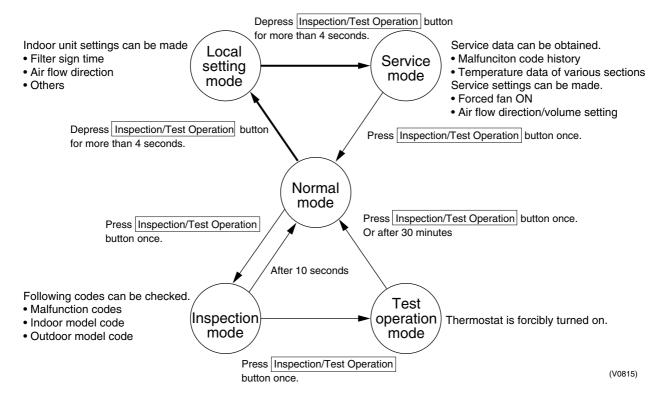

2.2 Self-diagnosis by Wired Remote Controller

Explanation

If operation stops due to malfunction, the remote controller's operation LED blinks, and malfunction code is displayed. (Even if stop operation is carried out, malfunction contents are displayed when the inspection mode is entered.) The malfunction code enables you to tell what kind of malfunction caused operation to stop. See page 260 for malfunction code and malfunction contents.

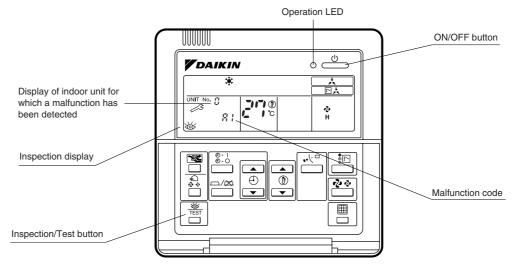

Note:

- 1. Pressing the INSPECTION/TEST button will blink the check indication.
- 2. While in check mode, pressing and holding the ON/OFF button for a period of five seconds or more will clear the failure history indication shown above. In this case, on the codes display, the malfunction code will blink twice and then change to "00" (=Normal), the Unit No. will change to "0", and the operation mode will automatically switch from check mode to normal mode (displaying the set temperature).

2.3 Self-diagnosis by Wireless Remote Controller

In the Case of BRC7C Type BRC7E Type BRC4C Type If equipment stops due to a malfunction, the operation indicating LED on the light reception section flashes.

The malfunction code can be determined by following the procedure described below. (The malfunction code is displayed when an operation error has occurred. In normal condition, the malfunction code of the last problem is displayed.)

Press the INSPECTION/TEST button to select "Inspection."
 The equipment enters the inspection mode. The "Unit" indication lights and the Unit No. display shows flashing "0" indication.

2. Set the Unit No.

Press the UP or DOWN button and change the Unit No. display until the buzzer (*1) is generated from the indoor unit.

*1 Number of beeps

3 short beeps: Conduct all of the following operations.

1 short beep: Conduct steps 3 and 4.

Continue the operation in step 4 until a buzzer remains ON. The continuous buzzer indicates that the malfunction code is confirmed.

Continuous beep: No abnormality.

3. Press the MODE selector button.

The left "0" (upper digit) indication of the malfunction code flashes.

4. Malfunction code upper digit diagnosis

Press the UP or DOWN button and change the malfunction code upper digit until the malfunction code matching buzzer (*2) is generated.

■ The upper digit of the code changes as shown below when the UP and DOWN buttons are pressed.

*2 Number of beeps

Continuous beep: Both upper and lower digits matched. (Malfunction code confirmed)

2 short beeps : Upper digit matched.1 short beep : Lower digit matched.


5. Press the MODE selector button.

The right "0" (lower digit) indication of the malfunction code flashes.


6. Malfunction code lower digit diagnosis

Press the UP or DOWN button and change the malfunction code lower digit until the continuous malfunction code matching buzzer (*2) is generated.

■ The lower digit of the code changes as shown below when the UP and DOWN buttons are pressed.

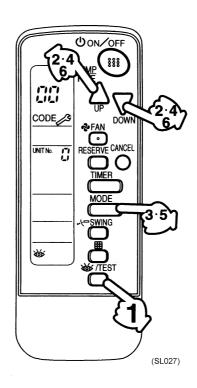


Normal status Enters inspection mode from normal status when the INSPECTION/ TEST button is pressed.

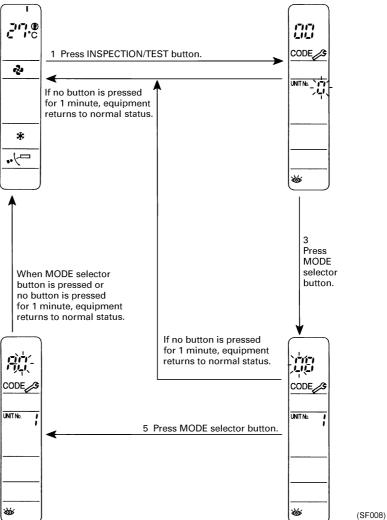

2.4 Inspection Mode

Operating the INSPECTION/TEST button on the remote controller will make it possible to check the malfunction codes, indoor unit model codes, and outdoor unit model codes while in inspection mode.

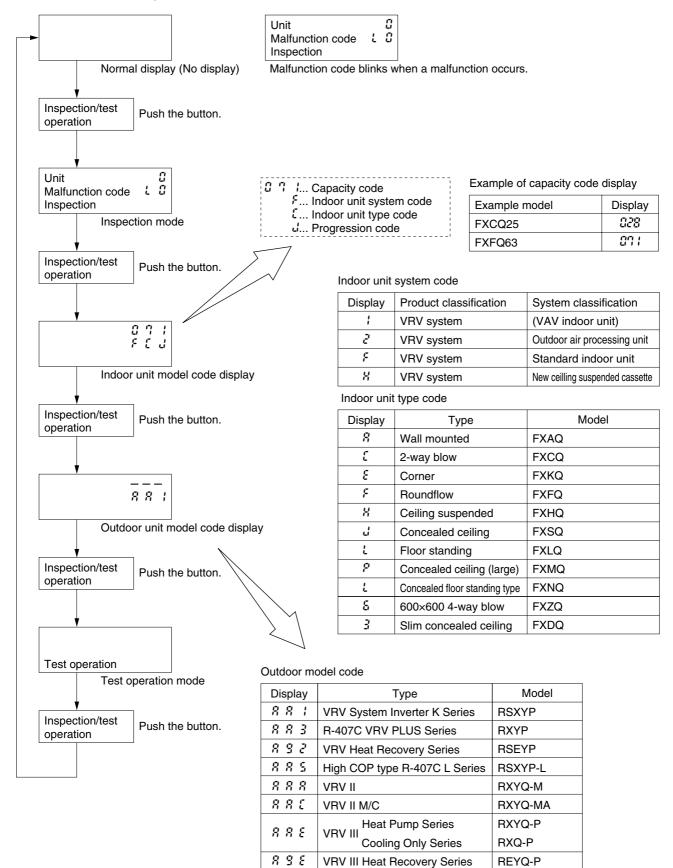


(V2775)

2.5 Remote Controller Service Mode

Operating the CHECK/TEST button on the remote controller will make it possible to obtain "service data" and change "service setting" while in service mode.

How to Enter the Service Mode

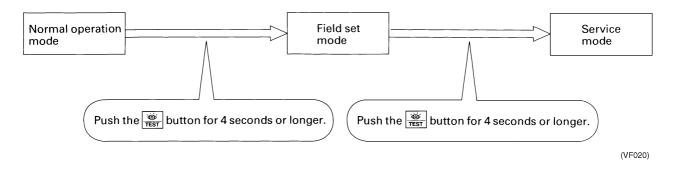

Service Mode Operation Method

1. Select the mode No.

Set the desired mode No. with the button. (For wireless remote controller, Mode 43 only can be set.)

2. Select the unit No. (For group control only)

Select the indoor unit No. to be set with the time mode \bullet . (For wireless remote controller, \bullet \bullet button.)

3. Make the settings required for each mode. (Modes 41, 44, 45)

In case of Mode 44, 45, push button to be able to change setting before setting work. (LCD "code" blinks.)

For details, refer to the table in next page.

4. Define the setting contents. (Modes 44, 45)

Define by pushing the timer \Box button.

After defining, LCD "code" changes blinking to ON.

5. Return to the normal operation mode.

Push the button one time.


Mode No	Function	Contents and operation method	Remote controller display example
닉다	Malfunction hysteresis display	Display malfunction hysteresis. The history No. can be changed with the button.	Unit : Malfunction code All Malfunction code Hystory No: 1 - 9 1: Latest
4;	Display of sensor and address data	Display various types of data. Select the data to be displayed with the button. Sensor data 0: Thermostat sensor in remote controller. 1: Suction 2: Liquid pipe 3: Gas pipe Address data 4: Indoor unit address 5: Outdoor unit address 6: BS unit address 7: Zone control address 8: Cool/heat group address 9: Demand / low noise address	Sensor data display Unit No. Sensor type Temperature °C Address display Unit No. Address type Address
43	Forced fan ON	Manually turn the fan ON by each unit. (When you want to search for the unit No.) By selecting the unit No. with the button, you can turn the fan of each indoor unit on (forced ON) individually.	Unit :
44	Individual setting	Set the fan speed and air flow direction by each unit Select the unit No. with the time mode button. Set the fan speed with the button. Set the air flow direction with the button.	Unit / Code Fan speed 1: Low 3: High (VE010)
US.	Unit No. transfer	Transfer unit No. Select the unit No. with the button. Set the unit No. after transfer with the button.	Present unit No. Unit Code Unit No. after transfer
45	This function is not	used by VRV III R-410A Heat Recovery 50Hz.	
-117			

2.6 Test Run Mode

Operating the INSPECTION/TEST button on the remote controller will make it possible to put the system into test run mode.

(1) Test run mode setting

The test run mode setting can be made by conducting the following operation.

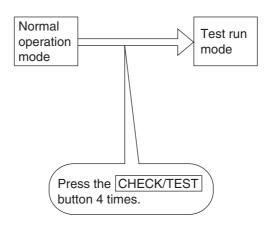


Press the RUN/STOP button after the completion of test run mode setting, and a test run starts.

(The remote controller will display "TEST RUN" on it.)

2.7 Remote Controller Self-Diagnosis Function

The remote controller switches are equipped with a self diagnosis function so that more appropriate maintenance can be carried out. If a malfunction occurs during operation, the operation lamp, malfunction code and display of malfunctioning unit No. let you know the contents and location of the malfunction.

When there is a stop due to malfunction, the contents of the malfunction given below can be diagnosed by a combination of operation lamp, INSPECTION display of the liquid crystal display and display of malfunction code. It also lets you know the unit No. during group control.

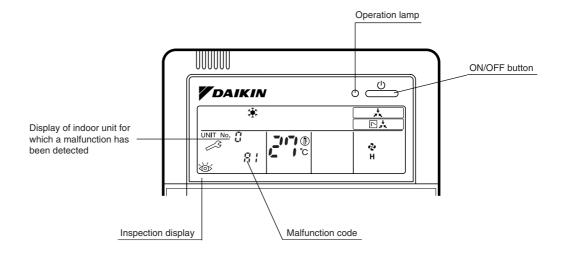

(VL050)

O: ON ●: OFF ④: Blink

					O: ON ●: O FF	⊕: Blink
	Malfunction code	Operation lamp	Inspection display	Unit No.	Malfunction contents	Page Referred
Indoor Unit	A0	•	•	•	Error of external protection device	266
	A1	•	•	•	PC board defect	267
	A3	•	•	•	Malfunction of drain level control system (S1L)	268
	A6	•	•	•	Fan motor (M1F) lock, overload	270
					Malfunction of indoor unit fan motor	272
					Overload/Overcurrent/Lock of indoor unit fan motor	273
	A7	0	•	•	Malfunction of swing flap motor (M1S)	274
	A9	•	•	0	Electronic expansion valve malfunction	276
					Malfunction of electronic expansion valve coil	278
	AF	0	•	0	Drain level above limit	280
	AH	0	•	•	Malfunction of air filter maintenance	_
	AJ	•	•	•	Malfunction of capacity determination device	281
	C4	•	0	0	Malfunction of thermistor (R2T) for heat exchanger	282
	C5	•	0	0	Malfunction of thermistor (R3T) for gas pipes	283
	C9	•	•	•	Malfunction of thermistor (R1T) for suction air	284
	CJ	0	0	0	Malfunction of thermostat sensor in remote controller	285
Outdoor Unit	E1	•	•	0	PC board defect	286
	E3	•	•	•	Actuation of high pressure switch	287
	E4	•	•	•	Actuation of low pressure sensor	289
	E5	•	•	•	Inverter compressor motor lock	291
	E6	•	•	•	STD copmressor motor overcurent/lock	293
	E7	•	•	•	Malfunction of outdoor unit fan motor	294
	E9	•	•	0	Malfunction of moving part of electronic expansion valve (Y1E ~ Y5E)	297
	F3	•	•	•	Abnormal discharge pipe temperature	299
	F6	•	•	•	Refrigerant overcharged	301
	F9	•	•	•	Malfunction of BS unit electronic expansion valve	302
	H7	•	•	•	Abnormal outdoor fan motor signal	304
	H9	•	•	•	Malfunction of thermistor (R1T) for outdoor air	306
	J2	•	0	•	Current sensor malfunction	307
	J3	•	•	•	Malfunction of discharge pipe thermistor (R31T, R32T, R33T)	308
	J4	•	•	•	Malfunction of temperature sensor for heat exchanger gas (R2T or R11T)	309
	J5	•	•	•	Malfunction of thermistor (R8T or R10T) for suction pipe	310
	J6	•	•	•	Malfunction of thermistor (R4T or R12T) for outdoor unit heat exchanger	311
	J7	•	•	•	Malfunction of liquid pipe thermistor 1 (R6T, R9T or R14T)	312
	J8	•	•	•	Malfunction of liquid pipe thermistor 2 (R7T or R15T)	313
	J9	•	•	•	Malfunction of subcooling heat exchanger gas pipe thermistor (R5T or R13T)	314
	JA	•	•	•	Malfunction of high pressure sensor	315
	JC	•	•	•	Malfunction of low pressure sensor	317
	L1	•	•	•	Malfunction of inverter PC board	319
	L4	•	•	•	Malfunction of inverter radiating fin temperature rise	321
	L5	•	•	•	Momentary overcurrent of inverter compressor	324
	L8	•	•	•	Momentary overcurrent of inverter compressor	326
	L9	•	•	0	Inverter compressor starting failure	328

O: ON ●: OFF •: Blink

	Malfunction code	Operation lamp	Inspection display	Unit No.	Malfunction contents	Page Referred
Outdoor Unit	LA	•	•	•	Malfunction of power unit	_
	LC	•	•	•	Malfunction of transmission between inverter and control PC board	331
	P1	•	•	•	Inverter over-ripple protection	334
	P4	•	•	•	Malfunction of inverter radiating fin temperature rise sensor	336
	PJ	•	•	•	Faulty field setting after replacing main PC board or faulty combination of PC board	338
System	U0	0	•	•	Gas shortage alert	340
	U1	•	•	•	Reverse phase, open phase	342
	U2	•	•	•	Power supply insufficient or instantaneous failure	343
	U3	•	•	•	Check operation not executed	346
	U3	0	•	•	Check operation is not completed.	346
	U4	•	•	•	Malfunction of transmission between indoor and outdoor units	347
	U5	•	•	•	Malfunction of transmission between indoor units	350
	U5	•	0	•	Malfunction of transmission between remote controller and indoor unit	350
	U7	•	•	•	Transmission failure (Across outdoor unit)	351
	U8	•	•	•	Malfunction of transmission between main and sub remote controllers	357
	U9	•	•	•	Malfunction of transmission between indoor and outdoor units in the same system	358
	UA	•	•	•	Improper combination of indoor and outdoor units, indoor units and remote controller	359
	UC	0	0	0	Address duplication of centralized controller	365
	UE	•	•	•	Malfunction of transmission between centralized controller and indoor unit	366
	UF	•	•	•	System is not set yet	369
	UH	•	•	•	Malfunction of system, refrigerant system address undefined	370
Central	M1	○ or •	•	•	PC board defect	372
Remote Controller and	M8	○ or •	•	•	Malfunction of transmission between optional controllers for centralized control	373
Schedule Timer	MA	○ or •	•	•	Improper combination of optional controllers for centralized control	374
	MC	○ or •	•	•	Address duplication, improper setting	376
Heat	64	0	•	•	Indoor unit's air thermistor error	
Reclaim Ventilation	65	0	•	•	Outside air thermistor error	
	6A	0	•	•	Damper system alarm	
	6A	•	•	•	Damper system + thermistor error	
	6F	0	•	•	Malfunction of simple remote controller	_
	6H	0	•	•	Malfunction of door switch or connector	
	94	•	•	•	Internal transmission error	

The system operates for malfunction codes indicated in black squares, however, be sure to check and repair.

Malfunction code indication by outdoor unit PC board

<Monitor mode>

To enter the monitor mode, push the MODE (BS1) button when in "Setting mode 1".

* Refer to Page 228 for Monitor mode.

<Selection of setting item>

Push the SET (BS2) button and set the LED display to a setting item.

* Refer to Page 228 for Monitor mode.

<Confirmation of malfunction 1>

Push the RETURN (BS3) button once to display "First digit" of malfunction code.

<Confirmation of malfunction 2>

Push the SET (BS2) button once to display "Second digit" of malfunction code.

Detail description on next page.

<Confirmation of malfunction 3>

Push the SET (BS2) button once to display "malfunction location".

<Confirmation of malfunction 4>

Push the SET (BS2) button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the RETURN (BS3) button and switches to the initial status of "Monitor mode".

* Push the MODE (BS1) button and returns to "Setting mode 1".

Malfur	nctions	Malfunction code
Description of malfunction	Description of malfunction (PGF)	Remote controller
PC board malfunction	PC board malfunction	E1
	Faulty PC board	
Abnormal discharge pressure	HPS activated	E3
Abnormal suction pressure	Pe malfunction	E4
Compressor lock OC activation	INV compressor lock detected STD1 compressor lock detected	E5 E6
OC activation	STD2 compressor lock detected	LO
Overload, overcurrent and abnormal	Instantaneous overcurrent of 1DC fan motor	E7
lock of outdoor unit fan motor	1DC fan motor lock detected	
	Fan 1 IPM faulty protection detected	
	Instantaneous overcurrent of 2DC fan motor	
	2DC fan motor lock detected	
Electronic expansion valve	Fan 2 IPM faulty protection detected EVM (main)	E9
malfunction	EVJ (refrigerant charging)	E9
	EVT (subcool heat exchanger)	
Positioning signal malfunction of	1DC fan motor positioning signal	H7
outdoor unit fan motor	malfunction 2DC fan motor positioning signal	
	malfunction	
Abnormal outdoor temperature	Ta sensor malfunction (short-circuited or open)	H9
Abnormal discharge pipe temperature	Td malfunction	F3
Abnormal heat exchanger temperature	Refrigerant overcharged	F6
BS unit electronic expansion valve malfunction	BS EVH disconnected (Y4E)	F9
manunction	BS EVL disconnected (Y5E)	
	BS EVHS disconnected (Y2E)	
	BS EVLS disconnected (Y3E) BS EVSC disconnected (Y1E)	
Current sensor malfunction	CT1 sensor malfunction (STD	J2
Current sensor manufiction	compressor 1)	02
	CT2 sensor malfunction (STD	
	compressor 2) CT sensor malfunction (system)	
Discharge pipe temperature sensor	Tdi sensor malfunction (R31T)	J3
malfunction	Tds1 sensor malfunction (short-circuited) (R32T)	
	Tds2 sensor malfunction (short-circuited) (R33T)	
Heat exchanger gas temperature sensor malfunction	Tg sensor malfunction (R2T, R11T)	J4
Suction pipe temperature sensor malfunction	TsA sensor malfunction (short-circuited) (R8T, R10T)	J5
Heat exchanger temperature sensor malfunction	Tb sensor malfunction (R4T, R12T)	J6
Liquid pipe temperature sensor	Tsc sensor malfunction (R6T, R14T)	J7
malfunction	TL sensor malfunction (R9T)	
Heat exchanger liquid pipe temperature sensor malfunction	Tf sensor malfunction (R7T, R15T)	J8
Subcool heat exchanger temperature	Tsh sensor malfunction (R5T, R13T)	J9
sensor malfunction Discharge pressure sensor malfunction	Pc sensor malfunction (S1NPH)	JA
Suction pressure sensor malfunction	Pe sensor malfunction (S1NPL)	JC
INV PC board malfunction	Faulty IPM	L1
	Current sensor failure confirmation 1 Current sensor failure confirmation 2 IGBT malfunction	
Rise in INV radiation fin temperature	Overheat of INV radiation fin temperature	L4
DC output overcurrent	Instantaneous overcurrent of INV	L5
Electronic the arms of	IGBT malfunction	1.0
Electronic thermal	Electronic thermal 1 Electronic thermal 2	L8
	Loss of synchronization	
	Speed degradation after startup	
	Thunder detected	
Stall prevention (time limit)	Stall prevention (increased current)	L9
	Stall prevention (startup failure)	
	Abnormal starting waveform	
	Loss of synchronization	
INV transmission malfunction	INV transmission data malfunction	LC
	INV transmission malfunction	

○ : ON④ : Blink● : OFF

O: ON ●: OFF ④:Blink

Malfunation	Confi	rmotio	n of m	aalfun	otion :	1 (Cha	ook 1)	Confi	rmotic	on of n	nolfun	otion () (Cha	ook O)	Conf	irmoti	on of n	nolfun	otion	2 (Ch	ook 2)	Conf			e:			
		rmatio H2P			H5P	H6P									H1P		H3P					H1P		H3P		H5P		
E1	•			•	•	•	•	•			•	•	•	•	•			•	•	•	•	•			•	•	•	0
								•			•	•	•	•	•			•	•	•	•	•			•	•	•	•
E3								•			•	•	•	•	•			•	•	•	•	•			•	•		1
E4								•			•	•	•	•	•			•	•	•	•	•			•	•		
E5								•			•	•	•	•	•			•	•	•	•	•			•	•		
E6								•			•	•	•	•	•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•		
E7								•			•	•	•	•	•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•	*	*1
															•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•		
E9								•			•	•	•	•	•			•	•	•	•	•			•	•		
															•			•	•	•	•	•			•	•		
															•			•	•	•	•	0			•	•		
H7	•			•	•	•	•	•			•	0	•	•	•			•	•	•	•	0			•	•		
															•			•	•	•	•	•			•	•	*	×1
H9								•			•	•	•	•	•			•	•	•	•	0			•	•		
F3	•			•	•	•	•	•			•	•	•	•	•			•	•	•	•	0			•	•	*	×1
F6								•			•	•	•	•	•			•	•	•	•	•			•	•	•	0
F9								•			•	•	•	•	•			•	•	•	•	•			•	•	•	0
															•			•	•	•	•	•			•	•	•	0
															•			•	•	0	•	•			•	•	•	0
															•			•	•	•	•	•			•	•	•	0
															•			•	•	•	•	•			•	•	•	0
J2	•			•	•	•	•	•			•	•	•	•	•			•	•	•	•	0			•	•		
				_			_				_				•			•	•	•	•	0			•	0		
															0			•	•	•	•	0			•	•		
J3								•			•	•	•	•	0			•	•	•	•	0			•	•		
											_				•			•	•	•	•	0			•	•		
															•			•	•	•	•	0			•	•		
J4								•			•	•	•	•	0			•	•	•	•	0			•	•		
J5								•			•	•	•	•	•			•	•	•	•	0			•	•	*	*1
J6								0			•	0	0	•	0			•	•	•	•	0			•	•		
J7								0			•	0	0	•	0			•	•	•	•	0			•	0		
															0			•	•	•	•	0			•	•		
J8								•			•	•	•	•	0			•	•	•	•	0			•	•		
J9								0			0	•	•	•	0			•	•	•	•	0			•	•		
JA								0			0	•	0	•	0			•	•	•	•	0			•	•		
JC								0			0	0	•	•	0			•	•	•	•	0			•	•		
L1	•			•	•	0	•	0			•	•	•	0	0			•	•	•	•	0			•	•		
•	-														-							0	1		•	0		
																						0	1		0	•		
																						0			0	0		
L4								0			•	•	•	•	•			•	•	•	•	0			•	•		
L5								0			•	0	•	0	•			•	•	•	•	0			•	•	*	*1
														•	•			•	•	•	•	0	1		•	0		
L8								0			•	•	•	•	•		<u> </u>	•	•	•	•	0	-	<u> </u>	•	•		
L9								0			0	•	•	0	•		<u> </u>	•	•	•	•	0	-	<u> </u>	•	•		
LC								0			•	0		•	•		<u> </u>	•	•	•	•	0	-	<u> </u>	•	•		
		1 1	ı					•		l		•			•	1	Ī						1	1				

Display of contents of malfunction (first digit)

Display of contents of malfunction (second digit)

Display 1 of malfunction in detail

Display 2 of malfunction in detail dividual system Multi system

*1: Faulty system | Ir

Individual system

→ Right-hand system

→ Left-hand system

→ —

All systems

Master Slave 1 Slave 2 System

<Monitor mode>

To enter the monitor mode, push the MODE (BS1)]button when in "Setting mode 1".

* Refer to Page 228 for Monitor mode.

<Selection of setting item>

Push the SET (BS2) button and set the LED display to a setting item.

* Refer to Page 228 for Monitor mode.

<Confirmation of malfunction 1>

Push the RETURN (BS3) button once to display "First digit" of malfunction code.

<Confirmation of malfunction 2>

Push the SET (BS2) button once to display "Second digit" of malfunction code.

<Confirmation of malfunction 3>

Push the SET (BS2) button once to display "malfunction location".

<Confirmation of malfunction 4>

Push the <u>SET (BS2)</u> button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the RETURN (BS3) button and switches to the initial status of "Monitor mode".

* Push the MODE (BS1) button and returns to "Setting mode 1".

Detail
description
on next
page.

Malfunctions		Malfunction code
Description of malfunction	Description of malfunction (PGF)	Remote controller
Open phase and unbalanced power supply	Unbalanced INV power supply voltage	P1
INV radiation fin temperature sensor malfunction	INV fin thermistor malfunction	P4
Faulty combination of INV and fan driver	Faulty combination of INV	PJ
Out of gas	Out-of-gas alarm	U0
Reversed phase	Reversed phase malfunction	U1
	Reversed phase malfunction (ON)	
Abnormal power supply voltage	Insufficient INV voltage	U2
	INV open phase (single phase)	
	Abnormal charge of capacitor of INV main circuit	
Test run not carried out yet	Test run not carried out yet	U3
Faulty transmission between indoor and outdoor units	IN-OUT transmission malfunction	U4
	System malfunction	
Faulty transmission between outdoor units	Malfunction caused when mounting the external control adapter	U7
	Alarm given when mounting the external control adapter	
	Malfunction caused between the master and the slave 1	
	Malfunction caused between the master and the slave 2	
	Multi REYQ models connected	
	Faulty address setting of slaves 1 and 2	
	4 or more outdoor units connected in the same system	
	Erroneous address of slaves 1 and 2	
Faulty transmission with other systems	Other system or other unit in the same system	U9
Faulty field setting	Excess indoor units connected	UA
	Erroneous refrigerant used for indoor unit	
	Faulty combination of outdoor units	
	Faulty independent installation	
	Faulty connection of former BS unit	
	Faulty connection between outdoor and BS unit	
	Faulty connection between BS units	
	Wrong number of indoor units connected to BS unit	
Faulty system line	Wrong wiring (auto address error)	UH
Faulty transmission with accessory equipment	Multi level converter malfunction	UJ
	Multi level converter alarm	
	Multi level converter data malfunction	
	Multi level converter transmission malfunction	
Unmatched wiring/piping, no system settings	Unmatched wiring/piping	UF

○ : ON ● : Blink ● : OFF

O: ON ●: OFF ④:Blink Confirmation of malfunction 1 (Check 1) Confirmation of malfunction 2 (Check 2) Confirmation of malfunction 3 (Check 3) Confirmation of malfunction 4 (Check 4) Malfunction H1P H2P H3P H4P H5P H6P H7P H1P H2P H3P H4P H5P H6P H7P H4P H5P H6P H7P H1P H2P H3P H4P H5P H6P H7P H1P H2P H3P 0 0 • 0 • 0 P4 0 0 0 • • • 0 • *1 PJ 0 0 0 0 0 0 U0 • • 0 • • • 0 0 0 • • • • • • • • U1 0 0 • • • • • • 0 • 0 • 0 U2 0 • • 0 *1 0 • 0 0 U3 • 0 • • • • U4 • • • • • • • • • • • • • • • • • 0 • U7 0 • • • • • • • • • • • • • • • • • • 0 0 • • • • 0 • 0 • • • 0 0 • 0 • 0 0 • 0 0 • • • 0 0 • • • • 0 • • • • • • • • • U9 0 0 0 lacktriangle• • • UA 0 • • • ullet• lacktriangle• • • • • • • lacktrianglelacktriangle• • • • lacktriangle• • • • • • 0 0 • • • • • • • • • 0 • 0 • • • • • 0 0 0 • 0 • • • • 0 • 0 • • 0 • 0 • • • 0 0 0 • 0 • • • • 0 0 0 0 • 0 • UH • • • • • • • UJ 0 • • 0 • *1 0 • 0 • • • • • • • UF • • 0 0 • • 0 • •

Display of contents of

Display of contents of

Display 1 of

•

*1: Faulty system Individual system • • Right-hand system • • Left-hand system **0** • All systems

Display 2 of

Multi system Slave 1

> Slave 2 System

3. Troubleshooting by Indication on the Remote Controller

3.1 "C" Indoor Unit: Error of External Protection Device

Remote Controller Display



Applicable Models

All indoor unit models

Method of Malfunction Detection Detect open or short circuit between external input terminals in indoor unit.

Malfunction Decision Conditions When an open circuit occurs between external input terminals with the remote controller set to "external ON/OFF terminal".


Supposed Causes

- Actuation of external protection device
- Improper field set
- Defect of indoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

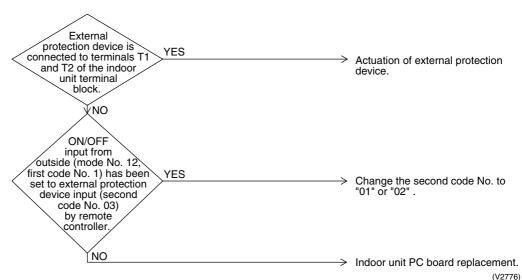

3.2 "A" Indoor Unit: PC Board Defect

Remote Controller Display \overline{B}

Applicable Models

All indoor unit models

Method of Malfunction Detection


Check data from E2PROM.


Malfunction Decision Conditions When data could not be correctly received from the E²PROM E²PROM: Type of nonvolatile memory. Maintains memory contents even when the power supply is turned off.

Supposed Causes

■ Defect of indoor unit PC board

Troubleshooting

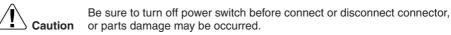

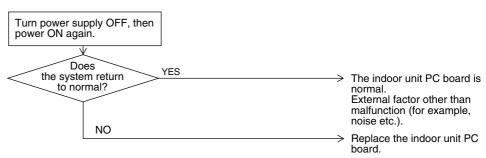

(V2777)

3.3 "ℜ∃" Indoor Unit: Malfunction of Drain Level Control System (S1L)

Remote
Controller
Display

83

Applicable Models

FXCQ, FXFQ, FXSQ, FXKQ, FXDQ, FXMQ, FXHQ (Option), FXMQ200,250M (Option), FXAQ (Option)


Method of Malfunction Detection

By float switch OFF detection

Malfunction Decision Conditions When rise of water level is not a condition and the float switch goes OFF.

Supposed Causes

- 220~240V power supply is not provided
- Defect of float switch or short circuit connector
- Defect of drain pump
- Drain clogging, upward slope, etc.
- Defect of indoor unit PC board
- Loose connection of connector

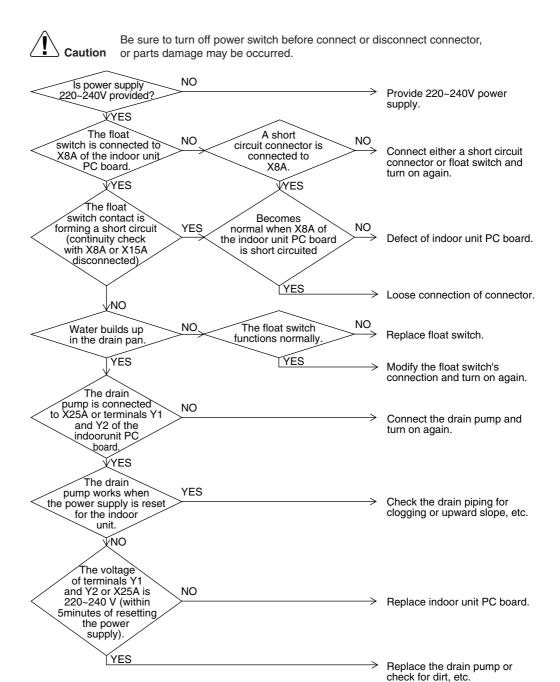

(V2778)

3.4 "85" Indoor Unit: Fan Motor (M1F) Lock, Overload

Remote Controller Display



Applicable Models

FXAQ20~63MAVE, FXFQ20~125P7VE

Method of Malfunction Detection

Abnormal fan revolutions are detected by a signal output from the fan motor.


Malfunction Decision Conditions When the fan revolutions do not increase

Supposed Causes


- Broken wires in, short circuit of, or disconnection of connectors from the fan motor harness
- Faulty fan motor (Broken wires or faulty insulation)
- Abnormal signal output from the fan motor (Faulty circuit)
- Faulty PC board
- Instantaneous disturbance in the power supply voltage
- Fan motor lock (Due to motor or external causes)
- The fan does not rotate due to foreign matters blocking the fan.
- Disconnection of the connector between the high-power PC board (A1P) and the low-power PC board (A2P).



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

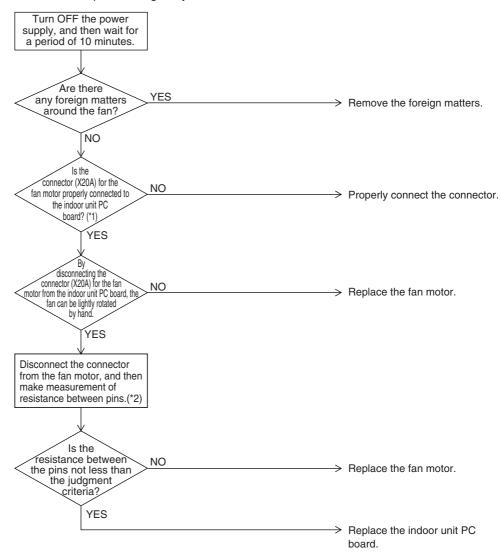

- *1. If any junction connector is provided between the connector (X20A) on the indoor unit PC board and the fan motor, also check whether or not the junction connector is properly connected.
- *2. All resistance measuring points and judgment criteria

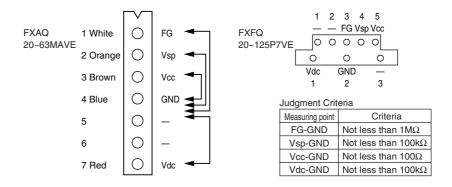

"85" Indoor Unit: Malfunction of Indoor Unit Fan Motor

Remote
Controller
Display

85

Applicable Models

FXHQ32~100MAVE, FXDQ20~63NAVE

Method of Malfunction Detection

This malfunction is detected if there is no revolutions detection signal output from the fan motor.

Malfunction Decision Conditions

When no revolutions can be detected even at the maximum output voltage to the fan


Supposed Causes

- Faulty indoor fan motor
- Broken wires
- Faulty contact

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

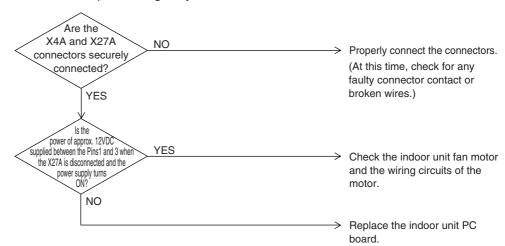

"55" Indoor Uint: Overload / Overcurrent / Lock of Indoor Unit Fan Motor

Remote Controller Display

Applicable Models

FXMQ40~125MAVE

Method of Malfunction Detection

This malfunction is detected by detecting that the individual power supply for the fan turns OFF.


Malfunction Decision Conditions


When it is not detected that the individual power supply for the indoor unit fan turns ON while in operation.

Supposed Causes

- Faulty power supply for the indoor unit fan motor
- Clogged drain piping
- Actuation of the indoor unit safety device
- Faulty contact in the fan wiring circuit

Troubleshooting

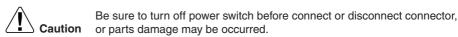

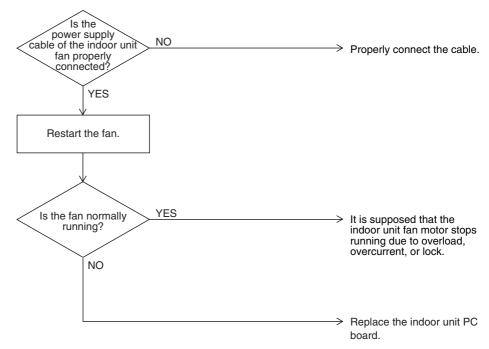

3.5 "F" Indoor Unit: Malfunction of Swing Flap Motor (M1S)

Remote Controller Display Err

Applicable Models

FXCQ, FXHQ, FXKQ

Method of Malfunction Detection


Utilizes ON/OFF of the limit switch when the motor turns.

Malfunction Decision Conditions When ON/OFF of the microswitch for positioning cannot be reversed even though the swing flap motor is energized for a specified amount of time (about 30 seconds).

★ Error code is displayed but the system operates continuously.

Supposed Causes

- Defect of swing motor
- Defect of connection cable (power supply and limit switch)
- Defect of air flow direction adjusting flap-cam
- Defect of indoor unit PC board

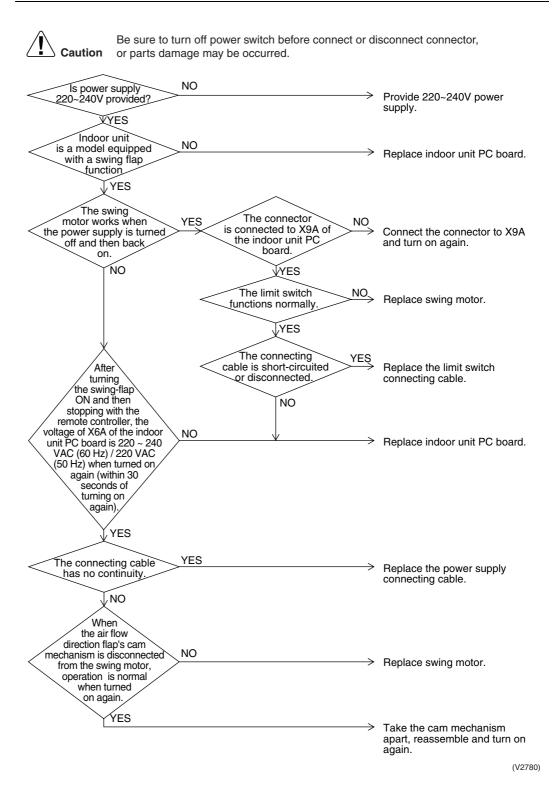

3.6 "RS" Electronic Expansion Valve Malfunction / Dust Clogging

Remote Controller Display RE

Applicable Models

FXFQ25~125P

Method of Malfunction Detection

Check coil condition of electronic expansion valve by using microcomputer. Check dust clogging condition of electronic expansion valve main body by using microcomputer.

Malfunction Decision Conditions Pin input for electronic expansion valve coil is abnormal when initializing microcomputer. Either of the following conditions is seen/caused/ occurs while the unit stops operation.

- Temperature of suction air (R1T) temperature of liquid pipe of heat exchanger (R2T)>8°C.
- Temperature of liquid pipe of heat exchanger (R2T) shows fixed degrees or below.


Supposed Causes

- Defective drive of electronic expansion valve
- Defective PC board of indoor unit
- Defective relay cables


shutting the power supply off does not work, replace indoor unit PC

board.

Troubleshooting

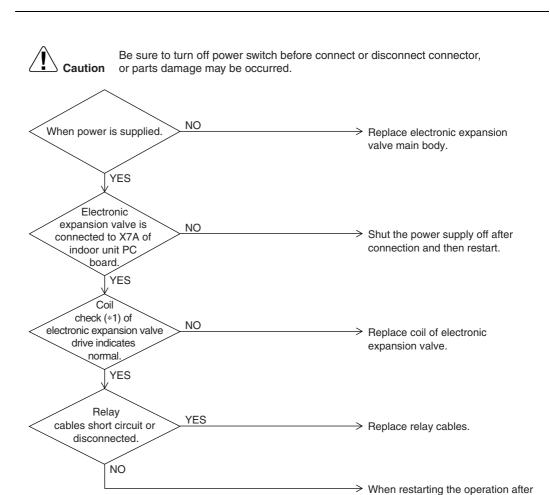

*1: How to check the coil of electronic expansion valve drive
Remove the connector for electronic expansion valve (X7A) from PC board. Measure the resistance
value between pins and check the continuity to judge the condition.

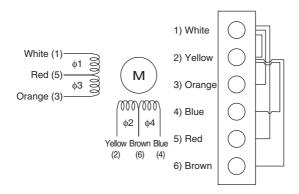

The normal products will show the following conditions:

- 1) No continuity between (1) and (2)
- $\widehat{\mbox{\sc 2}}$ Resistance value between (1) and (3) is approx. 300 Ω
- (4) Resistance value between (2) and (4) is approx. 300 Ω
- \bigcirc Resistance value between (2) and (6) is approx. 150 Ω


■ Defective relay cables

"S3" Indoor Unit: Malfunction of Electronic Expansion Valve Coil


Remote Controller Display	89
Applicable Models	Indoor units except FXFQ models
Method of Malfunction Detection	Check coil condition of electronic expansion valve by using microcomputer.
Malfunction Decision Conditions	Pin input for electronic expansion valve coil is abnormal when initializing microcomputer.
Supposed Causes	 Defective drive of electronic expansion valve Defective PC board of indoor unit



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

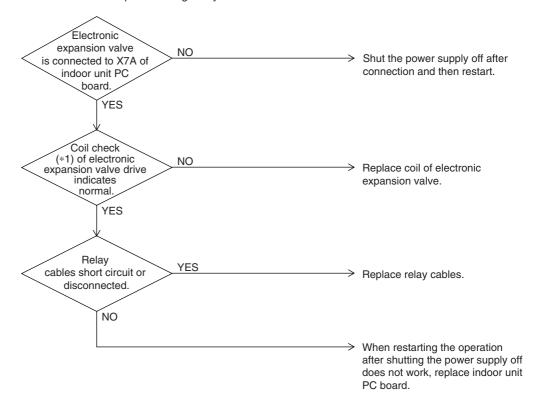

*1: How to check the coil of electronic expansion valve drive Remove the connector for electronic expansion valve (X7A) from PC board. Measure the resistance value between pins and check the continuity to judge the condition.

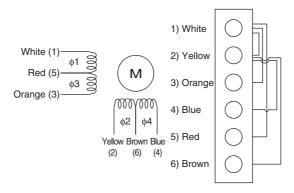

The normal products will show the following conditions:

- \bigcirc No continuity between (1) and (2)
- \bigcirc Resistance value between (1) and (3) is approx. 300 Ω
- $\ \widehat{\ }$ Resistance value between (1) and (5) is approx. 150 $\ \Omega$
- $\stackrel{\frown}{\text{(4)}}$ Resistance value between (2) and (4) is approx. 300 Ω
- $\ensuremath{\mathfrak{D}}$ Resistance value between (2) and (6) is approx. 150 Ω

3.7 "F" Indoor Unit: Drain Level above Limit

Remote Controller Display



Applicable Models

FXCQ, FXFQ, FXSQ, FXKQ, FXMQ, FXDQ

Method of Malfunction Detection

Water leakage is detected based on float switch ON/OFF operation while the compressor is in non-operation.

Malfunction Decision Conditions


When the float switch changes from ON to OFF while the compressor is in non-operation.

★ Error code is displayed but the system operates continuously.

Supposed Causes

- Humidifier unit (optional accessory) leaking
- Defect of drain pipe (upward slope, etc.)
- Defect of indoor unit PC board

Troubleshooting

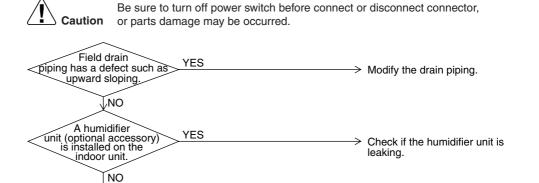

(V2782)

Defect of indoor unit PC board.

3.8 "品" Indoor Unit: Malfunction of Capacity Determination Device

Remote Controller Display R

Applicable Models

All indoor unit models

Method of Malfunction Detection

Capacity is determined according to resistance of the capacity setting adaptor and the memory inside the IC memory on the indoor unit PC board, and whether the value is normal or abnormal is determined.


Malfunction Decision Conditions

When the capacity code is not contained in the PC board's memory, and the capacity setting adaptor is not connected.

Supposed Causes

- The capacity setting adaptor was not installed.
- Defect of indoor unit PC board

Troubleshooting

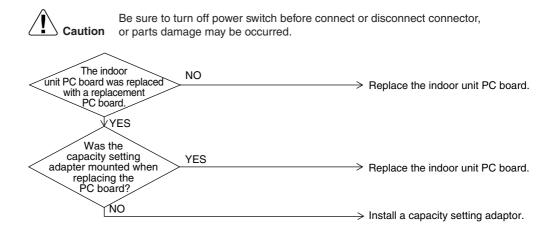

(V2783)

3.9 "['s" Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger

Remote Controller Display



Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by heat exchanger thermistor.

Malfunction Decision Conditions

When the heat exchanger thermistor becomes disconnected or shorted while the unit is running.


Supposed Causes

- Defect of thermistor (R2T) for liquid pipe
- Defect of indoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

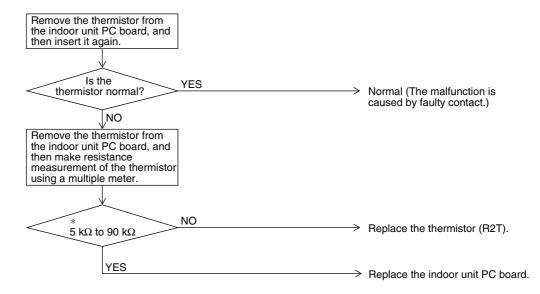



* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.10 "[5" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes

Remote Controller Display [5

Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by gas pipe thermistor.

Malfunction Decision Conditions When the gas pipe thermistor becomes disconnected or shorted while the unit is running.


Supposed Causes

- Defect of indoor unit thermistor (R3T) for gas pipe
- Defect of indoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

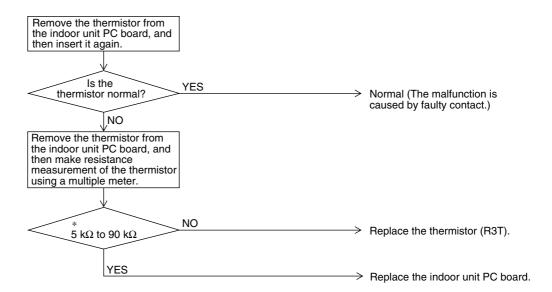



* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.11 "[5" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air

Remote Controller Display [3

Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by suction air temperature thermistor.

Malfunction Decision Conditions When the suction air temperature thermistor becomes disconnected or shorted while the unit is running.


Supposed Causes

- Defect of indoor unit thermistor (R1T) for air inlet
- Defect of indoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

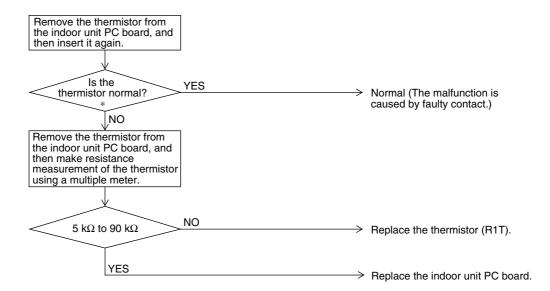



* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.12 "[J" Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller

Remote Controller Display



Applicable Models

All indoor unit models

Method of Malfunction Detection

Malfunction detection is carried out by temperature detected by remote controller air temperature thermistor. (Note:)

Malfunction Decision Conditions

When the remote controller air temperature thermistor becomes disconnected or shorted while the unit is running.


Supposed Causes

- Defect of remote controller thermistor
- Defect of remote controller PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

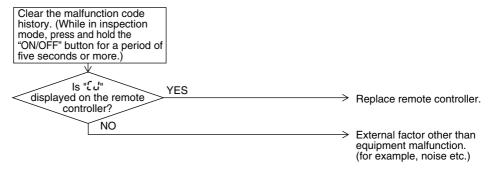

(V2787)



*1: How to delete "the record of malfunction codes".

Press the "Operate/ Stop" button for 4 seconds and more while the malfunction code is displayed in the inspection mode.



* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.13 "E" Outdoor Unit: PC Board Defect

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Abnormality is detected under the communication conditions in the hardware section between the indoor unit and outdoor unit.

Malfunction Decision Conditions

When the communication conditions in the hardware section between the indoor unit and the outdoor unit are not normal.


Supposed Causes

- Defect of outdoor unit PC board (A1P)
- Defective connection of inside/ outside relay wires

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

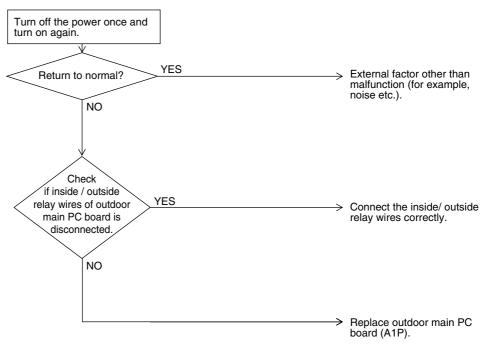

(V3064)

3.14 "€3" Outdoor Unit: Actuation of High Pressure Switch

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Abnormality is detected when the contact of the high pressure protection switch opens.

Malfunction Decision Conditions Error is generated when the HPS activation count reaches the number specific to the operation

mode.

(Reference) Operating pressure of high pressure switch


Operating pressure: 4.0MPa Reset pressure: 2.85MPa

Supposed Causes

- Actuation of outdoor unit high pressure switch
- Defect of High pressure switch
- Defect of outdoor unit main PC board (A1P)
- Instantaneous power failure
- Faulty high pressure sensor




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

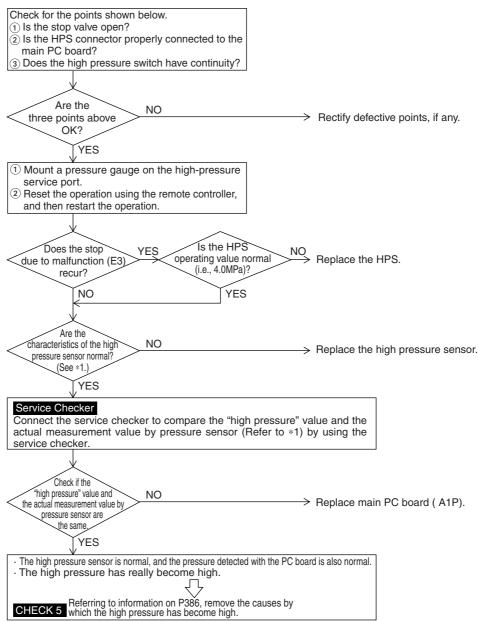

*1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge.

(As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on P457.)

*2: Make measurement of voltage of the pressure sensor.

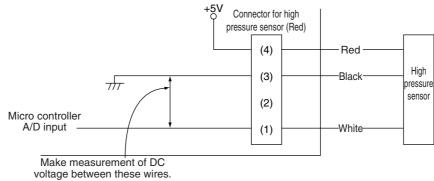

3.15 "EY" Outdoor Unit: Actuation of Low Pressure Sensor

Remote Controller Display



Applicable Models

REYQ8P~48P


Method of Malfunction Detection

Abnormality is detected by the pressure value with the low pressure sensor.

Malfunction Decision Conditions Error is generated when the low pressure is dropped under compressor operation. Operating pressure:0.07MPa

Supposed Causes

- Abnormal drop of low pressure (Lower than 0.07MPa)
- Defect of low pressure sensor
- Defect of outdoor unit PC board
- Stop valve is not opened.

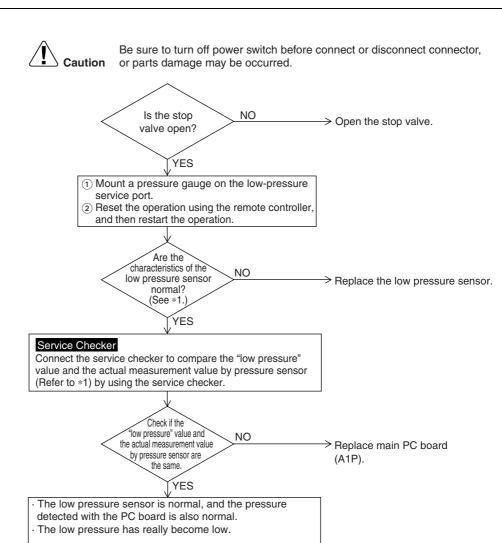


*1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge.

(As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on P457.)

st 2: Make measurement of voltage of the pressure sensor.

CHECK 6 Referring to information on P387, remove the

causes by which the low pressure has become low.

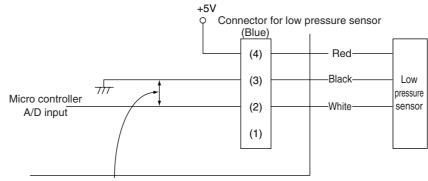

Make measurement of DC voltage between these wires.

3.16 "E5" Outdoor Unit: Inverter Compressor Motor Lock

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection


Inverter PC board takes the position signal from UVW line connected between the inverter and compressor, and the malfunction is detected when any abnormality is observed in the phase-current waveform.

Malfunction Decision Conditions This malfunction will be output when the inverter compressor motor does not start up even in forced startup mode.

Supposed Causes

- Inverter compressor lock
- High differential pressure (0.5MPa or more)
- Incorrect UVW wiring
- Faulty inverter PC board
- Stop valve is left in closed.

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

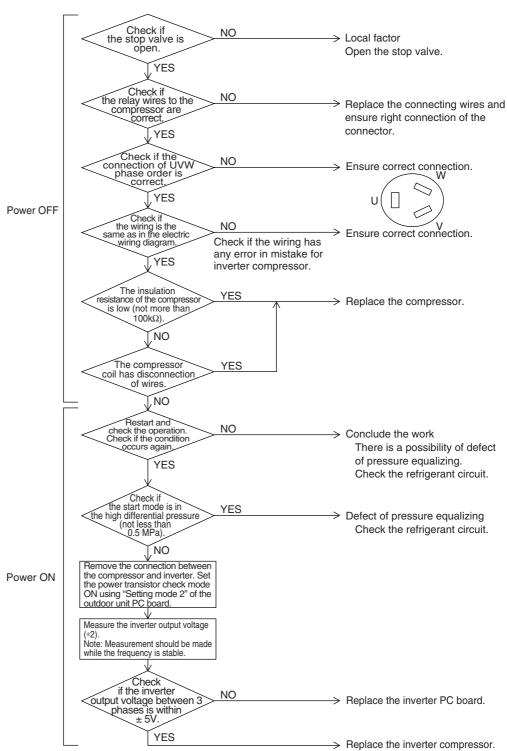

*1: Pressure difference between high pressure and low pressure before starting

^{*2:} The quality of power transistors/ diode modules can be judged by executing Check 4 (P385).

3.17 "E5" Outdoor Unit: STD Compressor Motor Overcurrent/ Lock

Remote Controller Display <u>88</u>

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Detects the overcurrent with current sensor (CT).


Malfunction Decision Conditions Malfunction is decided when the detected current value exceeds the below mentioned value for 2 seconds.

■ 400 V unit: 15.0 A

Supposed Causes

- Closed stop value
- Obstacles at the air outlet
- Improper power voltage
- Faulty magnetic switch
- Faulty compressor
- Faulty current sensor (A6P, A7P)

Troubleshooting

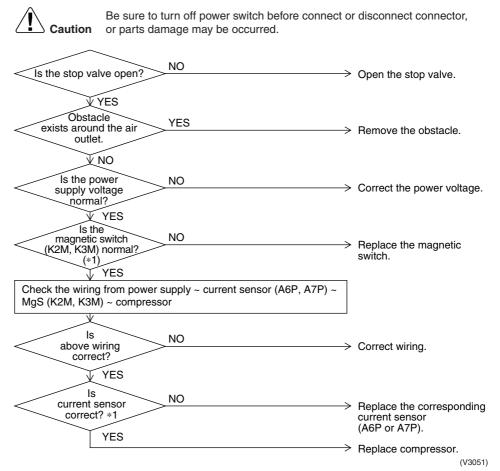

Note:

- *1 One of the possible factors may be chattering due to rough MgS contact.
- *2 Abnormal case
- The current sensor value is 0 during STD compressor operation.
- The current sensor value is more than 15.0A during STD compressor stop.

3.18 "En" Outdoor Unit: Malfunction of Outdoor Unit Fan Motor

Remote Controller Display Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Detect a malfunction based on the current value in the INVERTER PC board (as for motor 2, current value in the fan PC board).

Detect a malfunction for the fan motor circuit based on the number of rotation detected by hole IC during the fan motor operation.

Malfunction Decision Conditions


- Overcurrent is detected for INVERTER PC board (A2P) or fan INVERTER PC board (A5P)
 (System down is caused by 4 times of detection.)
- In the condition of fan motor rotation, the number of rotation is below the fixed number for more than 6 seconds. (System down is caused by 4 times of detection.)


Supposed Causes

- Failure of fan motor
- Defect or connect ion error of the connectors/ harness between the fan motor and PC board
- The fan can not rotate due to any foreign substances entangled.
- Clear condition: Continue normal operation for 5 minutes



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

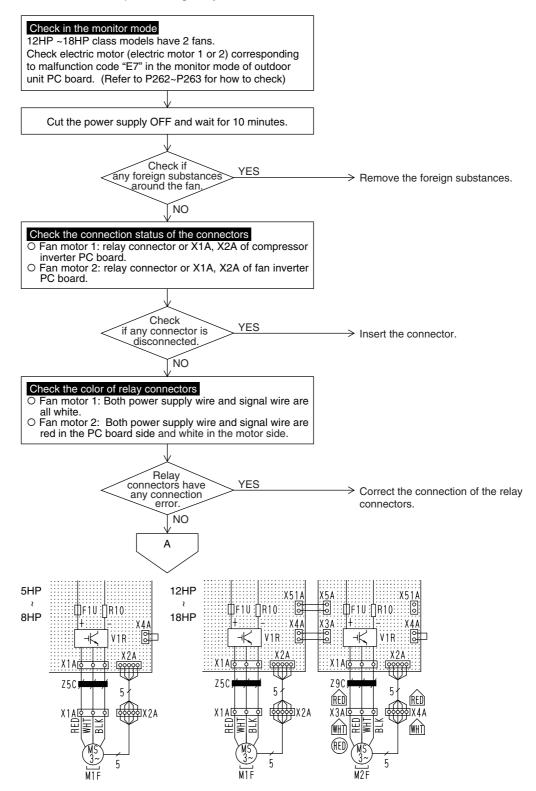

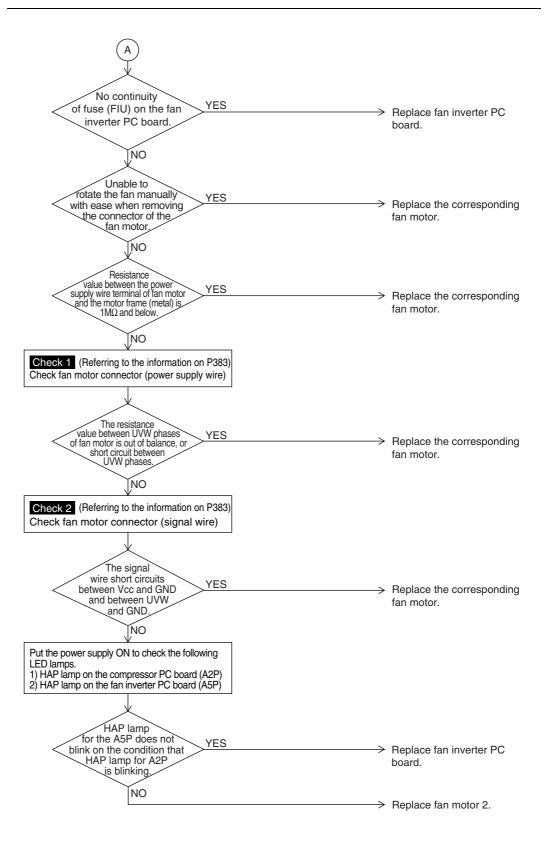


3.19 "ES" Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E~Y5E)

Remote Controller Display	<u>88</u>
Applicable Models	REYQ8P~48P
Method of Malfunction Detection	Check disconnection of connector To be detected based on continuity existence of coil of electronic expansion valve
Malfunction Decision Conditions	No current is detected in the common (COM [+]) when power supply is ON.
Supposed Causes	 Disconnection of connectors for electronic expansion valve (Y1E) Defect of moving part of electronic expansion valve Defect of outdoor unit main PC board (A1P)



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

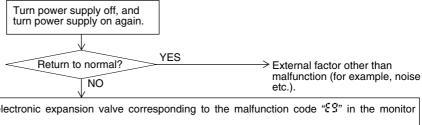

Check the electronic expansion valve corresponding to the malfunction code "£9" in the monitor mode.

(Refer to P262~263 for how to check.)


O When Check 4 shows as follows:


● ○ ○ ● ● ※ ※ → Electronic expansion valve for main use (Y1E, Y3E for Single, Y1E for Multi)

O When Check 4 shows as follows:

O When Check 4 shows as follows:


 $\boxed{\bullet \bigcirc \bigcirc \bullet \boxed{*} \times \times} \rightarrow \text{Electronic expansion valve for subcooling (Y2E, Y5E for Single, Y3E for Multi)}$

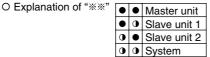

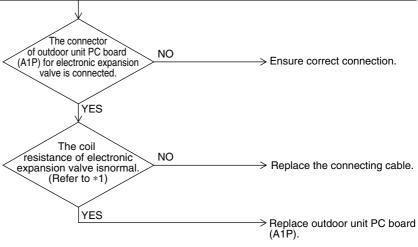

(V3067)

* Make measurement of resistance between the connector pins, and then make sure the resistance falls in the range of 40 to 50Ω .

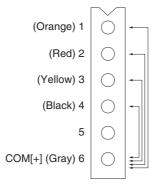

Measuring points	Judgment criteria	
1 - 6		
2 - 6	40 500	
3 - 6	40~50Ω	
4 - 6		

(V3067)

3.20 "F3" Outdoor Unit: Abnormal Discharge Pipe Temperature

Remote Controller Display FB

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Abnormality is detected according to the temperature detected by the discharge pipe temperature sensor.


Malfunction Decision Conditions When the discharge pipe temperature rises to an abnormally high level (135 $^{\circ}$ C and above) When the discharge pipe temperature rises suddenly (120 $^{\circ}$ C and above for10 successive minutes)

Supposed Causes

- Faulty discharge pipe temperature sensor
- Faulty connection of discharge pipe temperature sensor
- Faulty outdoor unit PC board



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

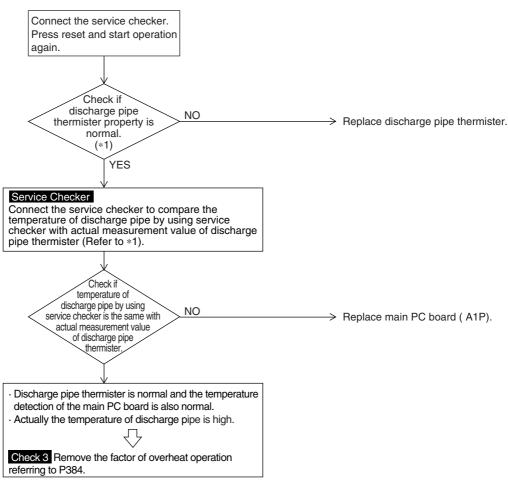

*1: Compare the resistance value of discharge pipe thermister and the value based on the surface thermometer.

(Refer to P435 for the temperature of thermister and the resistance property)



* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.21 "F5" Outdoor Unit: Refrigerant Overcharged

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Excessive charging of refrigerant is detected by using the outside air temperature, heat exchanging deicer temperature and liquid pipe temperature during a check run.

Malfunction Decision Conditions

When the amount of refrigerant, which is calculated by using the outside air temperature, heat exchanging deicer temperature and liquid pipe temperature during a check run, exceeds the standard.

Supposed Causes


- Refrigerant overcharge
- Misalignment of the outside air thermistor
- Misalignment of the heat exchanging deicer thermistor
- Misalignment of the liquid pipe thermistor

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

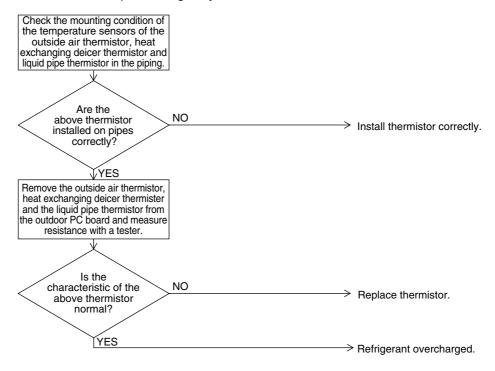

(V2797)

G


* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.22 "F9" Outdoor Unit : Malfunction of BS Unit Electronic Expansion Valve

Remote Controller Display	F9
Applicable Models	BS unit
Method of Malfunction Detection	This malfunction is detected by whether or not all coils of the electronic expansion valve have continuity.
Malfunction Decision Conditions	When the power supply turns ON, there is no currents pass through the common (COM[+]).
Supposed Causes	 Connector disconnected from the electronic expansion valve Faulty coil of the electronic expansion valve Faulty PC board of the BS unit




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

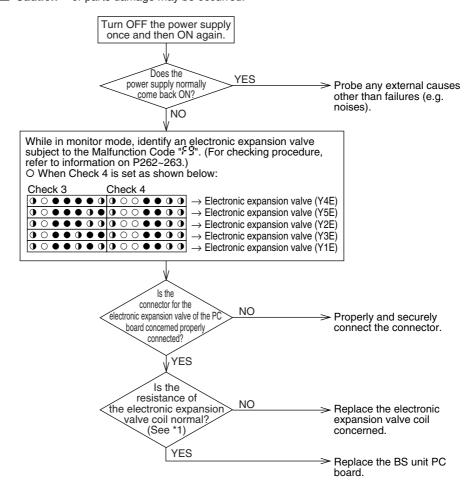

*1: Procedure for checking the electronic expansion valve for the drive unit coil.

Disconnect the electronic expansion valve connector (X7A) from the PC board, and then make measurement of resistance and check for continuity between the connector pins to make judgment.

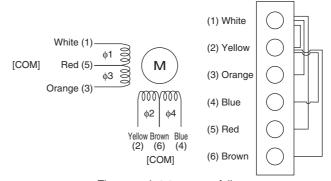

The normal states are as follows:

- 1 No continuity between Pins (1) and (2)
- 2 Approx. 300Ω resistance between Pins (1) and (3)
- $\ensuremath{\,^{\circlearrowleft}}$ Approx. 150 $\!\Omega$ resistance between Pins (1) and (5)
- 4 Approx. 300Ω resistance between Pins (2) and (4)
- \bigcirc Approx. 150 Ω resistance between Pins (2) and (6)


3.23 "H" Outdoor Unit: Abnormal Outdoor Fan Motor Signal

Remote Controller Display	X'1
Applicable Models	REYQ8P~48P
Method of Malfunction Detection	Detection of abnormal signal from fan motor.
Malfunction Decision Conditions	In case of detection of abnormal signal at starting fan motor.
Supposed Causes	 Abnormal fan motor signal (circuit malfunction) Broken, short or disconnection connector of fan motor connection cable


■ Fan Inverter PC board malfunction (A2P)



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

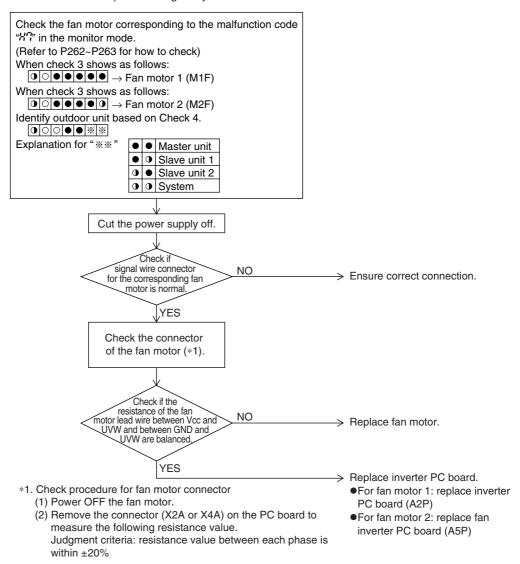

Connector for signal wires (X2A or X4A)

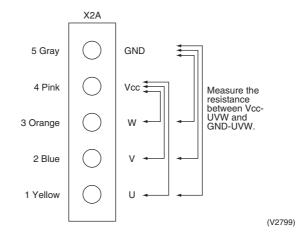

3.24 "HS" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air

Remote Controller Display HE

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from the temperature detected by the outdoor air thermistor.

Malfunction Decision Conditions When the outside air temperature thermistor has short circuit or open circuit.


Supposed Causes

- Defective thermistor connection
- Defect of thermistor (R1T) for outdoor air
- Defect of outdoor unit PC board (A1P)

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

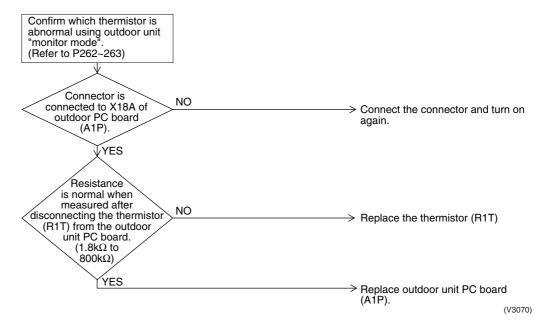

G

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.25 " Outdoor Unit: Current Sensor Malfunction

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected according to the current value detected by current sensor.

Malfunction Decision Conditions

When the current value detected by current sensor becomes 5A or lower, or 40A or more during standard compressor operation.

Supposed Causes


- Faulty current sensor (A6P, A8P)
- Faulty outdoor unit PC board
- Defective compressor

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

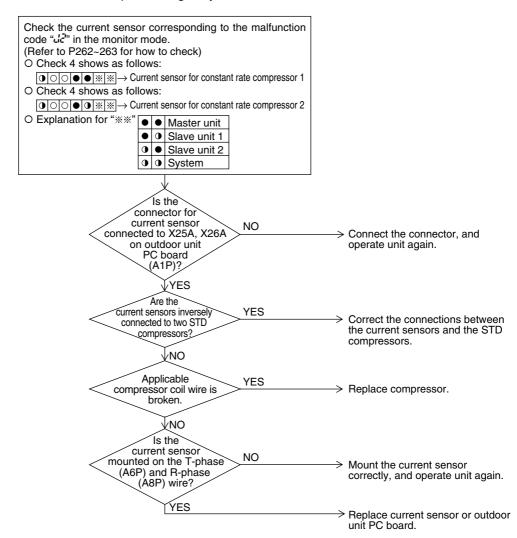

(V3071)

3.26 "♂3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R31T, R32T, R33T)

Remote Controller Display

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from the temperature detected by discharge pipe temperature thermistor.

Malfunction Decision Conditions When a short circuit or an open circuit in the discharge pipe temperature thermistor is detected.


Supposed Causes

- Defect of thermistor (R31T, R32T, R33T) for outdoor unit discharge pipe
- Defect of outdoor unit PC board (A1P)
- Defect of thermistor connection

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, tion or parts damage may be occurred.

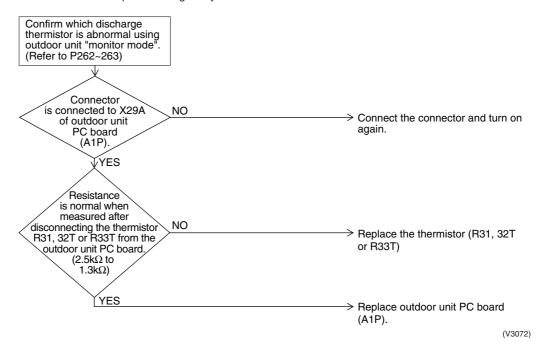

The alarm indicator is displayed when the fan is being used also.

5

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.27 "↵" Outdoor Unit: Malfunction of Temperature Sensor for Heat Exchanger Gas (R2T or R11T)

Remote Controller Display 714

Applicable Models

REYQ8P~48P

Method of Malfunction Detection Detect malfunction based on the temperature detected by each thermistor.

Malfunction Decision Conditions In operation, when a thermistor is disconnected or short circuits.


Supposed Causes

- Defective connection of thermistor
- Defective thermistor
- Defective outdoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, ation or parts damage may be occurred.

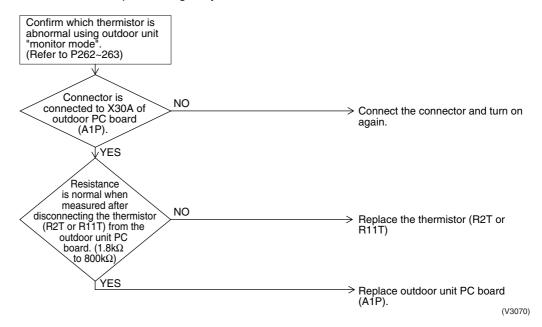

G

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.28 "♣5" Outdoor Unit: Malfunction of Thermistor (R8T or R10T) for Suction Pipe

Remote Controller Display 119

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from the temperature detected by the suction pipe temperature thermistor.

Malfunction Decision Conditions When a short circuit or an open circuit in the suction pipe temperature thermistor is detected.


Supposed Causes

- Defect of thermistor (R8T or R10T) for outdoor unit suction pipe
- Defect of outdoor unit PC board (A1P)
- Defect of thermistor connection

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

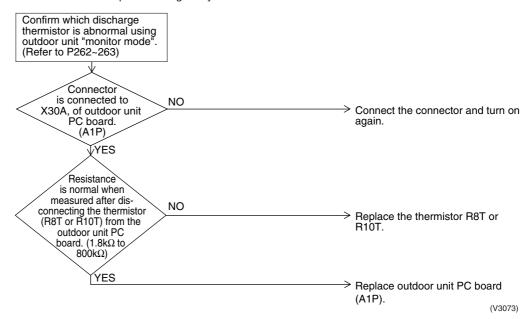

E

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.29 "5" Outdoor Unit: Malfunction of Thermistor (R4T or R12T) for Outdoor Unit Heat Exchanger

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from the temperature detected by the heat exchanger thermistor.

Malfunction Decision Conditions When a short circuit or an open circuit in the heat exchange thermistor is detected.


Supposed Causes

- Defect of thermistor (R4T or R12T) for outdoor unit coil
- Defect of outdoor unit PC board (A1P)
- Defect of thermistor connection

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

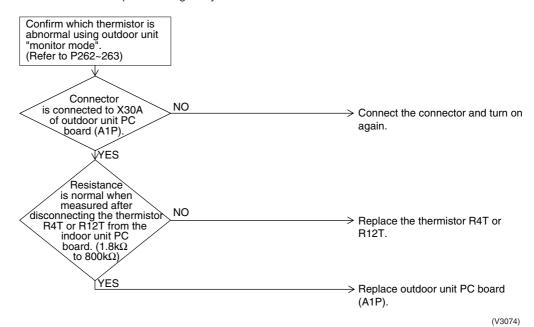

G

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.30 "4" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 1 (R6T, R9T or R14T)

Remote Controller Display 11

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected according to the temperature detected by liquid pipe thermistor.

Malfunction Decision Conditions When the liquid pipe thermistor is short circuited or open.


Supposed Causes

- Faulty liquid pipe thermistor 1 (R6T), (R9T) or (R14T)
- Faulty outdoor unit PC board
- Defect of thermistor connection

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

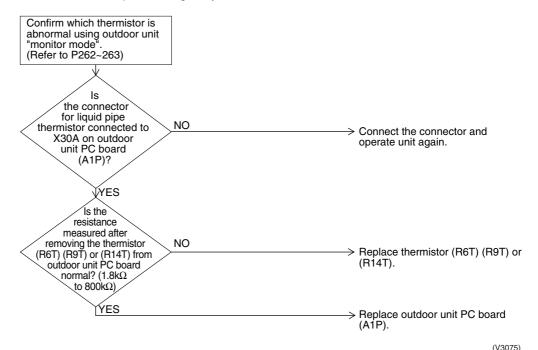

G

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.31 "45" Outdoor Unit: Malfunction of Liquid Pipe Thermistor 2 (R7T or R15T)

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected according to the temperature detected by liquid pipe thermistor.

Malfunction Decision Conditions When the liquid pipe thermistor is short circuited or open.


Supposed Causes

- Faulty liquid pipe thermistor 2 (R7T or R15T)
- Faulty outdoor unit PC board
- Defect of thermistor connection

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

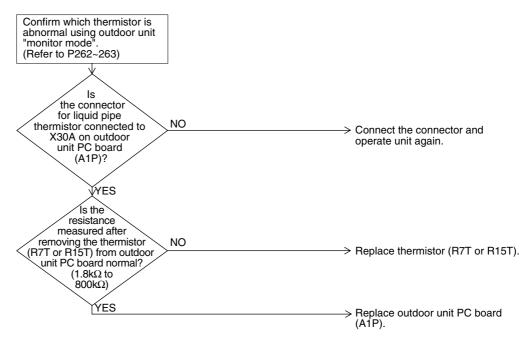

(V3075)

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.32 "♂" Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T or R13T)

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected according to the temperature detected by subcooling heat exchanger gas pipe thermistor.

Malfunction Decision Conditions

When the subcooling heat exchanger gas pipe thermistor is short circuited or open.


Supposed Causes

- Faulty subcooling heat exchanger gas pipe thermistor (R5T or R13T)
- Faulty outdoor unit PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

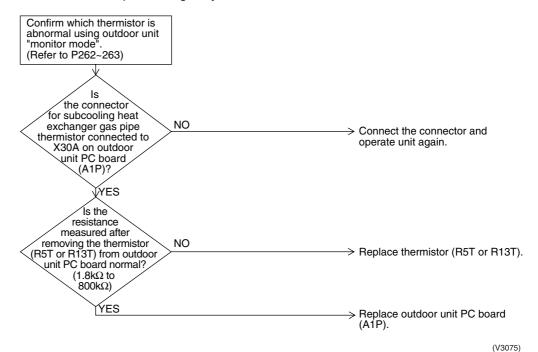

5

* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.33 " Children of High Pressure Sensor

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from the pressure detected by the high pressure sensor.


Malfunction Decision Conditions When the high pressure sensor is short circuit or open circuit. (Not less than 4.22MPa, or 0.01MPa and below)

Supposed Causes

- Defect of high pressure sensor system
- Connection of low pressure sensor with wrong connection.
- Defect of outdoor unit PC board.
- Defective connection of high pressure sensor

(V2806)

Troubleshooting

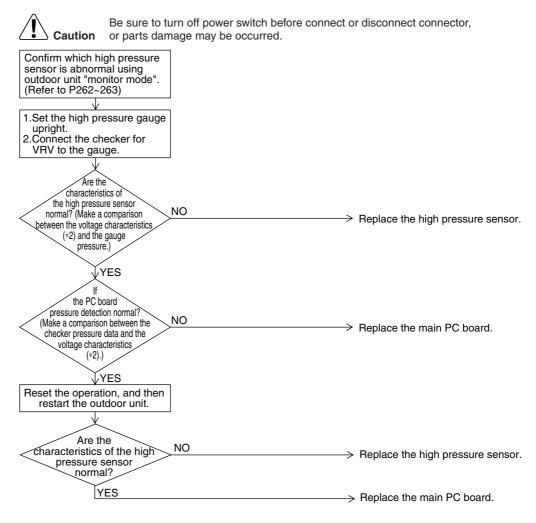

*1: Pressure sensor subject to malfunction code

Malfunction code	Pressure sensor subject to malfunction code	Electric symbol
JA	High pressure sensor	S1NPH

*2: Voltage measurement point

Outdoor unit PC board (A2P)

**2 Measure DC voltage here.

**2 Measure DC voltage here.

**2 Wesser DC voltage here.

**2 (V2807)

C

*2: Refer to "Pressure Sensor, Pressure / Voltage Characteristics" table on P457.

3.34 "4" Outdoor Unit: Malfunction of Low Pressure Sensor

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected from pressure detected by low pressure sensor.

Malfunction Decision Conditions

When the low pressure sensor is short circuit or open circuit. (Not less than 1.77MPa, or -0.01MPa and below)


Supposed Causes

- Defect of low pressure sensor system
- Connection of high pressure sensor with wrong connection.
- Defect of outdoor unit PC board.
- Defective connection of low pressure sensor


Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

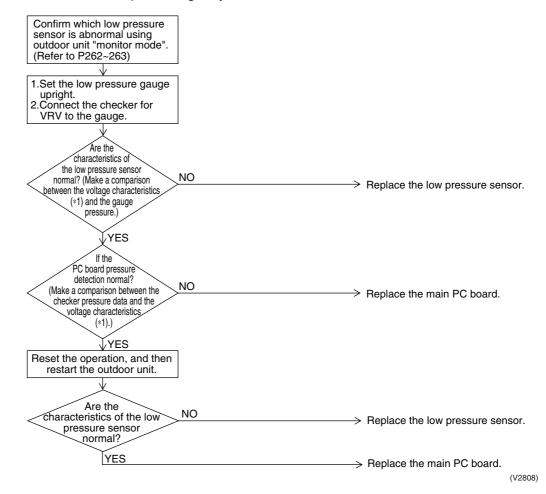

*1: Voltage measurement point

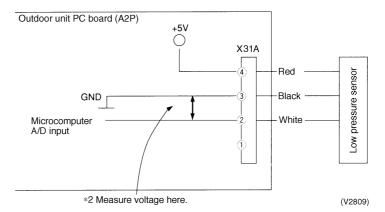



*2: Refer to "Pressure Sensor, Pressure / Voltage Characteristics" table on P457.

3.35 "L !" Outdoor Unit: Defective Inverter PC Board

Remote Controller Display Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected based on the current value during waveform output before starting

compressor.

Malfunction is detected based on the value from current sensor during synchronous operation

when starting the unit.

Malfunction Decision Conditions Overcurrent (OCP) flows during waveform output.

Malfunction of current sensor during synchronous operation.

IPM failure.


Supposed Causes

■ Inverter PC board (A2P)

- IPM failure
- Current sensor failure
- Drive circuit failure



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

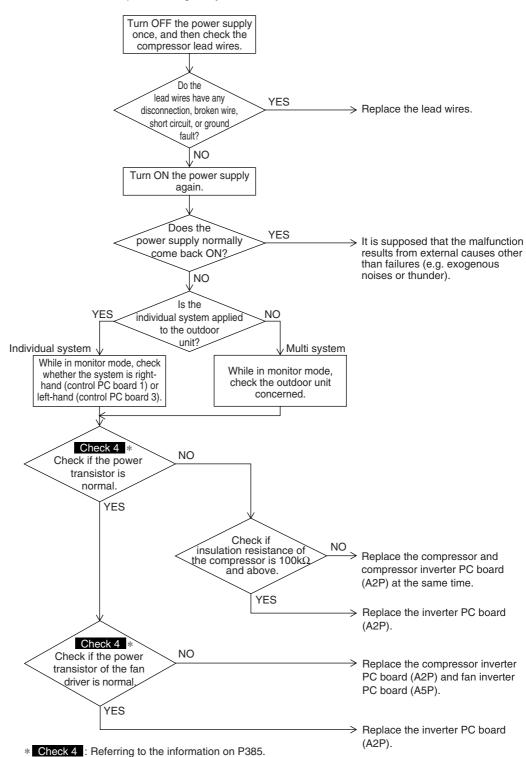


*1. List of Inverter PC boards


Model	Name	Electric symbol	
REYQ 8, 10,12P	Compressor inverter PC board	A5P	
116 0, 10,121	Fan inverter PC board	A6P, A7P	
REYQ 14, 16P	Compressor inverter PC board	A4P, A7P	
1112 14, 101	Fan inverter PC board	A6P, A9P	
REMQ 8, 10, 12P	Compressor inverter PC board	A4P	
TILIVIQ 0, 10, 121	Fan inverter PC board	A5P	
REMQ 14, 16P	Compressor inverter PC board	A4P	
TILIVIQ 14, TOF	Fan inverter PC board	A5P, A7P	

3.36 "L's" Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise


Remote Controller Display	LY
Applicable Models	REYQ8P~48P
Method of Malfunction Detection	Fin temperature is detected by the thermistor of the radiation fin.
Malfunction Decision Conditions	When the temperature of the inverter radiation fin increases above 87°C.
Supposed Causes	 Actuation of fin thermal (Actuates above 87°C) Defect of inverter PC board

■ Defect of fin thermistor

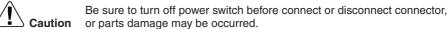

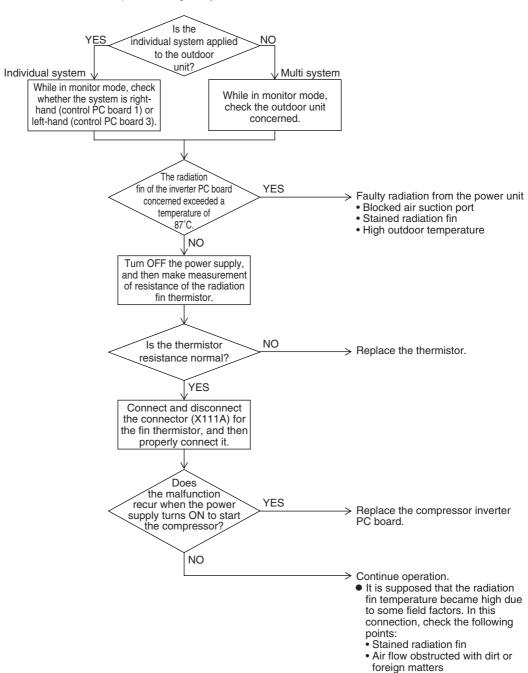

Damage to fan impellersToo high outdoor temperature

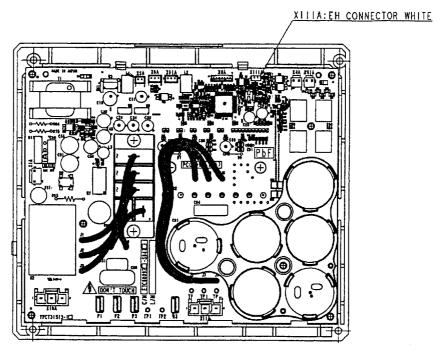

Inverter PC board for compressor




* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.37 "L5" Outdoor Unit: Momentary Overcurrent of Inverter Compressor

Remote Controller Display	Ł S
Applicable Models	REYQ8P~48P
Method of Malfunction Detection	Malfunction is detected from current flowing in the power transistor.
Malfunction Decision Conditions	When an excessive current flows in the power transistor. (Instantaneous overcurrent also causes activation.)
Supposed Causes	 Defect of compressor coil (disconnected, defective insulation) Compressor start-up malfunction (mechanical lock) Defect of inverter PC board

Compressor inspection

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

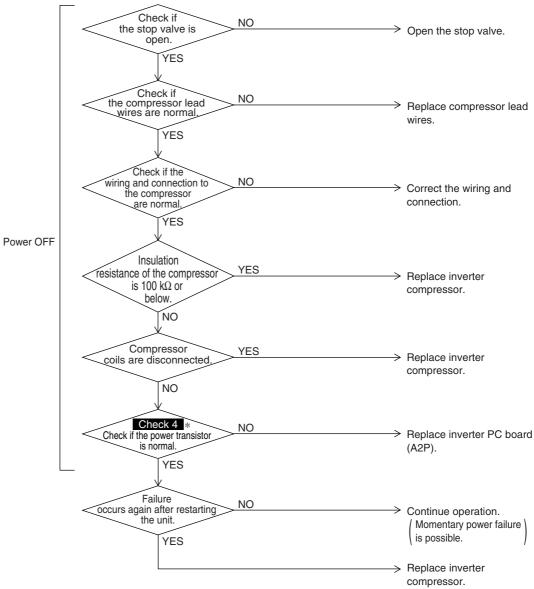

* Check 4 : Referring to the information on P385.

3.38 "L8" Outdoor Unit: Momentary Overcurrent of Inverter Compressor

Remote Controller Display 18

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Malfunction is detected by current flowing in the power transistor.

Malfunction Decision Conditions When overload in the compressor is detected. (Inverter secondary current 16.1A)

(1) 19.0A and over continues for 5 seconds.


(2) 16.1A and over continues for 260 seconds.

Supposed Causes

- Compressor overload
- Compressor coil disconnected
- Defect of inverter PC board
- Faulty compressor

Output current check

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

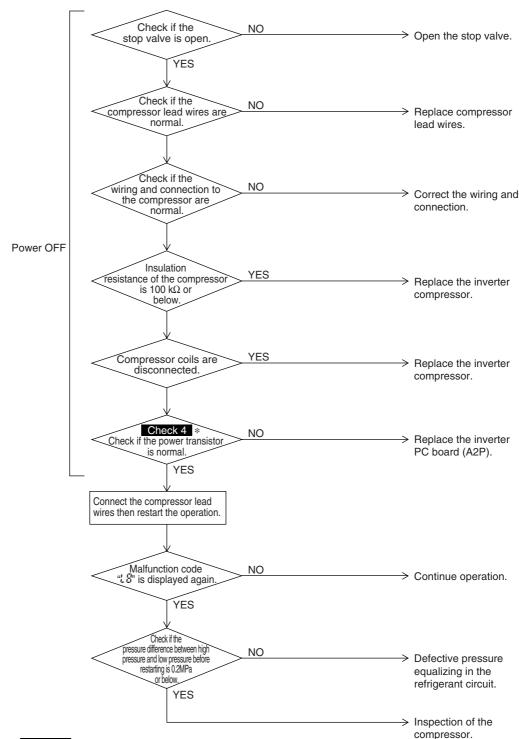

* Check 4 : Referring to the information on P385.

3.39 "LS" Outdoor Unit: Inverter Compressor Starting Failure

Remote Controller Display 13

Applicable Models

REYQ8P~48P


Method of Malfunction Detection Detect the failure based on the signal waveform of the compressor.


Malfunction Decision Conditions Starting the compressor does not complete.

Supposed Causes

- Failure to open the stop valve
- Defective compressor
- Wiring connection error to the compressor
- Large pressure difference before starting the compressor
- Defective inverter PC board

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

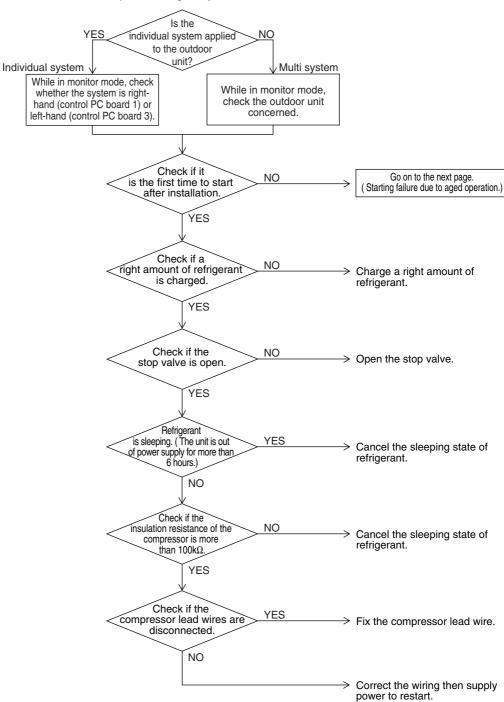

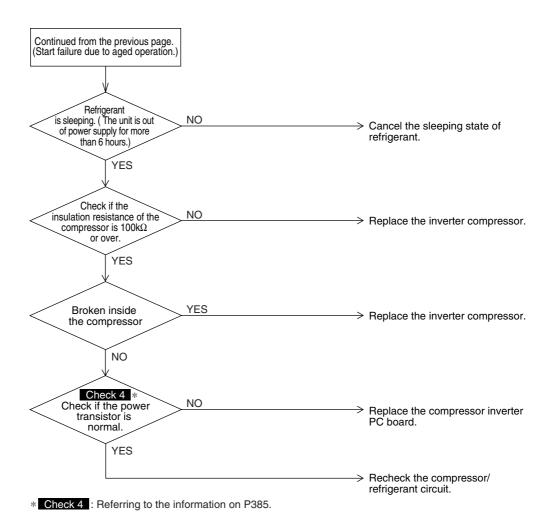

3.40 "LE" Outdoor Unit: Malfunction of Transmission between Inverter and Control PC Board

Remote Controller Display

Applicable Models

REYQ8P~48P


Method of Malfunction Detection

Check the communication state between inverter PC board and control PC board by micro-computer.

Malfunction Decision Conditions When the correct communication is not conducted in certain period.


Supposed Causes


- Malfunction of connection between the inverter PC board and outdoor main PC board
- Defect of outdoor main PC board (transmission section)
- Defect of inverter PC board
- Defect of noise filter
- Faulty fan inverter
- Incorrect type of inverter PC board
- Faulty inverter compressor
- Faulty fan motor
- External factor (noise etc.)

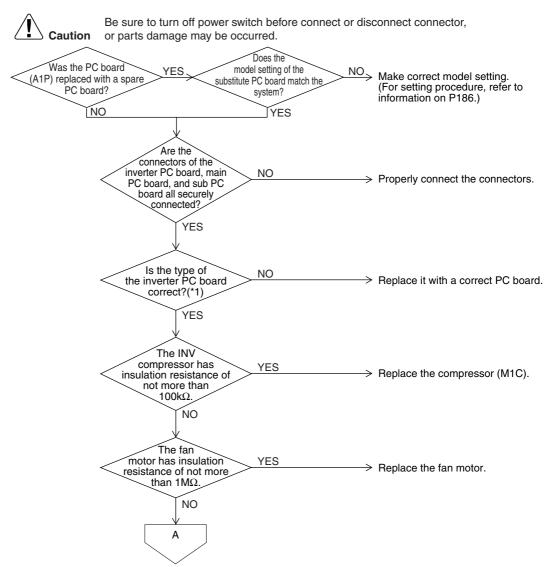

*1. List of Inverter PC boards

	Comp1	Comp2	FAN1	FAN2
REYQ8PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ10PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ12PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ14PY1	PC0509-1	PC0509-1	PC0511-1	PC0511-1
REYQ16PY1	PC0509-1	PC0509-1	PC0511-1	PC0511-1
REMQ8PY1	PC0509-1	_	PC0511-1	_
REMQ10PY1	PC0509-1	_	PC0511-1	_
REMQ12PY1	PC0509-1	_	PC0511-1	_
REMQ14PY1	PC0509-1	_	PC0511-3	PC0511-4
REMQ16PY1	PC0509-1	_	PC0511-3	PC0511-4

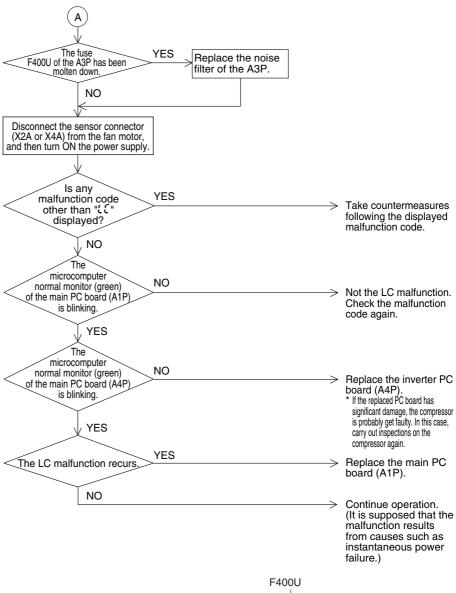

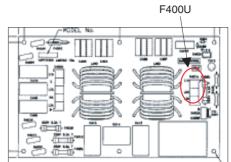

3.41 "P !" Outdoor Unit: Inverter Over-Ripple Protection

Remote Controller Display FI

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Imbalance in supply voltage is detected in PC board.

Imbalance in the power supply voltage causes increased ripple of voltage of the main circuit capacitor in the inverter. Consequently, the increased ripple is detected.


Malfunction Decision Conditions When the resistance value of thermistor becomes a value equivalent to open or short circuited status.

★ Malfunction is not decided while the unit operation is continued.
 "P !" will be displayed by pressing the inspection button.

When the amplitude of the ripple exceeding a certain value is detected for consecutive 4 minutes.

Supposed Causes

- Open phase
- Voltage imbalance between phases
- Defect of main circuit capacitor
- Defect of inverter PC board
- Defect of K2 relay in inverter PC board
- Improper main circuit wiring

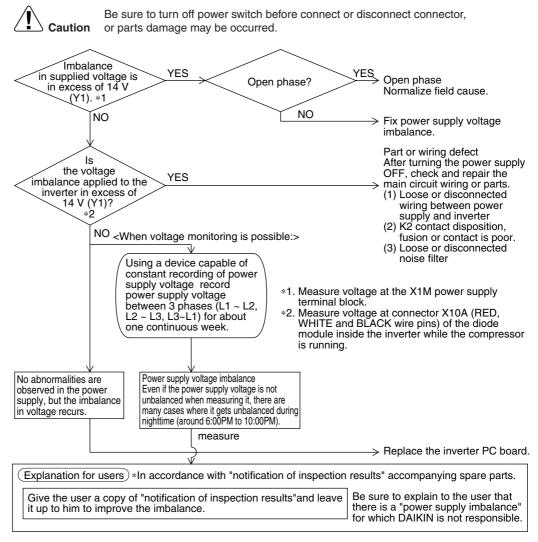

(V2816)

3.42 "PY" Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise Sensor

Remote Controller Display



Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Resistance of radiation fin thermistor is detected when the compressor is not operating.

Malfunction Decision Conditions

When the resistance value of thermistor becomes a value equivalent to open or short circuited status.

★ Malfunction is not decided while the unit operation is continued.
""" will be displayed by pressing the inspection button.


Supposed Causes


- Defect of radiator fin temperature sensor
- Defect of inverter PC board
- Faulty inverter compressor
- Faulty fan motor

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

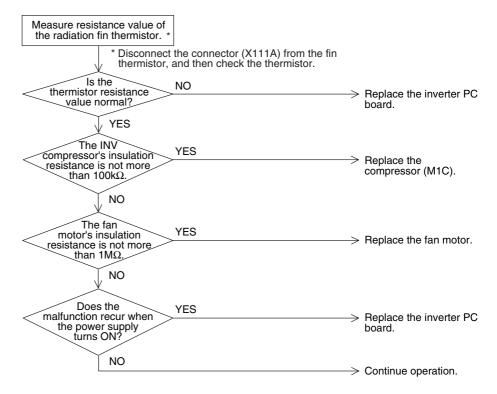

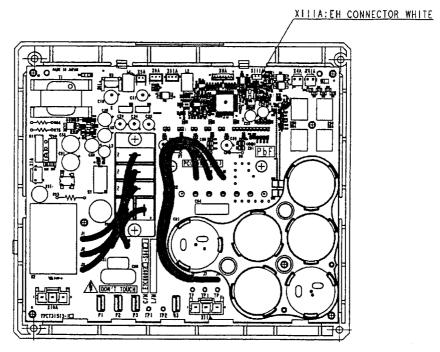

Inverter PC board for compressor




* Refer to "Thermistor Resistance / Temperature Characteristics" table on P455.

3.43 "Pu" Outdoor Unit: Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board

Remote Controller Display	PJ
Applicable Models	REYQ8P~48P
Method of Malfunction Detection	This malfunction is detected according to communications with the inverter.
Malfunction Decision Conditions	Make judgment according to communication data on whether or not the type of the inverter PC board is correct.
Supposed Causes	■ Faulty (or no) field setting after replacing main PC board ■ Mismatching of type of PC board



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

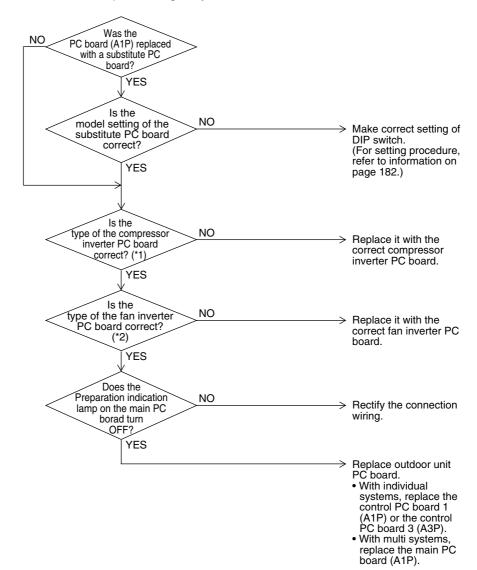

*1. List of Inverter PC boards

	Comp1	Comp2	FAN1	FAN2
REYQ8PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ10PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ12PY1	PC0509-1	_	PC0511-3	PC0511-4
REYQ14PY1	PC0509-1	PC0509-1	PC0511-1	PC0511-1
REYQ16PY1	PC0509-1	PC0509-1	PC0511-1	PC0511-1
REMQ8PY1	PC0509-1	_	PC0511-1	_
REMQ10PY1	PC0509-1	_	PC0511-1	_
REMQ12PY1	PC0509-1	_	PC0511-1	_
REMQ14PY1	PC0509-1	_	PC0511-3	PC0511-4
REMQ16PY1	PC0509-1	_	PC0511-3	PC0511-4

3.44 "ピ" Outdoor Unit: Gas Shortage Alert

Remote Controller Display Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Detect gas shortage based on the temperature difference between low pressure or suction pipe and heat exchanger.

Malfunction Decision Conditions [In cooling mode]

Low pressure becomes 0.1MPa or below.

ns [In heating mode]

The degree of superheat of suction gas becomes 20 degrees and over.

SH= Ts1 -Te

Ts1: Suction pipe temperature detected by thermistor
Te: Saturated temperature corresponding to low pressure
★Malfunction is not determined. The unit continues operation.

Supposed Causes

- Gas shortage or refrigerant clogging (piping error)
- Defective thermistor (R4T, R7T, R12T, R15T)
- Defective low pressure sensor
- Defective outdoor unit PC board (A1P)

> Replace the main PC board

Remove the factor of decreasing low pressure by

referring to Check 6

(A1P).

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.


In cooling mode

- ① Set up a pressure gauge at the service port on the low pressure side.

 ② Reset the operation using the remote controller then restart. Check if the low pressure is 0.1MPa or below. (*1) Check if the NO property of low pressure Replace the low pressure sensor is normal (*2)YES YES
- *1: Check the low pressure value by using pressure gauge in operation. *2: Compare the actual measurement value by pressure sensor with the
- value by the pressure gauge. (To gain actual measurement value by pressure sensor, measure the voltage at the connector [between (2)-(3)] and then convert the value

into pressure referring to P437.)

In heating mode

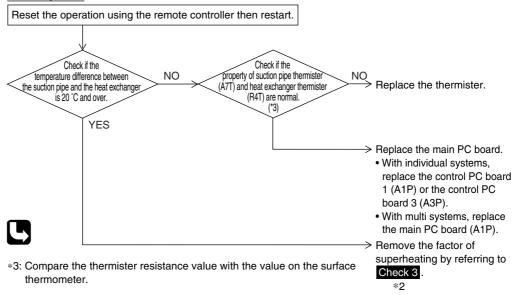

- *1 Check 6 : Referring to the information on P387.
- *2 Check 3: Referring to the information on P384.

3.45 "L" Reverse Phase, Open Phase

Remote Controller **Display**

Applicable Models

REYQ8P~48P

Method of Malfunction **Detection**

The phase of each phase are detected by reverse phase detection circuit and right phase or reverse phase are judged.

Malfunction **Decision Conditions**

When a significant phase difference is made between phases.


Supposed Causes

- Power supply reverse phase
- Power supply open phase
- Defect of outdoor PC board (A1P)

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

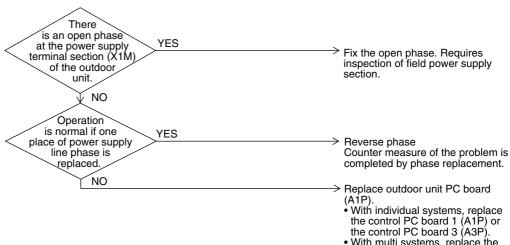

With multi systems, replace the main PC board (A1P).

(V2820)

3.46 "Le" Outdoor Unit: Power Supply Insufficient or Instantaneous Failure

Remote Controller Display



Applicable Models

REYQ8P~48P


Method of Malfunction Detection


Detection of voltage of main circuit capacitor built in the inverter and power supply voltage.

Malfunction Decision Conditions When the voltage aforementioned is not less than 780V or not more than 320V, or when the current-limiting voltage does not reach 200V or more or exceeds 740V.

Supposed Causes

- Power supply insufficient
- Instantaneous power failure
- Open phase
- Defect of inverter PC board
- Defect of outdoor control PC board
- Main circuit wiring defect
- Faulty compressor
- Faulty fan motor
- Faulty connection of signal cable

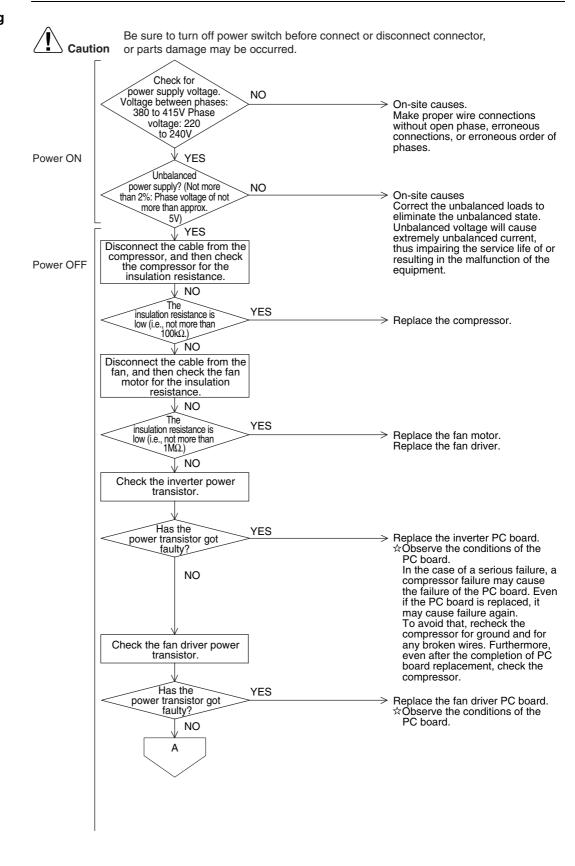

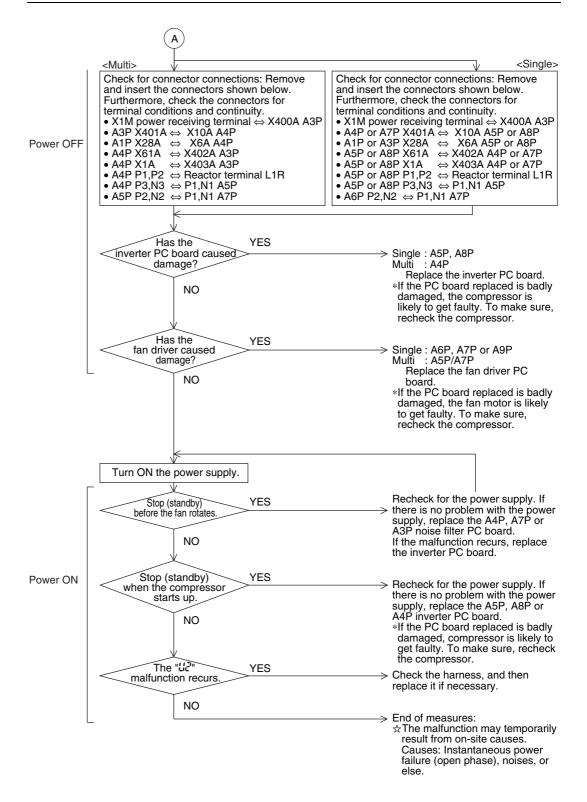

3.47 "U3" Outdoor Unit: Check Operation not Executed

Remote Controller Display

Applicable Models

REYQ8P~48P

Method of Malfunction Detection

Check operation is executed or not

Malfunction Decision Conditions Malfunction is decided when the unit starts operation without check operation.


Supposed Causes

Check operation is not executed.

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

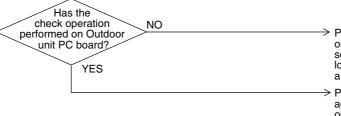

Press and hold BS4 on the outdoor master PC board for 5 seconds or more, or turn ON the local setting mode 2-3 to conduct a check operation.

Performs the chech operation again and completes the check operation.

When a leakage detection function is needed, normal operation of charging refrigerant must be completed. And then, start once again and complete a check operation.

(V3052)

3.48 "" Malfunction of Transmission between Indoor Units

Remote Controller Display Applicable Models

All model of indoor unit REYQ8P~48P


Method of Malfunction Detection


Check if the transmission between indoor unit and outdoor unit is correctly executed using microcomputer.

Malfunction Decision Conditions When transmission is not carried out normally for a certain amount of time

Supposed Causes


- Indoor to outdoor, outdoor to outdoor transmission wiring F1, F2 disconnection, short circuit or wrong wiring
- Outdoor unit power supply is OFF
- System address doesn't match
- Defect of indoor unit PC board
- Defect of outdoor unit PC board

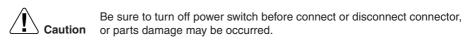

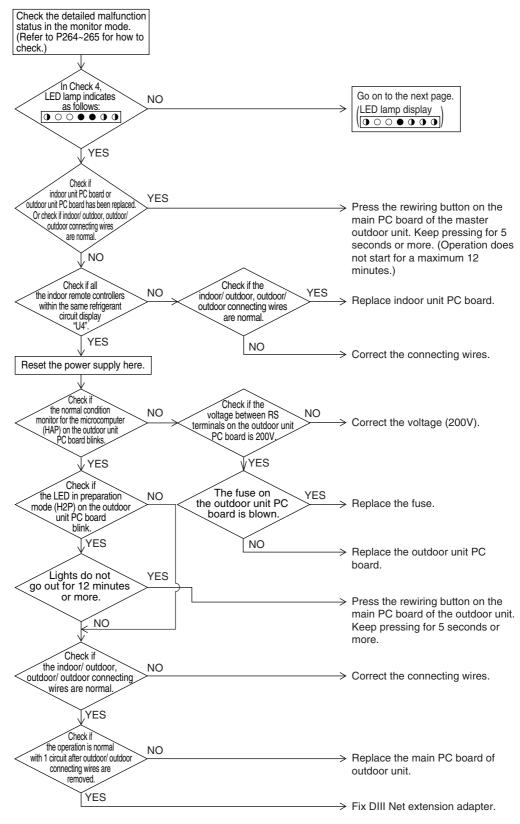



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

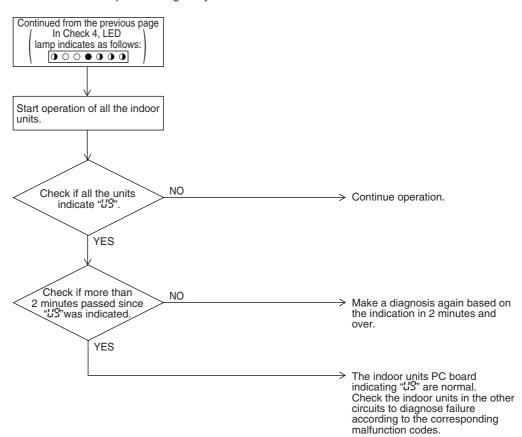

3.49 "US" Indoor Unit: Malfunction of Transmission between Remote Controller and Indoor Unit

Remote Controller Display

Applicable Models

All models of indoor units

Method of Malfunction Detection

In case of controlling with 2-remote controller, check the system using microcomputer is signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction Decision Conditions

Normal transmission does not continue for specified period.


Supposed Causes

- Malfunction of indoor unit remote controller transmission
- Connection of two main remote controllers (when using 2 remote controllers)
- Defect of indoor unit PC board
- Defect of remote controller PC board
- Malfunction of transmission caused by noise

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

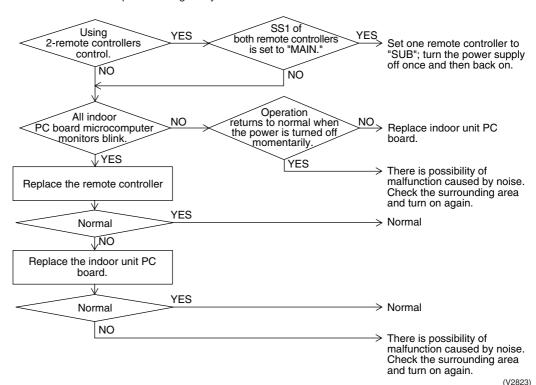

3.50 "ピ" Outdoor Unit: Transmission Failure (Across Outdoor Units)

Remote
Controller
Display

Applicable Models

All models of outdoor units

Method of Malfunction Detection

Microcomputer checks if transmission between outdoor units.


Malfunction Decision Conditions When transmission is not carried out normally for a certain amount of time

Supposed Causes

- Connection error in connecting wires between outdoor unit and outdoor unit outside control adapter
- Connection error in connecting wires across outdoor units
- Setting error in switching cooling/ heating
- Integrated address setting error for cooling/ heating (function unit, outdoor unit outside control adapter)
- Defective outdoor unit PC board (A1P or A3P)
- Defective outdoor unit outside control adapter




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

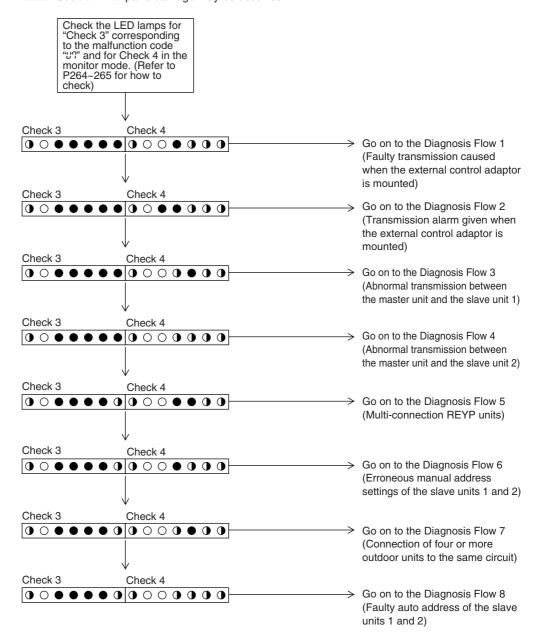




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

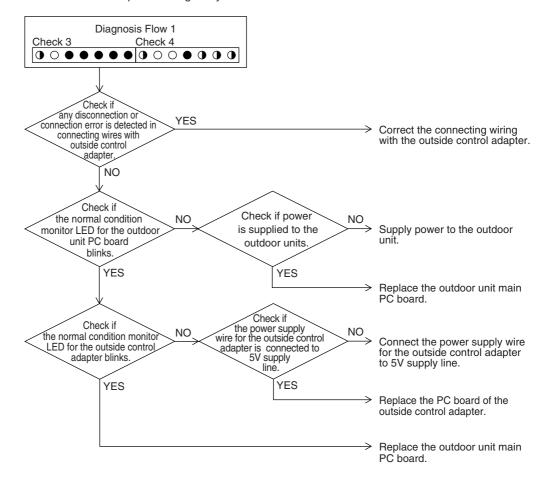



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

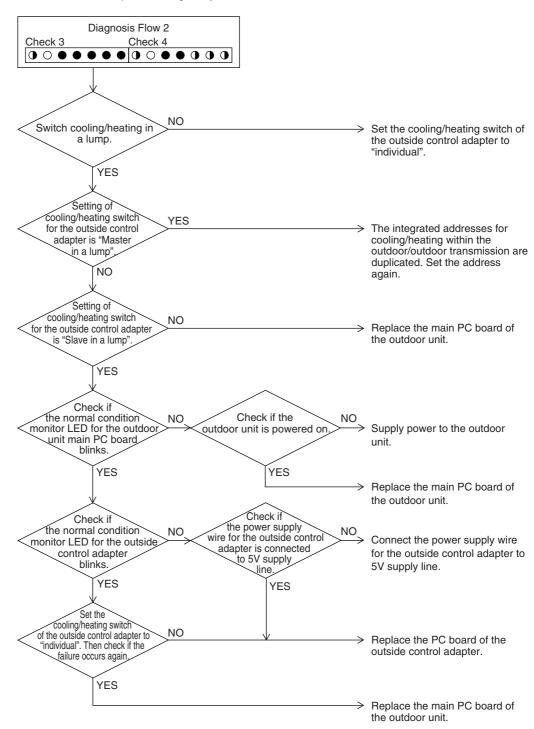

Remove the connecting wires of

the outdoor multi and then reset

Replace the main PC board of


the power supply.

the outdoor unit.

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

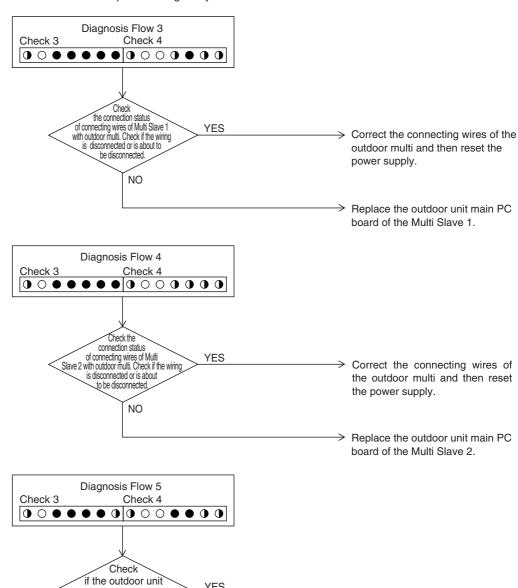

355 Troubleshooting

YES

REYQ8~16PY1 is


connected to multi-

system

NO



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

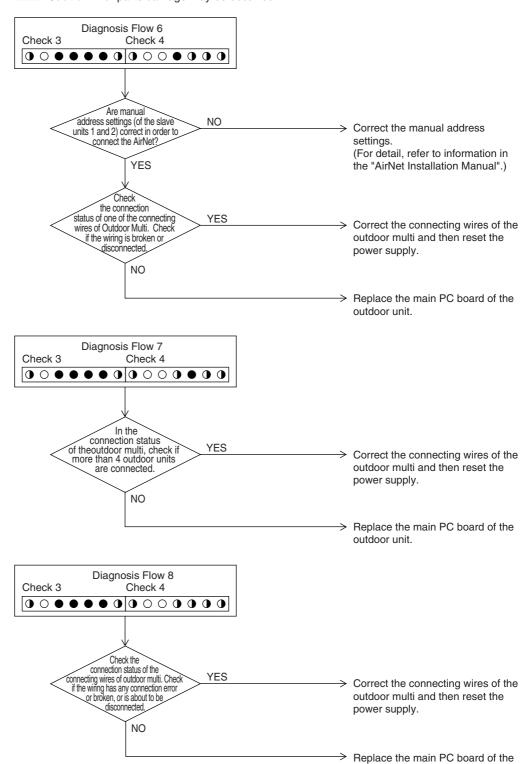

outdoor unit.

3.51 "Later Transmission Detween Main and Sub Remote Controllers

Remote Controller Display 118

Applicable Models

All models of indoor units

Method of Malfunction Detection

In case of controlling with 2-remote controller, check the system using microcomputer if signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction Decision Conditions

Normal transmission does not continue for specified period.


Supposed Causes

- Malfunction of transmission between main and sub remote controller
- Connection between sub remote controllers
- Defect of remote controller PC board

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

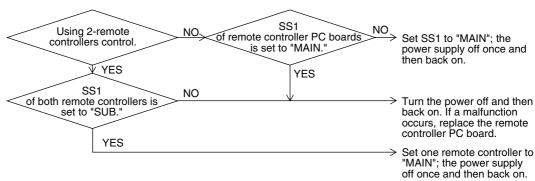

(V2825)

3.52 "US" Indoor Unit: Malfunction of Transmission between Indoor and Outdoor Units in the Same System

Remote Controller Display 113

Applicable Models

All models of indoor units

REYQ8P~48P

Method of Malfunction Detection

Detect malfunction signal for the other indoor units within the circuit by outdoor unit PC board.

Malfunction Decision Conditions When the malfunction decision is made on any other indoor unit within the system concerned.


Supposed Causes

- Malfunction of transmission within or outside of other system
- Malfunction of electronic expansion valve in indoor unit of other system
- Defect of PC board of indoor unit in other system
- Improper connection of transmission wiring between indoor and outdoor unit

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

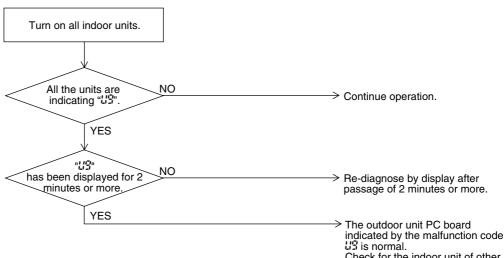

indicated by the malfunction code us is normal.
Check for the indoor unit of other system, and then conduct troubleshooting by diagnosis according to the Malfunction Code Flowchart.

3.53 "Lift" Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller

Remote Controller Display Applicable Models

All models of indoor unit

REYQ8P~48P

Method of Malfunction Detection

A difference occurs in data by the type of refrigerant between indoor and outdoor units.

The number of indoor units is out of the allowable range.

Incorrect signals are transmitted among the indoor unit, BS unit, and outdoor unit.


Malfunction Decision Conditions The malfunction decision is made as soon as either of the abnormalities aforementioned is detected.

Supposed Causes

- Excess of connected indoor units
- Defect of outdoor unit PC board (A1P)
- Mismatching of the refrigerant type of indoor and outdoor unit.
- Setting of outdoor PC board was not conducted after replacing to spare parts PC board.




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

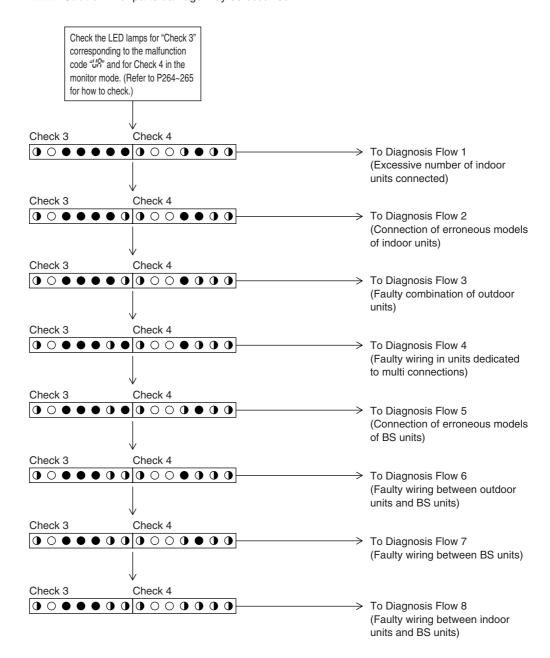





Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

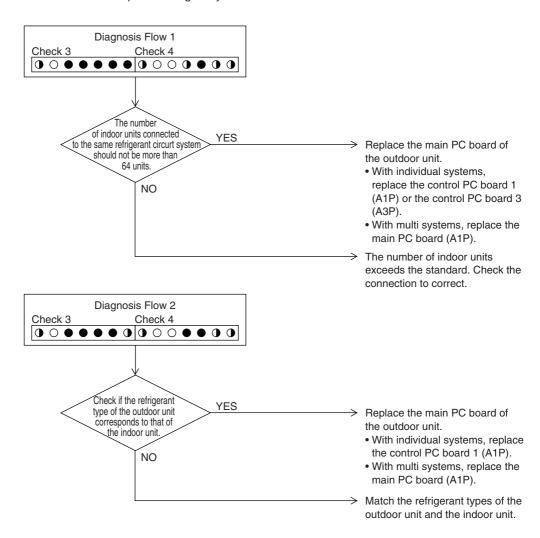




Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

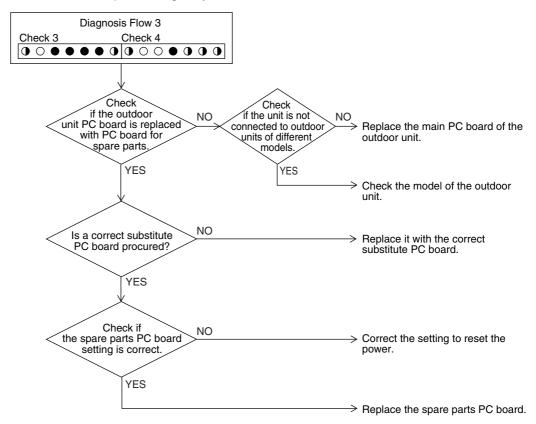


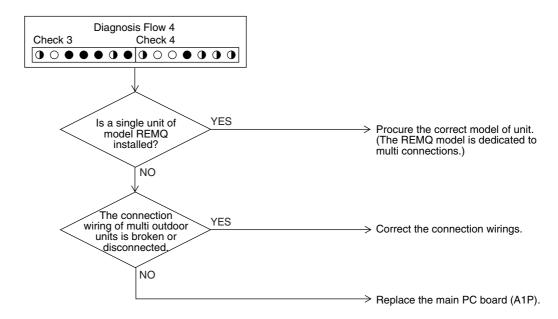



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

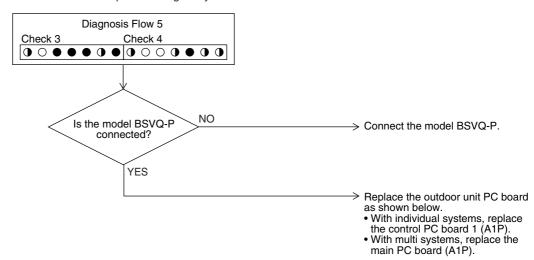

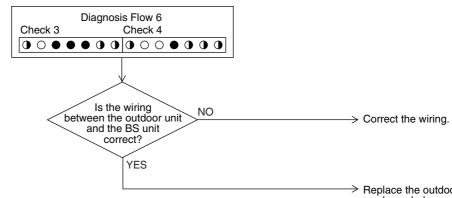

Replace the outdoor unit PC board as shown below.

• With individual systems, replace the control PC board 1 (A1P).

• With multi systems, replace the main PC board (A1P).

Replace the indoor unit or BS unit PC board.


Troubleshooting

Cautio

correct?

YES

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

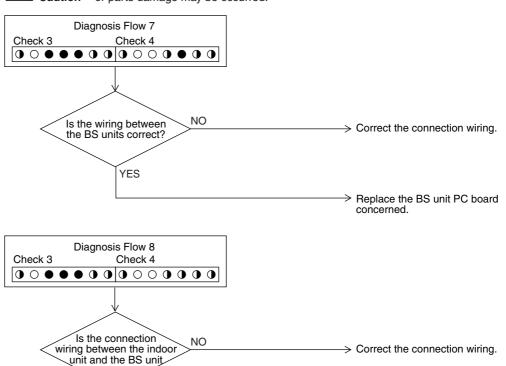

3.54 "LIL" Address Duplication of Centralized Controller

Remote Controller Display Applicable Models

All models of indoor unit Centralized controller

Method of Malfunction Detection The principal indoor unit detects the same address as that of its own on any other indoor unit.

Malfunction Decision Conditions The malfunction decision is made as soon as the abnormality aforementioned is detected.

Supposed Causes

Address duplication of centralized controller

Troubleshooting



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

The centralized address is duplicated.

Make setting change so that the centralized address will not be duplicated.

3.55 "LE" Malfunction of Transmission between Centralized Controller and Indoor Unit

Remote
Controller
Display

Applicable Models

All models of indoor units Centralized controller Schedule timer Intelligent Touch Controller

Method of Malfunction Detection


Microcomputer checks if transmission between indoor unit and centralized controller is normal.

Malfunction Decision Conditions


When transmission is not carried out normally for a certain amount of time

Supposed Causes

- Malfunction of transmission between optional controllers for centralized control and indoor unit
- Connector for setting master controller is disconnected.
 (or disconnection of connector for independent / combined use changeover switch.)
- Failure of PC board for central remote controller
- Defect of indoor unit PC board

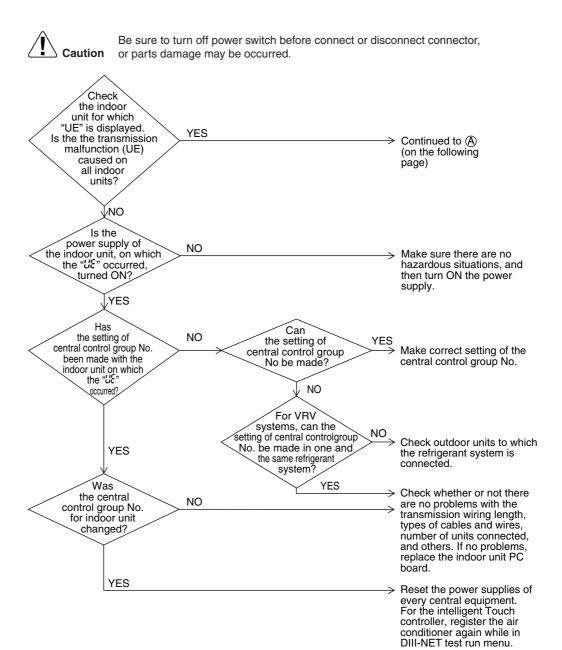

(V2822)

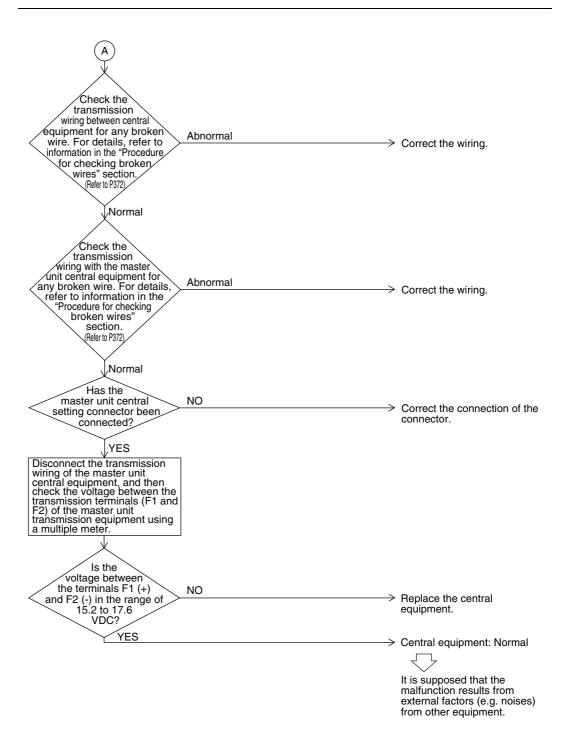

3.56 "是" System is not Set yet

Remote Controller Display



Applicable Models

All models of indoor units

REYQ8P~48P

Method of Malfunction Detection

On check operation, the number of indoor units in terms of transmission is not corresponding to that of indoor units that have made changes in temperature.


Malfunction Decision Conditions


The malfunction is determined as soon as the abnormality aforementioned is detected through checking the system for any erroneous connection of units on the check operation.

Supposed Causes

- Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units
- Failure to execute check operation
- Defect of indoor unit PC board
- Stop valve is left in closed

Troubleshooting

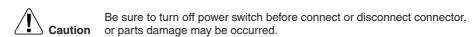

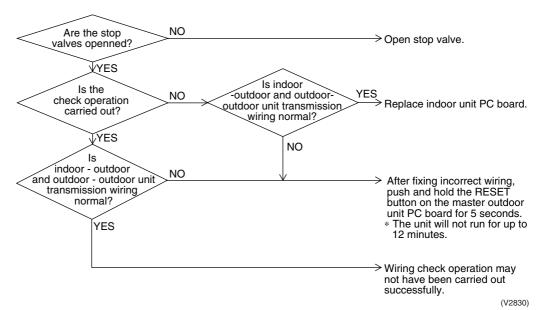

Note

Wiring check operation may not be successful if carried out after the outdoor unit has been off for more than 12 hours, or if it is not carried out after running all connected indoor units in the fan mode for at least an hour.

3.57 "Lis" Malfunction of System, Refrigerant System Address Undefined

Remote Controller Display Applicable Models

All models of indoor units

REYQ8P~48P


Method of Malfunction Detection

Detect an indoor unit with no address setting.

Malfunction Decision Conditions The malfunction decision is made as soon as the abnormality aforementioned is detected.

Supposed Causes

- Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units
- Defect of indoor unit PC board
- Defect of outdoor unit main PC board (A1P or A3P)

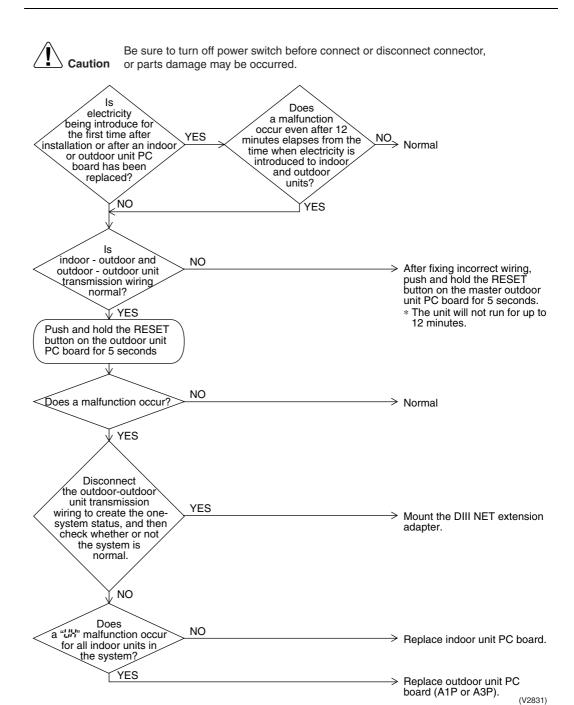

- *1: Check the correct wiring "indoor-outdoor" and "outdoor-outdoor" by Installation Instruction.
- *2: What is Auto Address?

This is the address automatically assigned to indoor units and outdoor units after initial power supply upon installation, or after executing rewiring (Keep pressing the rewiring button for more than 4 seconds).

4. Troubleshooting (OP: Central Remote Controller)

4.1 "M" PC Board Defect

Remote Controller Display MI

Applicable Models

Central remote controller Schedule timer Intelligent Touch Controller

Method of Malfunction Detection

Detect an abnormality in the DIII-NET polarity circuit.

Malfunction
Decision
Conditions

When + polarity and - polarity are detected at the same time.

Supposed Causes


- Defect of central remote controller PC board
- Defect of Intelligent Touch Controller PC board
- Defect of Schedule timer PC board

Troubleshooting

Replace the central remote controller.



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

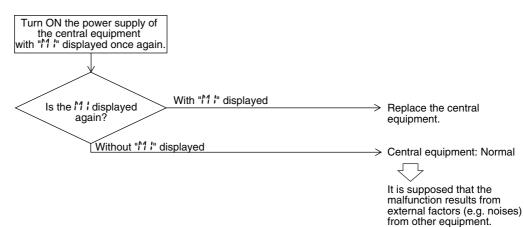

4.2 "Malfunction of Transmission between Optional Controllers for Centralized Control

Remote Controller Display ME

Applicable Models

Central remote controller Schedule timer Intelligent Touch Controller


Method of Malfunction Detection Detect the malfunction according to DIII-NET transmission data. (The system will be automatically reset.)

Malfunction Decision Conditions When no master controller is present at the time of the startup of slave controller. When the centralized controller, which was connected once, shows no response.

Supposed Causes

- Malfunction of transmission between optional controllers for centralized control
- Defect of PC board of optional controllers for centralized control

Troubleshooting

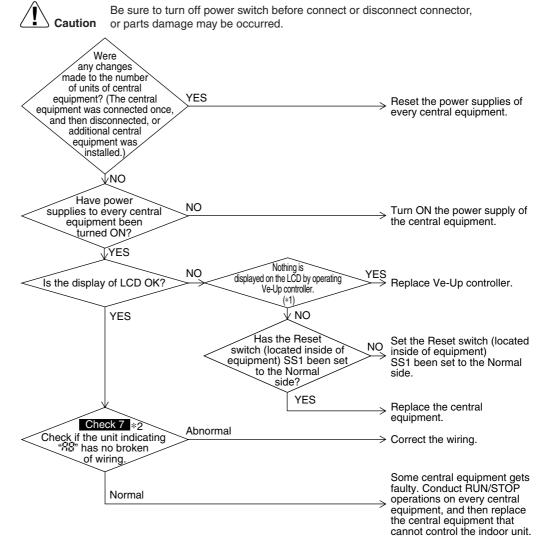

^{*1:} Display screen control using Ve-Up controller: When the screen displays nothing by touching the screen, adjust the contrast volume.

^{*2} Check 7 : Referring to the information on P388.


Causes

4.3 "Mar Improper Combination of Optional Controllers for Centralized Control

Remote Controller Display	MR					
Applicable Models	Central remote controller Intelligent touch controller Schedule timer					
Method of Malfunction Detection	Detect the malfunction according to DIII-NET transmission data.					
Malfunction Decision Conditions	When the schedule timer is set to individual use mode, other central component is present. When multiple master controller are present. When the remote control adapter is present.					
Supposed	■ Improper combination of optional controllers for centralized control					

■ Defect of PC board of optional controller for centralized control

■ More than one master controller is connected

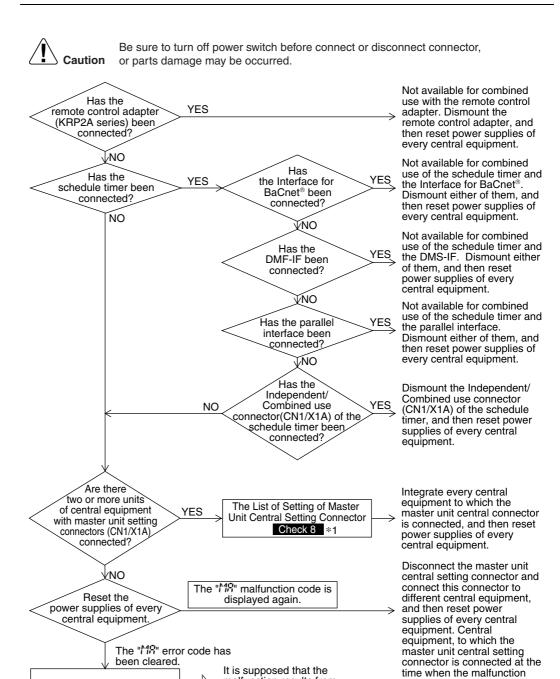

malfunction results from

from other equipment.

external factors (e.g. noises)

code is cleared, is faulty.

Replace this equipment.

*1 Check 8 : Referring to the information on P389.

Central equipment: Normal

4.4 "Marcon and a section and a section of the sec

Remote Controller Display 148

Applicable Models

Central remote controller Schedule timer Intelligent Touch Controller

Method of Malfunction Detection

Detect the malfunction according to DIII-NET transmission data.

Malfunction Decision Conditions

- Two or more units of central remote controllers and Intelligent Touch Controllers are connected, and all of them are set to master unit central setting or slave unit central setting.
- Two units of schedule timers are connected.


Supposed Causes

Address duplication of centralized controller

Troubleshooting

Caution Be su

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

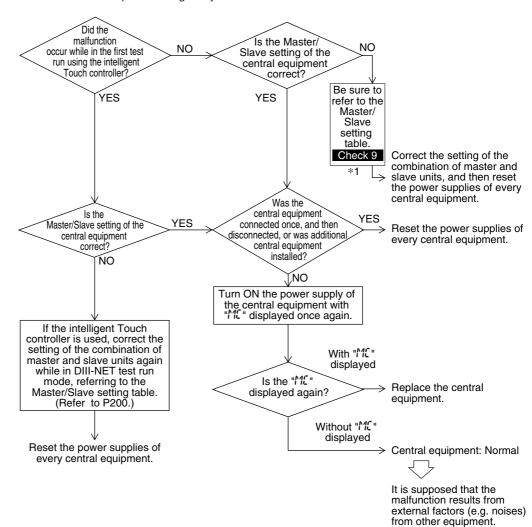

^{*1} Check 9: Referring to the information on P390.

5. Troubleshooting (OP: Unified ON/OFF Controller)

5.1 Operation Lamp Blinks

Remote Controller Display Operation lamp blinks

Applicable Models

All model of indoor units
Unified ON/OFF controller

Method of Malfunction Detection Detect the malfunction according to DIII-NET transmission data.


Malfunction Decision Conditions

Supposed Causes

- Malfunction of transmission between optional central controller and indoor unit
- Connector for setting master controller is disconnected
- Defect of unified ON/OFF controller PC board
- Defect of indoor unit PC board
- Malfunction of air conditioner

(V2841)

Troubleshooting

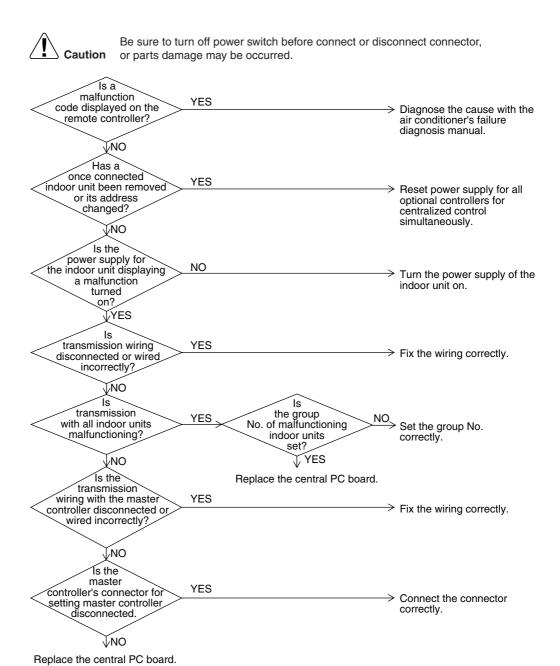

5.2 Display "Under Centralized Control" Blinks (Repeats Single Blink)

Remote Controller Display #under centralized control" (Repeats single blink)

Applicable Models

Unified ON/OFF controller

Central remote controller, Schedule timer

Method of Malfunction Detection

Detect the malfunction according to DIII-NET transmission data.

Malfunction Decision Conditions When the centralized controller, which was connected once, shows no response.

The control ranges are overlapped.


When multiple master central controller are present.


When the schedule timer is set to individual use mode, other central controller is present.

When the wiring adaptor for electrical appendices is present.

Supposed Causes

- Address duplication of optional controllers for centralized control
- Improper combination of optional controllers for centralized control
- Connection of more than one master controller
- Malfunction of transmission between optional controllers for centralized control
- Defect of PC board of optional controllers for centralized control

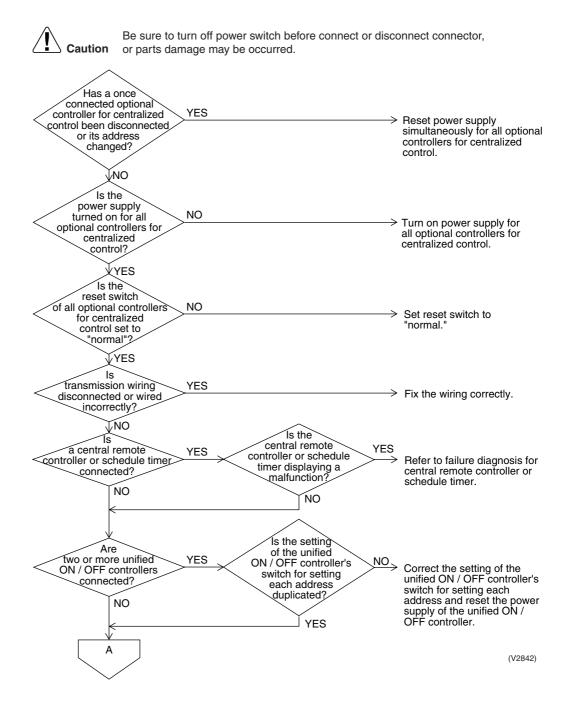

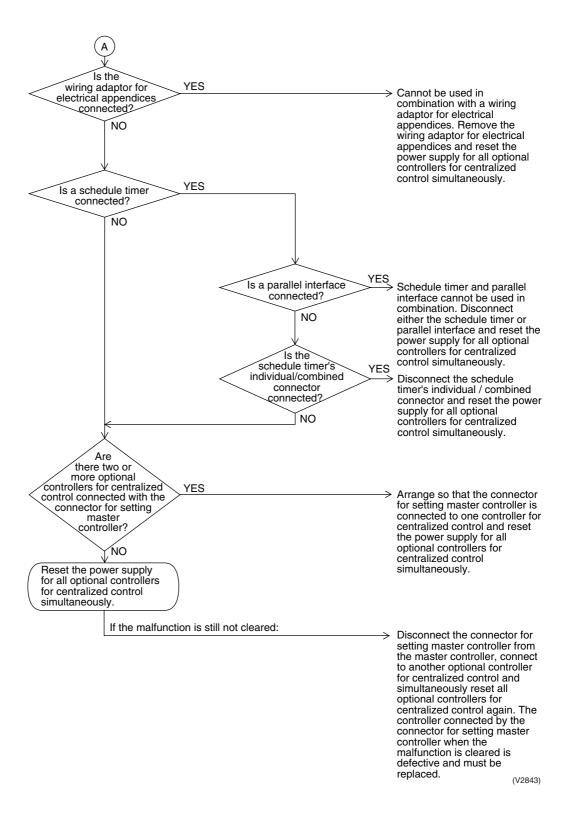

5.3 Display "Under Centralized Control" Blinks (Repeats Double Blink)

Remote Controller Display "under centralized control" (Repeats double blink)

Applicable Models

Unified ON/OFF controller

Method of Malfunction Detection


Detect the malfunction according to DIII-NET transmission data.

Malfunction Decision Conditions When no central control addresses are set to indoor units. When no indoor units are connected within the control range.

Supposed Causes

- Central control address (group No.) is not set for indoor unit.
- Improper control range setting switch
- Improper wiring of transmission wiring


Troubleshooting

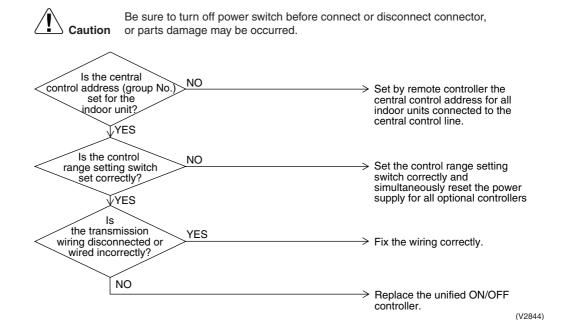

[CHECK 1] Check on connector of fan motor (Power supply cable)

(1) Turn off the power supply.


Measure the resistance between phases of U,V,W at the motor side connectors (three-core wire) to check that the values are balanced and there is no short circuiting, while connector or relay connector is disconnected.

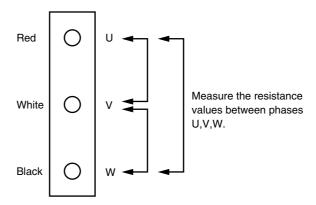

[CHECK 2]


- (1) Turn off the power supply.
- (2) Measure the resistance between Vcc and each phase of U,V,W, and GND and each phase at the motor side connectors (five-core wire) to check that the values are balanced within the range of ± 20 %, while connector or relay connector is disconnected.

Furthermore, to use a multiple meter for measurement, connect the probe of negative pole to Vcc and that of positive pole to GND.

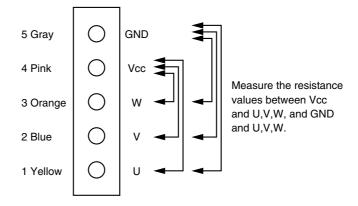

[CHECK 3] Check the Factors of Overheat Operation

Identify the defective points referring to the failure factor analysis (FTA) as follows.

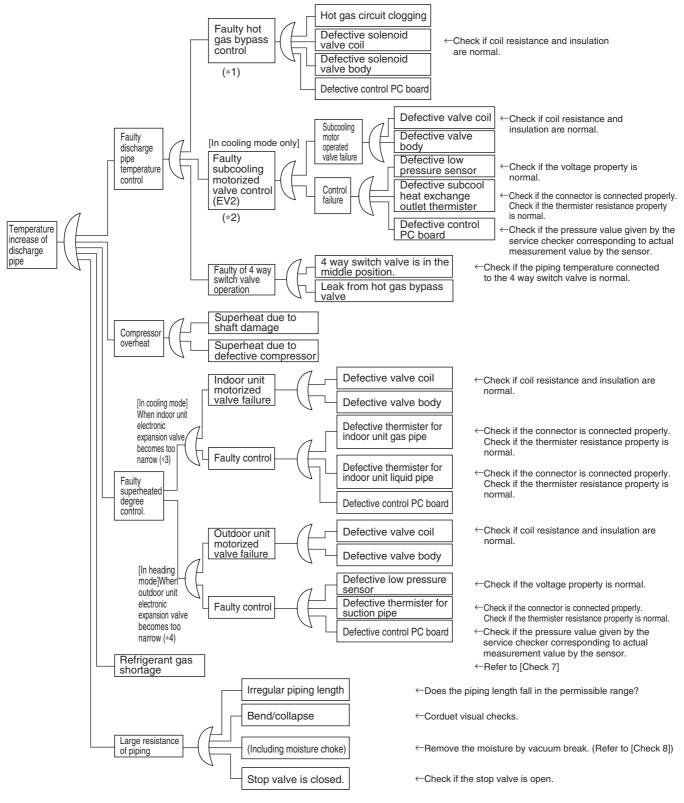

- *1: Refer to "Low pressure protection control" (P134) for hot gas bypass control.
- *2: Refer to P116 for subcooling electronic expansion valve control.
- *3: "Superheating temperature control" in cooling mode is conducted by indoor unit electronic expansion valve. (Refer to P149)
- *4: Superheating temperature control in heating mode is conducted by outdoor unit electronic expansion valve (EVM). (Refer to P116).
- *5: Judgment criteria of superheat operation:
 - ① Suction gas superheating temperature: 10 degrees and over. ② Discharge gas superheating temperature: 45 degrees and over, except for immediately after starting and drooping control, etc..

(Use the above stated values as a guide. Depending on the other conditions, the unit may be normal despite the values within the above scope.)


[CHECK 4] Power Transistor Check

Perform the following procedures prior to check.

- Power Off.
- (2) Remove all the wiring connected to the PC board where power transistors are mounted on.

[Preparation]

· Tester

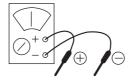

 Preparing a tester in the analog system is recommended.
 A tester in the digital system with diode check function will be usable.

[Point of Measurement and Judgment Criteria]

· Measure the resistance value using a tester at each point of measurement below, 10 minutes later after power OFF.

To use analog tester:

Measurement in the resistance value mode in the range of multiplying 1k Ω .


No	Point of Me	asurement	Judgment Criteria	Domorko
No.	+	ı		Remarks
1	P2	U	2 ~ 15kΩ	
2	P2	>		
3	P2	W		
4	U	P2	15kΩ and above (including ∞)	
5	V	P2		Due to condenser charge and so on, resistance measurement may require
6	W	P2		
7	N3	J		
8	N3	V		some time.
9	N3	W		
10	U	N3	2 ~ 15kΩ	
11	V	N3		
12	W	N3		

To use digital tester:

Measurement is executed in the diode check mode. (——)


No.	Point of Measurement		ludam ant Oritaria	Damadra
	+	ı	Judgment Criteria	Remarks
1	P2	U	1.2V and over	Due to condenser charge and so on, resistance measurement may require
2	P2	٧		
3	P2	W		some time.
4	U	P2	0.3 ~ 0.7V	
5	V	P2		
6	W	P2		
7	N3	J		
8	N3	V		
9	N3	W		
10	U	N3	1.2V and over	Due to condenser charge
11	V	N3		and so on, resistance measurement may require
12	W	N3		some time.

[PC board and Circuit Diagram]

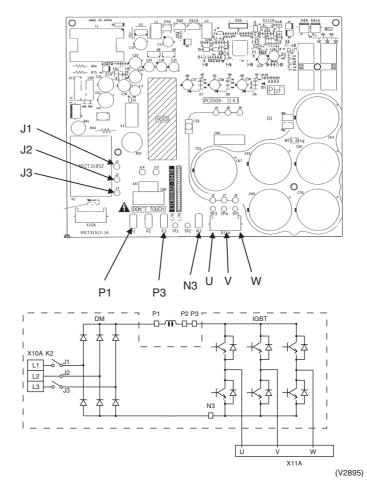

[CHECK 5] Check for causes of rise in high pressure

Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

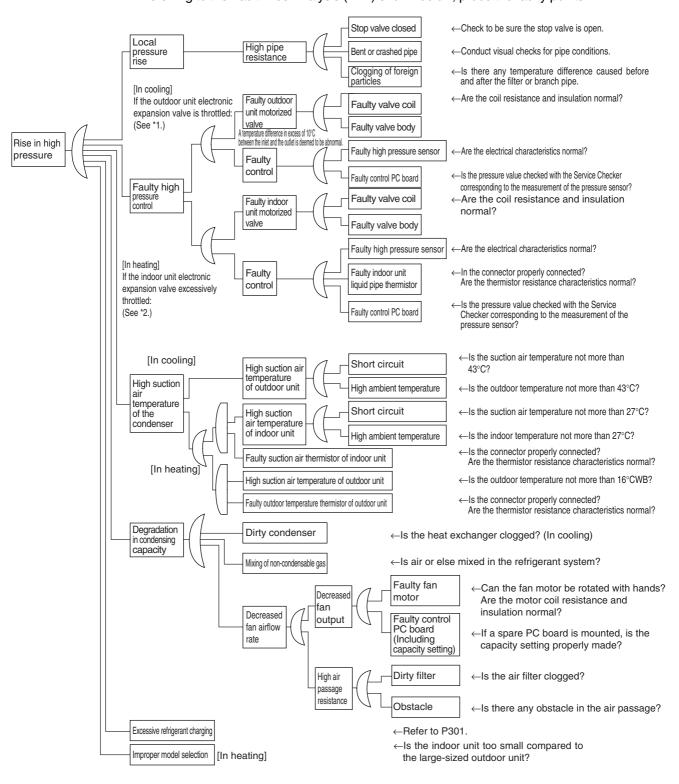


- *1: In cooling, it is normal if the outdoor unit electronic expansion valve (EVM) is fully open.
- *2: In heating, the indoor unit electronic expansion valve is used for "subcooled degree control". (For details, refer to "Electronic Expansion Valve Control" on P149.)

SDK04009

[CHECK 6] Check for causes of drop in low pressure

Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

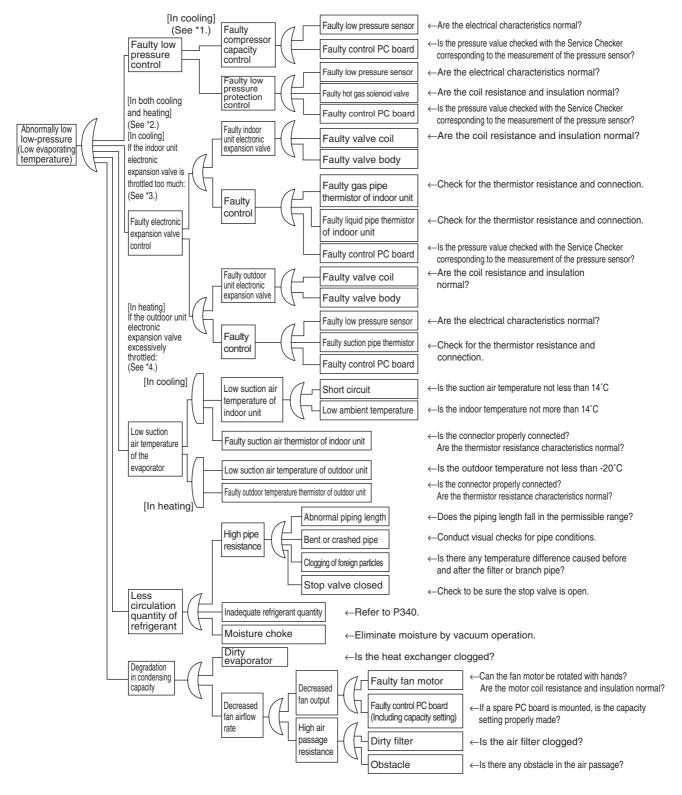

^{*1:} For details of the compressor capacity control while in cooling, refer to "Compressor PI Control" on P108.

SDK04009

^{*2:} The "low pressure protection control" includes low pressure protection control and hot gas bypass control. For details, refer to P134.

^{*3:} In cooling, the indoor unit electronic expansion valve is used for "superheated degree control". (For details, refer to P149.)

^{*4:} In heating, the outdoor unit electronic expansion valve (EVM) is used for "superheated degree control of outdoor unit heat exchanger". (For details, refer to P116.)

[CHECK 7] Broken Wire Check of the Connecting Wires


1. Procedure for checking outdoor-outdoor unit transmission wiring for broken wires On the system shown below, turn OFF the power supply to all equipment, short-circuit between the outdoor-outdoor unit terminal parts F1 and F2 in the "Outdoor Unit A" that is farthest from the central remote controller, and then conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the central remote controller using a multiple meter. If there is continuity between the said terminal blocks, the outdoor-outdoor unit transmission wiring has no broken wires in it.

If there is no continuity, the transmission wiring may have broken wires. With the outdoor-outdoor unit terminal parts of the "Outdoor Unit A" short-circuited, conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the unified ON/OFF controller. If there is no continuity as well, conduct continuity checks between the outdoor-outdoor unit terminal parts of the "Outdoor Unit E", between the outdoor-outdoor unit terminal parts of the "Outdoor Unit D", between the outdoor-outdoor unit terminal parts of the "Outdoor Unit C", ... in the order described, thus identifying the place with continuity.

If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.

2. Procedure for checking indoor-outdoor unit transmission wiring for broken wires (for checking the indoor-outdoor unit transmission wiring of the "Outdoor Unit C" for broken wires)

Turn OFF the power supply to all equipment, short-circuit between the indoor-outdoor unit terminal parts F1 and F2 in the "Outdoor Unit C, and then conduct continuity checks between the transmission wirings F1 and F2 of the "Indoor Unit a" that is farthest from the "Outdoor Unit C" using a multiple meter. If there is continuity between the said transmission wirings, the indoor-outdoor unit transmission wiring has no broken wires in it. If there is no continuity, the transmission wiring may have broken wires. With the indoor-outdoor unit terminal parts of the "Outdoor Unit C" short-circuited, identify the place with continuity in the transmission wiring of the "Indoor Unit b", transmission wiring of the "Indoor Unit c", and transmission wiring of the "Indoor Unit d" in the order described. If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.

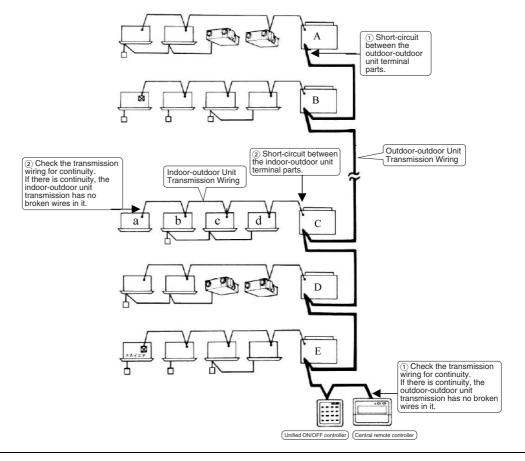

[CHECK 8] Master Unit Central Connector Setting Table

The master unit central setting connector (CN1/X1A) is mounted at the factory.

- To independently use a single unit of the intelligent Touch controller or a single unit of the central remote controller, do not dismount the master unit central setting connector (i.e., use the connector with the factory setting unchanged).
- To independently use the schedule timer, insert an independent-use setting connector.
 No independent-use setting connector has been mounted at the factory. Insert the
 connector, which is attached to the casing of the main unit, in the PC board (CN1/X1A).
 (Independent-use connector=Master unit central setting connector)
- To use two or more central equipment in combination, make settings according to the table shown below.

	Centra	l equipment	connection	pattern	Setting of r	master unit cer	ntral setting co	nnector(*2)
Pattern	Intelligent Touch controller	Central remote controller	Unified ON/OFF controller	Schedule timer	Intelligent Touch controller	Central remote controller	Unified ON/OFF controller	Schedule timer
1	1 to 2 units			× (*1)	Only a single unit: "Provided", Others: "Not provided"			
2				× (*1)				
3	1 unit	1 unit		× (*1)	Provided	Not provided		
4	1 to 2 units		1 to 8 units	× (*1)	Only a single unit: "Provided", Others: "Not provided"		All "Not provided"	
5						Only a		
6		1 to 4	1 to 16	1 unit		single unit: "Provided",	All "Not	Not provided
7		units	units			Others: "Not	provided"	
8				1 unit		provided"		Not provided
9							Only a	
10			1 to 16 units	1 unit			single unit: "Provided", Others: "Not provided"	Not provided
11)				1 unit				Provided

 $^(^*1)$ The intelligent Touch controller and the schedule timer are not available for combined use.

^(*2) The intelligent Touch controller, central remote controller, and the unified ON/OFF controller have been set to "Provided with the master unit central setting connector" at the factory. The schedule timer has been set to "Not provided with the master unit central setting connector" at the factory, which is attached to the casing of the main unit.

[CHECK 9] Master-Slave Unit Setting Table

Combination of Intelligent Touch Controller and Central Remote Controller




*	#1	•	#2		#3		#4		
Pattern	1-00~4-15	Master/ Slave	5-00~8-15	Master/ Slave	1-00~4-15	Master/ Slave	5-00~8-15	Master/ Slave	
1)	CRC	Master	CRC	Master	CRC	Slave	CRC	Slave	
2	CRC	Master	_	_	CRC	Slave	_	_	
3	Intelligent Touch controller	Master	_	_	Intelligent Touch controller	Slave	_	_	
4	CRC	Master	_	_	Intelligent Touch controller	Slave	_	_	
(5)	Intelligent Touch controller	Master	_	_	CRC	Slave	_	_	
6	CRC	Master	_	_	_	_	_	_	
①	Intelligent Touch controller	Master	_	_	_	_	_	_	

CRC: Central remote controller < DCS302CA61>

Intelligent Touch controller: <(DCS601C51) >
The patterns marked with "" have nothing to do with those described in the list of Setting of master unit central setting connector.

[Check 10] Check for causes of wet operation.

Referring to the Fault Tree Analysis (FTA) shown below, identify faulty points.

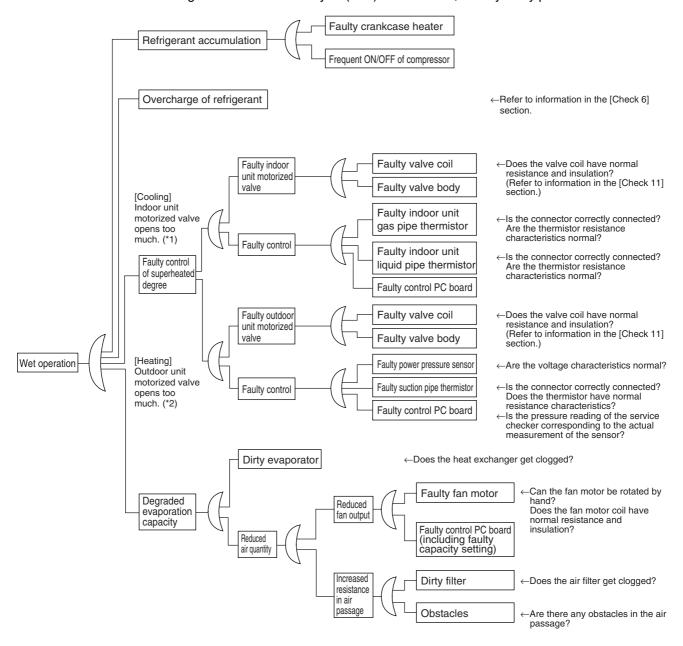


- *1: "Superheated degree control" in cooling operation is exercised with the indoor unit motorized valve. (Refer to information on P149.)
- *2: "Superheated degree control" in heating operation is exercised with the outdoor unit motorized valve (EV1). (Refer to information on P116.)
- *3: Guideline of superheated degree to judge as wet operation ①Suction gas superheated degree: Not more than 3°C; ②Discharge gas superheated degree: Not more than 15°C, except immediately after compressor starts up or is running under drooping control. (Use the values shown above as a guideline. Even if the superheated degree falls in the range, the compressor may be normal depending on other conditions.)

[Check 11] Check for overcharge of refrigerant.

In case of VRV Systems, the only way to judge as the overcharge of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgment, refer to information provided below.

Diagnosis of overcharge of refrigerant

- High pressure rises. Consequently, overload control is exercised to cause scant cooling capacity.
- The superheated degree of suction gas lowers (or the wet operation is performed).
 Consequently, the compressor becomes lower in discharge pipe temperature despite of pressure loads.
- 3. The supercooled degree of condensate rises. Consequently, in heating operation, the temperature of outlet air passing through the supercooled section becomes lower.

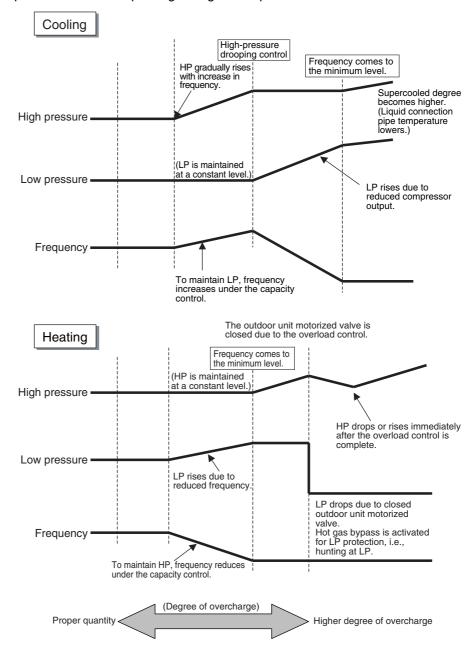


[Check 12] Check for shortage of refrigerant.

In case of VRV Systems, the only way to judge as the shortage of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgment, refer to information provided below.

Diagnosis of shortage of refrigerant

- 1. The superheated degree of suction gas rises. Consequently, the compressor discharge gas temperature becomes higher.
- 2. The superheated degree of suction gas rises. Consequently, the electronic expansion valve turns open.
- 3. Low pressure drops to cause the unit not to demonstrate cooling capacity (heating capacity).

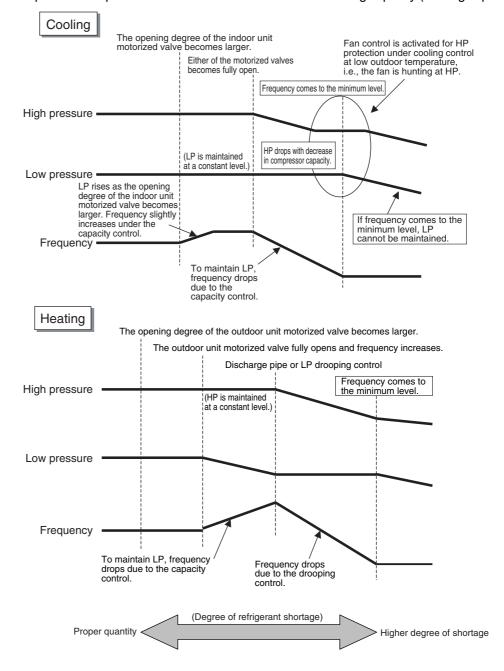

[Check 13] Vacuuming and dehydration procedure

Conduct vacuuming and dehydration in the piping system following the procedure for <Normal vacuuming and dehydration> described below.

Furthermore, if moisture may get mixed in the piping system, follow the procedure for <Special vacuuming and dehydration> described below.


<Normal vacuuming and dehydration>


- (1) Vacuuming and dehydration
 - Use a vacuum pump that enables vacuuming up to 100.7kPa (5 torr, -755 mmHg).
 - Connect manifold gauges to the service ports of liquid pipe and gas pipe and run the vacuum pump for a period of two or more hours to conduct evacuation to -100.7kPa or less.
 - If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of two hours, moisture will have entered the system or refrigerant leakage will have been caused. In this case, conduct evacuation for a period of another one hour.
 - If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of three hours, conduct leak tests.
- (2) Leaving in vacuum state
 - Leave the compressor at the degree of vacuum of -100.7kPa or less for a period of one hour or more, and then check to be sure that the vacuum gauge reading does not rise. (If the reading rises, moisture may have remained in the system or refrigerant leakage may have been caused.)
- (3) Refrigerant charge
 - Purge air from the manifold gauge connection hoses, and then charge a necessary quantity of refrigerant.
- <Special vacuuming and dehydration> In case moisture may get mixed in the piping*
- (1) Vacuuming and dehydration
 - Follow the same procedure as that for 1) Normal vacuuming and dehydration described above.
- (2) Vacuum break
 - Pressurize with nitrogen gas up to 0.05MPa.
- (3) Vacuuming and dehydration
 - Conduct vacuuming and dehydration for a period of one hour or more. If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of two hours or more, repeat vacuum break - vacuuming and dehydration.
- (4) Leaving in vacuum state
 - Leave the compressor at the degree of vacuum of -100.7kPa or less for a period of one hour or more, and then check to be sure that the vacuum gauge reading does not rise.
- 5 Refrigerant charge
 - Purge air from the manifold gauge connection hoses, and then charge a necessary quantity of refrigerant.
 - * In case of construction during rainy reason, if dew condensation occurs in the piping due to extended construction period, or rainwater or else may enter the piping during construction work:

[Check 14] List of inverter-related malfunction codes

	Code	Name	Condition for determining malfunction	Major cause
Compressor current	L5	Instantaneous overcurrent of inverter compressor	Inverter output current exceeds 32.3A even instantaneously.	Liquid sealing Faulty compressor Faulty inverter PC board
	L8	Overcurrent of inverter compressor (Electronic thermal)	Compressor overload running An overcurrent of 19.0A or more continues for a period of 5 consecutive seconds or that of 16.1A or more continues for a period of 260 consecutive seconds. The inverter loses synchronization.	Backflow of compressor liquid Sudden changes in loads Disconnected compressor wiring Faulty inverter PC board
	L1	Faulty inverter PC board	No output is given.	Faulty heavy current part of compressor
	L9 Faulty startup of inverter compressor		The compressor motor fails to start up.	Liquid sealing or faulty compressor Excessive oil or refrigerant Faulty inverter PC board
s	E5	Inverter compressor lock	The compressor is in the locked status (does not rotate).	Faulty compressor
and other	L4	Radiator fin temperature rise	The radiator fin temperature reaches 87°C or more (while in operation).	Malfunction of fan Running in overload for an extended period of time Faulty inverter PC board
device	U2	Power supply voltage error	The inverter power supply voltage is high or low.	Power supply error Faulty inverter PC board
Protection device and others	P1	Imbalanced power supply	Power supply voltages get significantly imbalanced among three phases.	Power supply error (imbalanced voltages of 2% or more) Faulty inverter PC board Dead inverter PC board
<u>а</u>	LC	Transmission error (between inverter PC board and control PC board)	With the outdoor unit PC board, no communications are carried out across control PC board - inverter PC board - fan PC board.	Broken wire in communication line Faulty control PC board Faulty inverter PC board Faulty fan PC board
	PJ	PC board mismatching	Any PC board of specification different from that of the product is connected.	PC board of different specification mounted
	P4	Faulty fin thermistor	The fin thermistor gets short-circuited or open.	Faulty fin thermistor

[Check 15] Concept of inverter-related malfunction codes

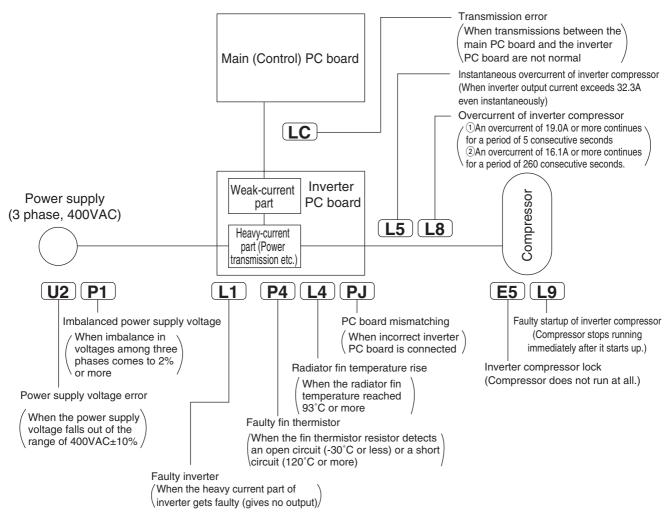

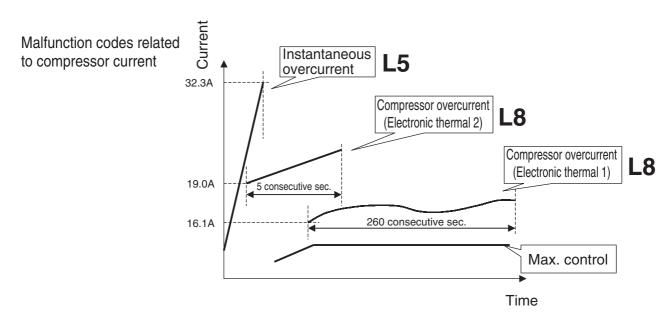

Part 7 Appendix

1.	Piping Diagrams	398
	1.1 Outdoor Unit	398
	1.2 Indoor Unit	403
	1.3 BS Unit	409
2.	Wiring Diagrams for Reference	410
	2.1 Outdoor Unit	
	2.2 Field Wiring	415
	2.3 Indoor Unit	
	2.4 BS Unit	434
3.	List of Electrical and Functional Parts	435
-	3.1 Outdoor Unit	
	3.2 Indoor Side	
4.	Option List	445
	4.1 Option List of Controllers	
	4.2 Option Lists (Outdoor Unit)	
5.	Piping Installation Point	448
	5.1 Piping Installation Point	
	5.2 The Example of a Wrong Pattern	
6.	Example of connection (R-410A Type)	451
	Thermistor Resistance / Temperature Characteristics	
	Pressure Sensor	
	Method of Checking the Inverter's Power Transistors a	
Ο.	Diode Modules	
	9.1 Method of Checking the Inverter's Power Transistors a	
	Diode Modules	

Piping Diagrams SiBE37-704

1. Piping Diagrams


1.1 Outdoor Unit

REYQ8P / 10P / 12P

3D058154B PRESSURE REGULATING VALVE (ABSOLUTE PRESSURE TYPE) SOLENDID Valve (S) | 文 CHECK VALVE FOUR WAY VALVE RIGHT CHECK VALVE SOLENOID STOP VALVE(WITH SERVICE PORT \$7.9mm FLARE CONNECTION) CHECK VALVE >CAP1LLARY Tube FILTER FOUR WAY VALVE JIO Separator CAPILLARY FILTER COMPRESSOR FILTER ELECTRONIC
EXPANSION GVALVE
FILTER SERVICE 🛨 FILTER LEFT LIQUID PIPE

SiBE37-704 Piping Diagrams

REYQ14P / 16P

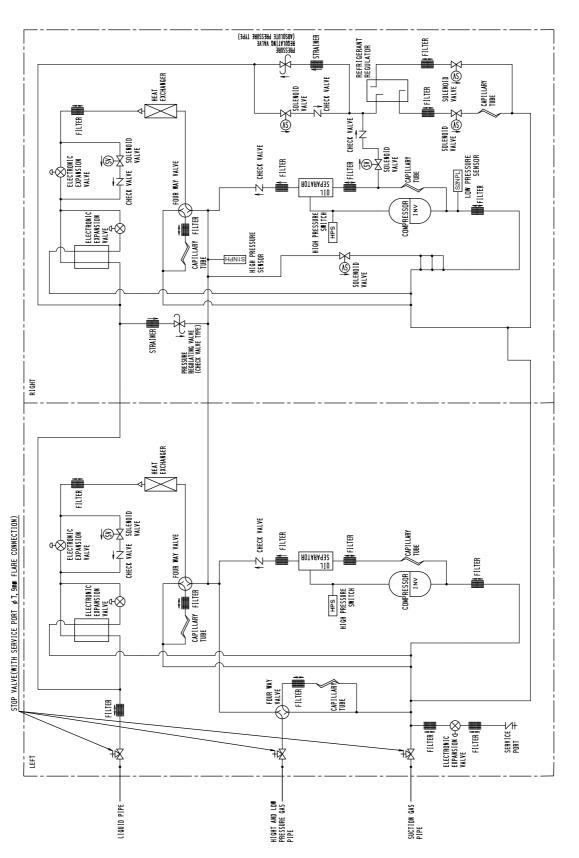


Appendix 399

3D058153B


Piping Diagrams SiBE37-704

REMQ8P

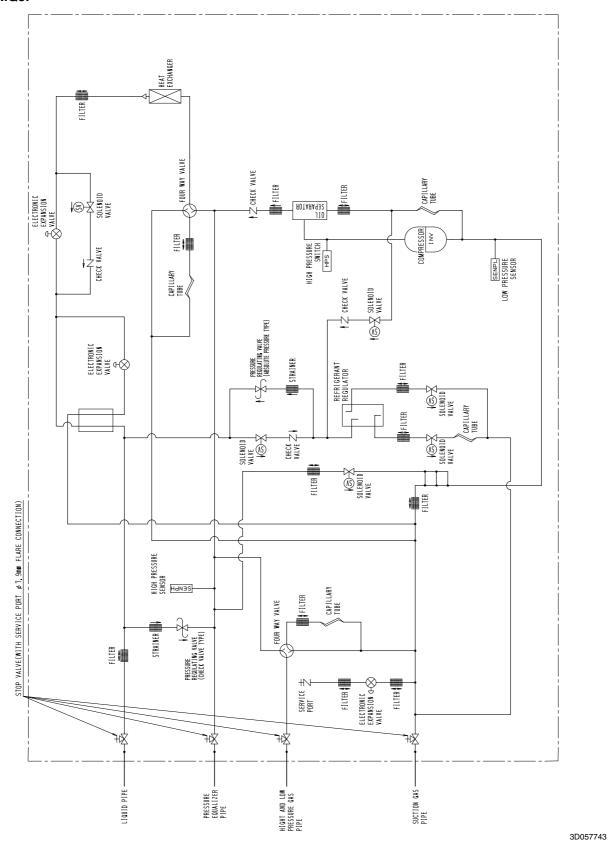


SiBE37-704 Piping Diagrams

REMQ10P, 12P

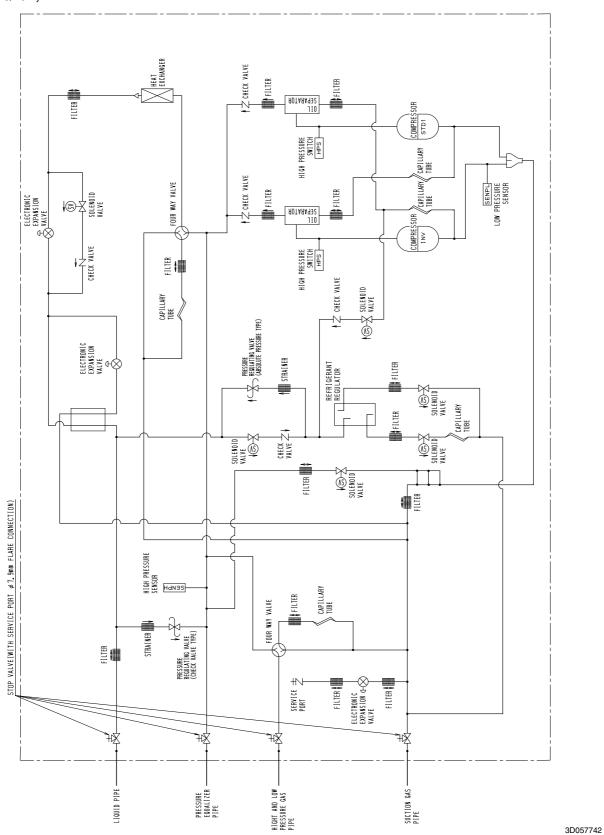

Piping Diagrams SiBE37-704

REMQ14P, 16P

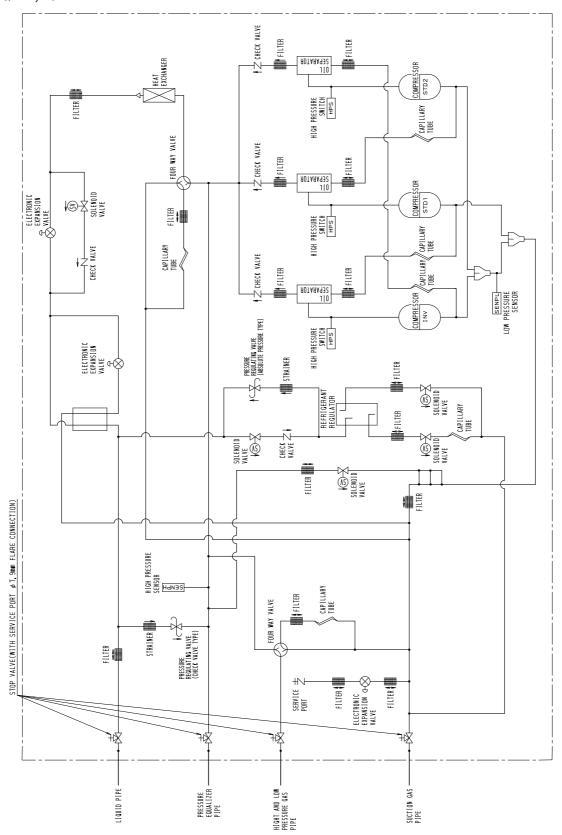


3D057741

SiBE37-704 Piping Diagrams

1.2 Indoor Unit

FXFQ-P

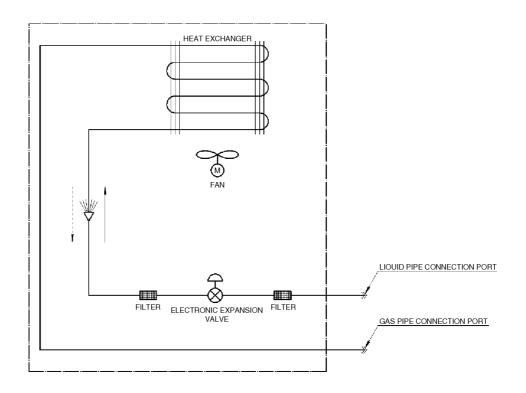




REFRIGERANT PIPE CONNECTION PORT DIAMETERS

MODEL	GAS	LIOUID
FXFQ20, 25, 32, 40, 50P	¢12.70	φ6.35
EXEC63 80 100 125P	615 QO	±0.52

3TW28835-1

Piping Diagrams SiBE37-704

FXZQ

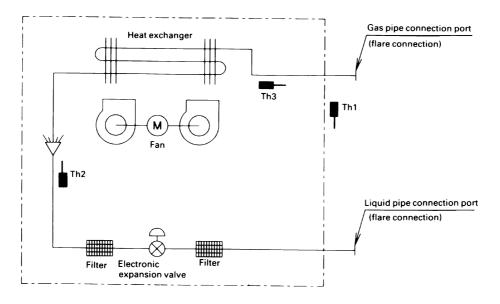

Th1: Thermister for suction air temp.

Th2: Thermister for liquid line temp.

Th3: Thermister for gas line temp.

4D040157


Refrigerant pipe connection port diameters

(mm)

Model	Gas	Liquid
FXZQ20M / 25M / 32M / 40M / 50M	φ12.7	φ6.4

SiBE37-704 Piping Diagrams

FXCQ, FXDQ20/25-M, FXSQ

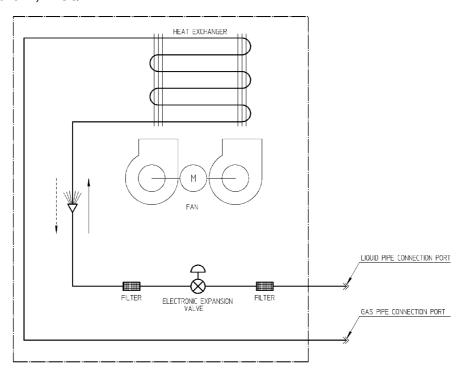




■ Refrigerant pipe connection port diameters

Model	Gas	Liquid
FXSQ20, 25, 32, 40, 50	φ12.70	φ6.35
FXSQ63, 80, 100, 125	φ15.90	ф9.52
FXCQ20, 25, 32, 40, 50	φ12.70	φ6.35
FXCQ63, 80, 125	φ15.90	ф9.52
FXDQ20, 25	φ12.70	φ6.35

C:3TW25515-1 C:3TW21175-1C

Piping Diagrams SiBE37-704

FXKQ-MA

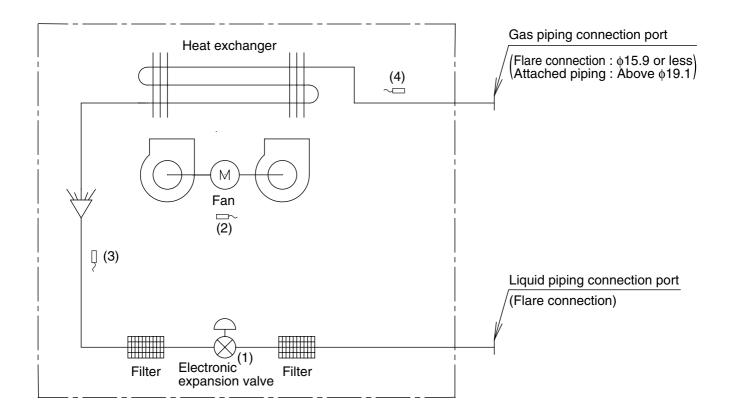

Code	Name	Code	Main function
(1)	Electronic expansion valve	Y1E	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(2)	Suction air temperature thermistor	R1T	Used for thermostat control.
(3)	Liquid pipe	R2T	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(4)	Gas pipe	R3T	Used for gas superheated degree control while in cooling operation.


(mm)

Capacity	GAS	Liquid
25 / 32 / 40 / 50MA	φ12.7	ф6.4
63MA	φ15.9	φ9.5

4D034245C

SiBE37-704 Piping Diagrams

FXDQ-NA, P

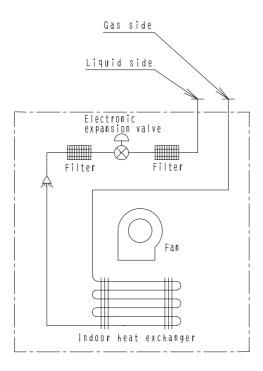

4D043864J

■ Refrigerant pipe connection port diameters


(mm)

Model	Gas	Liquid
FXDQ20NA, P / 25NA, P / 32NA, P / 40NA / 50NAVE	φ12.7	φ6.4
FXDQ63NAVE	φ15.9	φ9.5

Piping Diagrams SiBE37-704


FXUQ + BEVQ

Indoor Unit

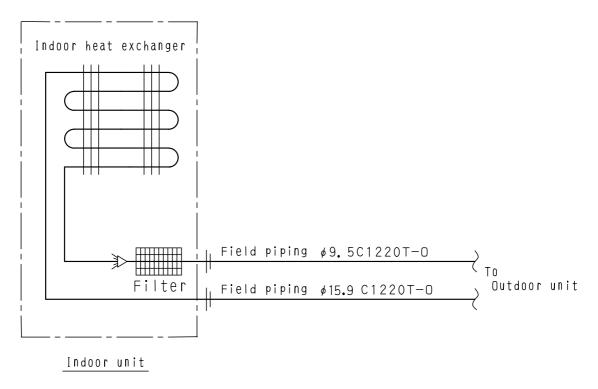

4D037995F


Connection Unit

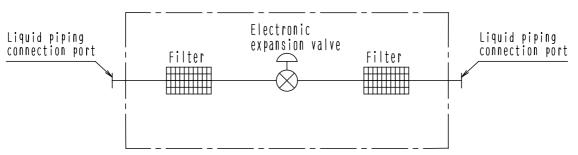



SiBE37-704 Piping Diagrams


1.3 BS Unit

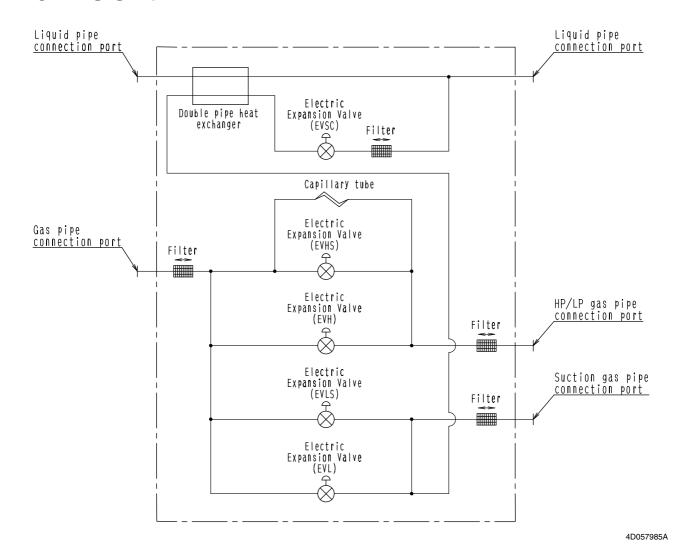

2. Wiring Diagrams for Reference


2.1 Outdoor Unit

REYQ8P / 10P / 12P8Y1B

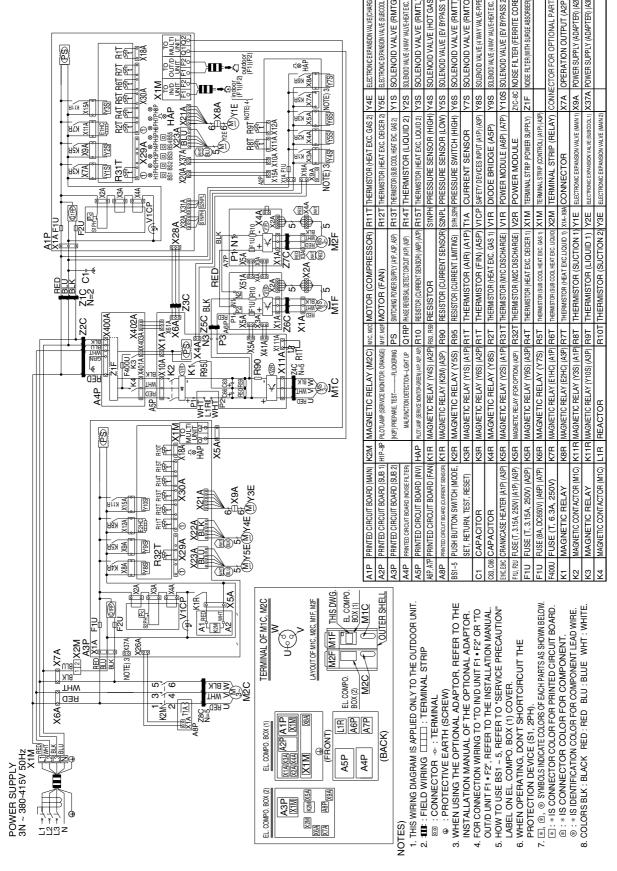


D056775

REYQ14P / 16P8Y1B

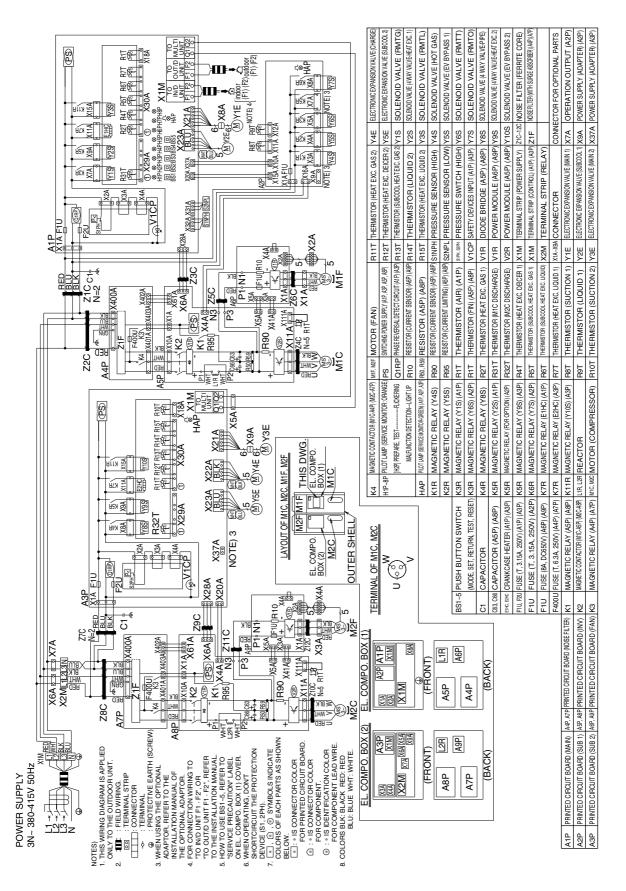


Appendix

REMQ8P8Y1B

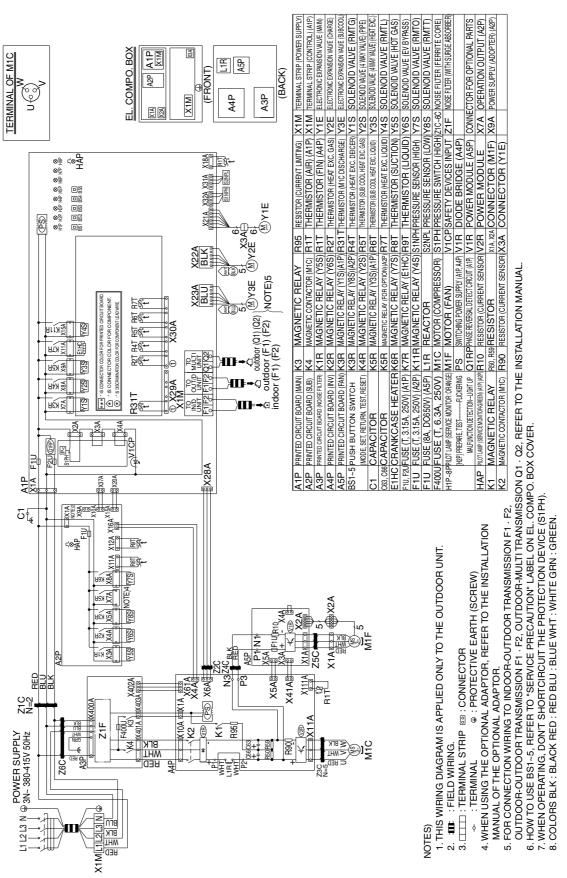


REMQ10P / 12P8Y1B

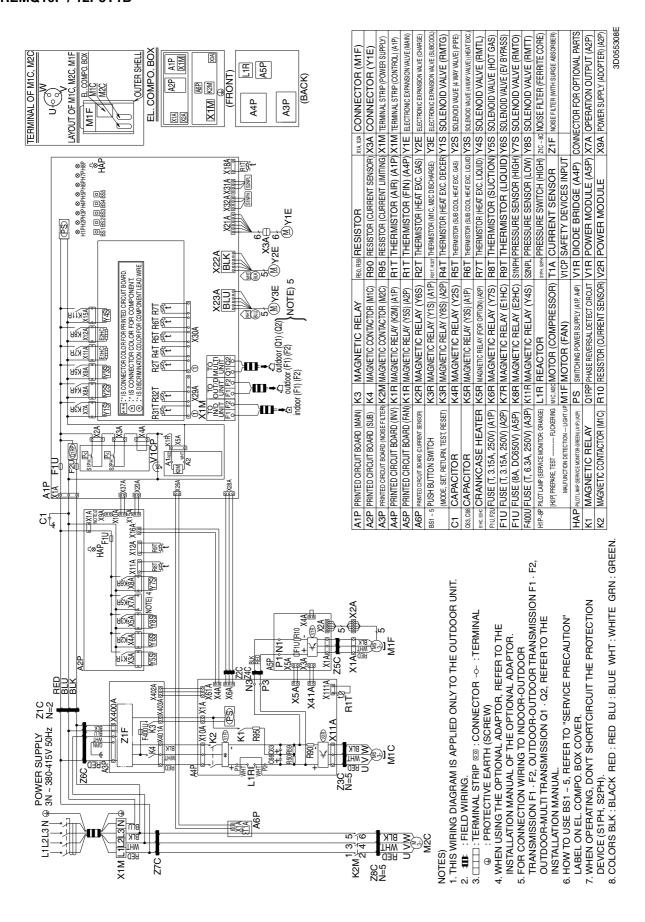

3D055309E

REMQ14P / 16P8Y1B

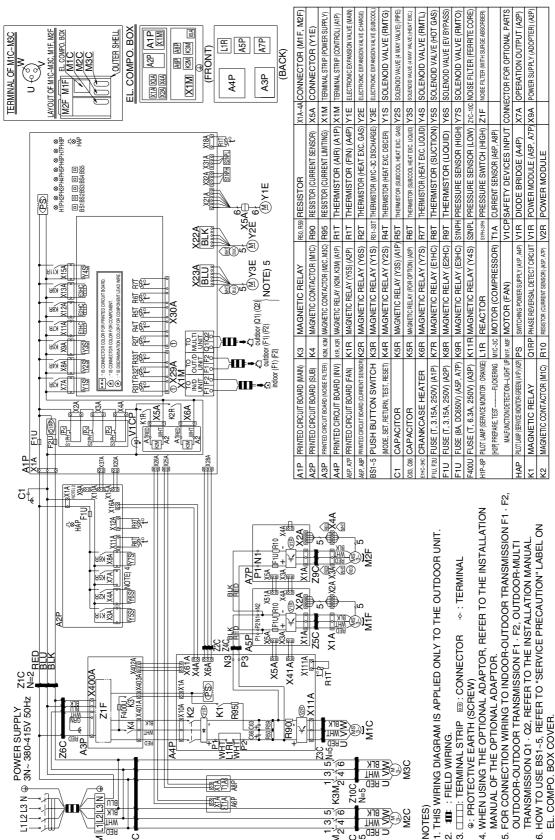

K3M

7. WHEN OPERATING, DON'T SHORTCIRCUIT THE PROTECTION DEVICE (S1~3PH). 8. COLORS BLK : BLACK RED : RED : BLU : BLUE WHT : WHITE GRN : GREEN.


L2 L3 N ⊕

X1M TIZLIBN @


Z/C

2.2 Field Wiring

REYQ8P / 10P / 12P / 14P / 16P8Y1B

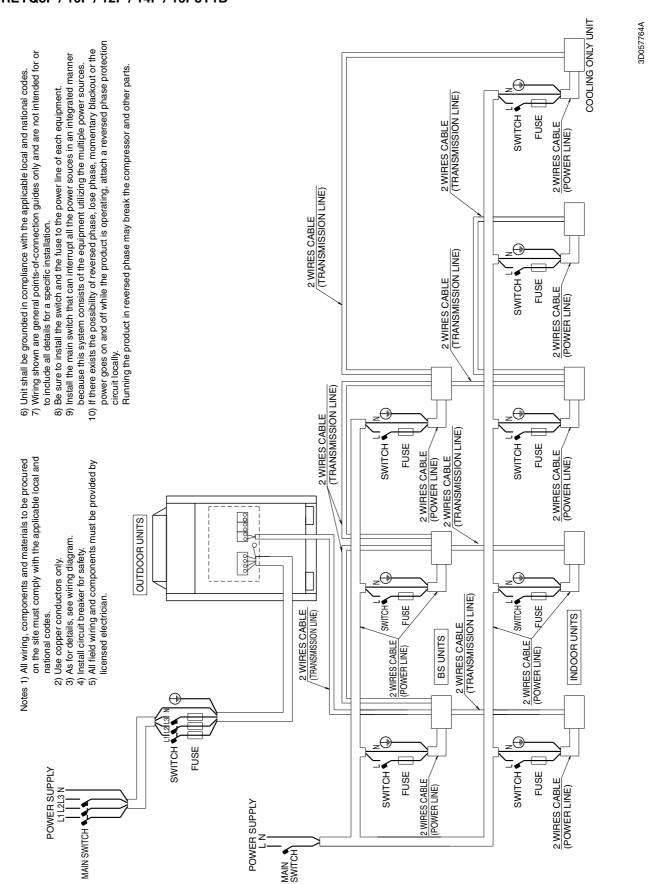

REYQ18P / 20P / 22P / 24P / 26P / 28P / 30P / 32P8Y1B

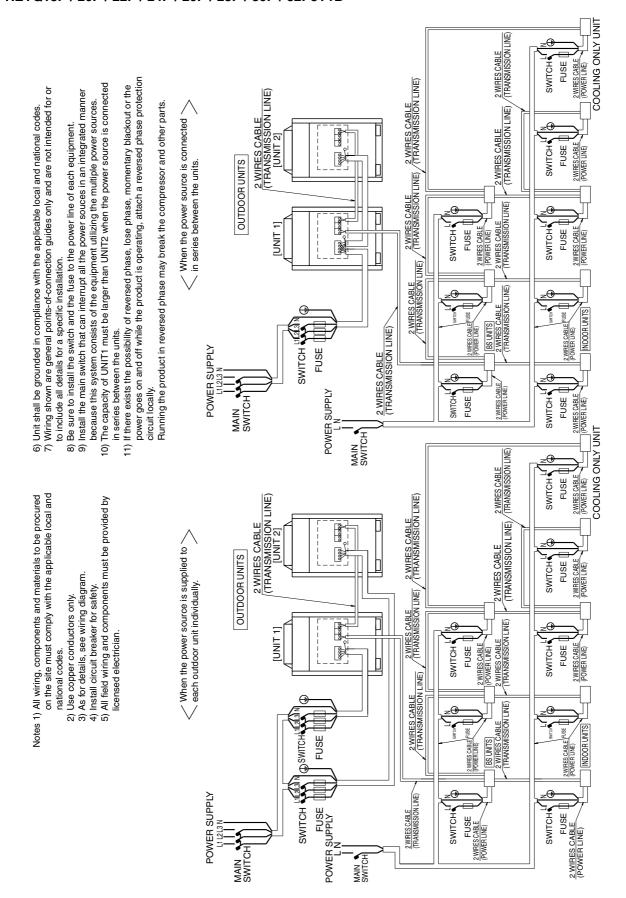

REYQ34P / 36P / 38P / 40P / 42P / 44P / 46P / 48P8Y1B

- 6) Unit shall be grounded in compliance with the applicable local and national codes. 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
 - Be sure to install the switch and the fuse to the power line of each equipment

® 6

Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and

6

All field wiring and components must be provided by


licensed electrician.

2) Use copper conductors only.3) As for details, see wiring diagram.4) Install circuit breaker for safety.

national codes.


- Install the main switch that can interrupt all the power souces in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- The capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
- power goes on and off while the product is operating, attach a reversed phase protection 11) If there exists the possibility of reversed phase, lose phase, momentary blackout or the circuit locally.

Running the product in reversed phase may break the compressor and other parts.

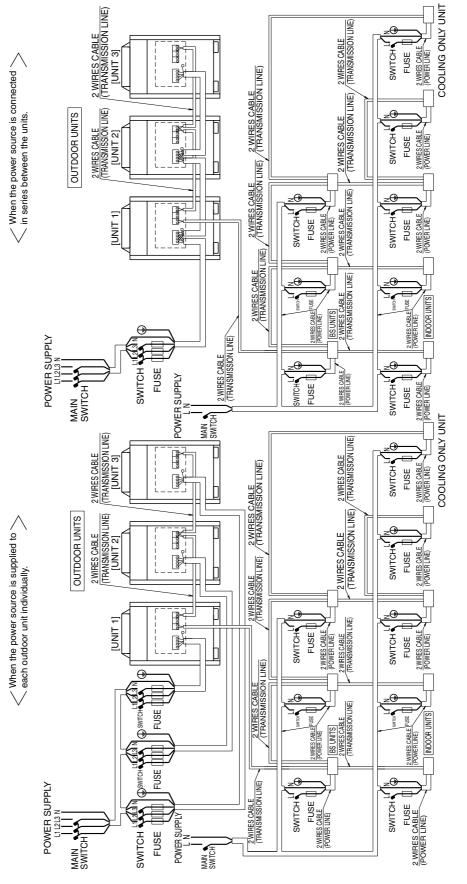

2.3 **Indoor Unit**

FXFQ20P / 25P / 32P / 40P / 50P / 63P / 80P / 100P / 125PVEB

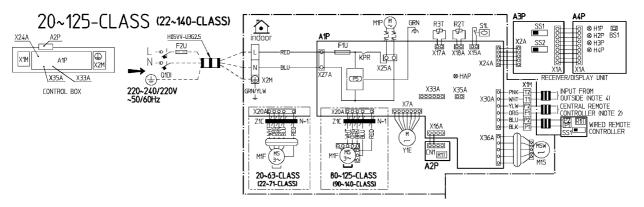

_								
	INDGOR UNIT		MOTOR (SWING FLAP) RECEIVER/DIS		RECEIVER/DISPLAY UNIT (ATTACHED	SS2	SELECTOR SWITCH	
A1P	PRINTED CIRCUIT BOARD	PS	POWER SUPPLY CIRCUIT		TO WIRELESS REMOTE CONTROLLER)		(WIRELESS ADDRESS SET)	
A2P	PRINTED CIRCUIT BOARD	Q1DI	EARTH LEAK DETECTOR	A3P	PRINTED CIRCUIT BOARD		CONNECTOR FOR OPTIONAL PARTS	
C1	CAPACITOR	R1T	THERMISTOR (AIR)	A4P	PRINTED CIRCUIT BOARD	XZ4A	CONNECTOR (WIRELESS	
F1U	FUSE (T, 5A, 250V)	R2T	THERMISTOR (COIL)	BS1	PUSH BUTTON (ON/OFF)		REMOTE CONTROLLER)	
F2U	FIELD FUSE	R3T	THERMISTOR (HEADER)	H1P	LIGHT EMITTING DIODE (ON-RED)	ХЗЗА	CONNECTOR (ADAPTOR FOR WIRING)	
HAP	LIGHT EMITTING DIODE	S1L	FLOAT SWITCH	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)	X35A	CONNECTOR (GROUP CONTROL ADAPTOR)	
	(SERVICE MONITOR GREEN)	X1M	TERMINAL STRIP	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)		WIRED REMOTE CONTROLLER	
KPR	MAGNETIC RELAY (M1P)	X2M	TERMINAL STRIP	H4P	LIGHT EMITTING DIODE	R1T	THERMISTOR (AIR)	
L1	COIL	Y1E	ELECTRONIC EXPANSION VALVE		(DEFROST-ORANGE)	SS1	SELECTOR SWITCH (MAIN/SUB)	
M1F	MOTOR (INDOOR FAN)	Z1C	FERRITE CORE	SS1	SELECTOR SWITCH (MAIN/SUB)			
M1P	MOTOR (DRAIN PUMP)							

NOTES:

- ©Ø,D-: CONNECTOR
- 1. ☐☐☐☐: TERMINAL ☐☐,D: CONNECTOR ☐☐☐: FIELD WIRING
 2. IN CASE OF USING A CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL
- 3. X24A, X33A AND X35A ARE CONNECTED WHEN THE OPTIONAL ACCESSORIES ARE BEING USED.
- 4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER.
 SEE INSTALLATION MANUAL FOR MORE DETAILS.
 5. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) BY INSTALLATION MANUAL AND ENGINEERING DATA, ETC.
- 6. COLOUR LEGEND:


RED: RED BLK: BLACK WHT: WHITE YLW: YELLOW GRN: GREEN ORG: ORANGE BRN: BROWN GRY: GREY BLU: BLUE PNK: PINK

3TW28836-1B

Appendix

418

FXZQ20M / 25M / 32M / 40M / 50MV1

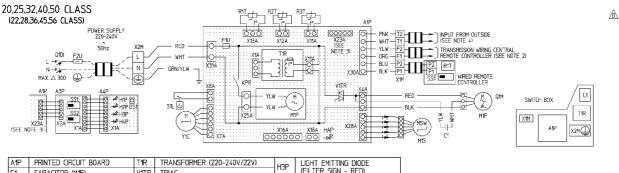

A1P	PRINTED CIRCUIT BOARD	⊺1R	TRANSFORMER (220-240V/22V)	НЗР	LIGHT EMITTING DIODE			
C1	CAPACITOR (M1F)	V1TR	TRIAC		(FILTER SIGN - RED)			
F1U	FUSE (B), 5A, 250V)	X1M TERMINAL STRIP] H4P	LIGHT EMITTING DIODE			
F2U	FIELD FUSE	X2M TERMINAL STRIP			(DEFROST - ORANGE)			
HAP	LIGHT EMITTING DIODE	Y1E	ELECTRONIC EXPANSION VALVE	SS1	SELECTOR SWITCH (MAIN/SUB)			
ПАР	(SERVICE MONITOR GREEN)	WIRED	REMOTE CONTROLLER	SS2	SELECTOR SWITCH			
KPR	MAGNETIC RELAY (M1P)	R1T	THERMISTOR (AIR)	<u> </u>	(WIRELESS ADDRESS SET)			
M1F	MOTOR (INDOOR FAN)	SS1	SELECTOR SWITCH (MAIN/SUB)	CONNE	ECTOR FOR OPTIONAL PARTS			
M1P	MOTOR (DRAIN PUMP)	WIREL	ESS REMOTE CONTROLLER		CONNECTOR			
M1S	MOTOR (SWING FLAP)	(RECE	IVER/DISPLAY UNIT)	X16A	(ADAPTOR FOR WIRE)			
Q1DI	FIELD EARTH LEAK DETECTOR	A3P	PRINTED CIRCUIT BOARD		CONNECTOR (ON/OFF)			
Q IDI	(MAX. 300mA)	A4P	PRINTED CIRCUIT BOARD	X18A	(WIRING ADAPTOR FOR			
Q1M	THERMAL PROTECTOR	BS1	PUSH BUTTON (ON/OFF)		ELECTRICAL APPENDICES)			
	(M1F EMBEDDED)	LIND	LIGHT EMITTING DIODE	RED:	RED PNK:PINK			
R1T			HIP (ON - RED)		BLK:BLACK ORG:ORANGE			
R2T			an LIGHT EMITTING DIODE		WHT:WHITE GRN:GREEN			
R3T	THERMISTOR (COIL-GAS)	H2P	(TIMER - GREEN)	YLW:	YELLOW BLU:BLUE			
S1L	FLOAT SWITCH		_	-				

: TERMINAL

: CONNECTOR : WIRE CLAMP


≢□□ : FIELD WIRING

NOTES:

IN CASE OF USING A REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE TO THE ATTACHED INSTALLATION MANUAL.
 X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
 WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER.
 IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED TO THE UNIT.
 REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM.
 SEE TECHNICAL DATA AND CATALOGS, ETC. BEFORE CONNECTING.

3TW26426-1B

FXCQ20M / 25M / 32M / 63MV3

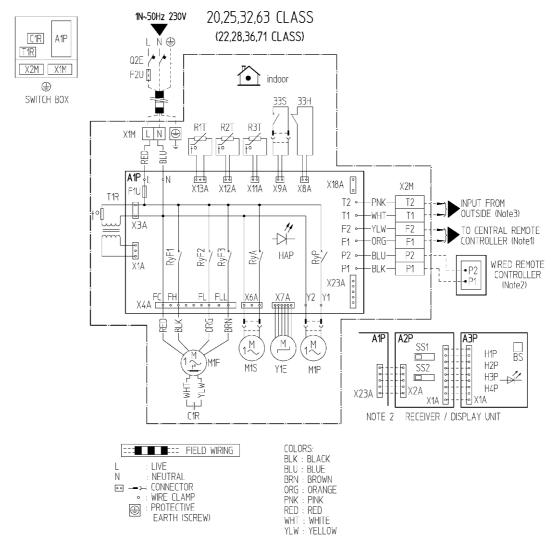


33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (COIL)	H1P	LIGHT EMITTING DIODE (ON-RED)
33S	LIMIT SWITCH (SWING FLAP)	Q2E	EARTH LEAK DETECTOR	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
A1P	PRINTED CIRCUIT BOARD	RyA	MAGNETIC RELAY (M1S)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
C1R	CAPACITOR (M1F)	RyF1-3	MAGNETIC RELAY (M1F)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
F1T	THERMAL FUSE (152°C) (M1F EMBEDDED)	RyP	MAGNETIC RELAY (M1P)	SS1	SELECTOR SWITCH (MAIN/SUB)
F1U	FUSE (250V, 5A)	T1R	TRANSFORMER (220-240V/22V)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
F2U	FELD FUSE	X1M	TERMINAL STRIP (POWER)	(ONNECTOR FOR OPTIONAL PARTS
HAP	LIGHT EMITTING DIODE	X2M	TERMINAL STRIP (CONTROL)	X18A	CONNECTOR (WIRING, ADAPTOR FOR
	(SERVICE MONITOR-GREEN)	Y1E	ELECTRONIC EXPANSION VALVE	A IOA	ELECTRICAL APPENDICES)
M1F	MOTOR (INDOOR FAN)	RECEIVER/DISPLAY UNIT (ATTACHED		X23A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
M1S	MOTOR (SWING FLAP)	TO WIRELESS REMOTE CONTROLLER)			
M1P	MOTOR (DRAIN PUMP)	A2P, A3P	PRINTED CIRCUIT BOARD		
R1T	THERMISTOR (AIR)	BS	ON/OFF BUTTON		

NOTES:

- WHEN USING A CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
 X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS USED.
 WHEN CONNECTING THE INPUT WIRES FROM THE OUTDOOR UNIT, "FORCED OFF" OR "ON/OFF" OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. FOR MORE DETAILS SEE INSTALLATION MANUAL.
 USE COPPER CONDUCTORS ONLY.

2TW23776-1D

FXCQ40M / 50M / 80M / 125MV3

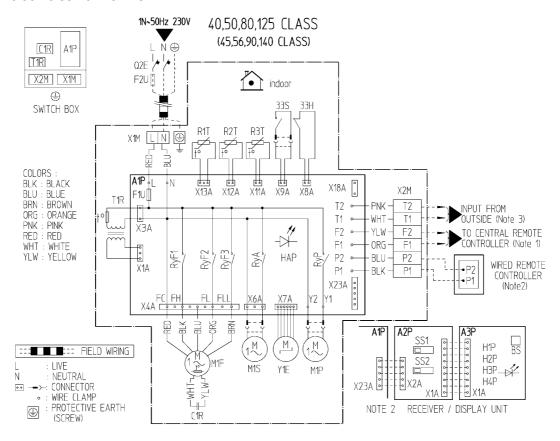


33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (COIL)	H1P	LIGHT EMITTING DIODE (ON-RED)
33S	LIMIT SWITCH (SWING FLAP)	Q2E	EARTH LEAK DETECTOR	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
A1P	PRINTED CIRCUIT BOARD	RyA	MAGNETIC RELAY (M1S)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
C1R	CAPACITOR (M1F)	RyF1-3	MAGNETIC RELAY (M1F)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
F1T	THERMAL FUSE (152°C)(M1F EMBEDDED)	RyP	MAGNETIC RELAY (M1P)	SS1	SELECTOR SWITCH (MAIN/SUB)
F1U	FUSE (250V, 5A)	T1R	TRANSFORMER (220-240V/22V)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	(CONNECTOR FOR OPTIONAL PARTS
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	X2M Y1E	TERMINAL STRIP (CONTROL) ELECTRONIC EXPANSION VALVE		CONNECTOR (WIRING, ADAPTOR FOR ELECTRICAL APPENDICES)
M1F	MOTOR (INDOOR FAN)	RE	CEIVER/DISPLAY UNIT (ATTACHED	X23A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
M1S	MOTOR (SWING FLAP)	TO WIRELESS REMOTE CONTROLLER)			
M1P	MOTOR (DRAIN PUMP)	A2P, A3P	PRINTED CIRCUIT BOARD		
R1T	THERMISTOR (AIR)	BS	ON/OFF BUTTON		

NOTES

- 1. WHEN USING A CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
 2. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS USED.
 3. WHEN CONNECTING THE INPUT WIRES FROM THE OUTDOOR UNIT, 'FORCED OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. FOR MORE DETAILS SEE INSTALLATION MANUAL.
 4. USE COPPER CONDUCTORS ONLY.

2TW23806-1D

FXKQ25MA / 32MA / 40MA / 63MAVE

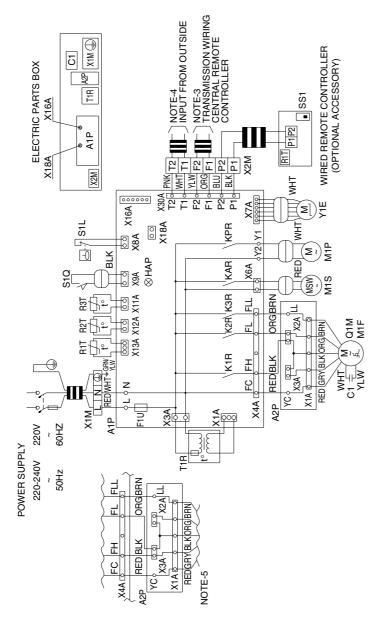

NOTES) 1.	3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO	THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.	4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR (CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER.
-----------	---	--	--	---

IANUAL. OFF OR ON/OFF

5. IN CASE HIGH E.S.P. OPERATION, CHANGE OVER THE WIRING CONNECTION FROM X2A TO X3A. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.

SYMBOLS SHOW AS FOLLOWS, (PNK: PINK WHT: WHITE YLW: YELLOW ORG: ORANGE BLU: BLUE BLK: BLACK RED: RED BRN: BROWN GRY: GRAY)

7. USE COPPER CONDUCTORS ONLY.

3D039564C

TRANSFORMER (220-240V/22V TERMINAL BLOCK (CONTROL)

LIMIT SWITCH (SWING FLAP) **TERMINAL BLOCK (POWER)**

S10

T1R ×₹ X2M

THERMISTOR (COIL

R2T-R3T

Ħ S1L

FLOAT SWITCH

THERMISTOR (AIR)

THERMO SWITCH (M1F EMBEDDED)

(SERVICE MONITOR-GREEN)

LIGHT EMITTING DIODE

HAP

FUSE((B), 5A, 250V)

MAGNETIC RELAY (M1F) MAGNETIC RELAY (M1S) MAGNETIC RELAY (M1P)

K1R-K3R

KAR KPR MOTOR (INDOOR FAN) MOTOR (DRAIN PUMP) MOTOR (SWING FLAP)

M1F M1S Ω ⊼

M1P

PRINTED CIRCUIT BOARD

INDOOR UNIT

TERMINAL BOARD CAPACITOR (M1F CONNECTOR (ADAPTOR FOR WIRING) FOR ELECTORICAL APPENDICES) CONNECTOR (WIRING ADAPTOR

X16A X18A

SELECTOR SWITCH (MAIN/SUB)

WIRED REMOTE CONTROLLER **ELECTRONIC EXPANSION**


VAI VE

THERMISTOR (AIR)


R1 SS1 CONNECTOR FOR OPTIONAL PARTS

PRINTED CIRCUIT BOARD

FXDQ20P / 25P / 32P FXDQ20NA / 25NA / 32NA / 40NA / 50NA / 63NAVE (with Drain Pump)

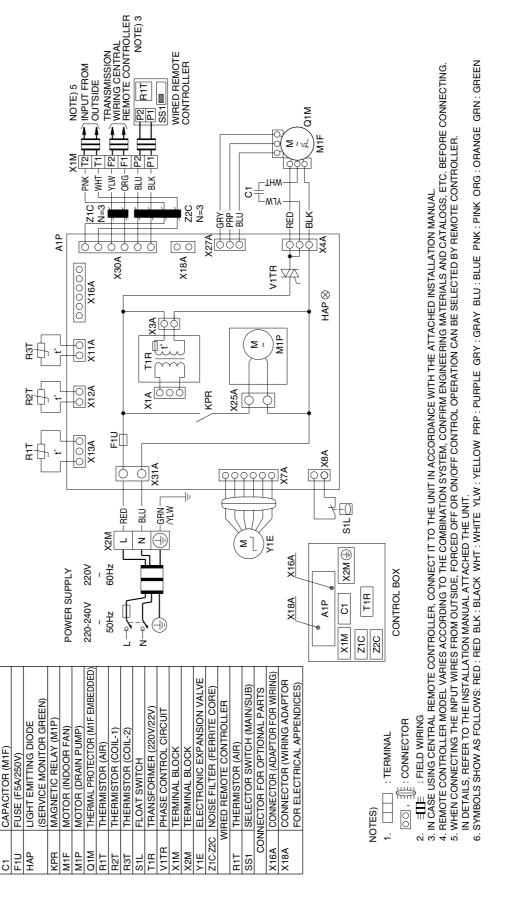

FXDQ20M / 25MV3

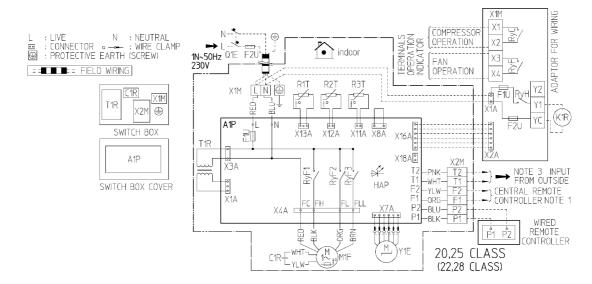

A1P	PRINTED CIRCUIT BOARD	RyF1-3	MAGNETIC RELAY (FAN)	ADAPTOR FOR WIRING	X1M	TERMINAL STRIP
C1R	CAPACITOR (FAN)	T1R	TRANSFORMER	RyC, RyF MAGNETIC RELAY	CC	INNECTOR FOR OPTIONAL PARTS
F1U	FUSE (250V, 10A)		(220-240V/22V)	RýH MAGNETIC RELAY (J1EH)	X16A	CONNECTOR (WIRING ADAPTOR)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	F1U, F2U FUSE (250V, 5A)	X18A	CONNECTOR (WIRING ADAPTOR
HAP	LIGHT EMITTING DIODE	X2M	TERMINAL STRIP (CONTROL)	X1A, X2A CONNECTOR (WIRING ADAPTOR)	AIOA	FOR ELECTRONICAL APPENDICES)
ПАГ	(SERVICE MONITOR-GREEN)	Y1E	ELECTRONIC EXPANSION			
M1F	MOTOR (FAN)		VALVE			
Q1E	EARTH LEAK DETECTOR	OF	TIONAL PARTS			
R1T	THERMISTOR (AIR)	J1EH	ELECTRIC HEATER			
R2T, R31	THERMISTOR (REFRIGERANT)	K1R	MAGNETIC RELAY (J1EH)			

BLK : BLACK, BLU : BLUE, BRN : BROWN, ORG : ORANGE, PNK : PINK, WHT : WHITE, YLW : YELLOW, RED : RED

NOTES:

NUTES:

1. USE COPPER CONDUCTORS ONLY.

2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.


3. WHEN INSTALLING THE ELECTRIC HEATER, CHANGE THE WIRING FOR THE HEATER CIRCUIT. THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.

4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, "FORCED OFF" OR "ON/OFF" OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER.

SEE INSTALLATION MANUAL FOR DETAILS.

2TW23666-1E

FXSQ20M / 25M / 32M / 40M / 50M / 63MV3

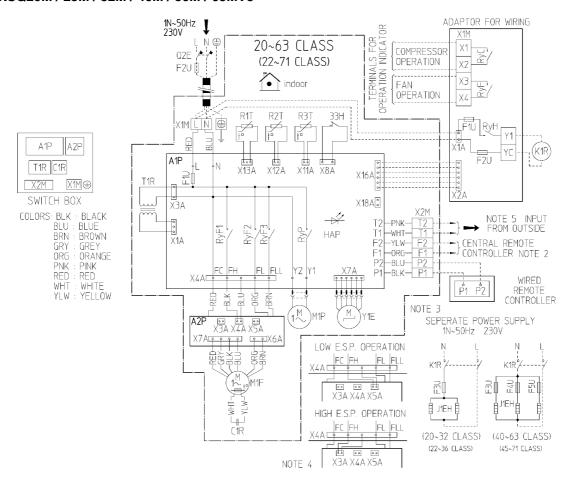

33H	FLOAT SWITCH	R1T	THERMISTOR (AIR)	K1R	MAGNETIC RELAY (J1EH)
A1P	PRINTED CIRCUIT BOARD	R2T, R3T	THERMISTOR (REFRIGERANT)	AD4	APTOR FOR WIRING
A2P	TERMINAL BOARD	RyF1-3	MAGNETIC RELAY (FAN)	RyC, RyF	MAGNETIC RELAY
C1R	CAPACITOR (FAN)	RyP	MAGNETIC RELAY (DRAIN PUMP)	RyH	MAGNETIC RELAY (J1EH)
F1U	FUSE (250V, 10A)	TÎR	TRANSFORMER (220-240V/22V)	F1U, F2U	FUSE (250V, 5A)
F2U	FIELD FUSE	X1M	TERMINAL STRIP (POWER)	X1A, X2A	CONNECTOR (WIRING ADAPTOR)
HAP	LIGHT EMITTING DIODE	X2M	TERMINAL STRIP (CONTROL)	X1M	TERMINAL STRIP
ПАГ	(SERVICE MONITOR-GREEN)	Y1E	ELECTRONIC EXPANSION VALVE	CON	NECTOR FOR OPTIONAL PARTS
M1F	MOTOR (FAN)	OP.	TIONAL PARTS	X16A	CONNECTOR (WIRING ADAPTOR)
M1P	MOTOR (DRAIN PUMP)	F3-5U	FUSE (250V, 16A)	X18A	CONNECTOR (WIRING ADAPTOR FOR
		J1EH	ELECTRIC HEATER	A IUA	ELECTRONICAL APPENDICES)
Q2E	EARTH LEAK DETECTOR				

FIELD WIRING

Ň NEUTRAL 0 0


CONNECTOR WIRE CLAMP : PROTECTIVE EARTH (SCREW)

NOTES

- 1. USE COPPER CONDUCTORS ONLY.
 2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
 3. WHEN INSTALLING THE ELECTRIC HEATER, CHANGE THE WIRING FOR THE HEATER CIRCUIT.
 THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.
 4. FOR HIGH OR LOW ESP OPERATION, CHANGE THE WIRING CONNECTION OF X4A AS SHOWN ON THE WIRING DIAGRAM.
 5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, 'FORCED OFF' OR 'ON/OFF' OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER. SEE INSTALLATION MANUAL FOR MORE DETAILS

 2TW23686-1C

FXSQ80M / 100M / 125MV3

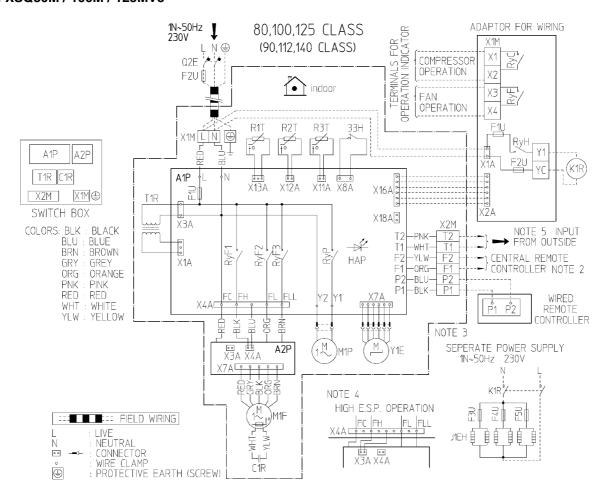

33H	FLOAT SWITCH	R2T, R3T	THERMISTOR (REFRIGERANT)	ADAPTOR FOR WIRING
A1P	PRINTED CIRCUIT BOARD	RyF1-3	MAGNETIC RELAY (FAN)	RyC, RyF MAGNETIC RELAY
A2P	TERMINAL BOARD	RyP	MAGNETIC RELAY (DRAIN PUMP)	RÝH MAGNETIC RELAY (J1EH)
C1R	CAPACITOR (FAN)	T1R	TRANSFORMER (220V/27V)	F1U, F2U FUSE (250V, 5A)
F1U	FUSE (250V, 10A)	X1M	TERMINAL STRIP (POWER)	X1A, X2A CONNECTOR (WIRING ADAPTOR)
F2U	FIELD FUSE	X2M	TERMINAL STRIP (CONTROL)	X1M TERMINAL STRIP
HAP	LIGHT EMITTING DIODE	Y1E	ELECTRONIC EXPANSION VALVE	CONNECTOR FOR OPTIONAL PARTS
HAF	(SERVICE MONITOR-GREEN)	OPT	TONAL PARTS	X16A CONNECTOR (WIRING ADAPTOR)
M1F	MOTOR (FAN)	F3-5U	FUSE (250V, 16A)	X18A CONNECTOR (WIRING ADAPTOR FOR
M1P	MOTOR (DRAIN PUMP)	J1EH	ELECTRIC HEATER	ELECTRONICAL APPENDICES)
Q2E	EARTH LEAK DETECTOR	K1R	MAGNETIC RELAY (J1EH)	
R1T	THERMISTOR (AIR)			

NOTES


- 1. USE COPPER CONDUCTORS ONLY.
 2. WHEN USING THE CENTRAL REMOTE CONTROLLER, SEE MANUAL FOR CONNECTION TO THE UNIT.
- 3. WHEN INSTALLING THE ELECTRIC HEATER, CHANGE THE WIRING FOR THE HEATER CIRCUIT. THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.
- 4. FOR HIGH E.S.P. OPERATION, CHANGE THE WIRING CONNECTION OF X4A AS SHOWN ON THE WIRING DIAGRAM.

 5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED "OFF" OR "ON/OFF" OPERATION CAN BE SELECTED BY THE REMOTE CONTROLLER

SEE INSTALLATION MANUAL FOR MORE DETAILS.

2TW23736-1C

FXMQ40MA / 50MA / 63MA / 80MA / 100MA / 125MAVE

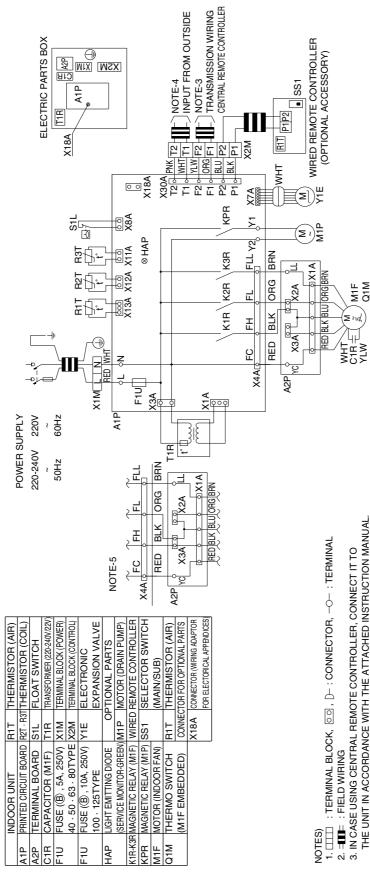

4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL

CAN BE SELECTED BY REMOTE CONTROLLER.

5. IN CASE HIGH E.S.P. OPERATION, CHANGE THE WIRING CONNECTION OF X2A AS SHOWN UPPER FIGURE. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.


6. SYMBOLS SHOW AS FOLLOWS. (PNK : PINK WHT : WHITE YLW : YELLOW ORG : ORANGE BLU : BLUE

BLK: BLACK RED: RED BRN: BROWN)

7. USE COPPER CONDUCTORS ONLY.

3D039621B

FXMQ200MA / 250MAVE

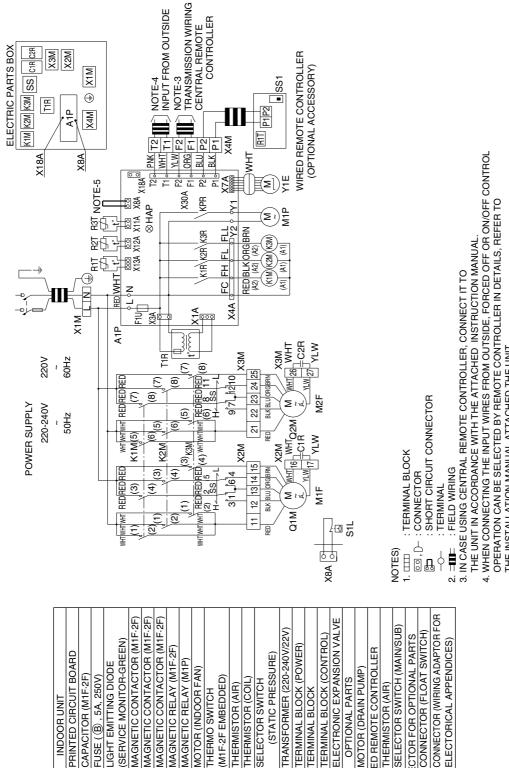

TERMINAL BLOCK (POWER)

TERMINAL BLOCK

X2M-X3M

Σ X ₩

(STATIC PRESSURE)

MAGNETIC RELAY (M1F.2F)

X1R-X3R M1F.M2F

MAGNETIC RELAY (M1P)

MOTOR (INDOOR FAN)

(M1F-2F EMBEDDED)

Q1M.Q2M

THERMISTOR (COIL) SELECTOR SWITCH THERMISTOR (AIR) THERMO SWITCH

R2T.R3T

SS

H

PRINTED CIRCUIT BOARD

CAPACITOR (M1F.2F)

C1R-C2R

FUSE ((B), 5A, 250V)

LIGHT EMITTING DIODE

HAP

		NOTES	-	[∄ ¢	2. ⊒	-
WIRED REMOTE CONTROLLER	THERMISTOR (AIR)	SELECTOR SWITCH (MAIN/SUB)	CONNECTOR FOR OPTIONAL PARTS	CONNECTOR (FLOAT SWITCH)	CONNECTOR (WIRING ADAPTOR FOR	ELECTORICAL APPENDICES)	
₩	R1T	SS1	CONN	X8A	X18A		

MOTOR (DRAIN PUMP)

M1P

OPTIONAL PARTS


OF X8A AND EXECUTE THE ADDITIONAL WIRING FOR FLOAT SWITCH AND DRAIN PUMP. 5. IN CASE INSTALLING THE DRAIN PUMP, REMOVE THE SHORT CIRCUIT CONNECTOR SYMBOLS SHOW AS FOLLOWS. (PNK: PINK WHT: WHITE YLW: YELLOW ORG: ORANGE BLU: BLUE BLK: BLACK RED: RED BRN: BROWN) THE INSTALLATION MANUAL ATTACHED THE UNIT

7. USE COPPER CONDUCTORS ONLY. 8. IN CASE HIGH E.S.P. OPERATION , CHANGE THE SWITCH (SS) FOR "H"

428

3D039801D

FXHQ32MA / 63MA / 100MAVE

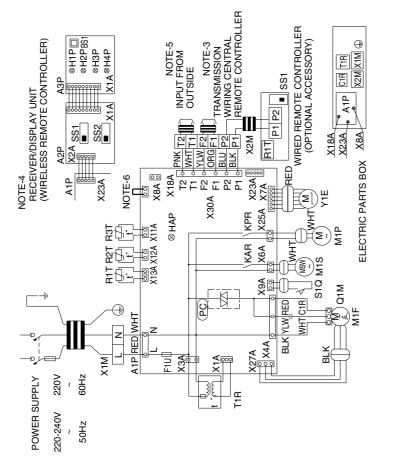

		НЗР	LIGHT EMITTING DIODE
A1P	PRINTED CIRCUIT BOARD		(FILTER SIGN-RED)
C1R	CAPACITOR (M1F)	H4P	LIGHT EMITTING DIODE
F1U	FUSE (®), 5A, 250V)		(DEFROST-ORANGE)
HAP	LIGHT EMITTING DIODE	SS1	SELECTOR SWITCH (MAIN/SUB)
	(SERVICE MONITOR-GREEN)	SS2	SELECTOR SWITCH
KAR	MAGNETIC RELAY (M1S)		(WIRELESS ADDRESS SET)
KPR	MAGNETIC RELAY (M1P)	CONN	CONNECTOR FOR OPTIONAL PARTS
M1F	MOTOR (INDOOR FAN)	X8A	CONNECTOR (FLOAT SWITCH)
M1S	MOTOR (SWING FLAP)	X18A	CONNECTOR (WIRING ADAPTOR FOR
Q1M	THERMO SWITCH (M1F EMBEDDED)		ELECTRICAL APPENDICES)
R1T	THERMISTOR (AIR)	X23A	CONNECTOR (WIRELESS
R2T	THERMISTOR (COIL LIQUID)		REMOTE CONTROLLER)
R3T	THERMISTOR (COIL GAS)		
S1Q	LIMIT SWITCH (SWING FLAP)		
T1R	TRANSFORMER (220-240V/22V)		
X1M	TERMINAL BLOCK (POWER)		
X2M	TERMINAL BLOCK (CONTROL)		
Y1E	ELECTRONIC EXPANSION VALVE		
(C)	PHASE CONTROL CIRCUIT		
	OPTIONAL PARTS		
M1P	MOTOR (DRAIN PUMP)		
WIR	WIRED REMOTE CONTROLLER		
R1T	THERMISTOR (AIR)		
SS1	SELECTOR SWITCH (MAIN/SUB)		
RECE	RECEIVER/DISPLAY UNIT (ATTACHED		
TO WIF	TO WIRELESS REMOTE CONTROLLER)		
A2P	PRINTED CIRCUIT BOARD		
A3P	PRINTED CIRCUIT BOARD		
BS1	PUSH BUTTON (ON/OFF)		
H1P	LIGHT EMITTING DIODE (ON-RED)		
H2P	LIGHT EMITTING DIODE		
	(TIMER-GREEN)		

 $\overline{\square}$: TERMINAL BLOCK $\overline{\square}$, $\overline{\square}$: CONNECTOR $\overline{\square}$: SHORT CIRCUIT CONNECTOR

= : FIELD WIRING


3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
4. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.

IN CASE INSTALLING THE DRAIN PUMP, REMOVE THE SHORT CIRCUIT CONNECTOR OF X8A AND EXECUTE THE ADDITIONAL WIRING FOR FLOAT SWITCH AND DRAIN PUMP. SYMBOLS SHOW AS FOLLOWS.


(PNK: PINK WHT: WHITE YLW: YELLOW

ORG: ORANGE BLU: BLUE BLK: BLACK RED: RED) USE COPPER CONDUCTORS ONLY.

FXAQ20MA / 25MA / 32MAVE / 40MA / 50MA / 63MAVE

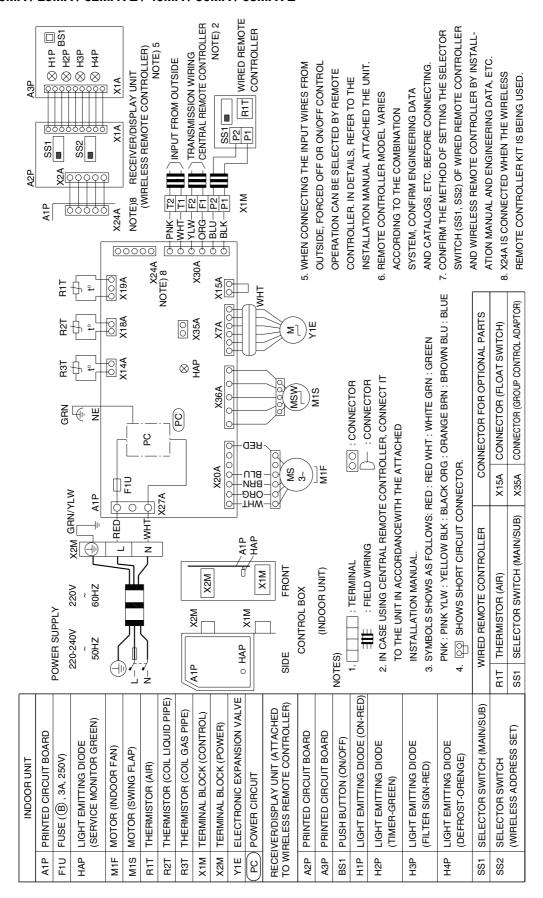

FXLQ20MA / 25MA / 32MA / 40MA / 50MA / 63MAVE FXNQ20MA / 25MA / 32MA / 40MA / 50MA / 63MAVE

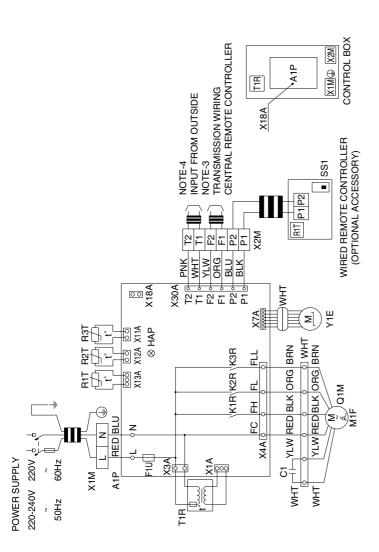

1. ☐☐☐ : TERMINAL BLOCK, ☐☐ () ☐ : CONNECTOR, -O -: TERMINAL
2. ☐☐☐ : FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO
THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTIO MANUAL.
4. WHEN CONNECTING THE INPURES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.

SYMBOLS SHOW AS FOLLOWS, (PNK: PINK WHT: WHITE YLW: YELLOW ORG: ORANGE BLU: BLUE BLK: BLACK RED: RED BRN: BROWN)

6. USE COPPER CONDUCTORS ONLY.


CONNECTOR FOR OPTIONAL PARTS SELECTOR SWITCH (MAIN/SUB) ELECTRONIC EXPANSION VALVE WIRED REMOTE CONTROLLER FOR ELECTORICAL APPENDICES) CONNECTOR (WIRING ADAPTOR THERMISTOR (AIR) X18A SS1 TRANSFORMER (220-240V/22V) (SERVICE MONITOR-GREEN) TERMINAL BLOCK (POWER) PRINTED CIRCUIT BOARD K1R-K3R MAGNETIC RELAY (M1F) **LIGHT EMITTING DIODE** MOTOR (INDOOR FAN) THERMISTOR (COIL) FUSE (®, 5A, 250V) THERMISTOR (AIR) CAPACITOR (M1F) THERMO SWITCH (M1F EMBEDDED) R2T-R3T X1M HAP

|TERMINAL BLOCK (CONTROL)


INDOOR UNIT

431

FXUQ71MA / 100MA / 125MAV1

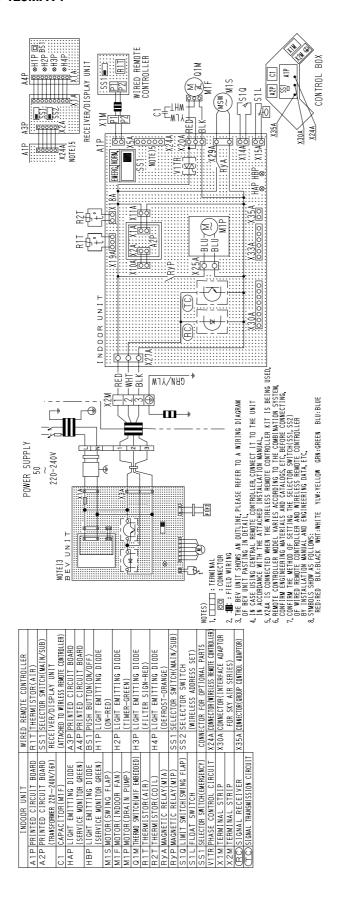

BEVQ71MA / 100MA / 125MAVE

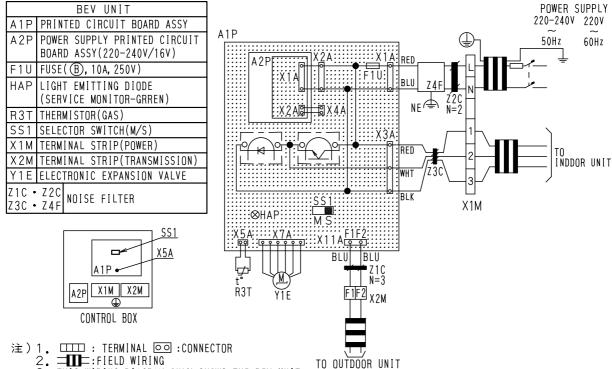

2. = FIELD WIRING

3. THIS WIRING DIAGRAM ONLY SHOWS THE BEV UNIT. SEE THE WIRING DIAGRAMS AND INSTALLATION MANUALS FOR THE WIRING

- AND SETTINGS FOR THE INDOOR, OUTDOOR, AND BS UNITS.

 4. SEE THE INDOOR UNIT'S WIRING DIAGRAM WHEN INSTALLING OPTIONAL PARTS FOR THE INDOOR UNIT.

 5. ONLY ONE INDOOR UNIT MAY BE CONNECTED TO THE BEV UNIT.

SEE THE INDOOR UNIT'S WIRING DIAGRAM FOR WHEN CONNECTING THE REMOTE CONTROL,

- 6. ALWAYS USE THE SKY AIR CONNECTION ADAPTER FOR THE INDOOR UNIT WHEN USING A CENTRAL CONTROL UNIT. REFER TO THE MANUAL ATTACHED THE UNIT WHEN CONNECTING.
- 7. COOL/HEAT CHANGEOVER OF INDOOR UNITS CONNECTED TO BEV UNIT CANNOT BE CARRIED OUT UNLESS THEY ARE CONNECTED TO BS UNIT.


- IN CASE OF A SYSTEM WITH BEV UNIT ONLY, COOL/HEAT SELECTOR IS REQUIRED.

 8. SET THE SS1 TO 'M' ONLY FOR THE BEV UNIT CONNECTED TO THE INDOOR UNIT WHICH IS TO HAVE COOL/HEAT SWITCHING CAPABILITY, WHEN CONNECTING THE BS UNIT. THE "M/S" ON THE SS1 STANDS FOR "MAIN/SUB". THIS IS SET TO "S" WHEN SHIPPED FROM THE FACTORY.
- 9. CONNECT THE ATTACHED THERMISTOR TO THE R3T.
- 1 O. SYMBOLS SHOW AS FOLLOWS.

(BLU:BLUE RED:RED WHT:WHITE BLK:BLACK)

3D044901B

2.4 BS Unit

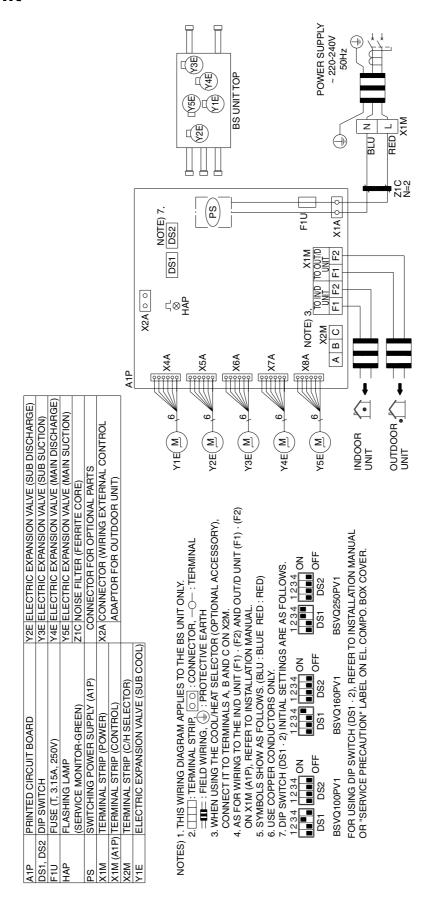

3D055928C

3. List of Electrical and Functional Parts

3.1 Outdoor Unit

3.1.1 REYQ8P8Y1B~12P8Y1B

Item		lama	Cumbal		Model			
nem	1	varrie	Symbol	REYQ8P8Y1B	REYQ10P8Y1B	REYQ12P8Y1B		
	Inverter	JT1GCVDKYR@SA	JT1GCVDKYR@SA					
Compressor Fan motor Electronic expar Electronic expar	Inverter		M1C					
		Туре			JT170G-KYE@T			
Compressor	STD 1		M2C	15.0A				
		Туре						
Ean motor	STD 2		МЗС	_				
Fan motor			M1F	3.0	overseas : 1.14A) osed: Opls Fully open: 1375pls osed: Opls Fully open: 480pls 0~480pls			
Electronic expa	nic expansion valve (Main)			Fully clos	ed: 0pls Fully oper	n: 1375pls		
Electronic expansion valve (Subcool)			Y2E	Fully clos	sed: 0pls Fully ope	n: 480pls		
Electronic expa	nsion valve (Refr	igerant charge)	EV		0~480pls			
Electronic expans		For M1C	S1PH	OFF: 4.0 ⁺⁰ _{-0.12} MPa ON: 3.0±0.15MPa				
		For M2C	S2PH	OFF: 4.0 ⁺⁰ _{-0.12} MPa ON: 3.0±0.15MPa				
Inverter		_						
	OFF: 0.07MPa							
Electronic expans Electronic expans Pressure protection Temperature protection	protection	•	R3T	OFF: 135°C				
	protection	•	R1T		OFF: 93°C			
		For main PC	F1U	250V AC 10A	Class B Time-lag 3.	15A AC 250V		
Others	Fuse		F2U	250V AC 10A	Class B Time-lag 3.	15A AC 250V		
Fan motor Electronic expa Electronic expa Electronic expa Pressure protection Temperature protection	. 400		F1U	250V AC 10A Class B Time-lag 3.15A AC 250V 250V AC 5A Class B				

3.1.2 REYQ14P8Y1B~16P8Y1B

Item		lomo	Cymbol	Mo	del			
пеш		lame	Symbol	REYQ14P8Y1B	REYQ16P8Y1B			
		Туре		REYQ14P8Y1B	KYR@SA			
	Inverter	OC protection device	M1C					
		Type OC protection device Type OC protection device Type OC protection device Type OC protection device M3C OC protection device M3C OC protection device M1F, M2F Valve (Main) Y1E Fully closed: For M1C S1PH OFF: 4.0 +0 -0.1: Appressure For M2C For M3C S2PH OFF: 4.0 +0 OF OT Pressure sensor SENPL OFF: 4.0 +0 OF OT Pressure sensor OFF: 4.0 +0 OF OT Pressure sensor OFF: 4.0 +0 OF OT Pressure s	JT170G-	KYE@T				
Compressor Fan motor Electronic expan Electronic expan	STD 1		M2C					
		Type		JT170G-	KYE@T			
	STD 2		M3C	15.	0A			
Fan motor			Y1E Fully closed: Opls Fully open: 1375pls					
Electronic expa	ansion valve (Main)		Y1E	Fully closed: 0pls	Fully open: 1375pls			
•	ectronic expansion valve (Subcool)			Fully closed: 0pls	Fully open: 480pls			
Electronic expansion valve (Refrigerant charge)			EV	0~480pls				
•		For M1C	S1PH					
Pressure	High pressure switch	For M2C	S2PH	<u> </u>				
protection	- Switch	For M3C	S3PH					
Fan motor Electronic expan Electronic expan Electronic expan Pressure protection Temperature protection	Low pressure :	sensor	SENPL	OFF: 0.	07MPa			
Temperature	protection	•	R3T	OFF:	135°C			
	protection	•	R1T	OFF:	93°C			
Others		For main PC	F1U	250V AC 10A Class B T	ime-lag 3.15A AC 250V			
	Fuse		F2U	250V AC 10A Class B T	ime-lag 3.15A AC 250V			
2010			F1U	250V AC 5	5A Class B			

3.1.3 REMQ8P8Y1B~12P8Y1B

Item		la a	Cumple of		Model			
item	l l	ıame	Symbol	REMQ8P8Y1B	P8Y1B REMQ10P8Y1B REMQ12P JT1GCVDKYR@SA 14.7A - JT170G-KYE@T - 15.0A	REMQ12P8Y1B		
	Inverter Type			JT1GCVDKYR@S/	\			
Compressor Fan motor Electronic expa Electronic expa Electronic expa Pressure protection Temperature protection	Inverter		M1C	14.7A				
		Туре		_	JT170G	JT170G-KYE@T		
Compressor	STD 1		M2C	_	15	5.0A		
•		Туре		_	-	_		
	STD 2		МЗС	_	-	_		
Fan motor								
Electronic expan	nsion valve (Mair	1)	Y1E	Fully closed : 0pls Fully open : 480pls				
Electronic expan	pansion valve (Refrigerant charge)		Y2E	Fully closed: 0pls Fully open: 480pls				
Electronic expan	nsion valve (Sub	cool)	Y3E	Fully closed :	0pls Full	y open : 480pls		
		For M1C	S1PH	OFF : 4.0 ⁺⁰ 0.12	MPa ON	: 3.0±0.15MPa		
Pressure		For M2C	S2PH	OFF: 4.0 ⁺⁰ 0.12	MPa ON	: 3.0±0.15MPa		
protection	ownon	For M3C	S3PH		_			
Inverter Type		OFF: 0.07MPa						
Temperature	protection	•	R3T		OFF : 135°C			
	protection	-	R1T		OFF : 93°C			
		For main PC	F1U	Time-lag 3.15	A AC 250V / 250V A	C 10A Class B		
Others	Fuse		F2U	Time-lag 3.15	A AC 250V / 250V A	C 10A Class B		
Fan motor Electronic expa Electronic expa Electronic expa Pressure protection Temperature protection	1 400		F1U		250V AC 5A Class I	В		

3.1.4 REMQ14P8Y1B~16P8Y1B

Item		lame	Cumbal	Мо	del			
петт		vame	M1C 14.7A JT170G-KYE@1 M2C 15.0A JT170G-KYE@1 M3C 15.0A JT170G-KYE@1 M3C 15.0A 1.2A Y1E Fully closed : Opls Fully	REMQ16P8Y1B				
		Туре		JT1GCVD	KYR@SA			
	Inverter	OC protection device	M1C					
		Type		JT170G-	KYE@T			
Compressor	STD 1	OC protection device	M2C	15.	0A			
		Type		JT170G-	KYE@T			
	STD 2	OC protection device	M3C	15.0A				
Fan motor OC protection device			M1F, M2F	1.2A				
Electronic expa	ınsion valve (Mair	n)	Y1E	Fully closed : 0pls	Fully open : 480pls			
Electronic expansion valve (Refrigerant charge)			Y2E	Fully closed : 0pls	Fully open : 480pls			
Electronic expa	insion valve (Sub	cool)	Y3E	Fully closed : 0pls	Fully open: 480pls			
		For M1C	S1PH	0=	ON: 3.0±0.15MPa			
Pressure	High pressure switch	For M2C	S2PH	OFF : 4.0 ⁺⁰ 0.12 MPa	ON: 3.0±0.15MPa			
protection		For M3C	S3PH	OFF: $4.0^{+0}_{-0.12}$ MPa	ON: 3.0±0.15MPa			
	Low pressure s	sensor	SENPL	OFF: 0	.07MPa			
Temperature	Discharge gas protection (Discharge pip	•	R3T	OFF:	135°C			
protection	Inverter fin tem protection (Radiator fin th	•	R1T	OFF:	93°C			
Others		For main PC	F1U	Time-lag 3.15A AC 250V	/ / 250V AC 10A Class B			
	Fuse	board	F2U	Time-lag 3.15A AC 250V	/ / 250V AC 10A Class B			
	. 200	For Noise filter PC board	F1U	250V AC 5	6A Class B			

3.2 Indoor Side

3.2.1 Indoor Unit

							Model					
	Parts Name	Symbol	FXFQ20 PVE	FXFQ25 PVE	FXFQ32 PVE	FXFQ40 PVE	FXFQ50 PVE	FXFQ63 PVE	FXFQ80 PVE	FXFQ 100 PVE	FXFQ 125 PVE	Remark
Remote	Wired Remote Controller						BRC1D52	2				Ontion
Controller	Wireless Remote Controller					E	BRC7F532	2				Option
	Fan Motor	M1F			Thermal	Proctecto	r : OFF : '	108 ^{±5} (ON	N : 96 ^{±15})			
Notors	Drain Pump	M1P		AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C								
	Swing Motor	M1S		MP35HCA[3P007482-1] Stepping Motor DC16V								
	Thermistor (Suction Air)	R1T			In PC b	oard A4F	or wired	remote co	ontroller			
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T					605-5 φ8 L 0kΩ (25°C					
	Thermistor (Heat Exchanger)	R2T					02A-5 φ6 l 0kΩ (25°0					
	Float Switch	S1L					FS-0211E	3				
Othoro	Fuse	F1U		250V 5A φ5.2								
Others	Thermal Fuse	TFu					_					
	Transformer	T1R		•	•	•	_		•		•	

						Мо	del				
	Parts Name	Symbol	FXCQ 20MV3	FXCQ 25MV3	FXCQ 32MV3	FXCQ 40MV3	FXCQ 50MV3	FXCQ 63MV3	FXCQ 80MV3	FXCQ 125 MV3	Remark
Remote	Wired Remote Controller					BRC	1D52				Option
Controller	Wireless Remote Controller					BRC	7C62				Оршоп
						AC 220~2	40V 50Hz				
	Fan Motor	M1F	1φ10W 1φ15W		1φ2	:0W	1¢30W	1φ50W	1φ85W		
	T an inco			Thermal F	use 152°C				otector 135° 87°C : ON		
_	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C								
	Swing Motor	M1S				MT8-L[3P. AC200	A07509-1] ~240V				
	Thermistor (Suction Air)	R1T				ST8601-6 20kΩ	φ4 L1250 (25°C)				
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T				ST8605-6 20kΩ	φ8 L1250 (25°C)				
	Thermistor (Heat Exchanger)	R2T				ST8602A- 20kΩ)			
Float Switch S1L FS-0211B											
Others	Fuse	F1U				250V 5	δΑ φ5.2				
	Transformer	T1R				TR22H	121R8				

					Model						
	Parts Name	Symbol	FXZQ 20MV1	FXZQ 25MV1	FXZQ 32MV1	FXZQ 40MV1	FXZQ 50MV1	Remark			
Remote	Wired Remote Controller				BRC1D52			Ontion			
Controller	Wireless Remote Controller				BRC7E530			Option			
		AC 220~240V 50Hz									
	Fan Motor										
	Thermal Fuse OFF : 130 ^{±5} / ON : 80 ^{±20}										
Motors	Capacitor, fan motor C1 4.0μ F 400VAC										
Wiotors	rs Capacitor, fan motor C1 4.0µ F 400VAC AC220-240V (50Hz) Drain Pump M1P PLD-12230DM Thermal Fuse 145°C										
	Swing Motor	M1S		MP	35HCA [3P08080 AC200~240V)1-1]					
	Thermistor (Suction Air)	R1T		5	ST8601A-1 φ4 L25 20kΩ (25°C)	50					
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T			ST8605-3 φ8 L63 20kΩ (25°C)	0					
	Thermistor (Heat Exchanger) R2T ST8602A-3 φ6 L630 20kΩ (25°C)										
	Float Switch	S1L			FS-0211						
Others	Fuse	F1U			250V 5A φ5.2						
	Transformer	T1R	TR22H21R8								

				Me	odel						
	Parts Name	Symbol	FXKQ 25MAVE	FXKQ 32MAVE	FXKQ 40MAVE	FXKQ 63MAVE	Remark				
Remote	Wired Remote Controller			BRC	C1D52		Option				
Controller	Wireless Remote Controller			BRC	C4C61						
				AC 220~	240V 50Hz						
	Fan Motor	M1F	1φ15	W 4P	1φ20W 4P	1φ45W 4P					
			Thermal F	use 146°C	Thermal protector 12	20°C : OFF 105°C : N					
Motors	Drain Pump	M1P		AC 220-240V (50Hz) PLD-12200DM Thermal Fuse 145°C							
	Swing Motor	M1S			[3P080801-1] 0~240V						
	Thermistor (Suction Air)	R1T			13 φ4 L630 (25°C)						
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T			7 φ8 L1600 (25°C)						
	Thermistor (Heat Exchanger)	R2T			-7 φ6 L1600 (25°C)						
	Float Switch	S1L	FS-0211B								
Others	Fuse	F1U	250V 5A φ5.2								
	Transformer	T1R		TR22	H21R8						

					Мо	del				
	Parts Name	Symbol	FXDQ 20NAVE, PVE	FXDQ 25NAVE, PVE	FXDQ 32NAVE, PVE	FXDQ 40NAVE	FXDQ 50NAVE	FXDQ 63NAVE	Remark	
Remote	Wired Remote Controller				BRC	1D52			Option	
Controller	Wireless Remote Controller				BRC	4C62			Оршоп	
					AC 220~2	240V 50Hz				
	Fan Motor	M1F		1¢6	62W		1φ13	30W		
Motors Thermal protector 130°C: OFF, 83°C: ON										
	Drain Pump M1P AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C						*			
	Thermistor (Suction Air)	R1T				φ4 L=250 (25°C)				
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T				φ8 L=800 (25°C)				
Thermistor (Heat Exchanger) R2T ST8602A-4 φ6 L=8 20kΩ (25°C)										
	Float Switch	S1L			FS-0	211E			*	
Others	Fuse	F1U			250V 5	5Α φ5.2				
	Transformer	T1R		TR22H21R8						

^{*}only for FXDQ20~63N(A)VE, FXDQ20~32PVE (with Drain Pump Type)

	Parts Name	Cumbal	Mo	odel	Demode
	Paris Name	Symbol	FXDQ20MV3	FXDQ25MV3	Remark
Remote	Wired Remote Controller		BRC	1D52	Ontion
Controller	Wireless Remote Controller		BRC	4C62	Option
Motors	Fan Motor	M1F			
Wiotors			Thermal protector 13	5°C : OFF, 87°C : ON	
	Drain Pump	M1P			
	Thermistor (Suction Air)	R1T			
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T			
	Thermistor (Heat Exchanger)	R2T			
	Float Switch	S1L			
Others	Fuse	F1U	250\	/ 10A	
	Transformer	T1R			

							Model					
	Parts Name	Symbol	FXSQ 20 MV3	FXSQ 25 MV3	FXSQ 32 MV3	FXSQ 40 MV3	FXSQ 50 MV3	FXSQ 63 MV3	FXSQ 80 MV3	FXSQ 100 MV3	FXSQ 125 MV3	Remark
Remote	Wired Remote Controller						BRC1D52	!				Option
Controller	Wireless Remote Controller						BRC4C62	!				Option
						AC 2	20~240V	50Hz				
	Fan Motor	M1F	Thermal protector									
Motors			Thermal Fuse 152°C Thermal protector 135°C : OFF 87°C : 0							ector 7°C : ON		
	Drain Pump	M1P				PL	20-240V (5 D-12230E nal Fuse 1	OM ´				
	Thermistor (Suction Air)	R1T					601-4 φ4 l 0kΩ (25°C					
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T					605-7 φ8 L 0kΩ (25°C					
	Thermistor (Heat Exchanger)					02A-6 φ6 l 0kΩ (25°C						
	Float Switch	S1L					FS-0211B	3				
Others	Fuse	F1U				25	50V 5A φ5	.2				
Transformer T1R TR22H21R8												

						Мо	del				
	Parts Name	Symbol	FXMQ 40MAVE	FXMQ 50MAVE	FXMQ 63MAVE	FXMQ 80MAVE	FXMQ 100MAVE	FXMQ 125MAVE	FXMQ 200MAVE	FXMQ 250MAVE	Remark
Remote	Wired Remote Controller					BRC	1D52				Ontion
Controller	Wireless Remote Controller					BRC	4C62				Option
						AC 220~2	240V 50Hz				
	Fan Motor	M1F		1φ100W		1φ160W	1¢270W	1¢430W	1φ38	0W×2	
Motors				•	Thermal pr	otector 135	°C : OFF	87°C : O	٧		
	Capacitor for Fan Motor	C1R		5μ F-400V		7μ F 400V	10μ F 400V	8μ F 400V	10μ F 400V	12μ F 400V	
	Thermistor (Suction Air)	R1T			ST8601A- 20kΩ	5 φ4 L1000 (25°C)				1A-13 .630	
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T				4 φ8 L800 (25°C)				05A-5 1000	
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L800 ST8602A-6 20kΩ (25°C) φ6 L1250								
	Float switch	S1L				FS-0	0211				
Others	Fuse	F1U		250V 5	5Α φ5.2		250V 1	0Α φ5.2	250V 5	δΑ φ5.2	
	Transformer T1R TR22H21R8										

				Model				
	Parts Name	Symbol	FXHQ 32MAVE	FXHQ 63MAVE	FXHQ 100MAVE	Remark		
Remote	Wired Remote Controller			BRC1D52	•	Option		
Controller	Wireless Controller			BRC7E63W				
			A	C 220~240V/220V 50Hz/60I	Hz			
	Fan Motor	M1F	1φ6	1φ63W 1φ130W				
Motors			Therma	I protector 130°C : OFF 8	0°C : ON			
Motoro	Capacitor for Fan Motor	C1R	3.0μF	-400V	9.0μF-400V			
	Swing Motor	M1S		MT8-L[3P058751-1] AC200~240V				
	Thermistor (Suction Air)	R1T		ST8601A-1 φ4 L250 20kΩ (25°C)				
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T		98 L = 1250 (25°C)	ST8605-6 φ8 L = 1250 20kΩ (25°C)			
	Thermistor (Heat Exchanger)			ST8602A-6 φ6 L = 1250 20kΩ (25°C)				
Others	Fuse F1U		250V 5A φ5.2					
Others	Transformer	T1R	TR22H21R8					

					Мо	del			
	Parts Name	Symbol	FXAQ 20MAVE	FXAQ 25MAVE	FXAQ 32MAVE	FXAQ 40MAVE	FXAQ 50MAVE	FXAQ 63MAVE	Remark
Remote	Wired Remote Controller				BRC	1D52			Ontion
Controller	Wireless Remote Controller				BRC7	7E618			Option
					AC 220~2	40V 50Hz			
	Fan Motor	M1F	1φ40W 1φ43W						
Motors				Therma	l protector 130	°C : OFF 80	°C : ON		
	Swing Motor	M1S	MF	P24 [3SB40333 AC200~240V	3-1]	MSFB0	C20C21 [3SB4 AC200~240V	0550-1]	
	Thermistor (Suction Air)	R1T			ST8601-2 20kΩ	2 φ4 L400 (25°C)			
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T			ST8605-2 20kΩ	2 φ8 L400 (25°C)			
	Thermistor (for Heat Exchanger)	R2T			ST8602-2 20kΩ	2 φ6 L400 (25°C)			
Others	Float Switch	S1L			OPT	ION			
Otileis	Fuse F1U 250V 5A φ5.2								

					Мо	del			
	Parts Name	Symbol	FXLQ 20MAVE	FXLQ 25MAVE	FXLQ 32MAVE	FXLQ 40MAVE	FXLQ 50MAVE	FXLQ 63MAVE	Remark
Remote	Wired Remote Controller				BRC	1D52			Option
Controller	Wireless Remote Controller				BRC	4C62			Оршоп
					AC 220~2	40V 50Hz			
Motors Fan Motor M1F 1φ15W 1φ25W						1φ3	5W		
IVIOLOIS				Thermal	protector 135°	C: OFF 120	0°C : ON		
	Capacitor for Fan Motor	C1R	1.0μF	-400V	0.5μF-400V	1.0μF-400V	1.5μF-400V	2.0μF-400V	
	Thermistor (Suction Air)	R1T			ST8601-6 20kΩ				
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T			ST8605-9 20kΩ				
Thermistor (for Heat Exchanger) R2T ST8602A-9 φ6 L2500 20kΩ (25°C)									
Others	Fuse	F1U			AC25	0V 5A			
Ollieis	Transformer	T1R			TR22H	H21R8			

					Мо	del				
	Parts Name	Symbol	FXNQ 20MAVE	FXNQ 25MAVE	FXNQ 32MAVE	FXNQ 40MAVE	FXNQ 50MAVE	FXNQ 63MAVE	Remark	
Remote	Wired Remote Controller				BRC	1D52			- Option	
Controller	Wireless Remote Controller				BRC	4C62			Оршоп	
					AC 220~2	40V 50Hz				
Motors Fan Motor M1F 1φ15W 1φ25W 1φ35W						5W				
IVIOLOIS				Thermal	protector 135°	°C : OFF 120	0°C : ON			
	Capacitor for Fan Motor	C1R	1.0μF	1.0μF-400V						
	Thermistor (Suction Air)	R1T				φ4 L1250 (25°C)				
Thermistors	Thermistor (for Heat Exchanger High Temp.)	R3T				φ8 L2500 (25°C)				
	Thermistor (for Heat Exchanger) R2T ST8602A-9 φ6 L2500 20kΩ (25°C)									
Others	Fuse	F1U			AC25	0V 5A				
Others Transformer T1R TR22H21R8										

	Parts Name	Cumbal		Model		Domoric				
	Paris Name	Symbol	FXUQ71MAV1	FXUQ100MAV1	FXUQ125MAV1	Remark				
Remote	Wired Remote Controller			BRC1C62		Ontion				
Controller	Wireless Remote Controller			BRC7C528W		Option				
				AC 220~240V 50Hz						
	Fan Motor	M1F	1φ45W	1φ45W 1φ90W						
			Thermal protector 130°C	Thermal protector 130°C : OFF 83°C : ON						
Motors	Drain Pump	M1P	AC2	220-240V (50Hz) AC220V (60 PJV-1426	Hz)					
	Swing Motor	M1S		MT8-L[3PA07572-1] AC200~240V						
Thermistors	Thermistor (Suction Air)	R1T		ST8601-1 φ4 L=250 20kΩ (25°C)						
THEIMISTORS	Thermistor (Heat Exchanger)	R2T		ST8602A-4 φ6 L=800 20kΩ (25°C)						
Others	Float Switch	S1L		FS-0211B						

SiBE37-704 Option List

4. Option List

4.1 Option List of Controllers

Operation Control System Optional Accessories

No.	Item		Туре	FXCQ-M8	FXFQ-P	FXZQ-M	FXKQ-MA	FXDQ-P FXDQ-NA	FXSQ-M	FXDQ-M	FXMQ-MA	FXHQ-MA	FXAQ-MA	FXLQ-MA FXNQ-MA	FXUQ-MA
1	Remote	Wireless	H/R	BRC7C62	BRC7F532F	BRC7E530	BRC4C61	BRC4C62	BRC4C62	BRC4C62	BRC4C62	BRC7E63	BRC7E618	BRC4C62	BRC7C528W
	controller	Wired							BRC	1D52					
2	Wired remote con weekly schedule t				BRC1D528					BRC	1D61				
3	Simplified remote controller (Exposed type)				-	_		BRC2C51					_	BRC2C51	_
4	Remote controller for hotel use (Concealed type)				-	_			BRC	RC3A61		_		BRC3A61	_
5	Adaptor for wiring			★KRP1B61	_	★KRP1B57	KRP1B61	★KRP1B56	_	KRP	1B61	KRP1B3	_	KRP1B61	_
6-1	Wiring adaptor for appendices (1)	r electrical		★KRP2A61	★KRP2A526	★KRP2A526	KRP2A61	★KRP2A53	KRP2A516	KRP	2A51	★KRP2A62	★KRP2A51	KRP2A51	KRP2A62
6-2	Wiring adaptor for appendices (2)	r electrical		★KRP4A5 1	★KRP4AA53	★KRP4A536	KRP4A51	★KRP4A54	KRP4A516	KRP	4A51	★KRP4A52	★KRP4A51	KRP4A51	KRP4A53
7	Remote sensor			KRCS01-1	KRCS01-4	KRCS01-1					KRCS01-1				
8	Installation box for adaptor PC board ☆			Note 2,3 KRP1B96	Note 2,3 KRP1H98	Note 4,6 KRP1BA101	_	Note 4,6 KRP1BA101	Note 5 KRP4A91	_	_	Note 3 KRP1C93	Note 2,3 KRP4A93	_	KRP1B97
9	9 External control adaptor for outdoor unit (Must be installed on indoor units)		★ DTA104A61	★ DTA1	104A52	DTA104A61	★ DTA104A53	DTA104A51	DTA1	04A61	★ DTA104A62	★ DTA104A51	DTA104A61	DTA102A52	

Note:

- 1. Installation box ☆ is necessary for each adaptor marked ⋆.
- 2. Up to 2 adaptors can be fixed for each installation box.
- 3. Only one installation box can be installed for each indoor unit.
- 4. Up to 2 installation boxes can be installed for each indoor unit.
- 5. Installation box & is necessary for second adaptor.
- 6. Installation box ☆ is necessary for each adaptor.

Various PC Boards

· u	Various i o Boards					
No.	Part name	Model No.	Function			
1	Adaptor for wiring	KRP1B56 KRP1B57 KRP1B61 KRP1B3	■ PC board when equipped with auxiliary electric heater in the indoor unit.			
2	DIII-NET Expander Adaptor	DTA109A51	■ Up to 1,024 units can be centrally controlled in 64 different groups. ■ Wiring restrictions (max. length: 1,000 m, total wiring length: 2,000 m, max. number of branches: 16) apply to each adaptor.			

System Configuration

0,0	ystem configuration						
No.	Part	name	Model No.	Function			
1	Central remote controller		DCS302C51 DCS302CA51 (FXFQ-P)	Up to 64 groups of indoor units(128 units) can be connected, and ON/OFF, temperature setting and monitoring can be accomplished individually or simultaneously. Connectable up			
1-1	Electrical box with 6 (3 blocks)	earth terminal	KJB311A	to 2 controllers in one system.			
2	Unified ON/OFF co	ntroller	DCS301B51 DCS301BA51 (FXFQ-P)	Up to 16 groups of indoor units(128 units) can be turned, ON/OFF individually or			
2-1	Electrical box with 6 (2 blocks)	earth terminal	KJB212A	simultaneously, and operation and malfunction can be displayed. Can be used in combination with up to 8 controllers.			
2-2	-2 Noise filter (for electromagnetic interface use only)		KEK26-1				
3	3 Schedule timer		DST301B51 DST301BA51 (FXFQ-P)	Programmed time weekly schedule can be controlled by unified control for up to 64 groups of indoor units (128 units). Can turn units ON/OFF twice per day.			
4	Interface adaptor	R-407C/R-22	★DTA102A52				
4	for SkyAir-series	R-410A	★ DTA112B51	 Adaptors required to connect products other than those of the VRV System to the high- speed DIII-NET communication system adopted for the VRV System. 			
5	Central control adaptor kit	For UAT(Y)- K(A),FD-K	★ DTA107A55	* To use any of the above optional controllers, an appropriate adaptor must be installed on the product unit to be controlled.			
6	6 Wiring adaptor for other air-conditioner		★ DTA103A51	and product arm to 30 dormonous			
7	7 DIII -NET Expander Adaptor		DTA109A51	Up to 1024 units can be centrally controlled in 64 different groups. Wiring restrictions (max. lengh: 1,000m, total wiring lengh: 2,000m, max. number of branches: 16) apply to each adaptor.			
7-1	Mounting plate		KRP4A92	Fixing plate for DTA109A51			

Note:

1. Installation box for * adaptor must be procured on site.

Option List SiBE37-704

Building Management System

No.			Pa	rt name			Model No.		Function
1			Basic	Hardware	intelligent Controller		DCS601C51	•	Air-Conditioning management system that can be controlled by a compact all-in-one unit.
1-1	intelligent Touch Controller		Touch		DIII-NET plus adaptor		DCS601A52	•	Additional 64 groups (10 outdoor units) is possible.
1-2			Option		P. P. D.		DCS002C51	•	P. P. D.: Power Proportional Distribution function
1-3				Software	Web		DCS004A51	•	Monitors and controls the air conditioning system using the Internet and a Web browser application on a PC.
1-4	Electr	ical box with	earth tern	ninal (4 bloo	cks)		KJB411A	•	Wall embedded switch box.
						128 units	DAM602B52		
					Numberof	256 units	DAM602B51		
2			Basic	Hardware	Number of units to be	512 units	DAM602B51x2	•	Air conditioner management system that can be controlled by personal computers.
	intellio	nent			connected	768 units	DAM602B51x3		
	Mana					1024 units	DAM602B51x4		
2-1				'		P.P.D.	DAM002A51	•	Power Proportional Distribution function
2-2		Optio		Option Softv		Web	DAM004A51	•	Monitors and controls the air conditioning system using the Internet and a Web browser application on a PC.
2-3				Eco		Eco	DAM003A51	•	ECO (Energy saving functions.)
2-4	Optio	nal DIII Ai unit	t				DAM101A51	•	External temperature sensor for intelligent Manager III.
2-5	Di uni	t					DEC101B51	•	Input contacts: 16 points
2-6	Dio ur	nit					DEC102B51	•	Input contacts: 8 points; output contacts: 4 points
3	line	*1 Interface f	or use in	BACnet [®]			DMS502B51	•	Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through BACnet communication.
3-1	Communication line	Optional DIII	board				DAM411B51	•	Expansion kit, installed on DMS502B51, to provide 2 more DIII-NET communication ports. Not usable independently.
3-2	munic	Optional Di b	oard				DAM412B51	•	Expansion kit, installed on DMS502B51, to provide 16 more wattmeter pulse input points. Not usable independently.
4	Com	*2 Interface for use in LONWORKS®			DMS504B51	•	Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through LONWORKS® communication.		
5	бо	Parallel interface Basic unit		DPF201A51	•	Enables ON/OFF command, operation and display of malfunction; can be used in combination with up to 4 units.			
6	Contact/analog signal	Temperature measurement units		DPF201A52	•	Enables temperature measurement output for 4 groups; 0-5VDC.			
7	ontact sig	Temperat setting un	ure its				DPF201A53	•	Enables temperature setting input for 16 groups; 0-5VDC.
8	ŏ	Unification accomputerized		r			★ DCS302A52	•	Interface between the central monitoring board and central control units.

- ${\rm \star 1.\,BACnet}^{\rm @} \, \text{is a registered trademark of American Society of Heating, Refrigerating and Air-}$ Conditioning Engineers (ASHRAE).

 *2. LONWORKS[®], is a registered trade mark of Echelon Corporation.
- **★3.** Installation box for ★ adaptor must be procured on site.

SiBE37-704 Option List

4.2 Option Lists (Outdoor Unit)

REYQ8 ~ 16PY1

Series		Series	VRV III H/R		
Optio	onal accessories	Models	REYQ8PY1	REYQ10PY1 REYQ12PY1 REYQ14PY1 REYQ16PY1	
outive	Refnet header	Model	KHRP25M33H (Max. 8 branch)	KHRP25M33H, KHRP25M72H (Max. 8 branch) (Max. 8 branch)	
Distributive Piping	Refnet joint	Model	KHRP25A22T, KHRP25A33T	KHRP25A22T, KHRP25A33T (KHRP25A72T+KHRP25M72TP)	
Cent	ral drain pan kit	Model	KWC25C450	KWC25C450	
Digita	al pressure gauge kit	Model	BHGP26A1	BHGP26A1	
		•		C · 3D057610A	

REYQ18 ~ 32PY1

	Series		VRV III H/R		
Optio	onal accessories	Models	REYQ18PY1	REYQ20PY1 REYQ22PY1 REYQ24PY1	
Distributive Piping	Refnet header	Model	KHRP25M33H, KHRP25M72H (Max. 8 branch) (Max. 8 branch)	KHRP25M33H, KHRP25M72H, KHRP25M73H (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)	
Distrik	Refnet joint	Model	KHRP25A22T, KHRP25A33T (KHRP25A72T+KHRP25M72TP)	KHRP25A22T, KHRP25A33T, (KHRP25A72T+ KHRP25M72TP), (KHRP25A73T+KHRP25M73TP)	
Outd	Outdoor unit multi connection piping kit		BHFP	26P90	
Cent	Central drain pan kit		KWC26C280×2	KWC26C280×2	
Digita	al pressure gauge kit	Model	BHGP26A1	BHGP26A1	

Series		Series	VRV III H/R		
Optional accessories Models		Models	REYQ26PY1 REYQ30PY1 REYQ28PY1 REYQ32PY1		
Distributive Piping	Refnet header	Model	KHRP25M33H, KHRP25M72H, KHRP25M73H (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)		
Distrik Pip	Refnet joint	Model	KHRP25A22T, KHRP25A33T, (KHRP25A72T+KHRP25M72TP), (KHRP25A73T+KHRP25M73TP)		
Outdo	oor unit multi connection piping kit	Model	BHFP26P90		
Centi	Central drain pan kit Mod		KWC26C280 KWC26C450	KWC26C450×2	
Digita	Digital pressure gauge kit Model		BHGP26A1	BHGP26A1	
				C:3D0576110	

REYQ34 ~ 48PY1

Series			VRV III H/R		
Models Optional accessories			REYQ34PY1 REYQ36PY1 REYQ42PY1 REYQ44PY1 REYQ44PY1		
Distributive Piping	Refnet header Model		KHRP25M33H, KHRP25M72H, KHRP25M73H (Max. 8 branch) (Max. 8 branch)		
Distrik Pip	Refnet joint Model		KHRP25A22T, KHRP25A33T, (KHRP25A72T+ KHRP25M72TP), (KHRP25A73T+KHRP25M73TP)		
Outd	Outdoor unit multi connection piping kit Model		BHFP26P136		
Cent	Central drain pan kit M		KWC26C280×2 KWC26C450	KWC26C280 KWC26C450×2	
Digita	Digital pressure gauge kit Model		BHGP26A1	BHGP26A1	


	Series		VRV III H/R
Optional accessories Models		Models REYQ46PY1 REYQ48PY1	
outive	Refnet header	Model	KHRP25M33H, KHRP25M72H, KHRP25M73H (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)
Distributive Piping	Refnet joint	Model	KHRP25A22T, KHRP25A33T, (KHRP25A72T+ KHRP25M72TP), (KHRP25A73T+KHRP25M73TP)
Outde	Outdoor unit multi connection piping kit		BHFP26P136
Centi	Central drain pan kit Mode		KWC26C450×3
Digita	al pressure gauge kit	Model	BHGP26A1

C: 3D057612C

Piping Installation Point SiBE37-704

Piping Installation Point

Piping Installation Point

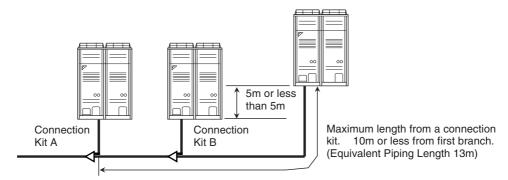


Since there is a possibility that oil may be collected on a stop machine side, install piping between outdoor units to go to level or go up to an outdoor unit, and to make a slope.


(V3036)

The projection part between multi connection piping kits


When the piping length between the multi connection kits or between multi connection kit and outdoor unit is 2m or more, prepare a vertical projection part (200mm or more as shown below) only on the gas pipe line location less than 2m from multi connection kit.

In the case of 2m or less

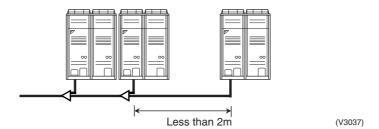


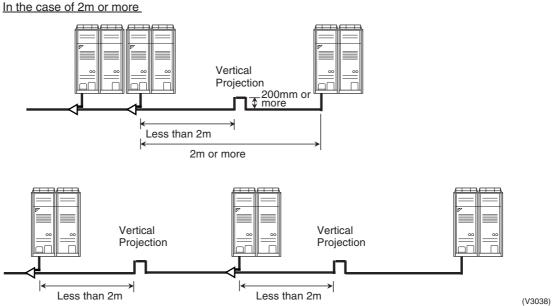

5.2 The Example of a Wrong Pattern

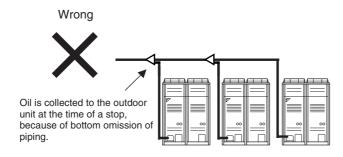

(V3039)

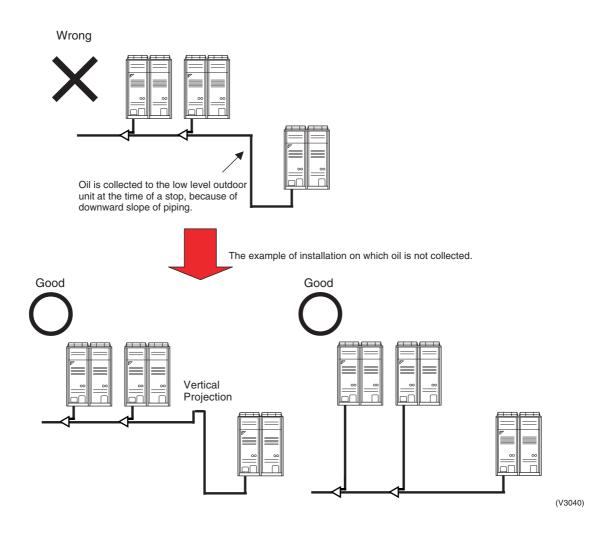


	Outdoor Unit - Multi Connection Piping Kit	Actual piping length 10m or less, equivalent length 13m or less		
Max.allowable Piping Length	Multi Connection Piping Kit - Indoor Unit	Actual piping length 165m or less, equivalent length 190m or less, the total extension 1000m or less		
i iping zongin	REFNET Joint - Indoor Unit	Actual piping length 40m or less (Refer to Page 467 Note 2 in case of up to 90m)		
	Outdoor Unit - Outdoor Unit	5m or less		
Allowable Level	Outdoor Unit - Indoor Unit	Outdoor Unit is above	50m or less ★90m or less	
Difference	Outdoor Offit - Iridoor Offit	Outdoor Unit is below	90m	
	Indoor Unit - Indoor Unit	15m or less		

Note: ★ Available on request if the outdoor unit is above.


Piping Installation Point SiBE37-704

SiBE37-704 Example of connection (R-410A Type)

6. Example of connection (R-410A Type)

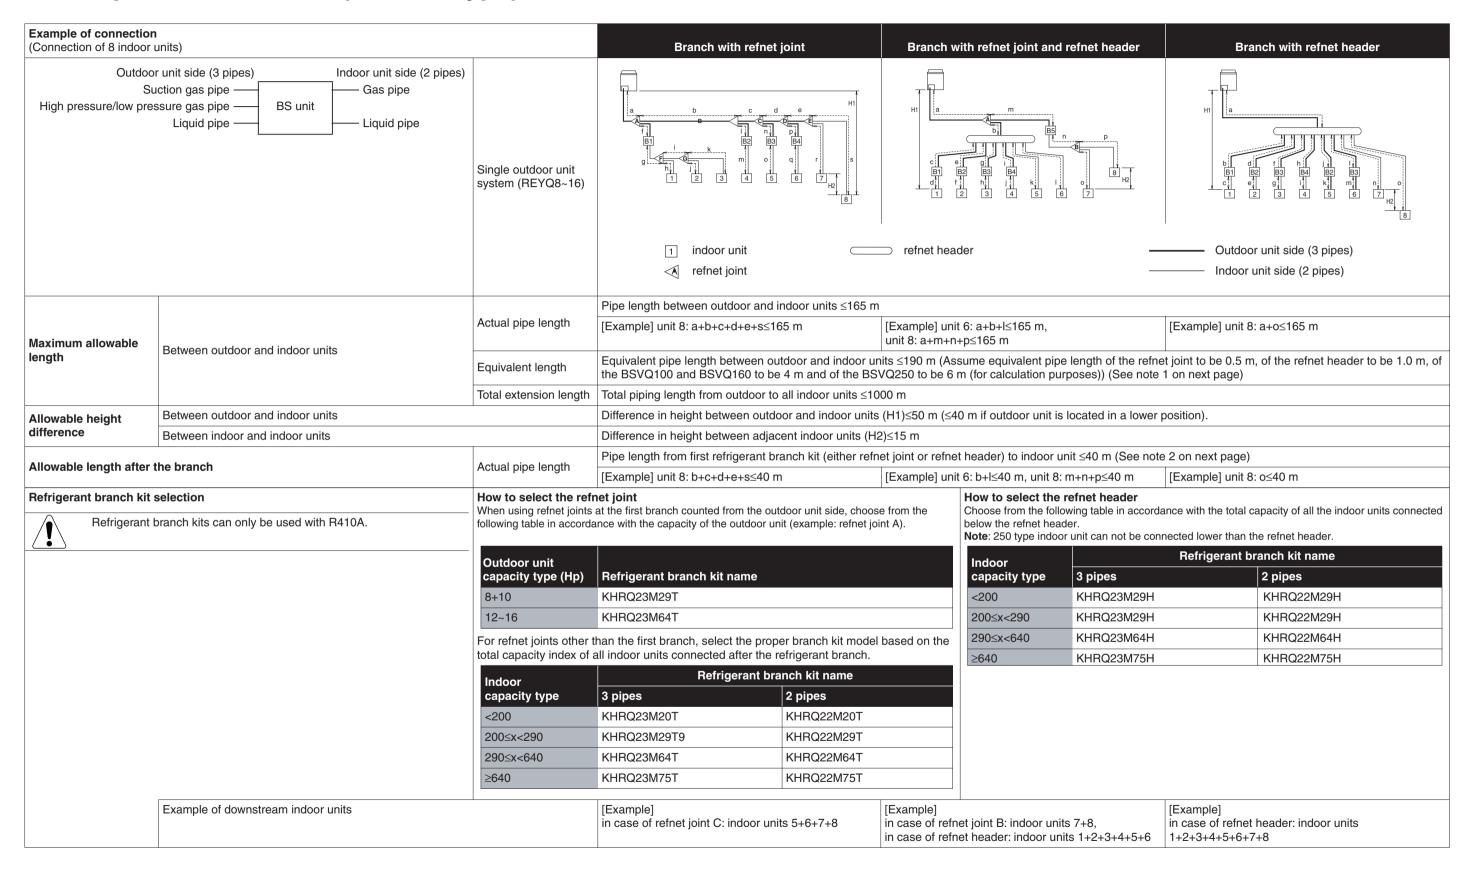


Example of connection (R-410A Type)
SiBE37-704

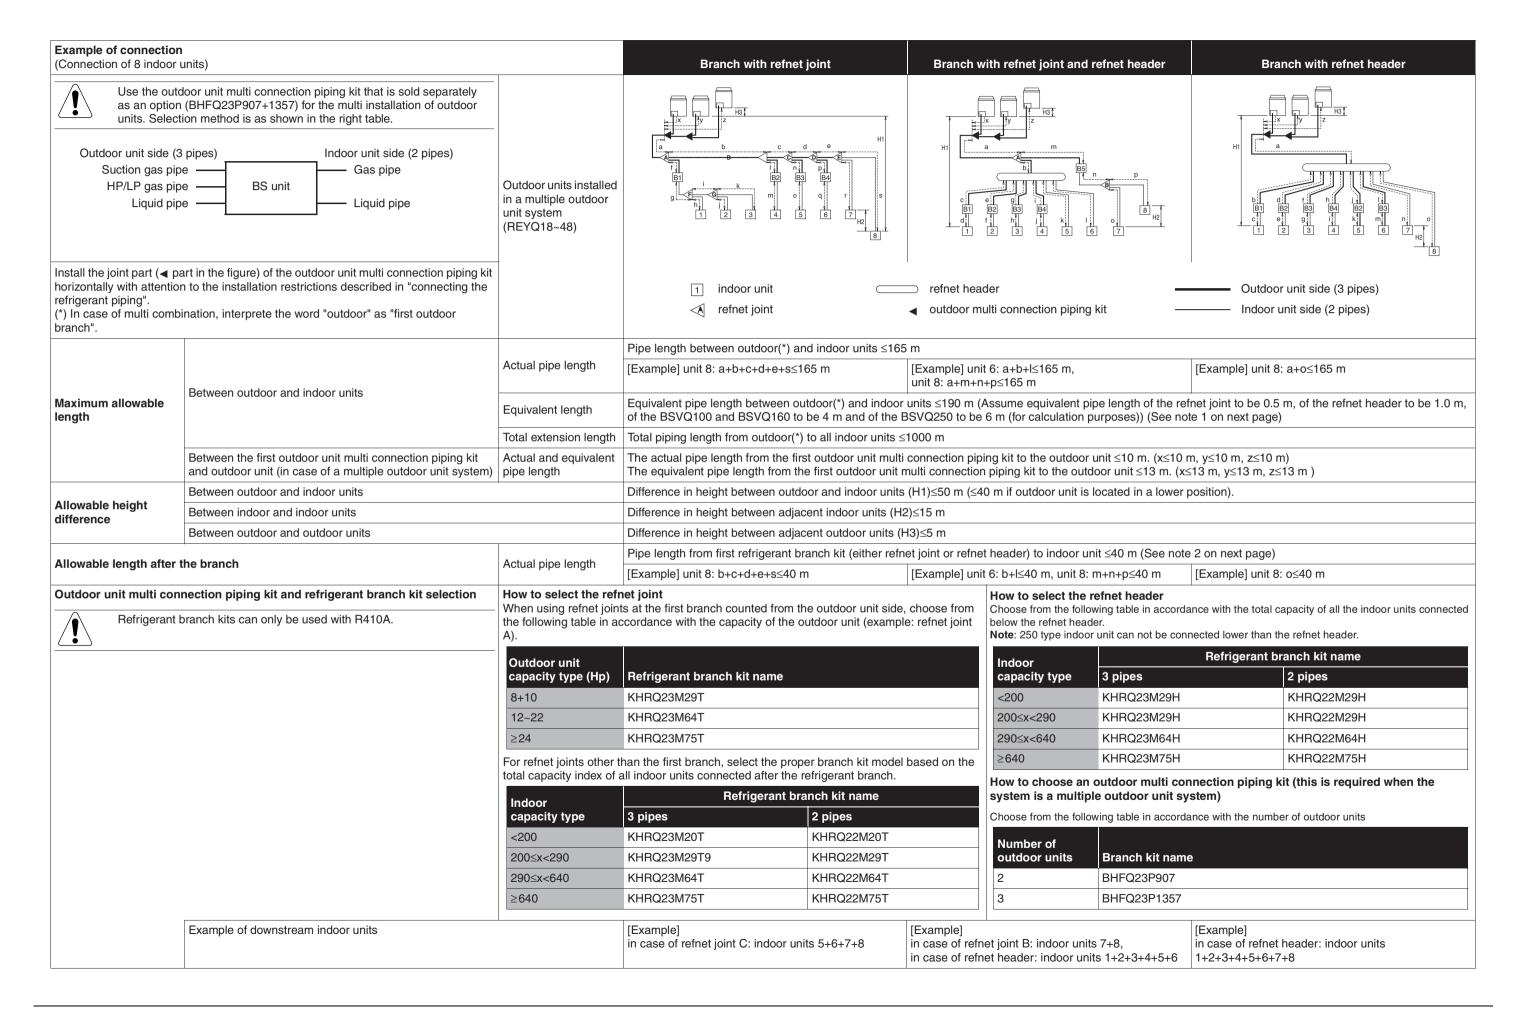

SiBE37-704 **Example of connection (R-410A Type)**

Pipe size selection

For an outdoor unit multi installation (REYQ18~48P), select the pipe size in accordance with the following figure.

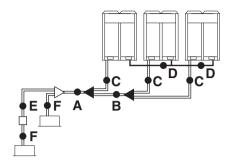

A. Piping between outdoor unit and refrigerant branch kit

B. Piping between outdoor unit multi connection piping units

Choose from the following table in accordance with the outdoor unit total capacity type, connected

Outdoor unit	Piping outer diameter size (mm)					
capacity type (Hp)	Suction gas pipe	HP/LP gas pipe	Liquid pipe			
8	19.1	15.9	9.5			
10	22.2	19.1	9.5			
12	28.6	19.1	12.7			
14+16	28.6	22.2	12.7			
18	28.6	22.2	15.9			
20+22	28.6	28.6	15.9			
24	34.9	28.6	15.9			
26~34	34.9	28.6	19.1			
36	41.3	28.6	19.1			
38~48	41.3	34.9	19.1			

C. Piping between outdoor unit multi connection piping kit and outdoor unit

Choose from the following table in accordance with the capacity type of the connected outdoor unit.

Outdoor unit	Piping outer diameter size (mm)					
capacity type (Hp)	Suction gas pipe	HP/LP gas pipe	Liquid pipe			
8+10	22.2	19.1	9.5			
12	28.6	19.1	12.7			
14+16	28.6	22.2	12.7			

E. Piping between refrigerant branch kit and BS unit

Pipe size for direct connection to indoor unit must be the same as the connection size of indoor unit. Choose from the following table in accordance with the indoor unit total capacity type, connected

Indoor unit	Piping outer diameter size (mm)					
capacity type	Suction gas pipe	HP/LP gas pipe	Liquid pipe			
<150	15.9	12.7	9.5			
150≤x<200	19.1	15.9	9.5			
200≤x<290	22.2	19.1	9.5			
290≤x<420	28.6	19.1	12.7			
420≤x<640	28.6	28.6	15.9			
640≤x<920	34.9	28.6	19.1			
≥920	41.3	28.6	19.1			

F. Piping between refrigerant branch kit or BS unit and indoor unit

Choose from the following table in accordance with the capacity type of the connected indoor unit.

Indoor unit	Piping outer diameter size (mm)					
capacity type	Suction gas pipe	Liquid pipe				
20, 25, 32, 40, 50	12.7	6.4				
63, 80, 100, 125	15.9	9.5				
200	19.1	9.5				
250	22.2	9.5				

D. Equalizer piping (outdoor units only)

Piping outer diameter size (mm) 19.1

How to calculate the additional refrigerant to be charged Additional refrigerant to be charged R (kg) R should be rounded off in units of 0.1 kg



The refrigerant charge of the system must be less than 100 kg. This means that in case the calculated refrigerant charge is equal to or more than 95 kg you must divide your multiple outdoor system into smaller independent systems, each containing less than 95 kg refrigerant charge.

For factory charge, refer to the unit name plate.


? =	$[(X1 \times \phi 22.2) \times 0.37] + [(X2 \times \phi 19.1) \times 0.26] +$	
	$[(X3 \times \phi 15.9) \times 0.18] + [(X4 \times \phi 12.7) \times 0.12] +$	
		\times 1.02 + \mathbf{A} + \mathbf{B}

 $X_{1...6}$ = Total length (m) of liquid piping size at ϕa

A = Weight according to table A

B = Weight according to table B in function of indoor unit connection ratio

Α	REYQ
1.0 kg	
1.5 kg	18~32
2.0 kg	
2.5 kg	
3.0 kg	
3.5 kg	34~48
4.0 kg	
4.5 kg	
	1.0 kg 1.5 kg 2.0 kg 2.5 kg 3.0 kg 3.5 kg 4.0 kg

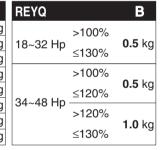

Example for refrigerant branch using refnet joint and refnet header for REYQ34. REYQ34 = REMQ8+REMQ10+REMQ16, the indoor unit connection ratio = 120% and the piping lengths are as below.

a: \phi19.1×30 m	f: φ9.5×10 m	k: φ9.5×20 m	p: φ6.4×10 m
b: \$19.1×20 m	g: φ9.5×10 m	I: φ9.5×20 m	r: 12.7×3 m
c: φ9.5×10 m	h: φ9.5×10 m	m:∮9.5×20 m	s: φ9.5×3 m
d: φ9.5×10 m	i : φ9.5×10 m	n: \$9.5×10 m	t: φ9.5×3 m
e: \$9.5×10 m	j: φ9.5×10 m	o:\\dot6.4\times10 m	u: ф15.9×1m

 $\mathbf{R} = [[50 \times 0.26] + [1 \times 0.18] + [3 \times 0.12] + [156 \times 0.059] + [20 \times 0.022]] \times 1.02 + 3.0 + 0.5$ = 27.148 \Rightarrow **R** = 27.1 kg



When the equivalent pipe length between outdoor and indoor units is 90 m or more, the size of the main liquid pipe must be increased. Never increase suction gas pipe and HP/LP gas pipe sizes. Depending on the length of the piping, the capacity may drop, but even in such a case it is possible to increase the size of the main liquid pipe.


REYQ	ф	REYQ	ф
8+10	$9.5 \rightarrow 12.7$	18~24	$15.9 \rightarrow 19.1$
12~16	$12.7 \rightarrow 15.9$	26~48	$19.1 \rightarrow 22.2$

indoor unit 8:

of b, c, d, e, f, g

b+c+d+e+f+g+p≤90 m

increase the pipe size

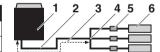

- 1 Outdoor unit
- 2 Main pipes
- 3 Increase only liquid pipe size
- 4 First refrigerant branch kit
- 5 BS unit
- 6 Indoor unit

Allowable length after the first refrigerant branch kit to indoor units is 40 m or less, however it can be extended up to 90 m if all the following conditions are fulfilled.



Required conditions **Example drawings**

It is necessary to increase the pipe size of the liquid and suction gas pipe if the pipe length between the first and the final branch kit is over 40 m (reducers must be procured on site). Increasing the HP/LP gas pipe size is not allowed.

- If the increased liquid pipe size is larger than the pipe size of the main liquid pipe, then the pipe size of the main liquid pipe needs to be increased as well.
- If the increased suction gas pipe size is larger than the pipe size of the main suction gas pipe, then the allowable length after the first refrigerant branch kit may not be increased to 90 m. Size-up of the main suction gas pipe may affect a good oil return to the outdoor unit due to influence of the HP/LP gas pipe.

For calculation of total extension length, the actual length of above pipes must be doubled (except length of main pipes and of pipes which do not have an increased pipe size). Indoor unit to the nearest branch kit ≤40 m

h, i, j..... p≤40 m The most remote indoor unit 8 The nearest indoor unit 1 $(a+b+c+d+e+f+g+p)-(a+h) \le 40 \text{ m}$

a+b*2+c*2+d*2+e*2+f*2+q*2

 $+h+i+j+k+l+m+n+p \le 1000 \text{ m}$

Increase the pipe size as follows $\phi 9.5 \rightarrow \phi 12.7$ $\phi 12.7 \rightarrow \phi 15.9$

 $\phi 15.9 \rightarrow \phi 19.1$

 ϕ 19.1 \rightarrow ϕ 22.2

Outdoor unit

- 2 Refnet joints (a~g)
- 3 Indoor units (1~8)

The difference between the distance of the outdoor unit to the farthest indoor unit and the distance of the outdoor unit to the nearest indoor unit ≤40 m

Example of connection (R-410A Type)

7. Thermistor Resistance / Temperature Characteristics

Indoor unit For air suction R1T For liquid pipe R2T

For gas pipe

Outdoor unit for fin thermistor R1T Outdoor unit For outdoor air R1T

For coil R2T
For suction pipe R4T
For Receiver gas pipe R5T
For Receiver outlet liquid pipe R6T

4.0

R3T

 $(k\Omega)$

T°C	0.0
-10	-
-8	-
-6	88.0
-4	79.1
-2	71.1
0	64.1
2	57.8
4	52.3
6	47.3
8	42.9
10	38.9
12	35.3
14	32.1
16	29.2
18	26.6
20	24.3
22	24.3 22.2
24	20.3
26 28	18.5
	17.0
30	15.6
32	14.2
34	13.1
36	12.0
38	11.1
40	10.3
42	9.5
44	8.8
46	8.2
48	7.6
50	7.0
52	6.7
54	6.0
56	5.5
58	5.2
60	4.79
62	4.46
64	4.15
66	3.87
68	3.61
70	3.37
72	3.15
74	2.94
76	2.75
78	2.51
80	2.41
82	2.26
84	2.12
86	1.99
88	1.87
90	1.76
92	1.65
94	1.55
00	4.40

96

1.46


19.00	T°C	0.0	0.5		T°C	0.0	0.5
-18 175.97 170.94 32 14.79 14.48 -17 166.07 161.36 33 14.18 13.88 -16 156.80 152.38 34 13.59 13.31 -15 148.10 143.96 35 13.04 12.77 -14 139.94 136.05 36 12.51 12.25 -13 132.28 128.63 37 12.01 11.76 -12 125.09 121.66 38 11.52 11.29 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -6 90.17 87.79 44 9.06 8.88 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 <t< td=""><td>-20</td><td>197.81</td><td>192.08</td><td>İ</td><td>30</td><td>16.10</td><td>15.76</td></t<>	-20	197.81	192.08	İ	30	16.10	15.76
-17	-19	186.53	181.16		31	15.43	15.10
-16	-18	175.97	170.94		32	14.79	14.48
-15 148.10 143.96 35 13.04 12.77 -14 139.94 136.05 36 12.51 12.25 -13 132.28 128.63 37 12.01 11.76 -12 125.09 121.66 38 11.52 11.29 -11 118.34 115.12 39 11.06 10.84 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -6 90.17 71.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 <td>-17</td> <td>166.07</td> <td>161.36</td> <td></td> <td>33</td> <td>14.18</td> <td>13.88</td>	-17	166.07	161.36		33	14.18	13.88
-14 139.94 136.05 36 12.51 12.25 -13 132.28 128.63 37 12.01 11.76 -12 125.09 121.66 38 11.52 11.29 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 -1 62.54 60.96	-16	156.80	152.38		34	13.59	13.31
-13 132.28 128.63 37 12.01 11.76 -12 125.09 121.66 38 11.52 11.29 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52	-15	148.10	143.96		35	13.04	12.77
-12 125.09 121.66 38 11.52 11.29 -11 118.34 115.12 39 11.06 10.84 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 9.81 9.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 3 56.49 55.08	-14	139.94	136.05		36	12.51	12.25
-11 118.34 115.12 39 11.06 10.84 -10 111.99 108.96 40 10.63 10.41 -9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53	-13	132.28	128.63		37	12.01	11.76
-10 111.99 108.96 -9 106.03 103.18 -8 100.41 97.73 -7 95.14 92.61 -6 90.17 87.79 -5 85.49 83.25 -4 81.08 78.97 -3 76.93 74.94 -1 69.32 67.56 0 65.84 64.17 1 62.54 60.96 2 59.43 57.94 3 56.49 55.08 4 65.84 64.17 1 62.54 60.96 2 59.43 57.94 3 56.49 55.08 4 53.71 52.38 5 51.09 49.83 5 51.09 49.83 5 51.09 49.83 5 51.09 49.83 5 51.09 49.83 5 61.94 47.42	-12	125.09	121.66		38	11.52	11.29
-9 106.03 103.18 41 10.21 10.00 -8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54	-11	118.34	115.12		39	11.06	10.84
-8 100.41 97.73 42 9.81 9.61 -7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41<	-10	111.99	108.96		40	10.63	10.41
-7 95.14 92.61 43 9.42 9.24 -6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 <td>-9</td> <td>106.03</td> <td>103.18</td> <td></td> <td>41</td> <td>10.21</td> <td>10.00</td>	-9	106.03	103.18		41	10.21	10.00
-6 90.17 87.79 44 9.06 8.88 -5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 <td>-8</td> <td>100.41</td> <td>97.73</td> <td></td> <td>42</td> <td>9.81</td> <td>9.61</td>	-8	100.41	97.73		42	9.81	9.61
-5 85.49 83.25 45 8.71 8.54 -4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74	-7	95.14	92.61		43	9.42	9.24
-4 81.08 78.97 46 8.37 8.21 -3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14	-6	90.17	87.79		44	9.06	8.88
-3 76.93 74.94 47 8.05 7.90 -2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96	-5	85.49	83.25		45	8.71	8.54
-2 73.01 71.14 48 7.75 7.60 -1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79	-4	81.08	78.97		46	8.37	8.21
-1 69.32 67.56 49 7.46 7.31 0 65.84 64.17 50 7.18 7.04 1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62	-3	76.93	74.94		47	8.05	7.90
0 65.84 64.17 1 62.54 60.96 2 59.43 57.94 3 56.49 55.08 4 53.71 52.38 5 51.09 49.83 6 48.61 47.42 7 46.26 45.14 8 44.05 42.98 9 41.95 40.94 10 39.96 39.01 11 38.08 37.18 12 36.30 35.45 13 34.62 33.81 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 16 30.06 29.37 16 30.06 29.37 16 30.06 29.37 18 27.41 26.78 19 26.18 25.59 <	-2	73.01	71.14		48	7.75	7.60
1 62.54 60.96 51 6.91 6.78 2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 <td>-1</td> <td>69.32</td> <td>67.56</td> <td></td> <td>49</td> <td>7.46</td> <td>7.31</td>	-1	69.32	67.56		49	7.46	7.31
2 59.43 57.94 52 6.65 6.53 3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 <td>0</td> <td>65.84</td> <td>64.17</td> <td></td> <td>50</td> <td>7.18</td> <td>7.04</td>	0	65.84	64.17		50	7.18	7.04
3 56.49 55.08 53 6.41 6.53 4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 <td>1</td> <td>62.54</td> <td>60.96</td> <td></td> <td>51</td> <td>6.91</td> <td>6.78</td>	1	62.54	60.96		51	6.91	6.78
4 53.71 52.38 54 6.65 6.53 5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68<	2	59.43	57.94		52	6.65	6.53
5 51.09 49.83 55 6.41 6.53 6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75<	3	56.49	55.08		53	6.41	6.53
6 48.61 47.42 56 6.18 6.06 7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62		53.71	52.38		54	6.65	6.53
7 46.26 45.14 57 5.95 5.84 8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.5		51.09	49.83		55	6.41	6.53
8 44.05 42.98 58 5.74 5.43 9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3	6	48.61	47.42		56	6.18	6.06
9 41.95 40.94 59 5.14 5.05 10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3		46.26	45.14		57	5.95	5.84
10 39.96 39.01 60 4.96 4.87 11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73	8	44.05	42.98		58	5.74	5.43
11 38.08 37.18 61 4.79 4.70 12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74							
12 36.30 35.45 62 4.62 4.54 13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75							
13 34.62 33.81 63 4.46 4.38 14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76							
14 33.02 32.25 64 4.30 4.23 15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77							
15 31.50 30.77 65 4.16 4.08 16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78							
16 30.06 29.37 66 4.01 3.94 17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79							
17 28.70 28.05 67 3.88 3.81 18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
18 27.41 26.78 68 3.75 3.68 19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
19 26.18 25.59 69 3.62 3.56 20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
20 25.01 24.45 70 3.50 3.44 21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
21 23.91 23.37 71 3.38 3.32 22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
22 22.85 22.35 72 3.27 3.21 23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
23 21.85 21.37 73 3.16 3.11 24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
24 20.90 20.45 74 3.06 3.01 25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
25 20.00 19.56 75 2.96 2.91 26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
26 19.14 18.73 76 2.86 2.82 27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
27 18.32 17.93 77 2.77 2.72 28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
28 17.54 17.17 78 2.68 2.64 29 16.80 16.45 79 2.60 2.55							
29 16.80 16.45 79 2.60 2.55							
30 16.10 15.76 80 2.51 2.47							
	30	16.10	15./6	j	80	2.51	2.47

Outdoor Unit Thermistors for Discharge Pipe (R3T, R31~33T)

						_			$(k\Omega))$
T°C	0.0	0.5	T°C	0.0	0.5		T°C	0.0	0.5
0	640.44	624.65	50	72.32	70.96		100	13.35	13.15
1	609.31	594.43	51	69.64	68.34		101	12.95	12.76
2	579.96	565.78	52	67.06	65.82		102	12.57	12.38
3	552.00	538.63	53	64.60	63.41		103	12.20	12.01
4	525.63	512.97	54	62.24	61.09		104	11.84	11.66
5	500.66	488.67	55	59.97	58.87		105	11.49	11.32
6	477.01	465.65	56	57.80	56.75		106	11.15	10.99
7	454.60	443.84	57	55.72	54.70		107	10.83	10.67
8	433.37	423.17	58	53.72	52.84		108	10.52	10.36
9	413.24	403.57	59	51.98	50.96		109	10.21	10.06
10	394.16	384.98	60	49.96	49.06	İ	110	9.92	9.78
11	376.05	367.35	61	48.19	47.33		111	9.64	9.50
12	358.88	350.62	62	46.49	45.67		112	9.36	9.23
13	342.58	334.74	63	44.86	44.07		113	9.10	8.97
14	327.10	319.66	64	43.30	42.54		114	8.84	8.71
15	312.41	305.33	65	41.79	41.06		115	8.59	8.47
16	298.45	291.73	66	40.35	39.65		116	8.35	8.23
17	285.18	278.80	67	38.96	38.29		117	8.12	8.01
18	272.58	266.51	68	37.63	36.98		118	7.89	7.78
19	260.60	254.72	69	36.34	35.72		119	7.68	7.57
20	249.00	243.61	70	35.11	34.51		120	7.47	7.36
21	238.36	233.14	71	33.92	33.35		121	7.26	7.16
22	228.05	223.08	72	32.78	32.23		122	7.06	6.97
23	218.24	213.51	73	31.69	31.15		123	6.87	6.78
24	208.90	204.39	73 74	30.63	30.12		124	6.69	6.59
25	200.00	195.71	75 75	29.61	29.12		125	6.51	6.42
26	191.53	187.44	76	28.64	28.16		126	6.33	6.25
27	183.46	179.57	77	27.69	27.24		127	6.16	6.08
28	175.77	179.57	78	26.79	26.35		128	6.00	5.92
29	168.44	164.90	78 79	25.91	25.49		129	5.84	5.76
30	161.45	158.08	80	25.91	24.66		130	5.69	5.61
31	154.79	151.57	81	24.26	23.87		131	5.54	5.46
32	148.43	145.37	82		23.07		132	5.34	5.46
				23.48					
33	142.37	139.44	83	22.73	22.36		133	5.25	5.18
34	136.59	133.79	84	22.01	21.65		134	5.12	5.05
35 36	131.06	128.39	85 86	21.31	20.97		135	4.98	4.92
36	125.79	123.24	86 97	20.63	20.31		136	4.86	4.79
37	120.76	118.32	87	19.98	19.67		137	4.73	4.67
38	115.95	113.62	88	19.36	19.05		138	4.61	4.55
39	111.35	109.13	89	18.75	18.46		139	4.49	4.44
40	106.96	104.84	90	18.17	17.89	l	140	4.38	4.32
41	102.76	100.73	91	17.61	17.34		141	4.27	4.22
42	98.75	96.81	92	17.07	16.80		142	4.16	4.11
43	94.92	93.06	93	16.54	16.29		143	4.06	4.01
44	91.25	89.47	94	16.04	15.79		144	3.96	3.91
45 46	87.74	86.04	95 06	15.55	15.31		145	3.86	3.81
46	84.38	82.75	96	15.08	14.85		146	3.76	3.72
47	81.16	79.61	97	14.62	14.40		147	3.67	3.62
48	78.09	76.60	98	14.18	13.97		148	3.58	3.54
49	75.14	73.71	99	13.76	13.55		149	3.49	3.45
50	72.32	70.96	100	13.35	13.15	J	150	3.41	3.37

SiBE37-704 Pressure Sensor

8. Pressure Sensor

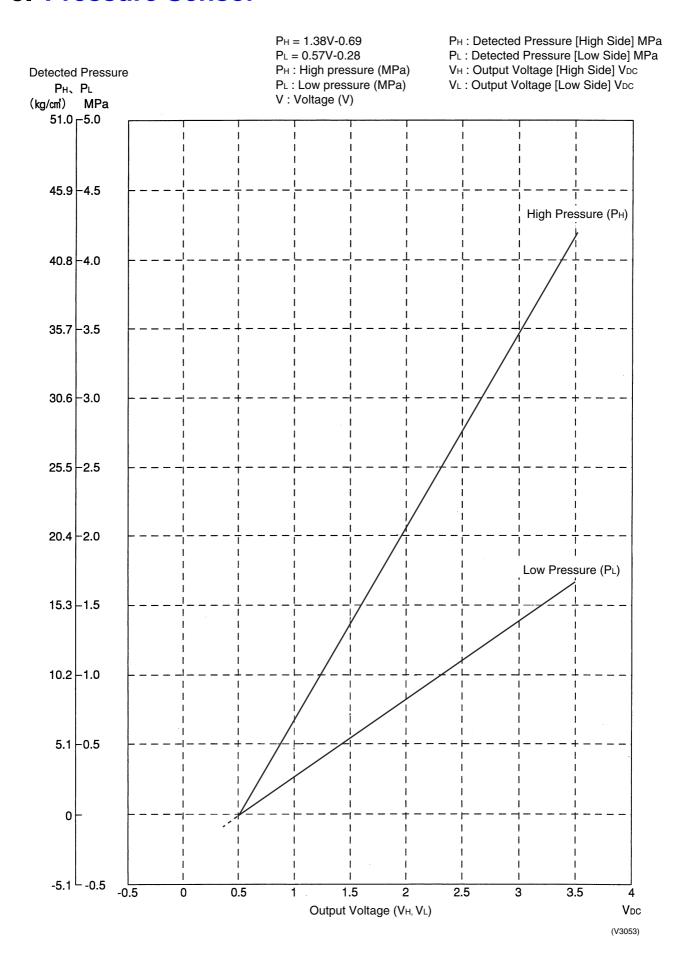

9. Method of Checking the Inverter's Power Transistors and Diode Modules

9.1 Method of Checking the Inverter's Power Transistors and Diode Modules

Checking failures in power semiconductors mounted on inverter PC board Check the power semiconductors mounted on the inverter PC board by the use of a multiple tester.

< tems to be prepared>

Multiple tester: Prepare the analog type of multiple tester.
 For the digital type of multiple tester, those with diode check function are available for the checking.


<Test points>

 Turn OFF the power supply. Then, after a lapse of 10 minutes or more, make measurement of resistance.


<Preparation>

• To make measurement, disconnect all connectors and terminals.

Inverter PC board

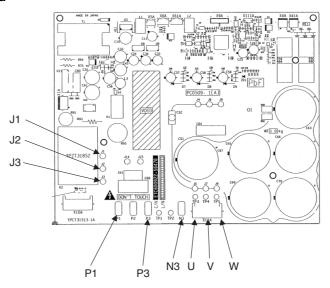

Electronic circuit

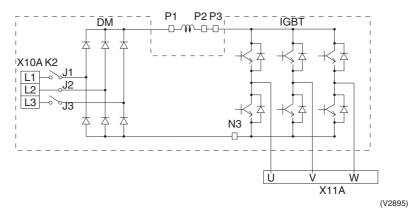

- According to the checking aforementioned, it is probed that the malfunction results from the faulty inverter. The following section describes supposed causes of the faulty inverter.
- Faulty compressor (ground leakage)
- Faulty fan motor (ground leakage)
- Entry of conductive foreign particles
- Abnormal voltage (e.g. overvoltage, surge (thunder), or unbalanced voltage)

458 Appendix

In order to replace the faulty inverter, be sure to check for the points aforementioned.

1. Power module checking

When using the analog type of multiple tester, make measurement in resistance measurement mode in the $x1k\Omega$ range.

No.		uring int	Criterion	Remark	
	+	-			
1	P3	U			
2	P3	V	2 to 15kΩ		
3	P3	W			
4	U	P3			
5	V	P3	Not less than	It may take time to determine the	
6	W	P3			
7	N3	U	15kΩ	resistance due	
8	N3	V	(including)	to capacitor charge or else.	
9	N3	W			
10	U	N3			
11	V	N3	2 to 15kΩ		
12	W	N3			

When using the digital type of multiple tester, make measurement in diode check mode ($\rightarrow \vdash$).

No.	Measuring point		Criterion	Remark	
	+	-			
1	P3	U	Not less	It may take time to	
2	P3	V	than 1.2V	determine the voltage due to capacitor	
3	P3	W	(including)	charge or else.	
4	U	P3			
5	V	P3	,		
6	W	P3	0.3 to 0.7V		
7	N3	U	0.3 10 0.7 V		
8	N3	V	,		
9	N3	W	,		
10	U	N3	Not less	It may take time to	
11	٧	N3	than 1.2V	determine the voltage due to capacitor	
12	W	N3	(including)	charge or else.	

2. Diode module checking

When using the analog type of multiple tester, make measurement in resistance measurement mode in the $x1k\Omega$ range.

No.		uring int			
	+	-			
1	P1	J1			
2	P1	J2	2 to 15kΩ		
3	P1	J3			
4	J1	P1			
5	J2	P1	Not less than	It may take time to	
6	J3	P1		determine the	
7	N3	J1	15kΩ (including)	resistance due	
8	N3	J2	(including)	to capacitor charge or else.	
9	N3	J3			
10	J1	N3			
11	J2	N3	2 to 15kΩ		
12	J3	N3			

When using the digital type of multiple tester, make measurement in diode check mode ($\rightarrow \vdash$).

No.	Measuring point		Criterion	Remark
	+	-		
1	P1	J1	Not less	It may take time to
2	P1	J2	than 1.2V	determine the voltage due to capacitor
3	P1	J3	(including)	charge or else.
4	J1	P1		
5	J2	P1	,	
6	J3	P1	0.3 to 0.7V	
7	N3	J1	0.3 10 0.7 V	
8	N3	J2	,	
9	N3	J3	,	
10	J1	N3	Not less	It may take time to
11	J2	N3	than 1.2V	determine the voltage due to capacitor
12	J3	N3	(including)	charge or else.

Appendix 459

460 Appendix

Part 8 Precautions for New Refrigerant (R-410A)

1.	Prec	cautions for New Refrigerant (R-410A)	462
		Outline	
	1.2	Refrigerant Cylinders	464
		Service Tools	

1. Precautions for New Refrigerant (R-410A)

1.1 Outline

1.1.1 About Refrigerant R-410A


- Characteristics of new refrigerant, R-410A
- 1. Performance
 - Almost the same performance as R-22 and R-407C
- 2. Pressure
 - Working pressure is approx. 1.4 times more than R-22 and R-407C.
- 3. Refrigerant composition

Few problems in composition control, since it is a Quasi-azeotropic mixture refrigerant.

	HFC units (Units us	ing new refrigerants)	HCFC units
Refrigerant name	R-407C	R-410A	R-22
Composing substances	Non-azeotropic mixture of HFC32, HFC125 and HFC134a (*1)	Quasi-azeotropic mixture of HFC32 and JFC125 (*1)	Single-component refrigerant
Design pressure	3.2 MPa (gauge pressure) = 32.6 kgf/cm ²	4.0 MPa (gauge pressure) = 40.8 kgf/cm ²	2.75MPa (gauge pressure) = 28.0 kgf/cm ²
Refrigerant oil	Synthetic	oil (Ether)	Mineral oil (Suniso)
Ozone destruction factor (ODP)	0	0	0.05
Combustibility	None	None	None
Toxicity	None	None	None

- ★1. Non-azeotropic mixture refrigerant: mixture of two or more refrigerants having different boiling points.
- ★2. Quasi-azeotropic mixture refrigerant: mixture of two or more refrigerants having similar boiling points.
- ★3. The design pressure is different at each product. Please refer to the installation manual for each product.

(Reference) 1 MPa = 10.19716 kgf / cm²

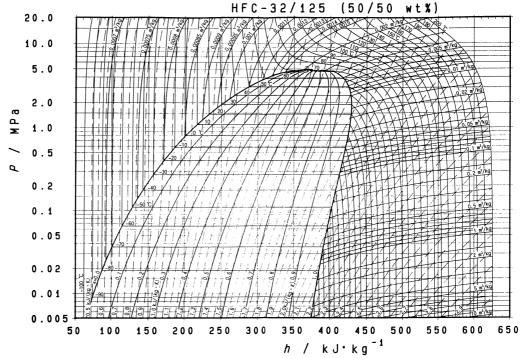


Pressure-Enthalpy curves of HFC-32/125 (50/50wt%)

■ Thermodynamic characteristic of R-410A

DAIREP ver2.0 Specific entropy Temperature Steam pressure Specific heat at constant Specific enthalpy (kJ/KgK) (°C) (kPa) (kg/m³) pressure (kJ/kgK) (kJ/kg) Liauid Vapor Liquid Vapor Liquid Liauid -70 36.13 36.11 1410.7 1.582 1.372 0.695 100.8 390.6 0.649 2,074 40.83 -681.774 1.374 0.700 103.6 391.8 0.663 2.066 40.80 1404.7 -6646.02 45.98 1398.6 1.984 1.375 0.705 106.3 393.0 0.676 2.058 -64 51.73 51.68 1392.5 2.213 1.377 0.710 109.1 394.1 0.689 2.051 -62 58.00 57.94 1386.4 2.463 0.715 111.9 395.3 0.702 2.044 1.378 0.720 0.715 -6064.87 64.80 1380.2 2.734 1.379 114.6 396.4 2.037 -58 72.38 72.29 1374.0 3.030 1.380 0.726 117.4 397.6 0.728 2.030 3.350 1.382 0.732 120.1 398.7 0.741 2.023 -5680.57 80.46 1367.8 3.696 399.8 2.017 -54 89.49 89.36 1361.6 1.384 0.737122.9 0.754 99.18 400.9 -5299.03 1355.3 4.071 1.386 0.744125.70.7662.010 -51.58 101.32 101.17 1354.0 4.153 1.386 0.745 126.3 401.1 0.769 2.009 -50 109.69 109.51 1349.0 1.388 0.750 128.5 402.0 0.779 2.004 4.474 1.998 -48 121.07 120.85 1342.7 4.909 1.391 0.756 131.2 403.1 0.791 -46133.36 133.11 1336.3 5.377 1.394 0.763 134.0 404.1 0.803 1.992 -44 146.61 1330.0 5.880 1.397 0.770 136.8 405.2 0.816 1.987 146.32 -42 160.89 1323.5 6.419 1.401 139.6 406.2 0.828 1.981 160.55 0.777 -40176.24 175.85 1317.0 6.996 0.785 142.4 407.3 0.840 1.976 1.405 1.970 -387.614 1.409 408.3 0.852 192.71 192.27 1310.5 0.792145.3 -361304.0 8.275 409.3 0.864 1.965 210.37 209.86 1.414 0.800 148.1 -34229,26 228.69 1297.3 8.980 1.419 0.809 150.9 410.2 0.875 1.960 -32249.46 248.81 1290.6 9.732 1.424 0.817 153.8 411.2 0.887 1.955 -30271.01 270.28 1283.9 10.53 1.430 0.826 156.6 412.1 0.899 1.950 -28 293.99 293.16 1277.1 11.39 1.436 0.835 159.5 413.1 0.911 1.946 -26 318.44 317.52 1270.2 12.29 1.442 0.844 162.4 414.0 0.922 1.941 -24344.44 343.41 1263.3 13.26 1.448 0.854 165.3 414.9 0.934 1.936 -22 372.05 370.90 1256.3 14.28 1.455 0.864 168.2 415.7 0.945 1.932 -20 401.34 400.06 1249.2 15.37 0.875 171.1 0.957 1.927 1.461 416.6 -18 430.95 1242.0 16.52 0.968 1.923 432.36 0.886 417.4 1.468 174.1 -16465.20 463.64 1234.8 177.0 418.2 0.980 17.74 1.476 0.8971.919 499.91 498.20 1227.519.04 0.909 180.0 419.0 0.991 -14 1.483 1 914 -12536.58 534.69 1220.0 20.41 1.491 0.921 182.9 419.8 1.003 1.910 -10575.26 573.20 1212.5 21.86 1.499 0.933 185.9 420.5 1.014 1.906 -8 616.03 613.78 1204.9 23.39 1.507 0.947 189.0 421.2 1.025 1.902 -6 658.97 656.52 1197.2 25.01 1.516 0.960 192.0 421.9 1.036 1.898 -4 704.15 1189.4 701.49 26.72 1.524 0.975 195.0 422.6 1.048 1.894 -2 751.64 748.76 1181.4 28.53 1.533 0.990 198.1 423.2 1.059 1.890 0 801.52 798.41 1173.4 30.44 1.543 1.005 201.2 423.8 1.070 1.886 2 853.87 850.52 32.46 1.552 1.022 204.3 1.081 1.882 1165.3 424.4 908.77 1157.0 1.563 207.4 4 905.16 34.59 1.039 424.9 1.092 1.878 6 966.29 1148.6 36.83 1.573 210.5 425.5 1.103 962.42 1.057 1.874 8 39.21 1026.5 1022.4 1140.0 1.584 1.076 213.7 425.9 1.114 1.870 1089.5 10 1085.1 1131.3 41.71 1.596 1.096 216.8 426.4 1.125 1.866 12 1155.4 1150.7 1122.5 44.35 1.608 1.117 220.0 426.8 1.136 1.862 14 1224.3 1219.2 1113.5 47.14 1.621 223.2 427.2 1.859 1.139 1.147 1296.2 16 1290.8 1104.4 50.09 1.635 1.163 226.5 427.5 1.158 1.855 18 1371.2 1365.5 1095.1 53.20 1.650 1.188 229.7 427.8 1.169 1.851 20 1449.4 1085.6 233.0 1443.4 56.48 1.666 1.215 428.1 1.180 1.847 22 1530.9 1075.9 59.96 1524.6 1.683 236.4 428.3 1.843 1.243 1.191 24 1615.8 1609.2 1066.0 63.63 1.701 1.273 239.7 428.4 1.839 1.202 26 1697.2 1055.9 67.51 1704.2 1.721 1.306 243.1 428 6 1.214 1.834 28 1796.21788.9 1045.5 71.62 1.743 1.341 246.5 428.6 1.225 1.830 30 1891.9 1884.2 1034.9 75.97 1.767 1.379 249.9 428.6 1.236 1.826 32 1991.3 1983.2 1024.1 80.58 1.793 1.420 253.4 428.6 1.247 1.822 34 2094.5 2086.2 1012.9 85.48 1.822 1.465 256.9 428.4 1.258 1.817 36 2201.7 2193.1 1001.4 90.68 1.855 1.514 260.5 428.3 1.269 1.813 38 2313.0 2304.0 989.5 96.22 1.891 264.1 1.569 428.0 1.281 1.808 40 2428.4 2419.2 977.3 102.1 1.932 1.629 267.8 427.7 1.292 1.803 108.4 1.979 42 2548.1 2538.6 964.6 271.5 427.2 1.303 1.798 1.696 951.4 44 2672.2 2662.4 115.2 2.033 1.771 275.3 426.7 1.315 1.793 46 2800.7 2790.7 937.7 122.4 2.095 1.857 279.2 426.1 1.327 1.788 48 2933.7 2923.6 923.3 130.2 2.168 425.4 1.339 1.955 283.2 1.782 50 3071.5 3061.2 908.2 138.6 2.256 2.069 287.3 424.5 1.351 1.776 52 3214.0 892.2 1.770 3203.6 147.7 2.362 2,203 291.5 423.5 1.363 54 3361.4 3351.0 875.1 157.6 2.493 1.764 2.363 295.8 422.4 1.376 56 3513.8 3503.5 856.8 168.4 2.661 2.557 300.3 421.0 1.389 1.757 58 3671.3 3661.2 836.9 180.4 2.883 2.799 305.0 419.4 1.403 1.749 60 3834.1 3824.2 814.9 193.7 3.191 3.106 310.0 417.6 1.741 1.417 62 4002.1 3992.7 790.1 208.6 3.650 3.511 315.3 415.5 1.433 1.732 64 4175.7 4166.8 761.0 225.6 4.415 4.064 321.2 413.0 1.450 1.722

1.2 Refrigerant Cylinders

- Cylinder specifications
- The cylinder is painted refrigerant color (pink).
- The cylinder valve is equipped with a siphon tube.

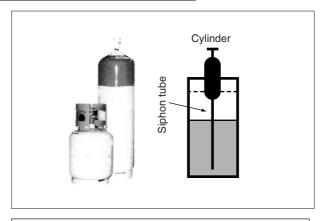

Refrigerant can be charged in liquid state with cylinder in upright position.

Caution: Do not lay cylinder on its side during charging, since it cause refrigerant in gas state to enter the system.

Handling of cylinders

(1) Laws and regulations

R-410A is liquefied gas, and the High-Pressure Gas Safety Law must be observed in handling them. Before using, refer to the High-Pressure Gas Safety Law.

The Law stipulates standards and regulations that must be followed to prevent accidents with high-pressure gases. Be sure to follow the regulations.

(2) Handing of vessels

Since R-410A is high-pressure gas, it is contained in high-pressure vessels.

Although those vessels are durable and strong, careless handling can cause damage that can lead to unexpected accidents. Do not drop vessels, let them fall, apply impact or roll them on the ground.

(3) Storage

Although R-410A is not flammable, it must be stored in a well-ventilated, cool, and dark place in the same way as any other high-pressure gases.

It should also be noted that high-pressure vessels are equipped with safety devices that releases gas when the ambient temperature reaches more than a certain level (fusible plug melts) and when the pressure exceeds a certain level (spring-type safety valve operates).

1.3 Service Tools

R-410A is used under higher working pressure, compared to previous refrigerants (R-22,R-407C). Furthermore, the refrigerating machine oil has been changed from Suniso oil to Ether oil, and if oil mixing is occurred, sludge results in the refrigerants and causes other problems. Therefore, gauge manifolds and charge hoses that are used with a previous refrigerant (R-22,R-407C) can not be used for products that use new refrigerants. Be sure to use dedicated tools and devices.

■ Tool compatibility

	(Compatibilit	у	
Tool	HFC		HCFC	Reasons for change
	R-410A	R-407C	R-22	
Gauge manifold Charge hose		×		 Do not use the same tools for R-22 and R-410A. Thread specification differs for R-410A and R-407C.
Charging cylinder	>	<	0	Weighting instrument used for HFCs.
Gas detector)	×	• The same tool can be used for HFCs.
Vacuum pump (pump with reverse flow preventive function)	0			To use existing pump for HFCs, vacuum pump adaptor must be installed.
Weighting instrument		0		
Charge mouthpiece	×			 Seal material is different between R-22 and HFCs. Thread specification is different between R-410A and others.
Flaring tool (Clutch type)		0		For R-410A, flare gauge is necessary.
Torque wrench	0			Torque-up for 1/2 and 5/8
Pipe cutter		0		
Pipe expander		0		
Pipe bender		0		
Pipe assembling oil	×			Due to refrigerating machine oil change. (No Suniso oil can be used.)
Refrigerant recovery device	Check your recovery device		y device.	
Refrigerant piping	See	the chart be	elow.	• Only φ19.1 is changed to 1/2H material while the previous material is "O".

As for the charge mouthpiece and packing, 1/2UNF20 is necessary for mouthpiece size of charge hose.

■ Copper tube material and thickness

	,	Ve-up	V	e-upII
	F	R-407C	F	R-410A
Pipe size	Material	Thickness	Material	Thickness
	Ivialeriai	t (mm)	Material	t (mm)
φ6.4	0	0.8	0	0.8
φ9.5	0	0.8	0	0.8
φ12.7	0	0.8	0	0.8
φ15.9	0	1.0	0	1.0
φ19.1	0	1.0	1/2H	1.0
ф22.2	1/2H	1.0	1/2H	1.0
φ25.4	1/2H	1.0	1/2H	1.0
φ28.6	1/2H	1.0	1/2H	1.0
φ31.8	1/2H	1.2	1/2H	1.1
φ38.1	1/2H	1.4	1/2H	1.4
φ44.5	1/2H	1.6	1/2H	1.6

^{*} O: Soft (Annealed) H: Hard (Drawn)

1. Flaring tool



- Specifications
- Dimension A

Unit:mm

			•
Nominal size	Tube O.D.	A	+0 -0.4
Norminal Size	Do	Class-2 (R-410A)	Class-1 (Conventional)
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	24.0	23.3

- Differences
- Change of dimension A



For class-1: R-407C For class-2: R-410A

Conventional flaring tools can be used when the work process is changed. (change of work process)

Previously, a pipe extension margin of 0 to 0.5mm was provided for flaring. For R-410A air conditioners, perform pipe flaring with a pipe extension margin of $\underline{\text{1.0 to 1.5mm}}$. (For clutch type only)

Conventional tool with pipe extension margin adjustment can be used.

2. Torque wrench



■ Specifications


Dimension B

Unit:mm

Nominal size	Class-1	Class-2	Previous
1/2	24	26	24
5/8	27	29	27


No change in tightening torque No change in pipes of other sizes

- Differences
- Change of dimension B Only 1/2", 5/8" are extended

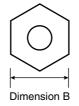

For class-1: R-407C For class-2: R-410A

3. Vacuum pump with check valve

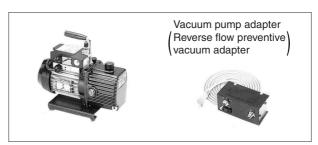

- Specifications
- Discharge speed
 50 l/min (50Hz)
 60 l/min (60Hz)
- Suction port UNF7/16-20(1/4 Flare) UNF1/2-20(5/16 Flare) with adapter
- Maximum degree of vacuum
 Select a vacuum pump which is able to keep the vacuum degree of the system in excess of -100.7 kPa (5 torr - 755 mmHg).

- Differences
- · Equipped with function to prevent reverse oil flow
- Previous vacuum pump can be used by installing adapter.

4. Leak tester



- Specifications
- Hydrogen detecting type, etc.
- Applicable refrigerants
 R-410A, R-407C, R-404A, R-507A, R-134a, etc.
- Differences
- Previous testers detected chlorine. Since HFCs do not contain chlorine, new tester detects hydrogen.

5. Refrigerant oil (Air compal)



- Specifications
- Contains synthetic oil, therefore it can be used for piping work of every refrigerant cycle.
- · Offers high rust resistance and stability over long period of time.
- Differences
- Can be used for R-410A and R-22 units.


6. Gauge manifold for R-410A



- Specifications
- High pressure gauge
 - 0.1 to 5.3 MPa (-76 cmHg to 53 kg/cm²)
- Low pressure gauge
 - 0.1 to 3.8 MPa (-76 cmHg to 38 kg/cm²)
- 1/4" \rightarrow 5/16" (2min \rightarrow 2.5min)
- No oil is used in pressure test of gauges.
 - → For prevention of contamination

- Temperature scale indicates the relationship between pressure and temperature in gas saturated state.
- Differences
- · Change in pressure
- Change in service port diameter

7. Charge hose for R-410A

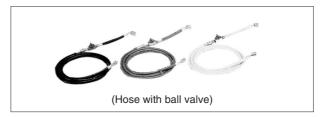

- Specifications
- Working pressure 5.08 MPa (51.8 kg/cm²)
- Rupture pressure 25.4 MPa (259 kg/cm²)
- Available with and without hand-operate valve that prevents refrigerant from outflow.
- Differences
- · Pressure proof hose
- · Change in service port diameter
- Use of nylon coated material for HFC resistance

8. Charging cylinder



- Specifications
- Use weigher for refrigerant charge listed below to charge directly from refrigerant cylinder.
- Differences
- The cylinder can not be used for mixed refrigerant since mixing ratio is changed during charging.

When R-410A is charged in liquid state using charging cylinder, foaming phenomenon is generated inside charging cylinder.

9. Weigher for refrigerant charge



- Specifications
- High accuracy TA101A (for 10-kg cylinder) = ± 2g TA101B (for 20-kg cylinder) = ± 5g
- Equipped with pressure-resistant sight glass to check liquid refrigerant charging.
- A manifold with separate ports for HFCs and previous refrigerants is equipped as standard accessories.
- Differences
- Measurement is based on weight to prevent change of mixing ratio during charging.

10. Charge mouthpiece



- Specifications
- For R-410A, 1/4" \rightarrow 5/16" (2min \rightarrow 2.5min)
- Material is changed from CR to H-NBR.
- Differences
- Change of thread specification on hose connection side (For the R-410A use)
- Change of sealer material for the HFCs use.

Index

F F3	A		Display "Under Centralized Control" Blinks	
A3	A0	266		382
A6	A1	267		
## A7	A3	268		
AS	A6270, 2	72, 273	Drain Level above Limit	280
Abnormal Discharge Pipe Temperature	A7	274	_	
Abnormal Outdoor Fan Motor Signal 304 Actuation of High Pressure Switch 287 Actuation of High Pressure Switch 287 Actuation of High Pressure Switch 287 Actuation of Low Pressure Sensor 289 Address Duplication, Improper Setting 376 AF 288 AJ 281 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of the Connecting Wires 388 Broken Wire Check of 1 383 Broken Wire Check of 1 383 Broken Wire Check 1 383 Broken Wire Check 1 383 Broken Wire Check 1 384 Broken Wire Check 1 385 Broken Wire Check 1	A92	76, 278	_	
Actuation of High Pressure Switch	Abnormal Discharge Pipe Temperature	299		
Actuation of Low Pressure Sensor	Abnormal Outdoor Fan Motor Signal	304		
Address Duplication of Centralized Controller	Actuation of High Pressure Switch	287		
Address Duplication, Improper Setting	Actuation of Low Pressure Sensor	289		
AF	Address Duplication of Centralized Controller	365		
B	Address Duplication, Improper Setting	376		
Dust Clogging	AF	280		297
## C	AJ	281		
F F3				
C F C4 282 C5 283 C9 284 Check 1 383 Check 2 383 Check 2 383 Check 3 384 Check 4 385 Check 5 386 Check 6 387 Check 7 388 Check 8 389 Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check 14 395 Check 15 396 Check 16 397 Check 17 398 Check 18 394 Check 19 390 Check 10 391 Check 11 392 Check 12 393 Check 16 396 Check 17 388 Check 18	В		Error of External Protection Device	266
C F C4 282 C5 283 C9 284 Check 1 383 Check 2 383 Check 3 384 Check 4 385 Check 5 386 Check 6 387 Check 7 388 Check 8 389 Check 9 390 Check 11 392 Check 12 393 Check 14 395 Check 15 396 Check 16 397 Check 17 388 Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 14 395 Check 15 396 Check 16 396 Check 17 388 Check 18 394 Check 19 390 Check 10 391 Check 12 393 Check 16	Broken Wire Check of the Connecting Wires .	388		
C4 282 F6 301 C5 283 F9 302 Check 1 383 S6 S6 S8 S9 Check 2 383 Check 3 S8 Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board or Faulty Field Setting after Replacing Main PC Board or Faulty Field Setting after Replacing Main PC Board or Faulty Field Setting after Replacing Main PC Board or Faulty Field Setting After Replacing Main PC Board or Faulty Field Setting After Replacing Main PC Board or Faulty Field Setting After Replacing Main PC Board or Faulty Field Setting After Replacing Main PC Board or Faulty Faulty Field Setting After Replacing Main PC Board or Faulty Faulty Field Setting After Repl	Ç		F	
F9	C		F3	299
C9	C4	282		
Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board or Faulty Combination or PC Board or Faulty Combination	C5	283	F9	302
Check 2 383 Faulty Combination of PC Board 385 Check 3 384 Functional Parts Layout 77 Check 4 385 REMQ10P, 12P 75 Check 5 386 REMQ14P, 16P 74 Check 6 387 REMQ3P, 16P 77 Check 7 388 REYQ14P, 16P 77 Check 8 389 REYQ8P, 10P, 12P 70 Check 10 391 G Check 11 392 Gas Shortage Alert 340 Check 12 393 H H Check 14 395 H H Check for Causes of Drop in Low Pressure 386 H H Check for Causes of Rise in High Pressure 386 H H H Check for Causes of Wet Operation 391 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller 355 Check for Shortage of Refrigerant 392 Improper Combination of Optional Controller 356 Check for Shortage of Netrigerant 393 Inverter Compresso	C9	284	Fan Motor (M1F) Lock, Overload	270
Check 3	Check 1	383	Faulty Field Setting after Replacing Main PC Bo	oard or
Check 4 385 REMQ10P, 12P 73 Check 5 386 REMQ14P, 16P 74 Check 6 387 REMQ8P 72 Check 7 388 REYQ14P, 16P 75 Check 8 389 REYQ8P, 10P, 12P 76 Check 9 390 G G Check 10 391 G G Check 11 392 G G G Check 12 393 G G G G Check 13 394 H	Check 2	383	Faulty Combination of PC Board	338
Check 4 385 REMQ10P, 12P 75 Check 5 386 REMQ14P, 16P 74 Check 6 387 REMQ8P 75 Check 7 388 REYQ14P, 16P 77 Check 8 389 REYQ8P, 10P, 12P 70 Check 9 390 G G Check 10 391 G G Check 11 392 Gas Shortage Alert 340 Check 12 393 Gas Shortage Alert 340 Check 13 394 H H H H H H H H H H M 304 H H H H H M 304 H Heat Exchanger Control 116 In In <td>Check 3</td> <td>384</td> <td>Functional Parts Layout</td> <td> 70</td>	Check 3	384	Functional Parts Layout	70
Check 5 386 Check 6 387 Check 6 387 Check 7 388 Check 8 389 Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check for Causes of Drop in Low Pressure 386 Check for Causes of Refrigerant 392 Check for Causes of Refrigerant 393 Check for Covercharge of Refrigerant 393 Check for Covercharge of Refrigerant 393 Check for Shortage of Refrigerant 393 Check for Shortage of Refrigerant 393 Check for Shortage of Refrigerant 393 Check operation not Executed 346 Check the Factors of Overheat Operation 384 CJ 300 Concept of Inverter-related Malfunction Codes 396 Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307			REMQ10P, 12P	73
Check 6 387 Check 7 388 Check 8 389 Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check for Causes of Drop in Low Pressure 387 Check for Causes of Rise in High Pressure 386 Check for Causes of Refrigerant 392 Check for Causes of Refrigerant 393 Check for Couses of Refrigerant 393 Check for Shortage of Refrigerant 393 Check on Connector of Fan Motor Inproper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller 355 Check Operation not Executed 346 Check the Factors of Overheat Operation 384 CJ 285 Concept of Inverter-related Malfunction Codes 396 Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 Defective Inverter PC Board 319			REMQ14P, 16P	74
Check 7 388 REYQ14P, 16P 71 Check 8 389 REYQ8P, 10P, 12P 70 Check 10 391 G Check 11 392 Gas Shortage Alert 340 Check 12 393 Gas Shortage Alert 340 Check 13 394 H 4 Check 14 395 H9 306 Check for Causes of Drop in Low Pressure 387 Heat Exchanger Control 118 Check for Causes of Wet Operation 391 Heat Exchanger Control 118 Check for Overcharge of Refrigerant 392 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller 355 Check on Connector of Fan Motor Contralized Control 355 Check Operation not Executed 346 Inverter Compressor Motor Lock 291 Check the Factors of Overheat Operation 384 Inverter Over-Ripple Protection 334 Coling only/Heat-pump setting 217 J J Current Sensor Malfunction 307 J J J Defect			REMQ8P	72
Check 8 389 Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check for Causes of Drop in Low Pressure 387 Check for Causes of Rise in High Pressure 386 Check for Causes of Wet Operation 391 Check for Overcharge of Refrigerant 392 Check for Shortage of Refrigerant 393 Check on Connector of Fan Motor (Power Supply Cable) Check Operation not Executed 346 Check on Factors of Overheat Operation 384 CJ 285 Concept of Inverter-related Malfunction Codes 396 Coling only/Heat-pump setting 217 Current Sensor Malfunction 307 Defective Inverter PC Board 319 REYQ8P, 10P, 12P Gas Shortage Alert 340 Gas Shortage Alert 340 Gas Shortage Alert 340 Gas Shortage Alert 340 Gas Shortage Alert 340 H H H7 6 Cas Shortage Alert 340 Heat Exchanger Control Interchanger Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller 35 Improper Combination of Optiona			REYQ14P, 16P	71
Check 9 390 Check 10 391 Check 11 392 Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check for Causes of Drop in Low Pressure 387 Check for Causes of Rise in High Pressure 386 Check for Causes of Wet Operation 391 Check for Shortage of Refrigerant 392 Check for Shortage of Refrigerant 392 Check on Connector of Fan Motor (Power Supply Cable) 383 Check Operation not Executed 346 Check the Factors of Overheat Operation 384 CJ 285 Concept of Inverter-related Malfunction Codes 396 Coling only/Heat-pump setting 217 Current Sensor Malfunction 307 D 308 Defective Inverter PC Board 319			REYQ8P, 10P, 12P	70
Check 10 391 G Check 11 392 Gas Shortage Alert 340 Check 12 393 H				
Check 11 392 Gas Shortage Alert 340 Check 12 393 H Check 13 394 H Check 14 395 H7 304 Check for Causes of Drop in Low Pressure 386 H9 306 Check for Causes of Rise in High Pressure 386 H9 306 Check for Causes of Wet Operation 391 Heat Exchanger Control 118 Check for Overcharge of Refrigerant 392 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller 355 Check on Connector of Fan Motor (Power Supply Cable) 383 Check Operation not Executed 346 Inverter Compressor Motor Lock 291 Check the Factors of Overheat Operation 384 Inverter Compressor Starting Failure 328 COncept of Inverter-related Malfunction Codes 396 J Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 D J Defective Inverter PC Board 319			G	
Check 12 393 Check 13 394 Check 14 395 Check 15 396 Check for Causes of Drop in Low Pressure 387 Check for Causes of Rise in High Pressure 386 Check for Causes of Wet Operation 391 Check for Overcharge of Refrigerant 392 Check for Shortage of Refrigerant 393 Check on Connector of Fan Motor Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller Check Operation not Executed 383 Check the Factors of Overheat Operation 384 CJ 285 Concept of Inverter-related Malfunction Codes 396 Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 D J Defective Inverter PC Board 319			Gas Shortage Alert	340
Check 13				
Check 14			Н	
Check 15	Check 14	395	H7	304
Check for Causes of Drop in Low Pressure			H9	306
Check for Causes of Rise in High Pressure			Heat Exchanger Control	118
Check for Causes of Wet Operation				
Check for Overcharge of Refrigerant				
Check for Shortage of Refrigerant. 393 Check on Connector of Fan Motor (Power Supply Cable) 383 Check Operation not Executed 346 Check the Factors of Overheat Operation 384 CJ 285 Concept of Inverter-related Malfunction Codes 396 Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 Defective Inverter PC Board 359 Indoor Units and Remote Controller 359 Improper Combination of Optional Controllers for Centralized Control 374 Inverter Compressor Motor Lock 291 Inverter Compressor Starting Failure 328 Inverter Compressor Motor Lock 359 Inverter Compressor Moto	·		Improper Combination of Indoor and Outdoor	Units,
(Power Supply Cable)				
Check Operation not Executed	Check on Connector of Fan Motor		Improper Combination of Optional Controllers	for
Check Operation not Executed	(Power Supply Cable)	383	Centralized Control	374
Check the Factors of Overheat Operation				
CJ 285 Inverter Over-Ripple Protection 334 Concept of Inverter-related Malfunction Codes 396 Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 J3 308 J4 309 Defective Inverter PC Board 319				
Concept of Inverter-related Malfunction Codes396 Cooling only/Heat-pump setting			Inverter Over-Ripple Protection	334
Cooling only/Heat-pump setting 217 Current Sensor Malfunction 307 J2 307 J3 308 J4 309 Defective Inverter PC Board 319			_	
Current Sensor Malfunction 307 J2 307 J3 308 J4 309 Defective Inverter PC Board 319 J5 310	·			
J3 308 J4 309 Defective Inverter PC Board 319 J5 310				
Defective Inverter PC Board319 J5310				
Bolodavo involtor i o Board imminimino io	D			
Detailed Explanation of Setting Modes207 J6311	Defective Inverter PC Board	319		
	Detailed Explanation of Setting Modes	207	J6	311

Index

J7312	Malfunction of Thermistor (R4T or R12T) for	
J9314	Outdoor Unit Heat Exchanger	. 311
JA315	Malfunction of Thermistor (R8T or R10T) for	
JC317	Suction Pipe	. 310
-	Malfunction of Thermostat Sensor in	
L	Remote Controller	
L1319	Malfunction of Transmission between Centralize	
L4321	Controller and Indoor Unit	
L5324	Malfunction of Transmission between Indoor and	
L8326	Outdoor Units in the Same System	. 358
L9328	Malfunction of Transmission between	
LC331	Indoor Units	
List of Electrical and Functional Parts435	Malfunction of Transmission between Inverter ar	
Indoor Unit439	Control PC Board	. 331
Outdoor Unit435	Malfunction of Transmission between Main and	
List of Inverter-related Malfunction Codes395	Sub Remote Controllers	. 357
Local setting switch201	Malfunction of Transmission between Optional	
	Controllers for Centralized Control	. 373
M	Malfunction of Transmission between Remote	
M1372	Controller and Indoor Unit	
M8373	Master Unit Central Connector Setting Table	
MA374	Master-Slave Unit Setting Table	
Malfunction Code Indication by	MC	
Outdoor Unit PC Board262	Microcomputer Normal Monitor	
Malfunction of BS Unit Electronic	Mode Setting Switch	
Expansion Valve302	Model Setting	. 217
Malfunction of Capacity Determination Device281	Momentary Overcurrent of	
Malfunction of Discharge Pipe Thermistor	Inverter Compressor 324	
(R31T, R32T, R33T)308	Monitor Mode	
Malfunction of Drain Level Control System	Motor Side Connectors	. 383
(S1L)268	0	
Malfunction of Electronic Expansion Valve Coil278	_	077
Malfunction of High Pressure Sensor315	Operation Lamp Blinks	
Malfunction of Indoor Unit Fan Motor272	Outdoor Unit PC Board Layout	
Malfunction of Inverter Radiating Fin Temperature	Motor	
Rise321	NIO(O)	. 213
Malfunction of Inverter Radiating Fin Temperature	P	
Rise Sensor336	- P1	334
Malfunction of Liquid Pipe Thermistor 1	P4	
(R6T, R9T or R14T)312	PC Board Defect	
Malfunction of Liquid Pipe Thermistor 2	Piping Diagrams	
(R7T or R15T)313	Indoor Unit	
Malfunction of Low Pressure Sensor317	Outdoor Unit	
Malfunction of Moving Part of Electronic Expansion	Piping Installation Point	
Valve (Y1E~Y5E)297	The Example of a Wrong Pattern	
Malfunction of Outdoor Unit Fan Motor294	PJ	
Malfunction of Subcooling Heat Exchanger Gas Pipe	Power Supply Insufficient or	. 000
Thermistor (R5T or R13T)314	Instantaneous Failure	. 343
Malfunction of Swing Flap Motor (M1S)274	Power Supply Specification	
Malfunction of System, Refrigerant System Address	Power Transistor Check	
Undefined370		
Malfunction of Temperature Sensor for Heat	R	
Exchanger Gas (R2T or R11T)309	Refrigerant Circuit	58
Malfunction of Thermistor (R1T)	BS Unit Functional Parts	
for Outdoor Air306	REMQ10P, 12P (Multi 10, 12HP)	
Malfunction of Thermistor (R1T)	REMQ14P, 16P (Multi 14, 16HP)	
for Suction Air284	REMQ8P (Multi 8HP)	
Malfunction of Thermistor (R2T)	REYQ14P, 16P	
for Heat Exchanger282	REYQ8P, 10P, 12P	
Malfunction of Thermistor (R3T) for Gas Pipes283	Refrigerant Flow for Each Operation Mode	

ii Index

REYQ14P, 16P	
REYQ18P, 20P	91
REYQ8P, 10P, 12P	75
Refrigerant Overcharged	301
Reverse Phase, Open Phase	342
, ,	
S	
Set Model Display (LED)	201
Setting at Replacement by Spare PC Board	
Setting by Push Button Switches	
Setting Mode 1	
Setting Mode 2	224
Startup Control	
STD Compressor Motor Overcurrent/Lock	
Symptom-based Troubleshooting	
System is not Set yet	
Cystom is not out yet	
Т	
The Example of a Wrong Pattern	110
Transmission Failure (Across Outdoor Units) .	
Troubleshooting	
(OP: Central Remote Controller)	272
Troubleshooting	312
(OP: Unified ON/OFF Controller)	277
(OF. Offilied ON/OFF Controller)	377
U	
U0	0.40
U1	
U2	
U3	
U4	
U5	
U7	
U8	
U9	
UA	
UC	
UE	
UF	
UH	
Unit Allocation Setting	217
V	
-	
Vacuuming and Dehydration Procedure	394
14/	
W	
Wiring Diagrams for Reference	
Field Wiring	
Indoor Unit	
Outdoor Unit	110

Index

iv Index

Drawings & Flow Charts

A	Display "Under Centralized Control" Blinks
Abnormal Discharge Pipe Temperature299	(Repeats Single Blink)
Abnormal Outdoor Fan Motor Signal304	Drain Level above Limit280
Actuation of High Pressure Switch287	Drain Pump Control 147
Actuation of Low Pressure Sensor289	
Address Duplication of Centralized Controller365	
Address Duplication, Improper Setting376	Controller 148
В	When the Float Switch is Tripped During Heating Operation148
Broken Wire Check of the Connecting Wires388	When the Float Switch is Tripped while the
•	Cooling Thermostat is OFF
C	When the Float Switch is Tripped While the
Centralized Control Group No. Setting212	
BRC1C Type212	
BRC4C Type212	. –
BRC7C Type212	5 . 61 .
BRC7E Type212	
Group No. Setting Example213	0 1 (
Check 1	—
Check 2	
Check 3	
Check 4	001111-0-1011
Check 5	
Check 6	
Check 7	' <u> </u>
Check 8	
Check 9390	
Check 10391	
Check 11392	
Check 12393	0 1 - 0
Check 13394	
Check 14395	
Check 15396	
Check for Causes of Drop in Low Pressure387	
Check for Causes of Rise in High Pressure386	
Check for Causes of Wet Operation391	
Check for Overcharge of Refrigerant392	
Check for Shortage of Refrigerant393	nergor, lur, 12r70
Check on Connector of Fan Motor	G
(Power Supply Cable)	_
CHECK OPERATION FUNCTION238	_
Check Operation not Executed346	
Check the Factors of Overheat Operation384	` <u>-</u>
Concept of Inverter-related Malfunction Codes396	
Contents of Control Modes	
How to Select Operation Mode214	
Current Sensor Malfunction307	Improper Combination of Indoor and Outdoor Units,
D	Indoor Units and Remote Controller 359
Defective Inverter PC Board319	
Detailed Setting Procedure of Low Noise Operation	Centralized Control
and Demand Control235	Inspection Mode256
Discharge Pipe Protection Control136	·
Display "Under Centralized Control" Blinks	Inverter Compressor Starting Failure 328
(Repeats Double Blink)382	
, ,	

Drawings & Flow Charts

Inverter Protection Control137	Malfunction of Transmission between Main and Sub
-	Remote Controllers357
L	Malfunction of Transmission between Optional
List of Inverter-related Malfunction Codes395	Controllers for Centralized Control 373
Louver Control for Preventing Ceiling Dirt154	Malfunction of Transmission between Remote
Low Pressure Protection Control134	Controller and Indoor Unit
NA	Master Unit Central Connector Setting Table 389
M	Master-Slave Unit Setting Table
Malfunction Code Indication by Outdoor Unit PC	Method of Checking the Inverter's Power Transistors
Board	and Diode Modules
Malfunction of BS Unit Electronic	Momentary Overcurrent of Inverter
Expansion Valve	Compressor
Malfunction of Capacity Determination Device281	Monitor Mode
Malfunction of Discharge Pipe Thermistor (R31T, R32T, R33T)308	Wioldi Side Connectors
Malfunction of Drain Level Control System	0
(S1L)268	Operating Priority and Rotation of
Malfunction of Electronic Expansion Valve Coil278	Compressors109
Malfunction of High Pressure Sensor315	Operation Lamp Blinks
Malfunction of Indoor Unit Fan Motor272	Operation Mode
Malfunction of Inverter Radiating Fin Temperature	Outdoor Unit Fan Control in Cooling
Rise321	Operation117
Malfunction of Inverter Radiating Fin Temperature	Outdoor Unit PC Board Layout201
Rise Sensor336	Outline of Control141
Malfunction of Liquid Pipe Thermistor 1	Overload / Overcurrent / Lock of Indoor Unit Fan
(R6T, R9T or R14T)312	Motor
Malfunction of Liquid Pipe Thermistor 2	270
(R7T or R15T)313	P
Malfunction of Low Pressure Sensor317	PC Board Defect267, 286, 372
Malfunction of Moving Part of Electronic Expansion	Piping Diagrams
Valve (Y1E~ Y5E)297	Indoor Unit403
Malfunction of Outdoor Unit Fan Motor294	Outdoor Unit398
Malfunction of Subcooling Heat Exchanger Gas Pipe	Piping Installation Point448
Thermistor (R5T or R13T)314	The Example of A Wrong Pattern 449
Malfunction of Swing Flap Motor (M1S)274	Power Supply Insufficient or
Malfunction of System, Refrigerant System Address	Instantaneous Failure343
Undefined370	Power Transistor Check 385
Malfunction of Temperature Sensor for Heat	Pressure Sensor 457
Exchanger Gas (R2T or R11T)309	
Malfunction of Thermistor (R1T) for	R
Outdoor Air306	Refrigerant Circuit58
Malfunction of Thermistor (R1T) for	BS Unit Functional Parts68
Suction Air284	Indoor Units69
Malfunction of Thermistor (R2T) for	REMQ10P, 12P 65
Heat Exchanger282	REMQ14P, 16P 67
Malfunction of Thermistor (R3T) for	REMQ8P63
Gas Pipes283	REYQ14P, 16P60
Malfunction of Thermistor (R4T or R12T) for	REYQ8P, 10P, 12P58
Outdoor Unit Heat Exchanger311	Refrigerant Flow for Each Operation Mode 75
Malfunction of Thermistor (R8T or R10T) for	Operation of refrigerant regulator99
Suction Pipe310	Pressure Equalizing when Switching Operation
Malfunction of Thermostat Sensor in Remote	Cooling / Heating100
Controller285	REYQ14P, 16P83
Malfunction of Transmission between Centralized	REYQ8P, 10P, 12P
Controller and Indoor Unit366	Refrigerant Overcharged
Malfunction of Transmission between Indoor and	Remote Controller Self-Diagnosis Function 259
Outdoor Units in the Same System358	Remote Controller Service Mode
Malfunction of Transmission between	Reverse Phase, Open Phase342
Indoor Units347	•
Malfunction of Transmission between Inverter and	S
Control PC Board331	Self-diagnosis by Wired Remote Controller 252

Drawings & Flow Charts

Selt-diagnosis by Wireless Remote Controller	
Setting by Push Button Switches	
Setting Mode 1	
Setting Mode 2	.224
Setting of Low Noise Operation and Demand	
Operation	.23
Image of Operation in the Case of A 232,	234
Image of Operation in the Case of	
A and B	
Image of Operation in the Case of B 232,	
Simplified Remote Controller	
BRC2A51, BRC2C51	
STD Compressor Motor Overcurrent/Lock	
STD Compressor Overload Protection	
System is not Set yet	.308
т	
Test Operation	156
Thermostat Sensor in Remote Controller	
Cooling	
Heating	
Transmission Failure (Across Outdoor Units)	
Troubleshooting	
(OP: Central Remote Controller)	.372
Troubleshooting	
(OP: Unified ON/OFF Controller)	.37
Troubleshooting by Remote Controller	
V	
Vacuuming and Dehydration Procedure	.394
W	
	200
Wired Remote Controller Wireless Remote Controller - Indoor Unit	
BRC4C type	
BRC7C type	
BRC7E type Wiring Diagrams for Reference	
Field Wiring	
Indoor Unit	
Outdoor Unit	
Outdoor Offic	.41(

Drawings & Flow Charts



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

- 1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
- 2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107



JQA-1452

About ISO 9001

ISO 9001 is a plant certification system defined by the International Organization for Standardization (ISO) relating to quality assurance. ISO 9001 certification covers quality assurance aspects related to the "design, development, manufacture, installation, and supplementary service" of products manufactured at the plant.



About ISO 14001

ISO 14001 is the standard defined by the International Organization for Standardization (ISO) relating to environmental management systems. Our group has been acknowledged by an internationally accredited compliance organisation as having an appropriate programme of environmental protection procedures and activities to meet the requirements of ISO 14001

Dealer

DAIKIN INDUSTRIES, LTD.

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi, Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:

JR Shinagawa East Bldg., 2-18-1, Konan, Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved