




Air Conditioning

Technical Data

Concealed ceiling unit with inverter driven fan

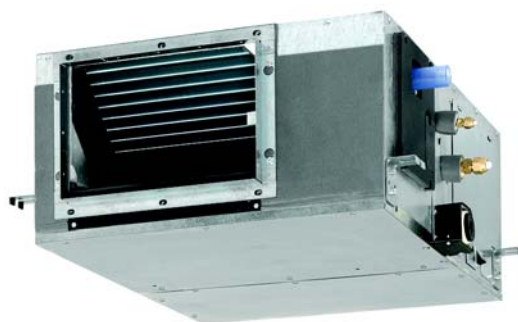

EEDEN14-204

FXSQ-P

TABLE OF CONTENTS


FXSQ-P

1	Features	2
2	Specifications	3
	Technical Specifications	3
	Electrical Specifications	4
3	Electrical data	5
4	Safety device settings	6
5	Options	7
6	Capacity tables	8
	Cooling Capacity Tables	8
	Heating Capacity Tables	9
	Capacity Correction Factor	10
7	Dimensional drawings	12
8	Centre of gravity	14
9	Piping diagrams	15
10	Wiring diagrams	16
	Wiring Diagrams - Single Phase	16
11	Sound data	18
	Sound Power Spectrum	18
	Sound Pressure Spectrum	20
12	Fan characteristics	22

1 Features

- Easy installation thanks to automatic air flow adjustment towards nominal air flow rate
- Blends unobtrusively with any interior décor: only the suction and discharge grilles are visible
- Up to 140Pa external static pressure (ESP) facilitates using flexible ducts of varying lengths: ideal for shops and medium size offices
- Low energy consumption thanks to DC inverter fans
- Possibility to change ESP via wired remote control allows optimisation of the supply air volume
- The air suction direction can be altered from rear to bottom suction
- Standard built-in drain pump increases reliability of the drain system

1

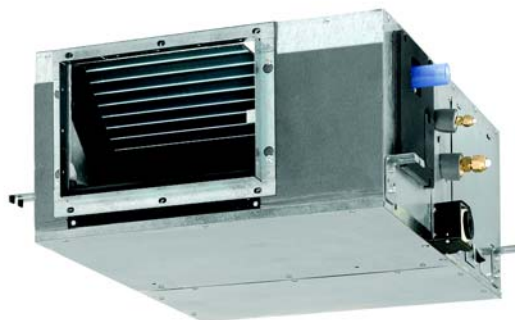

Inverter



Home leave operation



Fan only



Auto cooling-heating changeover



Whisper quiet



Fan speed steps



Dry programme



Air filter



Weekly timer



Infrared remote control



Wired remote control



Centralised control



Auto-restart



Self diagnosis



Multi tenant



Drain pump kit

2 Specifications

2-1 Technical Specifications					FXSQ20 P	FXSQ25 P	FXSQ32 P	FXSQ40 P	FXSQ50 P	FXSQ63 P	FXSQ80 P	FXSQ10 0P	FXSQ12 5P	FXSQ14 0P
Cooling capacity	Nom.			kW	2.2 (1)	2.8 (1)	3.6 (1)	4.5 (1)	5.6 (1)	7.1 (1)	9.0 (1)	11.2 (1)	14.0 (1)	16.0 (1)
Heating capacity	Nom.			kW	2.5 (2)	3.2 (2)	4.0 (2)	5.0 (2)	6.3 (2)	8.0 (2)	10.0 (2)	12.5 (2)	16.0 (2)	18.0 (2)
Power input - 50Hz	Cooling	Nom.	kW	0.041 (1)		0.044 (1)	0.097 (1)		0.074 (1)	0.118 (1)	0.117 (1)	0.185 (1)	0.261 (1)	
	Heating	Nom.	kW	0.029 (2)		0.032 (2)	0.085 (2)		0.062 (2)	0.106 (2)	0.105 (2)	0.173 (2)	0.249 (2)	
Power input - 60Hz	Cooling	Nom.	kW	0.041 (1)		0.044 (1)	0.097 (1)		0.074 (1)	0.118 (1)	0.117 (1)	0.185 (1)	0.261 (1)	
	Heating	Nom.	kW	0.029 (2)		0.032 (2)	0.085 (2)		0.062 (2)	0.106 (2)	0.105 (2)	0.173 (2)	0.249 (2)	
Casing	Colour			Unpainted										
	Material			Galvanised steel										
Dimensions	Unit	Height	mm	300										
		Width	mm	550			700		1,000		1,400			
		Depth	mm	700										
	Packed unit	Height	mm	355										
		Width	mm	770			920		1,220		1,620			
		Depth	mm	900										
Required ceiling void \>			mm	350										
Weight	Unit		kg	23			26		35		46		47	
	Packed unit		kg	28			32		42		54		55	
Decoration panel	Model			BYBS32DJW1			BYBS45DJW1		BYBS71DJW1		BYBS125DJW1			
	Colour			White (10Y9/0.5)										
	Dimensions	Height	mm	55										
		Width	mm	650			800		1,100		1,500			
		Depth	mm	500										
	Weight		kg	3.0			3.5		4.5		6.5			
Heat exchanger	Tube type			ø7 HI-XSS										
	Fin	Type		Symmetric waffle louver										
		Treatment		Hydrophilic										
Fan	Type			Sirocco fan										
	Quantity			1					2		3			
	Air flow rate - 50Hz	Cooling	High	m³/min	9	9.5	16		19.5	25	32	39	46	
			Nom.	m³/min	7.8	8.3	13.5		17.8	22.5	27.5	33.5	39	
			Low	m³/min	6.5	7	11		16	20	23	28	32	
		Heating	High	m³/min	9	9.5	16		19.5	25	32	39	46	
			Nom.	m³/min	7.8	8.3	13.5		17.8	22.5	27.5	33.5	39	
			Low	m³/min	6.5	7	11		16	20	23	28	32	
	Air flow rate - 60Hz	Cooling	High	m³/min	9	9.5	16		19.5	25	32	39	46	
			Nom.	m³/min	7	8.3	13.5		17.8	22.5	27.5	33.5	39	
			Low	m³/min	6.5	7	11		16	20	23	28	32	
		Heating	High	m³/min	9	9.5	16		19.5	25	32	39	46	
			Nom.	m³/min	7	8.3	13.5		17.8	22	27.5	33.5	39	
			Low	m³/min	6.5	7	11		16.0	20	23	28	32	
	External static pressure - 50Hz	High	Pa	70			100				120		140	
Nom.		Pa	30					40		50				
External static pressure - 60Hz	High	Pa	70			100				120		140		
	Nom.	Pa	30					40		50				
Fan motor	Quantity			1										
	Model			Brushless DC motor										
	Speed	Steps		9			10		8	9			11	
	Output	High	W	90			140		350					
	Drive			Direct drive										
Sound power level	Cooling	Nom.	dB(A)	55	56	63		59	63	61	66	67		
Sound pressure level	Cooling	High	dB(A)	32	33	37			38		40	42		
		Low	dB(A)	26	27	29		30	32		33	34		
	Heating	High	dB(A)	32	33	37			38		40	42		
		Low	dB(A)	26	27	29		30	32		33	34		

2 Specifications

2-1 Technical Specifications				FXSQ20 P	FXSQ25 P	FXSQ32 P	FXSQ40 P	FXSQ50 P	FXSQ63 P	FXSQ80 P	FXSQ10 0P	FXSQ12 5P	FXSQ14 0P
Refrigerant	Type			R-410A									
	Control			Electronic expansion valve									
Piping connections	Liquid	Type		Flare connection									
		OD	mm	6.35					9.52				
	Gas	Type		Flare connection									
		OD	mm	12.7					15.9				
	Drain			VP25 (O.D. 32 / I.D. 25)									
	Heat insulation			Both liquid and gas pipes									
Air filter	Type			Resin net with mold resistance									
Drain-up height			mm	625									
Safety devices	Item	01		Drain pump fuse									PC board fuse
		02		PC board fuse									PC board fuse (fan driver)
		03		PC board fuse (fan driver)									Drain pump fuse

2-2 Electrical Specifications			FXSQ20 P	FXSQ25 P	FXSQ32 P	FXSQ40 P	FXSQ50 P	FXSQ63 P	FXSQ80 P	FXSQ10 0P	FXSQ12 5P	FXSQ14 0P
Power supply	Name		VE									
	Phase		1~									
	Frequency	Hz	50/60									
	Voltage	V	220-240/220									
Voltage range	Min.	%	-10									
	Max.	%	10									
Current - 50Hz	Minimum circuit amps (MCA)	A	0.5			1.2		1.1	1.3	1.4	1.9	3.1
	Maximum fuse amps (MFA)	A	16									
Current - 60Hz	Minimum circuit amps (MCA)	A	0.5			1.2		1.1	1.3	1.4	1.9	3.1
	Maximum fuse amps (MFA)	A	16									

Notes

- (1) Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m; level difference: 0m
- (2) Heating: indoor temp. 20°CDB; outdoor temp. 7°CDB, 6°CWB; equivalent refrigerant piping: 7.5m; level difference: 0m
- (3) Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- (4) The sound pressure values are mentioned for a unit installed with rear suction.
- (5) Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
- (6) Maximum allowable voltage range variation between phases is 2%.
- (7) Select wire size based on the value of MCA
- (8) Use a circuit breaker instead of a fuse.

3 Electrical data

3 - 1 Electrical Data

FXSQ-P

Units						Power Supply	
Model	Type	Hz	Volts	Min.	Max.	MCA	MFA
FXSQ20	VE	50/60	220~240V/220V	-10%	+10%	0.5	16
FXSQ25						0.5	16
FXSQ32						0.5	16
FXSQ40						1.2	16
FXSQ50						1.2	16
FXSQ63						1.1	16
FXSQ80						1.3	16
FXSQ100						1.6	16
FXSQ125						2.1	16
FXSQ140						3.1	16

SYMBOLS

MCA : Min.Circuit Amps. (A)
MFA : Max. Fuse Amps. (A) (see note 4)

NOTES

- 1 Voltage range
Units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
- 2 Maximum allowable voltage variation between phases is 2%
- 3 Select wire size based on the MCA.
- 4 Instead of a fuse, use a circuit breaker.

4TW31181-2A

4 Safety device settings

4 - 1 Safety Device Settings

4

FXSQ20-140P

Safety devices		20	25	32	40	50	63	80	100	125	140
FXSQ	PC Board Fuse	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A	250V 3.15A
	PC Board Fuse (Fan Driver)	250V 5A	250V 5A	250V 5A	250V 5A	250V 5A	250V 6.3A	250V 6.3A	250V 6.3A	250V 6.3A	250V 6.3A
	Fan Motor Thermal Protector	°C	—	—	—	—	—	—	—	—	—
	Drain Pump Fuse	°C	145	145	145	145	145	145	145	145	145

3TW31189-2A

5 Options
5 - 1 Options

FXSQ-P

OPTIONS

Item	Type	FXSQ20, 25, 32P	FXSQ40, 50P	FXSQ63, 80P	FXSQ100, 125, 140P
Panel related	Decoration panel (*5)	BYBS32D	BYBS45D	BYBS71D	BYBS125D
Air inlet and air discharge outlet related	Air discharge adapter for round duct	KDAJ25K36A	KDAJ25K56A	KDAJ25K71A	KDAJ25K140A
Panel related	Decoration panel option	EKBYBSD			

Operation control

Item	Type	FXSQ20, 25, 32P	FXSQ40, 50P	FXSQ63, 80P	FXSQ100, 125, 140P
Remote controller	Wired type	BRC1D528/BRC1E51A (*6)/BRC1E52A7 (*7)/BRC1E5287 (*8)			
	Infrared type	HP	BRC4C65		
		CO	BRC4C66		
Simplified remote controller			BRC2C51		
Remote control for hotel use			BRC3A61		
Option PCB for external electrical heater, humidifier and/or hour meter (*1), (*2), (*3), (*4)			EKRP1B2A		
Adapter for wiring (Interlock for fresh air intake fan) (*4)			KRP1C64		
Wiring adapter for electrical appendices (1) (*2), (*4)			KRP2A51		
Wiring adapter for electrical appendices (2) (*4)			KRP4A51		
Remote sensor			KRC501-4B		
Central remote controller			DCS302CA51		
Electrical box with earth terminal (3 blocks)			KJB311A		
Unified ON/OFF controller			DCS301BA51		
Electrical box with earth terminal (2 blocks)			KJB212A		
Schedule timer			DST301BA51		
External adaptor for outdoor unit (installation on indoor unit) (*4)			DTA104A61		
PCB for multi tenant (*4)			DTA114A61		
Mounting plate for adapter PCB			KRP4A96		

(*1) Electrical heater and humidifier are field supply. These parts should not be installed inside the equipment. (Refer to installation manual EKRPTB2A).

(*2) If installing an electrical heater, an option PCB for external electrical heater (EKRP1B2) for each indoor unit is required.

(*3) An electrical heater can not be used for VRV system cooling only.

(*4) Mounting plate KRP4A96 is required for these options. Maximum 2 option PCB's can be mounted.

(*5) Decoration panel option EKBYBSD is required for direct mounting of the decoration panel on the unit.

(*6) Included languages are: English, German, French, Dutch, Spanish, Italian, Greek, Portuguese, Russian and Turkish.

(*7) Included languages are: English, German, French, Dutch, Spanish, Italian, Greek, Portuguese, Russian, Turkish and Polish.

(*8) Included languages are: English, German, Albanian, Bulgarian, Croatian, Czech, Hungarian, Romanian, Serbian, Slovak and Slovenian.

Contents of accessory bag

Description	Quantity
	FXSQ20, 25, 32, 40, 50, 63, 80, 100, 125, 140P
Hexagon tapping screw (M5x16)	16
Round plain washer for wood	8
Installation and operation manual	1
Hose band	1
Insulation for joint (gas)	1
Insulation for joint (liquid)	1
Drain hose	1
Drain hose sealing material	1
Sealing material	2

3TW31189-3E

3TW31189-3E

6 Capacity tables

6 - 1 Cooling Capacity Tables

FXSQ-P

Cooling Capacity

TC: Total capacity; kW
SHC: Sensible heat capacity; kW

Unit size	Indoor air temp.													
	14.0 °CWB		16.0 °CWB		18.0 °CWB		19.0 °CWB		20.0 °CWB		22.0 °CWB		24.0 °CWB	
	20.0 °CDB		23.0 °CDB		26.0 °CDB		27.0 °CDB		28.0 °CDB		30.0 °CDB		32.0 °CDB	
	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
20	1.5	1.5	1.8	1.8	2.1	1.9	2.2	1.9	2.2	1.9	2.3	1.8	2.3	1.8
25	1.9	1.8	2.3	2.0	2.6	2.3	2.8	2.3	2.8	2.2	2.9	2.1	3.0	2.2
32	2.4	2.1	2.9	2.4	3.4	2.8	3.6	2.8	3.6	2.7	3.7	2.7	3.8	2.6
40	3.0	2.9	3.6	3.4	4.2	3.8	4.5	3.8	4.6	3.7	4.7	3.5	4.8	3.6
50	3.8	3.4	4.5	3.9	5.2	4.4	5.6	4.4	5.7	4.3	5.8	4.2	5.9	4.1
63	4.8	4.2	5.7	4.9	6.6	5.4	7.1	5.5	7.2	5.4	7.4	5.3	7.5	5.2
80	6.1	5.3	7.2	6.1	8.4	6.9	9.0	7.0	9.1	6.9	9.3	6.6	9.5	6.6
100	7.6	6.4	9.0	7.3	10.5	8.3	11.2	8.5	11.3	8.4	11.6	8.1	11.9	7.8
125	9.4	8.0	11.3	9.2	13.1	10.3	14.0	10.5	14.2	10.4	14.5	10.1	14.9	9.7
140	10.8	9.0	12.9	10.4	15.0	11.7	16.0	12.0	16.2	11.9	16.6	11.5	17.0	11.3

3TW31182-1C

NOTES - OPMERKINGEN - REMARQUES - ANMERKUNGEN - NOTAS - NOTE - ΣΗΜΕΙΩΣΕΙΣ - NOTLAR - ПРИМЕЧАНИЯ

- This table is for the selection of indoor equipment.
 - Deze tabel is bedoeld voor het kiezen van de binnenunit.
 - Ce tableau concerne la sélection de l'équipement intérieur.
 - Diese Tabelle ist für die Auswahl der Innenanlagen.
 - Esta tabla es para seleccionar el equipo interior.
 - Usare questa tabella per la selezione delle apparecchiature interne.
 - Αυτός ο πίνακας προορίζεται για την επιλογή εσωτερικού εξοπλισμού.
 - Bu tablo iç ünite ekipmanlarının seçimine yöneliktir.
 - Эта таблица предназначена для выбора устанавливаемого в помещении оборудования.
- In the event that conditions differ due to the design requirements after system selection, actual operating ability of the indoor equipment will differ from that noted in the table because of changes in the outdoor air temperature and load factor.
 - Als nadat u het systeem hebt gekozen de voorwaarden afwijken van de ontwerpvereisten, dan zal het reële bedrijfsvermogen van de binnenunit afwijken van de in de tabel vermelde gegevens, wegens de afwijkende buitenluchttemperatuur en de belastingsfactor.
 - Si les exigences de conception après la sélection du système entraînent une modification des conditions, les capacités opérationnelles réelles de l'équipement intérieur diffèrent de celles indiquées dans le tableau en raison de la modification de la température de l'air extérieure et du facteur de charge.
 - Falls Bedingungen aufgrund der Konstruktionsanforderungen nach der Systemauswahl abweichen, dann weicht aufgrund der Änderungen der Außenlufttemperatur und des Lastfaktors die tatsächliche Betriebsfähigkeit der Innenanlage von der in der Tabelle aufgeführten ab.
 - En caso de que las condiciones difieran debido a los requisitos de diseño tras seleccionar el sistema, la capacidad de funcionamiento real del equipo interior diferirá de la que se muestra en la tabla debido a los cambios de la temperatura de aire exterior y al factor de carga.
 - Nel caso in cui intervenissero dei cambiamenti nelle condizioni dovuti a requisiti di progettazione successivi alla selezione del sistema, la capacità operativa effettiva delle apparecchiature interne sarà diversa da quella indicata in tabella a causa della diversa temperatura dell'aria esterna e del fattore di carico.
 - Στην περίπτωση που οι συνθήκες διαφέρουν λόγω των απαιτήσεων σχεδιασμού μετά την επιλογή συστήματος, η πραγματική δυνατότητα του εσωτερικού εξοπλισμού θα διαφέρει από την αναφερόμενη στον πίνακα, λόγω των αλλαγών στην εξωτερική θερμοκρασία αέρα και στο συντελεστή φορτίου.
 - Sistem seçimi sonrası tasarım gerekliliği nedeniyle koşulların değişmesi durumunda, dış hava sıcaklığı ve yük faktöründeki değişiklikler nedeniyle iç ekipman için gerçekte çalışır kapasite tablodaki belirtilenden farklı olacaktır.
 - В случае, если реальные условия отличаются от проектных условий работы, используемых при выборе системы, фактические характеристики устанавливаемого в помещении оборудования будут отличаться от указанных в таблице вследствие изменения температуры воздуха снаружи и показателя нагрузки.
- In this case, use the ability table for the indoor equipment selected and correct for the ratio of change in ability.
 - Gebruik in dat geval de vermogenstabel van de gekozen binneninstallatie en kies het juiste vermogen.
 - Le cas échéant, utiliser le tableau de capacité de l'équipement intérieur sélectionner et corriger le rapport de modification de capacité.
 - Verwenden Sie in diesem Fall die Fähigkeit für die ausgewählte Innenanlage und korrigieren Sie das Verhältnis der Änderung in der Fähigkeit.
 - En este caso, utilice la tabla de capacidades del equipo interior seleccionado y corrija la relación de cambio en capacidad.
 - In questo caso, usare la tabella delle capacità per le apparecchiature interne selezionate ed apportare le modifiche del caso in base alla percentuale di cambiamento di capacità.
 - Σε αυτή την περίπτωση χρησιμοποιήστε τον πίνακα δυνατοτήτων για τον επιλεγμένο εσωτερικό εξοπλισμό και διορθώστε για την αναλογία αλλαγής στη δυνατότητα.
 - Bu durumda, seçilen iç ekipman için kapasite tablosunu kullanın ve kapasitedeki değişim oranına göre düzeltme yapın.
 - В этом случае используйте таблицу характеристик выбранного устанавливаемого в помещении оборудования и внесите необходимую поправку на их изменение.

6 Capacity tables

6 - 2 Heating Capacity Tables

FXSQ-P

Heating Capacity

Unit size	Indoor air temp. °CDB					
	16.0	18.0	20.0	21.0	22.0	24.0
	kW	kW	kW	kW	kW	kW
20	2.6	2.6	2.5	2.4	2.3	2.2
25	3.4	3.4	3.2	3.1	3.0	2.8
32	4.2	4.2	4.0	3.9	3.7	3.5
40	5.2	5.2	5.0	4.8	4.7	4.4
50	6.6	6.6	6.3	6.1	5.9	5.5
63	8.4	8.4	8.0	7.7	7.5	7.0
80	10.5	10.5	10.0	9.7	9.4	8.7
100	13.1	13.1	12.5	12.1	11.7	10.9
125	16.8	16.8	16.0	15.5	15.0	13.9
140	18.9	18.9	18.0	17.4	16.8	15.7

3TW25512-2B

NOTES - OPMERKINGEN - REMARQUES - ANMERKUNGEN - NOTAS - NOTE - ΣΗΜΕΙΩΣΕΙΣ - NOTLAR - ПРИМЕЧАНИЯ

- This table is for the selection of indoor equipment.
 - Deze tabel is bedoeld voor het kiezen van de binnenunit.
 - Ce tableau concerne la sélection de l'équipement intérieur.
 - Diese Tabelle ist für die Auswahl der Innenanlagen.
 - Esta tabla es para seleccionar el equipo interior.
 - Usare questa tabella per la selezione delle apparecchiature interne.
 - Αυτός ο πίνακας προορίζεται για την επιλογή εσωτερικού εξοπλισμού.
 - Bu tablo iç ünite ekipmanlarının seçimine yöneliktir.
 - Эта таблица предназначена для выбора устанавливаемого в помещении оборудования.
- In the event that conditions differ due to the design requirements after system selection, actual operating ability of the indoor equipment will differ from that noted in the table because of changes in the outdoor air temperature and load factor.
 - Als nadat u het systeem hebt gekozen de voorwaarden afwijken van de ontwerpvereisten, dan zal het reële bedrijfsvermogen van de binnenunit afwijken van de in de tabel vermelde gegevens, wegens de afwijkende buitenluchttemperatuur en de belastingsfactor.
 - Si les exigences de conception après la sélection du système entraînent une modification des conditions, les capacités opérationnelles réelles de l'équipement intérieur diffèrent de celles indiquées dans le tableau en raison de la modification de la température de l'air extérieure et du facteur de charge.
 - Falls Bedingungen aufgrund der Konstruktionsanforderungen nach der Systemauswahl abweichen, dann weicht aufgrund der Änderungen der Außenlufttemperatur und des Lastfaktors die tatsächliche Betriebsfähigkeit der Innenanlage von der in der Tabelle aufgeführten ab.
 - En caso de que las condiciones difieran debido a los requisitos de diseño tras seleccionar el sistema, la capacidad de funcionamiento real del equipo interior diferirá de la que se muestra en la tabla debido a los cambios de la temperatura de aire exterior y al factor de carga.
 - Nel caso in cui intervenissero dei cambiamenti nelle condizioni dovuti a requisiti di progettazione successivi alla selezione del sistema, la capacità operativa effettiva delle apparecchiature interne sarà diversa da quella indicata in tabella a causa della diversa temperatura dell'aria esterna e del fattore di carico.
 - Στην περίπτωση που οι συνθήκες διαφέρουν λόγω των απαιτήσεων σχεδιασμού μετά την επιλογή συστήματος, η πραγματική δυνατότητα του εσωτερικού εξοπλισμού θα διαφέρει από την αναφερόμενη στον πίνακα, λόγω των αλλαγών στην εξωτερική θερμοκρασία αέρα και στο συντελεστή φορτίου.
 - Sistem seçiminin sonra tasarım gerekleri nedeniyle koşulların değişmesi durumunda, dış hava sıcaklığı ve yük faktöründeki değişiklikler nedeniyle iç ekipman gerçek çalışma kapasitesi tabloda belirtilenden farklı olacaktır.
 - В случае, если реальные условия отличаются от проектных условий работы, используемых при выборе системы, фактические характеристики устанавливаемого в помещении оборудования будут отличаться от указанных в таблице вследствие изменения температуры воздуха снаружи и показателя нагрузки.
- In this case, use the ability table for the indoor equipment selected and correct for the ratio of change in ability.
 - Gebruik in dat geval de vermogenstabel van de gekozen binneninstallatie en kies het juiste vermogen.
 - Le cas échéant, utiliser le tableau de capacité de l'équipement intérieur sélectionner et corriger le rapport de modification de capacité.
 - Verwenden Sie in diesem Fall die Fähigkeit für die ausgewählte Innenanlage und korrigieren Sie das Verhältnis der Änderung in der Fähigkeit.
 - En este caso, utilice la tabla de capacidades del equipo interior seleccionado y corrija la relación de cambio en capacidad.
 - In questo caso, usare la tabella delle capacità per le apparecchiature interne selezionate ed apportare le modifiche del caso in base alla percentuale di cambiamento di capacità.
 - Σε αυτή την περίπτωση χρησιμοποιήστε τον πίνακα δυνατοτήτων για τον επιλεγμένο εσωτερικό εξοπλισμό και διορθώστε για την αναλογία αλλαγής στη δυνατότητα.
 - Bu durumda, seçilen iç ekipman için kapasite tablosunu kullanın ve kapasitedeki değişim oranına göre düzeltilme yapın.
 - В этом случае используйте таблицу характеристик выбранного устанавливаемого в помещении оборудования и внесите необходимую поправку на их изменение.

6 Capacity tables

6 - 3 Capacity Correction Factor

FXSQ-P

		Capacity correction factor Te = 9°C							
	Indoor air temperature	14.0 °CWB	16.0 °CWB	18.0 °CWB	19.0 °CWB	20.0 °CWB	22.0 °CWB	24.0 °CWB	
		20.0 °CDB	23.0 °CDB	26.0 °CDB	27.0 °CDB	28.0 °CDB	30.0 °CDB	32.0 °CDB	
FXSQ20P	TC	0.697	0.694	0.754	0.776	0.795	0.827	0.854	
	SHF	1.112	1.173	1.117	1.093	1.075	1.053	1.057	
FXSQ25P	TC	0.684	0.705	0.764	0.790	0.812	0.837	0.859	
	SHF	1.130	1.159	1.107	1.084	1.067	1.051	1.054	
FXSQ32P	TC	0.686	0.706	0.766	0.792	0.814	0.837	0.859	
	SHF	1.126	1.159	1.106	1.083	1.066	1.051	1.054	
FXSQ40P	TC	0.689	0.714	0.781	0.801	0.816	0.840	0.863	
	SHF	1.124	1.151	1.098	1.080	1.067	1.051	1.050	
FXSQ50P	TC	0.689	0.714	0.781	0.801	0.816	0.840	0.863	
	SHF	1.124	1.151	1.098	1.080	1.067	1.051	1.050	
FXSQ63P	TC	0.677	0.708	0.766	0.791	0.811	0.838	0.861	
	SHF	1.145	1.157	1.105	1.083	1.068	1.054	1.051	
FXSQ80P	TC	0.686	0.710	0.775	0.799	0.815	0.839	0.861	
	SHF	1.128	1.154	1.101	1.080	1.067	1.050	1.052	
FXSQ100P	TC	0.679	0.707	0.766	0.792	0.812	0.838	0.861	
	SHF	1.140	1.157	1.106	1.083	1.067	1.053	1.054	
FXSQ125P	TC	0.687	0.709	0.773	0.799	0.815	0.838	0.861	
	SHF	1.126	1.155	1.102	1.080	1.067	1.051	1.052	
FXSQ140P	TC	0.693	0.713	0.780	0.799	0.815	0.838	0.861	
	SHF	1.115	1.155	1.101	1.083	1.069	1.053	1.058	

3D079901A

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

How to use this table:

Capacity: Total capacity for High sensible mode = Total capacity for normal capacity table X TC ratio.

SHF: SHF for High sensible mode = SHF for normal capacity table X SHF ratio.

In case of SHF is bigger than 1, SHF is "1"

When selecting units for mixed (RA DX indoor units + VRV DX indoor unit),

- Correction C_i corresponds with Te = 9°C TC ratio value for each type of Indoor unit, depending on indoor ambient design temperature X/Y °CDB/°CWB
- Correction C_i corresponds with Te = 9°C TC ratio value for each type of indoor unit, depending on indoor ambient temperature 29/19 °CDB/°CWB

So verwenden Sie diese Tabelle:

Leistung: Gesamtleistung (GL) für hochfühlbaren Leistungsmodus = Gesamtleistung für normale Leistungstabelle x GL-Verhältnis.

SHF: SHF für hochfühlbaren Leistungsmodus = SHF für normale Leistungstabelle x SHF-Verhältnis.

Für den Fall, dass SHF größer als 1 ist, wird SHF als "1" angenommen.

Bei Auswahl gemischter Geräte (RA DX-Innengerät + VRV DX-Innengerät),

- Korrektur C_i entspricht dem GL-Verhältniswert für Te = 9 °C für jeden Innengerätetyp, in Abhängigkeit von der Innen-Entwurfstemperatur X/Y °C TK/°C FK
- Korrektur C_i entspricht dem GL-Verhältniswert für Te = 9 °C für jeden Innengerätetyp, in Abhängigkeit von der Innentemperatur 29/19 °C TK/°C FK

Πως θα χρησιμοποιήσετε αυτό τον πίνακα:

Απόδοση: Συνολική απόδοση για λειτουργία υψηλής ευαισθησίας = Συνολική απόδοση για λόγο X TC πίνακα κανονικής απόδοσης.

SHF: SHF για λειτουργία υψηλής ευαισθησίας = SHF για λόγο X SHF πίνακα κανονικής απόδοσης.

Στην περίπτωση που το SHF είναι μεγαλύτερο από 1, το SHF είναι "1"

Κατά την επιλογή μονάδων για συνδυασμό (εσωτερικές μονάδες RA DX + εσωτερική μονάδα VRV DX),

- Το C_i διόρθωσης αντιστοιχεί σε Te = 9°C TC τιμή λόγου για κάθε τύπο εσωτερικής μονάδας, ανάλογα με την εσωτερική θερμοκρασία σχεδίου περιβάλλοντος X/Y °CDB/°CWB
- Το C_i διόρθωσης αντιστοιχεί σε Te = 9°C TC τιμή λόγου για κάθε τύπο εσωτερικής μονάδας, ανάλογα με την εσωτερική θερμοκρασία περιβάλλοντος 29/19 °CDB/°CWB

Cómo utilizar esta tabla:

Capacidad: capacidad total para el modo sensible alto = capacidad total para relación TC de tabla X de capacidad normal.

SHF: SHF para modo sensible alto = SHF para relación SHF de tabla X de capacidad normal.

En caso de que SHF sea superior a 1, SHF es "1"

Si se seleccionan unidades combinadas (Unidades interiores DX RA + unidades interiores DX VRV),

- La corrección C_i corresponde a Te = 9°C valor de relación TC para cada tipo de unidad interior, en función de la temperatura de diseño ambiente interior X/Y °CDB/°CBH
- La corrección C_i corresponde a Te = 9°C valor de relación TC para cada tipo de unidad interior, en función de la temperatura ambiente interior 29/19 °CDB/°CBH

Comment utiliser ce tableau :

Puissance : Puissance totale pour le mode haute sensibilité = Puissance totale indiquée dans le tableau de puissance normale X rapport PT.

FCS : FCS pour le mode haute sensibilité =

FCS indiqué dans le tableau de puissance normale rapport FCS.

Si le FCS est supérieur à 1, le FCS correspond à « 1 »

Lors de la sélection d'unités pour une installation mixte (unités intérieures DX RA + unité intérieure DX VRV),

- La correction C_i correspond à Te = 9 °C / valeur de rapport PT pour chaque type d'unité intérieure, pour une température ambiante intérieure de calcul de X/Y °CDB/°CBH
- La correction C_i correspond à Te = 9 °C / valeur de rapport PT pour chaque type d'unité intérieure, pour une température ambiante intérieure de 29/19 °CDB/°CBH

Come utilizzare questa tabella

Capacità: Capacità totale per modalità ad alta capacità sensibile = Capacità totale per tabella capacità normali X rapporto TC.

SHF: SHF per modalità ad alta capacità sensibile = SHF per tabella capacità normali X rapporto SHF.

Qualora il valore SHF sia maggiore di 1, SHF è "1"

Quando si selezionano unità combinate (unità interna ad espansione diretta RA+ unità interna ad espansione diretta VRV),

- La correzione C_i corrisponde a Te = 9°C valore rapporto TC per ogni tipo di unità interna, in base alla temperatura interna di progetto X/Y °CDB/°CBU
- La correzione C_i corrisponde a Te = 9°C valore rapporto TC per ogni tipo di unità interna, in base alla temperatura interna di progetto 29/19 °CDB/°CBU

Hoe deze tabel gebruiken:

Vermogen: totaal vermogen voor High Sensible-modus = totaal vermogen voor tabel normaal vermogen x ratio TV.

SHF: SHF voor High Sensible-modus = SHF voor tabel normaal vermogen x ratio SHF.

Indien SHF groter is dan 1, is SHF "1"

Bij het selecteren van units voor gemengd gebruik (RA DX-binnenunits + VRV DX-binnenunits),

- Correctie C_i komt overeen met ratiowaarde Te = 9°C TC voor elk type binnenunit, afhankelijk van de ontwerp temperatuur van de binnenunit X/Y °CDB/°CNB
- Correctie C_i komt overeen met ratiowaarde Te = 9°C TC voor elk type binnenunit, afhankelijk van de omgevingstemperatuur van de binnenunit 29/19 °CDB/°CNB

Как пользоваться этой таблицей:

Производительность: Суммарная мощность для режима высокой производительности по сухому теплу = Суммарная мощность по таблице обычной мощности X коэффициент TC.

SHF: SHF для режима высокой производительности по сухому теплу =

SHF по таблице обычной мощности X коэффициент SHF.

Если SHF больше 1, принять SHF равным 1

При выборе блоков для смешанных установок (внутренние блоки RA DX + внутренние блоки VRV DX):

- Корректировка C_i соответствует значению коэффициента TC Te = 9°C для каждого типа внутренних блоков, в зависимости от расчетной температуры в помещении X/Y °C сух.т./°C вл.т.
- Корректировка C_i соответствует значению коэффициента TC Te = 9°C для каждого типа внутренних блоков, в зависимости от температуры в помещении 29/19 °C сух.т./°C вл.т.

Bu tablo nasıl kullanılır:

Kapasite: Yüksek hassasiyet modu toplam kapasitesi = Normal kapasite tablosu için toplam kapasite X TC oranı.

SHF: Yüksek hassasiyet modu için SHF = Normal kapasite tablosu için SHF X SHF oranı.

SHF, 1'den büyük ise SHF "1"dir

Karışık kombinasyonlar (RA DX iç üniteler + VRV DX iç üniteler) için ünite seçimi yapılırken,

- C_i düzeltme faktörü, X/Y °C KT/°C YT iç ortam tasarım basıncına bağlı olarak her bir iç ünite tipi için Te = 9°C TC oranına karşılık gelir
- C_i düzeltme faktörü, 29/19 °C KT/°C YT iç ortam tasarım basıncına bağlı olarak her bir iç ünite tipi için Te = 9°C TC oranına karşılık gelir

6 Capacity tables

6 - 3 Capacity Correction Factor

6

FXSQ-P

		Capacity correction factor Te = 11 °C						
	Indoor air temperature	14.0 °CWB	16.0 °CWB	18.0 °CWB	19.0 °CWB	20.0 °CWB	22.0 °CWB	24.0 °CWB
		20.0 °CDB	23.0 °CDB	26.0 °CDB	27.0 °CDB	28.0 °CDB	30.0 °CDB	32.0 °CDB
FXSQ20P	TC	0.558	0.573	0.582	0.619	0.651	0.704	0.747
	SHF	1.112	1.202	1.269	1.211	1.167	1.111	1.099
FXSQ25P	TC	0.548	0.569	0.597	0.637	0.671	0.724	0.759
	SHF	1.130	1.216	1.246	1.191	1.151	1.102	1.093
FXSQ32P	TC	0.548	0.571	0.599	0.639	0.673	0.724	0.759
	SHF	1.126	1.211	1.244	1.190	1.149	1.102	1.093
FXSQ40P	TC	0.551	0.578	0.615	0.654	0.686	0.729	0.764
	SHF	1.124	1.205	1.229	1.178	1.143	1.102	1.089
FXSQ50P	TC	0.551	0.578	0.615	0.654	0.686	0.729	0.764
	SHF	1.124	1.205	1.229	1.178	1.143	1.102	1.089
FXSQ63P	TC	0.545	0.564	0.600	0.639	0.672	0.725	0.762
	SHF	1.145	1.231	1.242	1.188	1.150	1.106	1.091
FXSQ80P	TC	0.548	0.573	0.608	0.648	0.681	0.727	0.762
	SHF	1.128	1.211	1.235	1.183	1.145	1.102	1.091
FXSQ100P	TC	0.546	0.566	0.600	0.639	0.673	0.725	0.761
	SHF	1.140	1.226	1.243	1.188	1.150	1.105	1.092
FXSQ125P	TC	0.548	0.573	0.607	0.646	0.680	0.726	0.761
	SHF	1.126	1.210	1.237	1.184	1.145	1.102	1.091
FXSQ140P	TC	0.552	0.582	0.613	0.653	0.684	0.727	0.761
	SHF	1.115	1.196	1.236	1.184	1.147	1.106	1.099

3D079901

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

How to use this table - So verwenden Sie diese Tabelle - Πώς θα χρησιμοποιήσετε αυτό τον πίνακα - Cómo utilizar esta tabla - Utilisation de ce tableau - Come utilizzare questa tabella - Gebruik van deze tabel - Как пользоваться этой таблицей - Bu tablo nasıl kullanılmalı?:

- Capacity : Total capacity for High sensible mode = Total capacity for normal capacity table X TC ratio.

Leistung: Gesamtleistung für hochfühlbaren Leistungsmodus = Gesamtleistung für normale Leistungstabelle x GL-Verhältnis.

Απόδοση: Συνολική απόδοση για τη λειτουργία υψηλής ευαισθησίας = Συνολική απόδοση για τον πίνακα κανονικών αποδόσεων X αναλογία TC

Capacidad: Capacidad total para el modo de alta sensibilidad = Capacidad total para la tabla de capacidad normal X relación TC.

Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.

Capacità: Capacità totale per modalità ad alta capacità sensibile = Capacità totale per tabella capacità normali X rapporto TC.

Capaciteit: totale capaciteit in modus grote ("High") gevoeligheid = totale capaciteit uit de tabel met normale capaciteiten x TC-ratio.

Производительность: Общая производительность для режима с высоким коэфф. оцутимого охлаждения = Общая производительность для нормального режима, таблица X коэфф. TC.

Kapasite: Yüksek algı modu için toplam kapasite = Normal kapasite tablosundaki toplam kapasite değeri x TC oranı.

- Sensible capacity (SHF): SHF for High sensible mode = SHF for normal capacity table X SHF ratio .

Fühlbare Leistung (SHF): SHF für hochfühlbaren Leistungsmodus = SHF für normale Leistungstabelle x SHF-Verhältnis.

Αισθητή απόδοση (SHF): SHF για λειτουργία υψηλής ευαισθησίας = SHF για πίνακα κανονικών αποδόσεων X αναλογία SHF .

Capacidad sensible (FCS): SHF para el modo de alta sensibilidad = SHF para la tabla de capacidad normal X relación SHF.

Capacité sensible (FCS (Facteur de chaleur sensible) – en anglais : SHF) : FCS pour le mode sensibilité élevée (« High ») = FCS du tableau des capacités normales x rapport FCS.

Capacità sensibile (SHF): SHF per modalità ad alta capacità sensibile = SHF per tabella capacità normali X rapporto SHF.

Gevoeligheidscoëfficiënt (WGF (warmtegevoelsfactor)– in het Engels "SHF"): WGF voor de modus grote ("High") gevoeligheid = WGF uit de tabel met normale capaciteiten x WGF-ratio.

Ощутимая производительность (SHF): SHF для режима с высоким коэфф. оцутимого охлаждения = SHF для нормального режима, таблица X коэфф. SHF.

Algılanabilir kapasite (SHF): Yüksek algı modu için SHF = Normal kapasite tablosundaki SHF değeri x SHF oranı.


- In case of SHF is bigger than 1, SHF is "1"
Für den Fall, dass SHF größer als 1 ist, wird SHF als "1" angenommen.
Σε περίπτωση που το SHF είναι μεγαλύτερο από 1, το SHF είναι "1"
En caso de que SHF sea superior a 1, SHF equivale a "1"
Si FCS est supérieur à 1, utilisez « 1 » pour FCS.
Qualora il valore SHF sia maggiore di 1, SHF è "1"
Indien WGF groter is dan 1, neem dan "1" voor WGF.
Если SHF больше 1, то SHF равен "1"
SHF değeri 1'den büyükse, SHF değeri "1" kabul edilmelidir

7 Dimensional drawings

7 - 1 Dimensional Drawings


7

FXSQ20-32P

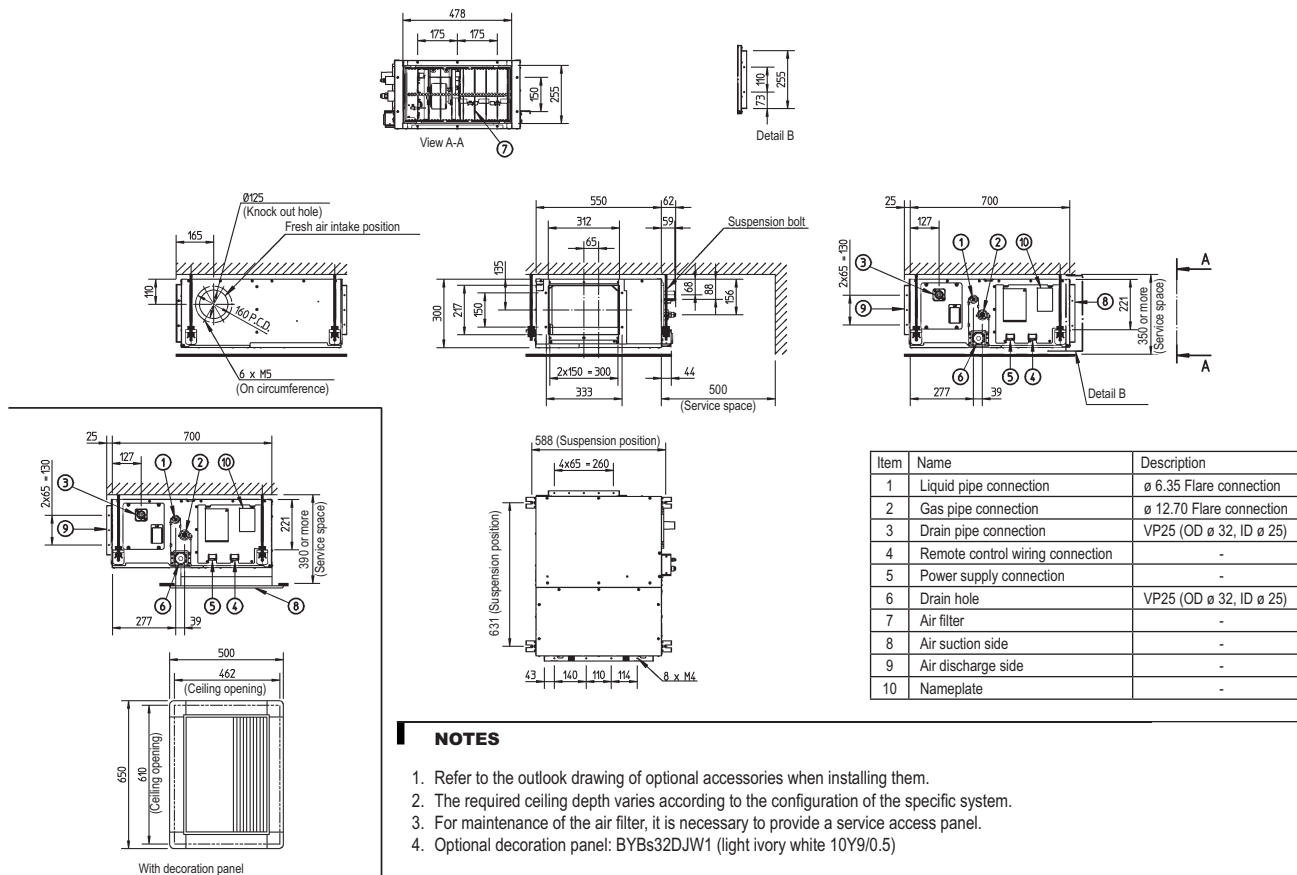

3TW31184-1B

FXSQ40-50P

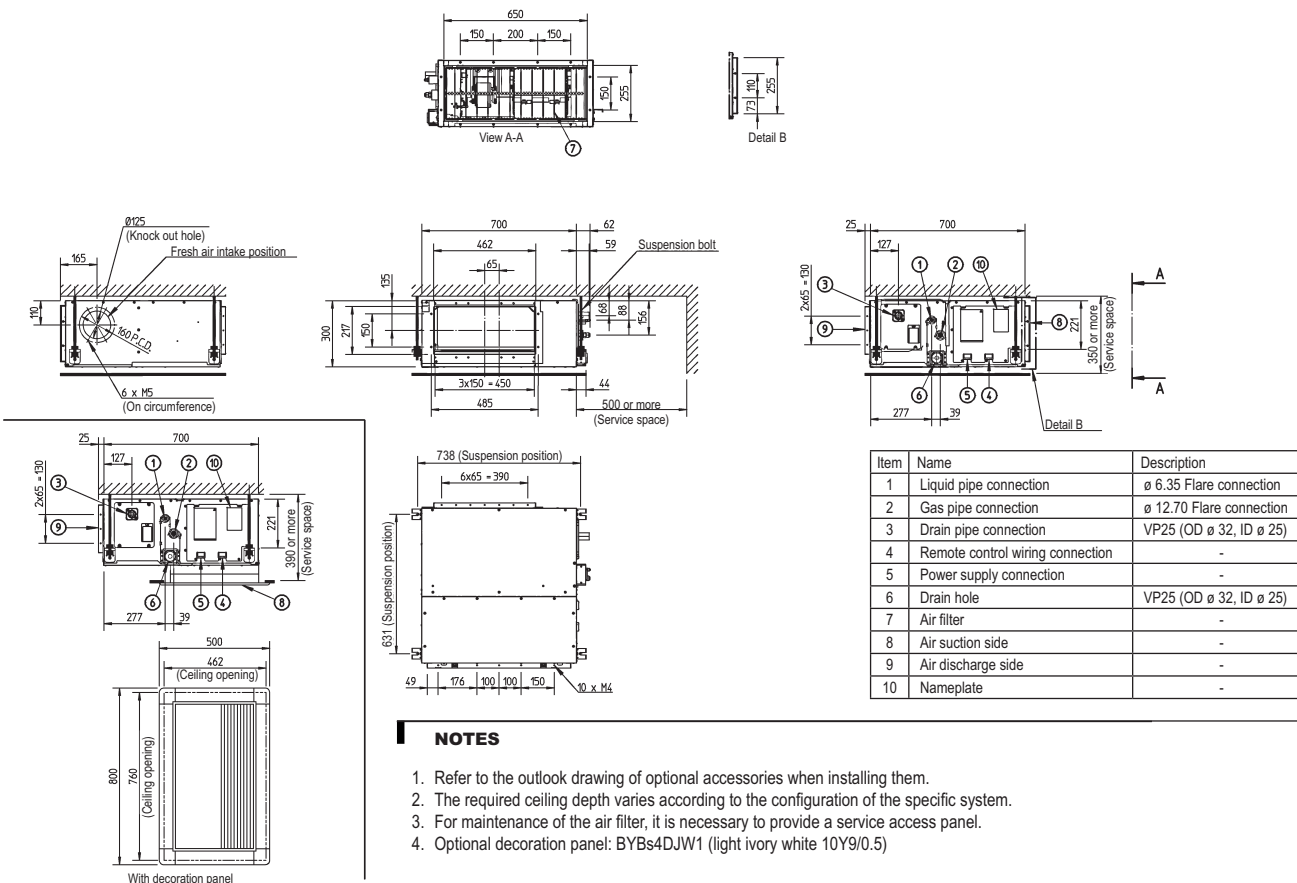


3TW31214-1B

7 Dimensional drawings

7 - 1 Dimensional Drawings

FXSQ63-80P

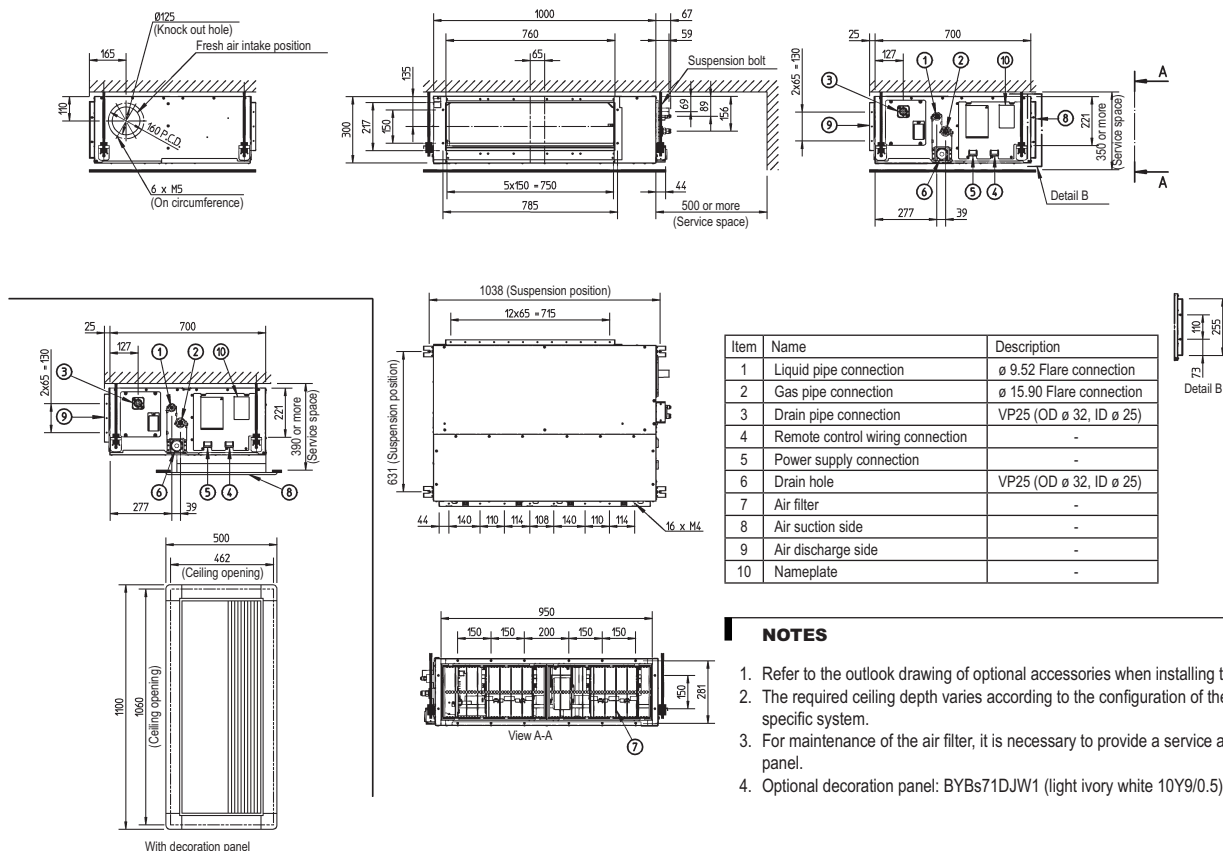


NOTES

1. Refer to the outlook drawing of optional accessories when installing them.
2. The required ceiling depth varies according to the configuration of the specific system.
3. For maintenance of the air filter, it is necessary to provide a service access panel.
4. Optional decoration panel: BYBs71DJW1 (light ivory white 10Y9/0.5)

3TW31234-1B

FXSQ100-140P

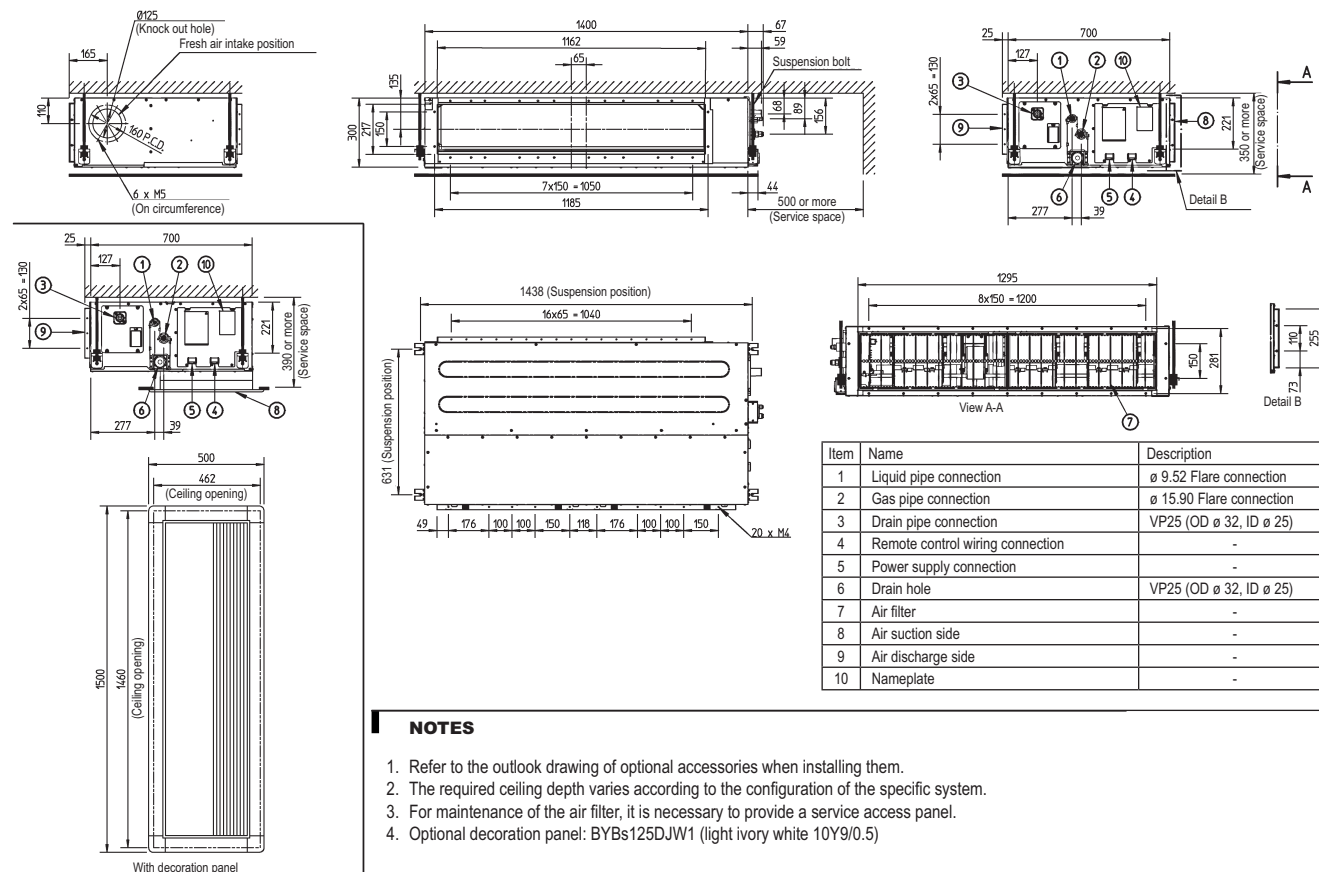

NOTES

1. Refer to the outlook drawing of optional accessories when installing them.
2. The required ceiling depth varies according to the configuration of the specific system.
3. For maintenance of the air filter, it is necessary to provide a service access panel.
4. Optional decoration panel: BYBs125DJW1 (light ivory white 10Y9/0.5)



3TW31254-1B

8 Centre of gravity

8 - 1 Centre of Gravity

8

FXSQ-P

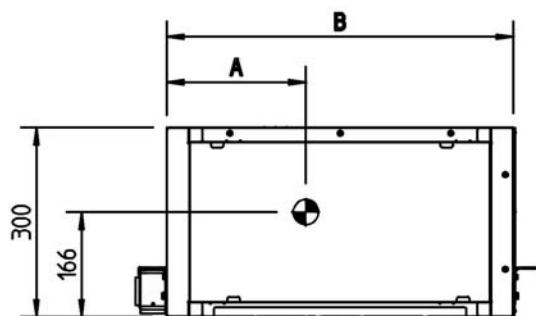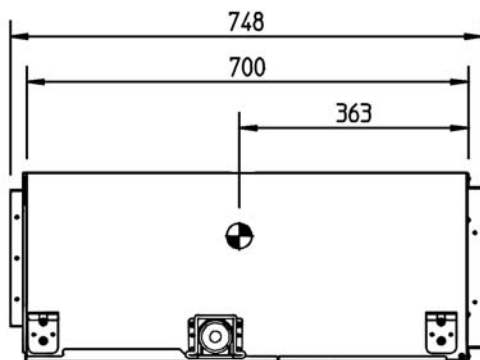


Model	A	B
FXSQ20~32	220	550
FXSQ40,50	283	700
FXSQ63,80	441	1000
FXSQ100,125,140	619	1400

4TW31189-1B

9 Piping diagrams

9 - 1 Piping Diagrams

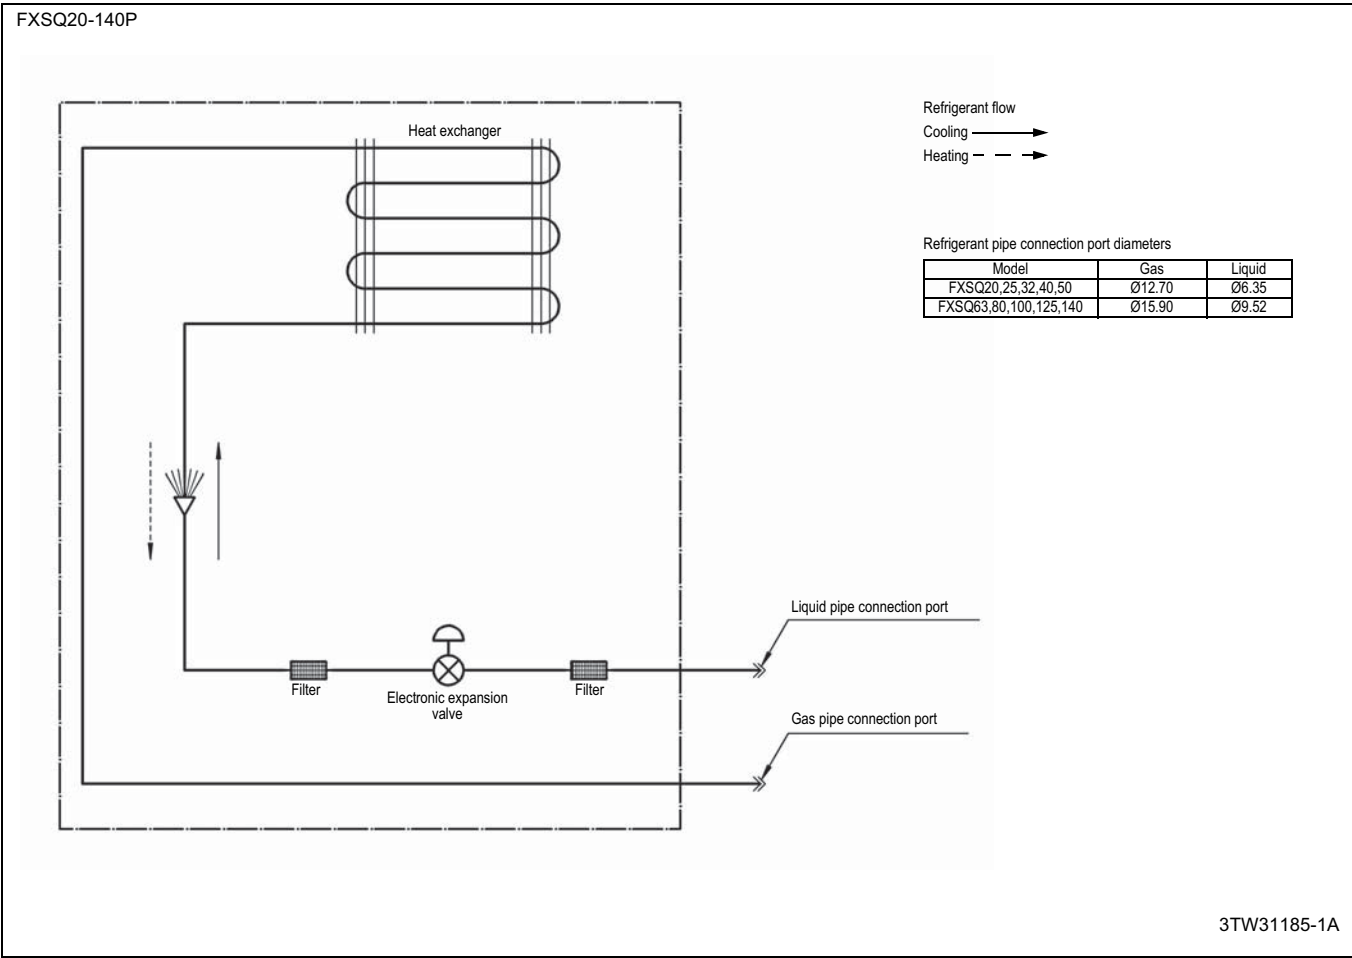


10 Wiring diagrams

10 - 1 Wiring Diagrams - Single Phase

10

FXSQ20-50P

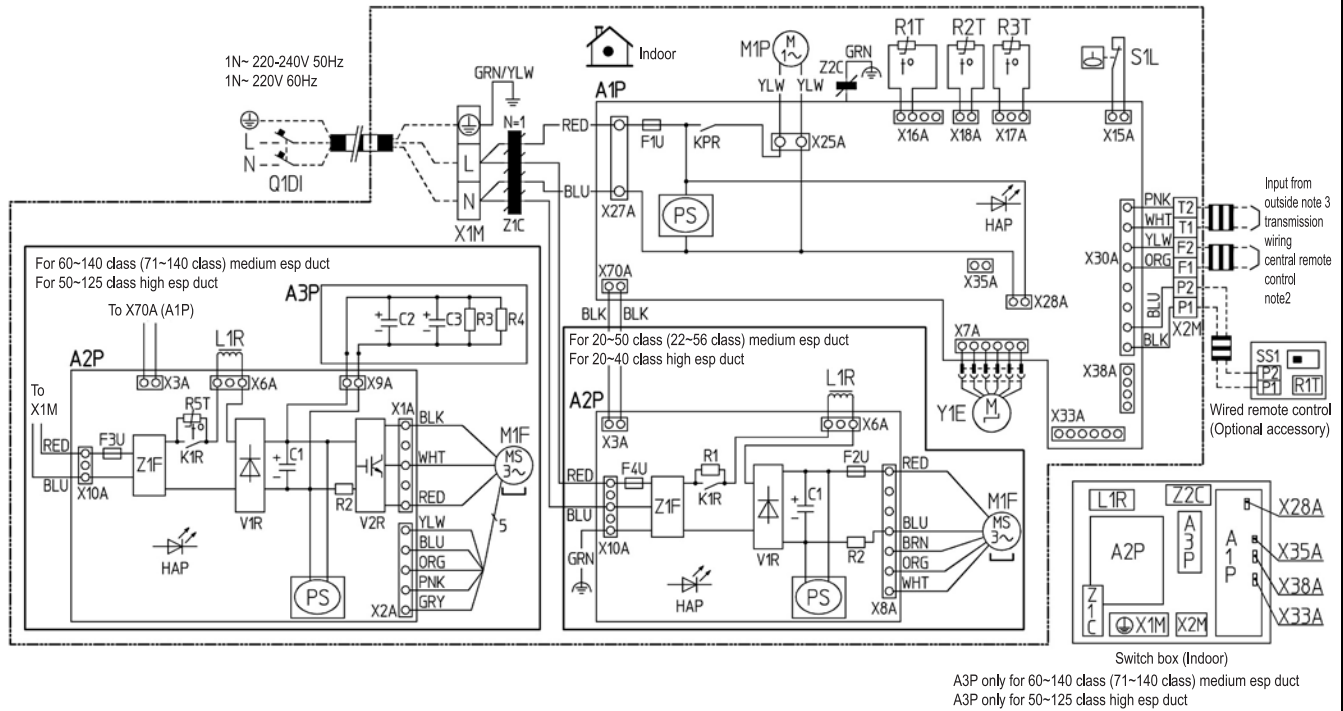

Indoor Unit			
A1P	Printed circuit board	R2T	Thermistor (Liquid)
A2P	Printed circuit board (Fan)	R3T	Thermistor (Gas)
A3P	Printed circuit board (Capacitor)	R5T	Thermistor NTC (Current limiting)
C1,C2,C3	Capacitor	S1L	Float switch
F1U	Fuse (T, 3.15A, 250V)	V1R	Diode bridge
F2U	Fuse (T, 5A, 250V)	V2R	Power module
F3U	Fuse (T, 6.3A, 250V)	X1M	Terminal strip (Power supply)
F4U	Fuse (T, 6.3A, 250V)	X2M	Terminal strip (Control)
HAP	Light emitting diode (Service monitor-green)	Y1E	Electronic expansion valve
KPR, K1R	Magnetic relay	Z1C, Z2C	Noise filter (Ferrite core)
L1R	Reactor	Z1F	Noise filter
M1F	Motor fan	Connector optional accessory	
M1P	Motor (Drain pump)	X28A	Connector (Power supply for wiring)
PS	Switching power supply	X33A	Connector (For wiring)
Q1DI	Earth leak detector	X35A	Connector (Adapter)
R1	Resistor (Current limiting)	X38A	Connector (For wiring)
R2	Current sensing device	Wired remote control	
R3, R4	Resistor (Electric discharge)	R1T	Thermistor (Air)
R1T	Thermistor (Suction air)	SS1	Selector switch (Main/sub)

: Field wiring
 : Live
 : Neutral
 : Connector
 : Wire clamp
 : Protective earth (screw)

Colors:

BLK	Black	PNK	Pink
BLU	Blue	RED	Red
BRN	Brown	WHT	White
GRY	Grey	YLW	Yellow
ORG	Orange	GRN	Green

2TW32656-1

NOTES


- Use copper conductors only.
- When using the central remote control, see manual for connection to the unit.
- When connecting the input wires from outside, forced 'off' or 'on/off' operation can be selected by the remote control. See installation manual for more details.

10 Wiring diagrams

10 - 1 Wiring Diagrams - Single Phase

FXSQ63-140P

- Indoor unit
- A1P : Printed circuit board
 - A2P : Printed circuit board (Fan)
 - A3P : Printed circuit board (Capacitor)
 - C1,C2,C3 : Capacitor
 - F1U : Fuse (T, 3.15A, 250V)
 - F2U : Fuse (T, 5A, 250V)
 - F3U : Fuse (T, 6.3A, 250V)
 - F4U : Fuse (T, 6.3A, 250V)
 - HAP : Light emitting diode (Service monitor-green)
 - KPRX1R : Magnetic relay
 - L1R : Reactor
 - M1P : Motor (Fan)
 - M1P : Motor (Drain pump)
 - PS : Switching power supply
 - Q1D1 : Earth leak detector
 - R1 : Resistor (current limiting)
 - R2 : Current sensing device
 - R3,R4 : Resistor (Electric discharge)
 - R1T : Thermistor (Suction air)
 - R2T : Thermistor (liquid)
 - R3T : Thermistor (Gas)
 - R5T : Thermistor NTC (current limiting)
 - S1L : Float switch
 - V1R : Diode bridge
 - V2R : Power module
 - X1M : Terminal strip (Power supply)
 - X2M : Terminal strip (control)
 - Y1E : Electronic expansion valve
 - Z1C,Z2C,Z3C : Noise filter (ferrite core)
 - Z1F : Noise filter
- Connector optional accessory
- X28A : Connector (Power supply for wiring)
 - X33A : Connector (for wiring)
 - X35A : Connector (Adapter)
 - X38A : Connector (for wiring)
- Wired remote controller
- R1T : Thermistor (air)
 - SS1 : Selector switch (main/sub)

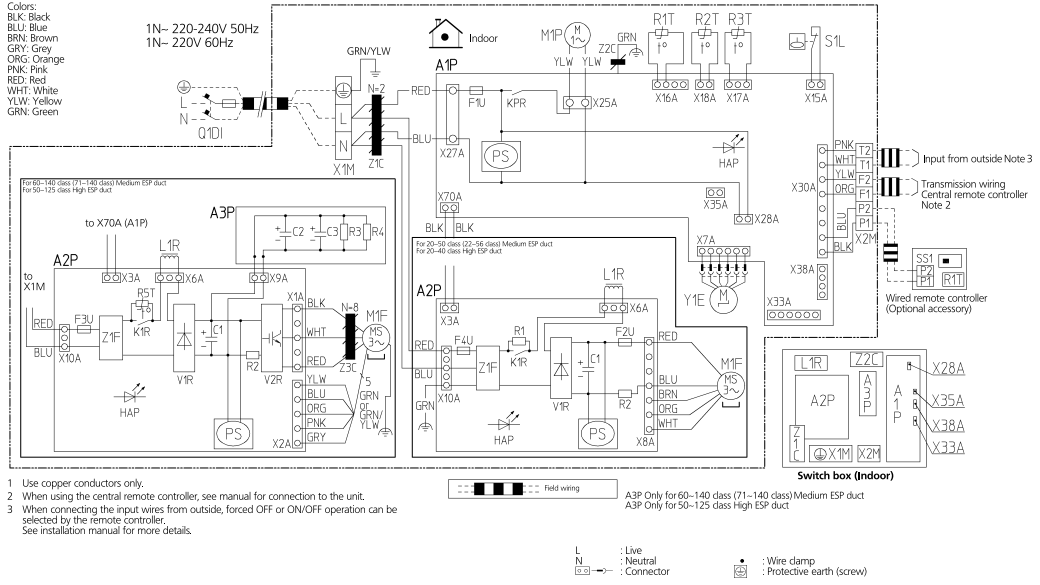


2TW32656-2

11 Sound data


11 - 1 Sound Power Spectrum

11

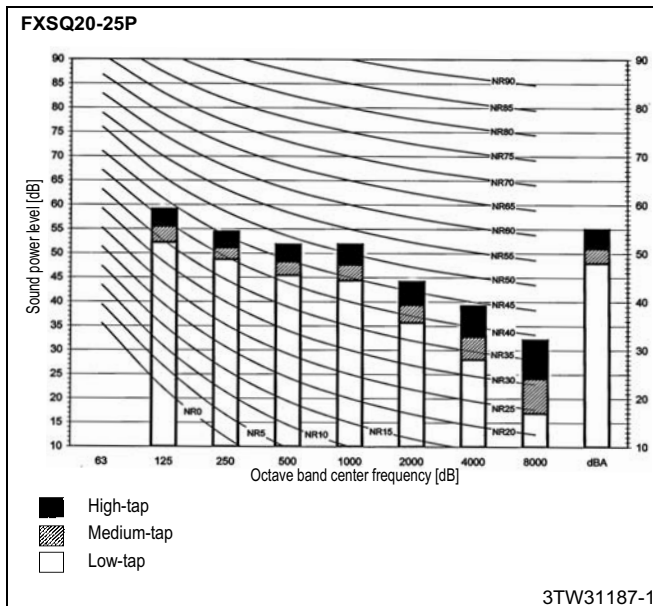


Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity 0dB = $10E-6\mu W/m^2$
- 3 Measured according to ISO 3744

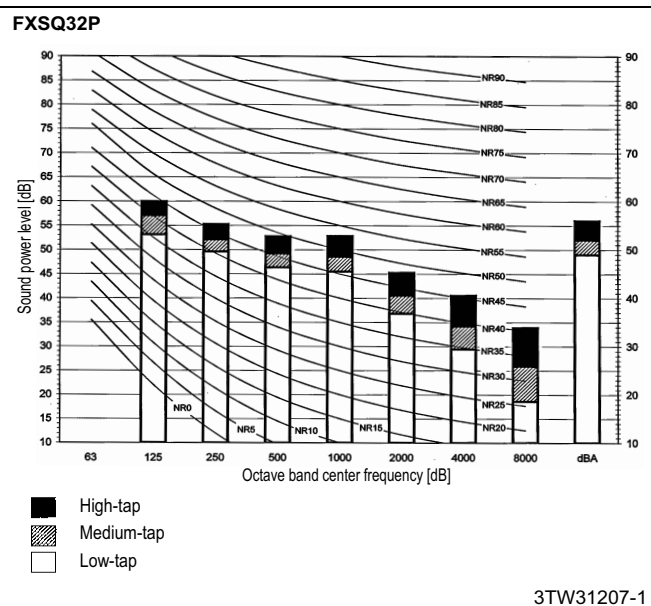


Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity 0dB = $10E-6\mu W/m^2$
- 3 Measured according to ISO 3744

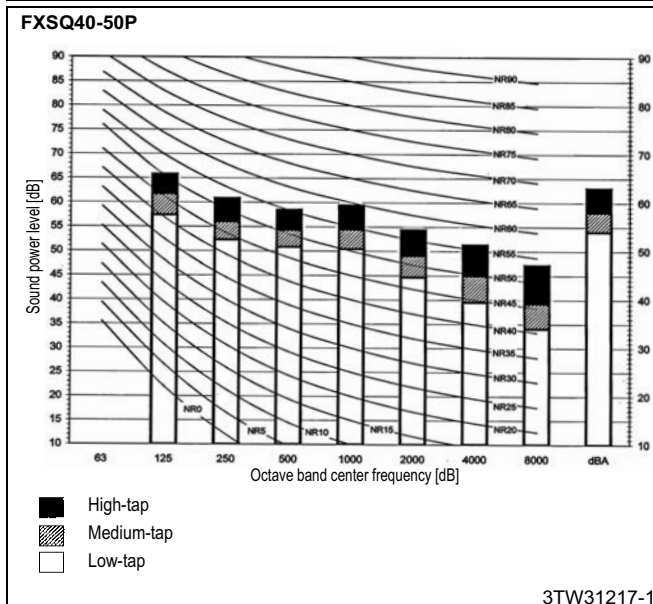

Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity 0dB = $10E-6\mu W/m^2$
- 3 Measured according to ISO 3744

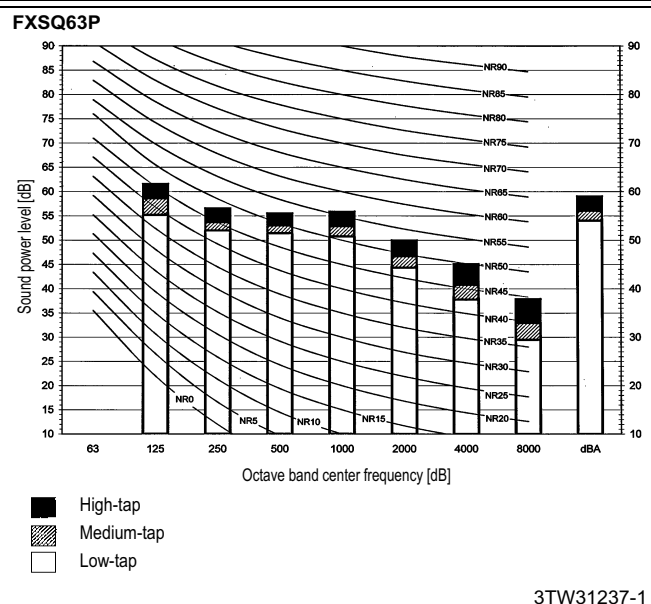


Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity 0dB = $10E-6\mu W/m^2$
- 3 Measured according to ISO 3744

11 Sound data

11 - 1 Sound Power Spectrum

FXSQ80P

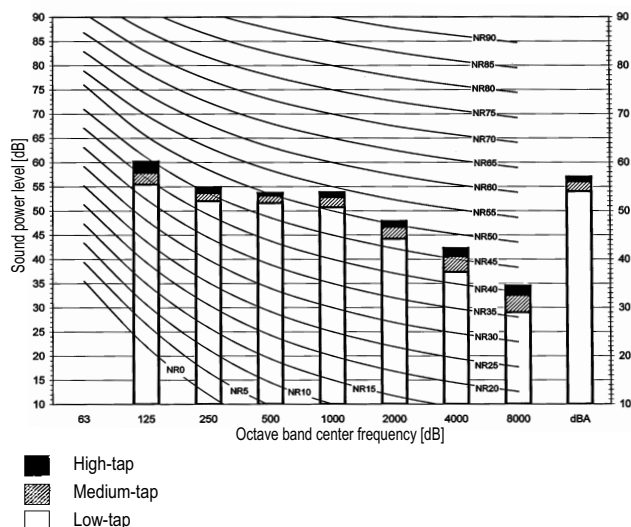


3TW31247-1

Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity $0\text{dB} = 10\text{E-}6\mu\text{W/m}^2$
- 3 Measured according to ISO 3744

FXSQ100P

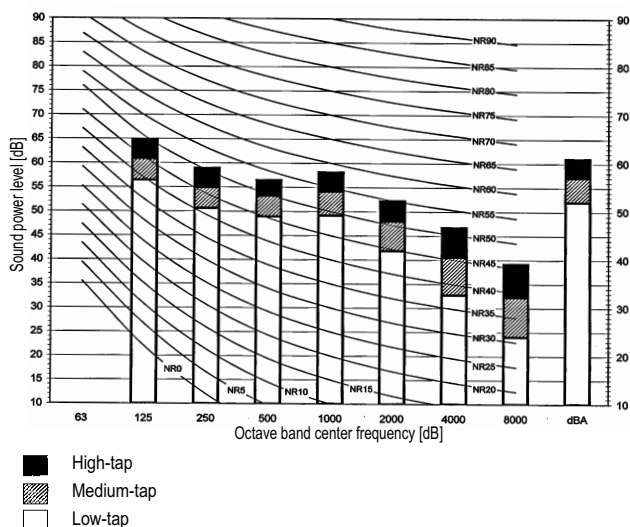


3TW31257-1

Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity $0\text{dB} = 10\text{E-}6\mu\text{W/m}^2$
- 3 Measured according to ISO 3744

FXSQ125P

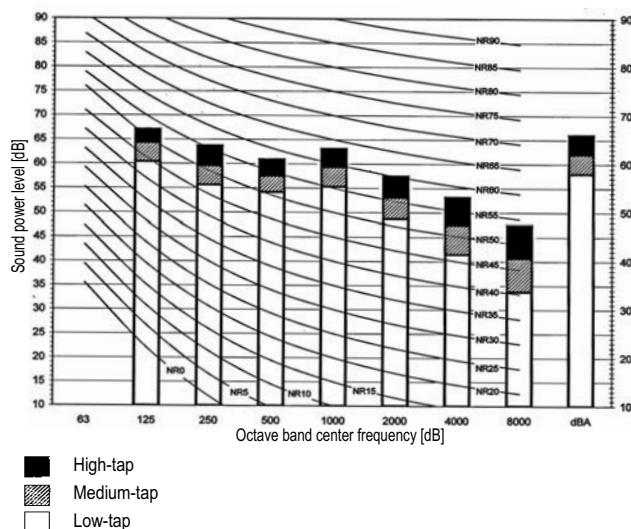


3TW31267-1

Notes

- 1 dBA = A-weighted sound power level. (A-scale according to IEC)
- 2 Reference acoustic intensity $0\text{dB} = 10\text{E-}6\mu\text{W/m}^2$
- 3 Measured according to ISO 3744

FXSQ140P

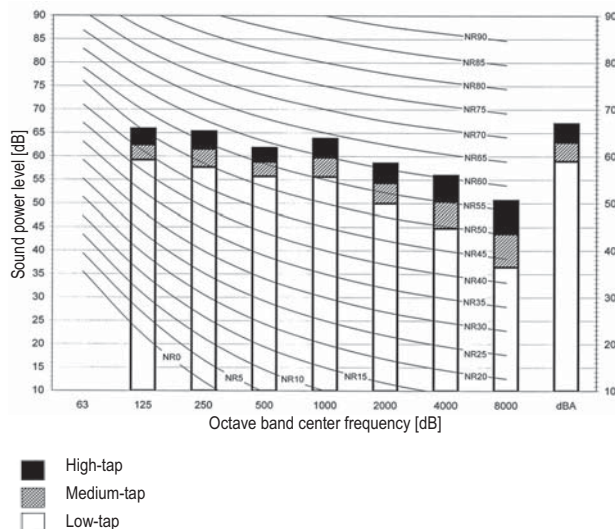

3TW32747-1A





NOTES

1. dBA = A-weighted sound power level. (A-scale according to IEC)
2. Reference acoustic intensity $0\text{dB} = 10\text{E-}6\mu\text{W/m}^2$
3. Measured according to ISO 3744

11 Sound data





11 - 2 Sound Pressure Spectrum

11

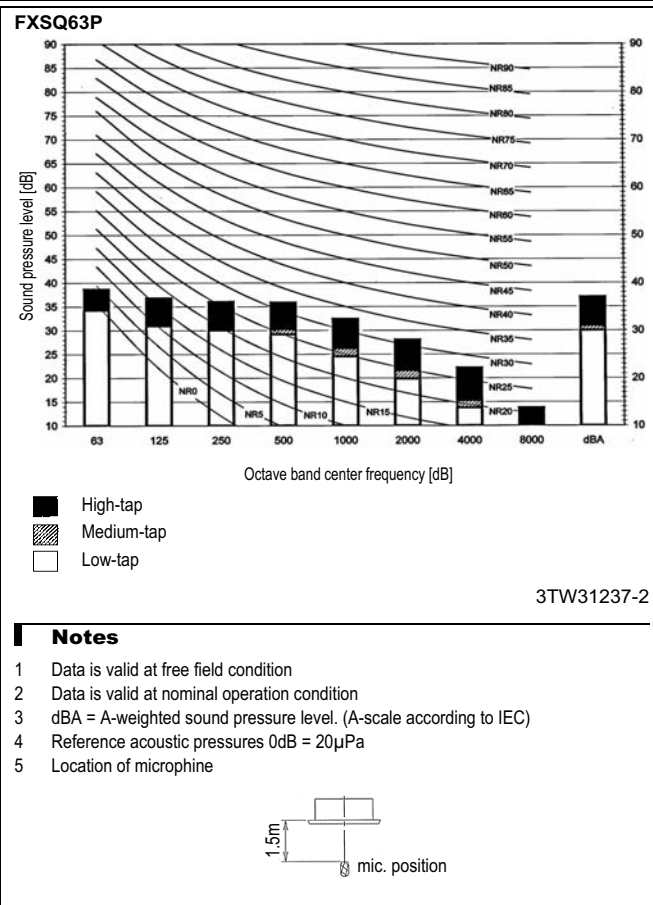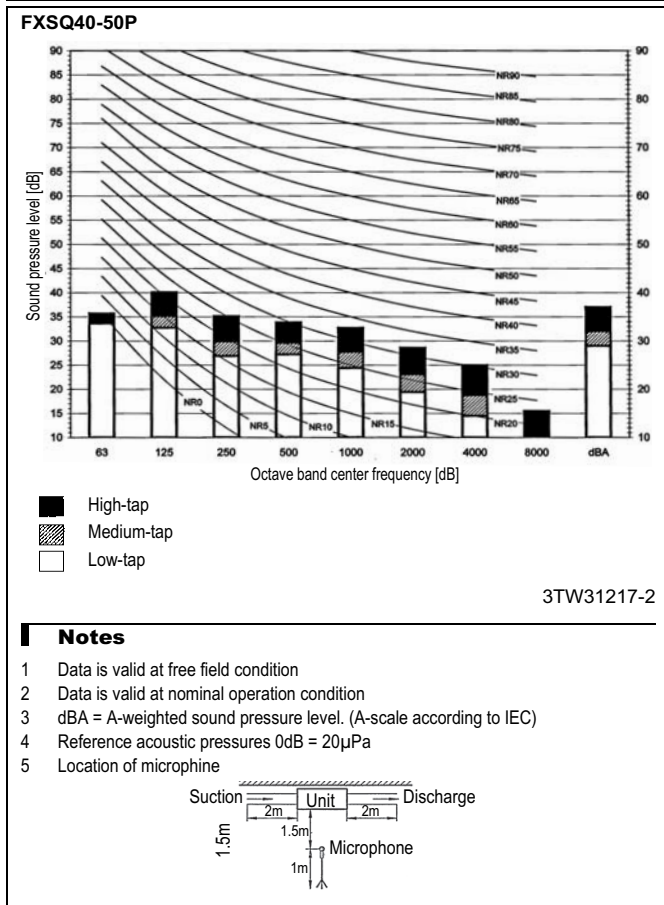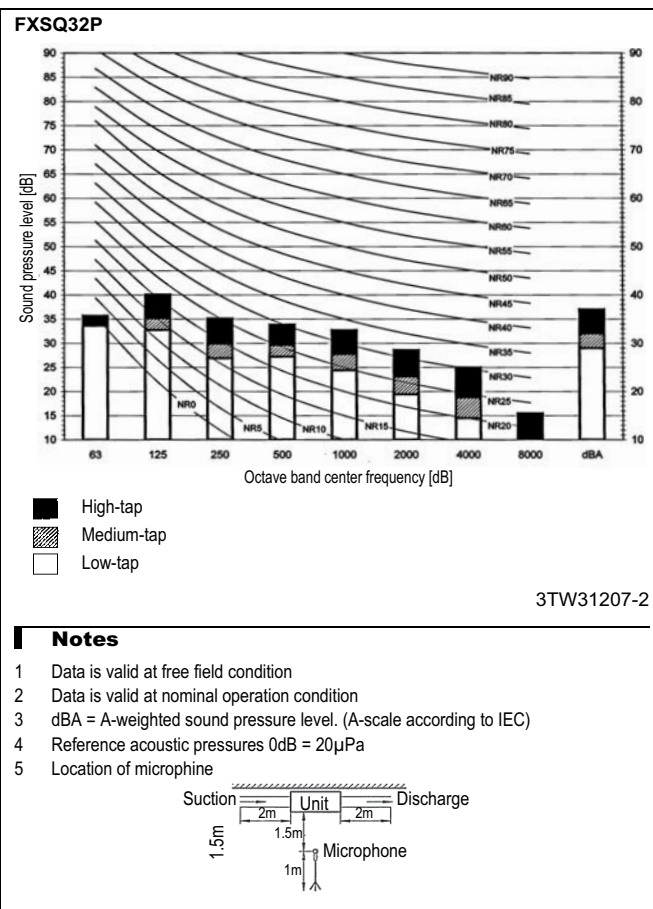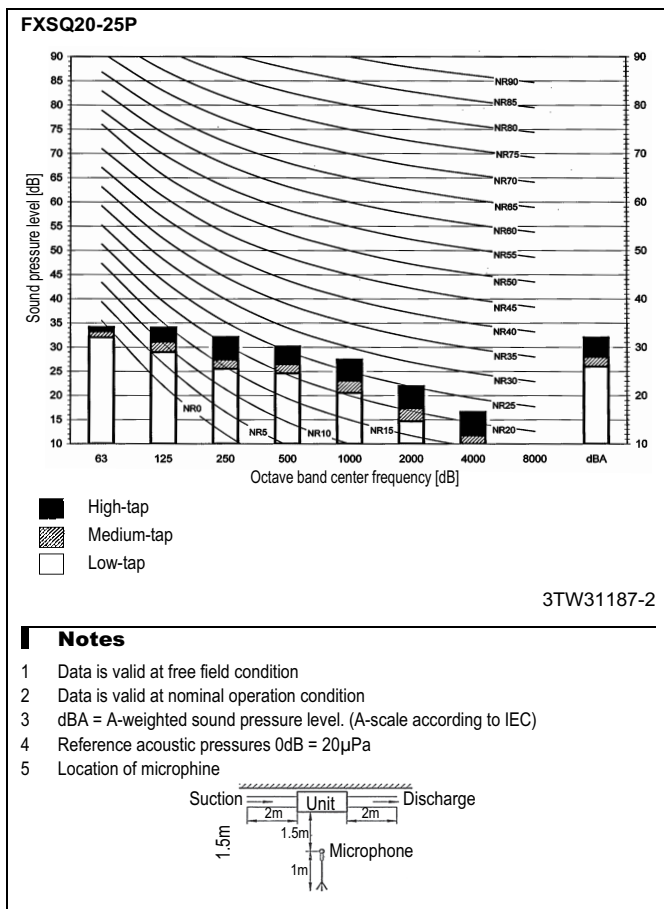

11 Sound data

11 - 2 Sound Pressure Spectrum

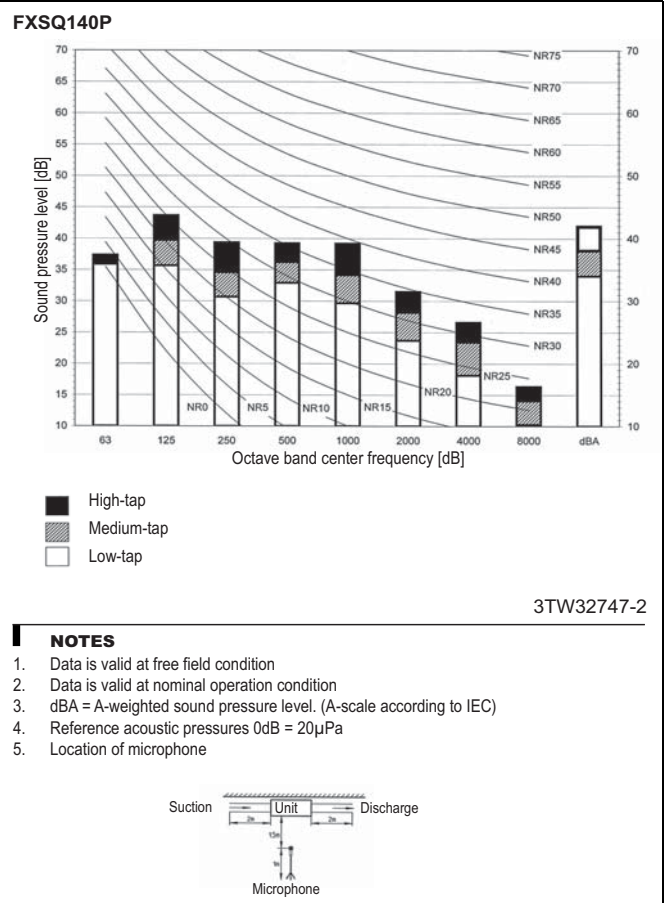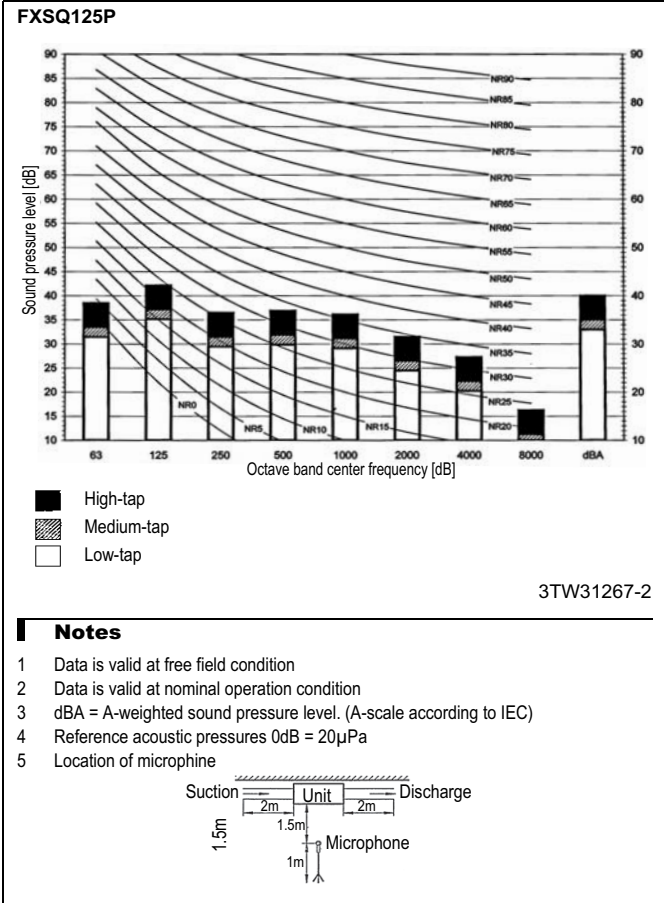
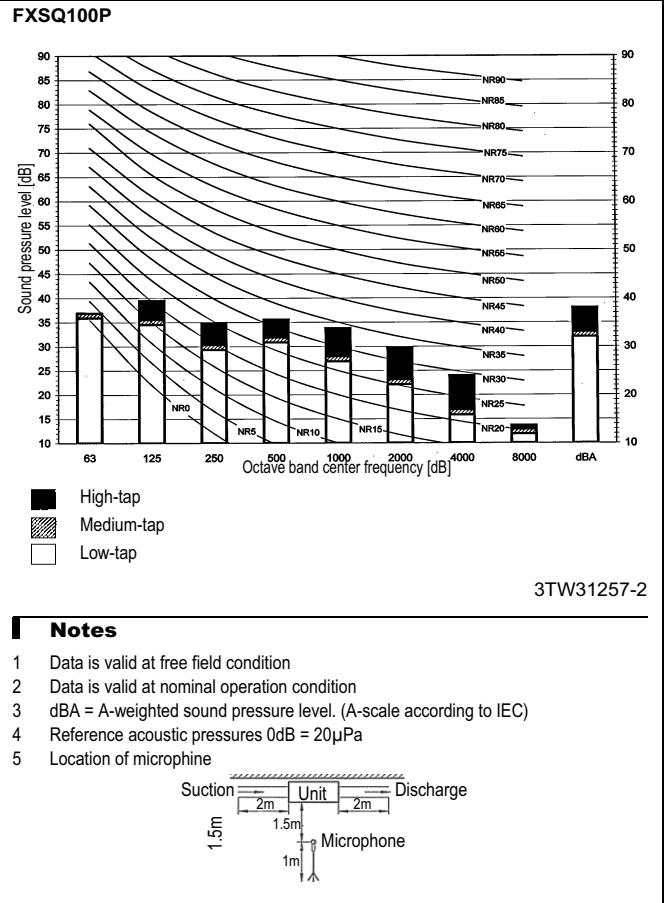
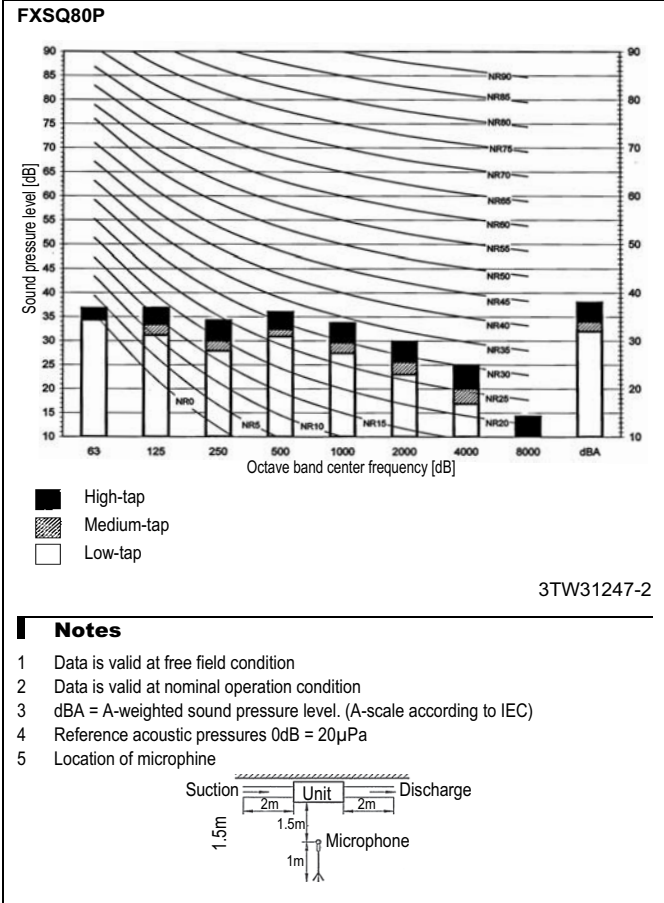


12 Fan characteristics

12 - 1 Fan Characteristics

12

FXSQ20-25P

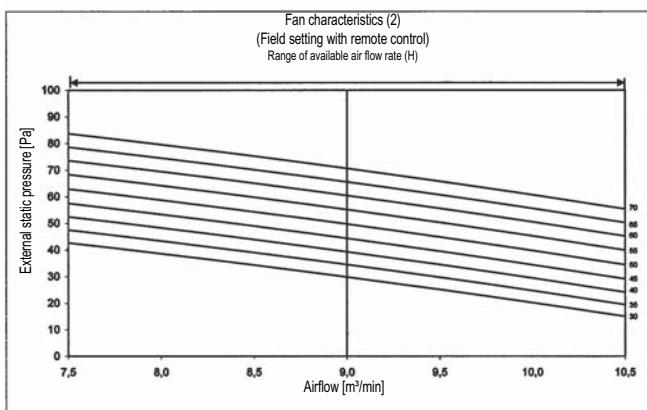
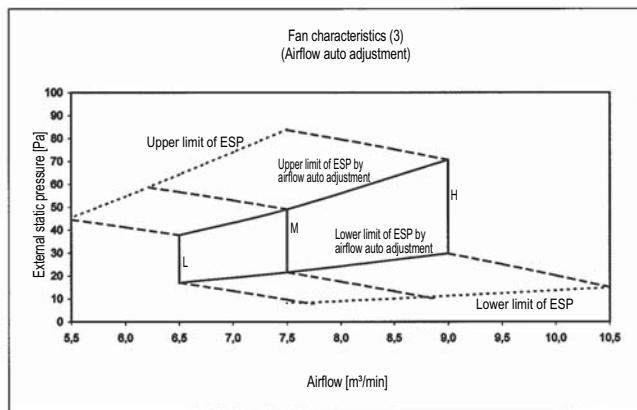
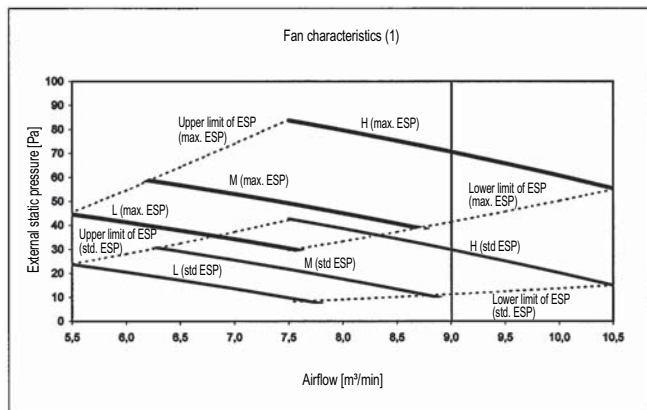


NOTES

- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31188-1

FXSQ32P

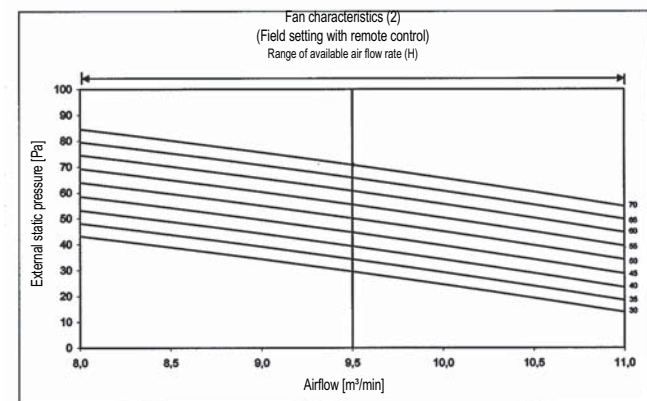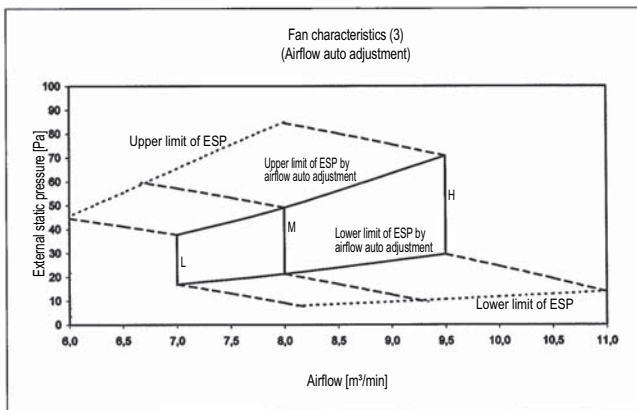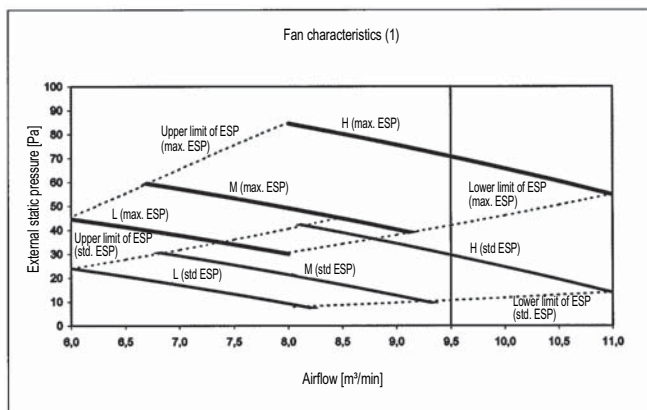

NOTES




- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31208-1

12 Fan characteristics

12 - 1 Fan Characteristics

FXSQ40-50

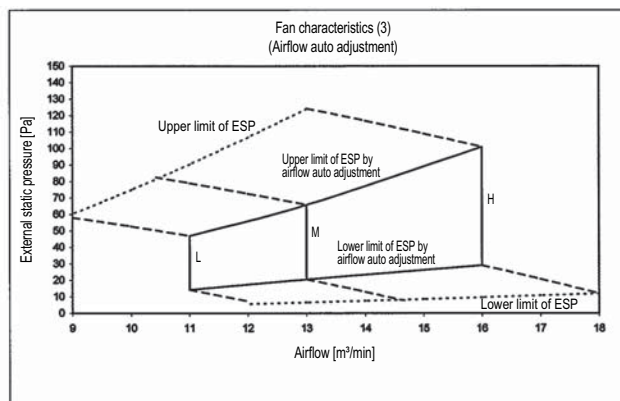
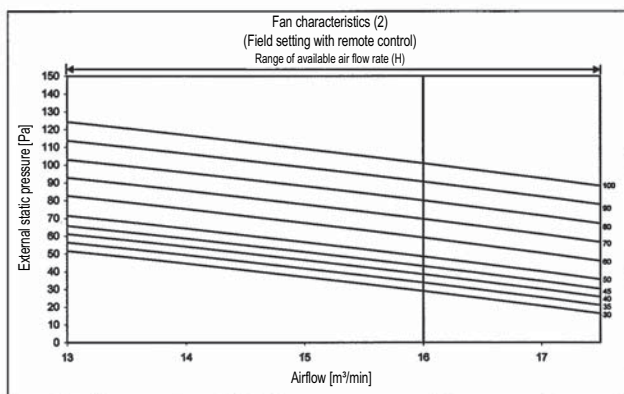
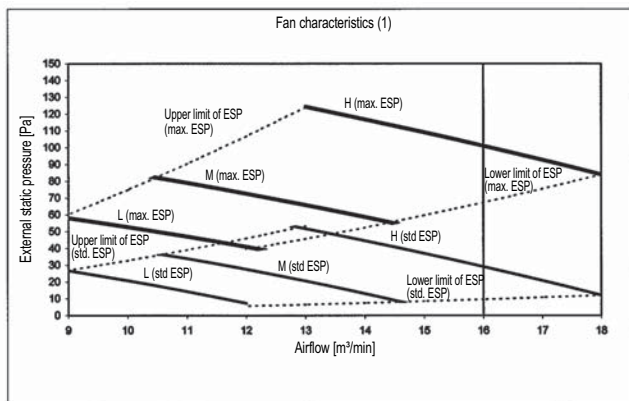


NOTES

- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31218-1

FXSQ63P

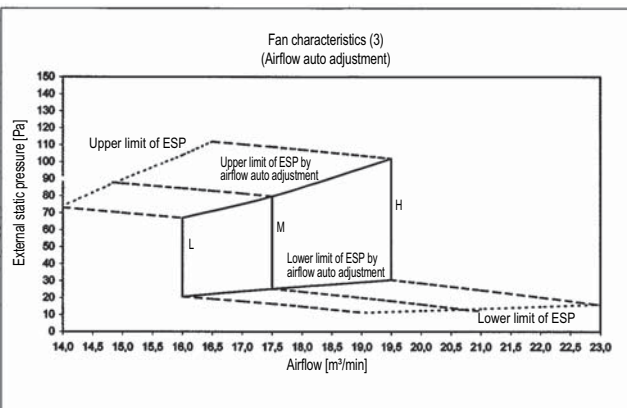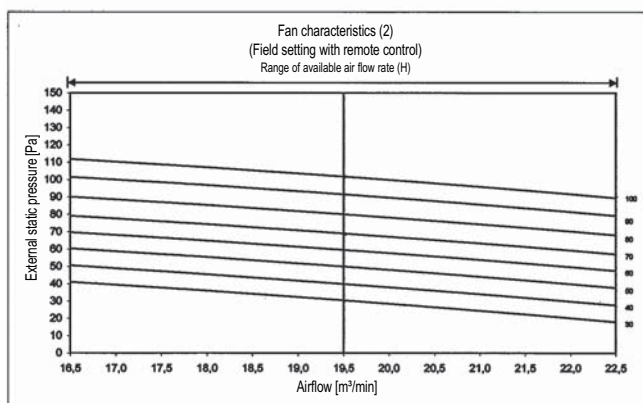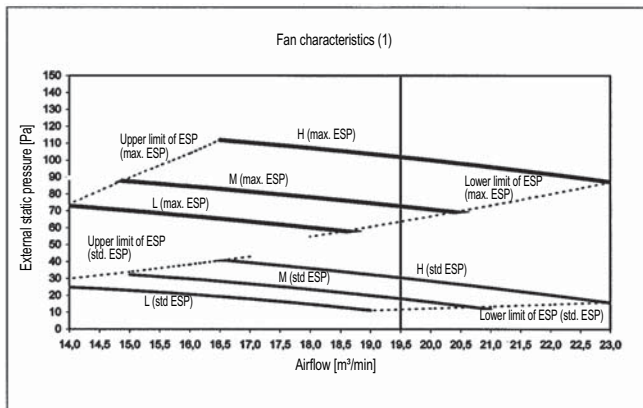

NOTES

- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure




3TW31238-1

12 Fan characteristics

12 - 1 Fan Characteristics

12

FXSQ80P7

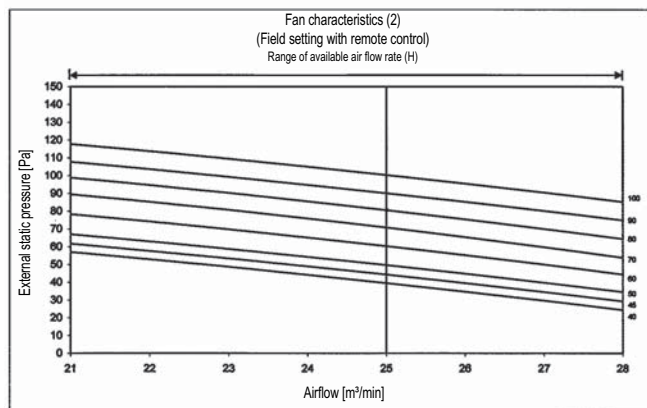
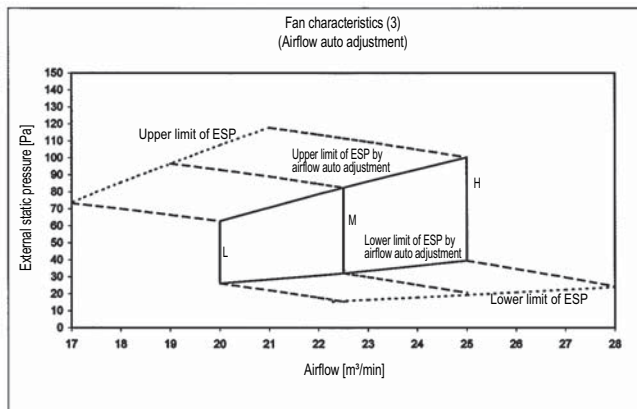
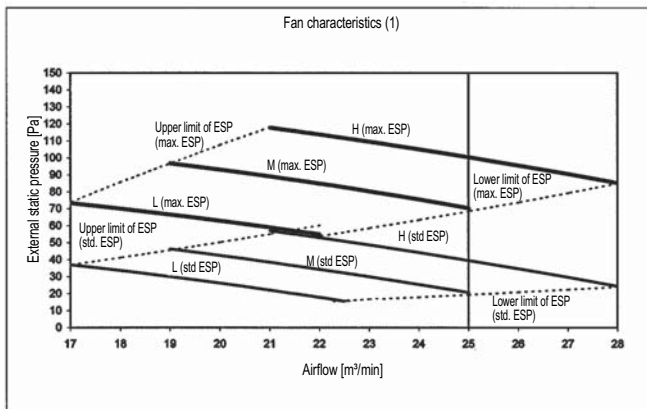


NOTES

- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31248-1

FXSQ100P

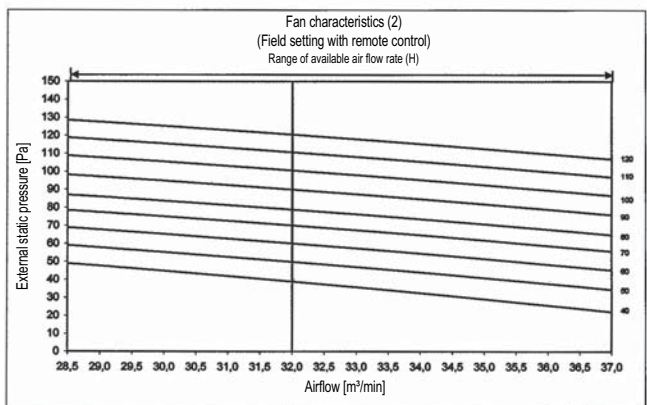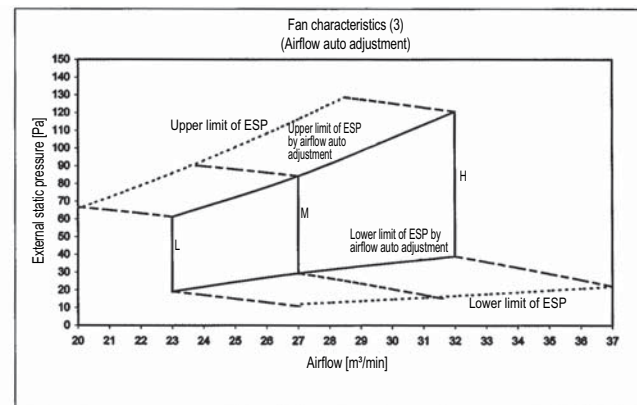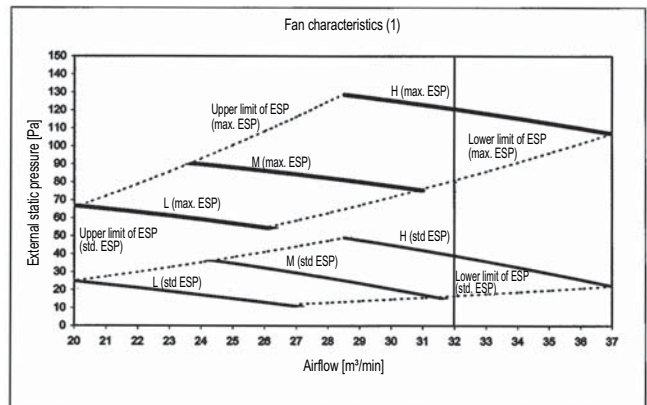

NOTES




- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31258-1

12 Fan characteristics

12 - 1 Fan Characteristics

FXSQ125P

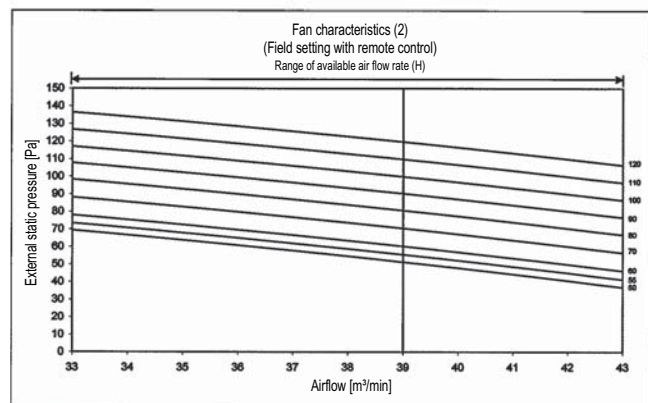
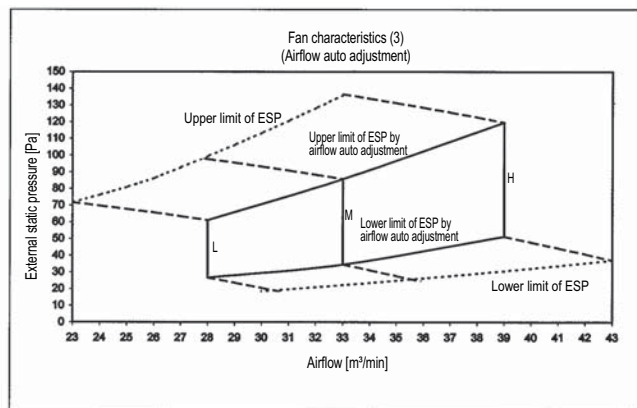
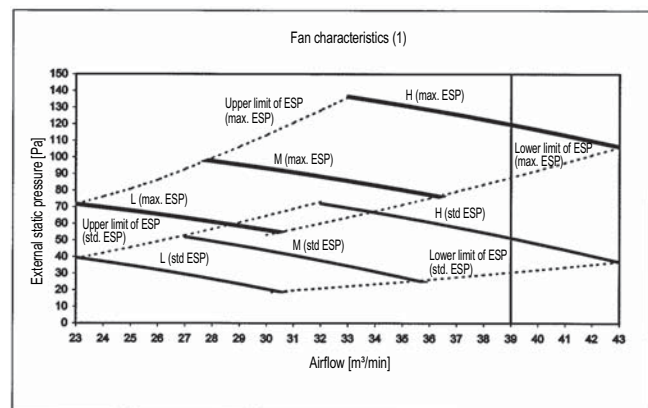


NOTES

- 1 Fan characteristics as shown ar in "fan only" mode.
- 2 ESP: External static pressure

3TW31268-1

FXSQ140P

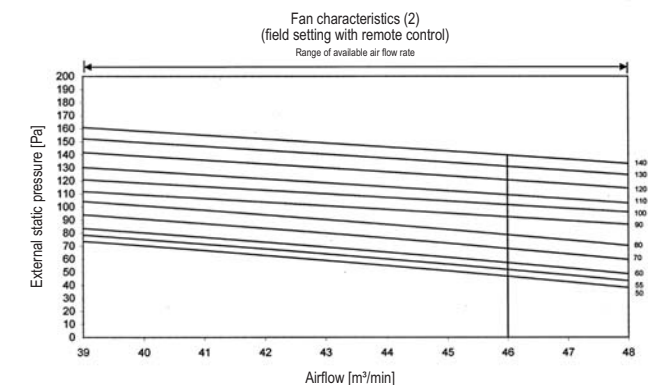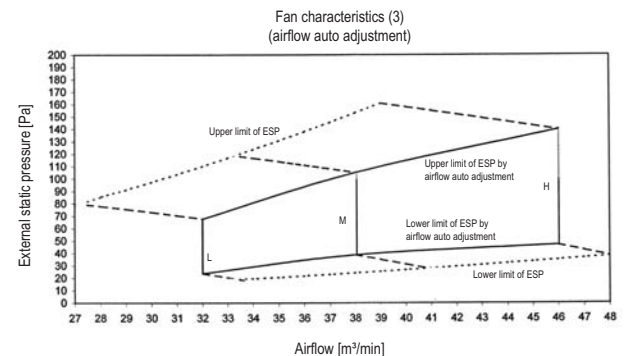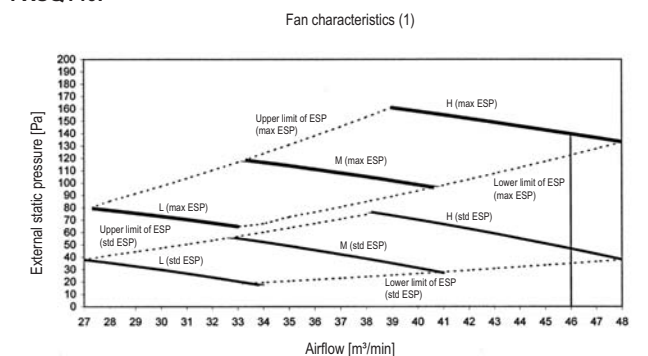

3TW32748-1

NOTES

- 1 Fan characteristics as shown are in "fan only" mode.
- 2 ESP: External static pressure.
- 3 — If the ESP is higher than 100 Pa, do not use airflow auto adjustment function: select the fan step manually, by field setting with remote control.



These products are not within the scope of the Eurovent certification program

The present leaflet is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V.. Daikin Europe N.V. has compiled the content of this leaflet to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this leaflet. All content is copyrighted by Daikin Europe N.V.

BARCODE

Daikin products are distributed by: