



Si34 - 601A

**R-410A**

# Service Manual



**RXYQ5-54PY1**

**R-410A Heat Pump 50Hz**



# VRV<sup>®</sup> III R-410A Heat Pump 50Hz

1. Introduction .....	vi
1.1 Safety Cautions .....	vi
1.2 PREFACE .....	x
<b>Part 1 General Information .....</b>	<b>1</b>
1. Model Names of Indoor/Outdoor Units.....	2
2. External Appearance.....	3
2.1 Indoor Units .....	3
2.2 Outdoor Units .....	4
3. Combination of Outdoor Units.....	5
4. Model Selection.....	7
<b>Part 2 Specifications .....</b>	<b>11</b>
1. Specifications .....	12
1.1 Outdoor Units .....	12
1.2 Indoor Units .....	33
<b>Part 3 Refrigerant Circuit .....</b>	<b>59</b>
1. Refrigerant Circuit .....	60
1.1 RXYQ5P .....	60
1.2 RXYQ8P .....	62
1.3 RXYQ10P, 12P .....	64
1.4 RXYQ14P, 16P, 18P .....	66
1.5 Outdoor air processing unit FXMQ125MFV1~250MFV1.....	68
2. Functional Parts Layout .....	69
2.1 RXYQ5P .....	69
2.2 RXYQ8P .....	70
2.3 RXYQ10P, 12P (12P: EUROPE) .....	71
2.4 RXYQ12P.....	72
2.5 RXYQ14P, 16P, 18P .....	73
3. Refrigerant Flow for Each Operation Mode.....	74
<b>Part 4 Function.....</b>	<b>91</b>
1. Function general .....	92
1.1 Symbol .....	92
1.2 Operation Mode.....	93
2. Basic Control .....	94
2.1 Normal Operation .....	94
2.2 Compressor PI Control.....	95
2.3 Electronic Expansion Valve PI Control.....	107
2.4 Step Control of Outdoor Unit Fans .....	107
2.5 Outdoor Unit Fan Control in Cooling Operation .....	108

3.	Special Control.....	109
3.1	Startup Control .....	109
3.2	Large capacity start up control (Heating) .....	110
3.3	Oil Return Operation .....	111
3.4	Defrosting Operation .....	113
3.5	Pump-down Residual Operation .....	114
3.6	Standby .....	115
3.7	Stopping Operation .....	116
4.	Protection Control .....	118
4.1	High Pressure Protection Control.....	118
4.2	Low Pressure Protection Control.....	119
4.3	Discharge Pipe Protection Control .....	120
4.4	Inverter Protection Control .....	121
4.5	STD Compressor Overload Protection.....	122
4.6	Injection Control (only for RXYQ5P).....	122
5.	Other Control.....	123
5.1	Outdoor Unit Rotation.....	123
5.2	Emergency Operation .....	124
5.3	Demand Operation .....	128
5.4	Heating Operation Prohibition .....	128
6.	Outline of Control (Indoor Unit) .....	129
6.1	Drain Pump Control.....	129
6.2	Louver Control for Preventing Ceiling Dirt.....	131
6.3	Thermostat Sensor in Remote Controller.....	132
6.4	Thermostat Control While in Normal Operation .....	134
6.5	Thermostat Control in Dry Operation .....	134
6.6	Electronic Expansion Valve Control .....	135
6.7	Hot Start Control (In Heating Operation Only).....	135
6.8	Freeze Prevention .....	136
6.9	Heater Control.....	136
6.10	List of Swing Flap Operations .....	137
6.11	Control of Outdoor Air Processing Unit (Unique Control for Outdoor Air Processing Unit) .....	138

## **Part 5 Test Operation ..... 143**

1.	Test Operation .....	144
1.1	Installation Process .....	144
1.2	Procedure and Outline .....	145
1.3	Operation When Power is Turned On .....	159
2.	Outdoor Unit PC Board Layout .....	160
3.	Field Setting .....	161
3.1	Field Setting from Remote Controller.....	161
3.2	Field Setting from Outdoor Unit.....	174

## **Part 6 Troubleshooting ..... 199**

1.	Symptom-based Troubleshooting .....	201
2.	Troubleshooting by Remote Controller .....	204
2.1	The INSPECTION / TEST Button.....	204
2.2	Self-diagnosis by Wired Remote Controller .....	205
2.3	Self-diagnosis by Wireless Remote Controller .....	206

2.4	Operation of The Remote Controller's Inspection / Test Operation Button .....	209
2.5	Remote Controller Service Mode .....	210
2.6	Remote Controller Self-Diagnosis Function .....	212
3.	Troubleshooting by Indication on the Remote Controller .....	220
3.1	"R0" Indoor Unit: Error of External Protection Device .....	220
3.2	"R1" Indoor Unit: PC Board Defect.....	221
3.3	"R3" Indoor Unit: Malfunction of Drain Level Control System (S1L) .....	222
3.4	"R6" Indoor Unit: Fan Motor (M1F) Lock, Overload.....	224
3.5	"R7" Indoor Unit: Malfunction of Swing Flap Motor (M1S) .....	225
3.6	"R9" Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E).....	227
3.7	"RF" Indoor Unit: Drain Level above Limit.....	229
3.8	"RJ" Indoor Unit: Malfunction of Capacity Determination Device .....	230
3.9	"C4" Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger .....	231
3.10	"C5" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes.....	232
3.11	"C9" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air.....	233
3.12	"CJ" Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller .....	234
3.13	"E1" Outdoor Unit: PC Board Defect .....	235
3.14	"E3" Outdoor Unit: Actuation of High Pressure Switch .....	236
3.15	"E4" Outdoor Unit: Actuation of Low Pressure Sensor .....	238
3.16	"E5" Outdoor Unit: Inverter Compressor Motor Lock.....	240
3.17	"E6" Outdoor Unit: STD Compressor Motor Overcurrent/Lock.....	242
3.18	"E7" Outdoor Unit: Malfunction of Outdoor Unit Fan Motor .....	243
3.19	"E9" Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y2E).....	246
3.20	"F3" Outdoor Unit: Abnormal Discharge Pipe Temperature .....	248
3.21	"F6" Outdoor Unit: Refrigerant Overcharged.....	249
3.22	"H7" Outdoor Unit: Abnormal Outdoor Fan Motor Signal.....	250
3.23	"H9" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air.....	251
3.24	"J2" Outdoor Unit: Current Sensor Malfunction .....	252
3.25	"J3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R3, R31~33T) .....	253
3.26	"J5" Outdoor Unit: Malfunction of Thermistor (R2T), (R7T) for Suction Pipe .....	254
3.27	"J6" Outdoor Unit: Malfunction of Thermistor (R4T) for Outdoor Unit Heat Exchanger .....	255
3.28	"J7" Outdoor Unit: Malfunction of Liquid Pipe Thermistor (R6T) .....	256
3.29	"J9" Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T) .....	257
3.30	"JR" Outdoor Unit: Malfunction of High Pressure Sensor.....	258
3.31	"JL" Outdoor Unit: Malfunction of Low Pressure Sensor.....	259
3.32	"L4" Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise.....	260
3.33	"L5" Outdoor Unit: Inverter Compressor Abnormal .....	262
3.34	"L8" Outdoor Unit: Inverter Current Abnormal.....	264
3.35	"L9" Outdoor Unit: Inverter Start up Error.....	266
3.36	"LC" Outdoor Unit: Malfunction of Transmission Between Inverter and Control PC Board .....	268
3.37	"P7" Outdoor Unit: Inverter Over-Ripple Protection .....	271

3.38	“P4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise Sensor .....	272
3.39	“P5” Outdoor Unit: Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board.....	274
3.40	“U0” Outdoor Unit: Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure.....	275
3.41	“U1” Reverse Phase, Open Phase.....	276
3.42	“U2” Outdoor Unit: Power Supply Insufficient or Instantaneous Failure .....	277
3.43	“U3” Outdoor Unit: Check Operation not Executed .....	280
3.44	“U4” Malfunction of Transmission Between Indoor Units .....	281
3.45	“U5” Indoor Unit: Malfunction of Transmission Between Remote Controller and Indoor Unit.....	283
3.46	“U7” Indoor Unit: Malfunction of Transmission Between Outdoor Units .....	284
3.47	“U8” Indoor Unit: Malfunction of Transmission Between Main and Sub Remote Controllers .....	286
3.48	“U9” Indoor Unit: Malfunction of Transmission Between Indoor and Outdoor Units in the Same System .....	287
3.49	“UR” Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller.....	288
3.50	“UC” Address Duplication of Centralized Controller .....	290
3.51	“UE” Malfunction of Transmission Between Centralized Controller and Indoor Unit.....	291
3.52	“UF” System is not Set yet .....	294
3.53	“UH” Malfunction of System, Refrigerant System Address Undefined...295	
4.	Troubleshooting (OP: Central Remote Controller) .....	297
4.1	“77” PC Board Defect .....	297
4.2	“78” Malfunction of Transmission Between Optional Controllers for Centralized Control .....	298
4.3	“79” Improper Combination of Optional Controllers for Centralized Control .....	300
4.4	“7C” Address Duplication, Improper Setting .....	302
5.	Troubleshooting (OP: Unified ON/OFF Controller) .....	305
5.1	Operation Lamp Blinks .....	305
5.2	Display “Under Centralized Control” Blinks (Repeats Single Blink) ....	307
5.3	Display “Under Centralized Control” Blinks (Repeats Double Blink) ....	310

## **Part 7 Appendix..... 315**

1.	Piping Diagrams.....	316
1.1	Outdoor Unit.....	316
1.2	Indoor Unit.....	320
2.	Wiring Diagrams for Reference .....	324
2.1	Outdoor Unit.....	324
2.2	Field Wiring .....	329
2.3	Indoor Unit.....	332
3.	List of Electrical and Functional Parts .....	348
3.1	Outdoor Unit.....	348
3.2	Indoor Side.....	351
4.	Option List .....	357
4.1	Option List of Controllers.....	357

4.2 Option Lists (Outdoor Unit).....	359
5. Piping Installation Point.....	361
5.1 Piping Installation Point.....	361
5.2 The Example of A Wrong Pattern.....	362
6. Example of connection (R-410A Type) .....	363
7. Thermistor Resistance / Temperature Characteristics.....	365
8. Pressure Sensor .....	367
9. Method of Checking The Inverter's Power Transistors and Diode Modules .....	368
<b>Part 8 Precautions for New Refrigerant (R-410A).....</b>	<b>371</b>
1. Precautions for New Refrigerant (R-410A) .....	372
1.1 Outline.....	372
1.2 Refrigerant Cylinders.....	374
1.3 Service Tools.....	375
<b>Index .....</b>	<b>i</b>
<b>Drawings &amp; Flow Charts .....</b>	<b>v</b>

# 1. Introduction

## 1.1 Safety Cautions

### Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
  - △ This symbol indicates an item for which caution must be exercised.  
The pictogram shows the item to which attention must be paid.
  - This symbol indicates a prohibited action.  
The prohibited item or action is shown inside or near the symbol.
  - This symbol indicates an action that must be taken, or an instruction.  
The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer

### 1.1.1 Caution in Repair

 <b>Warning</b>	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.	

 <b>Caution</b>	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	

### 1.1.2 Cautions Regarding Products after Repair

 <b>Warning</b>	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	

 <b>Warning</b>	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 <b>Caution</b>	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

### 1.1.3 Inspection after Repair

 <b>Warning</b>	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	

 <b>Caution</b>	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 Mohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

### 1.1.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

### 1.1.5 Using Icons List

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

## 1.2 PREFACE

Thank you for your continued patronage of Daikin products.

This is the new service manual for Daikin's Year 2006 VRVIII series Heat Pump System. Daikin offers a wide range of models to respond to building and office air conditioning needs. We are confident that customers will be able to find the models that best suit their needs.

This service manual contains information regarding the servicing of VRVIII series R-410A Heat Pump System.

July, 2007

After Sales Service Division

# Part 1

# General Information

1. Model Names of Indoor/Outdoor Units.....	2
2. External Appearance.....	3
2.1 Indoor Units.....	3
2.2 Outdoor Units.....	4
3. Combination of Outdoor Units.....	5
4. Model Selection.....	7

# 1. Model Names of Indoor/Outdoor Units

## Indoor Units

Type		Model Name											Power Supply
Ceiling Mounted Cassette Type (Double Flow)	FXCQ	20M	25M	32M	40M	50M	63M	80M	—	125M	—	—	VE
Ceiling Mounted Cassette Type (Multi Flow)	FXFQ	—	25M	32M	40M	50M	63M	80M	100M	125M	—	—	
600x600 Ceiling Mounted Cassette Type	FXZQ	20M	25M	32M	40M	50M	—	—	—	—	—	—	V1
Ceiling Mounted Cassette Corner Type	FXKQ	—	25MA	32MA	40MA	—	63MA	—	—	—	—	—	VE
Slim Ceiling Mounted Duct Type	FXDQ-PVE	20P	25P	32P	—	—	—	—	—	—	—	—	
	FXDQ-PVET	20P	25P	32P	—	—	—	—	—	—	—	—	
	FXDQ-NAVE	20NA	25NA	32NA	40NA	50NA	63NA	—	—	—	—	—	
	FXDQ-NVET	20N	25N	32N	40N	50N	63N	—	—	—	—	—	
Ceiling Mounted Built-In Type	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M	—	—	VE
Ceiling Mounted Duct Type	FXMQ	—	—	—	40MA	50MA	63MA	80MA	100MA	125MA	200MA	250MA	
Ceiling Suspended Type	FXHQ	—	—	32MA	—	—	63MA	—	100MA	—	—	—	
Wall Mounted Type	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	
Floor Standing Type	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	
Concealed Floor Standing Type	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	V1
Outdoor Air Processing Unit	FXMQ-MF	—	—	—	—	—	—	—	—	125MF	200MF	250MF	
Ceiling Suspended Cassette Type	FXUQ	—	—	—	—	—	—	71MA	100MA	125MA	—	—	VE
Connection Unit	BEVQ-MA	—	—	—	—	—	—	71MA	100MA	125MA	—	—	

**Note:**FXDQ has following 2 Series, as show below.

FXDQ-P, N(A)VET: without Drain Pump (For General, Asia: except for EU, China and Australia)

FXDQ-P, N(A)VE: with Drain Pump

BEV unit is required for each indoor unit.

MA, NA: RoHS Directive models; Specifications, Dimensions and other functions are not changed compared with M, N type.

## Outdoor Units

### Normal Series

Series	Model Name										Power Supply
Heat Pump	RXYQ	5P	8P	10P	12P	14P	16P	18P	20P	22P	Y1(E)
		24P	26P	28P	30P	32P	34P	36P	38P	40P	
		42P	44P	46P	48P	50P	52P	54P			

### High COP Series (Energy Saving Series)


Series	Model Name									Power Supply	
Heat Pump	RXYQ	16PH	18PH	24PH	26PH	28PH	30PH	32PH	34PH	36PH	Y1(E)
		38PH	40PH	42PH	44PH	46PH	48PH	50PH			

\*Power Supply VE: 1 phase 220~240V, 50Hz  
 V1: 1 phase 220~240V, 50Hz  
 Y1: 3 phase 380~415V, 50Hz

E: The unit with anti corrosion treatment

## 2. External Appearance

### 2.1 Indoor Units
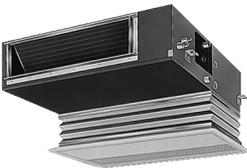
<p>Ceiling Mounted Cassette Type (Double Flow)</p> <p>FXCQ20M FXCQ25M FXCQ32M FXCQ40M FXCQ50M FXCQ63M FXCQ80M FXCQ125M</p> 	<p>Outdoor air processing unit</p> <p>FXMQ125MF FXMQ200MF FXMQ250MF</p> 
<p>Ceiling Mounted Cassette Type (Multi Flow)</p> <p>FXFQ25M FXFQ32M FXFQ40M FXFQ50M FXFQ63M FXFQ80M FXFQ100M FXFQ125M</p> 	<p>Ceiling Suspended Type</p> <p>FXHQ32MA FXHQ63MA FXHQ100MA</p> 
<p>600×600 Ceiling Mounted Cassette Type (Multi Flow)</p> <p>FXZQ20M FXZQ25M FXZQ32M FXZQ40M FXZQ50M</p> 	<p>Wall Mounted Type</p> <p>FXAQ20MA FXAQ25MA FXAQ32MA FXAQ40MA FXAQ50MA FXAQ63MA</p> 
<p>Ceiling Mounted Cassette Corner Type</p> <p>FXKQ25MA FXKQ32MA FXKQ40MA FXKQ63MA</p> 	<p>Floor Standing Type</p> <p>FXLQ20MA FXLQ25MA FXLQ32MA FXLQ40MA FXLQ50MA FXLQ63MA</p> 
<p>Slim Ceiling Mounted Duct Type</p> <p>FXDQ20P FXDQ20N(A) FXDQ25P FXDQ25N(A) FXDQ32P FXDQ32N(A) FXDQ40N(A) FXDQ50N(A) FXDQ63N(A) with Drain Pump (VE) without Drain Pump (VET)</p> 	<p>Concealed Floor Standing Type</p> <p>FXNQ20MA FXNQ25MA FXNQ32MA FXNQ40MA FXNQ50MA FXNQ63MA</p> 
<p>Ceiling Mounted Built-In Type</p> <p>FXSQ20M FXSQ25M FXSQ32M FXSQ40M FXSQ50M FXSQ63M FXSQ80M FXSQ100M FXSQ125M</p> 	<p>Ceiling Suspended Cassette Type (Connection Unit Series)</p> <p>FXUQ71MA + BEVQ71MA FXUQ100MA + BEVQ100MA FXUQ125MA + BEVQ125MA</p> <p>Connection Unit</p> 
<p>Ceiling Mounted Duct Type</p> <p>FXMQ40MA FXMQ50MA FXMQ63MA FXMQ80MA FXMQ100MA FXMQ125MA FXMQ200MA FXMQ250MA</p> <p>FXMQ40~125M</p> <p>FXMQ200 · 250M</p> 	

## 2.2 Outdoor Units

RXYQ5P	RXYQ8P, 10P (12P: EUROPE)	RXYQ12P, 14P, 16P, 18P
 <p data-bbox="336 719 383 741">5HP</p>	 <p data-bbox="754 719 834 741">8, 10HP</p>	 <p data-bbox="1153 719 1313 741">12, 14, 16, 18HP</p>
RXYQ20P, 22P, 24P, 26P, 28P		RXYQ30P, 32P, 34P, 36P
 <p data-bbox="363 1294 571 1317">20, 22, 24, 26, 28HP</p>		 <p data-bbox="1042 1294 1201 1317">30, 32, 34, 36HP</p>
RXYQ38P, 40P, 42P, 44P, 46P		RXYQ48P, 50P, 52P, 54P
 <p data-bbox="368 1877 571 1899">38, 40, 42, 44, 46HP</p>		 <p data-bbox="1042 1877 1201 1899">48, 50, 52, 54HP</p>

### 3. Combination of Outdoor Units

#### Normal Series

System Capacity	Number of units	Module							Outdoor Unit Multi Connection Piping Kit (Option)
		5	8	10	12	14	16	18	
5HP	1	●							—
8HP	1		●						
10HP	1			●					
12HP	1				●				
14HP	1					●			
16HP	1						●		
18HP	1							●	
20HP	2		●		●				Heat Pump: BHFP22P100
22HP	2			●	●				
24HP	2		●				●		
26HP	2		●					●	
28HP	2			●				●	
30HP	2				●			●	
32HP	2						●●		
34HP	2						●	●	
36HP	2							●●	
38HP	3		●		●			●	Heat Pump: BHFP22P151
40HP	3		●				●●		
42HP	3		●				●	●	
44HP	3		●					●●	
46HP	3			●				●●	
48HP	3				●			●●	
50HP	3					●		●●	
52HP	3						●	●●	
54HP	3							●●●	



**Note:** For multiple connection of 18HP system or more, an optional Daikin Outdoor Unit Multi Connection Piping Kit is required.

High COP Series (Energy Saving Series)

System Capacity	Number of units	Module						Outdoor Unit Multi Connection Piping Kit (Option)
		8	10	12	14	16	18	
16HP	2	●●						Heat Pump: BHFP22P100
18HP	2	●	●					
24HP	3	●●●						
26HP	3	●●	●					
28HP	3	●●		●				
30HP	3	●	●	●				
32HP	3	●		●●				
34HP	3		●	●●				
36HP	3			●●●				
38HP	3			●●	●			Heat Pump: BHFP22P151
40HP	3			●●		●		
42HP	3			●●			●	
44HP	3			●		●●		
46HP	3			●		●	●	
48HP	3					●●●		
50HP	3					●●	●	



**Note:** For multiple connection of 16HP system or more, an optional Daikin Outdoor Unit Multi Connection Piping Kit is required.

## 4. Model Selection

### VRV III Heat Pump Series

#### Connectable indoor units number and capacity

##### Normal Series

HP	5HP	8HP	10HP	12HP	14HP	16HP	18HP
System name	RXYQ5P	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P
Outdoor unit 1	RXYQ5P	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P
Outdoor unit 2	–	–	–	–	–	–	–
Outdoor unit 3	–	–	–	–	–	–	–
Total number of connectable indoor units	8	13	16	19	23	26	29
Total capacity of connectable indoor units (kW)	7.00~18.20	11.20~29.12	14.00~36.40	16.75~43.55	20.00~52.00	22.40~58.24	25.20~65.52

HP	20HP	22HP	24HP	26HP	28HP	30HP	32HP
System name	RXYQ20P	RXYQ22P	RXYQ24P	RXYQ26P	RXYQ28P	RXYQ30P	RXYQ32P
Outdoor unit 1	RXYQ8P	RXYQ10P	RXYQ8P	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ16P
Outdoor unit 2	RXYQ12P	RXYQ12P	RXYQ16P	RXYQ18P	RXYQ18P	RXYQ18P	RXYQ16P
Outdoor unit 3	–	–	–	–	–	–	–
Total number of connectable indoor units	32	35	39	42	45	48	52
Total capacity of connectable indoor units (kW)	27.95~72.67	30.75~79.95	33.60~87.36	36.40~94.64	39.15~101.79	41.95~109.07	44.70~116.22

HP	34HP	36HP	38HP	40HP	42HP	44HP	46HP
System name	RXYQ34P	RXYQ36P	RXYQ38P	RXYQ40P	RXYQ42P	RXYQ44P	RXYQ46P
Outdoor unit 1	RXYQ16P	RXYQ18P	RXYQ8P	RXYQ8P	RXYQ8P	RXYQ8P	RXYQ10P
Outdoor unit 2	RXYQ18P	RXYQ18P	RXYQ12P	RXYQ16P	RXYQ16P	RXYQ18P	RXYQ18P
Outdoor unit 3	–	–	RXYQ18P	RXYQ16P	RXYQ18P	RXYQ18P	RXYQ18P
Total number of connectable indoor units	55	58	61	64			
Total capacity of connectable indoor units (kW)	47.50~123.50	50.25~130.65	53.50~139.10	56.00~145.60	58.00~150.80	61.75~160.55	63.75~165.75

HP	48HP	50HP	52HP	54HP
System name	RXYQ48P	RXYQ50P	RXYQ52P	RXYQ54P
Outdoor unit 1	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P
Outdoor unit 2	RXYQ18P	RXYQ18P	RXYQ18P	RXYQ18P
Outdoor unit 3	RXYQ18P	RXYQ18P	RXYQ18P	RXYQ18P
Total number of connectable indoor units	64			
Total capacity of connectable indoor units (kW)	67.50~175.50	69.50~180.70	71.50~185.90	73.50~191.10

**High COP Series (Energy Saving Series)**

HP	16HP	18HP
System name	RXYQ16PH	RXYQ18PH
Outdoor unit 1	RXYQ8P	RXYQ8P
Outdoor unit 2	RXYQ8P	RXYQ10P
Outdoor unit 3	-	-
Total number of connectable indoor units	26	29
Total capacity of connectable indoor units (kW)	22.40~58.24	25.20~65.52

HP	24HP	26HP	28HP	30HP	32HP
System name	RXYQ24PH	RXYQ26PH	RXYQ28PH	RXYQ30PH	RXYQ32PH
Outdoor unit 1	RXYQ8P	RXYQ8P	RXYQ8P	RXYQ8P	RXYQ8P
Outdoor unit 2	RXYQ8P	RXYQ8P	RXYQ8P	RXYQ10P	RXYQ12P
Outdoor unit 3	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ12P	RXYQ12P
Total number of connectable indoor units	39	42	45	48	52
Total capacity of connectable indoor units (kW)	33.60~87.36	36.40~94.64	39.15~101.79	41.95~109.07	44.70~116.22

HP	34HP	36HP	38HP	40HP	42HP	44HP	46HP
System name	RXYQ34PH	RXYQ36PH	RXYQ38PH	RXYQ40PH	RXYQ42PH	RXYQ44PH	RXYQ46PH
Outdoor unit 1	RXYQ10P	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ12P
Outdoor unit 2	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ12P	RXYQ16P	RXYQ16P
Outdoor unit 3	RXYQ12P	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P	RXYQ16P	RXYQ18P
Total number of connectable indoor units	55	58	61	64			
Total capacity of connectable indoor units (kW)	47.50~123.50	50.25~130.65	53.50~139.10	56.00~145.60	58.00~150.80	61.75~160.55	63.75~165.75

HP	48HP	50HP
System name	RXYQ48PH	RXYQ50PH
Outdoor unit 1	RXYQ16P	RXYQ16P
Outdoor unit 2	RXYQ16P	RXYQ16P
Outdoor unit 3	RXYQ16P	RXYQ18P
Total number of connectable indoor units	64	
Total capacity of connectable indoor units (kW)	67.50~175.50	69.50~180.70

## Connectable Indoor Unit

Type		Model Name											Power Supply
Ceiling Mounted Cassette Type (Double Flow)	FXCQ	20M	25M	32M	40M	50M	63M	80M	—	125M	—	—	VE
Ceiling Mounted Cassette Type (Multi Flow)	FXFQ	—	25M	32M	40M	50M	63M	80M	100M	125M	—	—	
600x600 Ceiling Mounted Cassette Type (Multi Flow)	FXZQ	20M	25M	32M	40M	50M	—	—	—	—	—	—	
Ceiling Mounted Cassette Corner Type	FXKQ	—	25MA	32MA	40MA	—	63MA	—	—	—	—	—	
Slim Ceiling Mounted Duct Type	FXDQ-PVE	20P	25P	32P	—	—	—	—	—	—	—	—	
	FXDQ-PVET	20P	25P	32P	—	—	—	—	—	—	—	—	
	FXDQ-NAVE	20NA	25NA	32NA	40NA	50NA	63NA	—	—	—	—	—	
	FXDQ-NVET	20N	25N	32N	40N	50N	63N	—	—	—	—	—	
Ceiling Mounted Built-In Type	FXSQ	20M	25M	32M	40M	50M	63M	80M	100M	125M	—	—	
Ceiling Mounted Duct Type	FXMQ	—	—	—	40MA	50MA	63MA	80MA	100MA	125MA	200MA	250MA	
Ceiling Suspended Type	FXHQ	—	—	32MA	—	—	63MA	—	100MA	—	—	—	
Wall Mounted Type	FXAQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	
Floor Standing Type	FXLQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	
Concealed Floor Standing Type	FXNQ	20MA	25MA	32MA	40MA	50MA	63MA	—	—	—	—	—	
Outdoor Air Processing Unit	FXMQ-MF	—	—	—	—	—	—	—	—	125MF	200MF	250MF	V1
Ceiling Suspended Cassette Type	FXUQ	—	—	—	—	—	—	71MA	100MA	125MA	—	—	
Connection Unit	BEVQ-MA	—	—	—	—	—	—	71MA	100MA	125MA	—	—	VE

Note: FXDQ has following 2 Series, as show below.

FXDQ-P, N(A)VET: without Drain Pump (For General, Asia: except for EU, China and Australia)

FXDQ-P, N(A)VE : with Drain Pump

BEV unit is required for each indoor unit.

FXZQ : only for EU, Australia

## Indoor unit capacity

New refrigerant model code	P20 type	P25 type	P32 type	P40 type	P50 type	P63 type	P80 type	P100 type	P125 type	P200 type	P250 type
Selecting model capacity	2.2 kW	2.8 kW	3.5 kW	4.5 kW	5.6 kW	7.0 kW	9.0 kW	11.2 kW	14.0 kW	22.4 kW	28.0 kW
Equivalent output	0.8HP	1HP	1.25HP	1.6HP	2.0HP	2.5HP	3.2HP	4HP	5HP	8HP	10HP

Use the above tables to determine the capacities of indoor units to be connected. Make sure the total capacity of indoor units connected to each outdoor unit is within the specified value (kW).

- The total capacity of connected indoor units must be within a range of 50 to 130% of the rated capacity of the outdoor unit.
- In some models, it is not possible to connect the maximum number of connectable indoor units. Select models so the total capacity of connected indoor units conforms to the specification.

**Differences from Conventional Models**

Item	Differences		
	Object	New model (P Model)	Conventional model (MA Model)
Compressor	Connection of equalizer oil pipe	<ul style="list-style-type: none"> <li>● NONE (No particular changes in terms of service)</li> </ul>	<ul style="list-style-type: none"> <li>● YES</li> </ul>
Workability	Equalizer oil pipe for multi-outdoor-unit system	<ul style="list-style-type: none"> <li>● NONE</li> </ul>	<ul style="list-style-type: none"> <li>● YES</li> </ul>
	Procedure for calculating refrigerant refilling quantity	<ul style="list-style-type: none"> <li>● Refilling quantity due to piping length + Adjustment quantity according to models of outdoor units</li> </ul>	<ul style="list-style-type: none"> <li>● Refilling quantity due to piping length - Adjustment quantity according to models of outdoor units</li> </ul>
Optional accessories	Branch pipe for outdoor unit connection	<ul style="list-style-type: none"> <li>● Y branch Type: BHFP22P100/151</li> </ul>	<ul style="list-style-type: none"> <li>● T branch Type: BHFP22MA90/135</li> </ul>

# Part 2

# Specifications

1. Specifications .....	12
1.1 Outdoor Units .....	12
1.2 Indoor Units .....	33

# 1. Specifications

## 1.1 Outdoor Units

### Heat Pump 50Hz Standard Series <RXYQ-P>

Model Name			RXYQ5PY1(E)	RXYQ8PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		12,100	19,400
	Btu / h		48,100	77,000
	kW		14.1	22.5
★2 Cooling Capacity (19.0°CWB)	kW		14.0	22.4
★3 Heating Capacity	kcal / h		13,800	21,500
	Btu / h		54,600	85,300
	kW		16.0	25.0
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (HxWxD)		mm	1680x635x765	1680x930x765
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	13.72	13.72
	Number of Revolutions	r.p.m	6300	7980
	Motor Output×Number of Units	kW	2.8×1	3.8×1
	Starting Method		Soft Start	
Fan	Type		Propeller Fan	
	Motor Output	kW	0.35×1	0.75×1
	Air Flow Rate	m <sup>3</sup> /min	95	180
	Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ9.5 (Brazing Connection)	φ9.5 (Brazing Connection)
	Gas Pipe	mm	φ15.9 (Brazing Connection)	φ19.1 (Brazing Connection)
Product Mass (Machine weight)		kg	160	205
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control		%	28~100	20~100
Refrigerant	Refrigerant Name		R-410A	
	Charge	kg	6.2	7.7
	Control		Electronic Expansion Valve	
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.			C: 4D051441A	C: 4D051442A

#### Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

The Reference Number  
 C~: Partly corrected drawings.  
 J~: Original drawing is Japanese  
 V~: Printing Convenience

Model Name		RXYQ10PY1(E)	RXYQ12PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h	24,300	29,000
	Btu / h	96,200	115,000
	kW	28.2	33.7
★2 Cooling Capacity (19.0°CWB)	kW	28.0	33.5
★3 Heating Capacity	kcal / h	27,100	32,300
	Btu / h	107,000	128,000
	kW	31.5	37.5
Casing Color		Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm 1680×930×765	1680×1240×765
Heat Exchanger		Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	13.72+10.53
	Number of Revolutions	r.p.m	6300, 2900
	Motor Output×Number of Units	kW	(1.2+4.5)×1
	Starting Method		Soft Start
Fan	Type		Propeller Fan
	Motor Output	kW	0.75×1
	Air Flow Rate	m³/min	185
	Drive		Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ9.5 (Brazing Connection)
	Gas Pipe	mm	φ22.2 (Brazing Connection)
Product Mass (Machine Weight)		kg 249	285
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method		Deicer	Deicer
Capacity Control		% 14~100	14~100
Refrigerant	Refrigerant Name		R-410A
	Charge	kg	8.4
	Control		Electronic Expansion Valve
Refrigerator Oil		Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.		C: 4D051443A	C: 4D051444A

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name			RXYQ14PY1(E)	RXYQ16PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		34,600	39,000
	Btu / h		137,000	155,000
	kW		40.2	45.3
★2 Cooling Capacity (19.0°CWB)	kW		40.0	45.0
★3 Heating Capacity	kcal / h		38,700	43,000
	Btu / h		154,000	171,000
	kW		45.0	50.0
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)			1680×1240×765	1680×1240×765
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	13.72+10.53+10.53	13.72+10.53+10.53
	Number of Revolutions	r.p.m	6300, 2900×2	6300, 2900×2
	Motor Output×Number of Units	kW	(0.3+4.5+4.5)×1	(1.4+4.5+4.5)×1
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	0.35×2	0.35×2
	Air Flow Rate	m³/min	233	233
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ12.7 (Brazing Connection)	φ12.7 (Brazing Connection)
	Gas Pipe	mm	φ28.6 (Brazing Connection)	φ28.6 (Brazing Connection)
Product Mass (Machine Weight)			329	329
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control			10~100	10~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	12.3	12.5
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.			C: 4D051445A	C: 4D051446A

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)			RXYQ18PY1(E)	RXYQ20PY1(E)
Model Name (Independent Unit)			—	RXYQ8PY1(E)+RXYQ12PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		42,000	48,300
	Btu / h		168,000	192,000
	kW		49.3	56.2
★2 Cooling Capacity (19.0°CWB)	kW		49	55.9
★3 Heating Capacity	kcal / h		48,600	53,800
	Btu / h		193,000	213,000
	kW		56.5	62.5
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm	1680×1240×765	(1680×930×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m <sup>3</sup> /h	13.72+10.53+10.53	(13.72)+(13.72+10.53)
	Number of Revolutions	r.p.m	7980, 2900, 2900	(7980)+(6300, 2900)
	Motor Output×Number of Units	kW	(3.0+4.5+4.5)×1	(3.8×1)+((2.5+4.5)×1)
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	0.75×2	(0.75×1)+(0.35×2)
	Air Flow Rate	m <sup>3</sup> /min	239	180+233
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ15.9 (Brazing Connection)	φ15.9 (Brazing Connection)
	Gas Pipe	mm	φ28.6 (Brazing Connection)	φ28.6 (Brazing Connection)
Product Mass (Machine Weight)			341	205+285
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control		%	9~100	8~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	12.7	7.7+12.3
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.			C: 4D051447A	

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

Model Name (Combination Unit)			RXYQ22PY1(E)	RXYQ24PY1(E)
Model Name (Independent Unit)			RXYQ10PY1(E)+RXYQ12PY1(E)	RXYQ8PY1(E)+RXYQ16PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		53,200	58,300
	Btu / h		211,000	231,000
	kW		61.9	67.8
★2 Cooling Capacity (19.0°CWB)	kW		61.5	67.4
★3 Heating Capacity	kcal / h		59,300	64,500
	Btu / h		235,000	256,000
	kW		69	75.0
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)			mm (1680×930×765)+(1680×1240×765)	mm (1680×930×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72+10.53)+(13.72+10.53)	13.72+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(6300, 2900)+(6300, 2900)	7980+(6300, 2900×2)
	Motor Output×Number of Units	kW	((1.2+4.5)×1)+((2.5+4.5)×1)	(3.8×1)+((1.4+4.5+4.5)×1)
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	(0.75×1)+(0.35×2)	(0.75×1)+(0.35×2)
	Air Flow Rate	m³/min	185+233	180+233
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ15.9 (Brazing Connection)	φ15.9 (Brazing Connection)
	Gas Pipe	mm	φ28.6 (Brazing Connection)	φ34.9 (Brazing Connection)
Product Mass (Machine Weight)			kg 249+285	kg 205+329
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control			% 7~100	% 6~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	8.4+10.0	7.7+12.5
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)			RXYQ26PY1(E)	RXYQ28PY1(E)
Model Name (Independent Unit)			RXYQ8PY1(E)+RXYQ18PY1(E)	RXYQ10PY1(E)+RXYQ18PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		61,700	66,700
	Btu / h		250,000	26,400
	kW		71.8	77.5
★2 Cooling Capacity (19.0°CWB)	kW		71.4	77.0
★3 Heating Capacity	kcal / h		70,100	75,700
	Btu / h		278,000	300,000
	kW		81.5	88.0
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)			mm (1680×930×765)+(1680×1240×765)	mm (1680×930×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72)+(13.72+10.53+10.53)	(13.72+10.53)+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(7980)+(7980, 2900, 2900)	(6300, 2900)+(7980, 2900×2)
	Motor Output×Number of Units	kW	(3.8×1)+(3.0+4.5+4.5)×1	((1.2+4.5)×1)+(3.0+4.5+4.5)×1
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	(0.75×1)+(0.75×2)	(0.75×1)+(0.75×2)
	Air Flow Rate	m³/min	180+239	185+239
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)	φ19.1 (Brazing Connection)
	Gas Pipe	mm	φ34.9 (Brazing Connection)	φ34.9 (Brazing Connection)
Product Mass (Machine Weight)			kg 205+341	kg 249+341
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control			% 6~100	% 5~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	7.7+12.7	8.4+12.7
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)			RXYQ30PY1(E)	RXYQ32PY1(E)
Model Name (Independent Unit)			RXYQ12PY1(E)+RXYQ18PY1(E)	RXYQ16PY1(E)+RXYQ16PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		71,400	77,800
	Btu / h		283,000	309,000
	kW		83	90.5
★2 Cooling Capacity (19.0°CWB)	kW		82.5	90
★3 Heating Capacity	kcal / h		80,800	86,000
	Btu / h		321,000	341,000
	kW		94	100
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72+10.53)+(13.72+10.53+10.53)	(13.72+10.53+10.53)+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(6300, 2900)+(7980, 2900, 2900)	(6300, 2900, 2900)+(6300, 2900, 2900)
	Motor Output×Number of Units	kW	((2.5+4.5)×1)+((3.0+4.5+4.5)×1)	((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	(0.35×2)+(0.75×2)	(0.35×2)+(0.35×2)
	Air Flow Rate	m³/min	233+239	233+233
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)	φ19.1 (Brazing Connection)
	Gas Pipe	mm	φ34.9 (Brazing Connection)	φ34.9 (Brazing Connection)
Product Mass (Machine Weight)			285+341	329+329
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control		%	5~100	5~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	10.0+12.7	12.5+12.5
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)			RXYQ34PY1(E)	RXYQ36PY1(E)
Model Name (Independent Unit)			RXYQ16PY1(E)+RXYQ18PY1(E)	RXYQ18PY1(E)+RXYQ18PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		81,400	85,100
	Btu / h		323,000	338,000
	kW		94.6	99
★2 Cooling Capacity (19.0°CWB)	kW		94.0	98
★3 Heating Capacity	kcal / h		92,000	97,200
	Btu / h		365,000	386,000
	kW		107	113
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72+10.53+10.53)+(13.72+10.53+10.53)	(13.72+10.53+10.53)+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(6300, 2900, 2900)+(7980, 2900, 2900)	(7980, 2900, 2900)+(7980, 2900, 2900)
	Motor Output×Number of Units	kW	((1.4+4.5+4.5)×1)+((3.0+4.5+4.5)×1)	((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)
	Starting Method		Soft Start	Soft Start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	(0.35×2)+(0.75×2)	(0.75×2)+(0.75×2)
	Air Flow Rate	m³/min	233+239	239+239
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)	φ19.1 (Brazing Connection)
	Gas Pipe	mm	φ34.9 (Brazing Connection)	φ41.3 (Brazing Connection)
Product Mass (Machine Weight)			329+341	341+341
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control		%	5~100	4~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	12.5+12.7	12.7+12.7
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)		RXYQ38PY1(E)		RXYQ40PY1(E)		
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ12PY1(E)+RXYQ18PY1(E)		RXYQ8PY1(E)+RXYQ16PY1(E)+RXYQ16PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	91,200		97,200		
	Btu / h	362,000		386,000		
	kW	106		113		
★2 Cooling Capacity (19.0°CWB)	kW	105		112		
★3 Heating Capacity	kcal / h	102,000		108,000		
	Btu / h	406,000		427,000		
	kW	119		125		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×930×765)+(1680×1240×765)+(1680×1240×765)	(1680×930×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	(13.72)+(13.72+10.53)+(13.72+10.53+10.53)		(13.72)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(7980)+(6300, 2900)+(7980, 2900, 2900)		(7980)+(6300, 2900, 2900)+(6300, 2900, 2900)	
	Motor Output×Number of Units	kW	(3.8×1)+((2.5+4.5)×1)+((3.0+4.5+4.5)×1)		(3.8×1)+((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)	
	Starting Method		Soft Start		Soft Start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.35×2)+(0.75×2)		(0.75×1)+(0.35×2)+(0.35×2)	
	Air Flow Rate	m³/min	180+233+239		180+233+233	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)		φ19.1 (Brazing Connection)	
	Gas Pipe	mm	φ41.3 (Brazing Connection)		φ41.3 (Brazing Connection)	
Product Mass (Machine Weight)		kg	205+285+341		205+329+329	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	4~100		4~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	7.7+10.0+12.7		7.7+12.5+12.5	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)		RXYQ42PY1(E)		RXYQ44PY1(E)		
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ16PY1(E)+RXYQ18PY1(E)		RXYQ8PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	101,000		104,000		
	Btu / h	399,000		413,000		
	kW	117		121		
★2 Cooling Capacity (19.0°CWB)	kW	116		120		
★3 Heating Capacity	kcal / h	114,000		119,000		
	Btu / h	450,000		471,000		
	kW	132		138		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×930×765)+(1680×1240×765)+(1680×1240×765)	(1680×930×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	(13.72)+(13.72+10.53+10.53)+(13.72+10.53+10.53)		(13.72)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(7980)+(6300, 2900, 2900)+(7980, 2900, 2900)		(7980)+(7980, 2900×2)+(7980, 2900, 2900)	
	Motor Output×Number of Units	kW	(3.8×1)+((1.4+4.5+4.5)×1)+((3.0+4.5+4.5)×1)		(3.8×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)	
	Starting Method		Soft Start		Soft Start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.35×2)+(0.75×2)		(0.75×1)+(0.75×2)+(0.75×2)	
	Air Flow Rate	m <sup>3</sup> /min	180+233+239		180+239+239	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)		φ19.1 (Brazing Connection)	
	Gas Pipe	mm	φ41.3 (Brazing Connection)		φ41.3 (Brazing Connection)	
Product Mass (Machine Weight)		kg	205+329+341		205+341+341	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	4~100		4~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	7.7+12.5+12.7		7.7+12.7+12.7	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

Model Name (Combination Unit)		RXYQ46PY1(E)		RXYQ48PY1(E)		
Model Name (Independent Unit)		RXYQ10PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)		RXYQ12PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	109,000		114,000		
	Btu / h	433,000		454,000		
	kW	127		133		
★2 Cooling Capacity (19.0°CWB)	kW	126		132		
★3 Heating Capacity	kcal / h	124,000		130,000		
	Btu / h	495,000		515,000		
	kW	145		151		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×930×765)+(1680×1240×765)+(1680×1240×765)		(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	(13.7+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)		(13.72+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(6300, 2900)+(7980, 2900, 2900)+(7980, 2900, 2900)		(6300, 2900)+(7980, 2900, 2900)+(7980, 2900, 2900)	
	Motor Output×Number of Units	kW	((1.2+4.5)×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)		((2.5+4.5)×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)	
	Starting Method		Soft Start		Soft Start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.75×2)+(0.75×2)		(0.35×2)+(0.75×2)+(0.75×2)	
	Air Flow Rate	m³/min	185+239+239		233+239+239	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)		φ19.1 (Brazing Connection)	
	Gas Pipe	mm	φ41.3 (Brazing Connection)		φ41.3 (Brazing Connection)	
Product Mass (Machine Weight)		kg	249+341+341		285+341+341	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	3~100		3~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	8.4+12.7+12.7		10.0+12.7+12.7	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)		RXYQ50PY1(E)		RXYQ52PY1(E)		
Model Name (Independent Unit)		RXYQ14PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)		RXYQ16PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	120,000		124,000		
	Btu / h	474,000		491,000		
	kW	139		144		
★2 Cooling Capacity (19.0°CWB)	kW	138		143		
★3 Heating Capacity	kcal / h	136,000		140,000		
	Btu / h	539,000		556,000		
	kW	158		163		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	(13.72+10.53+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)		(13.72+10.53+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(6300, 2900×2)+(7980, 2900, 2900)+(7980, 2900, 2900)		(6300, 2900×2)+(7980, 2900, 2900)+(7980, 2900, 2900)	
	Motor Output×Number of Units	kW	((0.3+4.5+4.5)×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)		((1.4+4.5+4.5)×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)	
	Starting Method		Soft Start		Soft Start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.35×2)+(0.75×2)+(0.75×2)		(0.35×2)+(0.75×2)+(0.75×2)	
	Air Flow Rate	m <sup>3</sup> /min	233+239+239		233+239+239	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)		φ19.1 (Brazing Connection)	
	Gas Pipe	mm	φ41.3 (Brazing Connection)		φ41.3 (Brazing Connection)	
Product Mass (Machine Weight)		kg	329+341+341		329+341+341	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%		3~100		
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	12.3+12.7+12.7		12.5+12.7+12.7	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

## Conversion Formulae

kcal/h=kW×860  
Btu/h=kW×3412  
cfm=m<sup>3</sup>/min×35.3

<b>Model Name (Combination Unit)</b>		<b>RXYQ54PY1(E)</b>	
<b>Model Name (Independent Unit)</b>		<b>RXYQ18PY1(E)+RXYQ18PY1(E)+RXYQ18PY1(E)</b>	
★1 Cooling Capacity (19.5°CWB)	kcal / h	127,000	
	Btu / h	505,000	
	kW	148	
★2 Cooling Capacity (19.0°CWB)	kW	147	
★3 Heating Capacity	kcal / h	146,000	
	Btu / h	580,000	
	kW	170	
Casing Color		Ivory White (5Y7.5/1)	
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)
Heat Exchanger		Cross Fin Coil	
Comp.	Type		Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72+10.53+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(7980, 2900, 2900)+(7980, 2900, 2900)+(7980, 2900, 2900)
	Motor Output×Number of Units	kW	((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)+((3.0+4.5+4.5)×1)
	Starting Method		Soft Start
Fan	Type		Propeller Fan
	Motor Output	kW	(0.75×2)+(0.75×2)+(0.75×2)
	Air Flow Rate	m³/min	239+239+239
	Drive		Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1 (Brazing Connection)
	Gas Pipe	mm	φ41.3 (Brazing Connection)
Product Mass (Machine Weight)		kg	341+341+341
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	
Defrost Method		Deicer	
Capacity Control		%	3-100
Refrigerant	Refrigerant Name		R-410A
	Charge	kg	12.7+12.7+12.7
	Control		Electronic Expansion Valve
Refrigerator Oil		Refer to the nameplate of compressor	
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps	
Drawing No.			

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

## Heat Pump 50Hz High COP Series &lt;RXYQ-PH&gt;

Model Name		RXYQ16PHY1(E)		RXYQ18PHY1(E)		
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ8PY1(E)		RXYQ8PY1(E)+RXYQ10PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	38,800		43,600		
	Btu / h	154,000		173,000		
	kW	45.1		50.7		
★2 Cooling Capacity (19.0°CWB)	kW	44.8		50.4		
★3 Heating Capacity	kcal / h	43,000		48,600		
	Btu / h	171,000		193,000		
	kW	50		56.5		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (HxWxD)		mm	(1680×930×765)+(1680×930×765)		(1680×930×765)+(1680×930×765)	
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	(13.72)+(13.72)		(13.72)+(13.72+10.53)	
	Number of Revolutions	r.p.m	(7980)+(7980)		(7980)+(6300,2900)	
	Motor Output×Number of Units	kW	(3.8×1)+(3.8×1)		(3.8×1)+((1.2+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.75×1)		(0.75×1)+(0.75×1)	
	Air Flow Rate	m³/min	180+180		180+185	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ12.7(Brazing Connection)		φ15.9(Brazing Connection)	
	Gas Pipe	mm	φ28.6(Brazing Connection)		φ28.6(Brazing Connection)	
Product Mass (Machine weight)		kg	205+205		205+249	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	10~100		8~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	7.7+7.7		7.7+8.4	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name		RXYQ24PHY1(E)		RXYQ26PHY1(E)		
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ8PY1(E)+RXYQ8PY1(E)		RXYQ8PY1(E)+RXYQ8PY1(E)+RXYQ10PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	58,100		63,000		
	Btu / h	231,000		250,000		
	kW	67.6		73.2		
★2 Cooling Capacity (19.0°CWB)	kW	67.2		72.8		
★3 Heating Capacity	kcal / h	64,500		70,100		
	Btu / h	260,000		278,000		
	kW	75		81.5		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×930×765)+(1680×930×765)+(1680×930×765)		(1680×930×765)+(1680×930×765)+(1680×930×765)	
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	(13.72)+(13.72)+(13.72)		(13.72)+(13.72)+(13.72+10.53)	
	Number of Revolutions	r.p.m	(7980)+(7980)+(7980)		(7980)+(7980)+(6300,2900)	
	Motor Output×Number of Units	kW	(3.8×1)+(3.8×1)+(3.8×1)		(3.8×1)+(3.8×1)+((1.2+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.75×1)+(0.75×1)		(0.75×1)+(0.75×1)+(0.75×1)	
	Air Flow Rate	m³/min	180+180+180		180+180+185	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ15.9(Brazing Connection)		φ19.1(Brazing Connection)	
	Gas Pipe	mm	φ34.9(Brazing Connection)		φ34.9(Brazing Connection)	
Product Mass (Machine weight)		kg	205+205+205		205+205+249	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	7~100		6~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	7.7+7.7+7.7		7.7+7.7+8.4	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name		RXYQ28PHY1(E)		RXYQ30PHY1(E)		
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ8PY1(E)+RXYQ12PY1(E)		RXYQ8PY1(E)+RXYQ10PY1(E)+RXYQ12PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	67,800		72,600		
	Btu / h	269,000		288,000		
	kW	78.8		84.4		
★2 Cooling Capacity (19.0°CWB)	kW	78.3		83.9		
★3 Heating Capacity	kcal / h	75,300		80,800		
	Btu / h	299,000		321,000		
	kW	87.5		94		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×930×765)+(1680×930×765)+(1680×1240×765)	(1680×930×765)+(1680×930×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	(13.72)+(13.72)+(13.72+10.53)		(13.72)+(13.72+10.53)+(13.72+10.53)	
	Number of Revolutions	r.p.m	(7980)+(7980)+(6300,2900)		(7980)+(6300,2900)+(6300,2900)	
	Motor Output×Number of Units	kW	(3.8×1)+(3.8×1)+((2.5+4.5)×1)		(3.8×1)+((1.2+4.5)×1)+((2.5+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.75×1)+(0.75×1)+(0.35×2)		(0.75×1)+(0.75×1)+(0.35×2)	
	Air Flow Rate	m <sup>3</sup> /min	180+180+233		180+185+233	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)		φ19.1(Brazing Connection)	
	Gas Pipe	mm	φ34.9(Brazing Connection)		φ34.9(Brazing Connection)	
Product Mass (Machine weight)		kg	205+205+285		205+249+285	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	6~100		5~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	7.7+7.7+10.0		7.7+8.5+10.0	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

Model Name		RXYQ32PHY1(E)	RXYQ34PHY1(E)
Model Name (Independent Unit)		RXYQ8PY1(E)+RXYQ12PY1(E)+RXYQ12PY1(E)	RXYQ10PY1(E)+RXYQ12PY1(E)+RXYQ12PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h	77,300	82,200
	Btu / h	307,000	326,000
	kW	89.9	95.6
★2 Cooling Capacity (19.0°CWB)	kW	89.4	95
★3 Heating Capacity	kcal / h	86,000	92,000
	Btu / h	341,000	365,000
	kW	100	107
Casing Color		Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm (1680×930×765)+(1680×1240×765)+(1680×1240×765)	mm (1680×930×765)+(1680×1240×765)+(1680×1240×765)
Heat Exchanger		Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type
	Piston Displacement	m³/h	(13.72)+(13.72+10.53)+(13.72+10.53)
	Number of Revolutions	r.p.m	(7980)+(6300,2900)+(6300,2900)
	Motor Output×Number of Units	kW	((3.8×1)+((2.5+4.5)×1)+((2.5+4.5)×1)
	Starting Method		Soft start
Fan	Type		Propeller Fan
	Motor Output	kW	(0.75×1)+(0.35×2)+(0.35×2)
	Air Flow Rate	m³/min	180+233+233
	Drive		Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)
	Gas Pipe	mm	φ34.9(Brazing Connection)
Product Mass (Machine weight)		kg	205+285+285
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method		Deicer	Deicer
Capacity Control		%	5~100
Refrigerant	Refrigerant Name		R-410A
	Charge	kg	7.7+10.0+10.0
	Control		Electronic Expansion Valve
Refrigerator Oil		Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.			

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name		RXYQ36PHY1(E)		RXYQ38PHY1(E)		
Model Name (Independent Unit)		RXYQ12PY1(E)+RXYQ12PY1(E)+RXYQ12PY1(E)		RXYQ12PY1(E)+RXYQ12PY1(E)+RXYQ14PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	87,700		92,900		
	Btu / h	348,000		368,000		
	kW	102		108		
★2 Cooling Capacity (19.0°CWB)	kW	101		107		
★3 Heating Capacity	kcal / h	97,200		103,000		
	Btu / h	386,000		409,000		
	kW	113		120		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	(13.72+10.53)+(13.72+10.53)+(13.72+10.53)		(13.72+10.53)+(13.72+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(6300,2900)+(6300,2900)+(6300,2900)		(6300,2900)+(6300,2900)+(6300,2900,2900)	
	Motor Output×Number of Units	kW	((2.5+4.5)×1)+((2.5+4.5)×1)+((2.5+4.5)×1)		((2.5+4.5)×1)+((2.5+4.5)×1)+((0.3+4.5+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.35×2)+(0.35×2)+(0.35×2)		(0.35×2)+(0.35×2)+(0.35×2)	
	Air Flow Rate	m <sup>3</sup> /min	233+233+233		233+233+233	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)		φ19.1(Brazing Connection)	
	Gas Pipe	mm	φ41.3(Brazing Connection)		φ41.3(Brazing Connection)	
Product Mass (Machine weight)		kg	285+285+285		285+285+329	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	5~100		4~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	10.0+10.0+10.0		10.0+10.0+12.3	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

## Conversion Formulae

kcal/h=kW×860  
Btu/h=kW×3412  
cfm=m<sup>3</sup>/min×35.3

Model Name		RXYQ40PHY1(E)		RXYQ42PHY1(E)		
Model Name (Independent Unit)		RXYQ12PY1(E)+RXYQ12PY1(E)+RXYQ16PY1(E)		RXYQ12PY1(E)+RXYQ12PY1(E)+RXYQ18PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	97,200		101,000		
	Btu / h	386,000		399,000		
	kW	113		117		
★2 Cooling Capacity (19.0°CWB)	kW	112		116		
★3 Heating Capacity	kcal / h	108,000		114,000		
	Btu / h	427,000		450,000		
	kW	125		132		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m³/h	(13.72+10.53)+(13.72+10.53)+(13.72+10.53+10.53)		(13.72+10.53)+(13.72+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(6300,2900)+(6300,2900)+(6300,2900,2900)		(6300,2900)+(6300,2900)+(7980,2900,2900)	
	Motor Output×Number of Units	kW	((2.5+4.5)×1)+((2.5+4.5)×1)+((1.4+4.5+4.5)×1)		((2.5+4.5)×1)+((2.5+4.5)×1)+((3.0+4.5+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.35×2)+(0.35×2)+(0.35×2)		(0.35×2)+(0.35×2)+(0.75×2)	
	Air Flow Rate	m³/min	233+233+233		233+233+239	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)		φ19.1(Brazing Connection)	
	Gas Pipe	mm	φ41.3(Brazing Connection)		φ41.3(Brazing Connection)	
Product Mass (Machine weight)		kg	285+285+329		285+285+341	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	4~100		4~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	10.0+10.0+12.5		10.0+10.0+12.7	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name		RXYQ44PHY1(E)		RXYQ46PHY1(E)		
Model Name (Independent Unit)		RXYQ12PY1(E)+RXYQ16PY1(E)+RXYQ16PY1(E)		RXYQ12PY1(E)+RXYQ16PY1(E)+RXYQ18PY1(E)		
★1 Cooling Capacity (19.5°CWB)	kcal / h	108,000		111,000		
	Btu / h	427,000		440,000		
	kW	125		129		
★2 Cooling Capacity (19.0°CWB)	kW	124		128		
★3 Heating Capacity	kcal / h	119,000		124,000		
	Btu / h	471,000		491,000		
	kW	138		144		
Casing Color		Ivory White (5Y7.5/1)		Ivory White (5Y7.5/1)		
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)		
Heat Exchanger		Cross Fin Coil		Cross Fin Coil		
Comp.	Type		Hermetically Sealed Scroll Type		Hermetically Sealed Scroll Type	
	Piston Displacement	m <sup>3</sup> /h	(13.72+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)		(13.72+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	
	Number of Revolutions	r.p.m	(6300,2900)+(6300,2900,2900)+(6300,2900,2900)		(6300,2900)+(6300,2900,2900)+(7980,2900,2900)	
	Motor Output×Number of Units	kW	((2.5+4.5)×1)+((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)		((2.5+4.5)×1)+((1.4+4.5+4.5)×1)+((3.0+4.5+4.5)×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propeller Fan		Propeller Fan	
	Motor Output	kW	(0.35×2)+(0.35×2)+(0.35×2)		(0.35×2)+(0.35×2)+(0.75×2)	
	Air Flow Rate	m <sup>3</sup> /min	233+233+233		233+233+239	
	Drive		Direct Drive		Direct Drive	
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)		φ19.1(Brazing Connection)	
	Gas Pipe	mm	φ41.3(Brazing Connection)		φ41.3(Brazing Connection)	
Product Mass (Machine weight)		kg	285+329+329		285+329+341	
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	4~100		3~100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	10.0+12.5+12.5		10.0+12.5+12.7	
	Control		Electronic Expansion Valve		Electronic Expansion Valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps		Installation Manual, Operation Manual, Connection Pipes, Clamps		
Drawing No.						

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

Model Name			RXYQ48PHY1(E)	RXYQ50PHY1(E)
Model Name (Independent Unit)			RXYQ16PY1(E)+RXYQ16PY1(E)+RXYQ16PY1(E)	RXYQ16PY1(E)+RXYQ16PY1(E)+RXYQ18PY1(E)
★1 Cooling Capacity (19.5°CWB)	kcal / h		117,000	120,000
	Btu / h		464,000	478,000
	kW		136	140
★2 Cooling Capacity (19.0°CWB)	kW		135	139
★3 Heating Capacity	kcal / h		129,000	134,000
	Btu / h		512,000	532,000
	kW		150	156
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)	(1680×1240×765)+(1680×1240×765)+(1680×1240×765)
Heat Exchanger			Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type	Hermetically Sealed Scroll Type
	Piston Displacement	m <sup>3</sup> /h	(13.72+10.53+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)	(13.72+10.53+10.53)+(13.72+10.53+10.53)+(13.72+10.53+10.53)
	Number of Revolutions	r.p.m	(6300,2900,2900)+(6300,2900,2900)+(6300,2900,2900)	(6300,2900,2900)+(6300,2900,2900)+(7980,2900,2900)
	Motor Output×Number of Units	kW	((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)	((1.4+4.5+4.5)×1)+((1.4+4.5+4.5)×1)+((3.0+4.5+4.5)×1)
	Starting Method		Soft start	Soft start
Fan	Type		Propeller Fan	Propeller Fan
	Motor Output	kW	(0.35×2)+(0.35×2)+(0.35×2)	(0.35×2)+(0.35×2)+(0.75×2)
	Air Flow Rate	m <sup>3</sup> /min	233+233+233	233+233+239
	Drive		Direct Drive	Direct Drive
Connecting Pipes	Liquid Pipe	mm	φ19.1(Brazing Connection)	φ19.1(Brazing Connection)
	Gas Pipe	mm	φ41.3(Brazing Connection)	φ41.3(Brazing Connection)
Product Mass (Machine weight)		kg	329+329+329	329+329+341
Safety Devices			High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Over Current Relay, Inverter Overload Protector
Defrost Method			Deicer	Deicer
Capacity Control		%	3~100	3~100
Refrigerant	Refrigerant Name		R-410A	R-410A
	Charge	kg	12.5+12.5+12.5	12.5+12.5+12.7
	Control		Electronic Expansion Valve	Electronic Expansion Valve
Refrigerator Oil			Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories			Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.
- 4 The units with anti-corrosion treatment will be available as standard. Please specify the suffix "E" as RXYQ5PY1E.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## 1.2 Indoor Units

### Ceiling Mounted Cassette Type (Double Flow)

Model		FXCQ20MVE	FXCQ25MVE	FXCQ32MVE	FXCQ40MVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200	4,000	
	Btu/h	7,800	9,900	12,600	16,000	
	kW	2.3	2.9	3.7	4.7	
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6	4.5	
★3 Heating Capacity	kcal/h	2,200	2,800	3,400	4,300	
	Btu/h	8,500	10,900	13,600	17,100	
	kW	2.5	3.2	4.0	5.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (HxWxD)		mm	305x775x600	305x775x600	305x775x600	
Coil (Cross Fin Coil)	RowsxStagesxFin Pitch	mm	2x10x1.5	2x10x1.5	2x10x1.5	
	Face Area	m <sup>2</sup>	2x0.100	2x0.100	2x0.100	
Fan	Model		D17K2AA1	D17K2AB1	D17K2AB1	2D17K1AA1
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	10x1	15x1	15x1	20x1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	7/5	9/6.5	9/6.5	12/9
		cfm	247/177	318/230	318/230	424/318
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating				
Sound Absorbing Thermal Insulation Material		Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )
Machine Weight (Mass)		kg	26	26	26	31
★5 Sound Level (H/L) (220V)		dBA	32/27	34/28	34/28	34/29
Safety Devices		Fuse, Thermal Protector for Fan Motor				
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Decoration Panels (Option)	Model		BYBC32G-W1	BYBC32G-W1	BYBC32G-W1	BYBC50G-W1
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (HxWxD)		mm	53x1,030x680	53x1,030x680	53x1,030x680
	Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
Weight		kg	8	8	8	8.5
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	
Drawing No.		3D039413				

#### Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

#### Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**Ceiling Mounted Cassette Type (Double Flow)**

Model		FXCQ50MVE	FXCQ63MVE	FXCQ80MVE	FXCQ125MVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	5,000	6,300	8,000	12,500	
	Btu/h	19,800	24,900	31,700	49,500	
	kW	5.8	7.3	9.3	14.5	
★2 Cooling Capacity (19.0°CWB)	kW	5.6	7.1	9.0	14.0	
★3 Heating Capacity	kcal/h	5,400	6,900	8,600	13,800	
	Btu/h	21,500	27,300	34,100	54,600	
	kW	6.3	8.0	10.0	16.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	305×990×600	305×1,175×600	305×1,665×600	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	2×10×1.5	2×10×1.5	2×10×1.5	
	Face Area	m <sup>2</sup>	2×0.145	2×0.184	2×0.287	
Fan	Model		2D17K1AA1	2D17K2AA1VE	3D17K2AA1	3D17K2AB1
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	20×1	30×1	50×1	85×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	12/9	16.5/13	26/21	33/25
		cfm	424/318	582/459	918/741	1,165/883
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating				
Sound Absorbing Thermal Insulation Material		Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	Glass Wool/Urethane Foam	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )
Machine Weight (Mass)	kg	32	35	47	48	
★5 Sound Level (H/L)	dBA	34/29	37/32	39/34	44/38	
Safety Devices		Fuse, Thermal Protector for Fan Motor				
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Decoration Panels (Option)	Model		BYBC50G-W1	BYBC63G-W1	BYBC125G-W1	BYBC125G-W1
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (H×W×D)	mm	53×1,245×680	53×1,430×680	53×1,920×680	53×1,920×680
	Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
	Weight	kg	8.5	9.5	12	12
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Washer for Hanging Brackets, Clamp Metal, Drain Hose, Insulation for Fitting, Washer Fixing Plates, Sealing Pads, Clamps, Screws, Washers.	
Drawing No.		3D039413				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Ceiling Mounted Cassette Type (Multi-flow)

Model		FXFQ25MVE	FXFQ32MVE	FXFQ40MVE	FXFQ50MVE		
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,500	3,200	4,000	5,000		
	Btu/h	9,900	12,600	16,000	19,800		
	kW	2.9	3.7	4.7	5.8		
★2 Cooling Capacity (19.0°CWB)	kW	2.8	3.6	4.5	5.6		
★3 Heating Capacity	kcal/h	2,800	3,400	4,300	5,400		
	Btu/h	10,900	13,600	17,100	21,500		
	kW	3.2	4.0	5.0	6.3		
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate		
Dimensions: (H×W×D)		mm	246×840×840	246×840×840	246×840×840		
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	2×8×1.2	2×8×1.2	2×8×1.2		
	Face Area	m <sup>2</sup>	0.363	0.363	0.363		
Fan	Model		QTS46D14M	QTS46D14M	QTS46D14M	QTS46D14M	
	Type		Turbo Fan	Turbo Fan	Turbo Fan	Turbo Fan	
	Motor Output × Number of Units	W	30×1	30×1	30×1	30×1	
	Air Flow Rate (H/L)	m <sup>3</sup> /min	13/10	13/10	15/11	16/11	
		cfm	459/353	459/353	530/388	565/388	
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating		
Sound Absorbing Thermal Insulation Material		Polyurethane Form	Polyurethane Form	Polyurethane Form	Polyurethane Form		
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	
Machine Weight (Mass)		kg	24	24	24	24	
★5 Sound Level (HL) (220V)		dBA	30/27	30/27	31/27	32/27	
Safety Devices		Fuse		Fuse		Fuse	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve		
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series		
Decoration Panels (Option)	Model		BYCP125D-W1	BYCP125D-W1	BYCP125D-W1	BYCP125D-W1	
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	
	Dimensions: (H×W×D)	mm	45×950×950	45×950×950	45×950×950	45×950×950	
	Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	
	Weight	kg	5.5	5.5	5.5	5.5	
Standard Accessories		Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.		Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.		Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.	
Drawing No.		3D038812					

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**Ceiling Mounted Cassette Type (Multi-flow)**

Model		FXFQ63MVE	FXFQ80MVE	FXFQ100MVE	FXFQ125MVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	6,300	8,000	10,000	12,500	
	Btu/h	24,900	31,700	39,600	49,500	
	kW	7.3	9.3	11.6	14.5	
★2 Cooling Capacity (19.0°CWB)	kW	7.1	9.0	11.2	14.0	
★3 Heating Capacity	kcal/h	6,900	8,600	10,800	13,800	
	Btu/h	27,300	34,100	42,700	54,600	
	kW	8.0	10.0	12.5	16.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (HxWxD)		mm 246x840x840	246x840x840	288x840x840	288x840x840	
Coil (Cross Fin Coil)	RowsxStagesxFin Pitch	mm 2x10x1.2	2x10x1.2	2x12x1.2	2x12x1.2	
	Face Area	m <sup>2</sup> 0.454	0.454	0.544	0.544	
Fan	Model	QTS46D14M	QTS46D14M	QTS46C17M	QTS46C17M	
	Type	Turbo Fan	Turbo Fan	Turbo Fan	Turbo Fan	
	Motor Output x Number of Units	W 30x1	30x1	120x1	120x1	
	Air Flow Rate (H/L)	m <sup>3</sup> /min	18.5/14	20/15	26/21	30/24
		cfm	653/494	706/530	918/741	1,059/847
Drive	Direct Drive	Direct Drive	Direct Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating				
Sound Absorbing Thermal Insulation Material		Polyurethane Form	Polyurethane Form	Polyurethane Form	Polyurethane Form	
Piping Connections	Liquid Pipes	mm φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	
	Gas Pipes	mm φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	
	Drain Pipe	mm VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	
Machine Weight (Mass)	kg	25	25	29	29	
★5 Sound Level (H/L)	dBA	33/28	36/31	39/33	42/36	
Safety Devices		Fuse	Fuse	Fuse	Fuse	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Decoration Panels (Option)	Model	BYCP125D-W1	BYCP125D-W1	BYCP125D-W1	BYCP125D-W1	
	Panel Color	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	
	Dimensions: (HxWxD)	mm 45x950x950	45x950x950	45x950x950	45x950x950	
	Air Filter	Resin Net (with Mold Resistant)				
	Weight	kg 5.5	5.5	5.5	5.5	
Standard Accessories		Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.	Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.	Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.	Operation manual, Installation manual, Paper pattern for installation, Drain hose, Clamp metal, Washer fixing plate, Sealing pads, Clamps, Screws, Washer for hanging bracket, Insulation for fitting.	
Drawing No.		3D038812				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kWx860
Btu/h=kWx3412
cfm=m <sup>3</sup> /minx35.3

## 600×600 Ceiling Mounted Cassette Type (Multi Flow)

Model		FXZQ20M7V1B	FXZQ25M7V1B	FXZQ32M7V1B	
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,150	
	Btu/h	7,900	9,900	12,500	
	kW	2.3	2.9	3.7	
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6	
★3 Heating Capacity	kcal/h	2,200	2,800	3,400	
	Btu/h	8,500	10,900	13,600	
	kW	2.5	3.2	4.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	260×575×575	260×575×575	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	2×10×1.5	2×10×1.5	
	Face Area	m <sup>2</sup>	0.269	0.269	
Fan	Model		QTS32C15M	QTS32C15M	QTS32C15M
	Type		Turbo Fan	Turbo Fan	Turbo Fan
	Motor Output × Number of Units	W	55×1	55×1	55×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	9/7	9/7	9.5/7.5
		cfm	318/247	318/247	335/265
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Foamed Polystyrene/ Foamed Polyethylene	Foamed Polystyrene/ Foamed Polyethylene	Foamed Polystyrene/ Foamed Polyethylene	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm	VP20 (External Dia. 26 ) Internal Dia. 20	VP20 (External Dia. 26 ) Internal Dia. 20	VP20 (External Dia. 26 ) Internal Dia. 20
Machine Weight (Mass)		kg	18	18	18
★5 Sound Level (H/L) (230V)		dBA	30/25	30/25	32/26
Safety Devices			Fuse	Fuse	Fuse
Refrigerant Control			Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Connectable outside unit			R-410A M(A) Series	R-410A M(A) Series	R-410A M(A) Series
Decoration Panels (Option)	Model		BYFQ60BW1	BYFQ60BW1	BYFQ60BW1
	Panel Color		White (Ral 9010)	White (Ral 9010)	White (Ral 9010)
	Dimensions: (H×W×D)	mm	55×700×700	55×700×700	55×700×700
	Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
	Weight	kg	2.7	2.7	2.7
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Washer Fixing Plate, Sealing Pads, Clamps, Screws, Washer for Hanging Bracket, Insulation for Fitting.			
Drawing No.		3D038929A			

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outside temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outside temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outside temp.: 7°CDB, 6°CWB / Equivalent piping length; 7.5m, level difference; 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**600×600 Ceiling Mounted Cassette Type (Multi Flow)**

Model			FXZQ40M7V1B	FXZQ50M7V1B	
★1 Cooling Capacity (19.5°CWB)	kcal/h		4,000	5,000	
	Btu/h		15,900	19,900	
	kW		4.7	5.8	
★2 Cooling Capacity (19.0°CWB)	kW		4.5	5.6	
★3 Heating Capacity	kcal/h		4,300	5,400	
	Btu/h		17,000	21,500	
	kW		5.0	6.3	
Casing			Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	260×575×575	260×575×575	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	2×10×1.5	2×10×1.5	
	Face Area	m <sup>2</sup>	0.269	0.269	
Fan	Model		QTS32C15M	QTS32C15M	
	Type		Turbo Fan	Turbo Fan	
	Motor Output × Number of Units	W	55×1	55×1	
	Air Flow Rate (H/L)	m <sup>3</sup> /min	11/8	14/10	
		cfm	388/282	494/353	
Drive		Direct Drive	Direct Drive		
Temperature Control			Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material			Foamed Polystyrene/Foamed Polyethylene	Foamed Polystyrene/Foamed Polyethylene	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	
	Drain Pipe	mm	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	
Machine Weight (Mass)		kg	18	18	
★5 Sound Level (H/L) (230V)		dBA	36/28	41/33	
Safety Devices			Fuse	Fuse	
Refrigerant Control			Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outside unit			R-410A M(A) Series	R-410A M(A) Series	
Decoration Panels (Option)	Model		BYFQ60BW1	BYFQ60BW1	
	Panel Color		White (Ral 9010)	White (Ral 9010)	
	Dimensions: (H×W×D)		mm	55×700×700	55×700×700
	Air Filter			Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
	Weight		kg	2.7	2.7
Standard Accessories			Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Washer Fixing Plate, Sealing Pads, Clamps, Screws, Washer for Hanging Bracket, Insulation for Fitting.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Washer Fixing Plate, Sealing Pads, Clamps, Screws, Washer for Hanging Bracket, Insulation for Fitting.	
Drawing No.			3D038929A		

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outside temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outside temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outside temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Ceiling Mounted Cassette Corner Type

Model		FXKQ25MAVE	FXKQ32MAVE	FXKQ40MAVE	FXKQ63MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,500	3,200	4,000	6,300	
	Btu/h	9,900	12,600	16,000	24,900	
	kW	2.9	3.7	4.7	7.3	
★2 Cooling Capacity (19.0°CWB)	kW	2.8	3.6	4.5	7.1	
★3 Heating Capacity	kcal/h	2,800	3,400	4,300	6,900	
	Btu/h	10,900	13,600	17,100	27,300	
	kW	3.2	4.0	5.0	8.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	215×1,110×710	215×1,110×710	215×1,310×710	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	2×11×1.75	2×11×1.75	3×11×1.75	
	Face Area	m <sup>2</sup>	0.180	0.180	0.226	
Fan	Model		3D12H1AN1V1	3D12H1AN1V1	3D12H1AP1V1	4D12H1AJ1V1
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	15×1	15×1	20×1	45×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	11/9	11/9	13/10	18/15
		cfm	388/318	388/318	459/353	635/530
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating				
Sound Absorbing Thermal Insulation Material		Polyethylene Foam	Polyethylene Foam	Polyethylene Foam	Polyethylene Foam	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )
Machine Weight (Mass)	kg	31	31	31	34	
★5 Sound Level (H/L) (220V)	dBA	38/33	38/33	40/34	42/37	
Safety Devices		Fuse, Thermal Fuse for Fan Motor				
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable Outdoor Units		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Decoration Panels (Option)	Model		BYK45FJW1	BYK45FJW1	BYK45FJW1	BYK71FJW1
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (H×W×D)	mm	70×1,240×800	70×1,240×800	70×1,240×800	70×1,440×800
	Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
	Weight	kg	8.5	8.5	8.5	9.5
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Positioning Jig for Installation, Insulation for Hanger Bracket, Air Outlet Blocking Pad.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Positioning Jig for Installation, Insulation for Hanger Bracket, Air Outlet Blocking Pad.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Positioning Jig for Installation, Insulation for Hanger Bracket, Air Outlet Blocking Pad.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Positioning Jig for Installation, Insulation for Hanger Bracket, Air Outlet Blocking Pad.	
Drawing No.		3D038813A				

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1m in front of the unit and 1m downward. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**Slim Ceiling Mounted Duct Type (with Drain Pump)**

Model		FXDQ20NAVE	FXDQ25NAVE	FXDQ32NAVE
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200
	Btu/h	7,800	9,900	12,600
	kW	2.3	2.9	3.7
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6
★3 Heating Capacity	kcal/h	2,200	2,800	3,400
	Btu/h	8,500	10,900	13,600
	kW	2.5	3.2	4.0
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm 200×900×620	200×900×620	200×900×620
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 2×12×1.5	2×12×1.5	2×12×1.5
	Face Area	m <sup>2</sup> 0.176	0.176	0.176
Fan	Model	—		
	Type	Sirocco Fan		
	Motor Output × Number of Units	W 62×1	62×1	62×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min 9.5/7.5	9.5/7.5	10.5/8.5
	External Static Pressure	Pa 44-15 ★5	44-15 ★5	44-15 ★5
	Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Foamed Polyethylene		
Air Filter		Removal / Washable / Mildew Proof		
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)
Machine Weight (Mass)		kg 26	26	26
★6 Sound Level (H/L)		dBA 33/29	33/29	33/29
Safety Devices		Fuse, Thermal Protector for Fan Motor		
Refrigerant Control		Electronic Expansion Valve		
Standard Accessories		Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter		
Drawing No.		3D051253		

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 External static pressure is changeable to set by the remote controller this pressure means "High static pressure - Standard static pressure".
- ★6 The operation sound levels are the conversion values in anechoic chamber. In practice, the sound tend to be larger than the specified values due to ambient noise or reflections.  
When the place of suction is changed to the bottom suction, the sound level will increase by approx. 5dBA.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Slim Ceiling Mounted Duct Type (with Drain Pump)

Model		FXDQ40NAVE	FXDQ50NAVE	FXDQ63NAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300	
	Btu/h	16,000	19,800	24,900	
	kW	4.7	5.8	7.3	
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1	
★3 Heating Capacity	kcal/h	4,300	5,400	6,900	
	Btu/h	17,100	21,500	27,300	
	kW	5.0	6.3	8.0	
Casing Color		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	200×900×620	200×900×620	200×1100×620
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×12×1.5	3×12×1.5	3×12×1.5
	Face Area	m <sup>2</sup>	0.176	0.176	0.227
Fan	Model		—	—	—
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	62×1	130×1	130×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	10.5/8.5	12.5/10.0	16.5/13.0
	External Static Pressure	Pa	44-15 ★5	44-15 ★5	44-15 ★5
	Drive		Direct Drive	Direct Drive	Direct Drive
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Foamed Polyethylene	Foamed Polyethylene	Foamed Polyethylene	
Air Filter		Removal / Washable / Mildew Proof	Removal / Washable / Mildew Proof	Removal / Washable / Mildew Proof	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)
Machine Weight (Mass)		kg	27	28	31
★6 Sound Level (H/L)		dBA	34/30	35/31	36/32
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Standard Accessories		Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter	Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter	Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter	
Drawing No.		3D051253			

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
  - 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 External static pressure is changeable to set by the remote controller this pressure means "High static pressure - Standard static pressure".
- ★6 The operation sound levels are the conversion values in anechoic chamber. In practice, the sound tend to be larger than the specified values due to ambient noise or reflections.  
When the place of suction is changed to the bottom suction, the sound level will increase by approx. 5dBA.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**Slim Ceiling Mounted Duct Type (without Drain Pump)**

Model		FXDQ20NVET	FXDQ25NVET	FXDQ32NVET
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200
	Btu/h	7,800	9,900	12,600
	kW	2.3	2.9	3.7
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6
★3 Heating Capacity	kcal/h	2,200	2,800	3,400
	Btu/h	8,500	10,900	13,600
	kW	2.5	3.2	4.0
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm 200×900×620	200×900×620	200×900×620
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 2×12×1.5	2×12×1.5	2×12×1.5
	Face Area	m <sup>2</sup> 0.176	0.176	0.176
Fan	Model	—		
	Type	Sirocco Fan		
	Motor Output × Number of Units	W 62×1	62×1	62×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min 9.5/7.5	9.5/7.5	10.5/8.5
	External Static Pressure	Pa 44-15 ★5	44-15 ★5	44-15 ★5
	Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Foamed Polyethylene		
Air Filter		Removal / Washable / Mildew Proof		
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)
Machine Weight (Mass)		kg 26	26	26
★6 Sound Level (H/L)		dBA 33/29	33/29	33/29
Safety Devices		Fuse, Thermal Protector for Fan Motor		
Refrigerant Control		Electronic Expansion Valve		
Standard Accessories		Operation Manual, Installation Manual, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter		
Drawing No.		3D049693		

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length; 7.5m, level difference; 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 External static pressure is changeable to set by the remote controller this pressure means "High static pressure - Standard static pressure".
- ★6 The operation sound levels are the conversion values in anechoic chamber. In practice, the sound tend to be larger than the specified values due to ambient noise or reflections.  
When the place of suction is changed to the bottom suction, the sound level will increase by approx. 5dBA.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Slim Ceiling Mounted Duct Type (without Drain Pump)

Model		FXDQ40NVET	FXDQ50NVET	FXDQ63NVET
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300
	Btu/h	16,000	19,800	24,900
	kW	4.7	5.8	7.3
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1
★3 Heating Capacity	kcal/h	4,300	5,400	6,900
	Btu/h	17,100	21,500	27,300
	kW	5.0	6.3	8.0
Casing Color		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm 200×900×620	200×900×620	200×1100×620
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3×12×1.5	3×12×1.5	3×12×1.5
	Face Area	m <sup>2</sup> 0.176	0.176	0.227
Fan	Model	—		
	Type	Sirocco Fan		
	Motor Output × Number of Units	W 62×1	130×1	130×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min 10.5/8.5	12.5/10.0	16.5/13.0
	External Static Pressure	Pa 44-15 ★5	44-15 ★5	44-15 ★5
	Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Foamed Polyethylene		
Air Filter		Removal / Washable / Mildew Proof		
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)
Machine Weight (Mass)		kg 27	28	31
★6 Sound Level (H/L)		dBA 34/30	35/31	36/32
Safety Devices		Fuse, Thermal Protector for Fan Motor		
Refrigerant Control		Electronic Expansion Valve		
Standard Accessories		Operation Manual, Installation Manual, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter		
Drawing No.		3D049693		

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length; 7.5m, level difference; 0m. (Heat pump only)
  - 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 External static pressure is changeable to set by the remote controller this pressure means "High static pressure - Standard static pressure".
- ★6 The operation sound levels are the conversion values in anechoic chamber. In practice, the sound tend to be larger than the specified values due to ambient noise or reflections.  
When the place of suction is changed to the bottom suction, the sound level will increase by approx. 5dBA.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

**Slim Ceiling Mounted Duct Type (PVE: with Drain Pump PVET: without Drain Pump)**

Model		FXDQ20PVE FXDQ20PVET	FXDQ25PVE FXDQ25PVET	FXDQ32PVE FXDQ32PVET
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200
	Btu/h	7,800	9,900	12,600
	kW	2.3	2.9	3.7
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6
★3 Heating Capacity	kcal/h	2,200	2,800	3,400
	Btu/h	8,500	10,900	13,600
	kW	2.5	3.2	4.0
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (HxWxD)		mm 200x900x620	200x900x620	200x900x620
Coil (Cross Fin Coil)	RowsxStagesxFin Pitch	mm 2x12x1.5	2x12x1.5	2x12x1.5
	Face Area	m <sup>2</sup> 0.176	0.176	0.176
Fan	Model	—	—	—
	Type	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output x Number of Units	W 62x1	62x1	62x1
	Air Flow Rate (H/L)	m <sup>3</sup> /min 9.5/7.5	9.5/7.5	10.5/8.5
	External Static Pressure	Pa 44-15 ★5	44-15 ★5	44-15 ★5
	Drive	Direct Drive	Direct Drive	Direct Drive
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Foamed Polyethylene	Foamed Polyethylene	Foamed Polyethylene
Air Filter		Removal / Washable / Mildew Proof	Removal / Washable / Mildew Proof	Removal / Washable / Mildew Proof
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)	VP20 (External Dia. 26 Internal Dia. 20)
Machine Weight (Mass)		kg 26	26	26
★6 Sound Level (H/L)		dBA 33/29	33/29	33/29
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Standard Accessories		Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter	Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter	Operation Manual, Installation Manual, Warranty, Drain Hose, Sealing Pads, Clamps, Washers, Insulation for Fitting, Clamp Metal, Washer Fixing Plate, Screws for Duct Flanges, Air Filter
Drawing No.		3D052136		

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 External static pressure is changeable to set by the remote controller this pressure means "High static pressure - Standard static pressure".
- ★6 The operation sound levels are the conversion values in anechoic chamber. In practice, the sound tend to be larger than the specified values due to ambient noise or reflections.  
When the place of suction is changed to the bottom suction, the sound level will increase by approx. 5dBA.

Conversion Formulae
kcal/h=kWx860
Btu/h=kWx3412
cfm=m <sup>3</sup> /minx35.3

## Ceiling Mounted Built-in Type

Model		FXSQ20MVE	FXSQ25MVE	FXSQ32MVE
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200
	Btu/h	7,800	9,900	12,600
	kW	2.3	2.9	3.7
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6
★3 Heating Capacity	kcal/h	2,200	2,800	3,400
	Btu/h	8,500	10,900	13,600
	kW	2.5	3.2	4.0
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm	300×550×800	300×550×800
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×14×1.75	3×14×1.75
	Face Area	m <sup>2</sup>	0.088	0.088
Fan	Model		D18H3A	D18H3A
	Type		Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	50×1	50×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	9/6.5	9.5/7
	★4 External static pressure	Pa	88-39-20	88-39-20
	Drive		Direct Drive	Direct Drive
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm	VP25 (External Dia. 32 Internal Dia. 25)	VP25 (External Dia. 32 Internal Dia. 25)
Machine Weight (Mass)		kg	30	30
★6 Sound Level (H/L) (220V)		dBA	37/32	38/32
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series
Decoration Panel (Option)	Model		BYBS32DJW1	BYBS32DJW1
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (H×W×D)	mm	55×650×500	55×650×500
	Weight	kg	3	3
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.
Drawing No.		3D039431		

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- ★4 External static pressure is changeable to change over the connectors inside electrical box, this pressure means "High static pressure-Standard -Low static pressure".
- 5 Capacities are net, including a deduction for cooling (an additional for heating) for indoor fan motor heat.
- ★6 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

**Ceiling Mounted Built-in Type**

Model		FXSQ40MVE	FXSQ50MVE	FXSQ63MVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300	
	Btu/h	16,000	19,800	24,900	
	kW	4.7	5.8	7.3	
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1	
★3 Heating Capacity	kcal/h	4,300	5,400	6,900	
	Btu/h	17,100	21,500	27,300	
	kW	5.0	6.3	8.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm 300×700×800	300×700×800	300×1,000×800	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3×14×1.75	3×14×1.75	3×14×1.75	
	Face Area	m <sup>2</sup> 0.132	0.132	0.221	
Fan	Model		D18H2A	D18H2A	2D18H2A
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	65×1	85×1	125×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	11.5/9	15/11	21/15.5
	★4 External static pressure	Pa	88-49-20	88-59-29	88-49-20
	Drive		Direct Drive	Direct Drive	Direct Drive
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber	
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)	
	Drain Pipe	mm VP25 (External Dia. 32 Internal Dia. 25)	VP25 (External Dia. 32 Internal Dia. 25)	VP25 (External Dia. 32 Internal Dia. 25)	
Machine Weight (Mass)	kg	30	31	41	
★6 Sound Level (H/L)	dBA	38/32	41/36	42/35	
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	
Decoration Panel (Option)	Model		BYBS45DJW1	BYBS45DJW1	BYBS71DJW1
	Panel Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (H×W×D)	mm	55×800×500	55×800×500	55×1,100×500
	Weight	kg	3.5	3.5	4.5
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	
Drawing No.		3D039431			

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- ★4 External static pressure is changeable to change over the connectors inside electrical box, this pressure means "High static pressure-Standard -Low static pressure".
- 5 Capacities are net, including a deduction for cooling (an additional for heating) for indoor fan motor heat.
- ★6 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Ceiling Mounted Built-in Type

Model		FXSQ80MVE	FXSQ100MVE	FXSQ125MVE
★1 Cooling Capacity (19.5°CWB)	kcal/h	8,000	10,000	12,500
	Btu/h	31,700	39,600	49,500
	kW	9.3	11.6	14.5
★2 Cooling Capacity (19.0°CWB)	kW	9.0	11.2	14.0
★3 Heating Capacity	kcal/h	8,600	10,800	13,800
	Btu/h	34,100	42,700	54,600
	kW	10.0	12.5	16.0
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm 300×1,400×800	300×1,400×800	300×1,400×800
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3×14×1.75	3×14×1.75	3×14×1.75
	Face Area	m <sup>2</sup> 0.338	0.338	0.338
Fan	Model	3D18H2A	3D18H2A	3D18H2A
	Type	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W 225×1	225×1	225×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min 27/21.5	28/22	38/28
	★4 External static pressure	Pa 113-82	107-75	78-39
	Drive	Direct Drive	Direct Drive	Direct Drive
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
Piping Connections	Liquid Pipes	mm φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm VP25 (External Dia. 32 Internal Dia. 25)	VP25 (External Dia. 32 Internal Dia. 25)	VP25 (External Dia. 32 Internal Dia. 25)
Machine Weight (Mass)	kg	51	51	52
★6 Sound Level (H/L)	dBA	43/37	43/37	46/41
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series
Decoration Panel (Option)	Model	BYBS125DJW1	BYBS125DJW1	BYBS125DJW1
	Panel Color	White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
	Dimensions: (H×W×D)	mm 55×1,500×500	55×1,500×500	55×1,500×500
	Weight	kg 6.5	6.5	6.5
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers.
Drawing No.		3D039431		

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- ★4 External static pressure is changeable to change over the connectors inside electrical box, this pressure means "High static pressure-Standard".
- 5 Capacities are net, including a deduction for cooling (an additional for heating) for indoor fan motor heat.
- ★6 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

**Ceiling Mounted Duct Type**

Model		FXMQ40MAVE	FXMQ50MAVE	FXMQ63MAVE	FXMQ80MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300	8,000	
	Btu/h	16,000	19,800	24,900	31,700	
	kW	4.7	5.8	7.3	9.3	
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1	9.0	
★3 Heating Capacity	kcal/h	4,300	5,400	6,900	8,600	
	Btu/h	17,100	21,500	27,300	34,100	
	kW	5.0	6.3	8.0	10.0	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	390×720×690	390×720×690	390×720×690	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×16×2.0	3×16×2.0	3×16×2.0	
	Face Area	m <sup>2</sup>	0.181	0.181	0.181	
Fan	Model		D11/2D3AB1VE	D11/2D3AB1VE	D11/2D3AB1VE	D11/2D3AA1VE
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	100×1	100×1	100×1	160×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	14/11.5	14/11.5	14/11.5	19.5/16
		cfm	494/406	494/406	494/406	688/565
	External Static Pressure 50 / 60Hz	Pa	157/157-118/108 ★4	157/157-118/108 ★4	157/157-118/108 ★4	157/160-108/98 ★4
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating				
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber	Glass Fiber	
Air Filter		★5	★5	★5	★5	
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )
Machine Weight (Mass)	kg	44	44	44	45	
★7 Sound Level (H/L)	dBA	39/35	39/35	39/35	42/38	
Safety Devices		Fuse, Thermal Fuse for Fan Motor				
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	
Drawing No.		3D038814A				

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- ★4 External static pressure is changeable to change over the connectors inside electrical box, this pressure means "High static pressure-Standard".
- ★5 Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its colorimetric method (gravity method) 50% or more.
- 6 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★7 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Ceiling Mounted Duct Type

Model		FXMQ100MAVE	FXMQ125MAVE	FXMQ200MAVE	FXMQ250MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	10,000	12,500	19,800	24,800	
	Btu/h	39,600	49,500	78,500	98,300	
	kW	11.6	14.5	23.0	28.8	
★2 Cooling Capacity (19.0°CWB)	kW	11.2	14.0	22.4	28.0	
★3 Heating Capacity	kcal/h	10,800	13,800	21,500	27,100	
	Btu/h	42,700	54,600	85,300	107,000	
	kW	12.5	16.0	25.0	31.5	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm	390×1,110×690	390×1,110×690	470×1,380×1,100	470×1,380×1,100
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×16×2.0	3×16×2.0	3×26×2.0	3×26×2.0
	Face Area	m <sup>2</sup>	0.319	0.319	0.68	0.68
Fan	Model		2D11/2D3AG1VE	2D11/2D3AF1VE	D13/4G2DA1×2	D13/4G2DA1×2
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	270×1	430×1	380×2	380×2
	Air Flow Rate (H/L)	m <sup>3</sup> /min	29/23	36/29	58/50	72/62
		cfm	1,024/812	1,271/1,024	2,047/1,765	2,542/2,189
	External Static Pressure 50 / 60Hz	Pa	157/172-98/98 ★4	191/245-152/172 ★4	221/270-132 ★4	270/191-147 ★4
Drive		Direct Drive	Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber	Glass Fiber	
Air Filter		★5	★5	★5	★5	
Piping Connections	Liquid Pipes	mm	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ19.1 (Brazing Connection)	φ22.2 (Brazing Connection)
	Drain Pipe	mm	VP25 ( External Dia. 32 Internal Dia. 25 )	VP25 ( External Dia. 32 Internal Dia. 25 )	PS1B	PS1B
Machine Weight (Mass)	kg	63	65	137	137	
★7 Sound Level (H/L)	dBA	43/39	45/42	48/45	48/45	
Safety Devices		Fuse, Thermal Fuse for Fan Motor	Fuse, Thermal Fuse for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws.	Operation Manual, Installation Manual, Sealing Pads, Connection Pipes, Screws, Clamps.	Operation Manual, Installation Manual, Sealing Pads, Connection Pipes, Screws, Clamps.	
Drawing No.		3D038814A				

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- ★4 External static pressure is changeable to change over the connectors inside electrical box, this pressure means "High static pressure-Standard".
- ★5 Air filter is not standard accessory, but please mount it in the duct system of the suction side. Select its colorimetric method (gravity method) 50% or more.
  - 6 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★7 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

**Ceiling Suspended Type**

Model		FXHQ32MAVE	FXHQ63MAVE	FXHQ100MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	3,200	6,300	10,000	
	Btu/h	12,600	24,900	39,600	
	kW	3.7	7.3	11.6	
★2 Cooling Capacity (19.0°CWB)	kW	3.6	7.1	11.2	
★3 Heating Capacity	kcal/h	3,400	6,900	10,800	
	Btu/h	13,600	27,300	42,700	
	kW	4.0	8.0	12.5	
Casing Color		White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)	
Dimensions: (H×W×D)		mm 195×960×680	mm 195×1,160×680	mm 195×1,400×680	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 2×12×1.75	mm 3×12×1.75	mm 3×12×1.75	
	Face Area	m <sup>2</sup> 0.182	m <sup>2</sup> 0.233	m <sup>2</sup> 0.293	
Fan	Model	3D12K1AA1	4D12K1AA1	3D12K2AA1	
	Type	Sirocco Fan	Sirocco Fan	Sirocco Fan	
	Motor Output × Number of Units	W 62×1	W 62×1	W 130×1	
	Air Flow Rate (H/L)	m <sup>3</sup> /min	12/10	17.5/14	25/19.5
		cfm	424/353	618/494	883/688
Drive	Direct Drive	Direct Drive	Direct Drive		
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Wool	Glass Wool	Glass Wool	
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	mm φ9.5 (Flare Connection)	mm φ9.5 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	mm φ15.9 (Flare Connection)	mm φ15.9 (Flare Connection)	
	Drain Pipe	mm VP20 (External Dia. 26 Internal Dia. 20)	mm VP20 (External Dia. 26 Internal Dia. 20)	mm VP20 (External Dia. 26 Internal Dia. 20)	
Machine Weight (Mass)	kg	24	28	33	
★5 Sound Level (H/L)	dBA	36/31	39/34	45/37	
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Clamps, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Clamps, Washers.	Operation Manual, Installation Manual, Paper Pattern for Installation, Drain Hose, Clamp Metal, Insulation for Fitting, Clamps, Washers.	
Drawing No.		3D038815A			

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Wall Mounted Type

Model		FXAQ20MAVE	FXAQ25MAVE	FXAQ32MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200	
	Btu/h	7,800	9,900	12,600	
	kW	2.3	2.9	3.7	
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6	
★3 Heating Capacity	kcal/h	2,200	2,800	3,400	
	Btu/h	8,500	10,900	13,600	
	kW	2.5	3.2	4.0	
Casing Color		White (3.0Y8.5/10.5)	White (3.0Y8.5/10.5)	White (3.0Y8.5/10.5)	
Dimensions: (H×W×D)		mm 290×795×230	290×795×230	290×795×230	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 2×14×1.4	2×14×1.4	2×14×1.4	
	Face Area	m <sup>2</sup> 0.161	0.161	0.161	
Fan	Model		QCL9661M	QCL9661M	QCL9661M
	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output × Number of Units	W	40×1	40×1	40×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	7.5/4.5	8/5	9/5.5
		cfm	265/159	282/177	318/194
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Foamed Polystyrene / Foamed Polyethylene	Foamed Polystyrene / Foamed Polyethylene	Foamed Polystyrene / Foamed Polyethylene	
Air Filter		Resin Net (Washable)	Resin Net (Washable)	Resin Net (Washable)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	
	Drain Pipe	mm VP13 (External Dia. 18 Internal Dia. 13)	VP13 (External Dia. 18 Internal Dia. 13)	VP13 (External Dia. 18 Internal Dia. 13)	
Machine Weight (Mass)		kg 11	11	11	
★5 Sound Level (H/L)		dBA 35/29	36/29	37/29	
Safety Devices		Fuse	Fuse	Fuse	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	
Drawing No.		3D039370B			

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Wall Mounted Type

Model		FXAQ40MAVE	FXAQ50MAVE	FXAQ63MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300	
	Btu/h	16,000	19,800	24,900	
	kW	4.7	5.8	7.3	
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1	
★3 Heating Capacity	kcal/h	4,300	5,400	6,900	
	Btu/h	17,100	21,500	27,300	
	kW	5.0	6.3	8.0	
Casing Color		White (3.0Y8.5/10.5)	White (3.0Y8.5/10.5)	White (3.0Y8.5/10.5)	
Dimensions: (H×W×D)		mm 290×1,050×230	mm 290×1,050×230	mm 290×1,050×230	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 2×14×1.4	mm 2×14×1.4	mm 2×14×1.4	
	Face Area	m <sup>2</sup> 0.213	m <sup>2</sup> 0.213	m <sup>2</sup> 0.213	
Fan	Model		QCL9686M	QCL9686M	QCL9686M
	Type		Cross Flow Fan	Cross Flow Fan	Cross Flow Fan
	Motor Output × Number of Units	W	43×1	43×1	43×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	12/9	15/12	19/14
		cfm	424/318	530/424	671/494
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Foamed Polystyrene / Foamed Polyethylene	Foamed Polystyrene / Foamed Polyethylene	Foamed Polystyrene / Foamed Polyethylene	
Air Filter		Resin Net (Washable)	Resin Net (Washable)	Resin Net (Washable)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	mm φ6.4 (Flare Connection)	mm φ9.5 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	mm φ12.7 (Flare Connection)	mm φ15.9 (Flare Connection)	
	Drain Pipe	mm VP13 (External Dia. 18 Internal Dia. 13)	mm VP13 (External Dia. 18 Internal Dia. 13)	mm VP13 (External Dia. 18 Internal Dia. 13)	
Machine Weight (Mass)		kg 14	kg 14	kg 14	
★5 Sound Level (H/L)		dBA 39/34	dBA 42/36	dBA 46/39	
Safety Devices		Fuse	Fuse	Fuse	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable outdoor unit		R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	Operation Manual, Installation Manual, Installation Panel, Paper Pattern for Installation, Insulation Tape, Clamps, screws.	
Drawing No.		3D039370B			

Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp; 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured under JISB8616 conditions. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Floor Standing Type

Model		FXLQ20MAVE	FXLQ25MAVE	FXLQ32MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	2,000	2,500	3,200	
	Btu/h	7,800	9,900	12,600	
	kW	2.3	2.9	3.7	
★2 Cooling Capacity (19.0°CWB)	kW	2.2	2.8	3.6	
★3 Heating Capacity	kcal/h	2,200	2,800	3,400	
	Btu/h	8,500	10,900	13,600	
	kW	2.5	3.2	4.0	
Casing Color		Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)	
Dimensions: (H×W×D)		mm 600×1,000×222	mm 600×1,000×222	mm 600×1,140×222	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3×14×1.5	mm 3×14×1.5	mm 3×14×1.5	
	Face Area	m <sup>2</sup> 0.159	m <sup>2</sup> 0.159	m <sup>2</sup> 0.200	
Fan	Model		D14B20	D14B20	2D14B13
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	15×1	15×1	25×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	7/6	7/6	8/6
		cfm	247/212	247/212	282/212
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam	
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	mm φ6.4 (Flare Connection)	mm φ6.4 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	mm φ12.7 (Flare Connection)	mm φ12.7 (Flare Connection)	
	Drain Pipe	mm φ21 O.D (Vinyl Chloride)	mm φ21 O.D (Vinyl Chloride)	mm φ21 O.D (Vinyl Chloride)	
Machine Weight (Mass)		kg 25	kg 25	kg 30	
★5 Sound Level (H/L)		dB(A) 35/32	dB(A) 35/32	dB(A) 35/32	
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable Outdoor Unit		R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	
Drawing No.		3D038816A			

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1.5 m in front of the unit at a height of 1.5 m. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

kcal/h=kW×860  
Btu/h=kW×3412  
cfm=m<sup>3</sup>/min×35.3

**Floor Standing Type**

Model			FXLQ40MAVE	FXLQ50MAVE	FXLQ63MAVE
★1 Cooling Capacity (19.5°CWB)		kcal/h	4,000	5,000	6,300
		Btu/h	16,000	19,800	24,900
		kW	4.7	5.8	7.3
★2 Cooling Capacity (19.0°CWB)		kW	4.5	5.6	7.1
★3 Heating Capacity		kcal/h	4,300	5,400	6,900
		Btu/h	17,100	21,500	27,300
		kW	5.0	6.3	8.0
Casing Color			Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)	Ivory White (5Y7.5/1)
Dimensions: (H×W×D)		mm	600×1,140×222	600×1,420×222	600×1,420×222
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×14×1.5	3×14×1.5	3×14×1.5
	Face Area	m <sup>2</sup>	0.200	0.282	0.282
Fan	Model		2D14B13	2D14B20	2D14B20
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	25×1	35×1	35×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	11/8.5	14/11	16/12
		cfm	388/300	494/388	565/424
Drive			Direct Drive	Direct Drive	Direct Drive
Temperature Control			Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material			Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam
Air Filter			Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)
Machine Weight (Mass)		kg	30	36	36
★5 Sound Level (H/L)		dBA	38/33	39/34	40/35
Safety Devices			Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor
Refrigerant Control			Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Connectable Outdoor Unit			R-410A P Series	R-410A P Series	R-410A P Series
Standard Accessories			Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.
Drawing No.			3D038816A		

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1.5 m in front of the unit at a height of 1.5 m. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Concealed Floor Standing Type

Model			FXNQ20MAVE	FXNQ25MAVE	FXNQ32MAVE
★1 Cooling Capacity (19.5°CWB)		kcal/h	2,000	2,500	3,200
		Btu/h	7,800	9,900	12,600
		kW	2.3	2.9	3.7
★2 Cooling Capacity (19.0°CWB)		kW	2.2	2.8	3.6
★3 Heating Capacity		kcal/h	2,200	2,800	3,400
		Btu/h	8,500	10,900	13,600
		kW	2.5	3.2	4.0
Casing Color			Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (H×W×D)		mm	610×930×220	610×930×220	610×1,070×220
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm	3×14×1.5	3×14×1.5	3×14×1.5
	Face Area	m <sup>2</sup>	0.159	0.159	0.200
Fan	Model		D14B20	D14B20	2D14B13
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	15×1	15×1	25×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	7/6	7/6	8/6
		cfm	247/212	247/212	282/212
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control			Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material			Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam	Glass Fiber/ Urethane Foam
Air Filter			Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)
Piping Connections	Liquid Pipes	mm	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ6.4 (Flare Connection)
	Gas Pipes	mm	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ12.7 (Flare Connection)
	Drain Pipe	mm	φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)
Machine Weight (Mass)		kg	19	19	23
★5 Sound Level (H/L)		dBA	35/32	35/32	35/32
Safety Devices			Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor
Refrigerant Control			Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve
Connectable Outdoor Unit			R-410A P Series	R-410A P Series	R-410A P Series
Standard Accessories			Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.
Drawing No.			3D038817A		

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1.5 m in front of the unit at a height of 1.5 m. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

## Conversion Formulae

kcal/h=kW×860  
Btu/h=kW×3412  
cfm=m<sup>3</sup>/min×35.3

**Concealed Floor Standing Type**

Model		FXNQ40MAVE	FXNQ50MAVE	FXNQ63MAVE	
★1 Cooling Capacity (19.5°CWB)	kcal/h	4,000	5,000	6,300	
	Btu/h	16,000	19,800	24,900	
	kW	4.7	5.8	7.3	
★2 Cooling Capacity (19.0°CWB)	kW	4.5	5.6	7.1	
★3 Heating Capacity	kcal/h	4,300	5,400	6,900	
	Btu/h	17,100	21,500	27,300	
	kW	5.0	6.3	8.0	
Casing Color		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (H×W×D)		mm 610×1,070×220	610×1,350×220	610×1,350×220	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3×14×1.5	3×14×1.5	3×14×1.5	
	Face Area	m <sup>2</sup> 0.200	0.282	0.282	
Fan	Model		2D14B13	2D14B20	2D14B20
	Type		Sirocco Fan	Sirocco Fan	Sirocco Fan
	Motor Output × Number of Units	W	25×1	35×1	35×1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	11/8.5	14/11	16/12
		cfm	388/300	494/388	565/424
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Fiber / Urethane Foam	Glass Fiber / Urethane Foam	Glass Fiber / Urethane Foam	
Air Filter		Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	Resin Net (with Mold Resistant)	
Piping Connections	Liquid Pipes	mm φ6.4 (Flare Connection)	φ6.4 (Flare Connection)	φ9.5 (Flare Connection)	
	Gas Pipes	mm φ12.7 (Flare Connection)	φ12.7 (Flare Connection)	φ15.9 (Flare Connection)	
	Drain Pipe	mm φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)	φ21 O.D (Vinyl Chloride)	
Machine Weight (Mass)	kg	23	27	27	
★5 Sound Level (H/L)	dBA	38/33	39/34	40/35	
Safety Devices		Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	Fuse, Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Connectable Outdoor Unit		R-410A P Series	R-410A P Series	R-410A P Series	
Standard Accessories		Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	Operation Manual, Installation Manual, Insulation for Fitting, Drain Hose, Clamps, Screws, Washers, Level Adjustment Screw.	
Drawing No.		3D038817A			

**Notes:**

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an addition for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1.5 m in front of the unit at a height of 1.5 m. During actual operation, these values are normally somewhat higher as a result of ambient conditions.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

## Ceiling Suspended Cassette Type

Model	Indoor Unit		FXUQ71MAV1	FXUQ100MAV1	FXUQ125MAV1
	Connection Unit		BEVQ71MAVE	BEVQ100MAVE	BEVQ125MAVE
★1 Cooling Capacity (19.5°CWB)	kcal/h		7,100	10,000	12,500
	Btu/h		28,300	39,600	49,500
	kW		8.3	11.6	14.5
★2 Cooling Capacity (19.0°CWB)	kW		8.0	11.2	14.0
★3 Heating Capacity	kcal/h		7,700	10,800	12,000
	Btu/h		30,700	42,700	47,800
	kW		9.0	12.5	14.0
Casing Color			White (10Y9/0.5)	White (10Y9/0.5)	White (10Y9/0.5)
Dimensions: (HxWxD)			mm 165x895x895	230x895x895	230x895x895
Coil (Cross Fin Coil)	RowsxStagesxFin Pitch	mm	3x6x1.5	3x8x1.5	3x8x1.5
	Face Area	m <sup>2</sup>	0.265	0.353	0.353
Fan	Model		QTS48A10M	QTS50B15M	QTS50B15M
	Type		Turbo Fan	Turbo Fan	Turbo Fan
	Motor Output x Number of Units	W	45x1	90x1	90x1
	Air Flow Rate (H/L)	m <sup>3</sup> /min	19/14	29/21	32/23
		cfm	671/494	1,024/741	1,130/812
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control			Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating
Sound Absorbing Thermal Insulation Material			Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene	Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene	Heat Resistant Foamed Polyethylene, Regular Foamed Polyethylene
Piping Connections	Liquid Pipes	mm	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)	φ9.5 (Flare Connection)
	Gas Pipes	mm	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)	φ15.9 (Flare Connection)
	Drain Pipe	mm	I.Dφ20xO.Dφ26	I.Dφ20xO.Dφ26	I.Dφ20xO.Dφ26
Machine Weight (Mass)		kg	25	31	31
★5 Sound Level (H/L)		dBA	40/35	43/38	44/39
Safety Devices			Thermal Protector for Fan Motor	Thermal Protector for Fan Motor	Thermal Protector for Fan Motor
Standard Accessories			Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate.	Operation Manual, Installation Manual, Drain Hose, Clamp Metal, Insulation for Fitting, Sealing Pads, Clamps, Screws, Washers, Holding Plate.
Drawing No.			C:4D045395A		

## Notes:

- ★1 Indoor temp. : 27°CDB, 19.5°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★2 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp.: 35°CDB / Equivalent piping length: 7.5m, level difference: 0m.
- ★3 Indoor temp. : 20°CDB / outdoor temp.: 7°CDB, 6°CWB / Equivalent piping length: 7.5m, level difference: 0m. (Heat pump only)
- 4 Capacities are net, including a deduction for cooling (an additional for heating) for indoor fan motor heat.
- ★5 Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values are normally somewhat higher during actual operation as a result of ambient conditions.

Conversion Formulae
kcal/h=kWx860
Btu/h=kWx3412
cfm=m <sup>3</sup> /minx35.3

## BEV Units

Model	BEVQ71MAVE		BEVQ100MAVE	BEVQ125MAVE
Power Supply	1 Phase 50Hz 220~240V		1 Phase 50Hz 220~240V	1 Phase 50Hz 220~240V
Casing	Galvanized Steel Plate		Galvanized Steel Plate	Galvanized Steel Plate
Dimensions: (HxWxD)	mm	100x350x225	100x350x225	100x350x225
Sound Absorbing Thermal Insulation Material			Flame and Heat Resistant Foamed Polyethylene	Flame and Heat Resistant Foamed Polyethylene
Piping Connection	Indoor Unit	Liquid Pipes	9.5mm (Flare Connection)	9.5mm (Flare Connection)
		Gas Pipes	15.9mm (Flare Connection)	15.9mm (Flare Connection)
	Outdoor Unit	Liquid Pipes	9.5mm (Flare Connection)	9.5mm (Flare Connection)
		Suction Gas Pipes	15.9mm (Flare Connection)	15.9mm (Flare Connection)
Machine Weight (Mass)		kg	3.0	3.5
Standard Accessories			Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps	Installation manual, Gas piping connections, Insulation for fitting, Sealing material, Clamps
Drawing No.			4D045387A	4D045388A

Outdoor Air Processing Unit

Model		FXMQ125MFV1	FXMQ200MFV1	FXMQ250MFV1	
★1 Cooling Capacity	kcal/h	12,000	19,300	24,100	
	Btu/h	47,800	76,400	95,500	
	kW	14.0	22.4	28.0	
★1 Heating Capacity	kcal/h	7,700	12,000	15,000	
	Btu/h	30,400	47,400	59,400	
	kW	8.9	13.9	17.4	
Casing		Galvanized Steel Plate	Galvanized Steel Plate	Galvanized Steel Plate	
Dimensions: (HxWxD)		mm 470x744x1,100	470x1,380x1,100	470x1,380x1,100	
Coil (Cross Fin Coil)	Rows×Stages×Fin Pitch	mm 3x26x2.0	3x26x2.0	3x26x2.0	
	Face Area	m <sup>2</sup> 0.28	0.65	0.65	
Fan	Model	D13/4G2DA1	D13/4G2DA1	D13/4G2DA1	
	Type	Sirocco Fan	Sirocco Fan	Sirocco Fan	
	Motor Output × Number of Units	W 380x1	380x1	380x1	
	Air Flow Rate (H/L)	m <sup>3</sup> /min	18	28	35
		cfm	635	988	1,236
	External Static Pressure ★4	Pa	185	225	205
Drive		Direct Drive	Direct Drive	Direct Drive	
Temperature Control		Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	Microprocessor Thermostat for Cooling and Heating	
Sound Absorbing Thermal Insulation Material		Glass Fiber	Glass Fiber	Glass Fiber	
Air Filter		★2	★2	★2	
Piping Connections	Liquid Pipes	9.5mm (Flare Connection)	9.5mm (Flare Connection)	9.5mm (Flare Connection)	
	Gas Pipes	15.9mm (Flare Connection)	19.1mm (Brazing Connection)	22.2mm (Brazing Connection)	
	Drain Pipe	(mm) PS1B (female thread)	PS1B (female thread)	PS1B (female thread)	
Machine Weight (Mass)	kg	86	123	123	
Sound Level (220V) ★3,★4	dBA	42	47	47	
Safety Devices		Fuse Thermal Protector for Fan Motor	Fuse Thermal Protector for Fan Motor	Fuse Thermal Protector for Fan Motor	
Refrigerant Control		Electronic Expansion Valve	Electronic Expansion Valve	Electronic Expansion Valve	
Standard Accessories		Operation Manual, Installation Manual, Sealing Pads, Screws, Clamps.	Operation Manual, Installation Manual, Sealing Pads, Connection Pipes, Screws, Clamps.	Operation Manual, Installation Manual, Sealing Pads, Connection Pipes, Screws, Clamps.	
Connectable Outdoor Units ★5,★6		RXYQ8-54PY1	RXYQ8-54PY1	RXYQ10-54PY1	
Drawing No.		C:3D046147A	C:3D046147A	C:3D046147A	

Notes:

- ★1. Specifications are based on the following conditions:
  - Cooling: Outdoor temp. of 33°CDB, 28°CWB (68% RH). and discharge temp. of 18°CDB
  - Heating: Outdoor temp. of 0°CDB, -2.9°CWB (50% RH). and discharge temp. of 25°CDB
  - Equivalent reference piping length: 7.5m (0m Horizontal)
  - At 220V
- ★2. Air intake filter is not supplied, so be sure to install the optional long-life filter or high-efficiency filter. Please mount it in the duct system of the suction side. Select its colorimetric method (gravity method) 50% or more.
- ★3. Anechoic chamber conversion value, measured at a point 1.5m downward from the unit center. These values (measured at 220V) are normally somewhat higher during actual operation as a result of ambient conditions.
- ★4. Valves measured at 220 V.
- ★5. Within the range that the total capacity of indoor units is 50 to 100%, it is possible to connect to the outdoor unit.
- ★6. It is not possible to connect to the 5 HP outdoor unit. Not available for Heat Recovery type and VRV II-S series.
  - This equipment cannot be incorporated into the refrigerant piping system or remote group control of the VRV II system.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m <sup>3</sup> /min×35.3

# Part 3

## Refrigerant Circuit


1. Refrigerant Circuit .....	60
1.1 RXYQ5P .....	60
1.2 RXYQ8P .....	62
1.3 RXYQ10P, 12P .....	64
1.4 RXYQ14P, 16P, 18P .....	66
1.5 Outdoor air processing unit FXMQ125MFV1~250MFV1 .....	68
2. Functional Parts Layout .....	69
2.1 RXYQ5P .....	69
2.2 RXYQ8P .....	70
2.3 RXYQ10P, 12P (12P: EUROPE) .....	71
2.4 RXYQ12P .....	72
2.5 RXYQ14P, 16P, 18P .....	73
3. Refrigerant Flow for Each Operation Mode .....	74

# 1. Refrigerant Circuit

## 1.1 RXYQ5P

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 188Hz by using the inverter. The number of operating steps is as follows when Inverter compressor is operated. RXYQ5P : 18 steps
D	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
G	Y1S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
J	Y2S	Solenoid valve (Oil return: SVO)	Used to return oil from the accumulator to the compressor.
K	Y4S	Solenoid valve (Injection) SVT	Used to cool the compressor by injecting refrigerant when the compressor discharge temperature is high.
M	Y3S	4-way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
T	—	Pressure regulating valve 1	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
W	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the compressor.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (Suction pipe: Ts)	Used to detect suction pipe temperature.
3	R3T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
4	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
5	R6T	Thermistor (Liquid pipe TI)	Used to detect liquid pipe temperature.
6	R7T	Thermistor (Accumulator inlet Ts1)	Used to detect gas pipe temperature at the accumulator inlet. Keep the suction superheated degree constant in heating operation, and others.

RXYQ5P

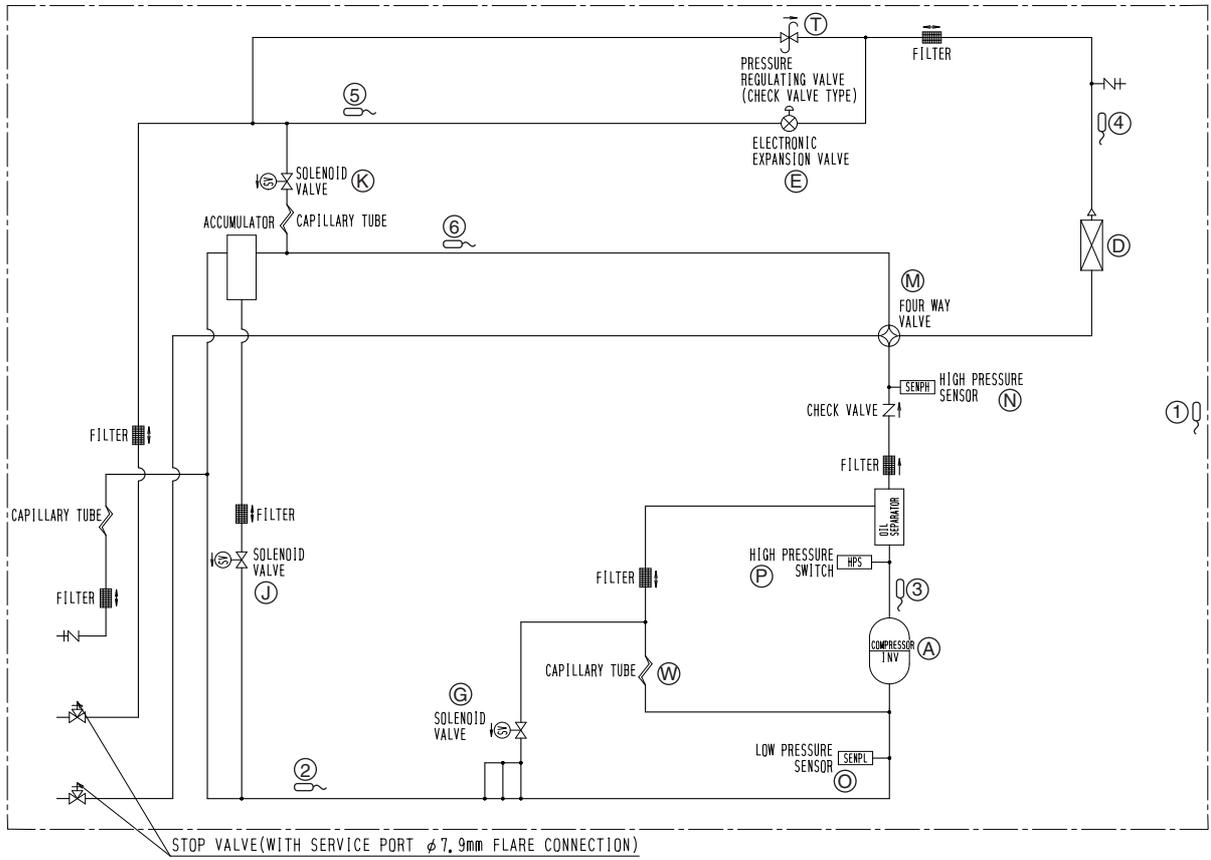


3D050782

## 1.2 RXYQ8P

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 266Hz by using the inverter, while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Standard compressor. RXYQ8P : 24 steps
D	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
F	Y2E	Electronic expansion valve (Subcool: EV2)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
G	Y1S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
J	Y2S	Solenoid valve (Oil return: SVO)	Used to return oil from the accumulator to the compressor.
M	Y3S	4-way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
T	—	Pressure regulating valve (Liquid pipe)	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
V	—	Subcooling heat exchanger	Used to subcool liquid refrigerant from the electronic expansion valve (cooling) or indoor units (heating).
W	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (Suction pipe: Ts)	Used to detect suction pipe temperature.
3	R3T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
4	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
5	R5T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger, keep the superheated degree at the outlet of subcooling heat exchanger constant, and others.
6	R6T	Thermistor (Receiver outlet liquid pipe: TI)	Used to detect receiver outlet liquid pipe temperature.
7	R7T	Thermistor (Accumulator inlet)	Used to detect gas pipe temperature at the accumulator inlet. Keep the suction superheated degree constant in heating operation, and others.

RXYQ8P

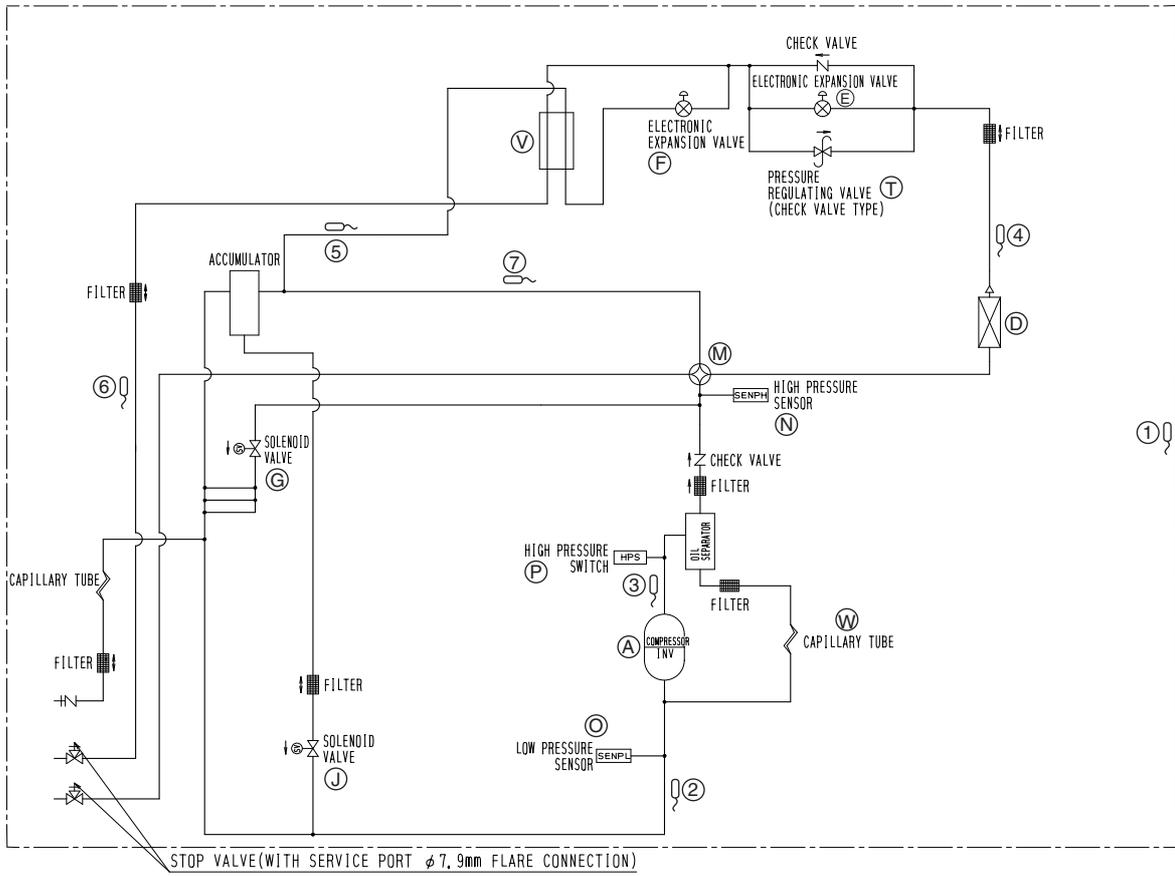


3D050783

## 1.3 RXYQ10P, 12P

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 210Hz by using the inverter, while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Standard compressor. RXYQ10, 12P : 37 steps
B	M2C	Standard compressor 1 (STD1)	
D	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 9-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
F	Y2E	Electronic expansion valve (Subcool: EV3)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
G	Y1S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
J	Y2S	Solenoid valve (Oil return: SVO)	Used to return oil from the accumulator to the compressor.
M	Y3S	4-way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
Q	S2PH	HP pressure switch (For STD compressor 1)	
U	—	Pressure regulating valve (Liquid pipe)	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
V	—	Subcooling heat exchanger	Used to subcool liquid refrigerant from the electronic expansion valve (cooling) or indoor units (heating).
W	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.
X	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD1 compressor.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (Suction pipe: Ts)	Used to detect suction pipe temperature.
3	R31T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
4	R32T	Thermistor (STD1 discharge pipe: Tds1)	
5	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
6	R5T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger, keep the superheated degree at the outlet of subcooling heat exchanger constant, and others.
7	R6T	Thermistor (Liquid pipe: Tl)	Used to detect liquid pipe temperature.
8	R7T	Thermistor (Accumulator inlet)	Used to detect gas pipe temperature at the accumulator inlet. Keep the suction superheated degree constant in heating operation, and others.

RXYQ10P, 12P

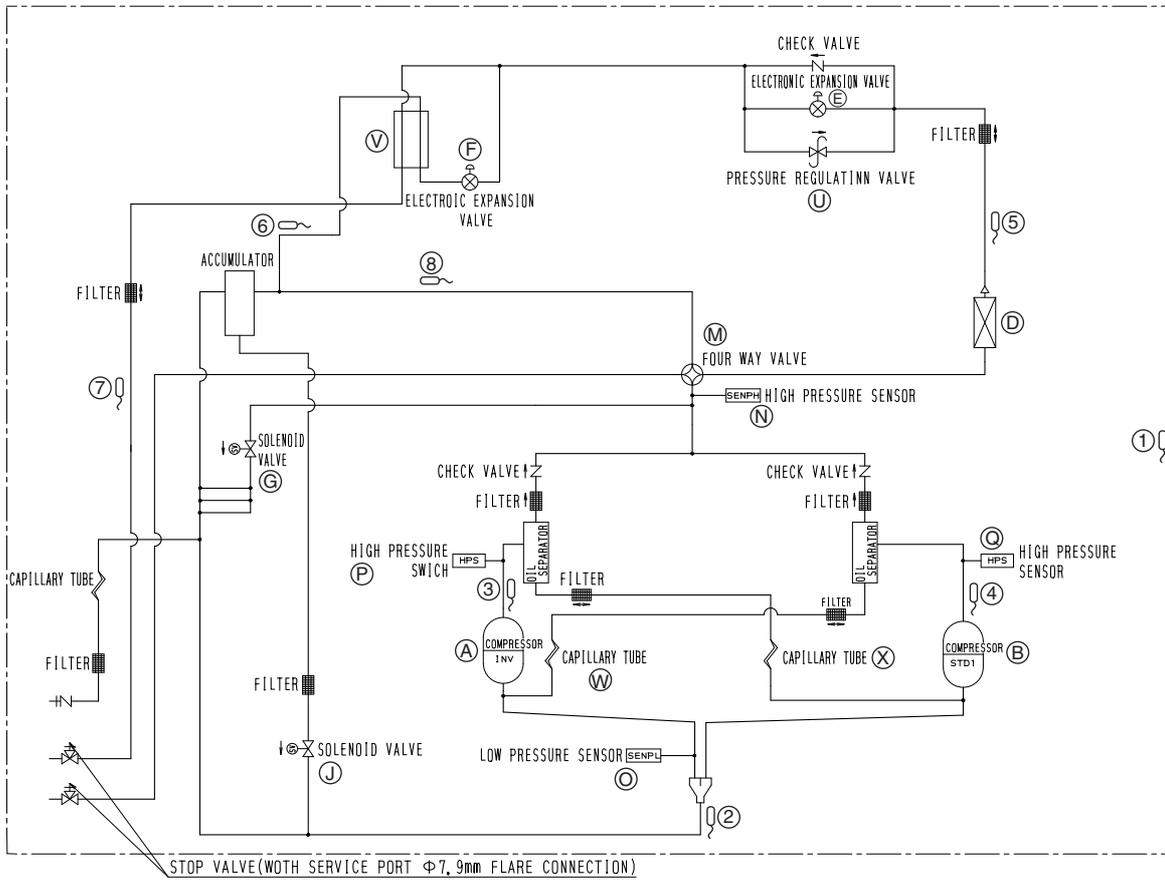


3D050784

## 1.4 RXYQ14P, 16P, 18P

No. in refrigerant system diagram	Symbol	Name	Major Function
A	M1C	Inverter compressor (INV)	Inverter compressor is operated on frequencies between 52Hz and 266Hz by using the inverter, while Standard compressor is operated with commercial power supply only. The number of operating steps is as follows when Inverter compressor is operated in combination with Standard compressor. RXYQ14P or 16P : 51 steps, RXYQ18P : 55 steps
B	M2C	Standard compressor 1 (STD1)	
C	M3C	Standard compressor 1 (STD2)	
D	M1F	Inverter fan	Since the system is of air heat exchanging type, the fan is operated at 8-step rotation speed by using the inverter.
E	Y1E	Electronic expansion valve (Main: EV1)	While in heating operation, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
F	Y2E	Electronic expansion valve (Subcool: EV3)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
G	Y1S	Solenoid valve (Hot gas: SVP)	Used to prevent the low pressure from transient falling.
J	Y2S	Solenoid valve (Oil return: SVO)	Used to return oil from the accumulator to the compressor.
M	Y3S	4-way valve	Used to switch the operation mode between cooling and heating.
N	S1NPH	High pressure sensor	Used to detect high pressure.
O	S1NPL	Low pressure sensor	Used to detect low pressure.
P	S1PH	HP pressure switch (For INV compressor)	In order to prevent the increase of high pressure when a malfunction occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
Q	S2PH	HP pressure switch (For STD compressor 1)	
R	S3PH	HP pressure switch (For STD compressor 2)	
U	—	Pressure regulating valve (Liquid pipe)	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
V	—	Subcooling heat exchanger	Used to subcool liquid refrigerant from the electronic expansion valve (cooling) or indoor units (heating).
W	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV compressor.
X	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD1 compressor.
Y	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the STD2 compressor.
1	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor temperature, correct discharge pipe temperature, and others.
2	R2T	Thermistor (Suction pipe: Ts)	Used to detect suction pipe temperature.
3	R31T	Thermistor (INV discharge pipe: Tdi)	Used to detect discharge pipe temperature, make the temperature protection control of compressor, and others.
4	R32T	Thermistor (STD1 discharge pipe: Tds1)	
5	R33T	Thermistor (STD2 discharge pipe: Tds2)	
6	R4T	Thermistor (Heat exchanger deicer: Tb)	Used to detect liquid pipe temperature of air heat exchanger, determine defrosting operation, and others.
7	R5T	Thermistor (Subcooling heat exchanger gas pipe: Tsh)	Used to detect gas pipe temperature on the evaporation side of subcooling heat exchanger, keep the superheated degree at the outlet of subcooling heat exchanger constant, and others.
8	R6T	Thermistor (Liquid pipe: Tl)	Used to detect liquid pipe temperature.
9	R7T	Thermistor (Accumulator inlet)	Used to detect gas pipe temperature at the accumulator inlet. Keep the suction superheated degree constant in heating operation, and others.


RXYQ14P, 16P, 18P

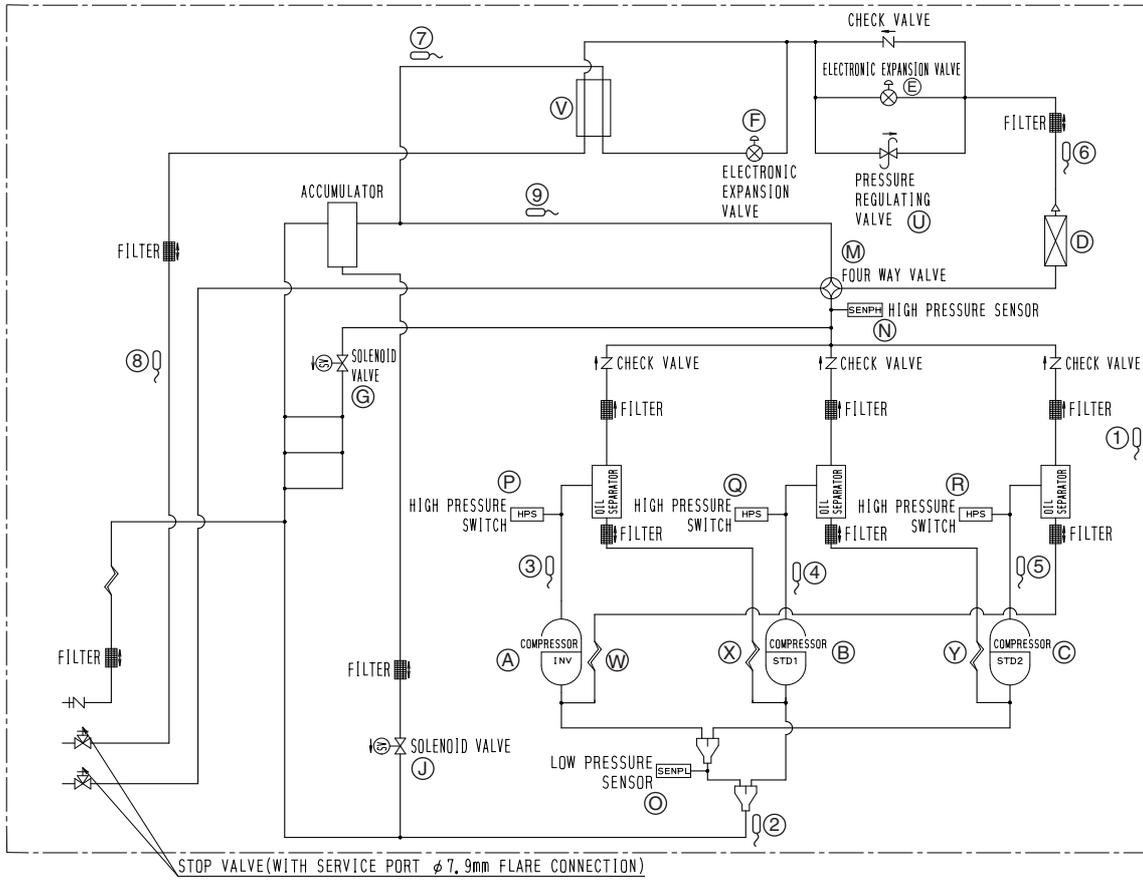

3D050785

## 1.5 Outdoor air processing unit FXMQ125MFV1~250MFV1

### 1.5.1 Refrigerant System

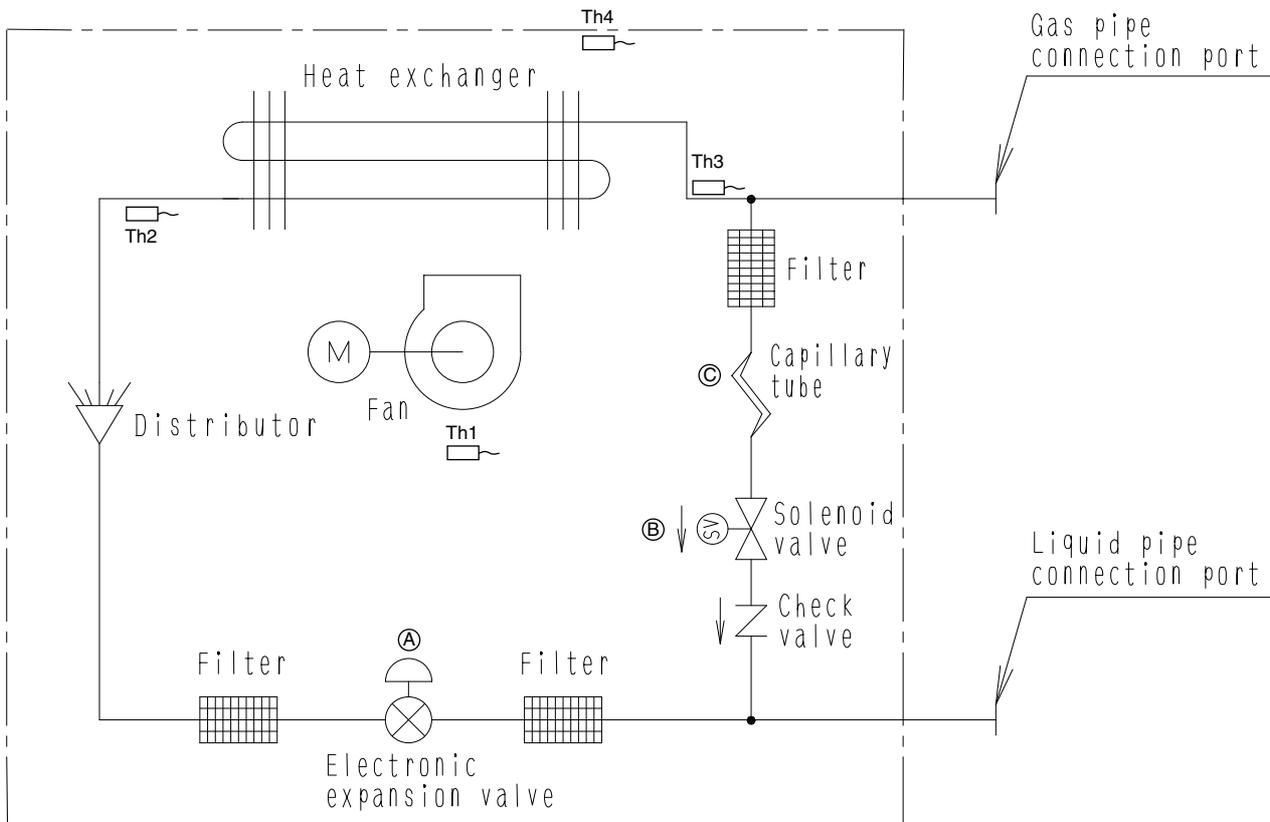

4D018650B

#### Main Control Equipment

Code	Symbol	Name	Main function
A	Y1E	Motorized valve	Used to control the flow rate of refrigerant, and make the SH control while in cooling or the SC control while in heating.*
B	Y1S	Solenoid valve	Used to bypass hot gas while in heating with thermostat OFF.
C	—	Capillary tube	Used to reduce pressure from high to low in bypassing hot gas.

\*SH control: Superheated control of heat exchanger outlet

SC control: Subcooling control of heat exchanger outlet


#### Thermistor

Code	Symbol	Name	Main function
Th1	R1T	Suction air temperature thermistor	Used to turn ON or OFF the thermostat and select cooling or heating operation.
Th2	R2T	Liquid pipe temperature thermistor	Used to control the opening degree of EV (Y1F) under the SC control.
Th3	R3T	Gas pipe temperature thermistor	Used to control the opening degree of EV (Y1E) under the SH control.
Th4	R4T	Discharge air temperature thermistor	Used to control the electric expansion valve opening and thermostat ON/OFF so as to keep the discharge air temperature at the set temperature.


## 2. Functional Parts Layout

### 2.1 RXYQ5P

#### Plan

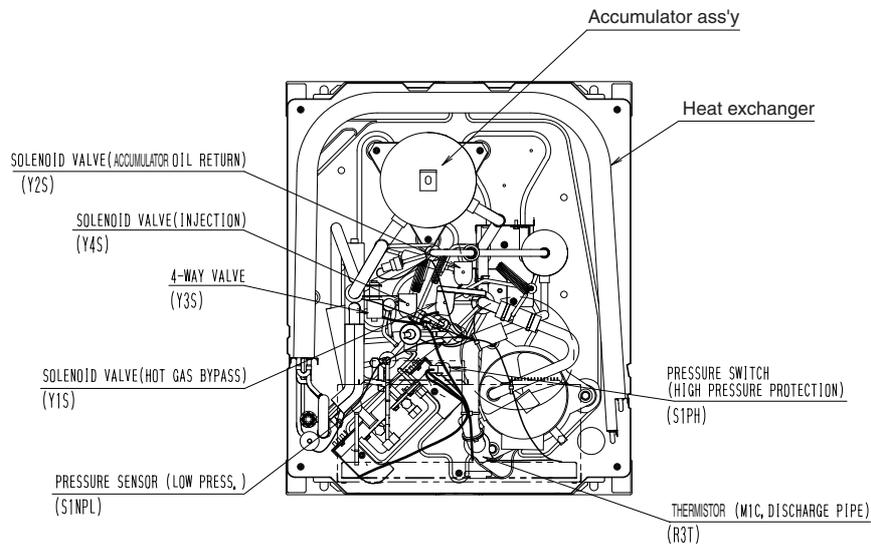


#### Front View

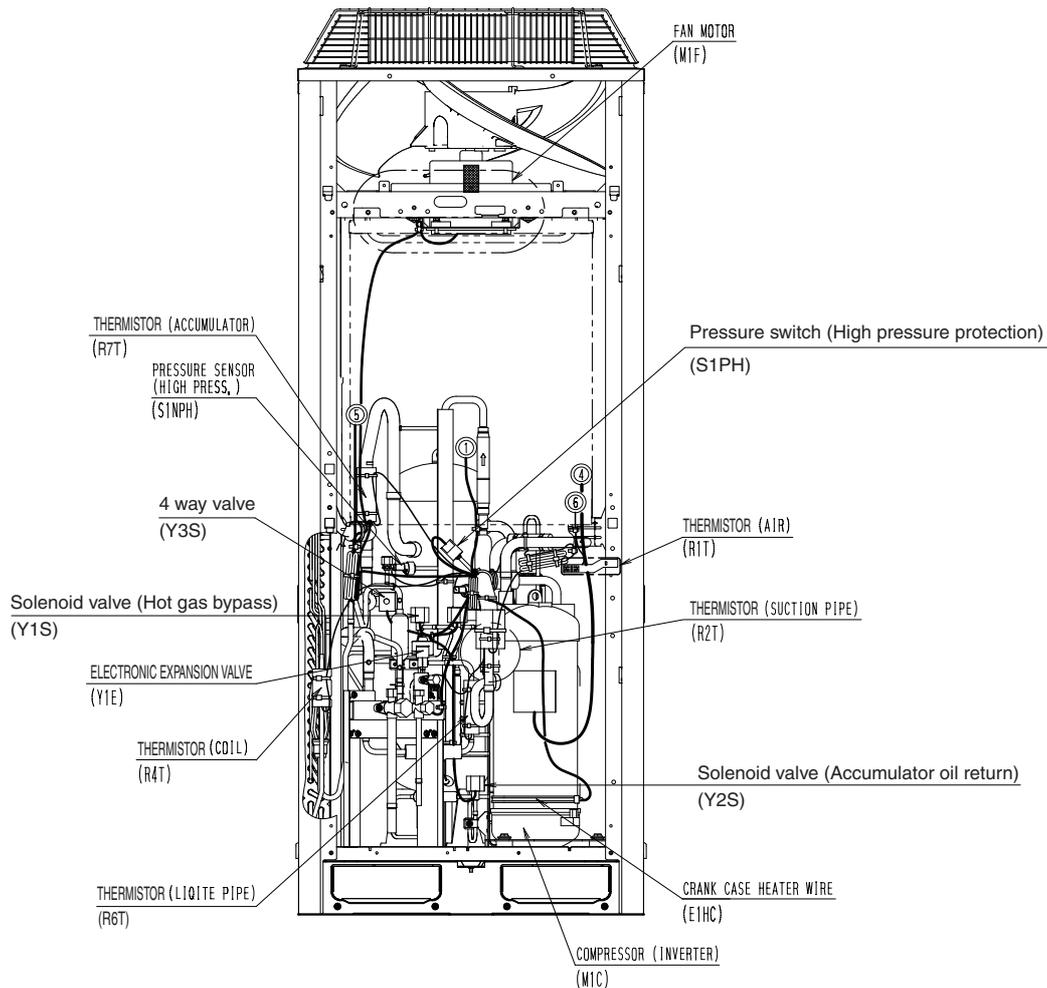


## 2.2 RXYQ8P

### Plan

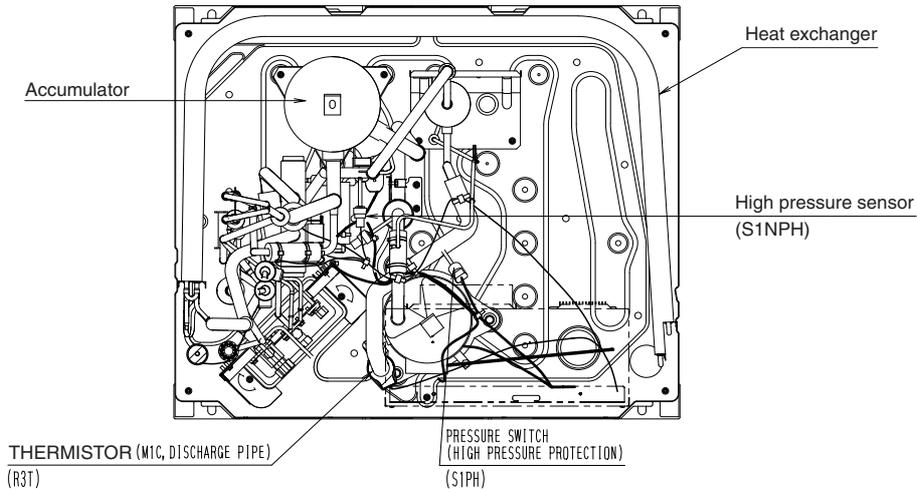


### Front View

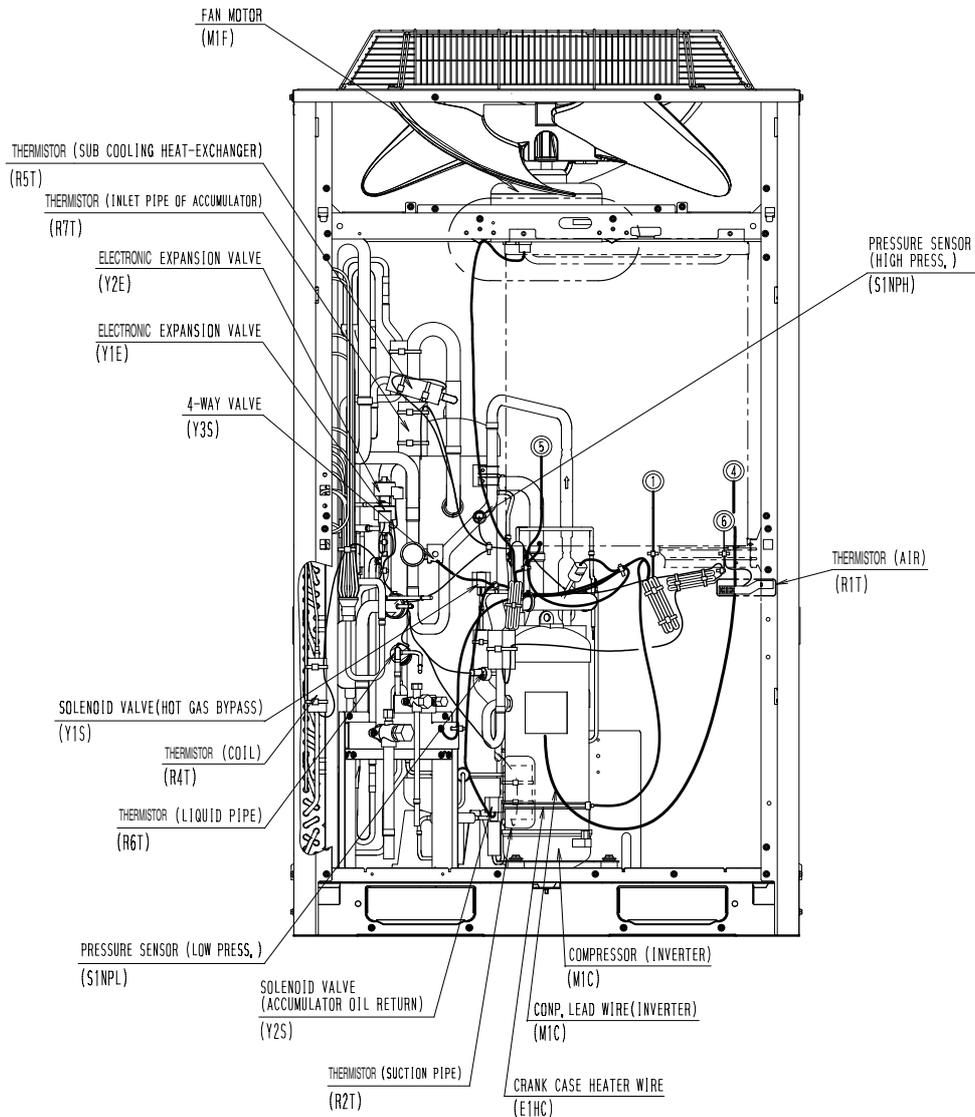


## 2.3 RXYQ10P, 12P (12P: EUROPE)

### Plan

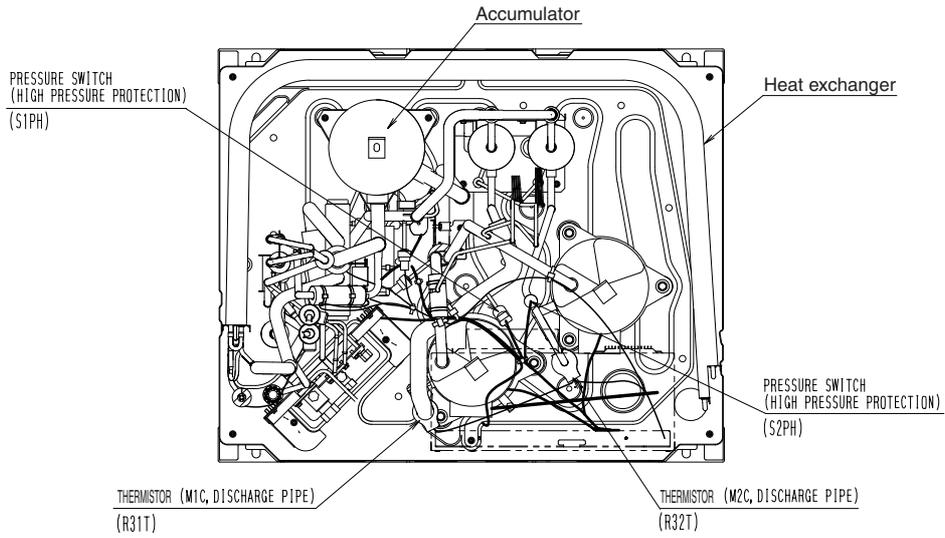


### Front View

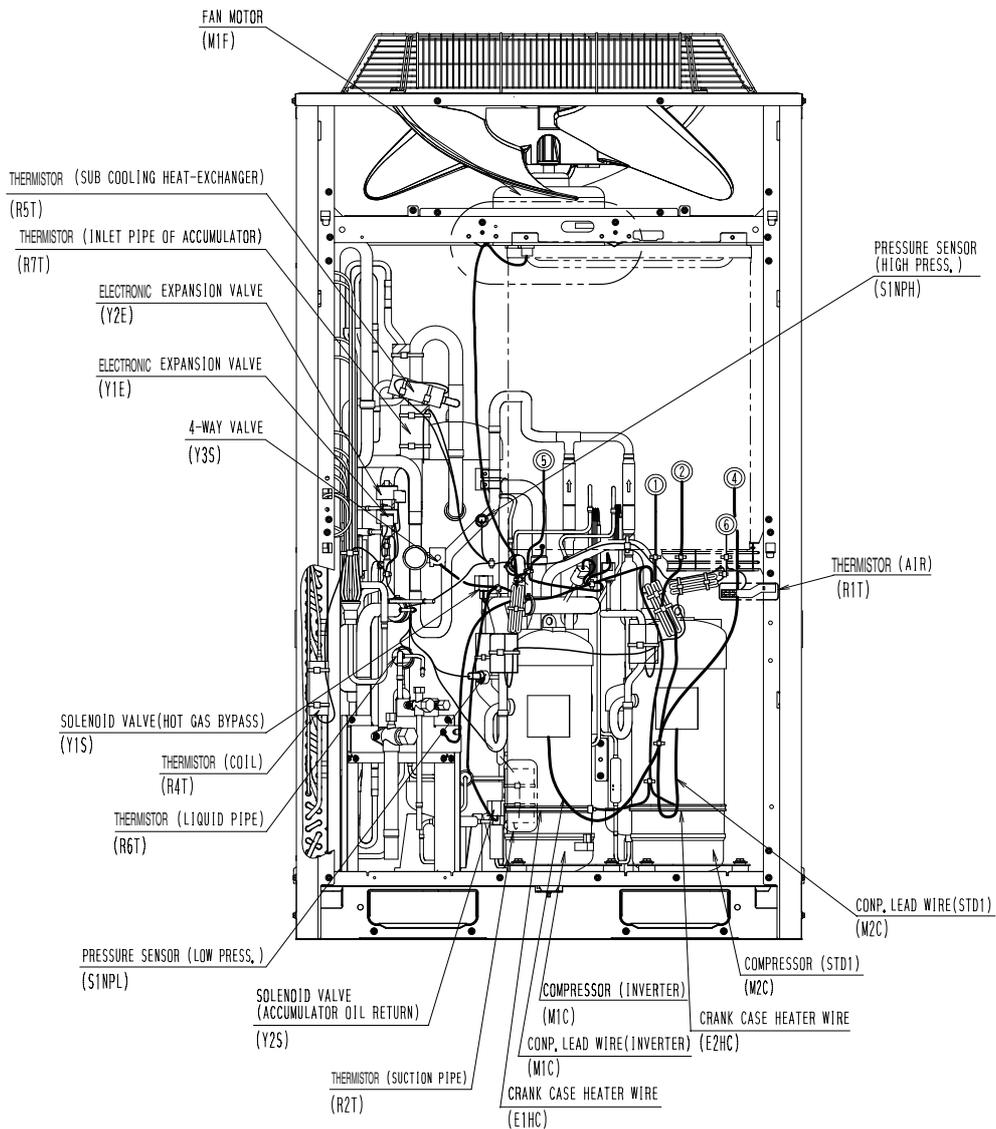


## 2.4 RXYQ12P

### Plan

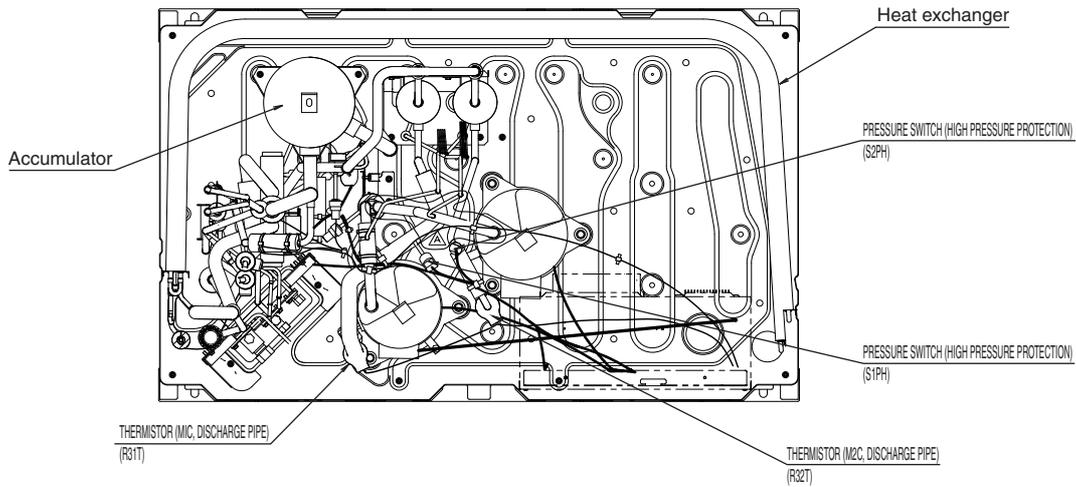


### Front View

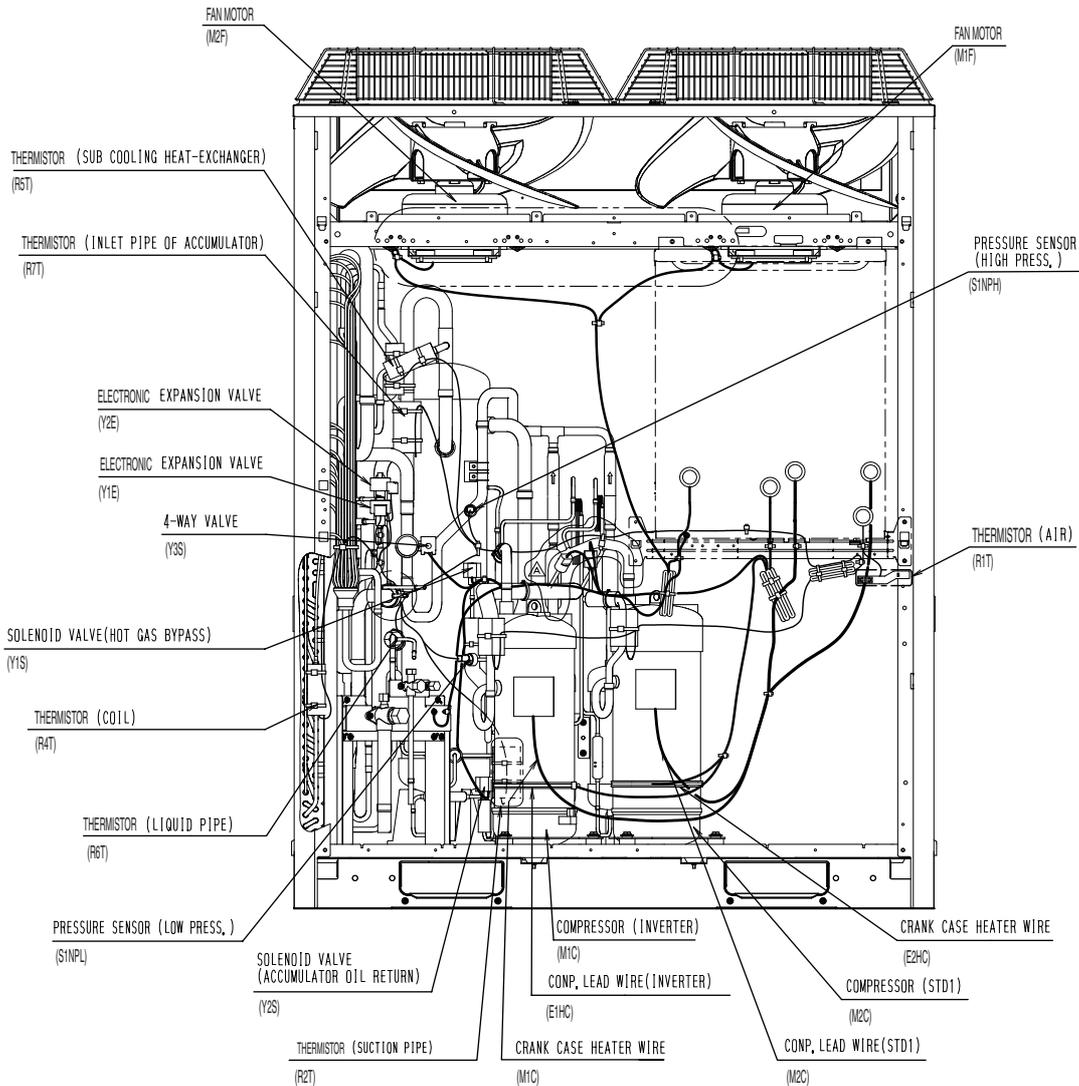


## 2.5 RXYQ14P, 16P, 18P

### Plan

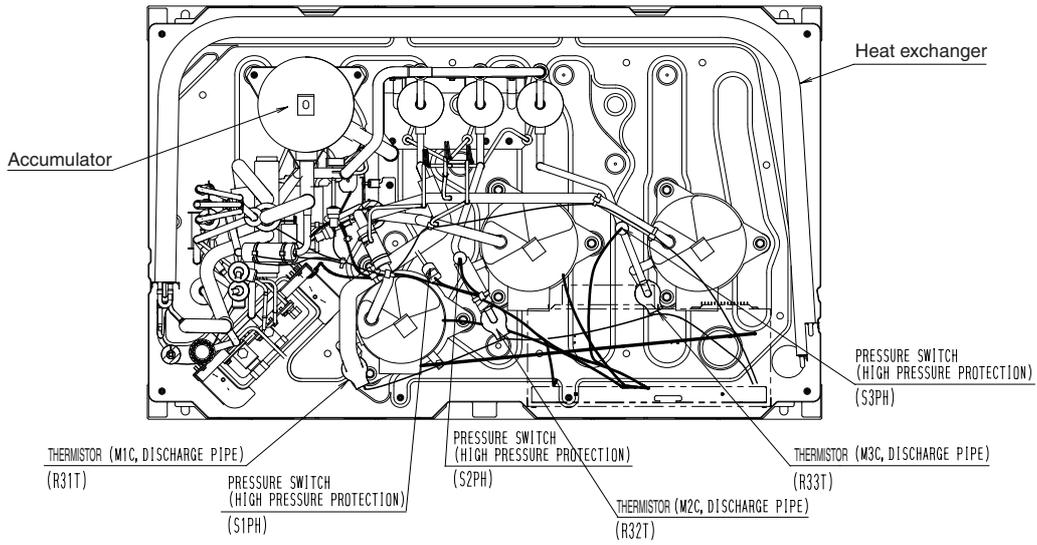


### Front View

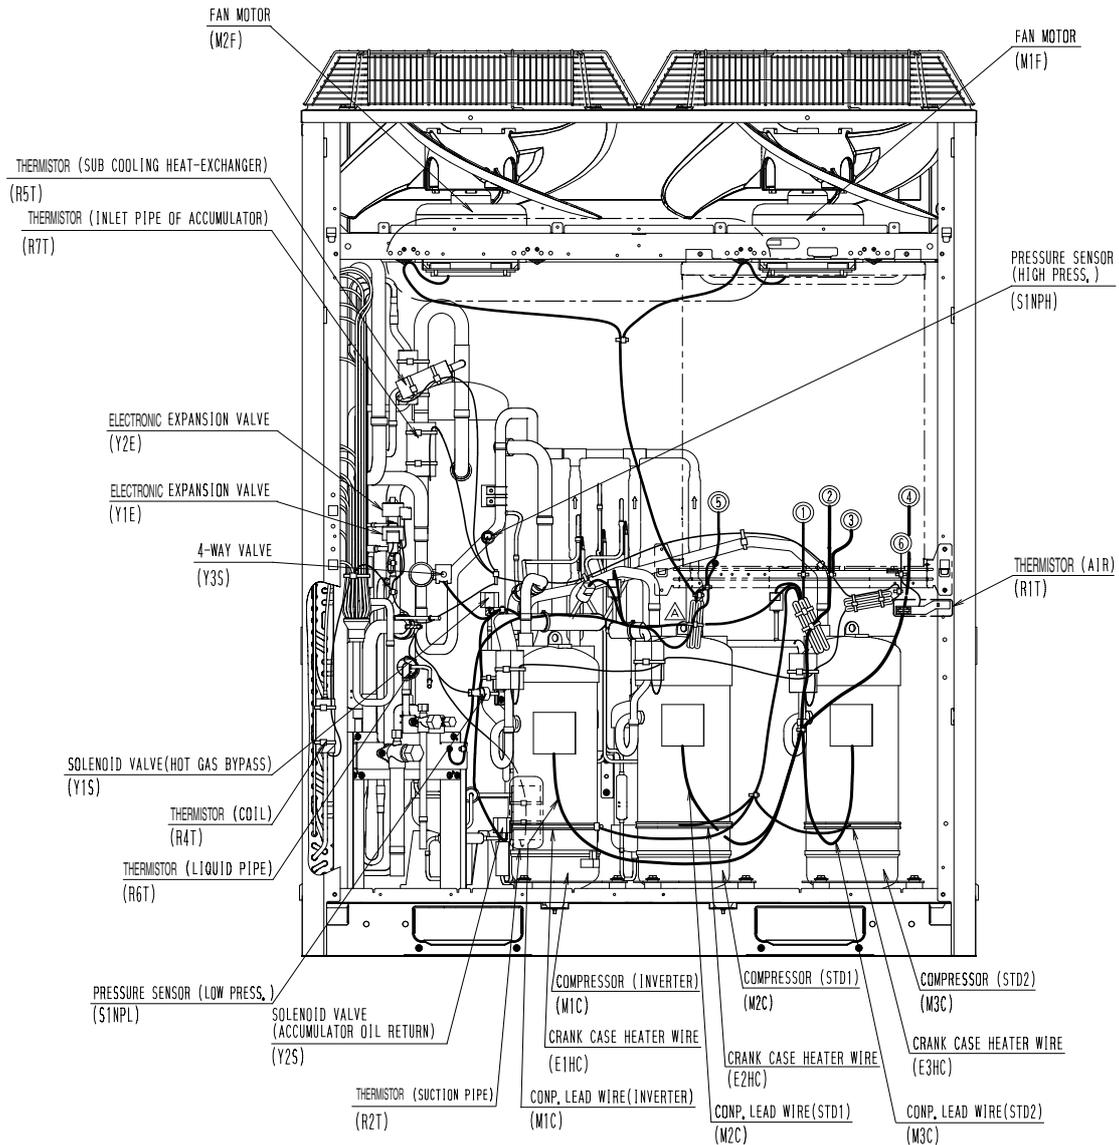





Cooling Oil Return Operation

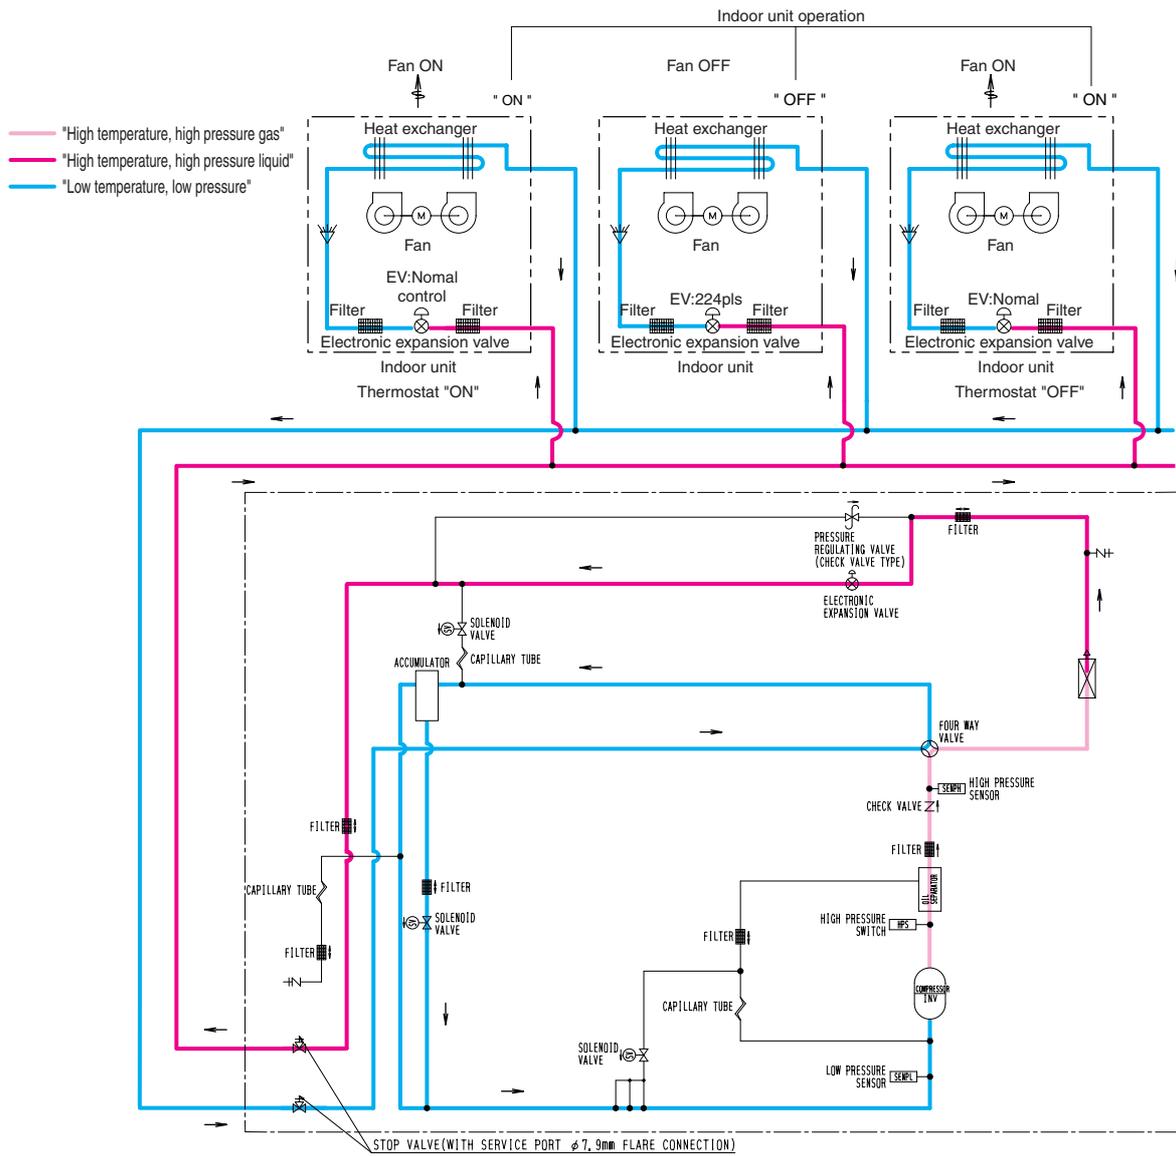

Heating Oil Return & Defrost Operation

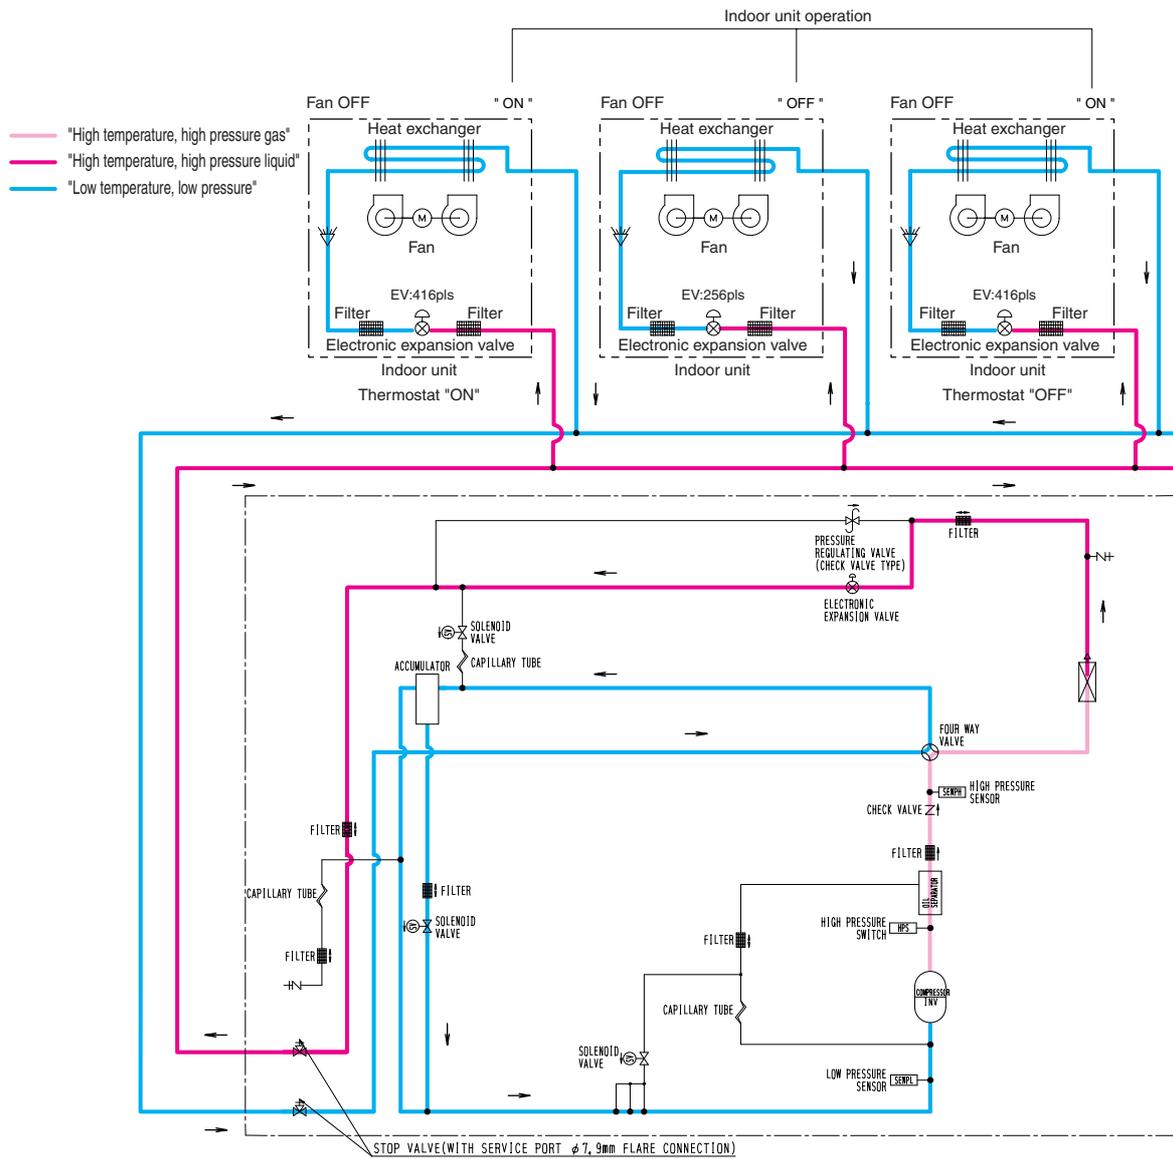


Heating Operation

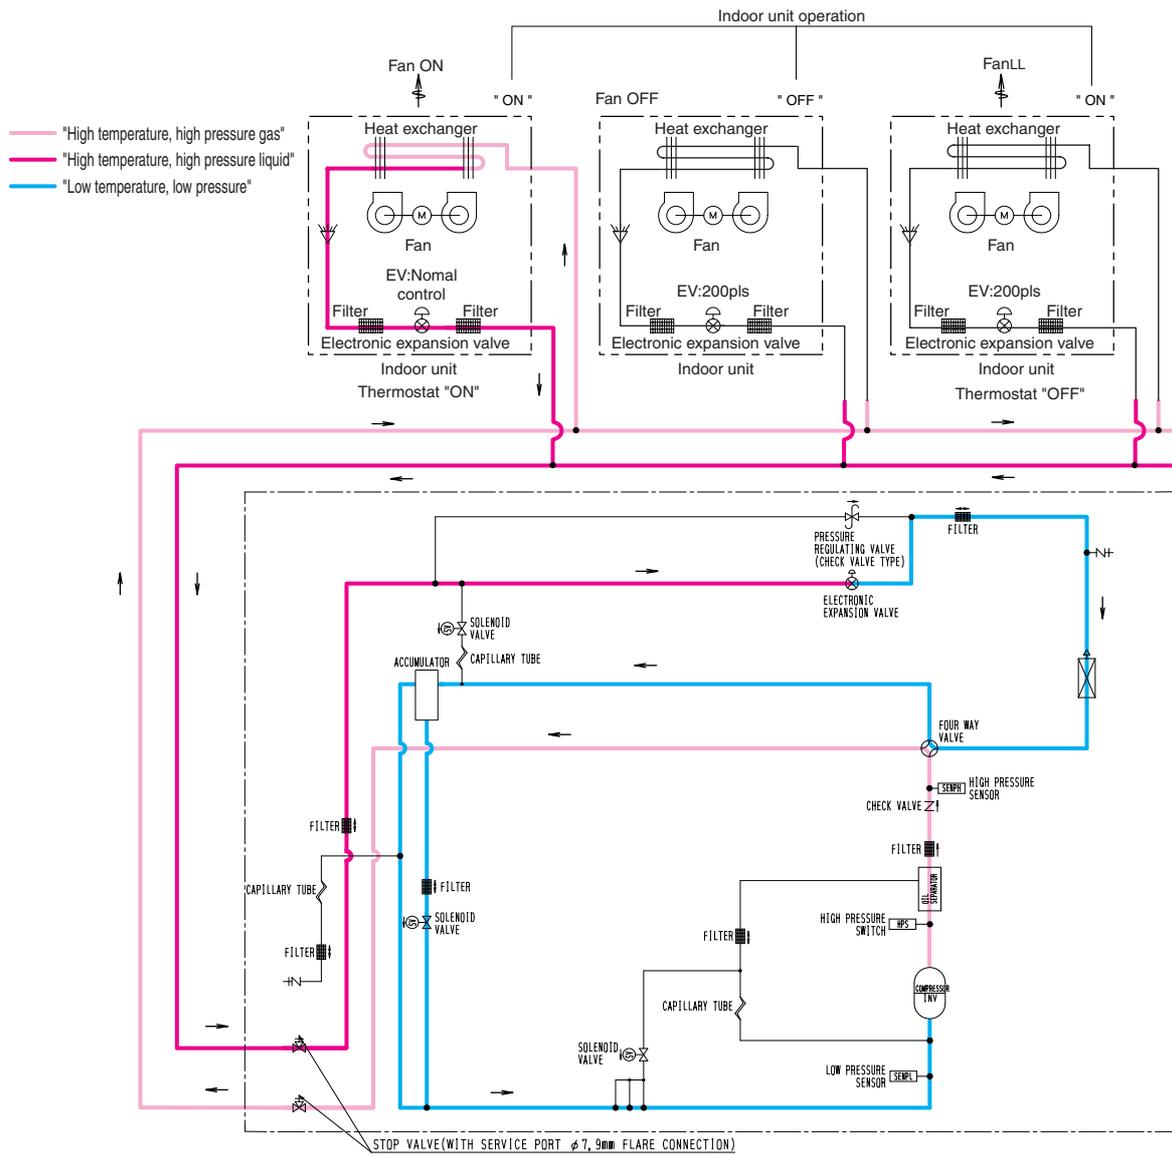


RXYQ8P


Cooling Operation

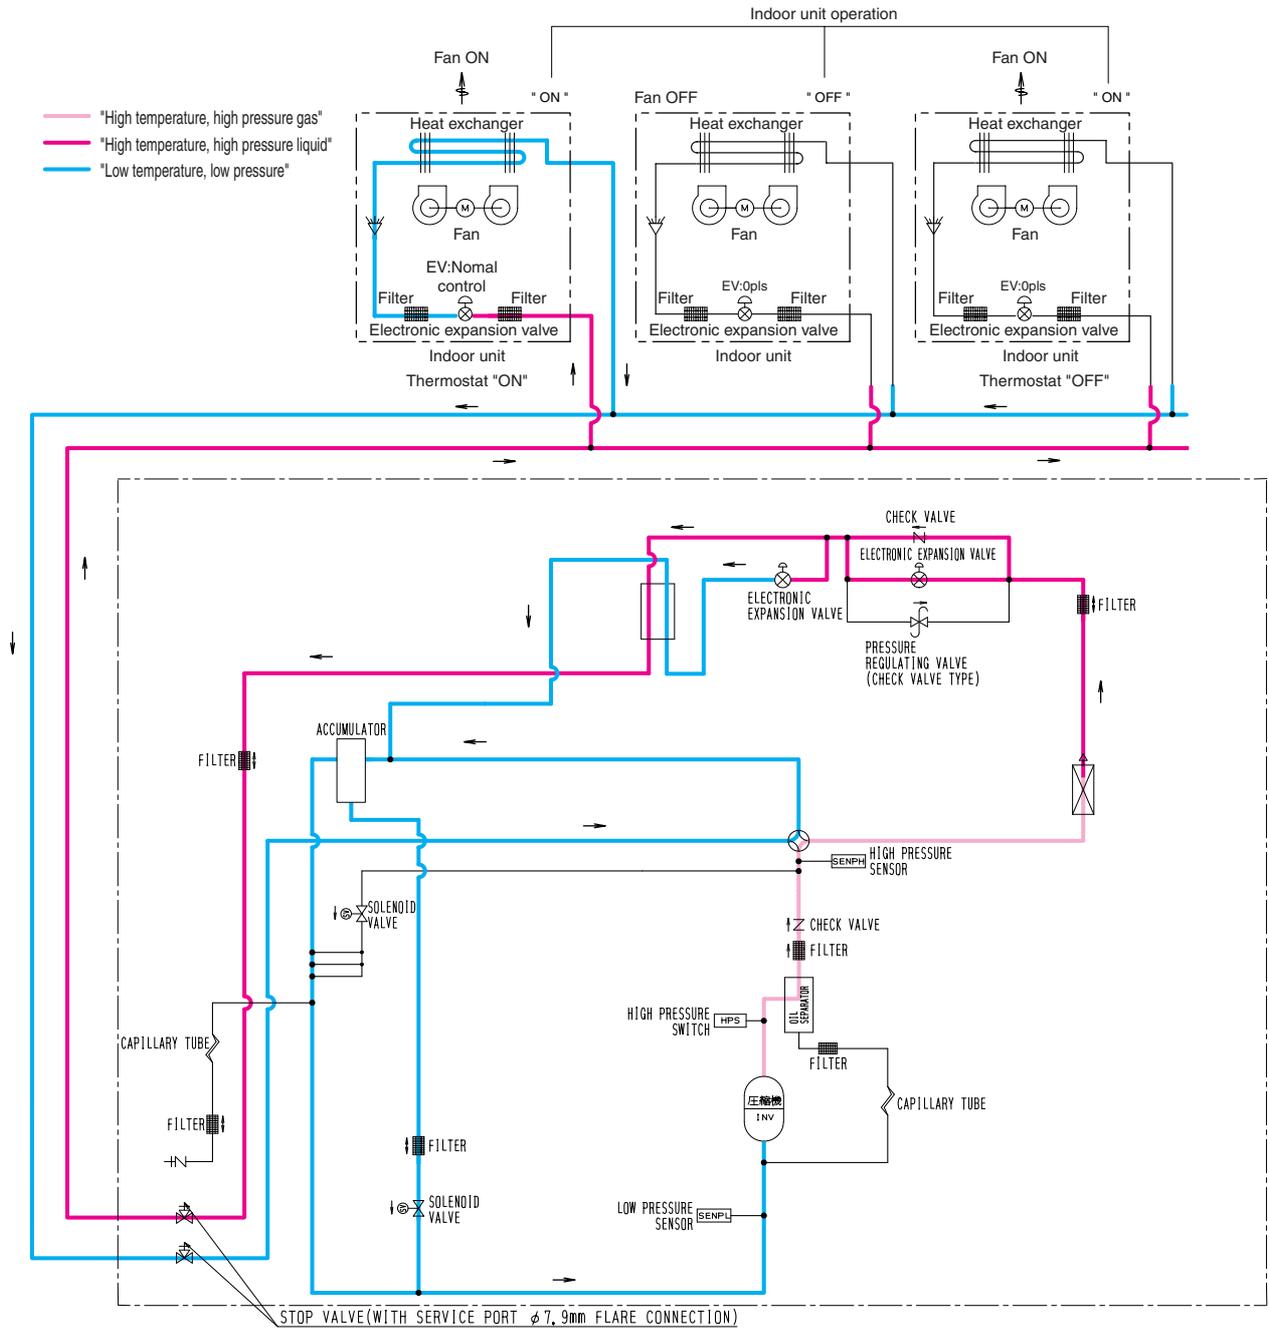


Cooling Oil Return

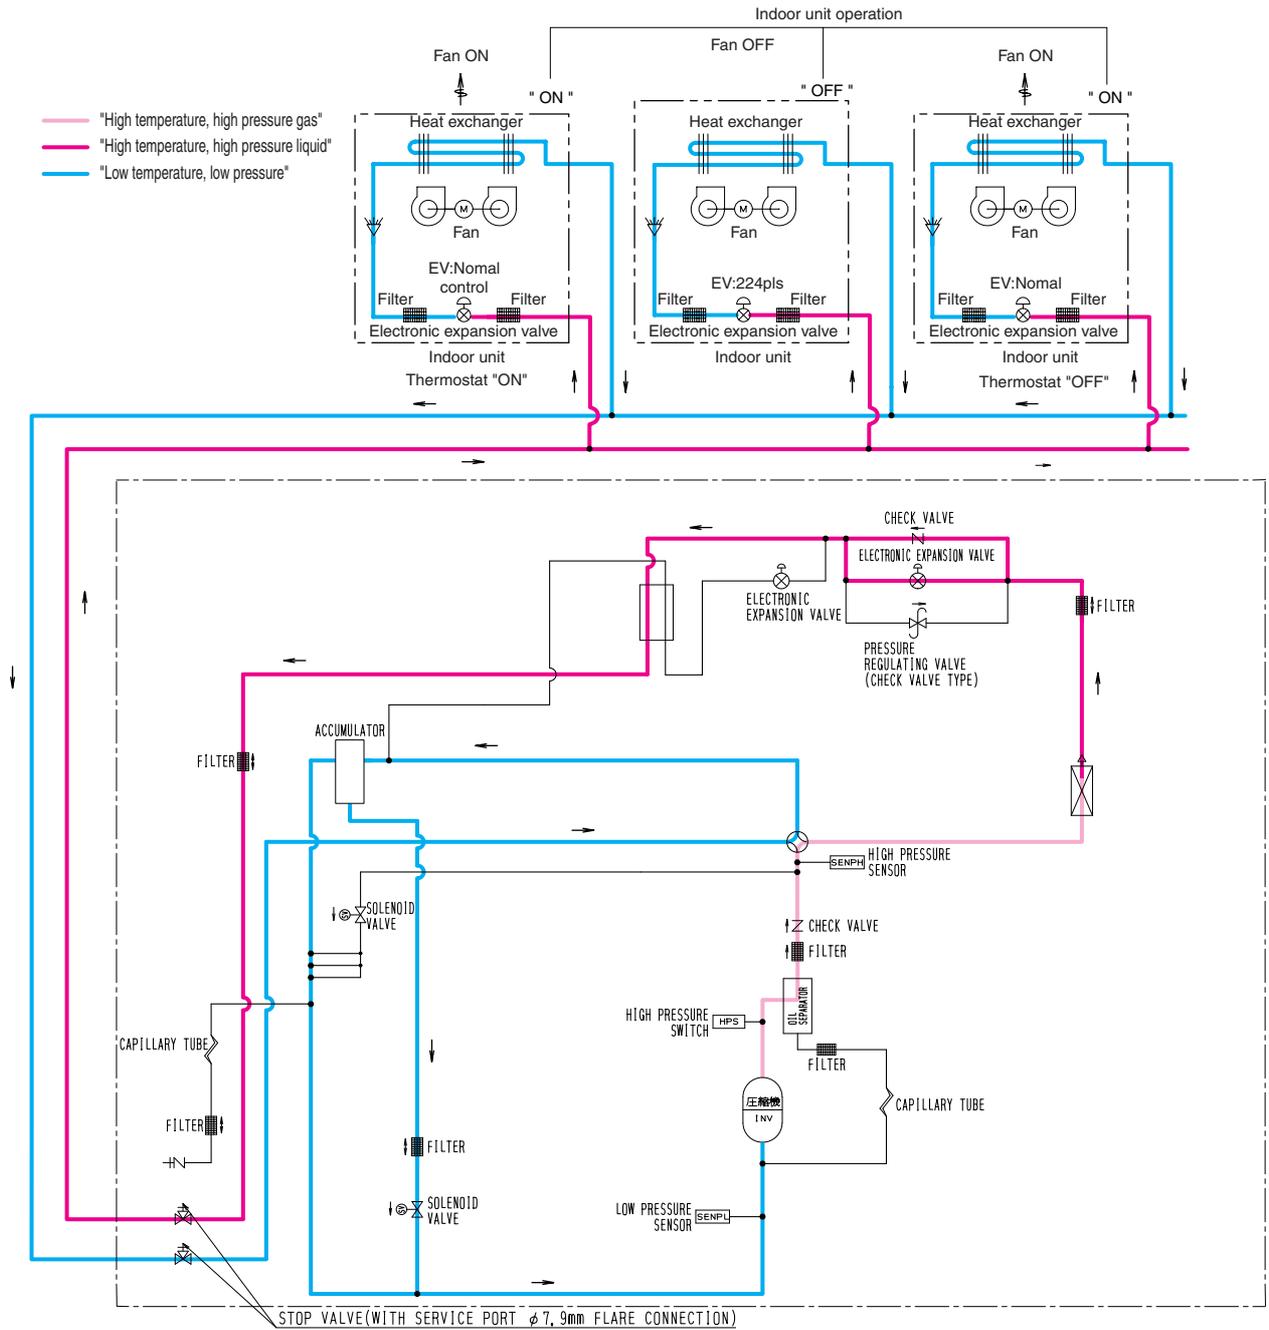


Heating Oil Return & Defrost

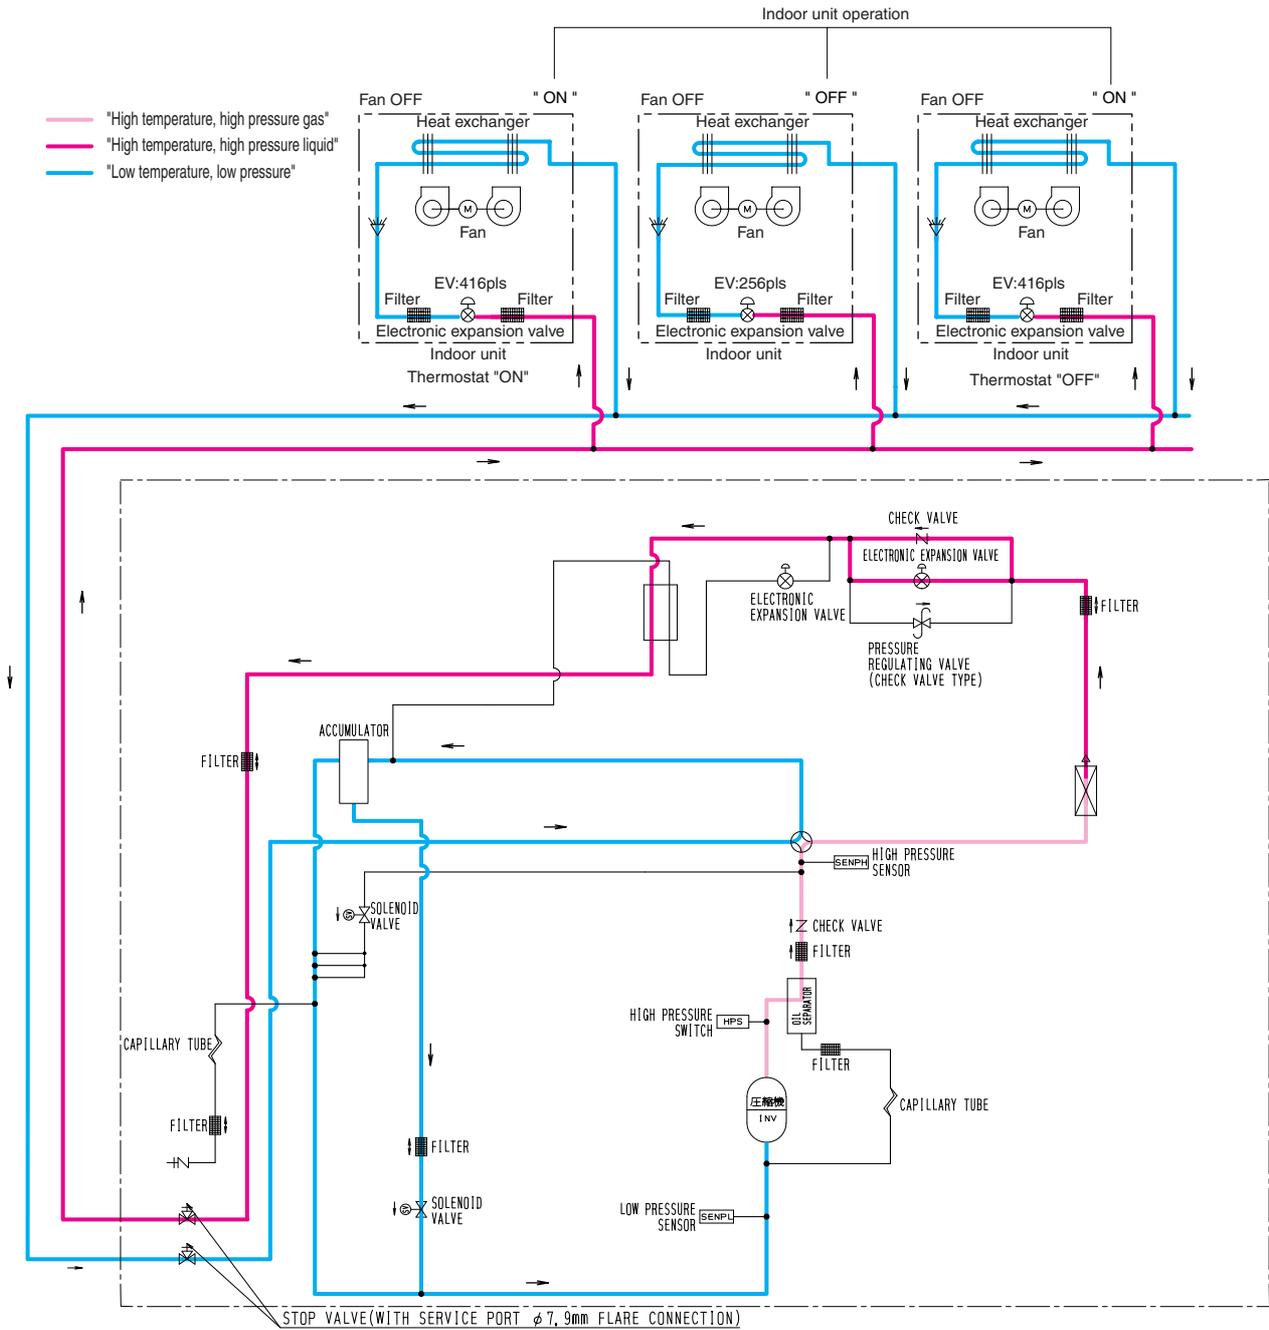


Heating Operation

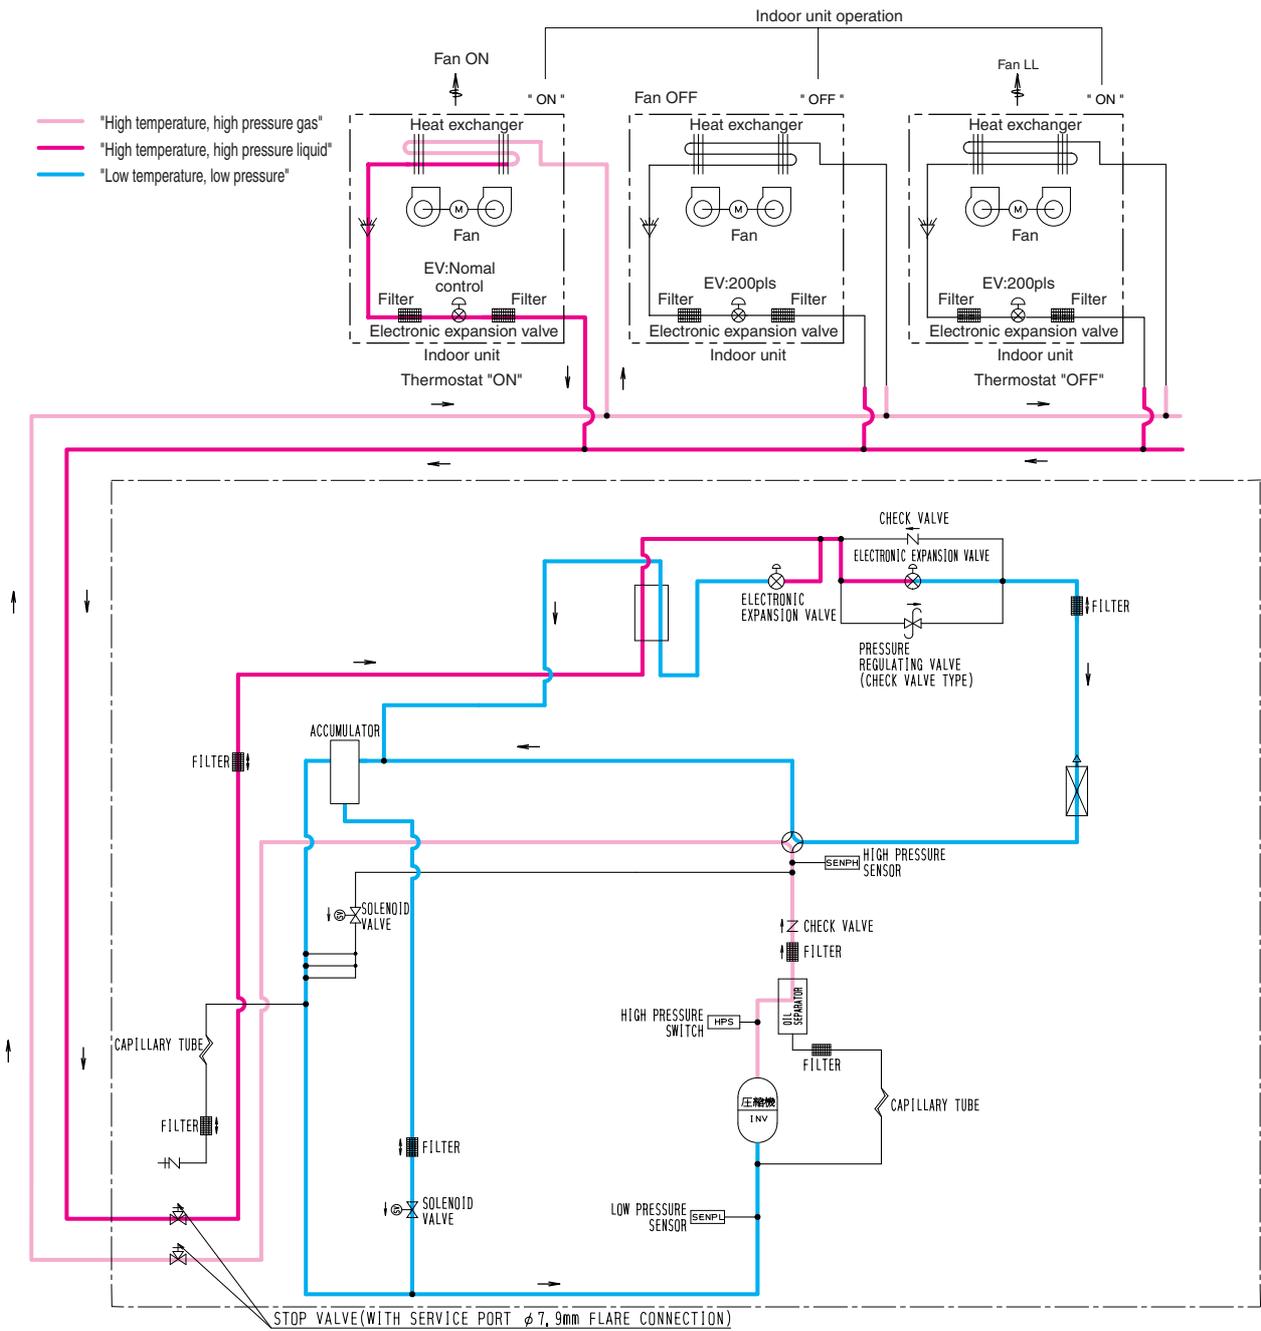


**RXYQ10P, 12P**  
**Cooling Operation**

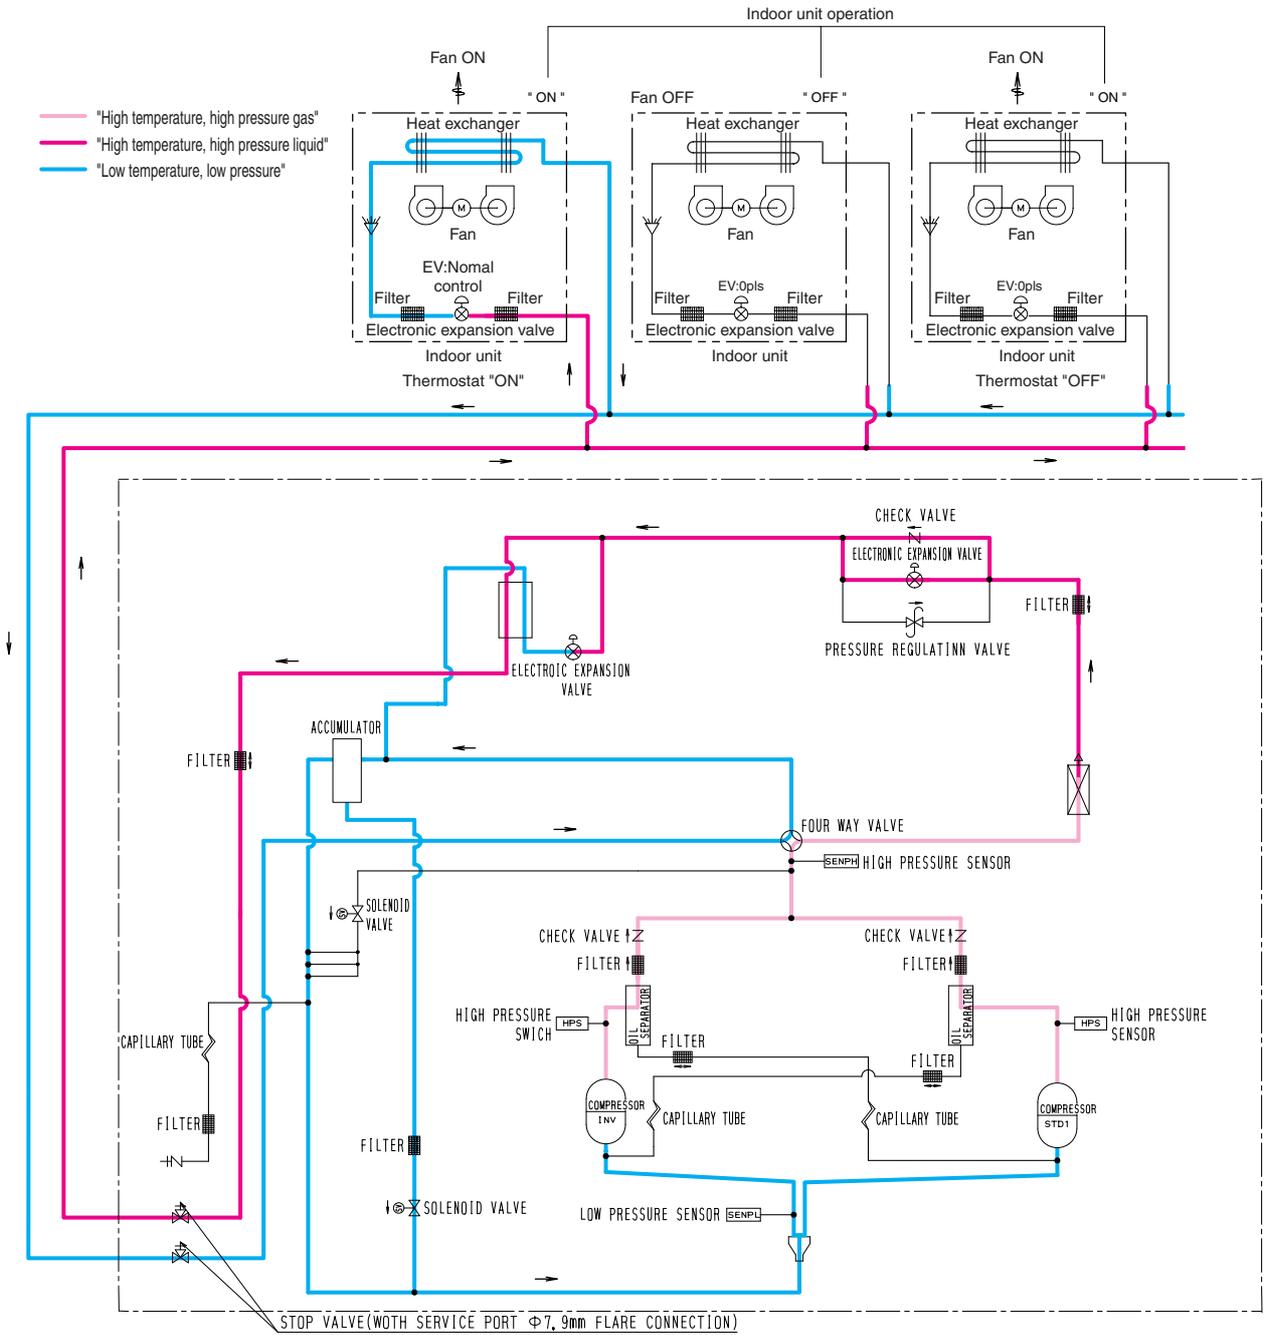


Cooling Oil Return

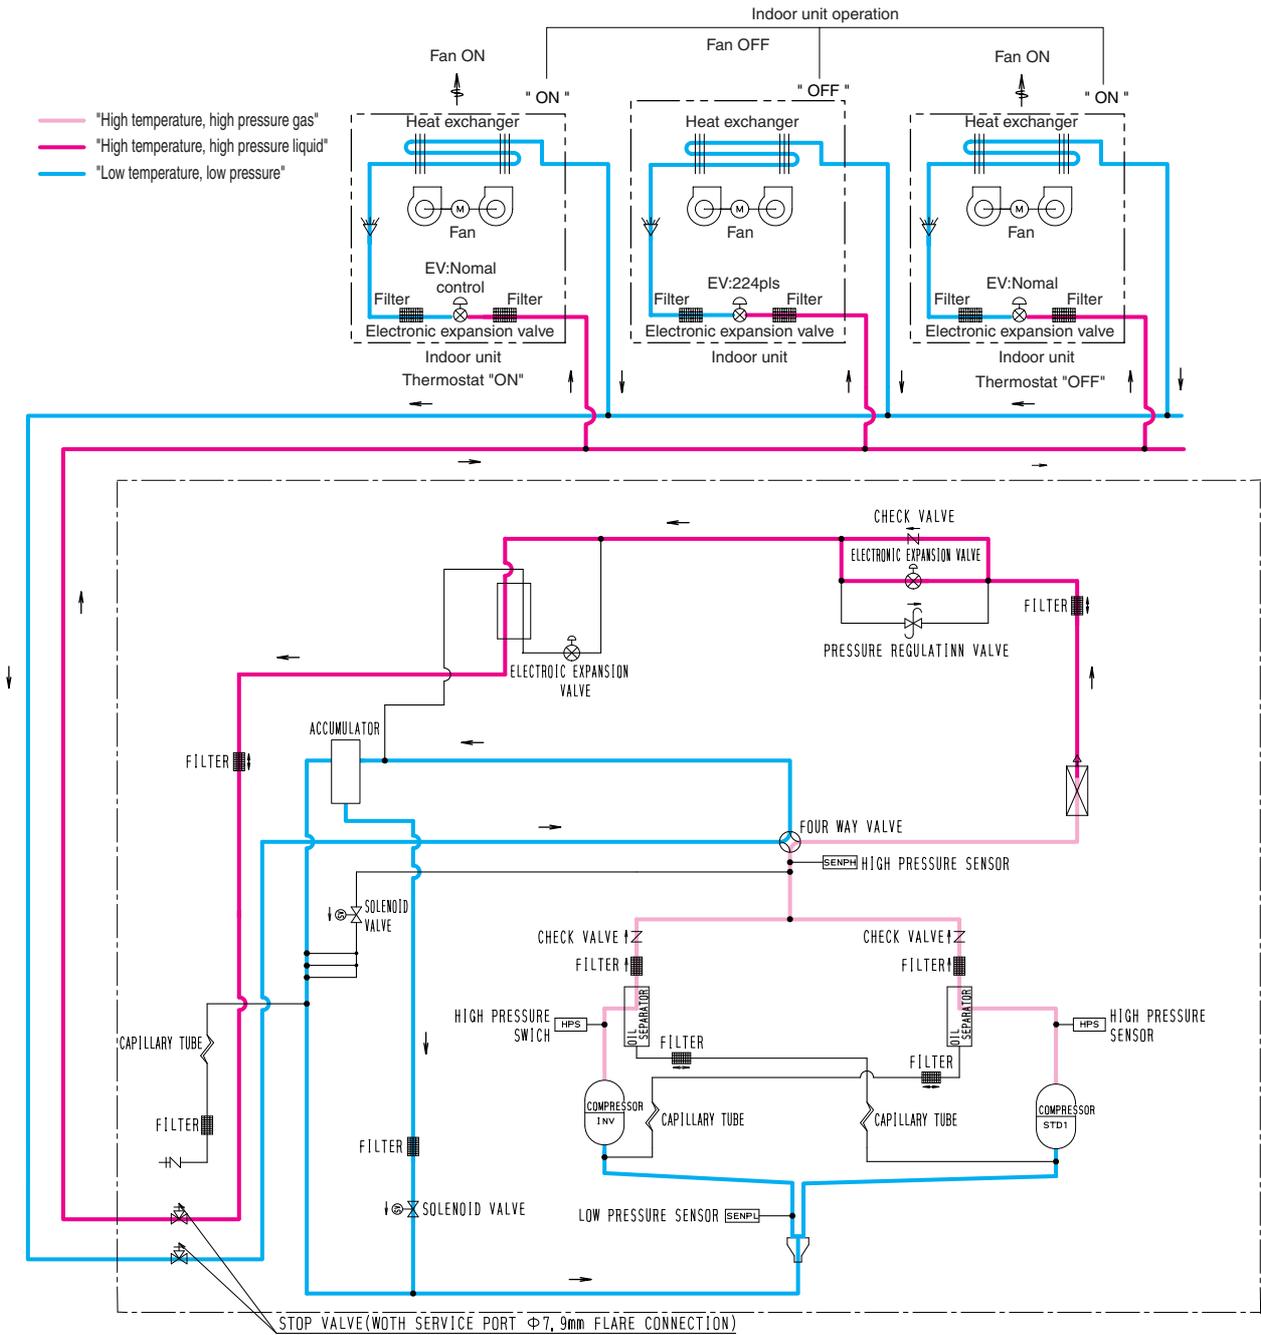


Heating Oil Return & Defrost

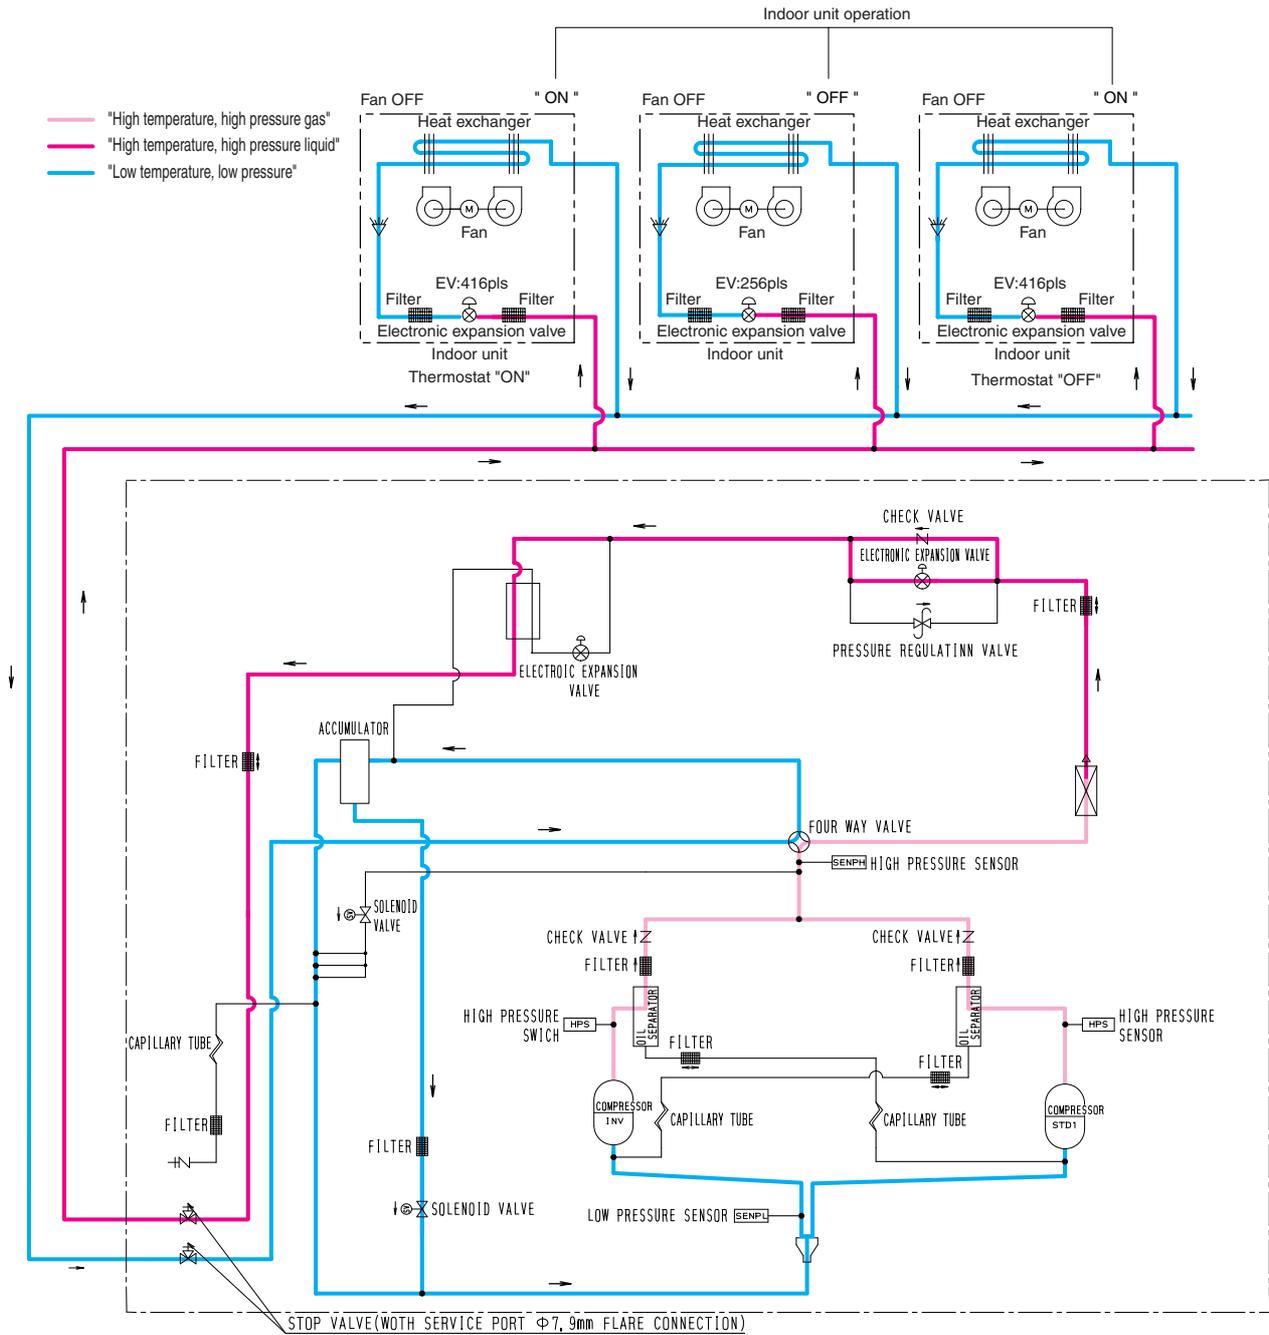


Heating Operation

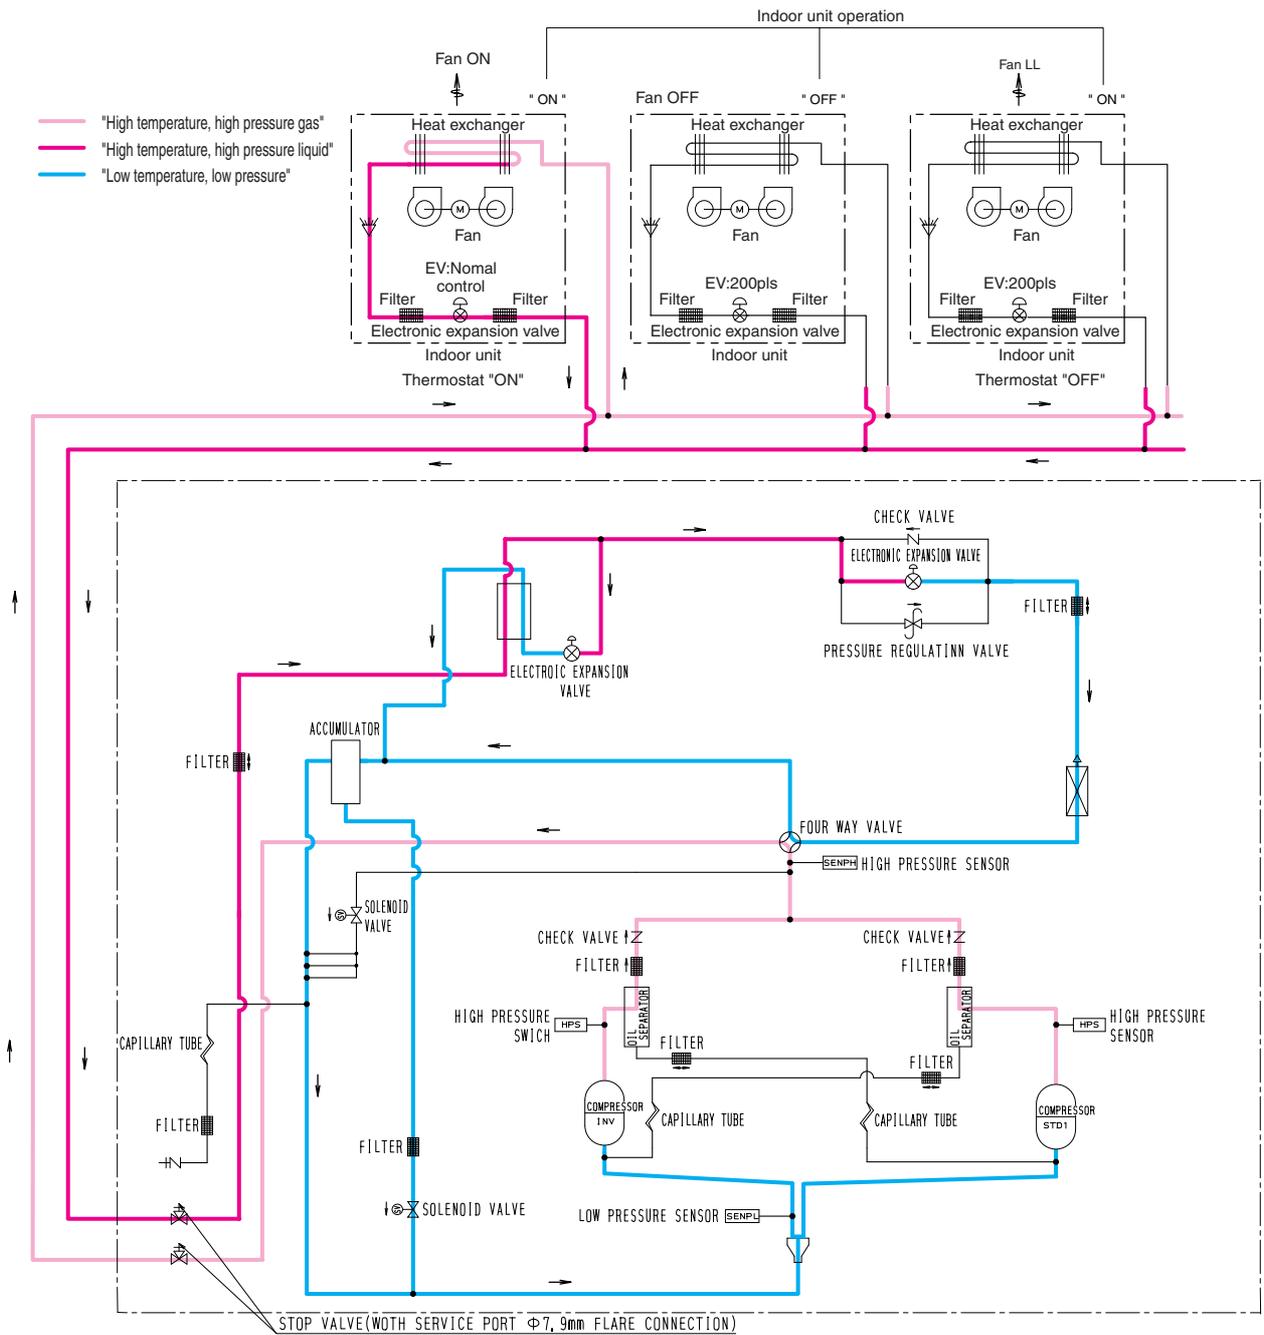


**RXYQ14P, 16P, 18P**  
Cooling Operation

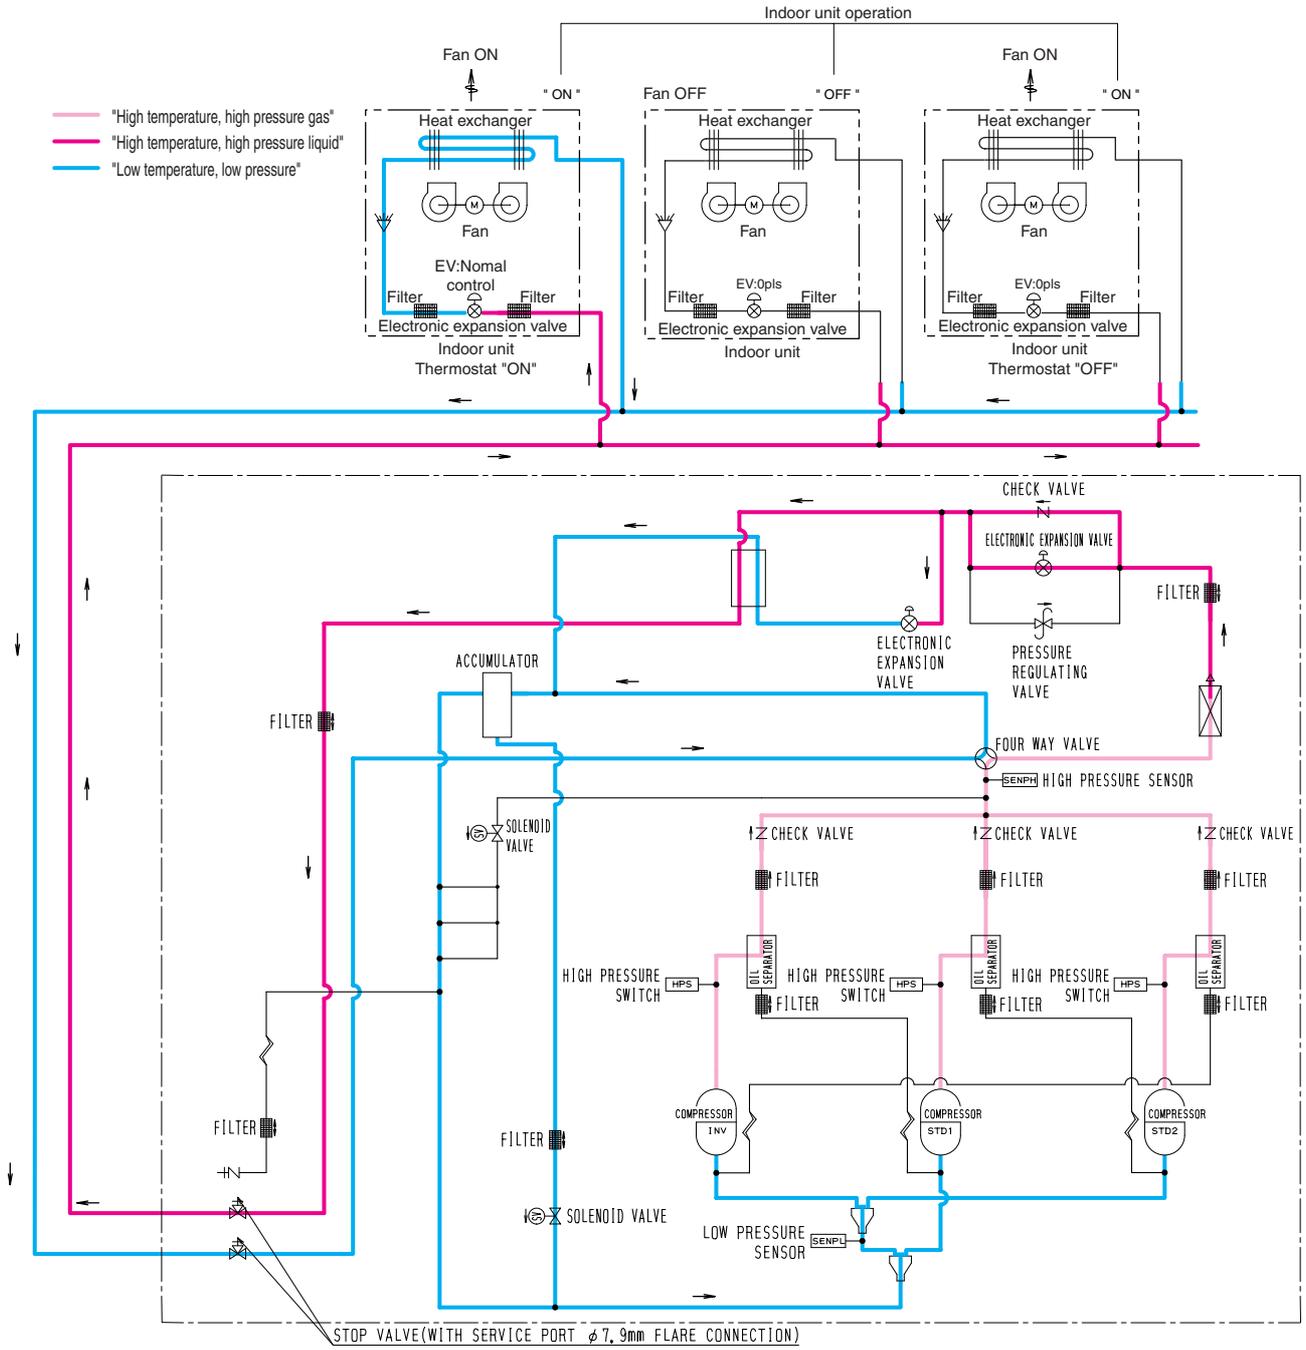


Cooling Oil Return Operation

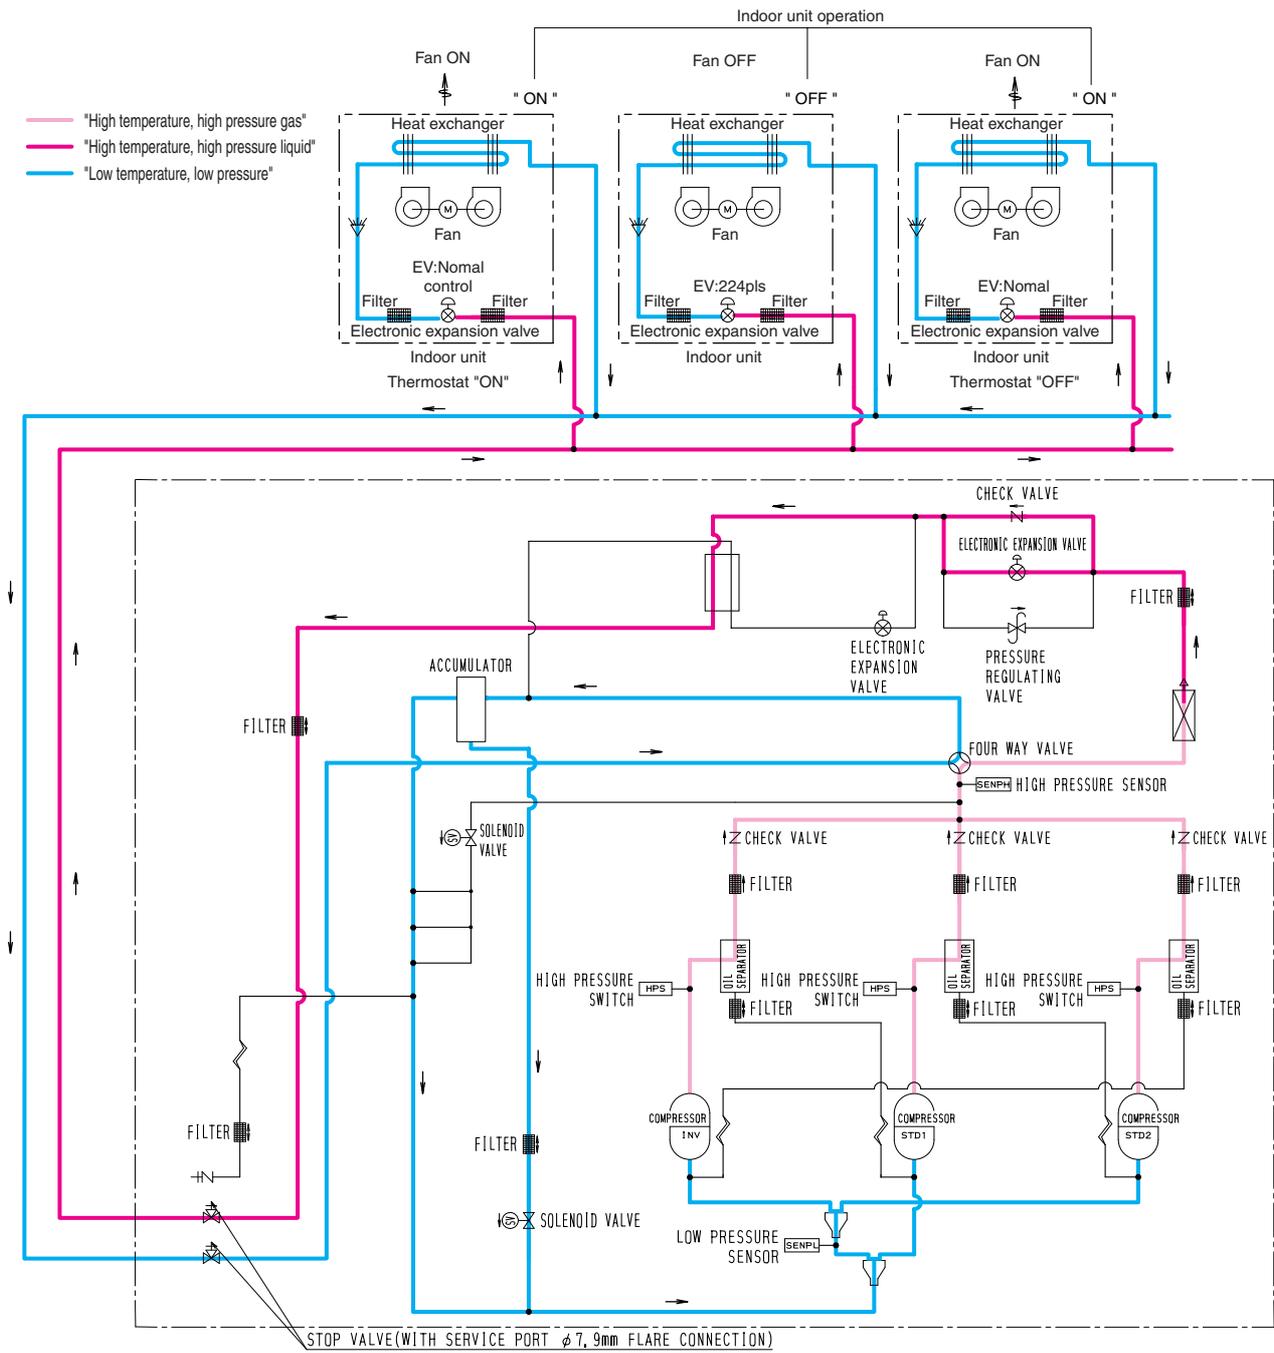

Heating Oil Return & Defrost Operation

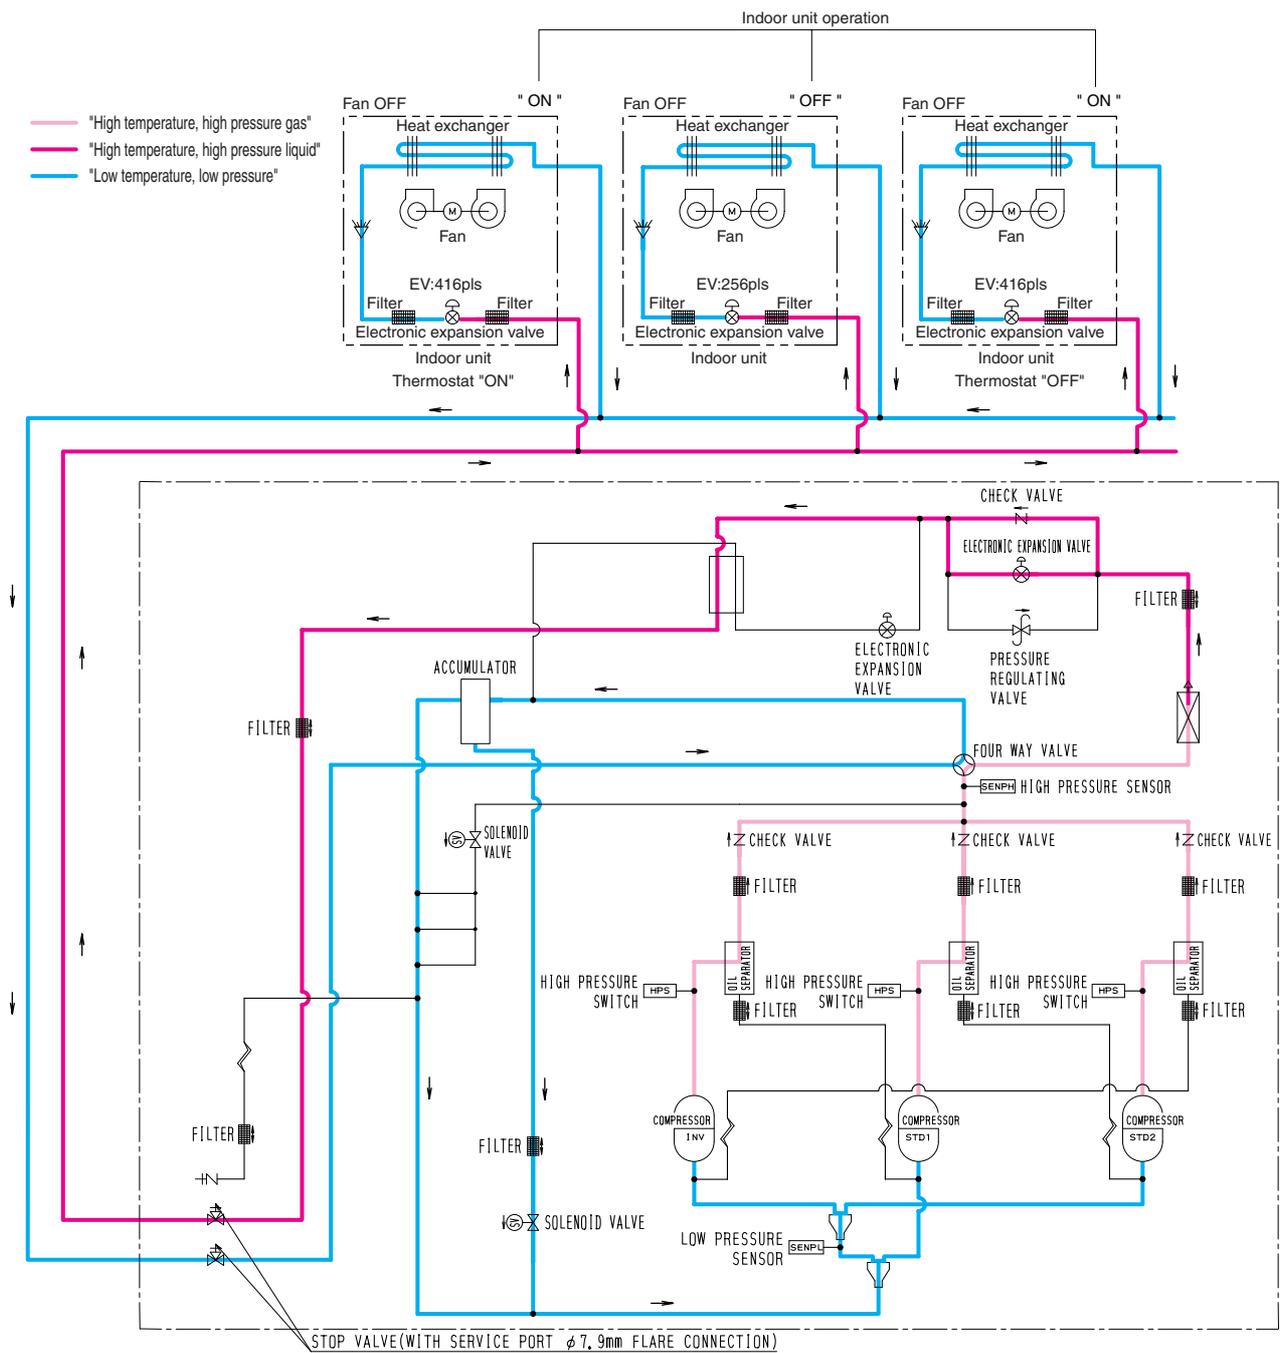

Heating Operation

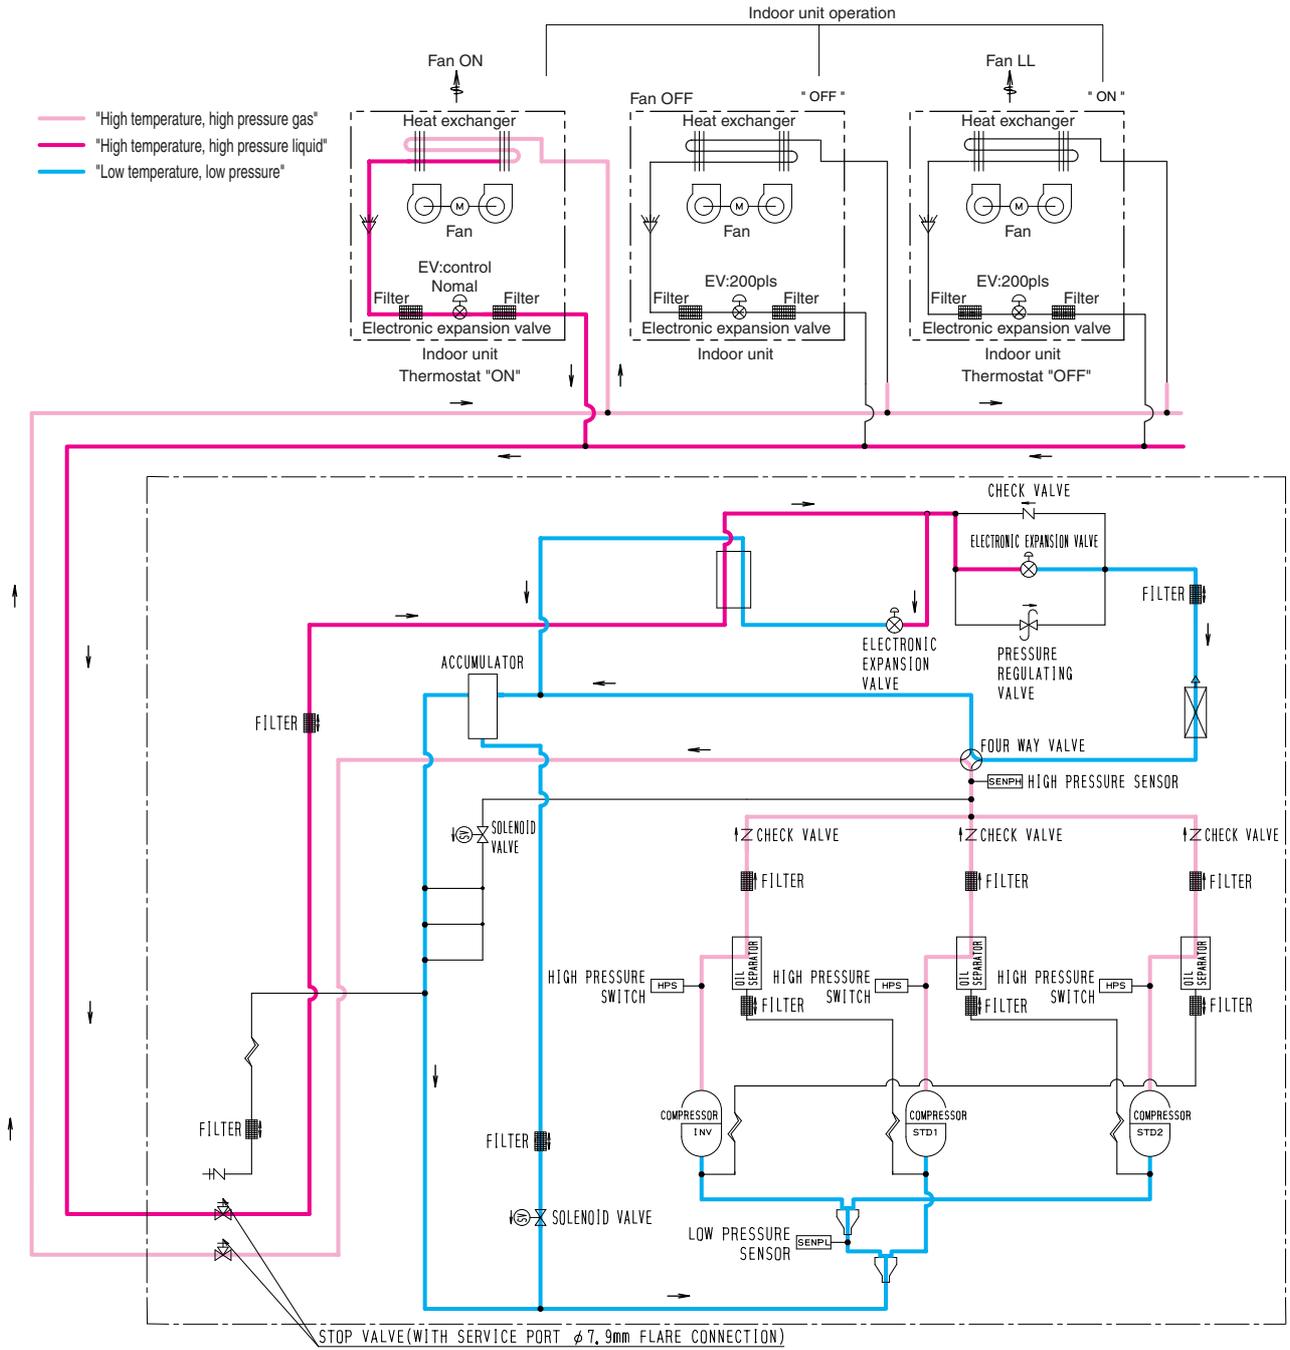



# Part 4

## Function


1. Function general .....	92
1.1 Symbol .....	92
1.2 Operation Mode.....	93
2. Basic Control.....	94
2.1 Normal Operation .....	94
2.2 Compressor PI Control.....	95
2.3 Electronic Expansion Valve PI Control.....	107
2.4 Step Control of Outdoor Unit Fans .....	107
2.5 Outdoor Unit Fan Control in Cooling Operation .....	108
3. Special Control.....	109
3.1 Startup Control .....	109
3.2 Large capacity start up control (Heating) .....	110
3.3 Oil Return Operation .....	111
3.4 Defrosting Operation .....	113
3.5 Pump-down Residual Operation .....	114
3.6 Standby .....	115
3.7 Stopping Operation .....	116
4. Protection Control .....	118
4.1 High Pressure Protection Control.....	118
4.2 Low Pressure Protection Control.....	119
4.3 Discharge Pipe Protection Control .....	120
4.4 Inverter Protection Control .....	121
4.5 STD Compressor Overload Protection.....	122
4.6 Injection Control (only for RXYQ5P).....	122
5. Other Control.....	123
5.1 Outdoor Unit Rotation.....	123
5.2 Emergency Operation .....	124
5.3 Demand Operation .....	128
5.4 Heating Operation Prohibition .....	128
6. Outline of Control (Indoor Unit) .....	129
6.1 Drain Pump Control.....	129
6.2 Louver Control for Preventing Ceiling Dirt.....	131
6.3 Thermostat Sensor in Remote Controller.....	132
6.4 Thermostat Control While in Normal Operation .....	134
6.5 Thermostat Control in Dry Operation .....	134
6.6 Electronic Expansion Valve Control .....	135
6.7 Hot Start Control (In Heating Operation Only).....	135
6.8 Freeze Prevention .....	136
6.9 Heater Control.....	136
6.10 List of Swing Flap Operations .....	137
6.11 Control of Outdoor Air Processing Unit (Unique Control for Outdoor Air Processing Unit) .....	138

# 1. Function general

## 1.1 Symbol

Symbol	Electric symbol	Description or function
20S1	Y3S	Four way valve (Energize during heating)
DSH	–	Discharge pipe superheated degree
DSHi	–	Discharge pipe superheat of inverter compressor
DSHs	–	Discharge pipe superheat of standard compressor
EV	–	Opening of electronic expansion valve
EV1	Y1E	Electronic expansion valve for main heat exchanger
EV2	Y2E	Electronic expansion valve for sub-cooling heat exchanger
HTDi	–	Value of INV compressor discharge pipe temperature (R31T) compensated with outdoor air temperature
HTDs	–	Value of STD compressor discharge pipe temperature (R32T, R33T) compensated with outdoor air temperature
Pc	S1NPH	Value detected by high pressure sensor
Pe	S1NPL	Value detected by low pressure sensor
SH	–	Evaporator outlet superheat
SHS	–	Target evaporator outlet superheat
SVO	Y2S	Solenoid valve for oil return
SVP	Y1S	Solenoid valve for hot gas bypass
SVT	Y4S	Solenoid valve for injection
Ta	R1T (A1P)	Outdoor air temperature
Tb	R4T	Heat exchanger outlet temperature at cooling
Ts2	R2T	Suction pipe temperature detected with the suction pipe thermistor (R2T)
Tsh	R5T (–)	Temperature detected with the subcooling heat exchanger outlet thermistor (R5T)
Tc	–	High pressure equivalent saturation temperature
TcS	–	Target temperature of Tc
Te	–	Low pressure equivalent saturation temperature
TeS	–	Target temperature of Te
Tfin	R1T	Inverter fin temperature
Tl	R6T	Liquid pipe temperature detected with the liquid pipe thermistor (R6T)
Tp	–	Calculated value of compressor port temperature
Ts1	R7T	Suction pipe temperature detected with the accumulator inlet thermistor

## 1.2 Operation Mode

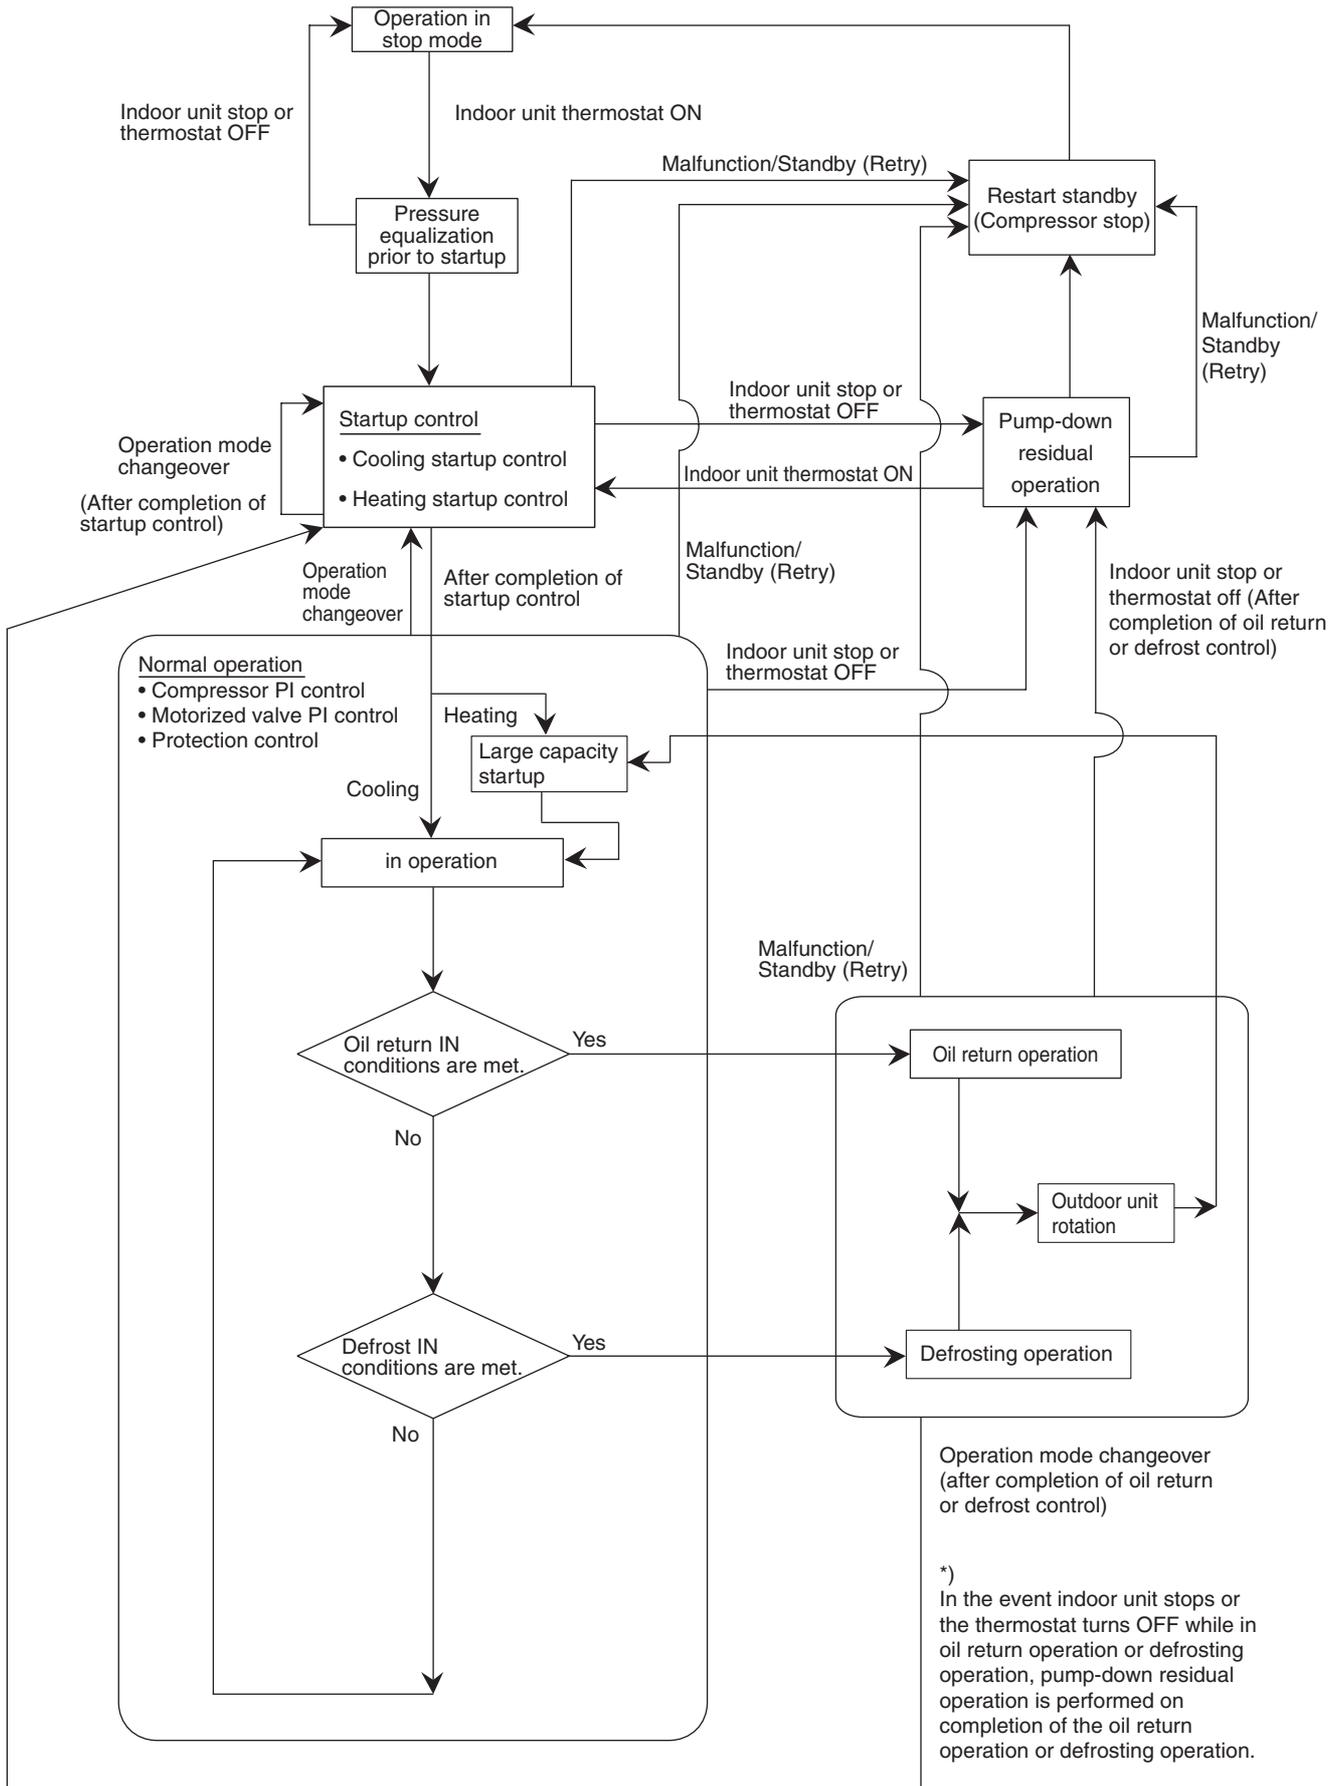

## 2. Basic Control

### 2.1 Normal Operation

#### 2.1.1 List of Functions in Normal Operation

Part Name	Symbol	(Electric Symbol)	Function of Functional Part	
			Normal Cooling	Normal Heating
Compressor	—	(M1C, M2C)	PI control, High pressure protection, Low pressure protection, Td protection, INV protection,	PI control, High pressure protection, Low pressure protection, Td protection, INV protection,
Outdoor unit fan		(M1F)	Cooling fan control	Step 7 or 8
Four way valve	20S1	(Y1R)	OFF	ON
Main motorized valve	EV1	(Y1E)	480 pls	PI control
Subcool heat exchanger electronic expansion valve	EV2	(Y2E)	PI control	PI control
Hot gas bypass valve	SVP	(Y1S)	OFF	Energized when the system is set to low pressure control mode
Accumulator oil return valve	SV0	(Y2S)	ON	ON

Indoor unit actuator		Normal cooling	Normal heating
Fan	Thermostat ON unit	Remote controller setting	Remote controller setting
	Stopping unit	OFF	OFF
	Thermostat OFF unit	Remote controller setting	LL
Electronic expansion valve	Thermostat ON unit	Normal opening *1	Normal opening *2
	Stopping unit	0 pls	200 pls
	Thermostat OFF unit	0 pls	200 pls

\*1. PI control : Evaporator outlet superheated degree (SH) constant.

\*2. PI control : Condenser outlet subcooled degree (SC) constant.

\*1 and 2 : Refer "6.6 Electronic expansion valve control" on page 135.

## 2.2 Compressor PI Control

### Compressor PI Control

Carries out the compressor capacity PI control to maintain Te at constant during cooling operation and Tc at constant during heating operation to ensure stable unit performance.

#### [Cooling operation]

Controls compressor capacity to adjust Te to achieve target value (TeS).

Te set value (Make this setting while in Setting mode 2.)

#### Te setting

L	M (Normal) (factory setting)	H
3	6	9

Te : Low pressure equivalent saturation temperature (°C)

TeS : Target Te value  
(Varies depending on Te setting, operating frequency, etc.)

\*On multi-outdoor-unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

#### [Heating operation]

Controls compressor capacity to adjust Tc to achieve target value (TcS).

Tc set value (Make this setting while in Setting mode 2.)

#### Tc setting

L	M (Normal) (factory setting)	H
43	46	49

Tc : High pressure equivalent saturation temperature (°C)

TcS : Target Tc value  
(Varies depending on Tc setting, operating frequency, etc.)



\*On multi-outdoor-unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

■ Operating Priority and Rotation of Compressors (For multi standard connection system)


Each compressor operates in the following order of priority.

In the case of multi-outdoor-unit system, each compressor operates in any of Pattern 1 through Pattern 3 according to the rotation of outdoor units.


INV: Inverter compressor  
 STD1: Standard compressor 1  
 STD2: Standard compressor 2

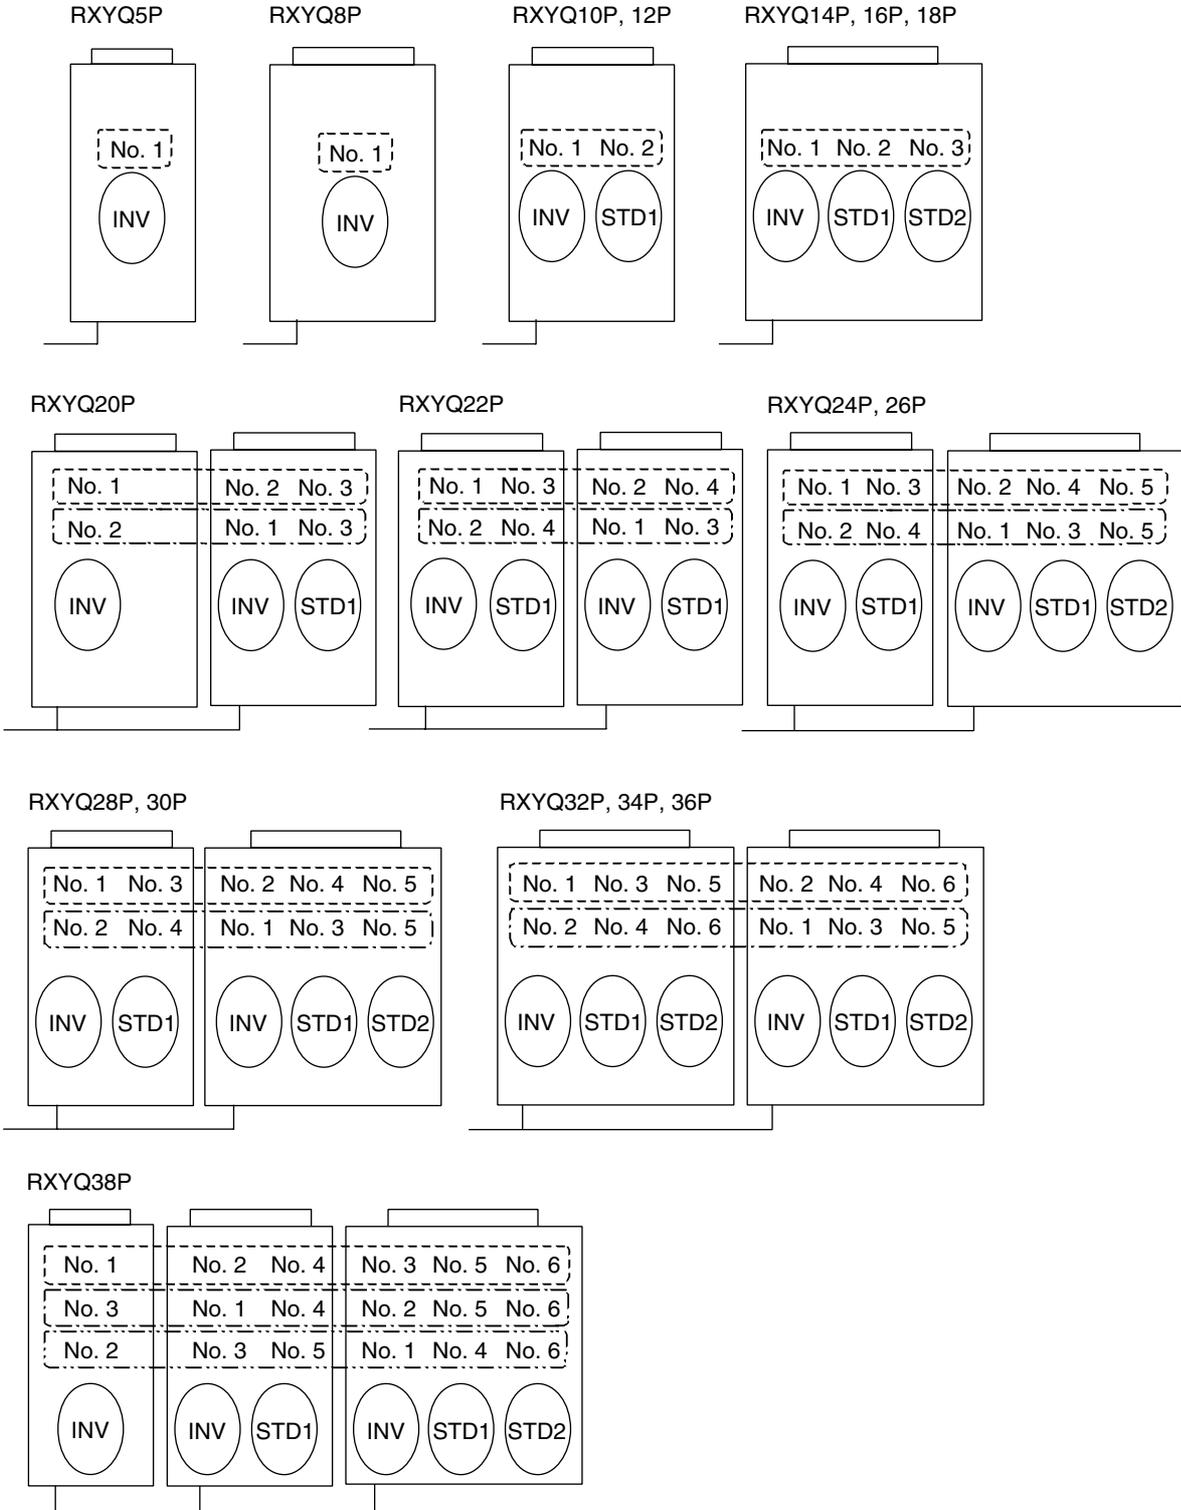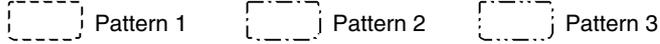


RXYQ40P, 42P, 44P

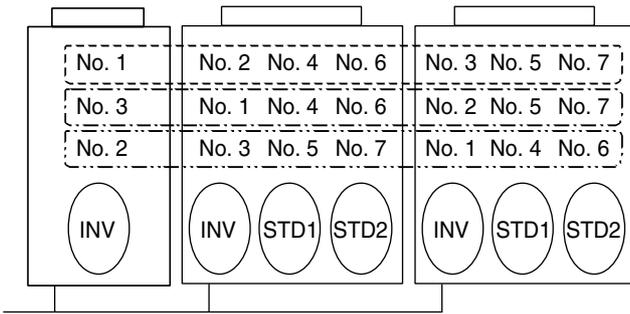

RXYQ46P, 48P

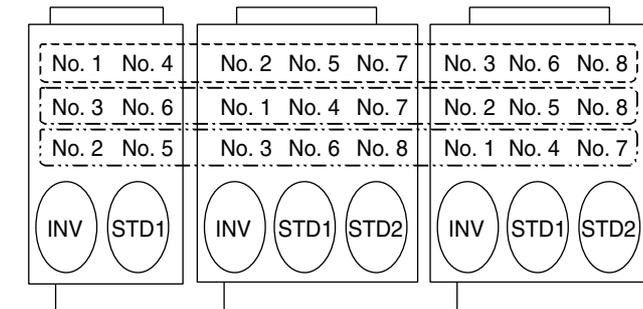

RXYQ50P, 52P, 54P

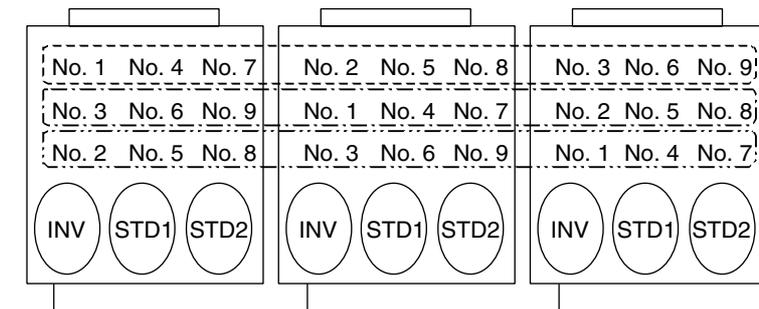

\*

- In the case of combination of 3 outdoor units, the above diagram shows master unit, slave unit 1, and slave unit 2 from left to right.
- Compressors may operate in any pattern other than those mentioned above according to the operating status.

- Compressor Step Control (Multi outdoor unit connection is available on the standard connection system)  
Compressor operations vary with the following steps according to information in "2.2 Compressor PI Control".  
Furthermore, the operating priority of compressors is subject to information in "■ Operating Priority and Rotation of Compressors".

**Stand-alone installation**

**RXYQ5PY1**

STEP No.	INV
1	52 Hz
2	56 Hz
3	62 Hz
4	68 Hz
5	74 Hz
6	80 Hz
7	88 Hz
8	96 Hz
9	104 Hz
10	110 Hz
11	116 Hz
12	124 Hz
13	132 Hz
14	144 Hz
15	158 Hz
16	166 Hz
17	176 Hz
18	188 Hz

**RXYQ8PY1**

STEP No.	INV
1	52 Hz
2	56 Hz
3	62 Hz
4	68 Hz
5	74 Hz
6	80 Hz
7	88 Hz
8	96 Hz
9	104 Hz
10	110 Hz
11	116 Hz
12	124 Hz
13	132 Hz
14	144 Hz
15	158 Hz
16	166 Hz
17	176 Hz
18	188 Hz
19	202 Hz
20	210 Hz
21	218 Hz
22	232 Hz
23	248 Hz
24	266 Hz

**RXYQ10PY1, 12PY1**

STEP No.	INV	STD1
1	52 Hz	OFF
2	56 Hz	OFF
3	62 Hz	OFF
4	68 Hz	OFF
5	74 Hz	OFF
6	80 Hz	OFF
7	88 Hz	OFF
8	96 Hz	OFF
9	104 Hz	OFF
10	110 Hz	OFF
11	116 Hz	OFF
12	124 Hz	OFF
13	132 Hz	OFF
14	144 Hz	OFF
15	158 Hz	OFF
16	166 Hz	OFF
17	176 Hz	OFF
18	188 Hz	OFF
19	202 Hz	OFF
20	210 Hz	OFF
21	52 Hz	ON
22	62 Hz	ON
23	68 Hz	ON
24	74 Hz	ON
25	80 Hz	ON
26	88 Hz	ON
27	96 Hz	ON
28	104 Hz	ON
29	116 Hz	ON
30	124 Hz	ON
31	132 Hz	ON
32	144 Hz	ON
33	158 Hz	ON
34	176 Hz	ON
35	188 Hz	ON
36	202 Hz	ON
37	210 Hz	ON

**RXYQ14PY1, 16PY1**

STEP No.	INV	STD1	STD2
1	52 Hz	OFF	OFF
2	56 Hz	OFF	OFF
3	62 Hz	OFF	OFF
4	68 Hz	OFF	OFF
5	74 Hz	OFF	OFF
6	80 Hz	OFF	OFF
7	88 Hz	OFF	OFF
8	96 Hz	OFF	OFF
9	104 Hz	OFF	OFF
10	110 Hz	OFF	OFF
11	116 Hz	OFF	OFF
12	124 Hz	OFF	OFF
13	132 Hz	OFF	OFF
14	144 Hz	OFF	OFF
15	158 Hz	OFF	OFF
16	166 Hz	OFF	OFF
17	176 Hz	OFF	OFF
18	188 Hz	OFF	OFF
19	202 Hz	OFF	OFF
20	210 Hz	OFF	OFF
21	52 Hz	ON	OFF
22	62 Hz	ON	OFF
23	68 Hz	ON	OFF
24	74 Hz	ON	OFF
25	80 Hz	ON	OFF
26	88 Hz	ON	OFF
27	96 Hz	ON	OFF
28	104 Hz	ON	OFF
29	116 Hz	ON	OFF
30	124 Hz	ON	OFF
31	132 Hz	ON	OFF
32	144 Hz	ON	OFF
33	158 Hz	ON	OFF
34	176 Hz	ON	OFF
35	188 Hz	ON	OFF
36	202 Hz	ON	OFF
37	210 Hz	ON	OFF
38	52 Hz	ON	ON
39	62 Hz	ON	ON
40	74 Hz	ON	ON
41	88 Hz	ON	ON
42	96 Hz	ON	ON
43	104 Hz	ON	ON
44	124 Hz	ON	ON
45	144 Hz	ON	ON
46	158 Hz	ON	ON
47	166 Hz	ON	ON
48	176 Hz	ON	ON
49	188 Hz	ON	ON
50	202 Hz	ON	ON
51	210 Hz	ON	ON

**RXYQ18PY1**

STEP No.	INV	STD1	STD2
1	52 Hz	OFF	OFF
2	56 Hz	OFF	OFF
3	62 Hz	OFF	OFF
4	68 Hz	OFF	OFF
5	74 Hz	OFF	OFF
6	80 Hz	OFF	OFF
7	88 Hz	OFF	OFF
8	96 Hz	OFF	OFF
9	104 Hz	OFF	OFF
10	110 Hz	OFF	OFF
11	116 Hz	OFF	OFF
12	124 Hz	OFF	OFF
13	132 Hz	OFF	OFF
14	144 Hz	OFF	OFF
15	158 Hz	OFF	OFF
16	166 Hz	OFF	OFF
17	176 Hz	OFF	OFF
18	188 Hz	OFF	OFF
19	202 Hz	OFF	OFF
20	210 Hz	OFF	OFF
21	52 Hz	ON	OFF
22	62 Hz	ON	OFF
23	68 Hz	ON	OFF
24	74 Hz	ON	OFF
25	80 Hz	ON	OFF
26	88 Hz	ON	OFF
27	96 Hz	ON	OFF
28	104 Hz	ON	OFF
29	116 Hz	ON	OFF
30	124 Hz	ON	OFF
31	132 Hz	ON	OFF
32	144 Hz	ON	OFF
33	158 Hz	ON	OFF
34	176 Hz	ON	OFF
35	188 Hz	ON	OFF
36	202 Hz	ON	OFF
37	210 Hz	ON	OFF
38	52 Hz	ON	ON
39	62 Hz	ON	ON
40	74 Hz	ON	ON
41	88 Hz	ON	ON
42	96 Hz	ON	ON
43	104 Hz	ON	ON
44	124 Hz	ON	ON
45	144 Hz	ON	ON
46	158 Hz	ON	ON
47	166 Hz	ON	ON
48	176 Hz	ON	ON
49	188 Hz	ON	ON
50	202 Hz	ON	ON
51	210 Hz	ON	ON
52	218 Hz	ON	ON
53	232 Hz	ON	ON
54	248 Hz	ON	ON
55	266 Hz	ON	ON

**Notes:**

1. INV : Inverter compressor  
STD1 : Standard compressor 1  
STD2 : Standard compressor 2
2. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

**Two-unit multi system****RXYQ20PY1 (8+12HP)**

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	74 Hz	74 Hz	OFF
6	80 Hz	80 Hz	OFF
7	88 Hz	88 Hz	OFF
8	96 Hz	96 Hz	OFF
9	104 Hz	104 Hz	OFF
10	110 Hz	110 Hz	OFF
11	116 Hz	116 Hz	OFF
12	124 Hz	124 Hz	OFF
13	132 Hz	132 Hz	OFF
14	144 Hz	144 Hz	OFF
15	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON
20	88 Hz	88 Hz	ON
21	96 Hz	96 Hz	ON
22	104 Hz	104 Hz	ON
23	116 Hz	116 Hz	ON
24	124 Hz	124 Hz	ON
25	132 Hz	132 Hz	ON
26	144 Hz	144 Hz	ON
27	158 Hz	158 Hz	ON
28	176 Hz	176 Hz	ON
29	188 Hz	188 Hz	ON
30	202 Hz	202 Hz	ON
31	210 Hz	210 Hz	ON
32	218 Hz	210 Hz	ON
33	232 Hz	210 Hz	ON
34	248 Hz	210 Hz	ON
35	266 Hz	210 Hz	ON

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	68 Hz	68 Hz	OFF
5	74 Hz	74 Hz	OFF
6	80 Hz	80 Hz	OFF
7	88 Hz	88 Hz	OFF
8	96 Hz	96 Hz	OFF
9	104 Hz	104 Hz	OFF
10	110 Hz	110 Hz	OFF
11	116 Hz	116 Hz	OFF
12	124 Hz	124 Hz	OFF
13	132 Hz	132 Hz	OFF
14	144 Hz	144 Hz	OFF
15	158 Hz	158 Hz	OFF
16	166 Hz	166 Hz	OFF
17	176 Hz	176 Hz	OFF
18	188 Hz	188 Hz	OFF
19	196 Hz	196 Hz	OFF
20	204 Hz	204 Hz	OFF
21	210 Hz	210 Hz	OFF
22	216 Hz	216 Hz	OFF
23	224 Hz	224 Hz	OFF
24	232 Hz	232 Hz	OFF
25	244 Hz	244 Hz	ON
26	262 Hz	262 Hz	ON
27	280 Hz	280 Hz	ON
28	300 Hz	300 Hz	ON
29	320 Hz	320 Hz	ON
30	340 Hz	340 Hz	ON
31	360 Hz	360 Hz	ON
32	380 Hz	380 Hz	ON
33	400 Hz	400 Hz	ON
34	420 Hz	420 Hz	ON
35	440 Hz	440 Hz	ON
36	460 Hz	460 Hz	ON
37	480 Hz	480 Hz	ON
38	500 Hz	500 Hz	ON
39	520 Hz	520 Hz	ON
40	540 Hz	540 Hz	ON
41	560 Hz	560 Hz	ON
42	580 Hz	580 Hz	ON
43	600 Hz	600 Hz	ON
44	620 Hz	620 Hz	ON
45	640 Hz	640 Hz	ON

■ represents the range in which “Hz” is not stepped up.

**RXYQ22PY1 (10+12HP)**

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	70 Hz	70 Hz	OFF
6	74 Hz	74 Hz	OFF
7	80 Hz	80 Hz	OFF
8	88 Hz	88 Hz	OFF
9	96 Hz	96 Hz	OFF
10	104 Hz	104 Hz	OFF
11	110 Hz	110 Hz	OFF
12	116 Hz	116 Hz	OFF
13	124 Hz	124 Hz	OFF
14	132 Hz	132 Hz	OFF
15	144 Hz	144 Hz	OFF
16	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON 1
20	88 Hz	88 Hz	ON 1
21	96 Hz	96 Hz	ON 1
22	104 Hz	104 Hz	ON 1
23	116 Hz	116 Hz	ON 1
24	124 Hz	124 Hz	ON 1
25	132 Hz	132 Hz	ON 1
26	144 Hz	144 Hz	ON 2
27	158 Hz	158 Hz	ON 2
28	176 Hz	176 Hz	ON 2
29	196 Hz	196 Hz	ON 2
30	216 Hz	216 Hz	ON 2
31	236 Hz	236 Hz	ON 2
32	256 Hz	256 Hz	ON 2
33	276 Hz	276 Hz	ON 2
34	296 Hz	296 Hz	ON 2
35	316 Hz	316 Hz	ON 2
36	336 Hz	336 Hz	ON 2

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	68 Hz	68 Hz	OFF
5	74 Hz	74 Hz	OFF
6	80 Hz	80 Hz	OFF
7	88 Hz	88 Hz	OFF
8	96 Hz	96 Hz	OFF
9	104 Hz	104 Hz	OFF
10	110 Hz	110 Hz	OFF
11	116 Hz	116 Hz	OFF
12	124 Hz	124 Hz	OFF
13	132 Hz	132 Hz	OFF
14	144 Hz	144 Hz	OFF
15	158 Hz	158 Hz	OFF
16	166 Hz	166 Hz	OFF
17	176 Hz	176 Hz	OFF
18	188 Hz	188 Hz	OFF
19	196 Hz	196 Hz	OFF
20	204 Hz	204 Hz	OFF
21	210 Hz	210 Hz	OFF
22	216 Hz	216 Hz	OFF
23	224 Hz	224 Hz	OFF
24	232 Hz	232 Hz	OFF
25	244 Hz	244 Hz	ON 1
26	262 Hz	262 Hz	ON 1
27	280 Hz	280 Hz	ON 1
28	300 Hz	300 Hz	ON 1
29	320 Hz	320 Hz	ON 1
30	340 Hz	340 Hz	ON 1
31	360 Hz	360 Hz	ON 1
32	380 Hz	380 Hz	ON 1
33	400 Hz	400 Hz	ON 2
34	420 Hz	420 Hz	ON 2
35	440 Hz	440 Hz	ON 2
36	460 Hz	460 Hz	ON 2
37	480 Hz	480 Hz	ON 2
38	500 Hz	500 Hz	ON 2
39	520 Hz	520 Hz	ON 2
40	540 Hz	540 Hz	ON 2
41	560 Hz	560 Hz	ON 2
42	580 Hz	580 Hz	ON 2
43	600 Hz	600 Hz	ON 2
44	620 Hz	620 Hz	ON 2
45	640 Hz	640 Hz	ON 2
46	660 Hz	660 Hz	ON 2

**Notes:**

- INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
- “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
- Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

■ represents the range in which “Hz” is not stepped up.

RXYQ24PY1 (8+16HP)

RXYQ26PY1 (8+18HP)

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	88 Hz	OFF
4	66 Hz	66 Hz	OFF
5	70 Hz	70 Hz	OFF
6	74 Hz	74 Hz	OFF
7	80 Hz	80 Hz	OFF
8	88 Hz	88 Hz	OFF
9	96 Hz	96 Hz	OFF
10	104 Hz	104 Hz	OFF
11	110 Hz	110 Hz	OFF
12	116 Hz	116 Hz	OFF
13	124 Hz	124 Hz	OFF
14	132 Hz	132 Hz	OFF
15	144 Hz	144 Hz	OFF
16	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON 1
20	88 Hz	88 Hz	ON 1
21	96 Hz	96 Hz	ON 1
22	104 Hz	104 Hz	ON 1
23	116 Hz	116 Hz	ON 1
24	124 Hz	124 Hz	ON 1
25	132 Hz	132 Hz	ON 1
26	88 Hz	88 Hz	ON 2
27	96 Hz	96 Hz	ON 2
28	104 Hz	104 Hz	ON 2
29	124 Hz	124 Hz	ON 2
30	144 Hz	144 Hz	ON 2
31	158 Hz	158 Hz	ON 2
32	166 Hz	166 Hz	ON 2
33	176 Hz	176 Hz	ON 2
34	188 Hz	188 Hz	ON 2
35	202 Hz	202 Hz	ON 2
36	210 Hz	210 Hz	ON 2
37	218 Hz	210 Hz	ON 2
38	232 Hz	210 Hz	ON 2
39	248 Hz	210 Hz	ON 2
40	266 Hz	210 Hz	ON 2

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	OFF	OFF
2	56 Hz	OFF	OFF
3	62 Hz	OFF	OFF
4	68 Hz	OFF	OFF
5	74 Hz	OFF	OFF
6	80 Hz	OFF	OFF
7	88 Hz	OFF	OFF
8	96 Hz	OFF	OFF
9	104 Hz	OFF	OFF
10	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	OFF
16	80 Hz	80 Hz	OFF
17	88 Hz	88 Hz	OFF
18	92 Hz	92 Hz	OFF
19	96 Hz	96 Hz	OFF
20	104 Hz	104 Hz	OFF
21	110 Hz	110 Hz	OFF
22	116 Hz	116 Hz	OFF
23	124 Hz	124 Hz	OFF
24	132 Hz	132 Hz	OFF
25	52 Hz	52 Hz	ON 1
26	62 Hz	62 Hz	ON 1
27	68 Hz	68 Hz	ON 1
28	74 Hz	74 Hz	ON 1
29	80 Hz	80 Hz	ON 1
30	88 Hz	88 Hz	ON 1
31	96 Hz	96 Hz	ON 1
32	104 Hz	104 Hz	ON 1
33	52 Hz	52 Hz	ON 2
34	62 Hz	62 Hz	ON 2
35	74 Hz	74 Hz	ON 2
36	88 Hz	88 Hz	ON 2
37	96 Hz	96 Hz	ON 2
38	104 Hz	104 Hz	ON 2
39	124 Hz	124 Hz	ON 2
40	144 Hz	144 Hz	ON 2
41	158 Hz	158 Hz	ON 2
42	166 Hz	166 Hz	ON 2
43	176 Hz	176 Hz	ON 2
44	188 Hz	188 Hz	ON 2
45	202 Hz	202 Hz	ON 2
46	210 Hz	210 Hz	ON 2
47	218 Hz	210 Hz	ON 2
48	232 Hz	210 Hz	ON 2
49	248 Hz	210 Hz	ON 2
50	266 Hz	210 Hz	ON 2

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	70 Hz	70 Hz	OFF
6	74 Hz	74 Hz	OFF
7	80 Hz	80 Hz	OFF
8	88 Hz	88 Hz	OFF
9	96 Hz	96 Hz	OFF
10	104 Hz	104 Hz	OFF
11	110 Hz	110 Hz	OFF
12	116 Hz	116 Hz	OFF
13	124 Hz	124 Hz	OFF
14	132 Hz	132 Hz	OFF
15	144 Hz	144 Hz	OFF
16	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON 1
20	88 Hz	88 Hz	ON 1
21	96 Hz	96 Hz	ON 1
22	104 Hz	104 Hz	ON 1
23	116 Hz	116 Hz	ON 1
24	124 Hz	124 Hz	ON 1
25	132 Hz	132 Hz	ON 1
26	88 Hz	88 Hz	ON 2
27	96 Hz	96 Hz	ON 2
28	104 Hz	104 Hz	ON 2
29	124 Hz	124 Hz	ON 2
30	144 Hz	144 Hz	ON 2
31	158 Hz	158 Hz	ON 2
32	166 Hz	166 Hz	ON 2
33	176 Hz	176 Hz	ON 2
34	188 Hz	188 Hz	ON 2
35	202 Hz	202 Hz	ON 2
36	210 Hz	210 Hz	ON 2
37	218 Hz	218 Hz	ON 2
38	232 Hz	232 Hz	ON 2
39	248 Hz	248 Hz	ON 2
40	266 Hz	266 Hz	ON 2

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	OFF	OFF
2	56 Hz	OFF	OFF
3	62 Hz	OFF	OFF
4	68 Hz	OFF	OFF
5	74 Hz	OFF	OFF
6	80 Hz	OFF	OFF
7	88 Hz	OFF	OFF
8	96 Hz	OFF	OFF
9	104 Hz	OFF	OFF
10	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	OFF
16	80 Hz	80 Hz	OFF
17	88 Hz	88 Hz	OFF
18	92 Hz	92 Hz	OFF
19	96 Hz	96 Hz	OFF
20	104 Hz	104 Hz	OFF
21	110 Hz	110 Hz	OFF
22	116 Hz	116 Hz	OFF
23	124 Hz	124 Hz	OFF
24	132 Hz	132 Hz	OFF
25	52 Hz	52 Hz	ON 1
26	62 Hz	62 Hz	ON 1
27	68 Hz	68 Hz	ON 1
28	74 Hz	74 Hz	ON 1
29	80 Hz	80 Hz	ON 1
30	88 Hz	88 Hz	ON 1
31	96 Hz	96 Hz	ON 1
32	104 Hz	104 Hz	ON 1
33	52 Hz	52 Hz	ON 2
34	62 Hz	62 Hz	ON 2
35	74 Hz	74 Hz	ON 2
36	88 Hz	88 Hz	ON 2
37	96 Hz	96 Hz	ON 2
38	104 Hz	104 Hz	ON 2
39	124 Hz	124 Hz	ON 2
40	144 Hz	144 Hz	ON 2
41	158 Hz	158 Hz	ON 2
42	166 Hz	166 Hz	ON 2
43	176 Hz	176 Hz	ON 2
44	188 Hz	188 Hz	ON 2
45	202 Hz	202 Hz	ON 2
46	210 Hz	210 Hz	ON 2
47	218 Hz	218 Hz	ON 2
48	232 Hz	232 Hz	ON 2
49	248 Hz	248 Hz	ON 2
50	266 Hz	266 Hz	ON 2

Notes:

1. INV : Inverter compressor  
 STD : Standard compressor  
 Figures after ON represent the number of STD compressors in operation.
2. “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

■ represents the range in which “Hz” is not stepped up.

RXYQ28PY1, 30PY1 (10/12+18HP)

RXYQ 32PY1 (16+16HP)

(To increase Step No.)				(To decrease Step No.)				(To increase Step No.)				(To decrease Step No.)			
STEP No.	Master unit INV	Slave unit INV	STD	STEP No.	Master unit INV	Slave unit INV	STD	STEP No.	Master unit INV	Slave unit INV	STD	STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF	1	52 Hz	OFF	OFF	1	52 Hz	52 Hz	OFF	1	52 Hz	OFF	OFF
2	56 Hz	56 Hz	OFF	2	56 Hz	OFF	OFF	2	56 Hz	56 Hz	OFF	2	56 Hz	OFF	OFF
3	62 Hz	62 Hz	OFF	3	62 Hz	OFF	OFF	3	62 Hz	62 Hz	OFF	3	62 Hz	OFF	OFF
4	66 Hz	66 Hz	OFF	4	68 Hz	OFF	OFF	4	66 Hz	66 Hz	OFF	4	68 Hz	OFF	OFF
5	70 Hz	70 Hz	OFF	5	74 Hz	OFF	OFF	5	70 Hz	70 Hz	OFF	5	74 Hz	OFF	OFF
6	74 Hz	74 Hz	OFF	6	80 Hz	OFF	OFF	6	74 Hz	74 Hz	OFF	6	80 Hz	OFF	OFF
7	80 Hz	80 Hz	OFF	7	88 Hz	OFF	OFF	7	80 Hz	80 Hz	OFF	7	88 Hz	OFF	OFF
8	88 Hz	88 Hz	OFF	8	96 Hz	OFF	OFF	8	88 Hz	88 Hz	OFF	8	96 Hz	OFF	OFF
9	96 Hz	96 Hz	OFF	9	104 Hz	OFF	OFF	9	96 Hz	96 Hz	OFF	9	104 Hz	OFF	OFF
10	104 Hz	104 Hz	OFF	10	52 Hz	52 Hz	OFF	10	104 Hz	104 Hz	OFF	10	52 Hz	52 Hz	OFF
11	110 Hz	110 Hz	OFF	11	56 Hz	56 Hz	OFF	11	110 Hz	110 Hz	OFF	11	56 Hz	56 Hz	OFF
12	116 Hz	116 Hz	OFF	12	62 Hz	62 Hz	OFF	12	116 Hz	116 Hz	OFF	12	62 Hz	62 Hz	OFF
13	124 Hz	124 Hz	OFF	13	66 Hz	66 Hz	OFF	13	124 Hz	124 Hz	OFF	13	66 Hz	66 Hz	OFF
14	132 Hz	132 Hz	OFF	14	70 Hz	70 Hz	OFF	14	132 Hz	132 Hz	OFF	14	70 Hz	70 Hz	OFF
15	144 Hz	144 Hz	OFF	15	74 Hz	74 Hz	OFF	15	144 Hz	144 Hz	OFF	15	74 Hz	74 Hz	OFF
16	158 Hz	158 Hz	OFF	16	80 Hz	80 Hz	OFF	16	158 Hz	158 Hz	OFF	16	80 Hz	80 Hz	OFF
17	166 Hz	166 Hz	OFF	17	88 Hz	88 Hz	OFF	17	166 Hz	166 Hz	OFF	17	88 Hz	88 Hz	OFF
18	176 Hz	176 Hz	OFF	18	92 Hz	92 Hz	OFF	18	176 Hz	176 Hz	OFF	18	92 Hz	92 Hz	OFF
19	80 Hz	80 Hz	ON 1	19	96 Hz	96 Hz	OFF	19	80 Hz	80 Hz	ON 1	19	96 Hz	96 Hz	OFF
20	88 Hz	88 Hz	ON 1	20	104 Hz	104 Hz	OFF	20	88 Hz	88 Hz	ON 1	20	104 Hz	104 Hz	OFF
21	96 Hz	96 Hz	ON 1	21	110 Hz	110 Hz	OFF	21	96 Hz	96 Hz	ON 1	21	110 Hz	110 Hz	OFF
22	104 Hz	104 Hz	ON 1	22	116 Hz	116 Hz	OFF	22	104 Hz	104 Hz	ON 1	22	116 Hz	116 Hz	OFF
23	116 Hz	116 Hz	ON 1	23	124 Hz	124 Hz	OFF	23	116 Hz	116 Hz	ON 1	23	124 Hz	124 Hz	OFF
24	124 Hz	124 Hz	ON 1	24	132 Hz	132 Hz	OFF	24	124 Hz	124 Hz	ON 1	24	132 Hz	132 Hz	OFF
25	132 Hz	132 Hz	ON 1	25	52 Hz	52 Hz	ON 1	25	132 Hz	132 Hz	ON 1	25	52 Hz	52 Hz	ON 1
26	88 Hz	88 Hz	ON 2	26	62 Hz	62 Hz	ON 1	26	88 Hz	88 Hz	ON 2	26	62 Hz	62 Hz	ON 1
27	96 Hz	96 Hz	ON 2	27	68 Hz	68 Hz	ON 1	27	96 Hz	96 Hz	ON 2	27	68 Hz	68 Hz	ON 1
28	104 Hz	104 Hz	ON 2	28	74 Hz	74 Hz	ON 1	28	104 Hz	104 Hz	ON 2	28	74 Hz	74 Hz	ON 1
29	124 Hz	124 Hz	ON 2	29	80 Hz	80 Hz	ON 1	29	124 Hz	124 Hz	ON 2	29	80 Hz	80 Hz	ON 1
30	144 Hz	144 Hz	ON 2	30	88 Hz	88 Hz	ON 1	30	144 Hz	144 Hz	ON 2	30	88 Hz	88 Hz	ON 1
31	92 Hz	92 Hz	ON 3	31	96 Hz	96 Hz	ON 1	31	92 Hz	96 Hz	ON 3	31	96 Hz	96 Hz	ON 1
32	104 Hz	104 Hz	ON 3	32	104 Hz	104 Hz	ON 1	32	104 Hz	104 Hz	ON 3	32	104 Hz	104 Hz	ON 1
33	116 Hz	116 Hz	ON 3	33	52 Hz	52 Hz	ON 2	33	116 Hz	116 Hz	ON 3	33	52 Hz	52 Hz	ON 2
34	124 Hz	124 Hz	ON 3	34	62 Hz	62 Hz	ON 2	34	124 Hz	124 Hz	ON 3	34	62 Hz	62 Hz	ON 2
35	144 Hz	144 Hz	ON 3	35	74 Hz	74 Hz	ON 2	35	144 Hz	144 Hz	ON 3	35	74 Hz	74 Hz	ON 2
36	158 Hz	158 Hz	ON 3	36	88 Hz	88 Hz	ON 2	36	158 Hz	158 Hz	ON 3	36	88 Hz	88 Hz	ON 2
37	166 Hz	166 Hz	ON 3	37	96 Hz	96 Hz	ON 2	37	166 Hz	166 Hz	ON 3	37	96 Hz	96 Hz	ON 2
38	176 Hz	176 Hz	ON 3	38	52 Hz	52 Hz	ON 3	38	176 Hz	176 Hz	ON 3	38	52 Hz	52 Hz	ON 3
39	188 Hz	188 Hz	ON 3	39	62 Hz	62 Hz	ON 3	39	188 Hz	188 Hz	ON 3	39	62 Hz	62 Hz	ON 3
40	202 Hz	202 Hz	ON 3	40	74 Hz	74 Hz	ON 3	40	202 Hz	202 Hz	ON 3	40	74 Hz	74 Hz	ON 3
41	210 Hz	210 Hz	ON 3	41	92 Hz	92 Hz	ON 3	41	210 Hz	210 Hz	ON 3	41	92 Hz	92 Hz	ON 3
42	210 Hz	218 Hz	ON 3	42	104 Hz	104 Hz	ON 3	42	210 Hz	218 Hz	ON 3	42	104 Hz	104 Hz	ON 3
43	210 Hz	232 Hz	ON 3	43	116 Hz	116 Hz	ON 3	43	210 Hz	232 Hz	ON 3	43	52 Hz	52 Hz	ON 4
44	210 Hz	248 Hz	ON 3	44	124 Hz	124 Hz	ON 3	44	210 Hz	248 Hz	ON 3	44	62 Hz	62 Hz	ON 4
45	210 Hz	266 Hz	ON 3	45	144 Hz	144 Hz	ON 3	45	210 Hz	266 Hz	ON 3	45	74 Hz	74 Hz	ON 4
				46	158 Hz	158 Hz	ON 3	46				46	96 Hz	96 Hz	ON 4
				47	166 Hz	166 Hz	ON 3					47	104 Hz	104 Hz	ON 4
				48	176 Hz	176 Hz	ON 3					48	116 Hz	116 Hz	ON 4
				49	188 Hz	188 Hz	ON 3					49	124 Hz	124 Hz	ON 4
				50	202 Hz	202 Hz	ON 3					50	144 Hz	144 Hz	ON 4
				51	210 Hz	210 Hz	ON 3					51	158 Hz	158 Hz	ON 4
				52	210 Hz	218 Hz	ON 3					52	166 Hz	166 Hz	ON 4
				53	210 Hz	232 Hz	ON 3					53	176 Hz	176 Hz	ON 4
				54	210 Hz	248 Hz	ON 3					54	188 Hz	188 Hz	ON 4
				55	210 Hz	266 Hz	ON 3					55	202 Hz	202 Hz	ON 4
												56	210 Hz	210 Hz	ON 4

Notes:

- INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
- “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
- Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

■ represents the range in which “Hz” is not stepped up.

RXYQ 34PY1 (16+18HP)

RXYQ36PY1 (18+18HP)

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	70 Hz	70 Hz	OFF
6	74 Hz	74 Hz	OFF
7	80 Hz	80 Hz	OFF
8	88 Hz	88 Hz	OFF
9	96 Hz	96 Hz	OFF
10	104 Hz	104 Hz	OFF
11	110 Hz	110 Hz	OFF
12	116 Hz	116 Hz	OFF
13	124 Hz	124 Hz	OFF
14	132 Hz	132 Hz	OFF
15	144 Hz	144 Hz	OFF
16	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON 1
20	88 Hz	88 Hz	ON 1
21	96 Hz	96 Hz	ON 1
22	104 Hz	104 Hz	ON 1
23	116 Hz	116 Hz	ON 1
24	124 Hz	124 Hz	ON 1
25	132 Hz	132 Hz	ON 1
26	88 Hz	88 Hz	ON 2
27	96 Hz	96 Hz	ON 2
28	104 Hz	104 Hz	ON 2
29	124 Hz	124 Hz	ON 2
30	144 Hz	144 Hz	ON 2
31	92 Hz	96 Hz	ON 3
32	104 Hz	104 Hz	ON 3
33	116 Hz	116 Hz	ON 3
34	124 Hz	124 Hz	ON 3
35	144 Hz	144 Hz	ON 3
36	96 Hz	96 Hz	ON 4
37	104 Hz	104 Hz	ON 4
38	116 Hz	116 Hz	ON 4
39	124 Hz	124 Hz	ON 4
40	144 Hz	144 Hz	ON 4
41	158 Hz	158 Hz	ON 4
42	166 Hz	166 Hz	ON 4
43	176 Hz	176 Hz	ON 4
44	188 Hz	188 Hz	ON 4
45	202 Hz	202 Hz	ON 4
46	210 Hz	210 Hz	ON 4
47	210 Hz	218 Hz	ON 4
48	210 Hz	232 Hz	ON 4
49	210 Hz	248 Hz	ON 4
50	210 Hz	266 Hz	ON 4

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	74 Hz	74 Hz	OFF
6	80 Hz	80 Hz	OFF
7	88 Hz	88 Hz	OFF
8	96 Hz	96 Hz	OFF
9	104 Hz	104 Hz	OFF
10	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	OFF
16	80 Hz	80 Hz	OFF
17	88 Hz	88 Hz	OFF
18	92 Hz	92 Hz	OFF
19	96 Hz	96 Hz	OFF
20	104 Hz	104 Hz	OFF
21	110 Hz	110 Hz	OFF
22	116 Hz	116 Hz	OFF
23	124 Hz	124 Hz	OFF
24	132 Hz	132 Hz	OFF
25	52 Hz	52 Hz	ON 1
26	62 Hz	62 Hz	ON 1
27	68 Hz	68 Hz	ON 1
28	74 Hz	74 Hz	ON 1
29	80 Hz	80 Hz	ON 1
30	88 Hz	88 Hz	ON 1
31	96 Hz	96 Hz	ON 1
32	104 Hz	104 Hz	ON 1
33	52 Hz	52 Hz	ON 2
34	62 Hz	62 Hz	ON 2
35	74 Hz	74 Hz	ON 2
36	88 Hz	88 Hz	ON 2
37	96 Hz	96 Hz	ON 2
38	52 Hz	52 Hz	ON 3
39	62 Hz	62 Hz	ON 3
40	74 Hz	74 Hz	ON 3
41	92 Hz	92 Hz	ON 3
42	104 Hz	104 Hz	ON 3
43	52 Hz	52 Hz	ON 4
44	62 Hz	62 Hz	ON 4
45	74 Hz	74 Hz	ON 4
46	96 Hz	96 Hz	ON 4
47	104 Hz	104 Hz	ON 4
48	116 Hz	116 Hz	ON 4
49	124 Hz	124 Hz	ON 4
50	144 Hz	144 Hz	ON 4
51	158 Hz	158 Hz	ON 4
52	166 Hz	166 Hz	ON 4
53	176 Hz	176 Hz	ON 4
54	188 Hz	188 Hz	ON 4
55	202 Hz	202 Hz	ON 4
56	210 Hz	210 Hz	ON 4
57	210 Hz	218 Hz	ON 4
58	210 Hz	232 Hz	ON 4
59	210 Hz	248 Hz	ON 4
60	210 Hz	266 Hz	ON 4

(To increase Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	70 Hz	70 Hz	OFF
6	74 Hz	74 Hz	OFF
7	80 Hz	80 Hz	OFF
8	88 Hz	88 Hz	OFF
9	96 Hz	96 Hz	OFF
10	104 Hz	104 Hz	OFF
11	110 Hz	110 Hz	OFF
12	116 Hz	116 Hz	OFF
13	124 Hz	124 Hz	OFF
14	132 Hz	132 Hz	OFF
15	144 Hz	144 Hz	OFF
16	158 Hz	158 Hz	OFF
17	166 Hz	166 Hz	OFF
18	176 Hz	176 Hz	OFF
19	80 Hz	80 Hz	ON 1
20	88 Hz	88 Hz	ON 1
21	96 Hz	96 Hz	ON 1
22	104 Hz	104 Hz	ON 1
23	116 Hz	116 Hz	ON 1
24	124 Hz	124 Hz	ON 1
25	132 Hz	132 Hz	ON 1
26	88 Hz	88 Hz	ON 2
27	96 Hz	96 Hz	ON 2
28	104 Hz	104 Hz	ON 2
29	124 Hz	124 Hz	ON 2
30	144 Hz	144 Hz	ON 2
31	92 Hz	96 Hz	ON 3
32	104 Hz	104 Hz	ON 3
33	116 Hz	116 Hz	ON 3
34	124 Hz	124 Hz	ON 3
35	144 Hz	144 Hz	ON 3
36	96 Hz	96 Hz	ON 4
37	104 Hz	104 Hz	ON 4
38	116 Hz	116 Hz	ON 4
39	124 Hz	124 Hz	ON 4
40	144 Hz	144 Hz	ON 4
41	158 Hz	158 Hz	ON 4
42	166 Hz	166 Hz	ON 4
43	176 Hz	176 Hz	ON 4
44	188 Hz	188 Hz	ON 4
45	202 Hz	202 Hz	ON 4
46	210 Hz	210 Hz	ON 4
47	218 Hz	218 Hz	ON 4
48	232 Hz	232 Hz	ON 4
49	248 Hz	248 Hz	ON 4
50	266 Hz	266 Hz	ON 4

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit INV	STD
1	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	OFF
5	74 Hz	74 Hz	OFF
6	80 Hz	80 Hz	OFF
7	88 Hz	88 Hz	OFF
8	96 Hz	96 Hz	OFF
9	104 Hz	104 Hz	OFF
10	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	OFF
16	80 Hz	80 Hz	OFF
17	88 Hz	88 Hz	OFF
18	92 Hz	92 Hz	OFF
19	96 Hz	96 Hz	OFF
20	104 Hz	104 Hz	OFF
21	110 Hz	110 Hz	OFF
22	116 Hz	116 Hz	OFF
23	124 Hz	124 Hz	OFF
24	132 Hz	132 Hz	OFF
25	52 Hz	52 Hz	ON 1
26	62 Hz	62 Hz	ON 1
27	68 Hz	68 Hz	ON 1
28	74 Hz	74 Hz	ON 1
29	80 Hz	80 Hz	ON 1
30	88 Hz	88 Hz	ON 1
31	96 Hz	96 Hz	ON 1
32	104 Hz	104 Hz	ON 1
33	52 Hz	52 Hz	ON 2
34	62 Hz	62 Hz	ON 2
35	74 Hz	74 Hz	ON 2
36	88 Hz	88 Hz	ON 2
37	96 Hz	96 Hz	ON 2
38	52 Hz	52 Hz	ON 3
39	62 Hz	62 Hz	ON 3
40	74 Hz	74 Hz	ON 3
41	92 Hz	92 Hz	ON 3
42	104 Hz	104 Hz	ON 3
43	52 Hz	52 Hz	ON 4
44	62 Hz	62 Hz	ON 4
45	74 Hz	74 Hz	ON 4
46	96 Hz	96 Hz	ON 4
47	104 Hz	104 Hz	ON 4
48	116 Hz	116 Hz	ON 4
49	124 Hz	124 Hz	ON 4
50	144 Hz	144 Hz	ON 4
51	158 Hz	158 Hz	ON 4
52	166 Hz	166 Hz	ON 4
53	176 Hz	176 Hz	ON 4
54	188 Hz	188 Hz	ON 4
55	202 Hz	202 Hz	ON 4
56	210 Hz	210 Hz	ON 4
57	218 Hz	218 Hz	ON 4
58	232 Hz	232 Hz	ON 4
59	248 Hz	248 Hz	ON 4
60	266 Hz	266 Hz	ON 4

Notes:

1. INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
2. “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

**Three-unit multi system**  
**RXYQ38PY1 (8+12+18HP)**

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	158 Hz	158 Hz	158 Hz	ON 3
33	166 Hz	166 Hz	166 Hz	ON 3
34	176 Hz	176 Hz	176 Hz	ON 3
35	188 Hz	188 Hz	188 Hz	ON 3
36	202 Hz	202 Hz	202 Hz	ON 3
37	210 Hz	210 Hz	210 Hz	ON 3
38	218 Hz	210 Hz	218 Hz	ON 3
39	232 Hz	210 Hz	232 Hz	ON 3
40	248 Hz	210 Hz	248 Hz	ON 3
41	266 Hz	210 Hz	266 Hz	ON 3

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	74 Hz	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	116 Hz	116 Hz	116 Hz	ON 3
45	124 Hz	124 Hz	124 Hz	ON 3
46	144 Hz	144 Hz	144 Hz	ON 3
47	158 Hz	158 Hz	158 Hz	ON 3
48	166 Hz	166 Hz	166 Hz	ON 3
49	176 Hz	176 Hz	176 Hz	ON 3
50	188 Hz	188 Hz	188 Hz	ON 3
51	202 Hz	202 Hz	202 Hz	ON 3
52	210 Hz	210 Hz	210 Hz	ON 3
53	218 Hz	210 Hz	218 Hz	ON 3
54	232 Hz	210 Hz	232 Hz	ON 3
55	248 Hz	210 Hz	248 Hz	ON 3
56	266 Hz	210 Hz	266 Hz	ON 3

■ represents the range in which “Hz” is not stepped up.  
**RXYQ 40PY1 (8+16+16HP)**

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
37	158 Hz	158 Hz	158 Hz	ON 4
38	166 Hz	166 Hz	166 Hz	ON 4
39	176 Hz	176 Hz	176 Hz	ON 4
40	188 Hz	188 Hz	188 Hz	ON 4
41	202 Hz	202 Hz	202 Hz	ON 4
42	210 Hz	210 Hz	210 Hz	ON 4
43	218 Hz	210 Hz	218 Hz	ON 4
44	232 Hz	210 Hz	232 Hz	ON 4
45	248 Hz	210 Hz	248 Hz	ON 4
46	266 Hz	210 Hz	266 Hz	ON 4

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	74 Hz	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	116 Hz	116 Hz	116 Hz	ON 3
45	124 Hz	124 Hz	124 Hz	ON 3
46	144 Hz	144 Hz	144 Hz	ON 3
47	158 Hz	158 Hz	158 Hz	ON 3
48	166 Hz	166 Hz	166 Hz	ON 3
49	176 Hz	176 Hz	176 Hz	ON 3
50	188 Hz	188 Hz	188 Hz	ON 3
51	202 Hz	202 Hz	202 Hz	ON 3
52	210 Hz	210 Hz	210 Hz	ON 3
53	218 Hz	210 Hz	218 Hz	ON 3
54	232 Hz	210 Hz	232 Hz	ON 3
55	248 Hz	210 Hz	248 Hz	ON 3
56	266 Hz	210 Hz	266 Hz	ON 3

**Notes:**

1. INV : Inverter compressor  
 STD : Standard compressor  
 Figures after ON represent the number of STD compressors in operation.
2. “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

■ represents the range in which “Hz” is not stepped up.

RXYQ 42PY1 (8+16+18HP)

RXYQ44PY1 (8+18+18HP)

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
37	158 Hz	158 Hz	158 Hz	ON 4
38	166 Hz	166 Hz	166 Hz	ON 4
39	176 Hz	176 Hz	176 Hz	ON 4
40	188 Hz	188 Hz	188 Hz	ON 4
41	202 Hz	202 Hz	202 Hz	ON 4
42	210 Hz	210 Hz	210 Hz	ON 4
43	218 Hz	210 Hz	218 Hz	ON 4
44	232 Hz	210 Hz	232 Hz	ON 4
45	248 Hz	210 Hz	248 Hz	ON 4
46	266 Hz	210 Hz	266 Hz	ON 4

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	OFF	OFF
11	56 Hz	56 Hz	OFF	OFF
12	62 Hz	62 Hz	OFF	OFF
13	66 Hz	66 Hz	OFF	OFF
14	70 Hz	70 Hz	OFF	OFF
15	74 Hz	74 Hz	OFF	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	52 Hz	52 Hz	52 Hz	ON 4
45	62 Hz	62 Hz	62 Hz	ON 4
46	74 Hz	74 Hz	74 Hz	ON 4
47	96 Hz	96 Hz	96 Hz	ON 4
48	104 Hz	104 Hz	104 Hz	ON 4
49	116 Hz	116 Hz	116 Hz	ON 4
50	124 Hz	124 Hz	124 Hz	ON 4
51	144 Hz	144 Hz	144 Hz	ON 4
52	158 Hz	158 Hz	158 Hz	ON 4
53	166 Hz	166 Hz	166 Hz	ON 4
54	176 Hz	176 Hz	176 Hz	ON 4
55	188 Hz	188 Hz	188 Hz	ON 4
56	202 Hz	202 Hz	202 Hz	ON 4
57	210 Hz	210 Hz	210 Hz	ON 4
58	218 Hz	210 Hz	218 Hz	ON 4
59	232 Hz	210 Hz	232 Hz	ON 4
60	248 Hz	210 Hz	248 Hz	ON 4
61	266 Hz	210 Hz	266 Hz	ON 4

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
37	158 Hz	158 Hz	158 Hz	ON 4
38	166 Hz	166 Hz	166 Hz	ON 4
39	176 Hz	176 Hz	176 Hz	ON 4
40	188 Hz	188 Hz	188 Hz	ON 4
41	202 Hz	202 Hz	202 Hz	ON 4
42	210 Hz	210 Hz	210 Hz	ON 4
43	218 Hz	218 Hz	218 Hz	ON 4
44	232 Hz	232 Hz	232 Hz	ON 4
45	248 Hz	248 Hz	248 Hz	ON 4
46	266 Hz	266 Hz	266 Hz	ON 4

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	OFF	OFF
11	56 Hz	56 Hz	OFF	OFF
12	62 Hz	62 Hz	OFF	OFF
13	66 Hz	66 Hz	OFF	OFF
14	70 Hz	70 Hz	OFF	OFF
15	74 Hz	74 Hz	OFF	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	52 Hz	52 Hz	52 Hz	ON 4
45	62 Hz	62 Hz	62 Hz	ON 4
46	74 Hz	74 Hz	74 Hz	ON 4
47	96 Hz	96 Hz	96 Hz	ON 4
48	104 Hz	104 Hz	104 Hz	ON 4
49	116 Hz	116 Hz	116 Hz	ON 4
50	124 Hz	124 Hz	124 Hz	ON 4
51	144 Hz	144 Hz	144 Hz	ON 4
52	158 Hz	158 Hz	158 Hz	ON 4
53	166 Hz	166 Hz	166 Hz	ON 4
54	176 Hz	176 Hz	176 Hz	ON 4
55	188 Hz	188 Hz	188 Hz	ON 4
56	202 Hz	202 Hz	202 Hz	ON 4
57	210 Hz	210 Hz	210 Hz	ON 4
58	218 Hz	218 Hz	218 Hz	ON 4
59	232 Hz	232 Hz	232 Hz	ON 4
60	248 Hz	248 Hz	248 Hz	ON 4
61	266 Hz	266 Hz	266 Hz	ON 4

Notes:

1. INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
2. “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

represents the range in which “Hz” is not stepped up.

RXYQ46PY1, 48PY1 (10/12+18+18HP)

RXYQ50PY1, 52PY1 (14/16+18+18HP)

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
52	96 Hz	96 Hz	96 Hz	ON 5
53	104 Hz	104 Hz	104 Hz	ON 5
54	116 Hz	116 Hz	116 Hz	ON 5
55	124 Hz	124 Hz	124 Hz	ON 5
56	144 Hz	144 Hz	144 Hz	ON 5
57	158 Hz	158 Hz	158 Hz	ON 5
58	166 Hz	166 Hz	166 Hz	ON 5
59	176 Hz	176 Hz	176 Hz	ON 5
60	188 Hz	188 Hz	188 Hz	ON 5
61	202 Hz	202 Hz	202 Hz	ON 5
62	210 Hz	210 Hz	210 Hz	ON 5
63	210 Hz	218 Hz	218 Hz	ON 5
64	210 Hz	232 Hz	232 Hz	ON 5
65	210 Hz	248 Hz	248 Hz	ON 5
66	210 Hz	266 Hz	266 Hz	ON 5

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	74 Hz	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	52 Hz	52 Hz	52 Hz	ON 4
45	62 Hz	62 Hz	62 Hz	ON 4
46	74 Hz	74 Hz	74 Hz	ON 4
47	96 Hz	96 Hz	96 Hz	ON 4
48	104 Hz	104 Hz	104 Hz	ON 4
49	52 Hz	52 Hz	52 Hz	ON 5
50	68 Hz	68 Hz	68 Hz	ON 5
51	80 Hz	80 Hz	80 Hz	ON 5
52	96 Hz	96 Hz	96 Hz	ON 5
53	104 Hz	104 Hz	104 Hz	ON 5
54	116 Hz	116 Hz	116 Hz	ON 5
55	124 Hz	124 Hz	124 Hz	ON 5
56	144 Hz	144 Hz	144 Hz	ON 5
57	158 Hz	158 Hz	158 Hz	ON 5
58	166 Hz	166 Hz	166 Hz	ON 5
59	176 Hz	176 Hz	176 Hz	ON 5
60	188 Hz	188 Hz	188 Hz	ON 5
61	202 Hz	202 Hz	202 Hz	ON 5
62	210 Hz	210 Hz	210 Hz	ON 5
63	210 Hz	218 Hz	218 Hz	ON 5
64	210 Hz	232 Hz	232 Hz	ON 5
65	210 Hz	248 Hz	248 Hz	ON 5
66	210 Hz	266 Hz	266 Hz	ON 5

(To increase Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
37	96 Hz	96 Hz	96 Hz	ON 5
38	104 Hz	104 Hz	104 Hz	ON 5
39	116 Hz	116 Hz	116 Hz	ON 5
40	124 Hz	124 Hz	124 Hz	ON 5
41	144 Hz	144 Hz	144 Hz	ON 5
42	96 Hz	96 Hz	96 Hz	ON 6
43	104 Hz	104 Hz	104 Hz	ON 6
44	116 Hz	116 Hz	116 Hz	ON 6
45	124 Hz	124 Hz	124 Hz	ON 6
46	144 Hz	144 Hz	144 Hz	ON 6
47	158 Hz	158 Hz	158 Hz	ON 6
48	166 Hz	166 Hz	166 Hz	ON 6
49	176 Hz	176 Hz	176 Hz	ON 6
50	188 Hz	188 Hz	188 Hz	ON 6
51	202 Hz	202 Hz	202 Hz	ON 6
52	210 Hz	210 Hz	210 Hz	ON 6
53	210 Hz	218 Hz	218 Hz	ON 6
54	210 Hz	232 Hz	232 Hz	ON 6
55	210 Hz	248 Hz	248 Hz	ON 6
56	210 Hz	266 Hz	266 Hz	ON 6

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	74 Hz	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	52 Hz	52 Hz	52 Hz	ON 4
45	62 Hz	62 Hz	62 Hz	ON 4
46	74 Hz	74 Hz	74 Hz	ON 4
47	96 Hz	96 Hz	96 Hz	ON 4
48	104 Hz	104 Hz	104 Hz	ON 4
49	52 Hz	52 Hz	52 Hz	ON 5
50	68 Hz	68 Hz	68 Hz	ON 5
51	80 Hz	80 Hz	80 Hz	ON 5
52	96 Hz	96 Hz	96 Hz	ON 5
53	104 Hz	104 Hz	104 Hz	ON 5
54	52 Hz	52 Hz	52 Hz	ON 6
55	68 Hz	68 Hz	68 Hz	ON 6
56	80 Hz	80 Hz	80 Hz	ON 6
57	96 Hz	96 Hz	96 Hz	ON 6
58	104 Hz	104 Hz	104 Hz	ON 6
59	116 Hz	116 Hz	116 Hz	ON 6
60	124 Hz	124 Hz	124 Hz	ON 6
61	144 Hz	144 Hz	144 Hz	ON 6
62	158 Hz	158 Hz	158 Hz	ON 6
63	166 Hz	166 Hz	166 Hz	ON 6
64	176 Hz	176 Hz	176 Hz	ON 6
65	188 Hz	188 Hz	188 Hz	ON 6
66	202 Hz	202 Hz	202 Hz	ON 6
67	210 Hz	210 Hz	210 Hz	ON 6
68	210 Hz	218 Hz	218 Hz	ON 6
69	210 Hz	232 Hz	232 Hz	ON 6
70	210 Hz	248 Hz	248 Hz	ON 6
71	210 Hz	266 Hz	266 Hz	ON 6

Notes:

- INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
- “Master unit”, and “slave unit” in this section are the names for control, and they will be transferred according to the priority of rotation system.
- Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

RXYQ54PY1 (18+18+18HP)

(To increase Step No.)

(To decrease Step No.)

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	52 Hz	52 Hz	OFF
2	56 Hz	56 Hz	56 Hz	OFF
3	62 Hz	62 Hz	62 Hz	OFF
4	66 Hz	66 Hz	66 Hz	OFF
5	68 Hz	68 Hz	68 Hz	OFF
6	70 Hz	70 Hz	70 Hz	OFF
7	74 Hz	74 Hz	74 Hz	OFF
8	80 Hz	80 Hz	80 Hz	OFF
9	88 Hz	88 Hz	88 Hz	OFF
10	96 Hz	96 Hz	96 Hz	OFF
11	104 Hz	104 Hz	104 Hz	OFF
12	110 Hz	110 Hz	110 Hz	OFF
13	116 Hz	116 Hz	116 Hz	OFF
14	124 Hz	124 Hz	124 Hz	OFF
15	80 Hz	80 Hz	80 Hz	ON 1
16	88 Hz	88 Hz	88 Hz	ON 1
17	96 Hz	96 Hz	96 Hz	ON 1
18	104 Hz	104 Hz	104 Hz	ON 1
19	116 Hz	116 Hz	116 Hz	ON 1
20	124 Hz	124 Hz	124 Hz	ON 1
21	132 Hz	132 Hz	132 Hz	ON 1
22	88 Hz	88 Hz	88 Hz	ON 2
23	96 Hz	96 Hz	96 Hz	ON 2
24	104 Hz	104 Hz	104 Hz	ON 2
25	124 Hz	124 Hz	124 Hz	ON 2
26	144 Hz	144 Hz	144 Hz	ON 2
27	92 Hz	92 Hz	92 Hz	ON 3
28	104 Hz	104 Hz	104 Hz	ON 3
29	116 Hz	116 Hz	116 Hz	ON 3
30	124 Hz	124 Hz	124 Hz	ON 3
31	144 Hz	144 Hz	144 Hz	ON 3
32	96 Hz	96 Hz	96 Hz	ON 4
33	104 Hz	104 Hz	104 Hz	ON 4
34	116 Hz	116 Hz	116 Hz	ON 4
35	124 Hz	124 Hz	124 Hz	ON 4
36	144 Hz	144 Hz	144 Hz	ON 4
37	96 Hz	96 Hz	96 Hz	ON 5
38	104 Hz	104 Hz	104 Hz	ON 5
39	116 Hz	116 Hz	116 Hz	ON 5
40	124 Hz	124 Hz	124 Hz	ON 5
41	144 Hz	144 Hz	144 Hz	ON 5
42	96 Hz	96 Hz	96 Hz	ON 6
43	104 Hz	104 Hz	104 Hz	ON 6
44	116 Hz	116 Hz	116 Hz	ON 6
45	124 Hz	124 Hz	124 Hz	ON 6
46	144 Hz	144 Hz	144 Hz	ON 6
47	158 Hz	158 Hz	158 Hz	ON 6
48	166 Hz	166 Hz	166 Hz	ON 6
49	176 Hz	176 Hz	176 Hz	ON 6
50	188 Hz	188 Hz	188 Hz	ON 6
51	202 Hz	202 Hz	202 Hz	ON 6
52	210 Hz	210 Hz	210 Hz	ON 6
53	218 Hz	218 Hz	218 Hz	ON 6
54	232 Hz	232 Hz	232 Hz	ON 6
55	248 Hz	248 Hz	248 Hz	ON 6
56	266 Hz	266 Hz	266 Hz	ON 6

STEP No.	Master unit INV	Slave unit1 INV	Slave unit2 INV	STD
1	52 Hz	OFF	OFF	OFF
2	56 Hz	OFF	OFF	OFF
3	62 Hz	OFF	OFF	OFF
4	68 Hz	OFF	OFF	OFF
5	74 Hz	OFF	OFF	OFF
6	80 Hz	OFF	OFF	OFF
7	88 Hz	OFF	OFF	OFF
8	96 Hz	OFF	OFF	OFF
9	104 Hz	OFF	OFF	OFF
10	52 Hz	52 Hz	52 Hz	OFF
11	56 Hz	56 Hz	56 Hz	OFF
12	62 Hz	62 Hz	62 Hz	OFF
13	66 Hz	66 Hz	66 Hz	OFF
14	70 Hz	70 Hz	70 Hz	OFF
15	74 Hz	74 Hz	74 Hz	OFF
16	52 Hz	52 Hz	52 Hz	OFF
17	56 Hz	56 Hz	56 Hz	OFF
18	62 Hz	62 Hz	62 Hz	OFF
19	66 Hz	66 Hz	66 Hz	OFF
20	68 Hz	68 Hz	68 Hz	OFF
21	70 Hz	70 Hz	70 Hz	OFF
22	74 Hz	74 Hz	74 Hz	OFF
23	80 Hz	80 Hz	80 Hz	OFF
24	88 Hz	88 Hz	88 Hz	OFF
25	96 Hz	96 Hz	96 Hz	OFF
26	52 Hz	52 Hz	52 Hz	ON 1
27	62 Hz	62 Hz	62 Hz	ON 1
28	68 Hz	68 Hz	68 Hz	ON 1
29	74 Hz	74 Hz	74 Hz	ON 1
30	80 Hz	80 Hz	80 Hz	ON 1
31	88 Hz	88 Hz	88 Hz	ON 1
32	96 Hz	96 Hz	96 Hz	ON 1
33	104 Hz	104 Hz	104 Hz	ON 1
34	52 Hz	52 Hz	52 Hz	ON 2
35	62 Hz	62 Hz	62 Hz	ON 2
36	74 Hz	74 Hz	74 Hz	ON 2
37	88 Hz	88 Hz	88 Hz	ON 2
38	96 Hz	96 Hz	96 Hz	ON 2
39	52 Hz	52 Hz	52 Hz	ON 3
40	62 Hz	62 Hz	62 Hz	ON 3
41	74 Hz	74 Hz	74 Hz	ON 3
42	92 Hz	92 Hz	92 Hz	ON 3
43	104 Hz	104 Hz	104 Hz	ON 3
44	52 Hz	52 Hz	52 Hz	ON 4
45	62 Hz	62 Hz	62 Hz	ON 4
46	74 Hz	74 Hz	74 Hz	ON 4
47	96 Hz	96 Hz	96 Hz	ON 4
48	104 Hz	104 Hz	104 Hz	ON 4
49	52 Hz	52 Hz	52 Hz	ON 5
50	68 Hz	68 Hz	68 Hz	ON 5
51	80 Hz	80 Hz	80 Hz	ON 5
52	96 Hz	96 Hz	96 Hz	ON 5
53	104 Hz	104 Hz	104 Hz	ON 5
54	52 Hz	52 Hz	52 Hz	ON 6
55	68 Hz	68 Hz	68 Hz	ON 6
56	80 Hz	80 Hz	80 Hz	ON 6
57	96 Hz	96 Hz	96 Hz	ON 6
58	104 Hz	104 Hz	104 Hz	ON 6
59	116 Hz	116 Hz	116 Hz	ON 6
60	124 Hz	124 Hz	124 Hz	ON 6
61	144 Hz	144 Hz	144 Hz	ON 6
62	158 Hz	158 Hz	158 Hz	ON 6
63	166 Hz	166 Hz	166 Hz	ON 6
64	176 Hz	176 Hz	176 Hz	ON 6
65	188 Hz	188 Hz	188 Hz	ON 6
66	202 Hz	202 Hz	202 Hz	ON 6
67	210 Hz	210 Hz	210 Hz	ON 6
68	218 Hz	218 Hz	218 Hz	ON 6
69	232 Hz	232 Hz	232 Hz	ON 6
70	248 Hz	248 Hz	248 Hz	ON 6
71	266 Hz	266 Hz	266 Hz	ON 6

Notes:

1. INV : Inverter compressor  
STD : Standard compressor  
Figures after ON represent the number of STD compressors in operation.
2. "Master unit", and "slave unit" in this section are the names for control, and they will be transferred according to the priority of rotation system.
3. Depending on the operating conditions of compressors, the compressors may run in patterns other than those aforementioned.

## 2.3 Electronic Expansion Valve PI Control

### Main Motorized Valve EV1 Control

Carries out the motorized valve (Y1E) PI control to maintain the evaporator outlet superheated degree (SH) at constant during heating operation to make maximum use of the outdoor unit heat exchanger (evaporator).

$$SH = Ts1 - Te$$

SH : Evaporator outlet superheated degree (°C)

Ts1: Suction pipe temperature detected by thermistor R6T (R7T) (°C)

Te : Low pressure equivalent saturation temperature (°C)

The optimum initial value of the evaporator outlet superheated degree is 5°C, but varies depending on the discharge pipe superheated degree of inverter compressor.

### Subcooling Motorized Valve EV2 Control

Makes PI control of the motorized valve (Y2E) to keep the superheated degree of the outlet gas pipe on the evaporator side for the full use of the subcooling heat exchanger.

$$SH = Tsh - Te$$

SH : Outlet superheated degree of evaporator (°C)

Tsh : Suction pipe temperature detected with the thermistor R5T (°C)

Te : Low pressure equivalent saturation temperature (°C)

## 2.4 Step Control of Outdoor Unit Fans


Used to control the revolutions of outdoor unit fans in the steps listed in table below, according to condition changes.

STEP No.	Fan revolutions (rpm)									
	RXYQ5P	RXYQ8P	RXYQ10P	RXYQ12P (Europe)	RXYQ12P (except Europe) RXYQ14P		RXYQ16P		RXYQ18P	
					FAN1	FAN2	FAN1	FAN2	FAN1	FAN2
0	0	0	0	0	0	0	0	0	0	0
1	285	350	350	350	230	0	230	0	395	0
2	315	370	370	370	380	0	380	0	460	0
3	360	400	400	400	290	260	290	260	570	0
4	450	450	460	460	375	345	375	345	385	355
5	570	540	560	560	570	540	570	540	550	520
6	710	670	680	680	720	690	720	690	800	770
7	Cooling: 951 Heating: 941	760	Cooling: 821 Heating: 800	870	1091	1061	1091	1061	1136	1106
8	Cooling: 951 Heating: 941	Cooling: 796 Heating: 780	Cooling: 821 Heating: 800	870	1136	1106	1136	1106	1166	1136

\* Figures listed above are all those controlled while in standard mode, which vary when the system is set to high static pressure or capacity precedence mode.

## 2.5 Outdoor Unit Fan Control in Cooling Operation

While in cooling operation, if the outdoor temperature is low, this mode provides high-pressure control using the outdoor unit fan to retain appropriate liquid pressure, thus ensuring refrigerant circulation rate to be supplied to indoor units.

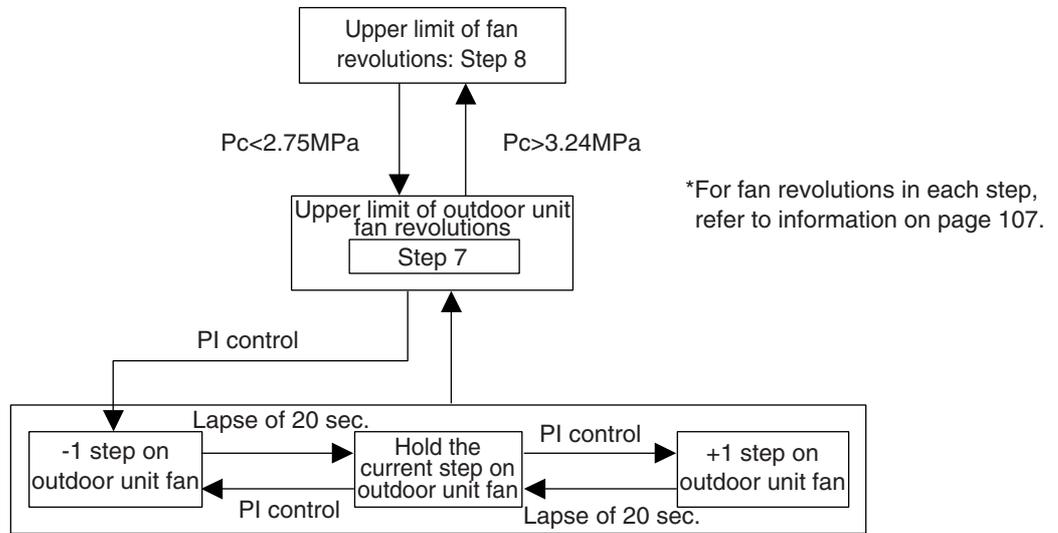

## 3. Special Control

### 3.1 Startup Control

This control is used to equalize the pressure in the front and back of the compressor prior to the startup of the compressor, thus reducing startup loads. Furthermore, the inverter is turned ON to charge the capacitor. In addition, to avoid stresses to the compressor due to oil return or else after the startup, the following control is made and the position of the four way valve is also determined. To position the four way valve, the master and slave units simultaneously start up.

#### 3.1.1 Startup Control in Cooling Operation


	Pressure equalization control prior to startup	Startup control	
		STEP1	STEP2
Compressor	0 Hz	52 Hz + OFF + OFF	124 Hz + OFF + OFF +2 steps/20 sec. (until $P_c - P_e > 0.39\text{MPa}$ is achieved)
Outdoor unit fan	STEP4	$T_a < 20^\circ\text{C}$ : OFF $T_a \geq 20^\circ\text{C}$ : STEP4	+1 step/15 sec. (when $P_c > 2.16\text{MPa}$ ) -1 step/15 sec. (when $P_c < 1.77\text{MPa}$ )
Four way valve (20S1)	Holds	OFF	OFF
Main motorized valve (EV1)	0 pls	480 pls	480 pls
Subcooling motorized valve (EV2) (RXYQ8~)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Accumulator oil return valve (SVO)	OFF	OFF	OFF
Injection (SVT) (RXYQ5P model)	OFF	OFF	OFF
Ending conditions	A lapse of one minute	A lapse of 10 sec.	OR <ul style="list-style-type: none"> <li>• A lapse of 130 sec.</li> <li>• <math>P_c - P_e &gt; 0.39\text{MPa}</math></li> </ul>

#### 3.1.2 Startup Control in Heating Operation

	Pressure equalization control prior to startup	Startup control	
		STEP1	STEP2
Compressor	0 Hz	52 Hz + OFF + OFF	124 Hz + OFF + OFF +2 steps/20 sec. (until $P_c - P_e > 0.39\text{MPa}$ is achieved)
Outdoor unit fan	STEP4	STEP8	STEP8
Four way valve	Holds	ON	ON
Main motorized valve (EV1)	0 pls	0 pls	0 pls
Subcooling motorized valve (EV2) (RXYQ8~)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Accumulator oil return valve (SVO)	OFF	OFF	OFF
Injection (SVT) (RXYQ5P model)	OFF	OFF	OFF
Ending conditions	A lapse of one minute	A lapse of 10 sec.	OR <ul style="list-style-type: none"> <li>• A lapse of 130 sec.</li> <li>• <math>P_c &gt; 2.70\text{MPa}</math></li> <li>• <math>P_c - P_e &gt; 0.39\text{MPa}</math></li> </ul>

### 3.2 Large capacity start up control (Heating)

For startup, oil return operation, or setup after defrosting, start up multiple compressors at a high speed according to the conditions of indoor units with thermostat ON, thus maximizing the equipment capacity.

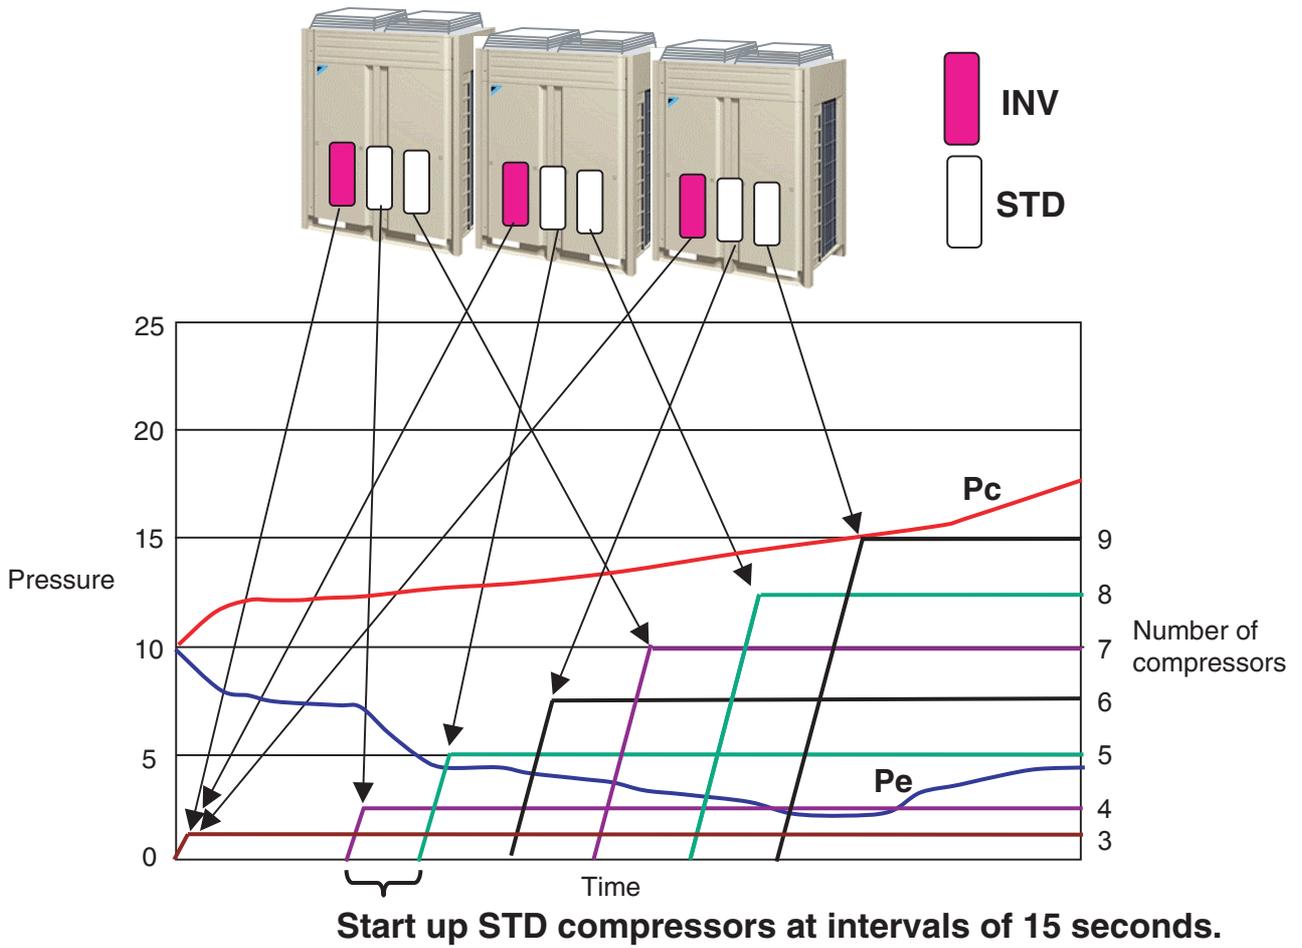

### 3.3 Oil Return Operation

In order to prevent the compressor from running out of oil, the oil return operation is conducted to recover oil flown out from the compressor to the system side.

#### 3.3.1 Oil Return Operation in Cooling Operation

##### [Start conditions]

Referring to the set conditions for the following items, start the oil return operation in cooling.

- Cumulative oil feed rate
- Timer setting (Make this setting so as to start the oil return operation when the initial cumulative operating time reaches two hours after power supply is turned ON and then every eight hours.)

Furthermore, the cumulative oil feed rate is computed from Tc, Te, and compressor loads.

Outdoor unit actuator	Oil return preparation operation	Oil return operation	Post-oil-return operation
Compressor	Take the current step as the upper limit.	5 HP: 52 Hz (→ Low pressure constant control) Other model: 52 Hz + ON + ON (→ Low pressure constant control) ↓ Maintain number of compressors in oil return preparation operation ON	Same as the "oil return operation" mode.
Outdoor unit fan	Fan control (Normal cooling)	Fan control (Normal cooling)	Fan control (Normal cooling)
Four way valve	OFF	OFF	OFF
Main motorized valve (EV1)	480 pls	480 pls	480 pls
Subcooling motorized valve (EV2)	SH control	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Accumulator oil return valve (SVO)	ON	ON	ON
Ending conditions	20 sec.	or [ <ul style="list-style-type: none"> <li>• 3 min.</li> <li>• <math>T_s - T_e &lt; 5^\circ\text{C}</math></li> </ul>	or [ <ul style="list-style-type: none"> <li>• 3 min.</li> <li>• <math>P_e &lt; 0.6\text{MPa}</math></li> <li>• <math>HT_{di} &gt; 110^\circ\text{C}</math></li> </ul>

\* In the case of multi-outdoor-unit system,

Master unit: Performs the operations listed in the table above.

Slave units: Operating units perform the operations listed in the table above.

Non-operating units perform the operations listed in the table above from the oil return operation.

(Non-operating unit stops during "oil return preparation operation".)

\* Actuators are based on RXYQ14~18P.

Indoor unit actuator		Cooling oil return operation
Fan	Thermostat ON unit	Remote controller setting
	Stopping unit	OFF
	Thermostat OFF unit	Remote controller setting
Electronic expansion valve	Thermostat ON unit	Normal opening
	Stopping unit	224 pls
	Thermostat OFF unit	Normal opening with forced thermostat ON

### 3.3.2 Oil Return Operation in Heating Operation

Outdoor Unit Actuator	Oil return preparation operation	Oil return operation	Post-oil-return operation
Compressor	Upper limit control	176 Hz + ON + ON	124 Hz + OFF + OFF 2-steps increase/20sec. till Pc - Pe>0.4 MPa
Outdoor unit fan	STEP7 or STEP8	OFF	STEP8
Four way valve	ON	OFF	ON
Main motorized valve (EV1)	SH control → 480 pls	480 pls	55 pls
Subcooling motorized valve (EV2)	SH control	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Accumulator oil return valve (SVO)	ON	ON	ON
Injection (SVT) (RXYQ5P model only)	OFF	OFF	OFF
Ending conditions	170 sec.	or [ <ul style="list-style-type: none"> <li>• 4 min.</li> <li>• Ts - Te&lt;5°C</li> </ul>	or [ <ul style="list-style-type: none"> <li>• 10 sec.</li> <li>• Pc - Pe&gt;0.4MPa</li> </ul>

- \* In the case of multi-outdoor-unit system,  
 Master unit: Performs the operations listed in the table above.  
 Slave units: Operating units perform the operations listed in the table above.  
 Non-operating units perform the operations listed in the table above from the oil return operation.  
 (Non-operating unit stops during “oil return preparation operation”.)
- \* Actuators are based on RXYQ14~18P.

Indoor unit actuator		Heating oil return operation
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	Oil return EV opening degree
	Stopping unit	256 pls
	Thermostat OFF unit	Oil return EV opening degree

### 3.4 Defrosting Operation

To defrost the outdoor unit heat exchanger while in Evaporator, the defrost operation is conducted to recover the heating capacity.

[Start conditions]

Referring to the set conditions for the following items, start the defrosting operation.

- Heat transfer coefficient of the outdoor unit heat exchanger
- Heat exchange temperature (Tb)
- Timer (Set to two hours at minimum.)

Furthermore, the heat transfer coefficient of the outdoor unit Evaporator is computed from Tc, Te, and compressor loads.

Outdoor unit actuator	Defrost preparation operation	Defrost operation	Post Defrost operation
Compressor	Upper limit control	176 Hz + ON + ON	124 Hz + OFF + OFF 2-steps increase/20sec. till Pc - Pe>0.4 MPa
Outdoor unit fan	STEP7 or STEP8	OFF	STEP8
Four way valve	ON	OFF	ON
Main motorized valve (EV1)	SH control → 480 pls	480 pls	55 pls
Subcooling motorized valve (EV2)	0 pls	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF	OFF
Accumulator oil return valve (SVO)	ON	ON	ON
Injection (SVT) (RXYQ5P model only)	OFF	OFF	OFF
Ending conditions	170 sec.	or [ <ul style="list-style-type: none"> <li>• 10 min.</li> <li>• Tb&gt;11°C</li> </ul>	or [ <ul style="list-style-type: none"> <li>• 10 sec.</li> <li>• Pc - Pe&gt;0.4MPa</li> </ul>

\* In the case of multi-outdoor-unit system,

Master unit: Performs the operations listed in the table above.

Slave units: Operating units perform the operations listed in the table above.

Non-operating units perform the operations listed in the table above from the Defrost operation.

(Non-operating unit stops during "Defrost preparation operation".)

\* Actuators are based on RXYQ14~18P.

Indoor unit actuator		During defrost
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	Defrost EV opening degree
	Stopping unit	256 pls
	Thermostat OFF unit	Defrost EV opening degree

## 3.5 Pump-down Residual Operation

### 3.5.1 Pump-down Residual Operation in Cooling Operation

If the liquid refrigerant stays in the Evaporator at the startup of a compressor, this liquid refrigerant enters the compressor, thus resulting in diluted oil in the compressor and then degraded lubrication performance.

Consequently, in order to recover the refrigerant in the Evaporator while the compressor stops, the pump-down residual operation is conducted.

Actuator	Master unit operation	Slave unit operation
Compressor	124 Hz + OFF + OFF	OFF
Outdoor unit fan	Fan control	OFF
Four way valve	OFF	OFF
Main motorized valve (EV1)	480 pls	0 pls
Subcooling motorized valve (EV2)	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF
Accumulator oil return valve (SVO)	ON	ON
Ending conditions	or <ul style="list-style-type: none"> <li>• 5 min.</li> <li>• Master Unit Pe&lt;0.49 MPa</li> <li>• Master Unit Td&gt;110°C</li> <li>• Master Unit Pc&gt;2.94 MPa</li> </ul>	

\* Actuators are based on RXYQ14~18P.

### 3.5.2 Pump-down Residual Operation in Heating Operation

Actuator	Master unit operation	Slave unit operation
Compressor	124 Hz + OFF + OFF	OFF
Outdoor unit fan	STEP7	STEP4
Four way valve	ON	ON
Main motorized valve (EV1)	0 pls	0 pls
Subcooling motorized valve (EV2)	0 pls	0 pls
Hot gas bypass valve (SVP)	OFF	OFF
Accumulator oil return valve (SVO)	ON	ON
Ending conditions	or <ul style="list-style-type: none"> <li>• 3 min.</li> <li>• Master Unit Pe&lt;0.25 MPa</li> <li>• Master Unit Td&gt;110°C</li> <li>• Master Unit Pc&gt;2.94 MPa</li> </ul>	

\* Actuators are based on RXYQ14~18P.

## 3.6 Standby

### 3.6.1 Restart Standby


Used to forcedly stop the compressor for a period of 3 minutes, in order to prevent the frequent ON/OFF of the compressor and equalize the pressure within the refrigerant system.

Actuator	Operation
Compressor	OFF
Outdoor unit fan	Ta>30°C: STEP4 Ta≤30°C: OFF
Four way valve	Holds
Main motorized valve (EV1)	0 pls
Subcooling motorized (EV2)	0 pls
Hot gas bypass valve (SVP)	OFF
Accumulator oil return valve (SVO)	OFF
Injection (SVT) (RXYQ5P model)	OFF
Ending conditions	3 min.

\* Actuators are based on RXYQ14~18P.

### 3.6.2 Crankcase Heater Control

In order to prevent the refrigerant from melting in the compressor oil in the stopped mode, this mode is used to control the crankcase heater.

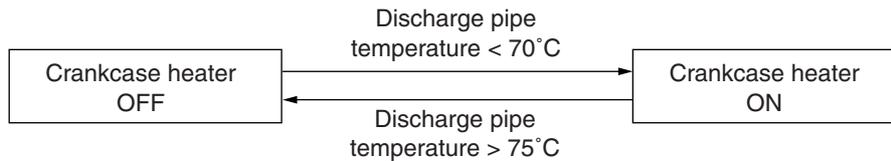

## 3.7 Stopping Operation

### 3.7.1 When System is in Stop Mode (Normal operation stop)

This mode is used to define actuator operations when the system stops.

Actuator	Operation
Compressor	OFF
Outdoor unit fan	OFF
Four way valve	Holds
Main motorized valve (EV1)	0 pls
Subcooling motorized valve (EV2)	0 pls
Hot gas bypass valve (SVP)	OFF
Accumulator oil return valve (SVO)	OFF
Injection (SVT) (RXYQ5P model only)	OFF
Ending conditions	Indoor unit thermostat is turned ON.

\* Actuators are based on RXYQ14~18P.

### 3.7.2 Stop due to Malfunction

In order to protect compressors, if any of the following items has an abnormal value, the system will make "stop with thermostat OFF" and the malfunction will be determined according to the number of retry times.

Item	Judgment Criteria	Malfunction Code
1. Abnormal low pressure level	0.07MPa	E4
2. Abnormal high pressure level	4.0MPa	E3
3. Abnormal discharge pipe temperature level	135°C	F3
4. Abnormal power supply voltage	Reverse-phase power supply	U1
5. Abnormal inverter current level	16.1A: 260 sec.	L8
6. Abnormal radiator fin temperature level	93°C	L4

### 3.7.3 Stopping Operation of Slave Units During Master Unit is in Operation with Multi-Outdoor-Unit System

While the master unit is in operation, this mode is used to set the refrigerant flow rate to a required level using a slave unit in the stopped mode.

In cooling operation: Same as that of normal operation stop.

In heating operation: The system operates with following mode.

Actuator	Operation
Compressor	OFF
Outdoor unit fan	OFF
Four way valve	ON
Main motorized valve (EV1)	0 pls
Subcooling motorized valve (EV2)	0 pls
Hot gas bypass valve (SVP)	OFF
Accumulator oil return valve (SVO)	OFF
Injection valve (SVT 5HP only)	OFF
Ending conditions	Slave units are required to operate.


# 4. Protection Control

## 4.1 High Pressure Protection Control

This high pressure protection control is used to prevent the activation of protection devices due to abnormal increase of high pressure and to protect compressors against the transient increase of high pressure.


**[In cooling operation]**

★ In the case of multi-outdoor-unit system, each outdoor unit performs this control individually in the following sequence.

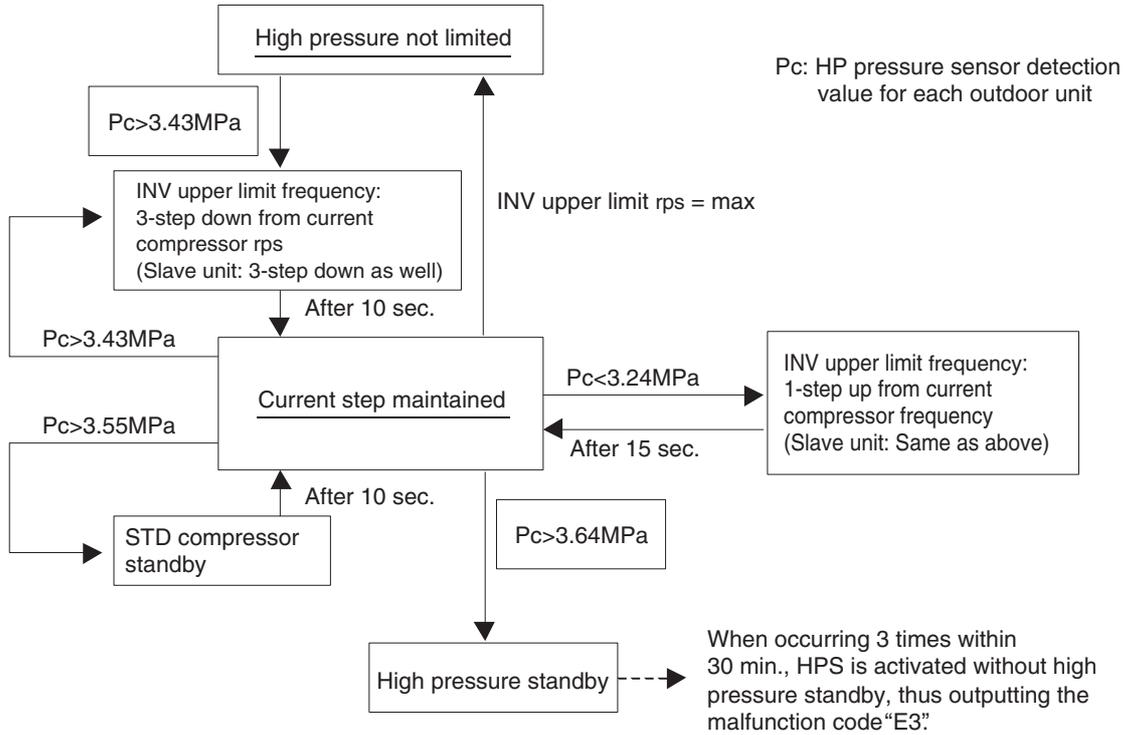

**[In heating operation]**

★ In the case of multi-outdoor-unit system, the entire system performs this control in the following sequence.

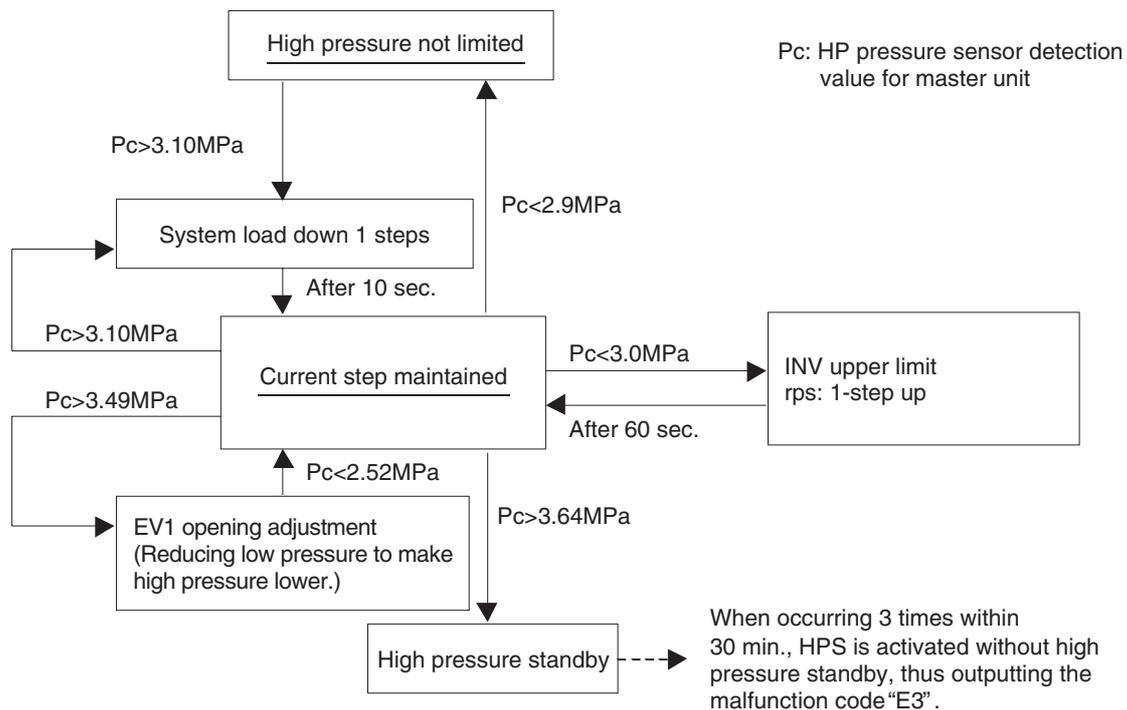


## 4.2 Low Pressure Protection Control

This low pressure protection control is used to protect compressors against the transient decrease of low pressure.


### [In cooling operation]

- ★ In the case of multi-outdoor-unit system, the entire system performs this control in the following sequence.

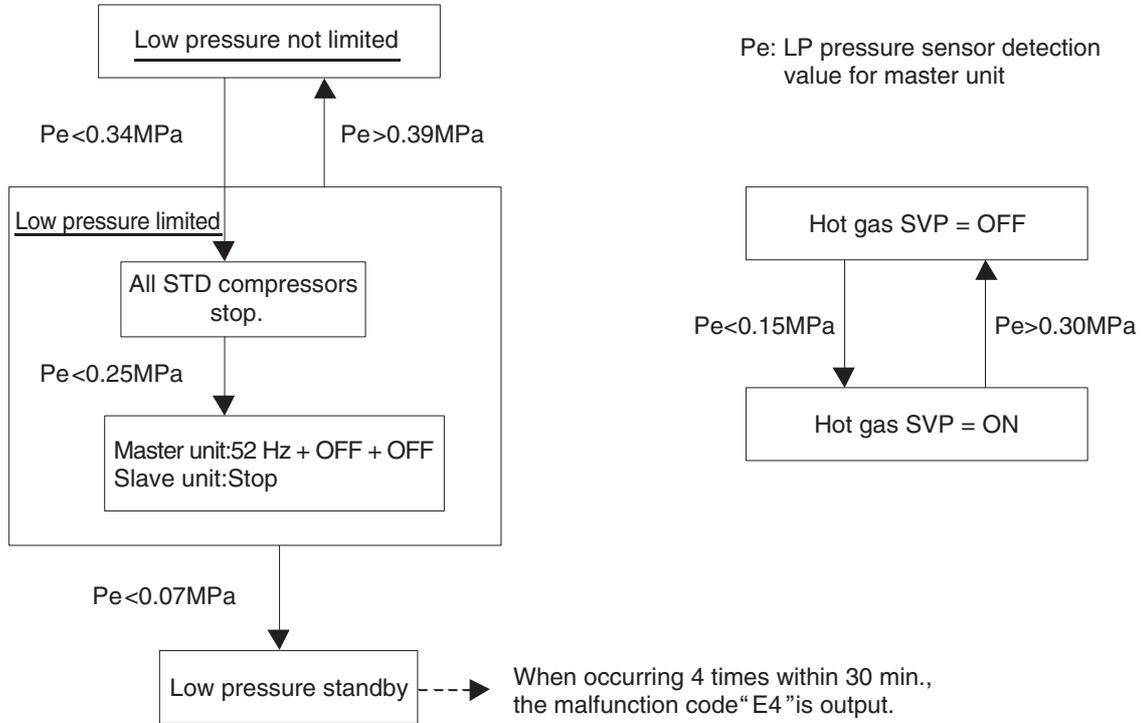

### [In heating operation]

- ★ In the case of multi-outdoor-unit system, each outdoor unit performs this control individually in the following sequence.

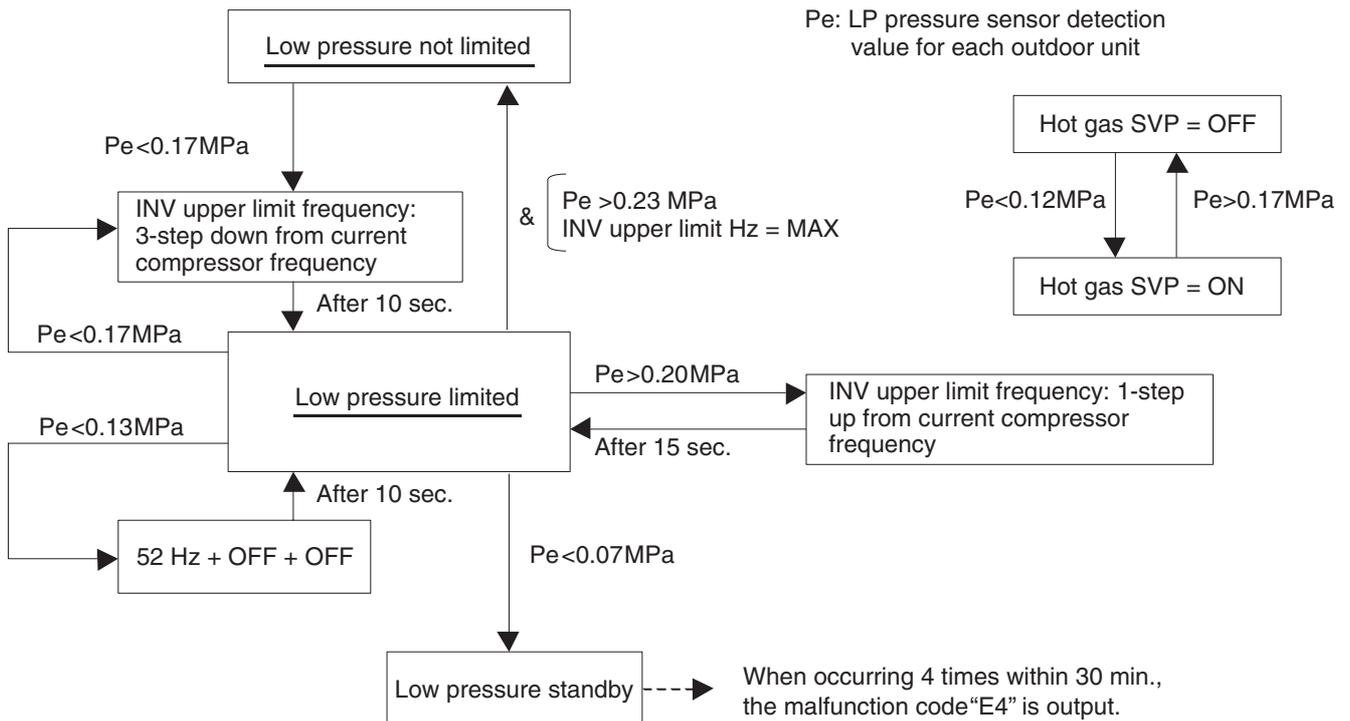


### 4.3 Discharge Pipe Protection Control


This discharge pipe protection control is used to protect the compressor internal temperature against a malfunction or transient increase of discharge pipe temperature.

- ★ Each compressor performs the discharge pipe temperature protection control individually in the following sequence.

**[INV compressor]**

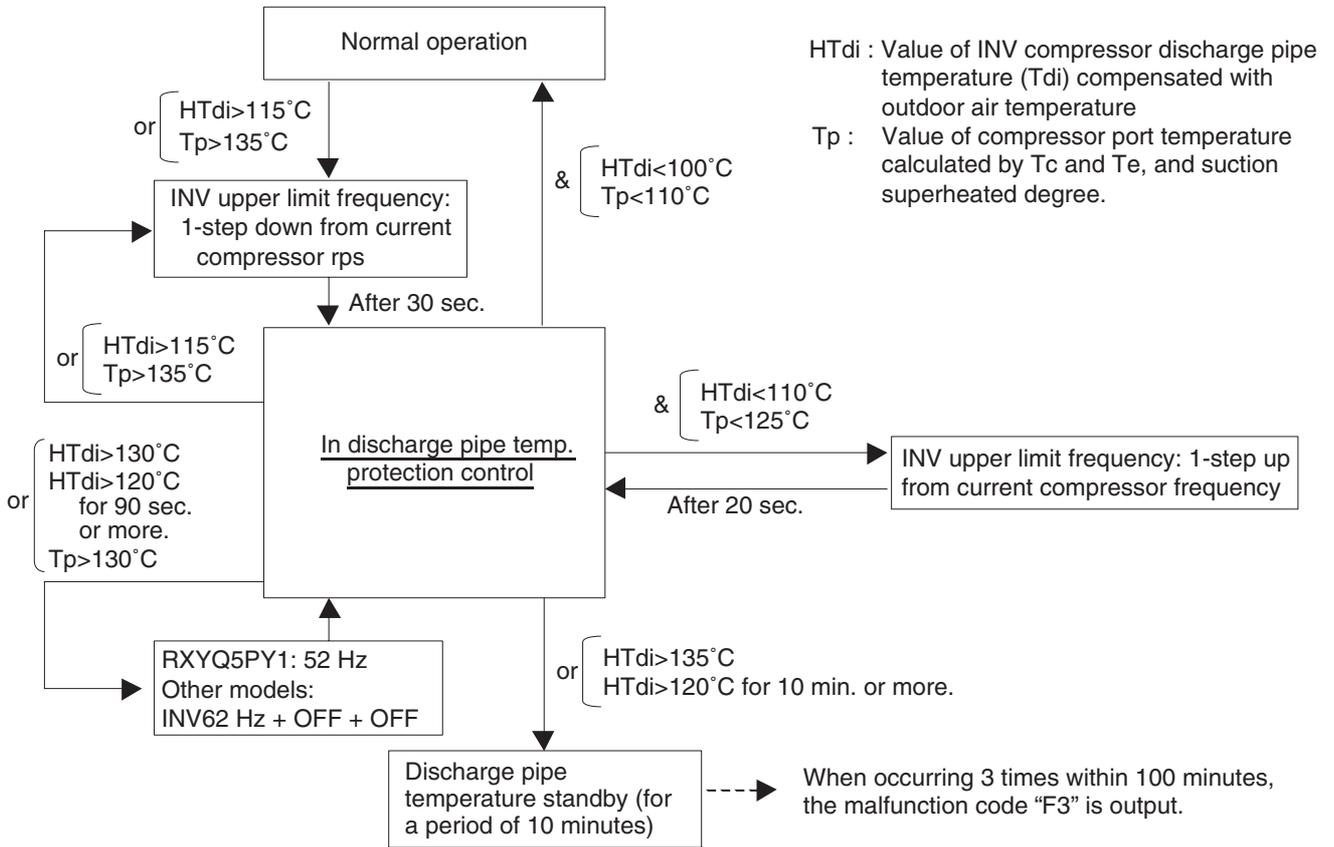

**[STD compressor]**

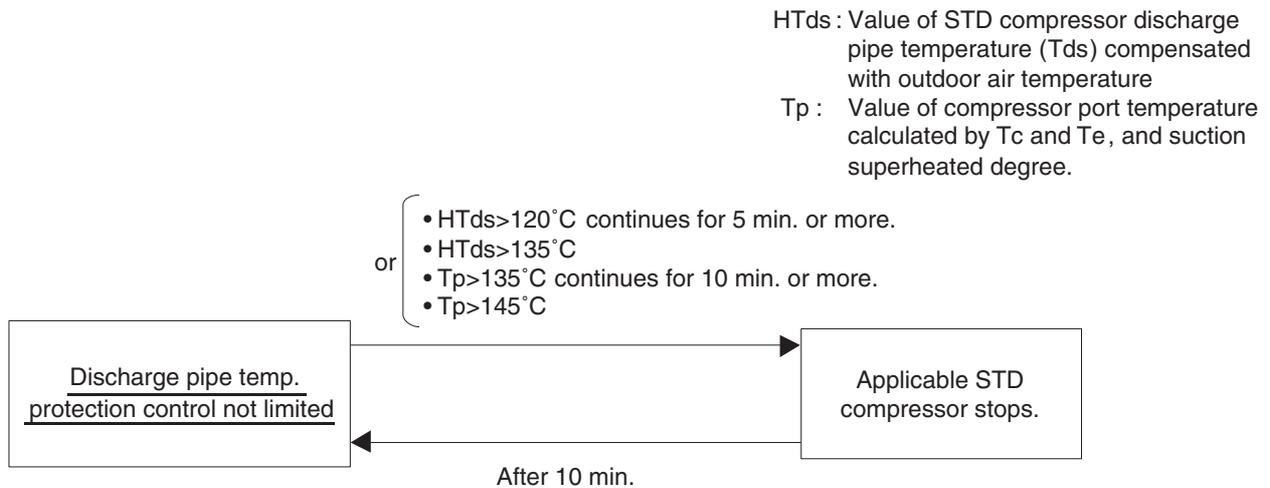


## 4.4 Inverter Protection Control


Inverter current protection control and inverter fin temperature control are performed to prevent tripping due to a malfunction, or transient inverter overcurrent, and fin temperature increase.

- ★ In the case of multi-outdoor-unit system, each INV compressor performs these controls in the following sequence.

### [Inverter overcurrent protection control]

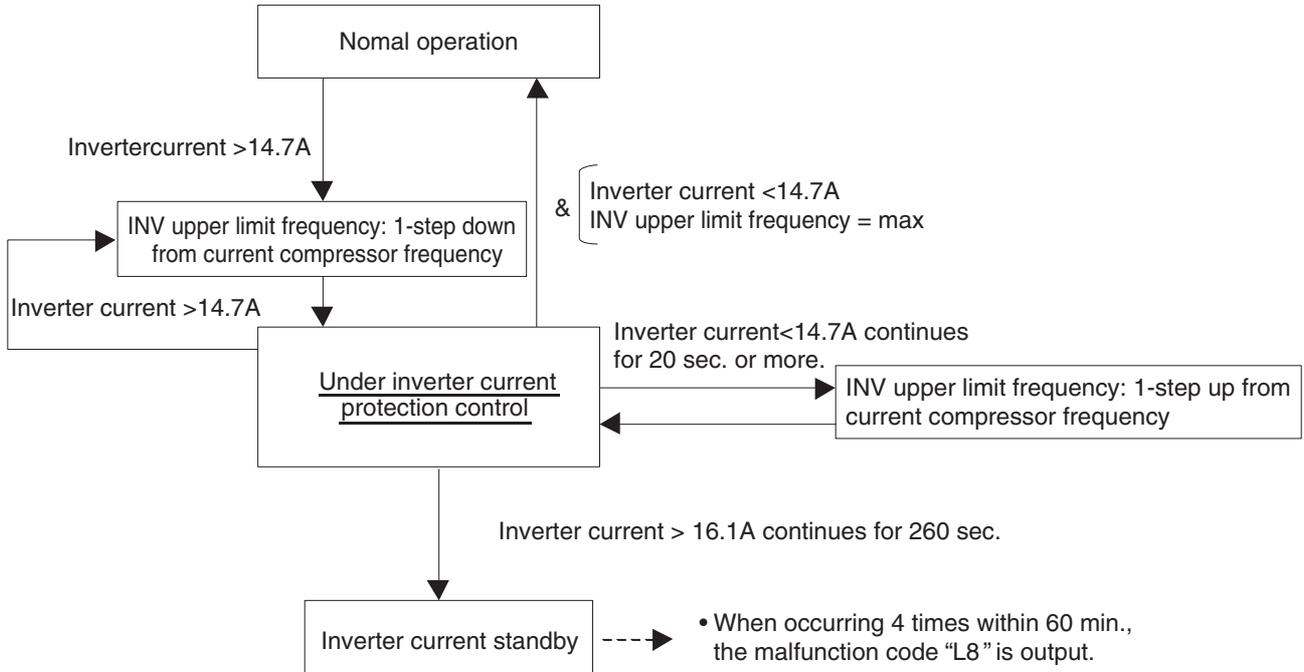


### [Inverter fin temperature control]

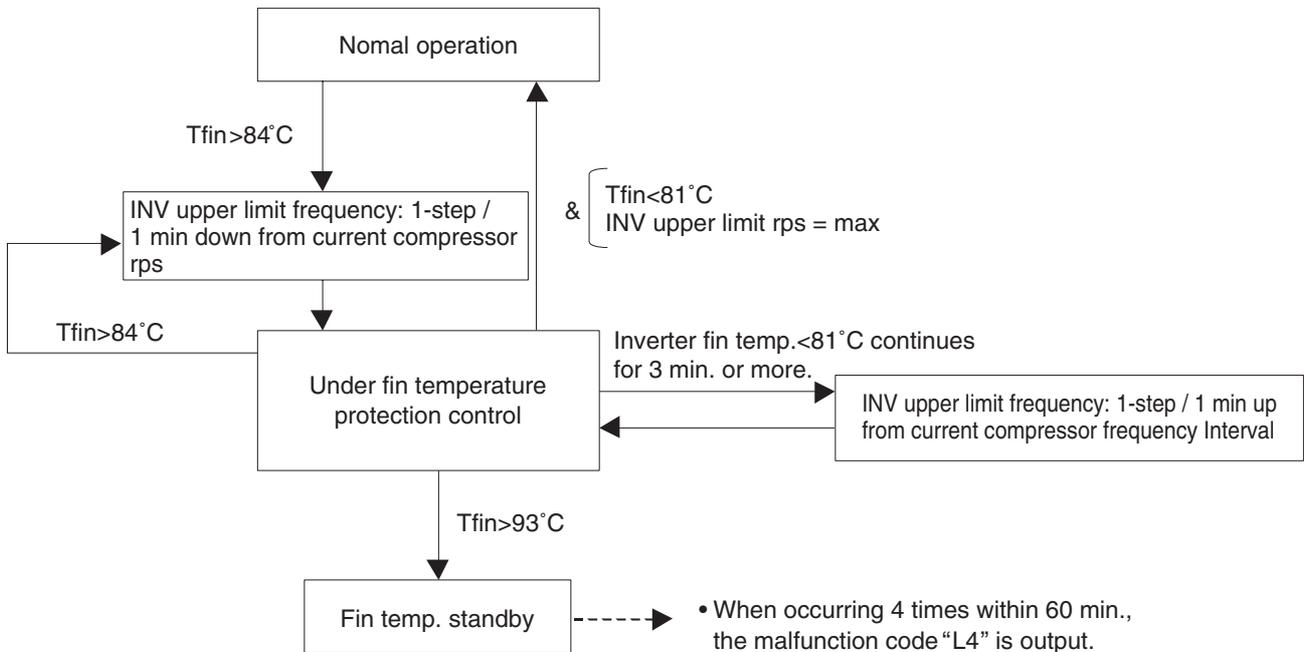

## 4.5 STD Compressor Overload Protection


This control is used to prevent abnormal heating due to overcurrent to the compressor resulting from failures of STD compressor such as locking.

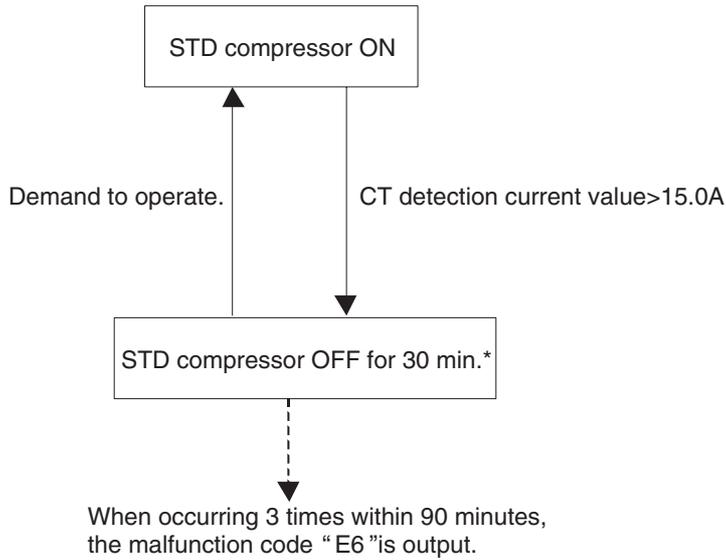

\*If the power supply is reset while in operation prohibition mode, the prohibition timer will continue counting when the power supply is turned ON.

## 4.6 Injection Control (only for RXYQ5P)

For transitional rise in discharge pipe temperature, have the liquid refrigerant flow into the suction side to reduce the discharge pipe temperature for the compressor protection.

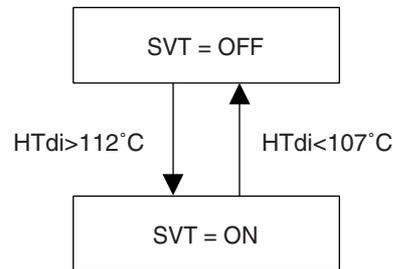

HTdi: Correction value of the discharge pipe temperature on the INV compressor.

## 5. Other Control

### 5.1 Outdoor Unit Rotation

In the case of multi-outdoor-unit system, this outdoor unit rotation is used to prevent the compressor from burning out due to unbalanced oil level between outdoor units.

#### [Details of outdoor unit rotation]

In the case of multi-outdoor-unit system, each outdoor unit is given an operating priority for the control.


Outdoor unit rotation makes it possible to change the operating priority of outdoor units.

Thus, the system becomes free of compressors that stop over an extended period of time at the time of partial loading, preventing unbalanced oil level.


#### [Timing of outdoor unit rotation]

- or
- After oil return operation
  - After defrosting operation
  - At the beginning of the starting control
  - When any of outdoor unit stops for a period of 20 minutes or more (in heating)
  - There are outdoor units that stop operation (in cooling).
  - Low pressure of all outdoor units in operation is less than 0.25 MPa (in cooling).

Example) The following diagram shows outdoor unit rotation in combination of 3 outdoor units.  
(in heating) (in cooling)

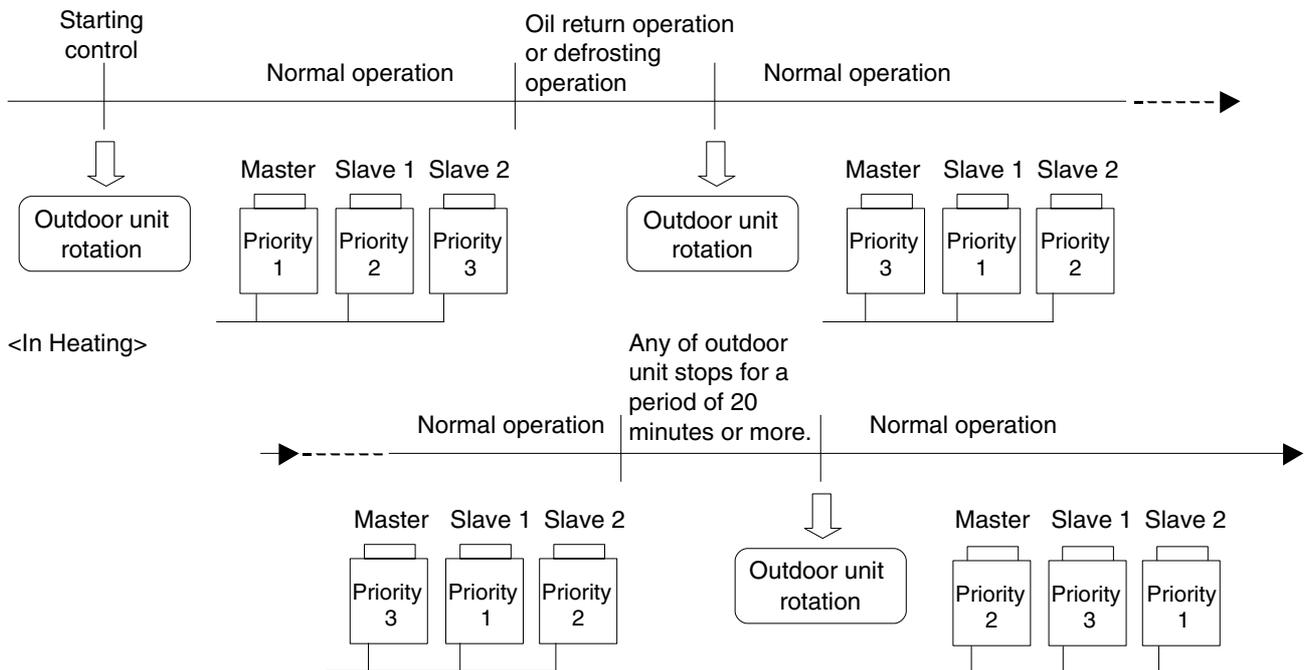

<In Cooling>

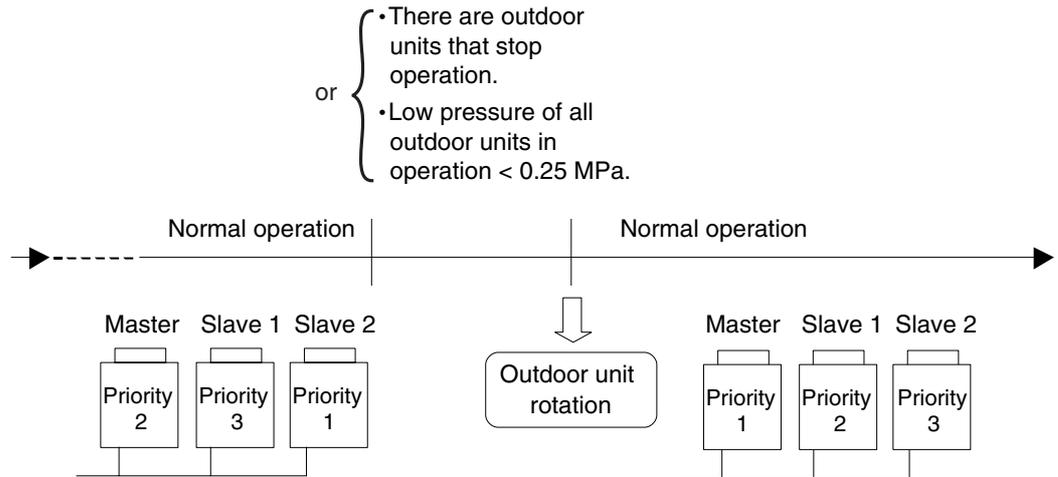

\* “Master unit”, “slave unit 1” and “slave unit 2” in this section are the names for installation. They are determined in installation work, and not changed thereafter. (These names are different from “master unit” and “slave unit” for control.)  
 The outdoor unit connected the control wires (F1 and F2) for the indoor unit should be designated as main unit.  
 Consequently, The LED display on the main PC board for “master unit”, “slave unit 1” and “slave unit 2” do not change. (Refer to the page 127.)

## 5.2 Emergency Operation

If the compressor cannot operate, this control inhibits any applicable compressor or outdoor unit from operating to perform emergency operation only with the operative compressor or outdoor unit.



### Caution

**In order to disable the compressor operation due to a failure or else, be sure to do so in emergency operation mode.**

**NEVER attempt to disconnect power supply wires from magnetic contactors or else. (Doing so will operate compressors in combination that disables oil equalization between the compressors, thus resulting in malfunctions of other normal compressors.)**

### 5.2.1 Restrictions for Emergency Operation

- In the case of system with 1 outdoor unit installed, only when thermostats of indoor units having a capacity of 50% or more of the outdoor unit capacity turn ON, the emergency operation is functional. (If the total capacity of indoor units with thermostat ON is small, the outdoor unit cannot operate.)
- If the emergency operation is set while the outdoor unit is in operation, the outdoor unit stops once after pump-down residual operation (a maximum of 5 minutes elapsed).

### 5.2.2 In the Case of 1-Outdoor-Unit System (RXYQ8P to 18P)


**[Set the system to operation prohibition mode by compressor]**

- In order to set an INV compressor to operation prohibition mode, set No. 42 of Setting mode 2 to "EMERGENCY OPERATION".

LED display (○:ON ●:OFF ◐:Blink)  
H1P— — — —H7P

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 42 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

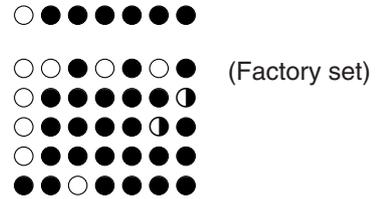


- In order to set STD1 and STD2 compressors to operation prohibition mode, set No. 19 of Setting mode 2 to "STD1, 2 OPERATION PROHIBITION". (RXYQ10P to 18P)

LED display (○:ON ●:OFF ◐:Blink)  
H1P— — — —H7P

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 19 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

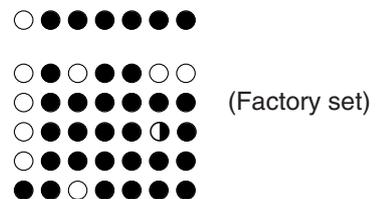


- In order to set the STD 2 compressor to operation prohibition mode, set No. 19 of Setting mode 2 to "STD2 OPERATION PROHIBITION". (RXYQ14P, 16P, 18P)

LED display (○:ON ●:OFF ◐:Blink)  
H1P— — — —H7P

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 19 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) twice.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

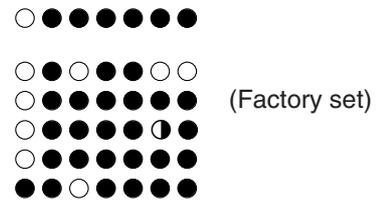

- For RXYQ14P, 16P and 18P, if the INV compressor is set to operation prohibition mode, only a single STD compressor will operate for the convenience of oil equalization.
- For RXYQ14P, 16P and 18P, only the STD1 compressor cannot be put into operation prohibition mode for the convenience of oil equalization.
- For the system with a single outdoor unit (RXYQ8P to 18P), automatic backup operation is not functional.

### 5.2.3 In The Case of Multi-Outdoor-Unit System (RXYQ20P to 54P)

**[Automatic backup operation]**

With multi-outdoor-unit system, if a certain outdoor unit system malfunctions (i.e., the system stops and indoor unit remote controller displays the malfunction), by resetting the system with the indoor unit remote controller, the applicable outdoor unit is inhibited from operating for 8 hours, thus making it possible to perform emergency operation automatically. However, in the event any of the following malfunctions occurs, automatic backup operation can be performed.

Malfunctions under which automatic backup operation can be performed:

- E3, E4, E5, E7
- F3
- H7, H9
- J2, J3, J5, J6, J7, J9, JA, JC
- L3, L4, L5, L8, L9, LC
- U2, UJ




**Note :** In order to forcedly clear the automatic backup operation, reset the power supply with the outdoor unit in the stopped state.

**[Emergency operation with settings in service mode]**

\* "Inhibition of operation" is set with each outdoor unit.

Make the following settings with the master unit. (Setting with the slave unit becomes disabled.)


\* Discriminate the operating status of the master unit / slave units through the following LED display.

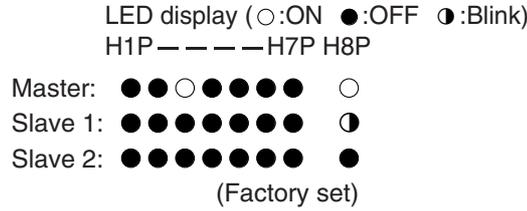

• In order to set the master unit to operation prohibition mode, set No. 38 of Setting mode 2 to "MASTER OPERATION PROHIBITION".

(Procedure)


- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 38 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

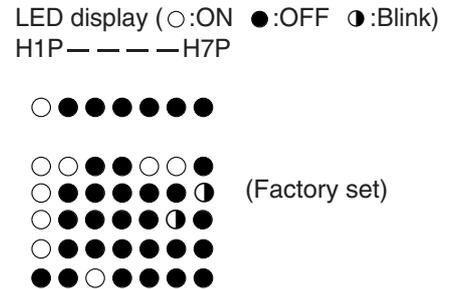

• In order to set the slave unit 1 to operation prohibition mode, set No. 39 of Setting mode 2 to "SLAVE 1 OPERATION PROHIBITION".

(Procedure)


- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 39 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

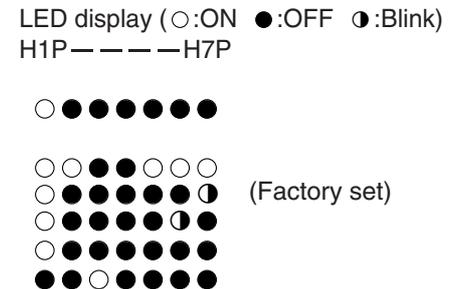

• In order to set the slave unit 2 to operation prohibition mode, set No. 40 of Setting mode 2 to "SLAVE 2 OPERATION PROHIBITION".

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 40 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

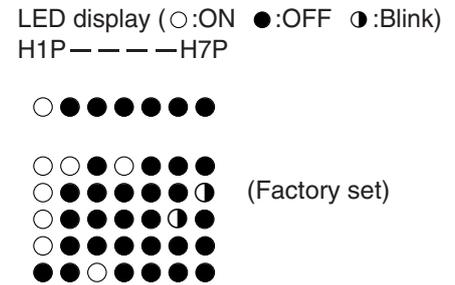

\*

- In the case of multi-outdoor-unit system, "Inhibition of operation" is not set with each compressor individually.
- In the case of multi-outdoor-unit system, when the above "Inhibition of operation" is set, outdoor unit rotation is not functional.

**i Note :** **Reset the power supply during the outdoor unit is stopping to cancel the automatic backup operation forcibly.**

## 5.3 Demand Operation

In order to save the power consumption, the capacity of outdoor unit is saved with control forcibly by using "Demand 1 Setting" or "Demand 2 Setting".

To operate the unit with this mode, additional setting of "Continuous Demand Setting" or external input by external control adapter is required.


Set item	Condition	Content
Demand 1	Mode 1	The compressor operates at approx. 60% or less of rating.
	Mode 2	The compressor operates at approx. 70% or less of rating.
	Mode 3	The compressor operates at approx. 80% or less of rating.
Demand 2	—	The compressor operates at approx. 40% or less of rating.

## 5.4 Heating Operation Prohibition

Heating operation is prohibited above 24°C ambient temperature.




### 6.1.3 When the Float Switch is Tripped During Heating Operation:

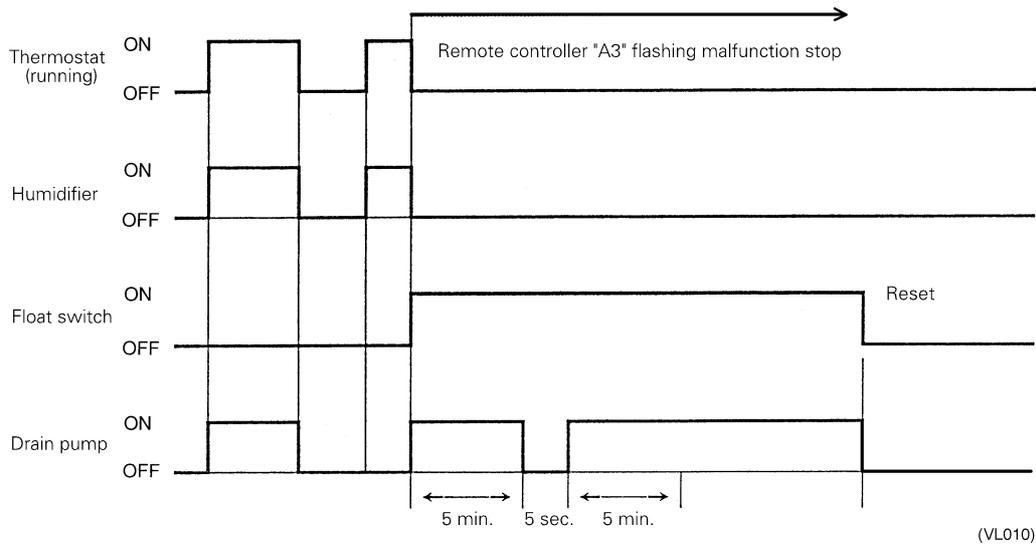

During heating operation, if the float switch is not reset even after the 5 minutes operation, 5 seconds stop, 5 minutes operation cycle ends, operation continues until the switch is reset.


### 6.1.4 When the Float Switch is Tripped and “AF” is Displayed on the Remote Controller:

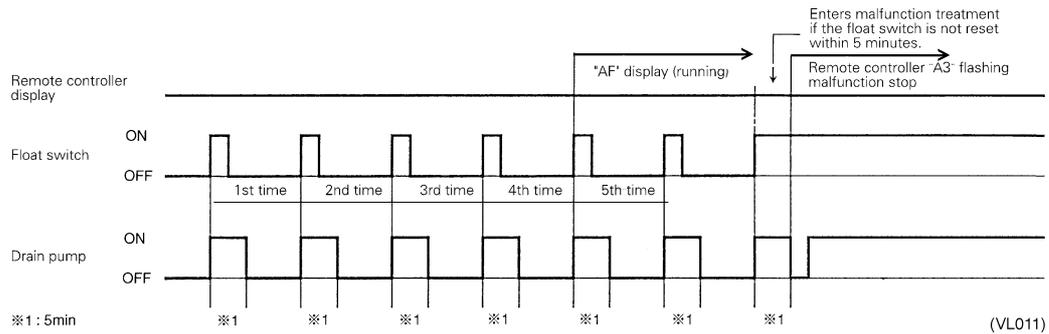

**Note:** If the float switch is tripped five times in succession, a drain malfunction is determined to have occurred. “AF” is then displayed as operation continues.

## 6.2 Louver Control for Preventing Ceiling Dirt

We have added a control feature that allows you to select the range of in which air direction can be adjusted in order to prevent the ceiling surrounding the air discharge outlet of ceiling mounted cassette type units from being soiled. (This feature is available on double flow, multi-flow and corner types.)

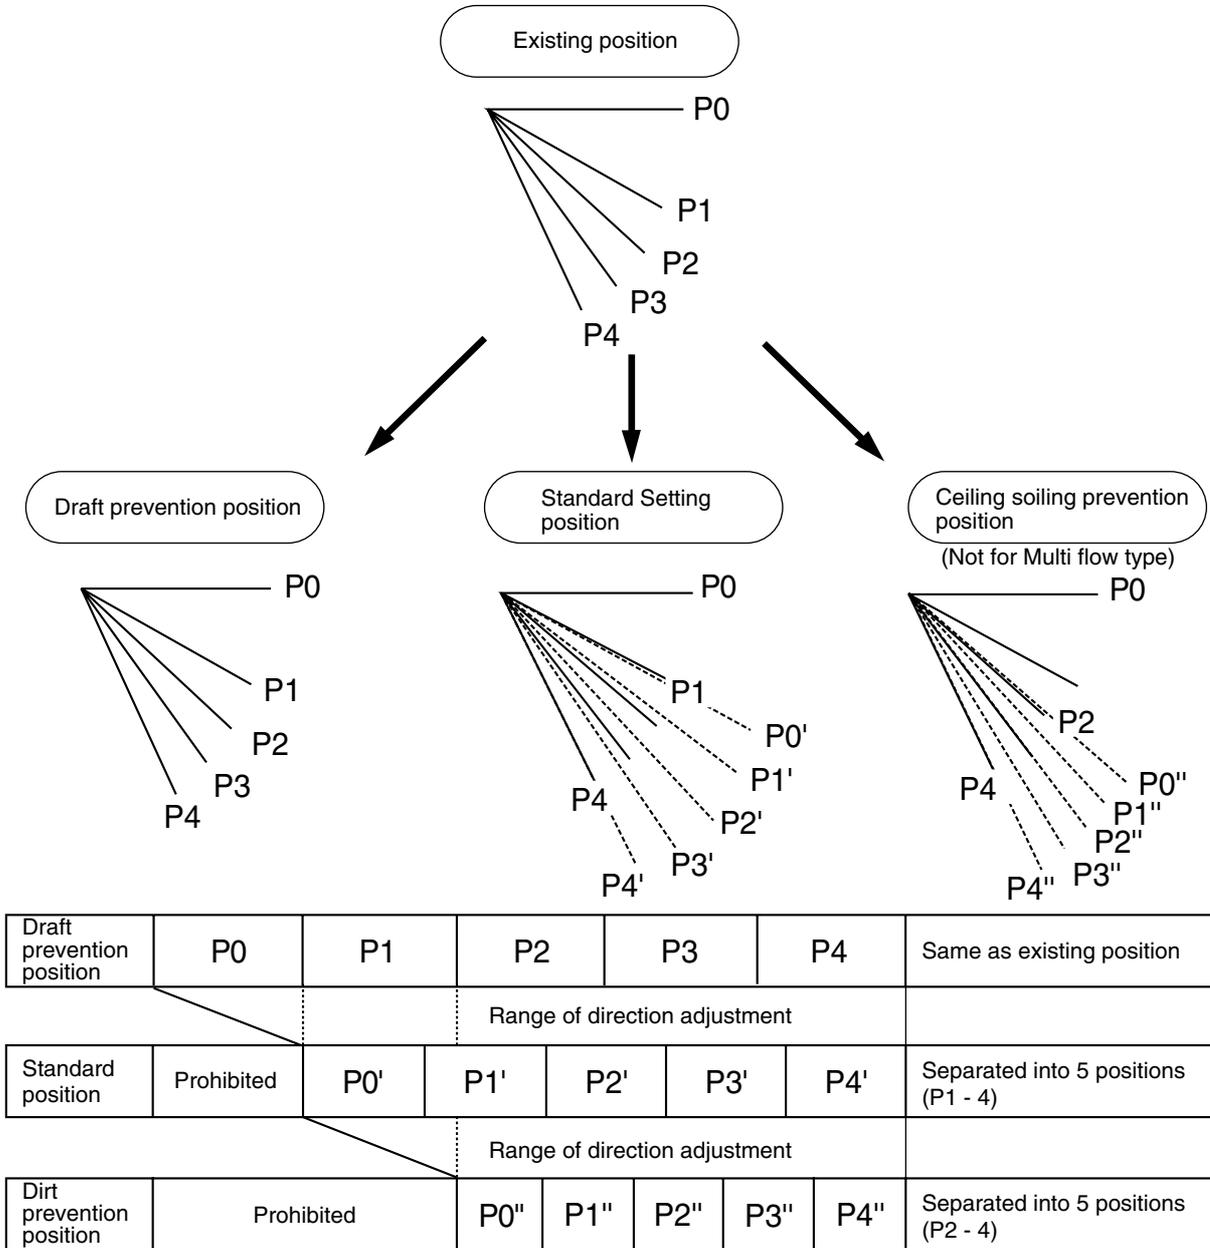

The factory set position is standard position.


(VL012)

## 6.3 Thermostat Sensor in Remote Controller

Temperature is controlled by both the thermostat sensor in remote controller and air suction thermostat in the indoor unit. (This is however limited to when the field setting for the thermostat sensor in remote controller is set to "Use.")

### Cooling

If there is a significant difference in the preset temperature and the suction temperature, fine adjustment control is carried out using a body thermostat sensor, or using the sensor in the remote controller near the position of the user when the suction temperature is near the preset temperature.

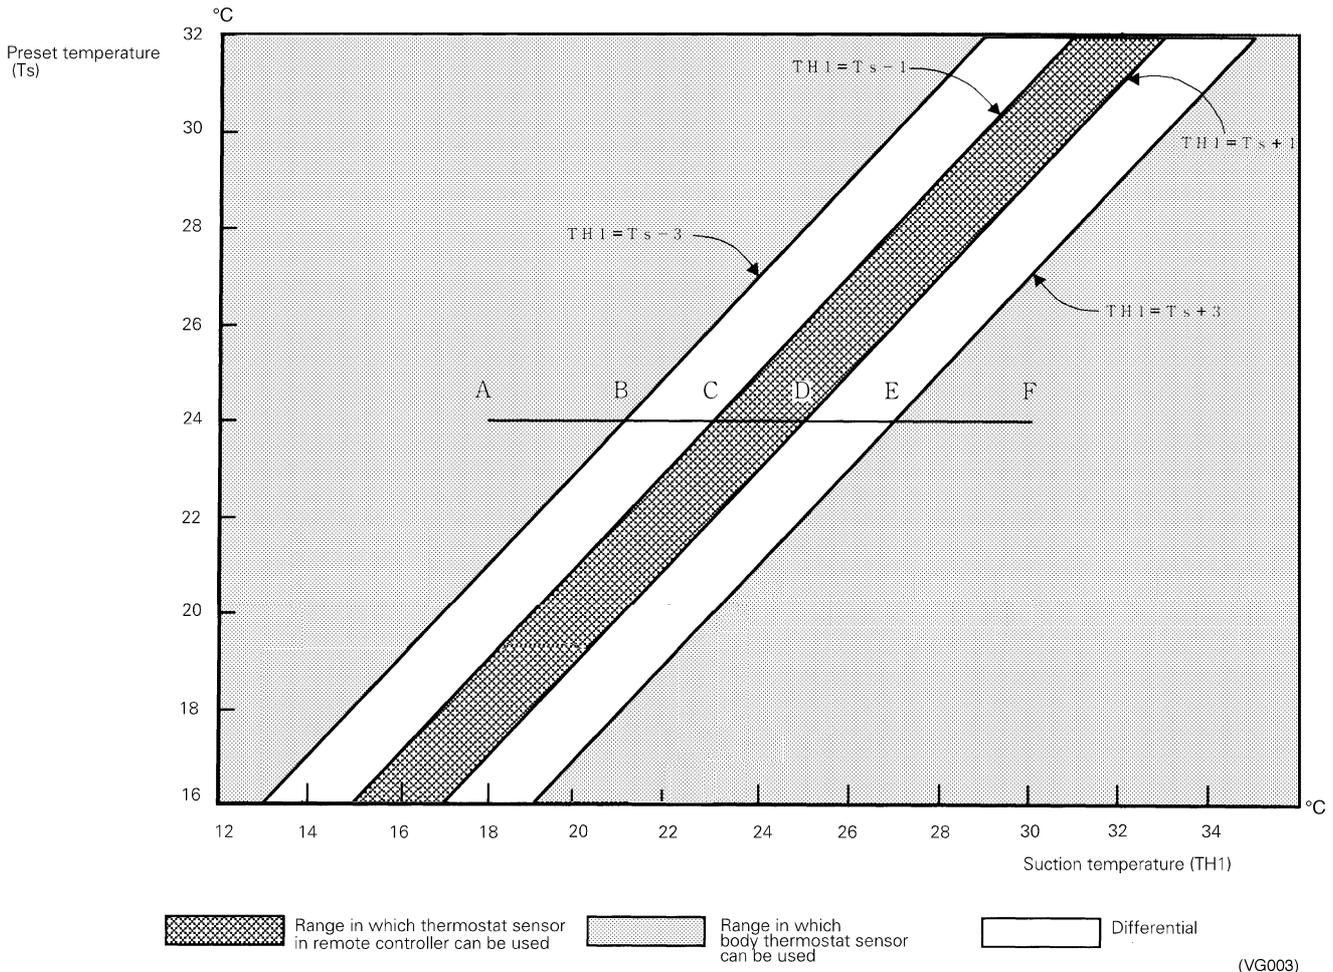

■ **Ex: When cooling**

**Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 30°C (A → F):**

(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 23°C (A → C).

Remote controller thermostat sensor is used for temperatures from 23°C to 27°C (C → E).

Body thermostat sensor is used for temperatures from 27°C to 30°C (E → F).

**And, assuming suction temperature has changed from 30°C to 18°C (F → A):**


Body thermostat sensor is used for temperatures from 30°C to 25°C (F → D).

Remote controller thermostat sensor is used for temperatures from 25°C to 21°C (D → B).

Body thermostat sensor is used for temperatures from 21°C to 18°C (B → A).

## Heating

When heating, the hot air rises to the top of the room, resulting in the temperature being lower near the floor where the occupants are. When controlling by body thermostat sensor only, the unit may therefore be turned off by the thermostat before the lower part of the room reaches the preset temperature. The temperature can be controlled so the lower part of the room where the occupants are doesn't become cold by widening the range in which thermostat sensor in remote controller can be used so that suction temperature is higher than the preset temperature.

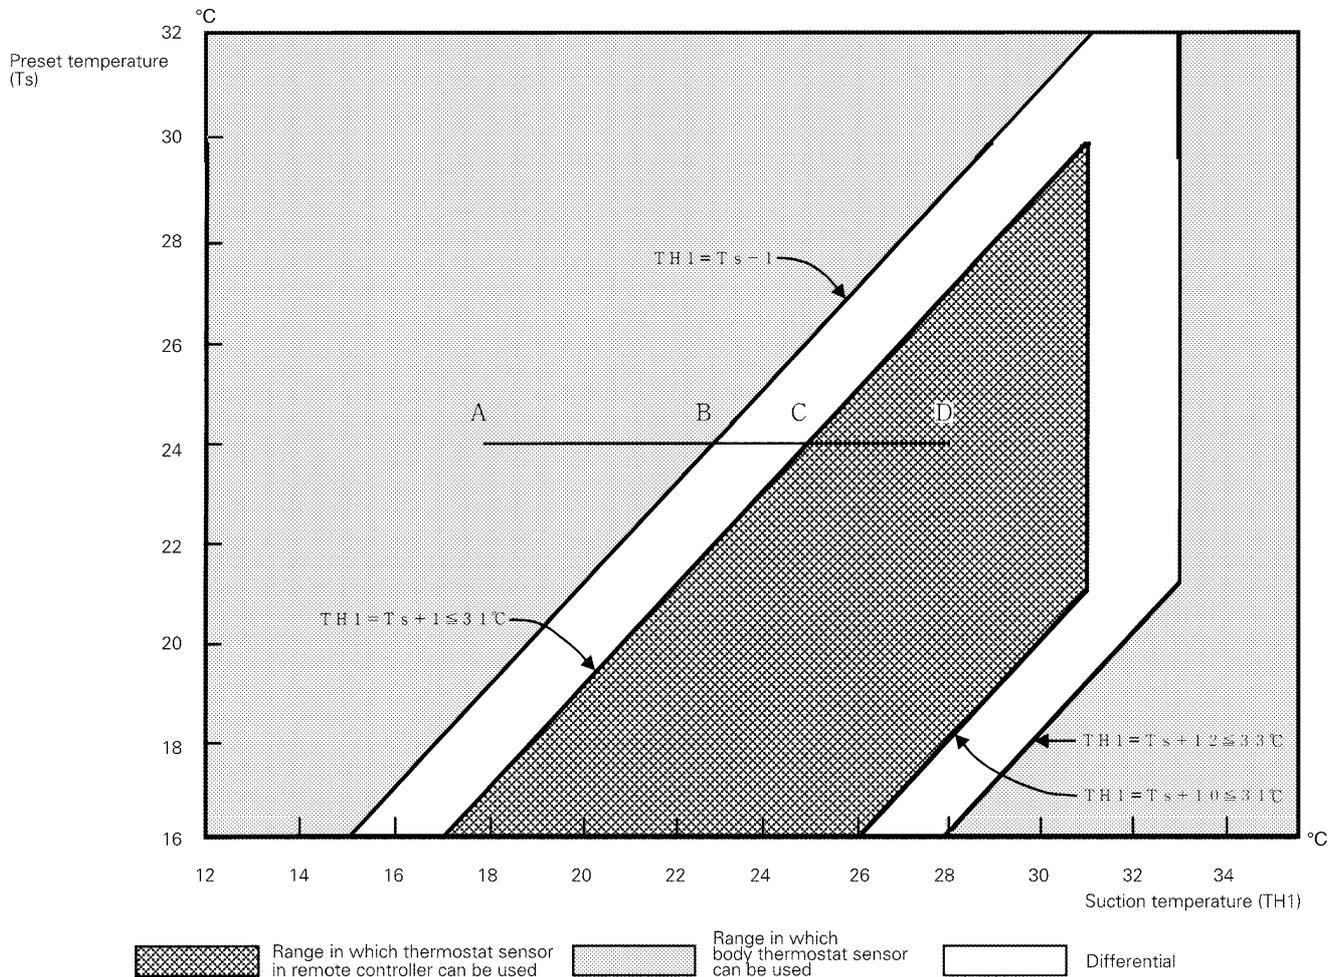

(V2769)

■ **Ex: When heating Assuming the preset temperature in the figure above is 24°C, and the suction temperature has changed from 18°C to 28°C (A → D):**

(This example also assumes there are several other air conditioners, the VRV system is off, and that temperature changes even when the thermostat sensor is off.)

Body thermostat sensor is used for temperatures from 18°C to 25°C (A → C).

Remote controller thermostat sensor is used for temperatures from 25°C to 28°C (C → D).


**And, assuming suction temperature has changed from 28°C to 18°C (D → A):**

Remote controller thermostat sensor is used for temperatures from 28°C to 23°C (D → B).

Body thermostat sensor is used for temperatures from 23°C to 18°C (B → A).

## 6.4 Thermostat Control While in Normal Operation

VRV multi systems are set at factory to thermostat control mode using the remote controller. While in normal thermostat differential control mode (i.e., factory set mode), the thermostat turns OFF when the system reaches a temperature of  $-1^{\circ}\text{C}$  from the set temperature while in cooling operation or of  $+1^{\circ}\text{C}$  from that while in heating operation.

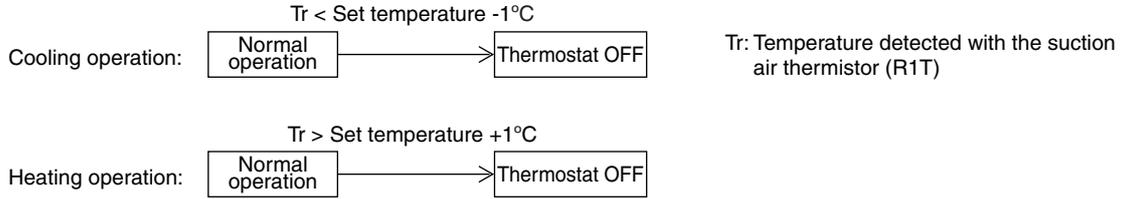


While in a single remote controller group control, the body thermostat is only used for this control. Furthermore, while in heating operation, cassette-mounted indoor units conduct the thermostat control by a value compensated by  $-2^{\circ}\text{C}$  for the value detected with the body thermostat. (Through field settings, the thermostat differential setting can be changed from  $1^{\circ}\text{C}$  to  $0.5^{\circ}\text{C}$ . For details on the changing procedure, refer to information on page onward.)

## 6.5 Thermostat Control in Dry Operation

While in dry operation, the thermostat control is conducted according to a suction temperature at the time of starting the dry operation.

Assuming that the suction air temperature at the time of starting the dry operation is  $\text{Tr}_0$  and the suction air temperature in operation is  $\text{Tr}$ ,

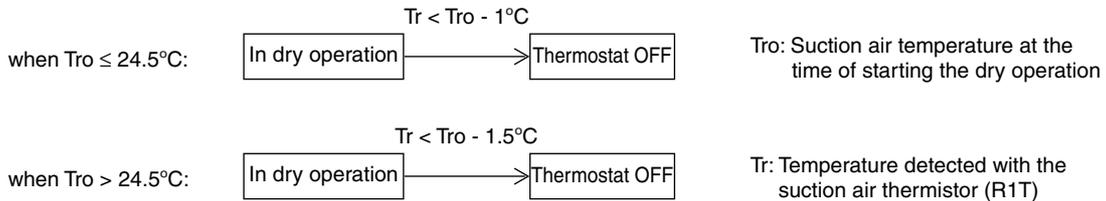

Furthermore, while in dry operation mode, fans operate at L flow rate, stops for a period of six minutes while the thermostat is OFF, and then return to operation at L flow rate. (This control is used to prevent a rise in indoor temperature while in thermostat OFF mode.)

## 6.6 Electronic Expansion Valve Control

- Electronic expansion Valve Control

In cooling, to maximize the capacity of indoor unit heat exchanger (evaporator), operate the electronic expansion valve under PI control so that the evaporator outlet superheated degree (SH) will become constant.

In heating, to maximize the capacity of indoor unit heat exchanger (condenser), operate the electronic expansion valve under PI control so that the evaporator outlet superheated degree (Condenser outlet subcooled degree) will become constant.

Cooling  $SH=TH_2-TH_1$   
 (Heating  $SC=TC-TH_1$ )

SH : Evaporator outlet superheated degree  
 TH<sub>1</sub>: Temperature (°C) detected with the liquid thermistor  
 TH<sub>2</sub>: Temperature (°C) detected with the gas thermistor  
 SC : Condenser outlet subcooled degree  
 TC : High pressure equivalent saturated temperature


Furthermore, the default value of the optimal evaporator outlet superheated degree (condenser outlet subcooled degree) is 5 deg. However, this default value varies with the operating performance.

## 6.7 Hot Start Control (In Heating Operation Only)

At startup with thermostat ON or after the completion of defrosting in heating operation, the indoor unit fan is controlled to prevent cold air from blasting out and ensure startup capacity.

**[Detail of operation]**

When either the **start condition 1** or the **start condition 2** is established, the operations shown below will be conducted.

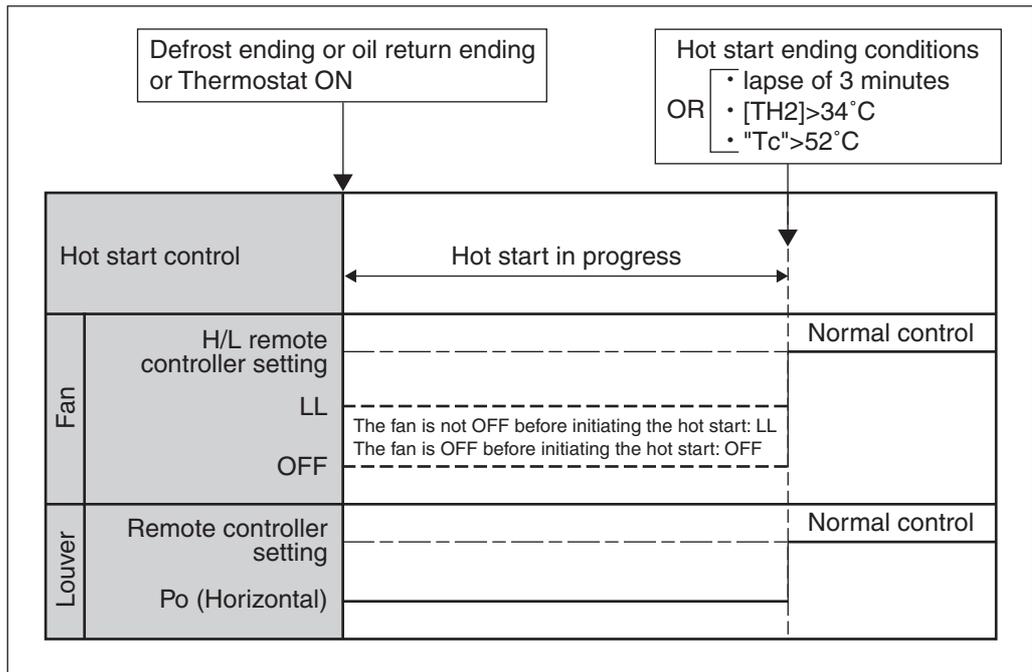

TH<sub>2</sub>: Temperature (°C) detected with the gas thermistor  
 TC : High pressure equivalent saturated temperature

## 6.8 Freeze Prevention


### Freeze Prevention by Off Cycle (Indoor Unit)

When the temperature detected by liquid pipe temperature thermistor (R2T) of the indoor unit heat exchanger drops too low, the unit enters freeze prevention operation in accordance with the following conditions, and is also set in accordance with the conditions given below.

Conditions for starting freeze prevention: Temperature is  $-1^{\circ}\text{C}$  or less for total of 40 min., or temperature is  $-5^{\circ}\text{C}$  or less for total of 10 min.

Conditions for stopping freeze prevention: Temperature is  $+7^{\circ}\text{C}$  or more for 10 min. continuously

Ex: Case where temperature is  $-5^{\circ}\text{C}$  or less for total of 10 min.

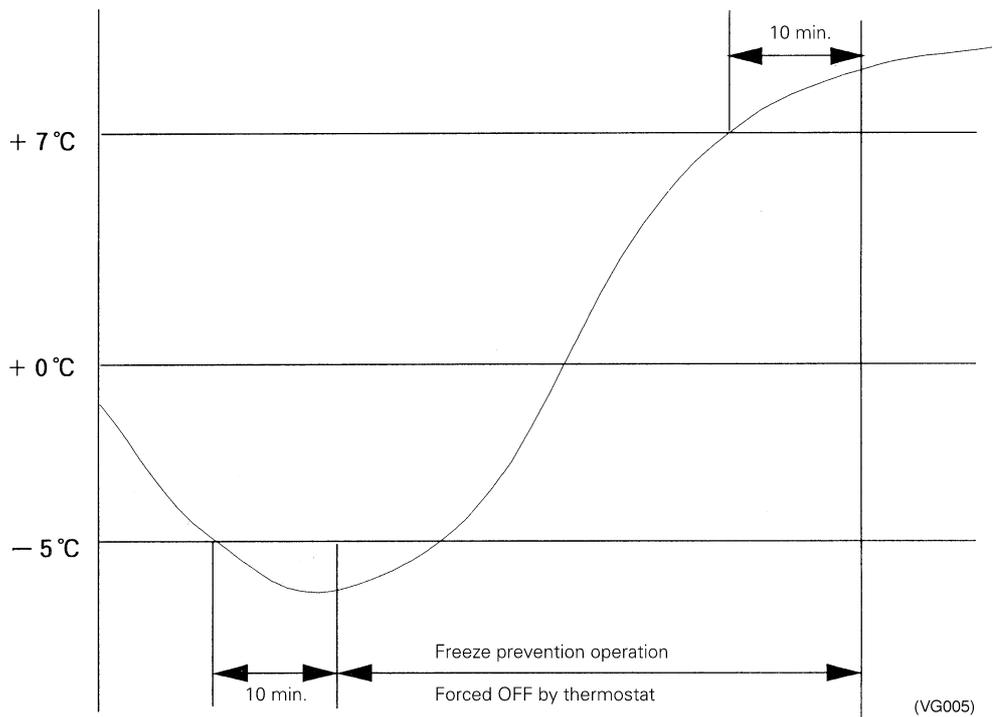


## 6.9 Heater Control

The heater control is conducted in the following manner.

### [Normal control]


While in heating operation, the heater control (ON/OFF) is conducted as shown on the right.

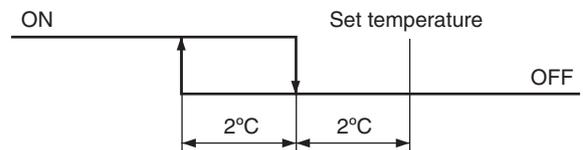


### [Overload control]

When the system is overloaded in heating operation, the heater will be turned OFF in the following two manners.

- (1) The heater control (ON/OFF) is conducted through the liquid pipe temperature (R2T) of the indoor unit.

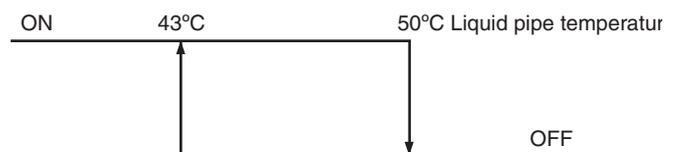

(2) The heater control (ON/OFF) is conducted by converting the heater temperature into the condensing pressure equivalent saturated temperature ( $T_c$ ) according to the temperature detection through the high pressure sensor (SINPH) of the outdoor unit.

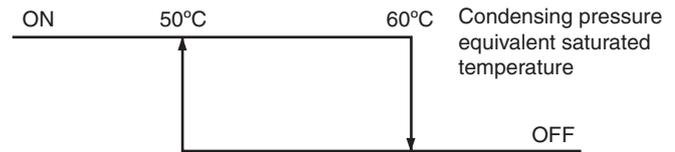

#### [Fan residual operation]

While the heater turns OFF, in order to prevent the activation of the thermal protector, the fan conducts residual operation for a given period of time after the heater turns OFF. (This operation is conducted regardless of with or without heater equipped.)

Residual operation time = 100 seconds on ceiling suspended type or 60 seconds on other types

## 6.10 List of Swing Flap Operations

Swing flaps operate as shown in table below.

			Fan	Flap		
				FXFQ	FXCQ FXHQ FXKQ	FXAQ
Heating	Hot start from defrosting operation	Swing	OFF	Horizontal	Horizontal	Horizontal
		Wind direction set	OFF	Horizontal	Horizontal	Horizontal
	Defrosting operation	Swing	OFF	Horizontal	Horizontal	Horizontal
		Wind direction set	OFF	Horizontal	Horizontal	Horizontal
	Thermostat OFF	Swing	LL	Horizontal	Horizontal	Horizontal
		Wind direction set	LL	Horizontal	Horizontal	Horizontal
	Hot start from thermostat OFF mode (for prevention of cold air)	Swing	LL	Horizontal	Horizontal	Horizontal
		Wind direction set	LL	Horizontal	Horizontal	Horizontal
Stop	Swing	OFF	Horizontal	Horizontal	Totally closed	
	Wind direction set	OFF	Horizontal	Horizontal	Totally closed	
Cooling	Thermostat ON in dry operation using micro computer	Swing	L* <sup>1</sup>	Swing	Swing	Swing
		Wind direction set	L* <sup>1</sup>	Set	Set	Set
	Thermostat OFF in dry operation using micro computer	Swing	OFF or L	Swing	Swing	Swing
		Wind direction set		Set	Set	Set
	Thermostat OFF in cooling	Swing	Set	Swing	Swing	Swing
		Wind direction set	Set	Set	Set	Set
	Stop	Swing	OFF	Horizontal	Horizontal	Totally closed
		Wind direction set	OFF	Set	Horizontal	Totally closed
Micro computer control (including cooling operation)	Swing	L	Swing	Swing	Swing	
	Wind direction set	L	Set	Set	Set	


\*1. L or LL only on FXFQ models

# 6.11 Control of Outdoor Air Processing Unit (Unique Control for Outdoor Air Processing Unit)

## 6.11.1 Selection of Operation Mode (by suction air thermostat)

**Objective** To select cooling, heating, or fan operation mode according to the suction air (outdoor air) temperature.


**Details** [Outdoor air processing unit]

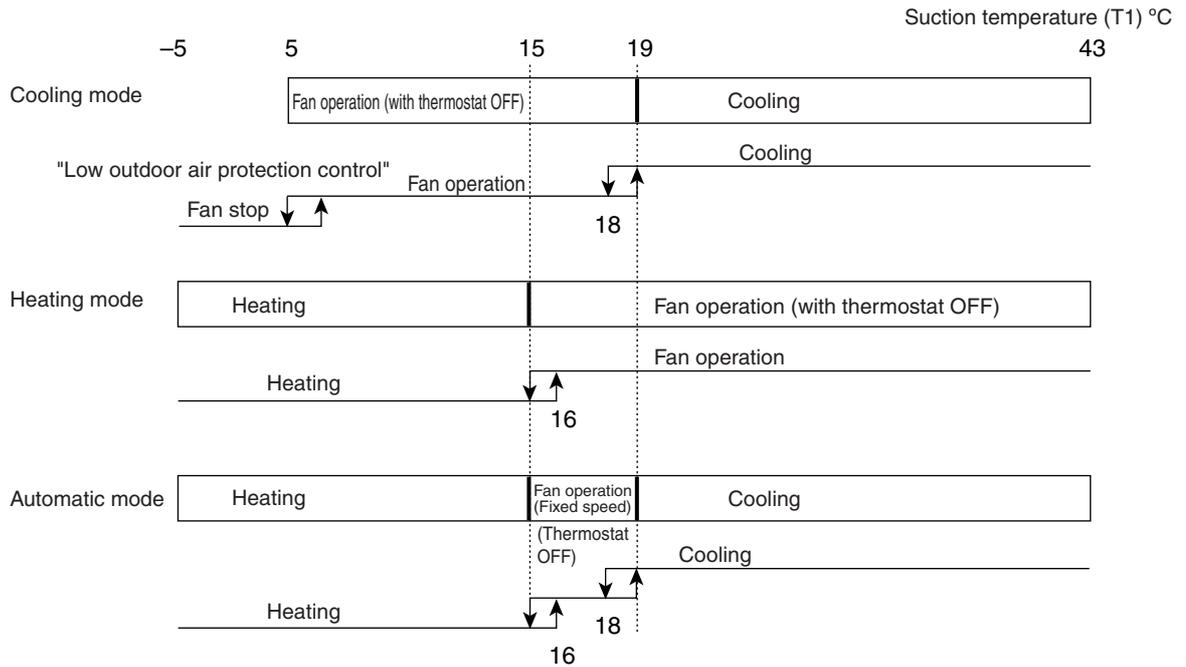


### 6.11.2 Discharge Air Temperature Control

Used to control the EV (electronic expansion valve) opening and thermostat ON/OFF so as to keep the discharge air temperature at the set temperature.


**(1) Cooling operations**

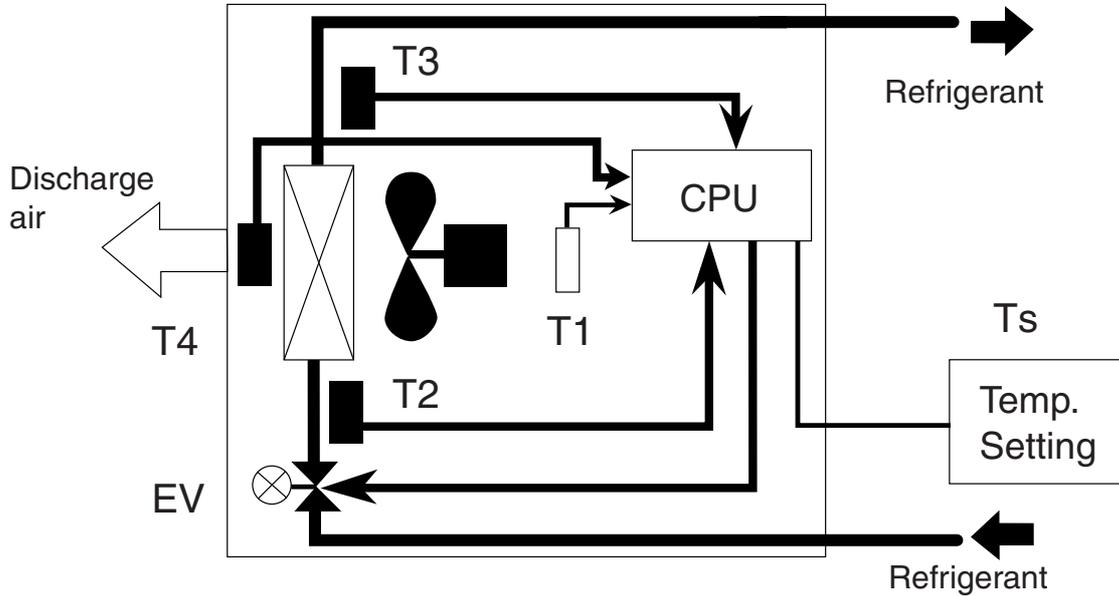


- T1: Temperature detected by suction air thermistor Th1
- T2: Temperature detected by liquid pipe temp. thermistor Th2
- T3: Temperature detected by gas pipe temp. thermistor Th3
- T4: Temperature detected by discharge air thermistor Th4
- EV: Electronic expansion valve opening

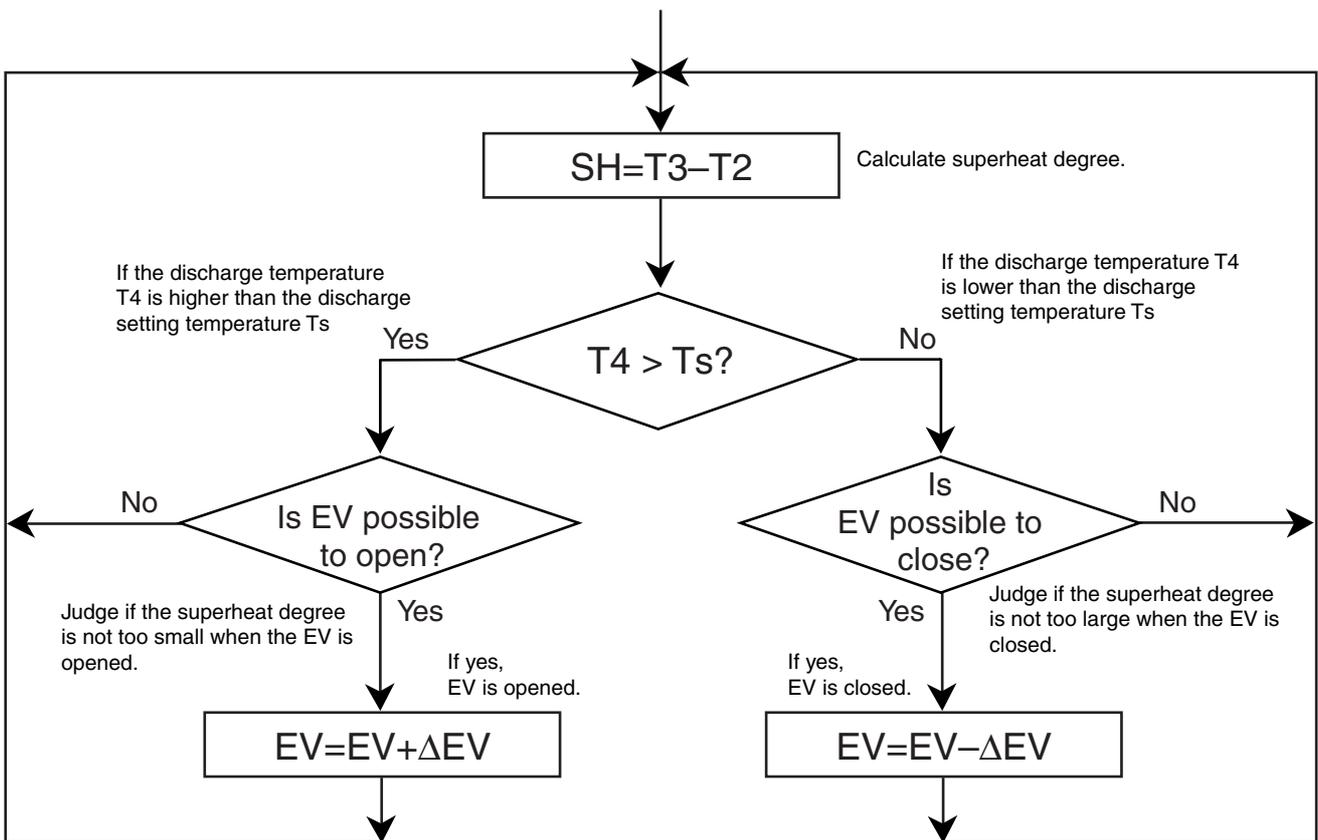

(2) Heating operations

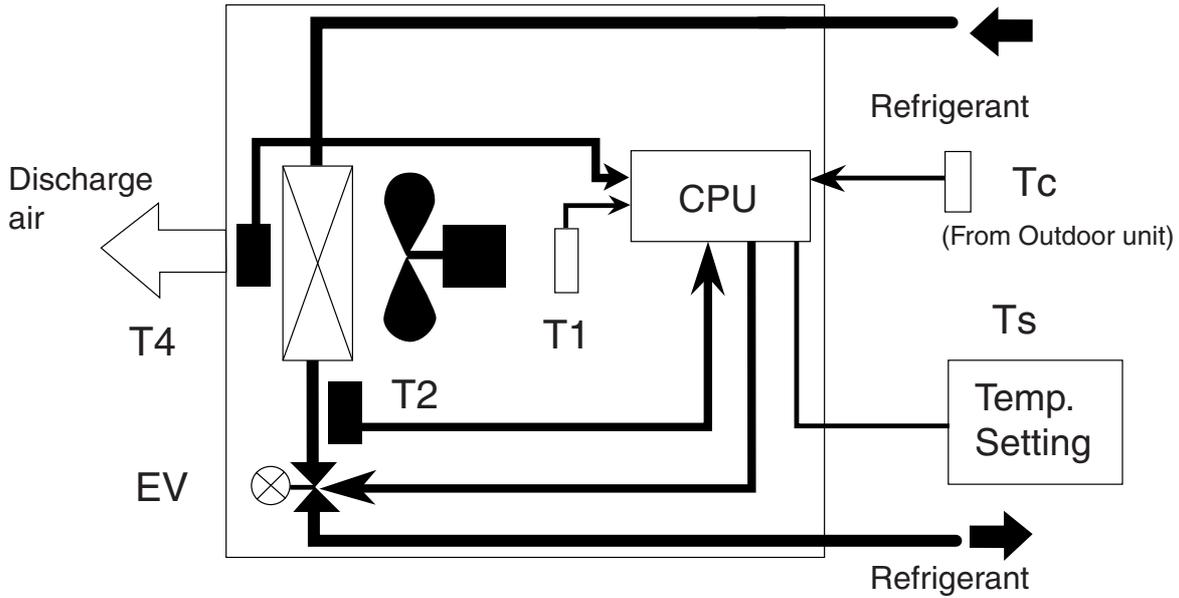

- T1: Temperature detected by suction air thermistor Th1
- T2: Temperature detected by liquid pipe temp. thermistor Th2
- T3: Temperature detected by gas pipe temp. thermistor Th3
- T4: Temperature detected by discharge air thermistor Th4
- Tc : Outdoor unit condensing temperature
- EV: Electronic expansion valve opening

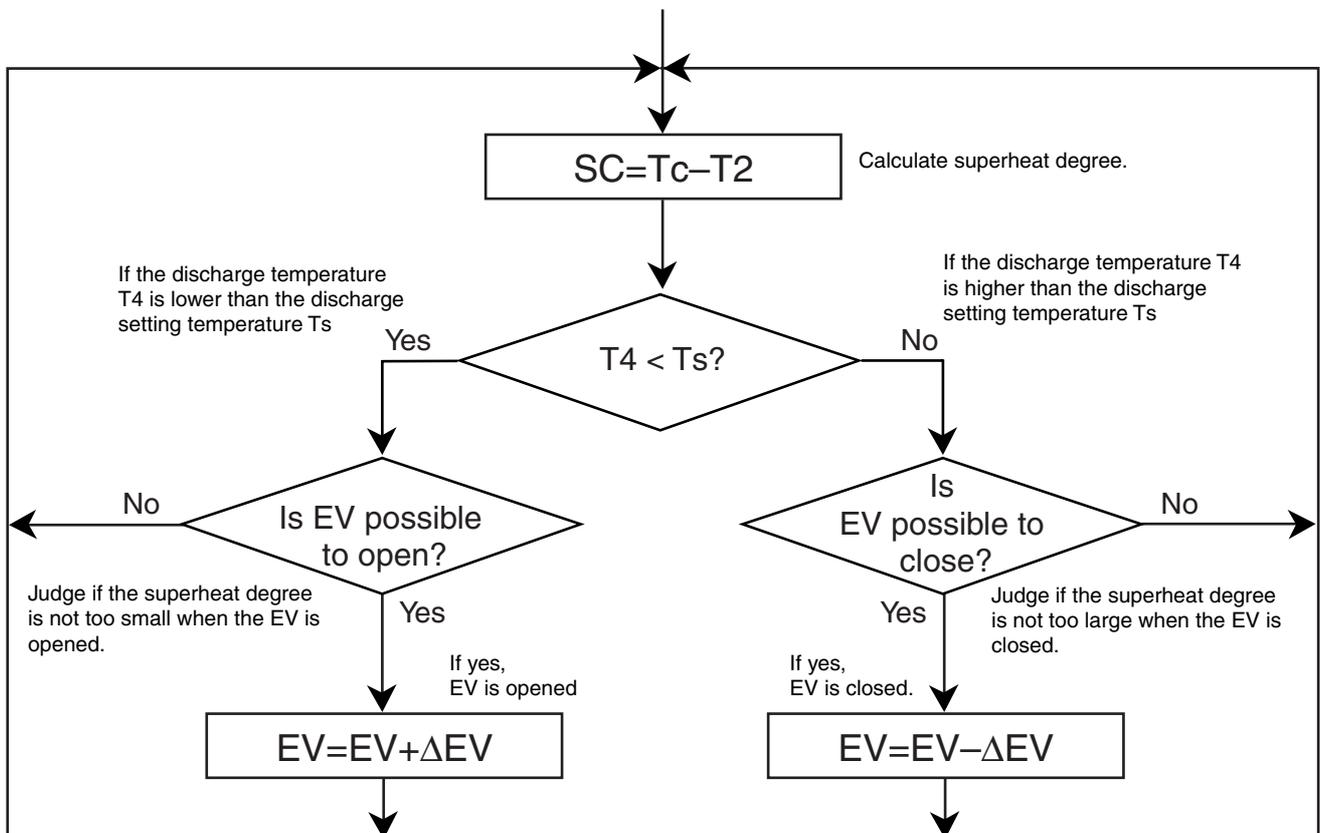

**(3) Thermostat OFF by discharge air temperature****<Cooling>**

Target discharge air temp.  $T_s$  – Discharge air temp.  $T_4$

>5 degree continue for 5 minutes.

→Thermostat stops for 1 minute. →Thermostat ON

**<Heating>**

& { Discharge air temp.  $T_4$  – Target discharge air temp.  $T_s$  >5 degree } continue for 5  
 { EV opening is low limit } minutes

→Thermostat stops for 1 minute. →Thermostat ON

**6.11.3 Low Outdoor Air Temperature Protection Control****Objective**

In cooling (or fan operation) or heating, if outdoor air is low in temperature, stop the fan forcibly.

**Details****[Cooling and fan operation]**

Turn OFF the fan for a period of 60 minutes at a suction temperature of 5°C or lower.

In order to monitor the outdoor air temperature, however, turn ON the fan for a period of one minute and turn OFF the fan again at a temperature of 5°C or lower after the said timer completes the operative period.

Reset the 60-minute timer when the fan stops running.

**[Heating]**

Turn OFF the fan for a period of 60 minutes at a suction temperature of –5°C or lower.

In order to monitor the outdoor air temperature, however, turn ON the fan for a period of one minute and turn OFF the fan again at a temperature of –5°C or lower after the said timer completes the operative period.

Reset the 60-minute timer when the fan stops running.

\* The thermostat will not turn ON in one minute due to the temperature while the fan stops.

- This control shall be disabled at test run both in cooling and heating. (The test run shall be conducted first.)



# Part 5


# Test Operation

- 1. Test Operation ..... 144
  - 1.1 Installation Process ..... 144
  - 1.2 Procedure and Outline ..... 145
  - 1.3 Operation When Power is Turned On ..... 159
- 2. Outdoor Unit PC Board Layout ..... 160
- 3. Field Setting ..... 161
  - 3.1 Field Setting from Remote Controller ..... 161
  - 3.2 Field Setting from Outdoor Unit ..... 174

# 1. Test Operation

## 1.1 Installation Process

Below Fiure shows the installation process. Install in the order of the steps shown.

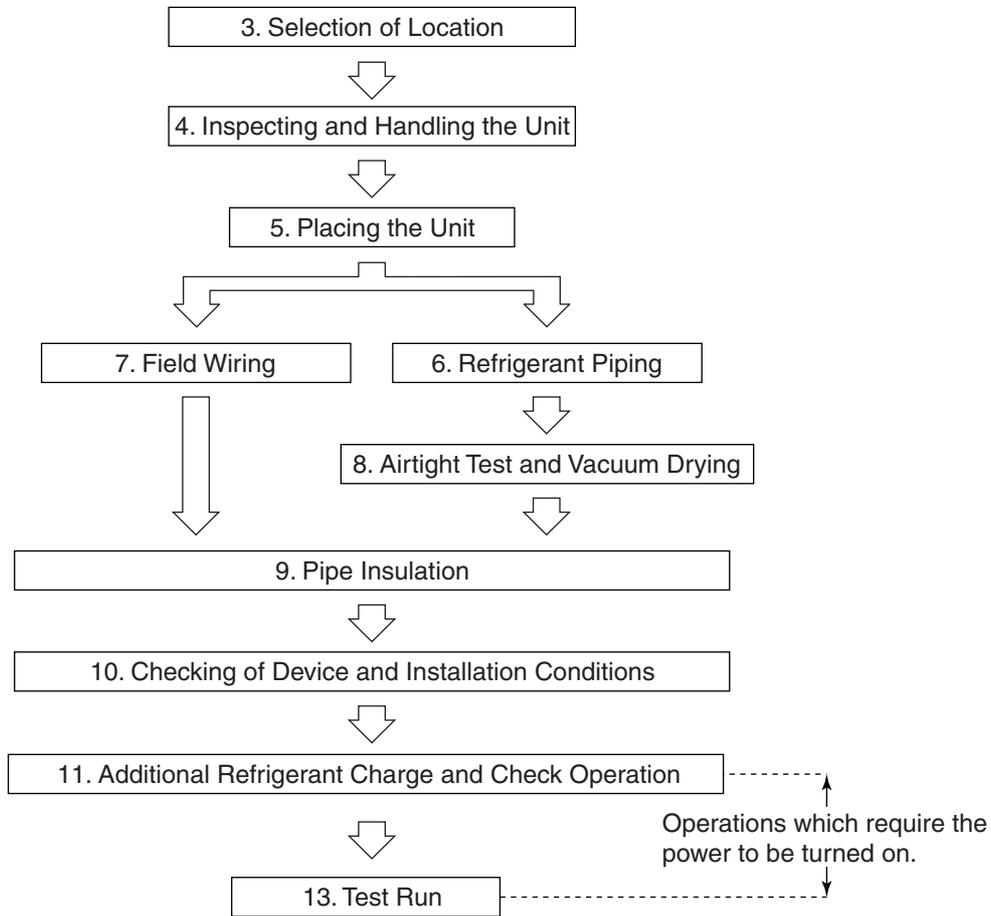

## 1.2 Procedure and Outline

Follow the following procedure to conduct the initial test operation after installation.

### 1.2.1 Check work prior to turn power supply on

Check the below items.

- Power wiring
- Control transmission wiring between units
- Earth wire




- Is the wiring performed as specified?
- Is the designated wire used?
- Is the wiring screw of wiring not loose?
- Is the grounding work completed?
- Is the insulation of the main power supply circuit deteriorated?  
Use a 500V megger tester to measure the insulation. (\*1)
- Do not use a megger tester for other circuits than 200V (or 240V) circuit.

\*1: Measure to be taken against decreased insulation resistance in the compressor

If the compressor is left to stand for an extended period of time after the refrigerant charge with the stop valve open and the power supply OFF, the refrigerant may be mixed in the compressor, thus decreasing the insulation resistance.

Heat the compressor as shown on the right and then recheck the insulation.

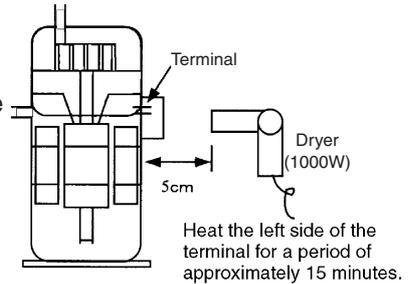

Check on refrigerant piping / insulation materials



Check airtight test and vacuum drying.



Check on amount of refrigerant charge



- Is the pipe size proper?
- Is the pipe insulation material installed securely?  
Liquid and gas pipes need to be insulated. (Otherwise causes water leak.)

- Have the airtight test and the vacuum drying been conducted according to the procedure in the Installation Manual?

- Is a proper quantity of refrigerant refilled?  
The following two methods are available for refilling of the refrigerant.
- (1) Use the automatic refrigerant refilling function.
- (2) Calculate a refrigerant refilling quantity.

Check the stop valves for conditions.

- Check to be sure the stop valves are under the following conditions.

Liquid-side stop valve	Gas-side stop valve
Open	Open

## 1.2.2 Turn power on

Turn outdoor unit and indoor unit power on.



Check the LED display of the outdoor unit PC board.



Make field settings with outdoor unit PC board.



Conduct check operations.



Check for normal operation.

○ Be sure to turn the power on 6 hours before starting operation to protect compressors. (to power on clankcase heater)

○ Check to be sure the transmission is normal.  
The transmission is normal if the LEDs display conditions as shown in table below.

LED display ○ ON ● OFF ● Blinking

LED display (Default status before delivery)	Micro-computer operation monitor	MODE	TEST	COOL / HEAT select			Low noise	Demand	Multi
				IND	MASTER	SLAVE			
				HAP	H1P	H2P			
One outdoor unit installed	●	●	●	○	●	●	●	●	●
When multiple outdoor unit installed (*)	Master	●	●	●	○	●	●	●	○
	Slave 1	●	●	●	●	●	●	●	●
	Slave 2	●	●	●	●	●	●	●	●

(\*) The master unit is the outdoor unit to which the transmission wiring for the indoor units is connected.

The other outdoor units are slave units.

○ Make field settings if needed.  
(For the setting procedure, refer to information in "3.2. Field Setting from Outdoor Unit" on page 174 onward.)  
For the outdoor-multi system, make field settings with the master unit. (Field settings made with the slave unit will be all invalid.)

The check operations shown below will be automatically initiated.

- Check for erroneous wirings
- Check for failure to open stop valves
- Check for excessive refrigerant refilling
- Automatic judgment of piping length

○ Before starting the normal operation after the completion of check operations, make sure indoor and outdoor units normally operate.

### 1.2.3 Air Tight Test and Vacuum Drying

**Note:**

- Always use nitrogen gas for the airtightness test.
- Absolutely do not open the shutoff valve until the main power circuit insulation measurement has been completed. (measuring after the shutoff valve is opened will cause the insulation value to drop.)

#### 1.2.3.1 Preparations

**<Needed tools>**

Gauge manifold Charge hose valve	<ul style="list-style-type: none"> <li>• To prevent entry of any impurities and insure sufficient pressure resistance, always use the special tools dedicated for R-410A.</li> <li>• Use charge hose that have pushing stick for connecting to service port of shutoff valves or refrigerant charge port.</li> </ul>
Vacuum pump	<ul style="list-style-type: none"> <li>• The vacuum pump for vacuum drying should be able to lower the pressure to <math>-100.7\text{kPa}</math> (5 Torr <math>-755\text{mm Hg}</math>).</li> <li>• Take care the pump oil never flow backward into the refrigerant pipe during the pump stops.</li> </ul>

**<The system for air tight test and vacuum drying>**

- Referring to figure 28, connect an nitrogen tank, refrigerant tank, and a vacuum pump to the outdoor unit.
- The shutoff valve and valve A~C in figure 28 should be open or closed as shown in the table below.


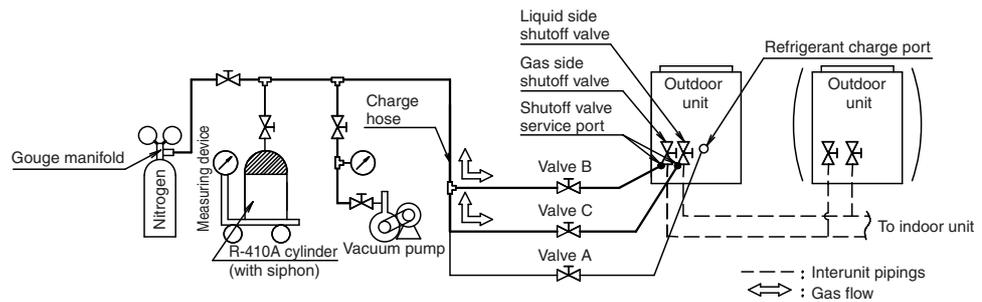


fig. 28

of valve A, B and C and shutoff valves	Valve			shutoff valve	
	A	B	C	Liquid side	Gas side
Air tight test, Vacuum drying (Close valve A and shutoff valves certainly. Otherwise the refrigerant in the unit are released.)	Close	Open	Open	Close	Close

**Note:**

- The airtightness test and vacuum drying should be done using the liquid side and gas side shutoff valve service ports. See the [R-410A] Label attached to the front plate of the outdoor unit for details on the location of the service port (see figure at right).
- See [Shutoff valve operation procedure] for details on handling the shutoff valve. (Refer page 149)
- The refrigerant charge port is connected to unit pipe. When shipped, the unit contains refrigerant, so use caution when attaching the charge hose.

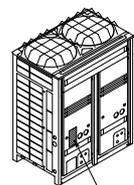

[Caution] Label

### 1.2.3.2 Air Tight Test and Vacuum Drying Method

After finished piping work, carry out air tight test and vacuum drying.

**<Air tight test>**

Pressurize the liquid and gas pipes to 4.0MPa (40bar) (do not pressurize more than 4.0MPa (40bar)). If the pressure does not drop within 24 hours, the system passes the test.

If there is a pressure drop, check for leaks, make repairs, and perform the airtight test again.

**<Vacuum drying>**

Evacuate the system from the liquid and gas pipes by using a vacuum pump for more than 2 hours and bring the system to -100.7kPa or less. After keeping the system under that condition for more than 1 hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.

**Note:**

■ **If moisture might enter the piping, follow belows.**  
 (I.e., if doing work during the rainy season, if the actual work takes long enough that condensation may form on the inside of the pipes, if rain might enter the pipes during work, etc.)

1. After performing the vacuum drying for two hours, pressurize to 0.05 MPa (i.e., vacuum breakdown) with nitrogen gas, then depressurize down to -100.7 kPa for an hour using the vacuum pump (vacuum drying).
2. If the pressure does not reach -100.7 kPa even after depressurizing for at least two hours, repeat the vacuum breakdown - vacuum drying process.

After vacuum drying, maintain the vacuum for an hour and make sure the pressure does not rise by monitoring with a vacuum gauge.

### 1.2.4 Additional Refrigerant Charge and Check Operation


The outdoor unit is charged with refrigerant when shipped from the factory, but depending on the size and length of the piping when installed, it may require additional charging. For charging the additional refrigerant, follow the procedure in this chapter. And then carry out the check operation.

**Note: Total amount of refrigerant should be 100 kg or less**

#### 1.2.4.1 Before Working

**[About the refrigerant cylinder]**

Check whether the cylinder has a siphon pipe before charging and place the cylinder so that the refrigerant is charged in liquid form. (See the figure below.)

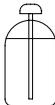With siphon pipe	
	Stand the cylinder upright and charge. (The siphon pipe goes all the way inside, so the cylinder does not need be put upside-down charge in liquid form.)
Other tanks	
	Stand the cylinder upside-down and charge.



**Caution**

- Always use the proper refrigerant (R-410A). If charged with the refrigerant containing an improper material, it may cause an explosion or accident.
- R-410A is a mixed refrigerant, so charging it as a gas will cause the refrigerant composition to change, which may prevent normal operation.

## [Shutoff Valve Operation Procedure]

When operating the shutoff valve, follow the procedure instructed below.

### Note:

- Do not open the shutoff valve until "1.2.1 Check work prior to turn power supply on" in page 145 are completed. If the shutoff valve is left open without turning on the power, it may cause refrigerant to buildup in the compressor, leading insulation degradation.
- Be sure to use the correct tools.
- The shutoff valve is not a back-seat type. If forced it to open, it might break the valve body.
- When using a service port, use the charge hose.
- After tightening the cap, make sure no refrigerant gas is leaking.

### [Tightening torque]

The sizes of the shutoff valves on each model and the tightening torque for each size are listed in the table below.

<Size of Shutoff Valve>

	5HP type	8HP type	10HP type	12HP type	14HP type	16HP type	18HP type
Liquid side shutoff valve	$\phi$ 9.5 The 12HP type corresponds to the 12.7-diameter onsite piping using the included piping.				$\phi$ 12.7 The 18HP type corresponds to the 15.9-diameter onsite piping using the accessory pipe.		
Gas side shutoff valve	$\phi$ 15.9	$\phi$ 19.1	$\phi$ 25.4 The 10HP type corresponds to the 22.2-diameter onsite piping using the accessory pipe. The 12 ~ 18HP type corresponds to the 28.6-diameter onsite piping using the accessory pipe.				

<Tightening torque>

Shutoff valve size	Tightening torque N·m (Turn clockwise to close)			Service port
	Shaft (valve body)		Cap (valve lid)	
$\phi$ 9.5	5.4 - 6.6	Hexagonal wrench 4 mm	13.5 - 16.5	11.5 - 13.9
$\phi$ 12.7	8.1 - 9.9		18.0 - 22.0	
$\phi$ 15.9	13.5 - 16.5	Hexagonal wrench 6 mm	22.5 - 27.5	
$\phi$ 19.1	27.0 - 33.0	Hexagonal wrench 8 mm		
$\phi$ 25.4				

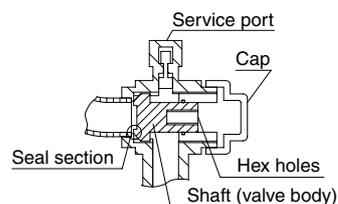


fig 34

### [To open]

1. Remove the cap and turn the shaft counterclockwise with the hexagon wrench (JISB4648).
2. Turn it until the shaft stops.
3. Make sure to tighten the cap securely.  
(For the tightening torque, refer to the item <Tightening Torque>.)

### [To close]

1. Remove the cap and turn the shaft clockwise with the hexagon wrench (JISB4648).
2. Securely tighten the valve until the shaft contacts the main body seal.
3. Make sure to tighten the cap securely.  
(For the tightening torque, refer to the item <Tightening Torque>.)

**[How to Check How Many Units are Connected]**

It is possible to find out how many indoor or outdoor unit in the system are turned on by operating the push button on the PC-board (A1P) of outdoor unit (In case of multi system master unit).

Follow the procedure below to check how many indoor or outdoor units are turned on.

(LED display: ● ...OFF ☀ ...ON ⚡ ...Blinking * ...Uncertain)		LED display						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
1. Press the MODE button (BS1) once, and set the MONITOR MODE (H1P: Blinking).		⚡	●	●	●	●	●	●
2. Press the SET button (BS2) the number of times until the LED display matches that at right.	For checking the number of outdoor units: eight times	⚡	●	●	☀	●	●	●
	For checking the number of indoor units: five times	⚡	●	●	●	☀	●	☀
3. Press the RETURN button (BS3) and read the number of units from the display of H2P through H7P. [Reading Method] The display of H2P through H7P should be read as a binary number, with ⚡ standing for "1" and ● standing for "0".		⚡	*	*	*	*	*	*
<p>Ex: For the LED display at right, this would be "0 1 0 1 1 0", which would mean 22 units are connected.</p> <p><math>32 \times 0 + 16 \times 1 + 8 \times 0 + 4 \times 1 + 2 \times 1 + 1 \times 0 = 22</math> units</p> <p>Note: "000000" indicates 64 units.</p>		⚡	●	⚡	●	☀	⚡	●
4. Press the MODE button (BS1) once. This returns to <b>Setting Mode 1</b> (default).		●	●	☀	●	●	●	●

**Note:**

Press the "MODE button" (BS1) if you get confused while operating. This returns to **Setting Mode 1** (default).

### 1.2.4.2 Procedure of Adding Refrigerant Charging and Check Operation



#### Warning



#### Electric Shock Warning

- Make sure to close the EL. COMPO. BOX lid before turning on the power when performing the refrigerant charging operation.
- Perform the setting on the PC-board (A1P) of the outdoor unit and check the LED display after the power is on via the inspection door which is in the EL. COMPO. BOX lid.
- Use an insulated rod to operate the push buttons via the EL. COMPO. BOX's inspection door.  
There is a risk of electric shock if you touch any live parts, since this operation must be performed with the power on.



#### Caution

- Make sure to use the protect tool (protective grooves and goggles) when charging the refrigerant.
- Due to a danger of liquid hammer, the refrigerant must not be charged over the allowable maximum amount when charging the refrigerant.
- Do not perform the refrigerant charging operation under working for the indoor unit.
- When opening the front panel, make sure to take caution to the fan rotation during the working.  
After the outdoor unit stops operating, the fan may keep rotation for a while.

#### Note:

- If operation is performed within 12 minutes after the indoor and outdoor units are turned on, H2P will be lit on and the compressor will not operate.
- In order to ensure uniform refrigerant distribution, it may take up to around 10 minutes for the compressor to start up after the unit starting operating. This is not a malfunction.

#### <About refrigerant charging>

- The refrigerant charge port is connected to the piping inside the unit.  
When the unit is shipped from the factory, the unit's internal piping is already charged with refrigerant, so be careful when connecting the charge hose.
- After adding the refrigerant, make sure to close the lid of the refrigerant charging port.  
The tightening torque for the lid is 11.5 to 13.9 Nm.
- See [Shutoff valve operation procedure] in 1.2.4.1 for details on how to handle shutoff valves.
- When done or when pausing the refrigerant charging operation, close the valve of the refrigerant tank immediately. If the tank is left with the valve open, the amount of refrigerant which is properly charged may be off the point. More refrigerant may be charged by any remaining pressure after the machine is stopped.

#### <About check operation>

- Make sure to perform the check operation after installation. Otherwise, the malfunction code "U3" will be displayed and normal operation cannot be performed.  
And the failure of "Check of miswiring" may also cause abnormal operation. Performance may drop due to the failure of "Judgment of piping length".
  - Check operation must be performed for each refrigerant piping system.  
Checking is impossible if plural systems are being done at once.
  - The individual problems of indoor units can not be checked.  
About these problems check by test run after the check operation is completed. (See page 158)
  - The check operation cannot be performed in recovery or other service modes.
1. Make sure the following works are complete in accordance with the installation manual.
    - Piping work
    - Wiring work
    - Air tight test
    - Vacuum drying
    - Installation work for indoor unit
  2. Calculate the "additional charging amount" using "How to calculate the additional refrigerant to be charged" in "6 Example of connection" on Part7. Appendix in page 363.

3. Open the valve C (See the figure 31. The valve A, B and the liquid and gas side shutout valve must be left closed), and charge the refrigerant of the “additional charging amount” from the liquid side shutout valve service port.  
If the “additional charging amount” was charged fully, close the valve C and go to step 5.  
If the “additional charging amount” was not charged fully, go to step 4.

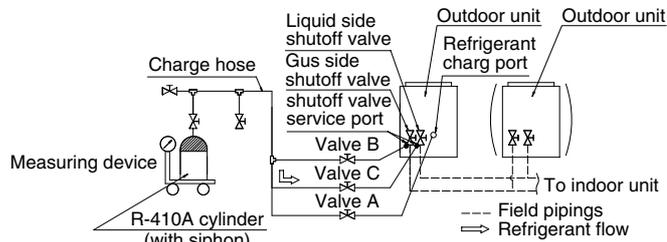


fig 31

4. Perform the refrigerant charging operation following [Refrigerant charging operation procedure] as shown in page 153, and charge the remaining refrigerant of the “additional charging amount”. For performing the refrigerant charging operation the push button on the PC-board (A1P) of outdoor unit (In case of multi system master unit) are use. (See the figure 32) In addition, the refrigerant are charged from the refrigerant charge port via the valve A. (See the figure 33)  
For operating the push button and opening and closing the valve, follow the work procedure.

**Note:**

The refrigerant will be charged about 22kg in one hour at outdoor temp. 30°C DB (6kg at 0°C DB).

If you need to speedup in case of multi system, connect the refrigerant cylinders to each outdoor unit as shown in the figure 33.

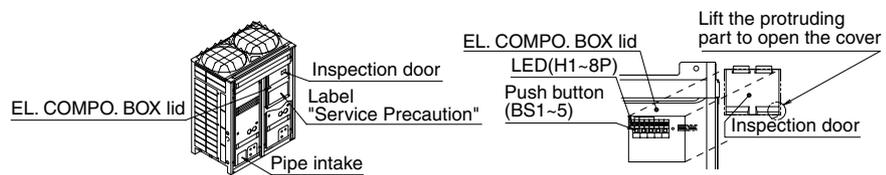


fig 32

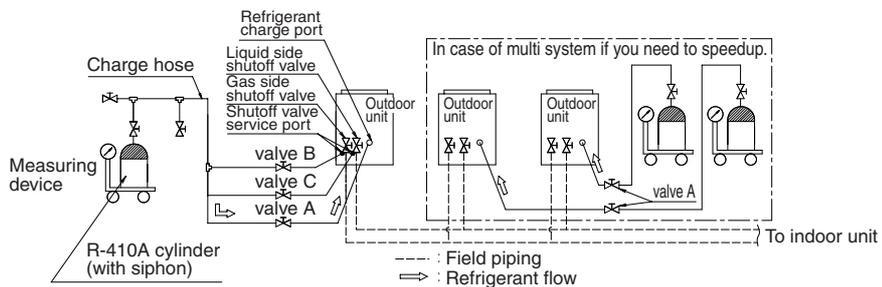


fig 33

## [Refrigerant Charging Operation Procedure]

**STEP1** Open the liquid and gas side shutoff valves (The valve A~C must be closed. The valve A~C means the valves in the figure 33.)

### [Display of normal system]

LED display (Default status of shipped)	SERV. MONI- TOR	MODE	TEST/ HWL	C/H SELECTOR			L.N.O.P	DEMA- ND	MULTI
				IND	MASTE R	SLAVE			
	HAP	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H8P
Single system	◐	●	●	☀	●	●	●	●	●
Multi system (*)	Master unit	◐	●	●	☀	●	●	●	☀
	Sub unit 1	◐	●	●	●	●	●	●	◐
	Sub unit 2	◐	●	●	●	●	●	●	●

LED display: ●...OFF, ☀...ON, ◐...Blinking

(\*)How to distinguish the master unit, sub unit 1, and sub unit 2 in the multi system.

Method 1: By the H8P (MULTI) LED display

☀ (ON): Master unit	◐ (Blinking): Sub unit 1	● (OFF): Sub unit 2
---------------------	--------------------------	---------------------

Method 2: By the transmission wiring to indoor unit

Transmission wiring is connected: Master unit
Transmission wiring is not connected : Sub unit 1 or Sub unit 2

**STEP2** If necessary, set the field setting by using the dip switch on the outdoor unit PC-board(A1P).

(For how to set, see “1.2.5.1 Onsite Settings With the Power Off”)

**STEP3** • Close the EL. COMPO. BOX lid and all front panel except on the side of the EL. COMPO. BOX (\*1) and turn the power to the outdoor unit and all connected indoor units. (\*2)

• After H2P stop blinking (about 12 minutes after turning on the power), check LED displays as shown in the table [Display of normal system] and the system is normal state.

If H2P is blinking, check the malfunction code in the remote controller, and correct the malfunction in accordance with [Remote controller display malfunction code] in page 155.

(\*1) Lead the refrigerant charge hose etc from the pipe intake. All front panels must be closed at the procedure (9).

(\*2) • If you perform the refrigerant charging operation within the refrigerant system that have the power off unit, the operation cannot finish properly.  
For confirming the number of the outdoor and indoor units with the power on, see [How to check how many units are connected] in chapter 1.2.4.1. In case of a multi system,  
turn on the power to all outdoor units in the refrigerant system.  
• To energize the crankcase heater, make sure to turn on for 6 hours before starting operation.

**STEP4** Start the additional refrigerant charge operation.

(About the system settings for additional refrigerant charge operation, refer to the [Service Precaution] label attached on the EL. COMPO. BOX lid in the outdoor unit.)  
Open valve A immediately after starting the compressor.

**STEP5** Close the valve A if the “additional charging amount” of refrigerant was charged, and push the RETURN button (BS3) once.

**STEP6** Record the charging amount on the accessory “REQUEST FOR THE INDICATION” label and attach it to the back side of the front panel.

5. After completing the additional refrigerant charging perform the check operation following below

**NOTE:**

- For check operation, the following work will be performed.
  - Check of shutoff valve opening
  - Check of miswiring
  - Judgment of piping length
  - Check of refrigerant overcharge
- It takes about 40 minutes to complete the check operation.

**[Check Operation Procedure]**

**STEP1** Make the onsite setting as needed using the dip switches on the outdoor unit PC-board (A1P) with the power off (See “1.2.5.1 Onsite Settings With the Power Off”)

**STEP2** Close the EL. COMPO. BOX lid and all front panels except as the side of the EL. COMPO. BOX and turn on the power to the outdoor unit and all connected indoor units. (Be sure to turn the power on at least 6 hours before operation in order to have power running to the crank case heater.)

**STEP3** Check the LED display on the outdoor unit PC-board (A1P) is as shown in the table below and transmission is normal.

LED display (Default status of shipped)	SERV. MONI- TOR	MODE	TEST/ HWL	C/H SELECTOR			L.N.O.P	DEMA- ND	MULTI
				IND	MASTE R	SLAVE			
				H3P	H4P	H5P			
Single system	●	●	●	☼	●	●	●	●	●
Multi system (*)	Master unit	●	●	●	☼	●	●	●	●
	Sub unit 1	●	●	●	●	●	●	●	☼
	Sub unit 2	●	●	●	●	●	●	●	●

LED display: ●...OFF, ☼...ON, ●...Blinking

(\*)How to distinguish the master unit, sub unit 1, and sub unit 2 in the multi system.

Method 1: By the H8P (MULTI) LED display

☼ (ON): Master unit	● (Blinking): Sub unit 1	● (OFF): Sub unit 2
---------------------	--------------------------	---------------------

Method 2: By the transmission wiring to indoor unit

Transmission wiring is connected: Master unit
Transmission wiring is not connected : Sub unit 1 or Sub unit 2

**STEP4** Make the onsite settings as needed using the push button (BS1-BS5) on the outdoor unit PC-board (A1P) with the power on. (See “1.2.5.2 Onsite Settings With the Power On”)

**STEP5** Perform the check operation following the Check Operation Method of the [Service Precautions] label on the EL. COMPO. BOX lid. The system operation for about 40 minutes and automatically stops the check operation.

If the malfunction code is not displayed in the remote controller after the system stop, check operation is completed. Normal operation will be possible after 5 minutes. If the malfunction code is displayed in the remote controller, correct the malfunction following [Remote controller displays malfunction code] and perform the check operation again.

**[Remote controller displays malfunction code]**

Malfunction code	Installation error	Remedial action
E3, E4 F3, F6 UF	The shutoff valve of the outdoor unit is left closed.	Open the shutoff valve.
U1	The phases of the power to the outdoor unit is reversed.	Exchange two of the three phases (L1, L2, L3) to make a proper connection.
U1 U4 LC	No power is supplied to an outdoor or indoor unit (including phase interruption).	Make sure the power source wire is properly connected to the outdoor unit and revise if necessary.
UF	There is conflict on the connection of transmission wiring in the system.	Check if the refrigerant piping line and the transmission wiring are consistent with each other.
E3 F6 UF	Refrigerant overcharge.	Recalculate the additional amount refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
E4 F3	Insufficient refrigerant.	<ul style="list-style-type: none"> <li>• Check if the additional refrigerant charge has been finished correctly.</li> <li>• Recalculate the additional amount refrigerant from the piping length and add the adequate amount.</li> </ul>
U7, U4 UF, UH	If the outdoor unit terminal is connected when there is one outdoor unit installed.	Remove the line from the outdoor multi terminals (Q1 and Q2).

If any malfunction codes other than the above are displayed, check the service manual for how to respond.

## 1.2.5 Onsite Settings

### NOTE:


In the case of a multi system, all onsite settings should be made on the master unit. Settings made on sub units are invalid.

The outdoor unit to which the indoor unit transmission wire are connected is the master unit, and all other units are sub units.

### 1.2.5.1 Onsite Settings with the Power Off

If the COOL/HEAT selector was connected to the outdoor unit, set the dip switch (DS1) on the outdoor unit PC-board (A1P) to "ON" (it is set to "OFF" when shipped from the factory).

For the position of the dip switch (DS1), see the "Service Precautions" label (see at right) which is attached to the EL. COMPO. BOX lid.

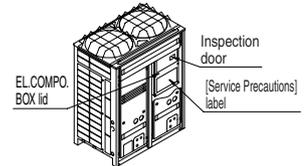

**Warning**



**Electric Shock Warning**

Never perform with the power on.

There is a serious risk of electric shock if any live part is touched.

### 1.2.5.2 Onsite Settings with the Power On

Use the push button switches (BS1 through BS5) on the outdoor unit PC-board (A1P) to make the necessary onsite settings.

See the "Service Precautions" label on the EL. CONPO. BOX lid for details on the positions and operating method of the push button switches and on the onsite setting.

Make sure to record the setting on the accessory "REQUEST FOR THE INDICATION" label.



**Warning**



**Electric Shock Warning**

Use an insulated rod to operate the push buttons via the inspection door of EL. COMPO. BOX lid.

There is a risk of electric shock if you touch any live parts, since this operation must be performed with the power on.

## 1.2.6 Test Run

### 1.2.6.1 Before Test Run

- Make sure the following works are completed in accordance with the installation manual.
  - Piping work
  - Wiring work
  - Air tight test
  - Vacuum drying
  - Additional refrigerant charge
- Check that all work for the indoor unit are finished and there are no danger to operate.

### 1.2.6.2 Test Run

After check operation is completed, operate the unit normally and check the following.

- (1) Make sure the indoor and outdoor units are operating normally.
- (2) Operate each indoor unit one by one and make sure the corresponding outdoor unit is also operating.
- (3) Check to see if cold (or hot) air is coming out from the indoor unit.
- (4) Push the fan direction and strength buttons on the remote controller to see if they operate properly.

**NOTE:**

- Heating is not possible if the outdoor temperature is 24°C or higher. Refer to the Operation manual.
- If a knocking sound can be heard in the liquid compression of the compressor, stop the unit immediately and then energize the crank case heater for a sufficient length of time before restarting the operation.
- Once stopping, the compressor will not restart in about 5 minutes even if the On/Off button of the remote controller is pushed.
- When the system operation is stopped by the remote controller, the outdoor units may continue operating for further 5 minutes at maximum.
- The outdoor unit fan may rotate at low speeds if the Night-time low noise setting or the External low noise level setting is made, but this is not a malfunction.

### 1.2.6.3 Checks after Test Run

**Perform the following checks after the test run is complete.**

- Record the contents of field setting.
  - Record them on the accessory “REQUEST FOR THE INDICATION” label.  
And attach the label on the back side of the front panel.
- Record the installation date.
  - Record the installation date on the accessory “REQUEST FOR THE INDICATION” label in accordance with the IEC60335-2-40.  
And attach the label on the back side of the front panel.

**NOTE:**

After the test run, when handing the unit over to the customer, make sure the EL.COMPO.BOX lid, the inspection door, and the unit casing are all attached.

## 1.3 Operation When Power is Turned On

### 1.3.1 When Turning On Power First Time

The unit cannot be run for up to 12 minutes to automatically set the master power and address (indoor-outdoor address, etc.).

**Status**

Outdoor unit

Test lamp H2P .... Blinks  
Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the "UH" malfunction indicator blinks.  
(Returns to normal when automatic setting is complete.)

### 1.3.2 When Turning On Power The Second Time and Subsequent

Tap the RESET button on the outdoor unit PC board. Operation becomes possible for about 2 minutes. If you do not push the RESET button, the unit cannot be run for up to 10 minutes to automatically set master power.

**Status**

Outdoor unit

Test lamp H2P .... Blinks  
Can also be set during operation described above.

Indoor unit

If ON button is pushed during operation described above, the operation lamp lights but the compressor does not operate. (Returns to normal when automatic setting is complete.)

### 1.3.3 When an Indoor Unit or Outdoor unit Has Been Added, or Indoor or Outdoor Unit PC Board Has Been Changed

Be sure to push and hold the RESET button for 5 seconds. If not, the addition cannot be recognized. In this case, the unit cannot be run for up to 12 minutes to automatically set the address (indoor-outdoor address, etc.)


**Status**

Outdoor unit

Test lamp H2P .... ON  
Can also be set during operation described above.

Indoor unit


If ON button is pushed during operation described above, the "UH" or "U4" malfunction indicator blinks. (Returns to normal when automatic setting is complete.)

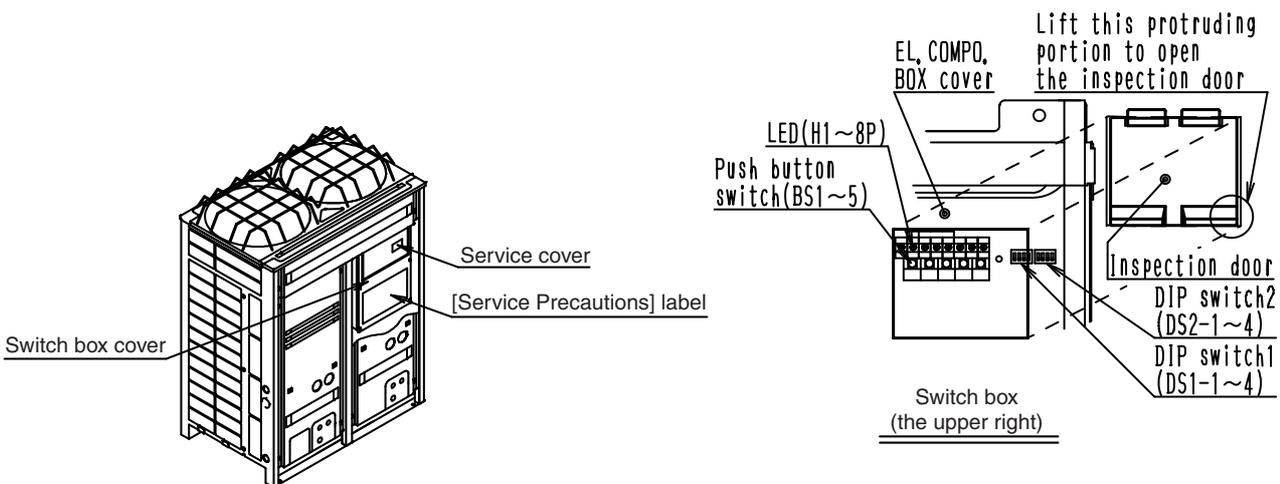

**Caution** When the 400 volt power supply is applied to "N" phase by mistake, replace Inverter P.C.B (A2P) and control transformer (T1R, T2R) in switch box together.

## 2. Outdoor Unit PC Board Layout

### Outdoor unit PC board

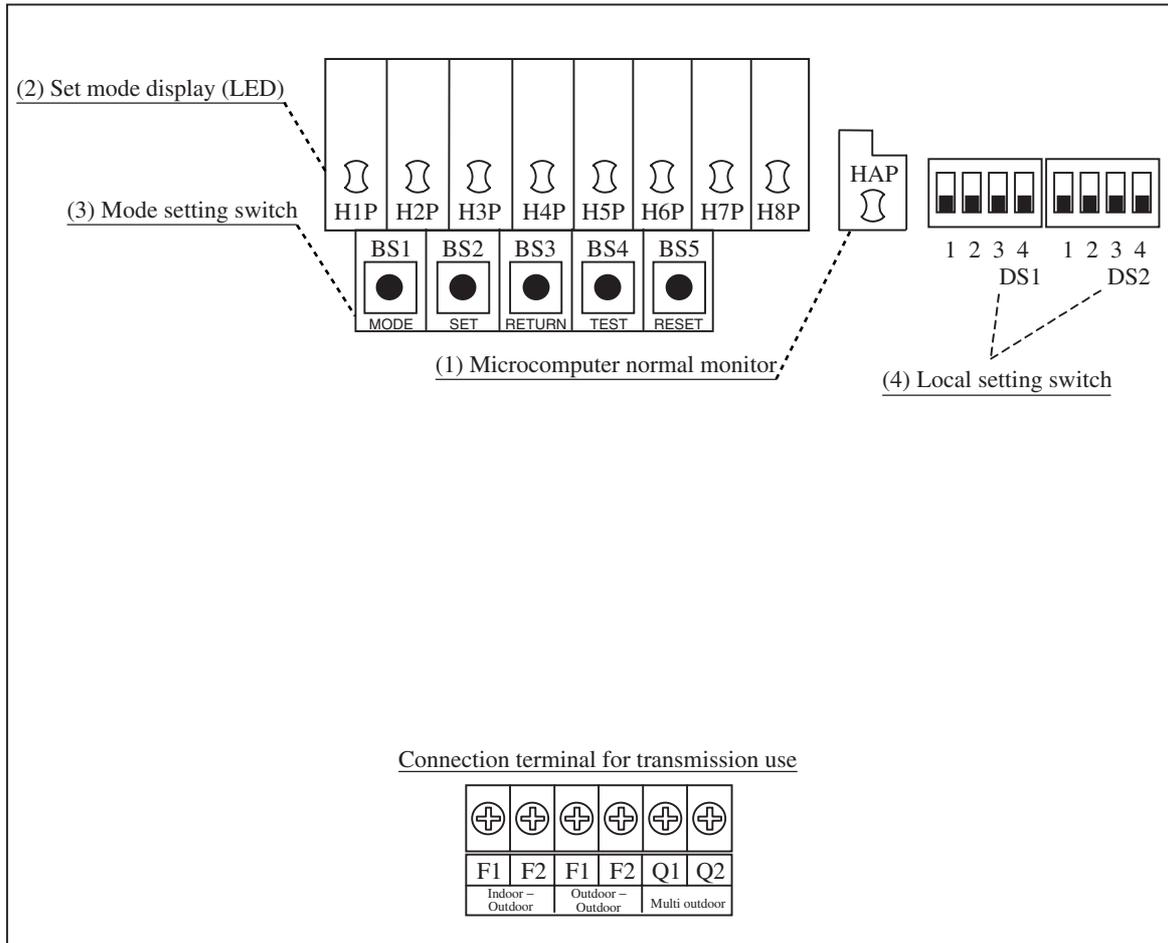

(V3054)

- (1) Microcomputer normal monitor  
This monitor blinks while in normal operation, and turns on or off when a malfunction occurs.
- (2) Set mode display (LED)  
LEDs display mode according to the setting.
- (3) Mode setting switch  
Used to change mode.
- (4) Local setting switch  
Used to make field settings.

## 3. Field Setting


### 3.1 Field Setting from Remote Controller

Individual function of indoor unit can be changed from the remote controller. At the time of installation or after service inspection / repair, make the local setting in accordance with the following description.

Wrong setting may cause malfunction.

(When optional accessory is mounted on the indoor unit, setting for the indoor unit may be required to change. Refer to information in the option handbook.)

#### 3.1.1 Wired Remote Controller <BRC1C61, 62>

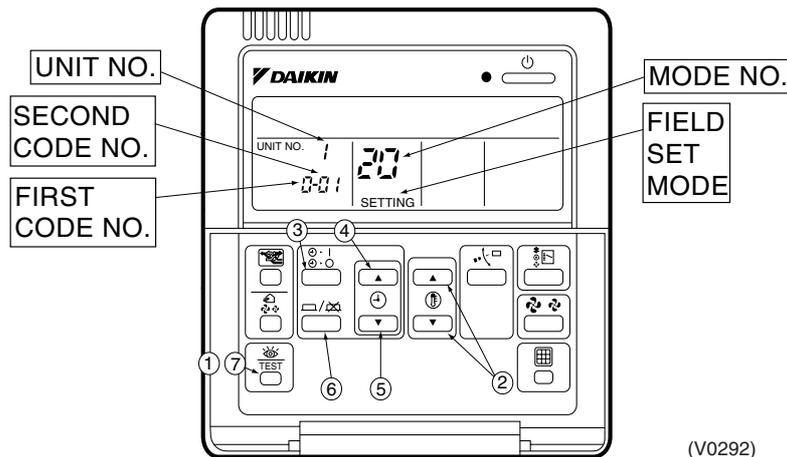

(V0292)


1. When in the normal mode, press the “” button for a minimum of four seconds, and the FIELD SET MODE is entered.
2. Select the desired MODE NO. with the “” button (2).
3. During group control, when setting by each indoor unit (mode No. 20, 22 and 23 have been selected), push the “” button (3) and select the INDOOR UNIT NO to be set. (This operation is unnecessary when setting by group.)
4. Push the “” upper button (4) and select FIRST CODE NO.
5. Push the “” lower button (5) and select the SECOND CODE NO.
6. Push the “” button (6) once and the present settings are SET.
7. Push the “” button (7) to return to the NORMAL MODE.

(Example)

If during group setting and the time to clean air filter is set to FILTER CONTAMINATION, HEAVY, SET MODE NO. to “10” FIRST CODE NO. to “0”, and SECOND CODE NO. to “02”.

### 3.1.2 Wireless Remote Controller - Indoor Unit

BRC7C type  
BRC7E type  
BRC4C type

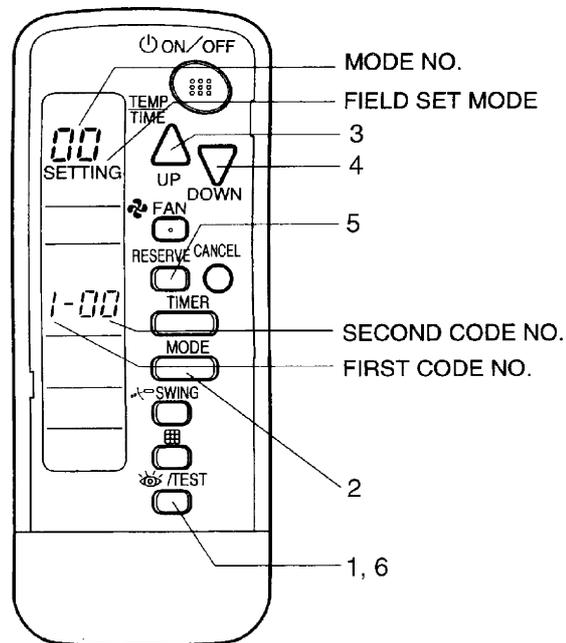

(V2770)


1. When in the normal mode, push the “ /TEST” button for 4 seconds or more, and operation then enters the “field set mode.”
2. Select the desired “mode No.” with the “ MODE” button.
3. Pushing the “ UP” button, select the first code No.
4. Pushing the “ DOWN” button, select the second code No.
5. Push the timer “ RESERVE” button and check the settings.
6. Push the “ /TEST” button to return to the normal mode.

(Example)

When setting the filter sign time to “Filter Dirtiness-High” in all group unit setting, set the Mode No. to “10”, Mode setting No. to “0” and setting position No. to “02”.

### 3.1.3 Simplified Remote Controller

BRC2A51  
BRC2C51

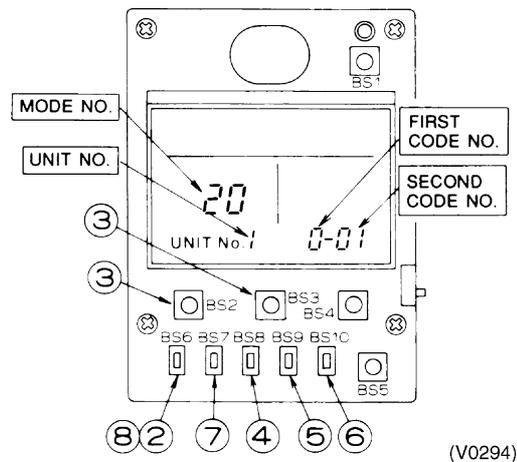

1. Remove the upper part of remote controller.
2. When in the normal mode, press the [BS6] BUTTON (②) (field set), and the FIELD SET MODE is entered.
3. Select the desired MODE No. with the [BS2] BUTTON (③) (temperature setting ▲) and the [BS3] BUTTON (③) (temperature setting ▼).
4. During group control, when setting by each indoor unit (mode No. 20, 22, and 23 have been selected), push the [BS8] (④) BUTTON (unit No.) and select the INDOOR UNIT NO. to be set. (This operation is unnecessary when setting by group.)
5. Push the [BS9] BUTTON (⑤) (set A) and select FIRST CODE NO.
6. Push the [BS10] BUTTON (⑥) (set B) and select SECOND CODE NO.
7. Push the [BS7] BUTTON (⑦) (set/cancel) once and the present settings are SET.
8. Push the [BS6] BUTTON (⑧) (field set) to return to the NORMAL MODE.
9. (Example) If during group setting and the time to clean air filter is set to FILTER CONTAMINATION - HEAVY, SET MODE NO. to "10", FIRST CODE NO. to "0", and SECOND CODE NO. to "02".

### 3.1.4 Setting Contents and Code No. – VRV Indoor unit

VRV system indoor unit settings	Mode No. Note 2	Setting Switch No.	Setting Contents	Second Code No.(Note 3)								
				01		02		03		04		
10(20)	0		Filter contamination heavy/light (Setting for display time to clean air filter) (Sets display time to clean air filter to half when there is heavy filter contamination.)	Super long life filter	Light	Approx. 10,000 hrs.	Heavy	Approx. 5,000 hrs.	—		—	
				Long life filter		Approx. 2,500 hrs.		Approx. 1,250 hrs.				
				Standard filter		Approx. 200 hrs.		Approx. 100 hrs.				
	1		Long life filter type	Long life filter		Super long life filter		—		—		
	2		Thermostat sensor in remote controller	Use		No use		—		—		
	3		Display time to clean air filter calculation (Set when filter sign is not to be displayed.)	Display		No display		—		—		
	12(22)	0		Optional accessories output selection (field selection of output for adaptor for wiring)	Indoor unit turned ON by thermostat				Operation output		Malfunction output	
1			ON/OFF input from outside (Set when ON/OFF is to be controlled from outside.)	Forced OFF		ON/OFF control		External protection device input		—		
2			Thermostat differential changeover (Set when remote sensor is to be used.)	1°C		0.5°C		—		—		
3			OFF by thermostat fan speed	LL		Set fan speed		—		—		
4			Automatic mode differential (automatic temperature differential setting for VRV system heat recovery series cool/heat)	01:0	02:1	03:2	04:3	05:4	06:5	07:6	08:7	
5			Power failure automatic reset	Not equipped		Equipped		—		—		
13(23)	0		High air outlet velocity (Set when installed in place with ceiling higher than 2.7 m.)	N		H		S		—		
	1		Selection of air flow direction (Set when a blocking pad kit has been installed.)	F (4 directions)		T (3 directions)		W (2 directions)		—		
	3		Air flow direction adjustment (Set at installation of decoration panel.)	Equipped		Not equipped				—		
	4		Field set air flow position setting	Draft prevention		Standard		Ceiling Soiling prevention		—		
	5		Field set fan speed selection (fan speed control by air discharge outlet for phase control)	Standard		Optional accessory 1		Optional accessory 2		—		
15(25)	1		Thermostat OFF excess humidity	Not equipped		Equipped		—		—		
	2		Direct duct connection (when the indoor unit and heat reclaim ventilation unit are connected by duct directly.) *Note 6	Not equipped		Equipped		—		—		
	3		Drain pump humidifier interlock selection	Not equipped		Equipped		—		—		
	5		Field set selection for individual ventilation setting by remote controller	Not equipped		Equipped		—		—		
	6		Field set selection for individual ventilation setting by remote controller	Not equipped		Equipped		—		—		



- Notes :**
- Settings are made simultaneously for the entire group, however, if you select the mode No. inside parentheses, you can also set by each individual unit. Setting changes however cannot be checked except in the individual mode for those in parentheses.
  - The mode numbers inside parentheses cannot be used by wireless remote controllers, so they cannot be set individually. Setting changes also cannot be checked.
  - Marked   are factory set.
  - Do not make settings other than those described above. Nothing is displayed for functions the indoor unit is not equipped with.
  - “88” may be displayed to indicate the remote controller is resetting when returning to the normal mode.
  - If the setting mode to “Equipped”, heat reclaim ventilation fan conducts the fan residual operation by linking to indoor unit.

### 3.1.5 Applicable range of Field setting

	Ceiling mounted cassette type				Slim Ceiling mounted duct type	Ceiling mounted built-in type	Ceiling mounted duct type	Ceiling suspended type	Wall mounted type	Floor standing type	Concealed Floor standing type	New Ceiling suspende d cassette type	Outdoor air processing unit
	Multi flow		Double flow	Corner type									
	FXFQ	FXZQ											
	FXDQ	FXSQ	FXMQ	FXHQ	FXAQ	FXLQ	FXNQ	FXUQ	FXMQ- MF				
Filter sign	○	○	○	○	○	○	○	○	○	○	○	○	○
Ultra long life filter sign	○	○	○	—	—	—	—	—	—	—	—	—	—
Remote controller thermostat sensor	○	○	○	○	○	○	○	○	○	○	○	○	—
Set fan speed when thermostat OFF	○	○	○	○	○	○	○	○	○	○	○	○	—
Air flow adjustment Ceiling height	○	—	—	—	—	—	—	○	—	—	—	○	—
Air flow direction	○	○	—	—	—	—	—	—	—	—	—	○	—
Air flow direction adjustment (Down flow operation)	—	—	—	○	—	—	—	—	—	—	—	—	—
Air flow direction adjustment range	○	○	○	○	—	—	—	—	—	—	—	—	—
Field set fan speed selection	○	—	—	—	○*1	—	—	○	—	—	—	—	—
Discharge air temp. (Cooling)	—	—	—	—	—	—	—	—	—	—	—	—	○
Discharge air temp. (Heating)	—	—	—	—	—	—	—	—	—	—	—	—	○

\*1 Static pressure selection

### 3.1.6 Detailed Explanation of Setting Modes

#### Filter Sign Setting

If switching the filter sign ON time, set as given in the table below.

##### Set Time

Setting	Filter Specs.	Standard	Long Life	Ultra Long Life Filter
Contamination Light		200 hrs.	2,500 hrs.	10,000 hrs.
Contamination Heavy		100 hrs.	1,250 hrs.	5,000 hrs.

#### Ultra-Long-Life Filter Sign Setting


When a Ultra-long-life filter is installed, the filter sign timer setting must be changed.

##### Setting Table

Mode No.	Setting Switch No.	Setting Position No.	Setting
10 (20)	1	01	Long-Life Filter
		02	Ultra-Long-Life Filter (1)
		03	—

#### External ON/OFF input

This input is used for "ON / OFF operation" and "Protection device input" from the outside. The input is performed from the T1-T1 terminal of the operation terminal block (X1A) in the electric component box.

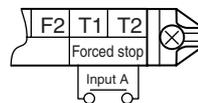

##### Setting Table

Mode No.	Setting Switch No.	Setting Position No.	Operation by input of the signal A
12 (22)	1	01	ON: Forced stop (prohibition of using the remote controller) OFF: Permission of using the remote controller
		02	OFF → ON: Permission of operation ON → OFF: Stop
		03	ON: Operation OFF: The system stops, then the applicable unit indicates "A0". The other indoor units indicate "U9".

#### Fan Speed Changeover When Thermostat is OFF

By setting to "Set Fan Speed," you can switch the fan speed to the set fan speed when the heating thermostat is OFF.

\* Since there is concern about draft if using "fan speed up when thermostat is OFF," you should take the setup location into consideration.

##### Setting Table

Mode No.	First Code No.	Second Code No.	Setting
12(22)	3	01	LL Fan Speed
		02	Set Fan Speed

### Auto Restart after Power Failure Reset

For the air conditioners with no setting for the function (same as factory setting), the units will be left in the stop condition when the power supply is reset automatically after power failure reset or the main power supply is turned on again after once turned off. However, for the air conditioners with the setting, the units may start automatically after power failure reset or the main power supply turned on again (return to the same operation condition as that of before power failure).

For the above reasons, when the unit is set enabling to utilize “Auto restart function after power failure reset”, utmost care should be paid for the occurrence of the following situation.



- Caution**
- 1. The air conditioner starts operation suddenly after power failure reset or the main power supply turned on again. Consequently, the user might be surprised (with question for the reason why).**
  - 2. In the service work, for example, turning off the main power switch during the unit is in operation, and turning on the switch again after the work is completed start the unit operation (the fan rotates).**

### Air Flow Adjustment - Ceiling height

Make the following setting according to the ceiling height. The setting position No. is set to “01” at the factory.

#### ■ In the Case of FXAQ, FXHQ

Mode No.	Setting Switch No.	Setting Position No.	Setting
13(23)	0	01	Wall-mounted type: Standard
		02	Wall-mounted type: Slight increase
		03	Wall-mounted type: Normal increase

#### ■ In the Case of FXFQ25~80

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 2.7 m	Lower than 3.0 m	Lower than 3.5 m
		02	High Ceiling (H)	Lower than 3.0 m	Lower than 3.3 m	Lower than 3.8 m
		03	Higher Ceiling (S)	Lower than 3.5 m	Lower than 3.5 m	—

#### ■ In the Case of FXFQ100~125

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 3.2 m	Lower than 3.6 m	Lower than 4.2 m
		02	High Ceiling (H)	Lower than 3.6 m	Lower than 4.0 m	Lower than 4.2 m
		03	Higher Ceiling (S)	Lower than 4.2 m	Lower than 4.2 m	—

#### ■ In the Case of FXUQ71~125

Mode No.	First code No.	Second code No.	Setting	Ceiling height		
				4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01	Standard (N)	Lower than 2.7 m	Lower than 3.0 m	Lower than 3.5 m
		02	High Ceiling (H)	Lower than 3.0 m	Lower than 3.5 m	Lower than 3.8 m
		03	Higher Ceiling (S)	Lower than 3.5 m	Lower than 3.8 m	—

**Air Flow Direction Setting**

Set the air flow direction of indoor units as given in the table below. (Set when optional air outlet blocking pad has been installed.) The second code No. is factory set to "01."

**Setting Table**

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	1	01	F : 4-direction air flow
		02	T : 3-direction air flow
		03	W : 2-direction air flow

**Setting of Air Flow Direction Adjustment**

Only the model FXKQ has the function.


When only the front-flow is used, sets yes/no of the swing flap operation of down-flow.

**Setting Table**

Setting	Mode No.	First Code No.	Second Code No.
Down-flow operation: Yes	13 (23)	3	01
Down-flow operation: No			02

**Setting of Air Flow Direction Adjustment Range**

Make the following air flow direction setting according to the respective purpose.

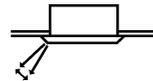

(S2537)

**Setting Table**

Mode No.	First Code No.	Second Code No.	Setting
13 (23)	4	01	Upward (Draft prevention)
		02	Standard
		03	Downward (Ceiling soiling prevention)

**Air flow rate switching at discharge grille for field air flow rate switching**

When the optional parts (high performance filter, etc.) is installed, sets to change fan speed for securing air flow rate.

Follow the instruction manual for the optional parts to enter the setting numbers.

**Setting of the static pressure selection (for FXDQ model)**

Model No.	First Code No.	Second Code No.	External static pressure
13 (23)	5	01	Standard (15Pa)
		02	High static pressure (44Pa)

### 3.1.7 Outdoor Air Processing Unit-Field Setting (Remote Controller)

Mode No.	Setting SW No.	Setting contents	Setting position No.														
			01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
10 (20)	0	Stain of filter	<b>2500hr</b>	1250hr	—	—	—	—	—	—	—	—	—	—	—	—	—
	3	Filtering time cumulation	Display	No display	—	—	—	—	—	—	—	—	—	—	—	—	—
12 (22)	1	External ON/OFF input	Forced stop	ON-OFF control	—	—	—	—	—	—	—	—	—	—	—	—	—
	5	Power failure automatic reset	Not equipped	Equipped	—	—	—	—	—	—	—	—	—	—	—	—	—
14 (24)	3	Discharge temperature (cooling)	13°C	14	15	16	17	<b>18</b>	19	20	21	22	23	24	25	25	25
	4	Discharge temperature (heating)	18°C	19	20	21	22	23	24	<b>25</b>	26	27	28	29	30	30	30

Note) Bold face in  indicates the default setting.


### 3.1.8 Centralized Control Group No. Setting

#### BRC1A Type

In order to conduct the central remote control using the central remote controller and the unified ON/OFF controller, Group No. settings should be made by group using the operating remote controller.

Make Group No. settings for central remote control using the operating remote controller.

1. While in normal mode, press and hold the  switch for a period of four seconds or more to set the system to "Field Setting Mode".
2. Select the MODE No. "00" with the " " button.
3. Use the " " button to select the group No. for each group.  
(Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 4-15.)
4. Press " " to set the selected group No.
5. Press " " to return to the NORMAL MODE.

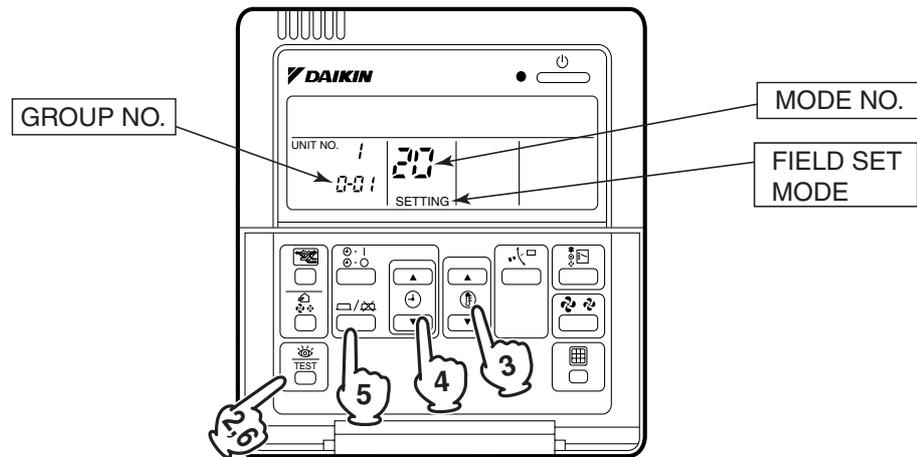

#### Note:


- For wireless remote controller, see the following.
- For setting group No. of HRV and wiring adaptor for other air conditioners, etc., refer to the instruction manual attached.

#### NOTICE

Enter the group No. and installation place of the indoor unit into the attached installation table. Be sure to keep the installation table with the operation manual for maintenance.


**BRC7C Type**  
**BRC7E Type**  
**BRC4C Type**

- Group No. setting by wireless remote controller for centralized control
- 1. When in the normal mode, push “/TEST” button for 4 seconds or more, and operation then enters the “field set mode.”
- 2. Set mode No. “00” with “” button.
- 3. Set the group No. for each group with “” “” button (advance/backward).
- 4. Enter the selected group numbers by pushing “” button.
- 5. Push “” button and return to the normal mode.

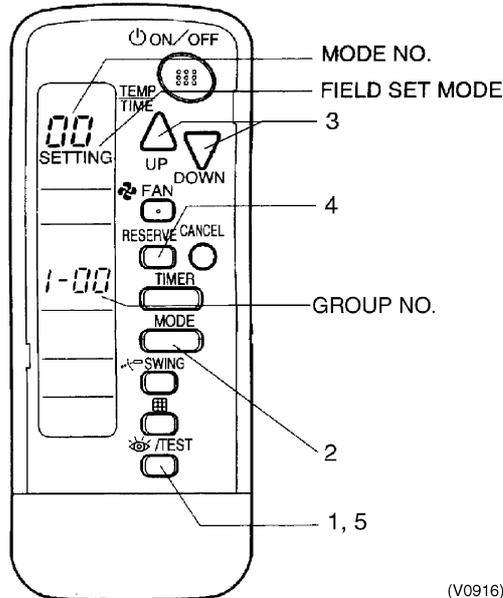

(V0916)

**Group No. Setting Example**

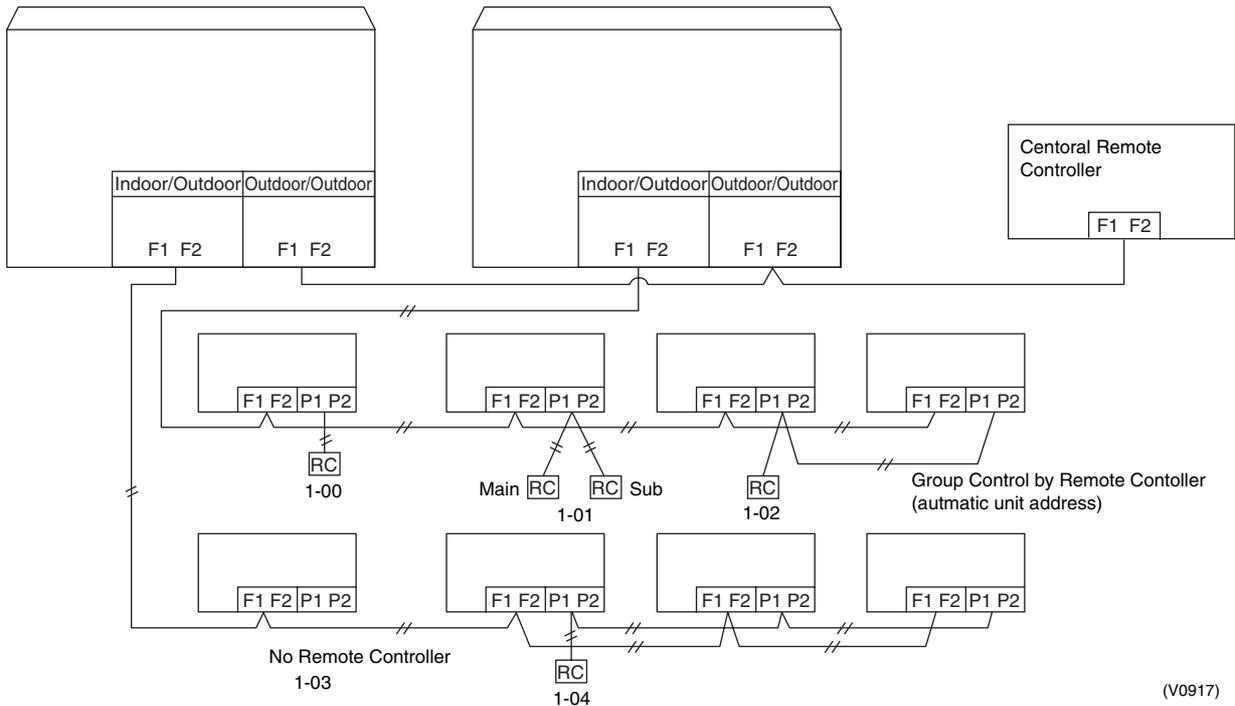

(V0917)



**Caution**

When turning the power supply on, the unit may often not accept any operation while "88" is displaying after all indications were displayed once for about 1 minute on the liquid crystal display. This is not an operative fault.

### 3.1.9 Setting of Operation Control Mode from Remote Controller (Local Setting)

The operation control mode is compatible with a variety of controls and operations by limiting the functions of the operation remote controller. Furthermore, operations such as remote controller ON/OFF can be limited in accordance with the combination conditions. (Refer to information in the next page.)

Central remote controller is normally available for operations. (Except when centralized monitor is connected)

#### 3.1.10 Contents of Control Modes


Twenty modes consisting of combinations of the following five operation modes with temperature and operation mode setting by remote controller can be set and displayed by operation modes 0 through 19.

- ◆ ON/OFF control impossible by remote controller  
Used when you want to turn on/off by central remote controller only.  
(Cannot be turned on/off by remote controller.)
- ◆ OFF control only possible by remote controller  
Used when you want to turn on by central remote controller only, and off by remote controller only.
- ◆ Centralized  
Used when you want to turn on by central remote controller only, and turn on/off freely by remote controller during set time.
- ◆ Individual  
Used when you want to turn on/off by both central remote controller and remote controller.
- ◆ Timer operation possible by remote controller  
Used when you want to turn on/off by remote controller during set time and you do not want to start operation by central remote controller when time of system start is programmed.

**How to Select Operation Mode**

Whether operation by remote controller will be possible or not for turning on/off, controlling temperature or setting operation mode is selected and decided by the operation mode given on the right edge of the table below.


**Example**

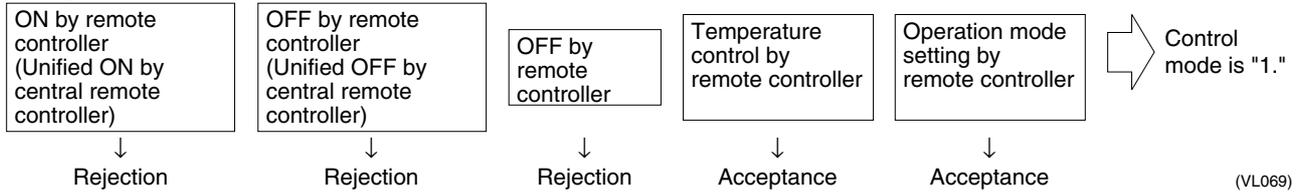

Control mode	Control by remote controller					Control mode		
	Operation		OFF	Temperature control	Operation mode setting			
	Unified operation, individual operation by central remote controller, or operation controlled by timer	Unified OFF, individual stop by central remote controller, or timer stop						
ON/OFF control impossible by remote controller	Rejection (Example)	Rejection (Example)	Rejection (Example)	Rejection	Acceptance	0		
OFF control only possible by remote controller				Rejection (Example)	Rejection (Example)	Rejection	Rejection	10
							Acceptance (Example)	Acceptance (Example)
Centralized	Acceptance	Acceptance	Acceptance	Rejection	Acceptance	2		
				Rejection	Rejection	12		
Individual	Acceptance	Acceptance	Acceptance	Acceptance	Acceptance	3		
				Rejection	Rejection	13		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	4		
				Rejection	Rejection	14		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Acceptance	Acceptance	5		
				Rejection	Rejection	15		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	6		
				Acceptance	Rejection	16		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Acceptance	Acceptance	7 *1		
				Rejection	Rejection	17		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	8		
				Acceptance	Rejection	18		
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Acceptance (During timer at ON position only)	Acceptance	Rejection	Acceptance	9		
				Acceptance	Rejection	19		

Do not select "timer operation possible by remote controller" if not using a remote controller. Operation by timer is impossible in this case.

\*1. Factory setting

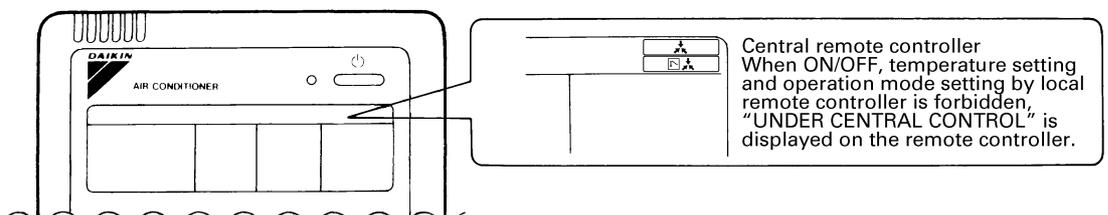

## 3.2 Field Setting from Outdoor Unit

### 3.2.1 Field Setting from Outdoor Unit

#### ■ List of Field Setting Items

This following section indicates the list of field setting items. For the lists of dip switch contents, Setting mode 1, and Setting mode 2, refer to information in tables shown on the following page onward.

For setting items of (\*1), refer to detailed information provided on page 161 onward.

Setting item		Content and objective of setting	Overview of setting procedure	
Function setting	1	Setting of COOL/HEAT selection (*1)	<ul style="list-style-type: none"> <li>■ COOL/HEAT selection methods are possible to select from the following               <ol style="list-style-type: none"> <li>(1) Control by each outdoor unit using the indoor unit remote controller</li> <li>(2) Control by each outdoor unit using the COOL/HEAT selection remote controller</li> <li>(3) Batch control by outdoor unit group using the indoor unit remote controller</li> <li>(4) Batch control by outdoor unit group using the COOL/HEAT selection remote controller</li> </ol> </li> <li>■ In order to use the COOL/HEAT selection remote controller, set the DS1-1 on the outdoor unit PC board to OUT.</li> <li>■ For outdoor unit group control, set the system to "BATCH MASTER" or "SLAVE" while in "Setting mode 1". Then, make setting of COOL/HEAT batch address.</li> </ul>	
	2	Setting of low noise operation (*1)	<p>A. Use external input to step down the upper limit of the fan (factory set to Step 8), providing low noise level.</p> <ol style="list-style-type: none"> <li>(1) Mode 1: Step 6 or lower</li> <li>(2) Mode 2: Step 5 or lower</li> <li>(3) Mode 3: Step 4 or lower</li> </ol>	<ul style="list-style-type: none"> <li>■ Use the "External control adaptor for outdoor unit". Set to "External control adaptor for outdoor unit" with No. 12 of "Setting mode 2" and select the mode with No. 25. If necessary, set the "Capacity priority setting" to ON with No. 29.</li> </ul>
			<p>B. The low noise operation aforementioned is enabled in nighttime automatic low noise operation mode. Start time: Possible to select in the range of 20:00 to 24:00 hours. End time: Possible to select in the range of 06:00 to 08:00 hours. (Use the said time as a guide since the start time and the end time are estimated according to outdoor temperatures.)</p>	<ul style="list-style-type: none"> <li>■ Make this setting while in "Setting mode 2". Select a mode with No. 22 of "Setting mode 2". Select the start time with No. 26 and the end time with No. 27. If necessary, set the "Capacity priority setting" to ON with No. 29.</li> </ul>
	3	Setting of demand operation (*1)	<ul style="list-style-type: none"> <li>■ Used to place limits on the compressor operating frequency to control the upper limit of power consumption.               <ol style="list-style-type: none"> <li>(1) Mode 1 of Demand 1: 60% or less of rating</li> <li>(2) Mode 2 of Demand 1: 70% or less of rating</li> <li>(3) Mode 3 of Demand 1: 80% or less of rating</li> <li>(4) Demand 2: 40% or less of rating</li> </ol> </li> </ul>	<ul style="list-style-type: none"> <li>■ For setting with the use of "external control adapter": Set the system to "External control adaptor for outdoor unit" with No. 12 of Setting mode 2" and select the mode with No. 30.</li> <li>■ For setting only in "Setting mode 2": Set the system to Normal demand mode with No. 32 of "Setting mode 2" and select the mode with No. 30.</li> </ul>
	4	Setting of AirNet address	<ul style="list-style-type: none"> <li>■ Used to make address setting with AirNet connected.</li> </ul>	<ul style="list-style-type: none"> <li>■ Set the AirNet to an intended address using binary numbers with No. 13 of "Setting mode 2".</li> </ul>
	5	Setting of hot water heater	<ul style="list-style-type: none"> <li>■ Make this setting to conduct heating operation using the hot water heater.</li> </ul>	<ul style="list-style-type: none"> <li>■ Set No. 16 of "Setting mode 2" to ON.</li> </ul>
6	Setting of high static pressure	<ul style="list-style-type: none"> <li>■ Make this setting to operate a system with diffuser duct while in high static pressure mode. (Use this setting mode when shields are installed on upper floors or balconies.)</li> <li>* In order to mount the diffuser duct, remove the cover from the outdoor unit fan.</li> </ul>	<ul style="list-style-type: none"> <li>■ Set No. 18 of "Setting mode 2" to ON.</li> </ul>	

Setting item		Content and objective of setting	Overview of setting procedure	
Service setting	1	Indoor unit fan forced H operation	<ul style="list-style-type: none"> <li>Used to operate the indoor unit in the stopped state in forced H operation mode.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 5 of "Setting mode 2" to indoor unit forced fan H.</li> </ul>
	2	Indoor unit forced operation	<ul style="list-style-type: none"> <li>Used to operate the indoor unit in forced operation mode.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 6 of "Setting mode 2" to indoor unit forced operation mode.</li> </ul>
	3	Change of targeted evaporating temperature (in cooling)	<ul style="list-style-type: none"> <li>In cooling operation, used to change the targeted evaporating temperature for compressor capacity control.</li> </ul>	<ul style="list-style-type: none"> <li>Select high side or low side with No. 8 of "Setting mode 2".</li> </ul>
	4	Change of targeted condensing temperature (in heating)	<ul style="list-style-type: none"> <li>In heating operation, used to change the targeted condensing temperature for compressor capacity control.</li> </ul>	<ul style="list-style-type: none"> <li>Select high side or low side with No. 9 of "Setting mode 2".</li> </ul>
	5	Setting of defrost selection	<ul style="list-style-type: none"> <li>Used to change a temperature at which the defrost operation is initiated, thus making the initiation easy or hard.</li> </ul>	<ul style="list-style-type: none"> <li>Select fast side or slow side with No. 10 of "Setting mode 2".</li> </ul>
	6	Setting of sequential startup	<ul style="list-style-type: none"> <li>Used to start units not in sequence but simultaneously.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 11 of "Setting mode 2" to NONE.</li> </ul>
	7	Emergency operation (*1)	<ul style="list-style-type: none"> <li>If the compressor has a failure, used to prohibit the operation of compressor(s) concerned or outdoor unit(s) concerned and to conduct emergency operation of the system only with operable compressor(s) or outdoor unit(s).</li> </ul>	<ul style="list-style-type: none"> <li>Make this setting while in "Setting mode 2". For system with a single outdoor unit: Set with No. 19 or 42. For system with multiple outdoor units: Set with No. 38, 39, or 40.</li> </ul>
	8	Additional refrigerant charging (*1)	<ul style="list-style-type: none"> <li>If a necessary amount of refrigerant cannot be charged due to the stop of outdoor unit, operate the outdoor unit and then refill refrigerant.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 20 of "Setting mode 2" to ON and then charge refrigerant.</li> </ul>
	9	Refrigerant recovery mode (*1)	<ul style="list-style-type: none"> <li>Used to recover refrigerant on site. With operations of indoor and outdoor units prohibited, fully open the expansion valve of the indoor and outdoor units.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 21 of "Setting mode 2" to ON.</li> </ul>
	10	Vacuumping mode (*1)	<ul style="list-style-type: none"> <li>Used to conduct vacuuming on site. Fully open the expansion valves of the indoor and outdoor units, and energize part of solenoid valves. Use a vacuum pump to conduct vacuuming.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 21 of "Setting mode 2" to ON.</li> </ul>
	11	ENECUT test operation	<ul style="list-style-type: none"> <li>Used to forcedly turn ON the ENECUT. (Be noted this mode is not functional with the indoor unit remote controller turned ON.)</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 24 of "Setting mode 2" to ON.</li> </ul>
	12	Power transistor check mode	<ul style="list-style-type: none"> <li>Used for the troubleshooting of DC compressors. Inverter waveform output makes it possible to judge whether a malfunction results from the compressor or the PC board.</li> </ul>	<ul style="list-style-type: none"> <li>Set No. 28 of "Setting mode 2" to ON.</li> </ul>
	13	Setting of model with spare PC board	<ul style="list-style-type: none"> <li>In order to replace the PC board by a spare one, be sure to make model setting.</li> </ul>	<ul style="list-style-type: none"> <li>For this setting, set the DS2-2, -3, and-4 switches on the PC board to the model concerned.</li> </ul>

For setting items of (\*1), refer to detailed information provided on page 174 onward.

■ **Setting by dip switches**

Using dip switches on the PC board enables field setting shown below. However, make no changes of factory settings except for DS1-1.

Dipswitch		Setting item	Description
No.	Setting		
DS1-1	ON	Cool / Heat select	Used to set cool / heat select by Cool/Heat selector equipped with outdoor unit.
	OFF (Factory set)		
DS1-2 ~DS1-4	ON	Not used	Do not change the factory settings.
	OFF (Factory set)		
DS2-1 ~4	ON	Not used	Do not change the factory settings.
	OFF (Factory set)		

Setting at replacement by spare PC board



**Caution**

**DIP switch Setting after changing the main P.C.Board(A1P) to spare parts P.C.B.**

After the replacement by the spare PC board, be sure to make settings shown below. When you change the main P.C.Board(A1P) to spare parts P.C.B., please carry out the following setting.



**DIP Switch Detail**







DS No.	Item	Contents																																
DS1-1	Cool/Heat change over setting	ON	COOL/HEAT setting is made with the use of a Cool/Heat selector mounted to the outdoor unit.																															
		OFF (Factory setting of spare PC board)	COOL/HEAT setting is not made with the use of a Cool/Heat selector mounted to the outdoor unit.																															
DS1-2	Power supply specification	ON	200V class (220V)																															
		OFF (Factory setting of spare PC board)	400V class (380V)																															
DS1-3	Cooling only/Heat-pump setting	ON	Cooling only setting																															
		OFF (Factory setting of spare PC board)	Heat pump setting																															
DS1-4	Unit allocation setting	ON	Make the following settings according to allocation of unit. (All models are set to OFF at factory.)																															
DS2-1		OFF (Factory setting of spare PC board)	<table border="1"> <thead> <tr> <th></th> <th>Domestic Japan</th> <th>Overseas General</th> <th>Europe</th> </tr> </thead> <tbody> <tr> <td>DS1-4</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>DS2-1</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>		Domestic Japan	Overseas General	Europe	DS1-4	OFF	OFF	ON	DS2-1	OFF	ON	OFF																			
	Domestic Japan	Overseas General	Europe																															
DS1-4	OFF	OFF	ON																															
DS2-1	OFF	ON	OFF																															
DS2-2	Model setting	Make the following settings according to models of outdoor units. (All models are set to OFF at factory.)																																
DS2-3		<table border="1"> <thead> <tr> <th></th> <th>RXYQ5P</th> <th>RXYQ8P</th> <th>RXYQ10P</th> <th>RXYQ12P</th> <th>RXYQ14P</th> <th>RXYQ16P</th> <th>RXYQ18P</th> </tr> </thead> <tbody> <tr> <td>DS2-2</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>DS2-3</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> </tr> <tr> <td>DS2-4</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> </tbody> </table>		RXYQ5P	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P	DS2-2	OFF	OFF	ON	OFF	ON	OFF	ON	DS2-3	OFF	ON	ON	OFF	OFF	ON	ON	DS2-4	OFF	OFF	OFF	ON	ON	ON	ON
		RXYQ5P	RXYQ8P	RXYQ10P	RXYQ12P	RXYQ14P	RXYQ16P	RXYQ18P																										
DS2-2	OFF	OFF	ON	OFF	ON	OFF	ON																											
DS2-3	OFF	ON	ON	OFF	OFF	ON	ON																											
DS2-4	OFF	OFF	OFF	ON	ON	ON	ON																											
DS2-4																																		

\* If the DS1-1~1-4, DS2-2~2-4 setting has not been carried out, error code "UA" are displayed and unit can not be operated.



Refer "DS1-1~4, DS2-1~4 setting detail" on next page.

## "Detail of DS1-1~4, DS2-1~4 setting" (for Overseas general)

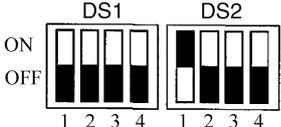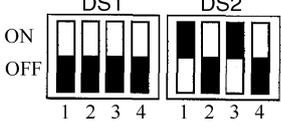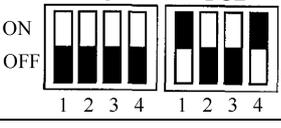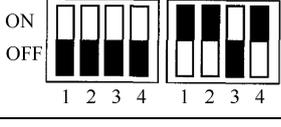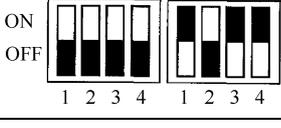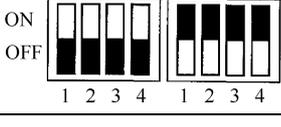Unit	Setting method ( ■ represents the position of switches)	
HEAT PUMP(5HP) RXYQ5PY1	 <p>Set DS2-1 to ON.</p>	
HEAT PUMP(8HP) RXYQ8PY1	 <p>Set DS2-1 and DS2-3 to ON.</p>	
HEAT PUMP(10HP) RXYQ10PY1	 <p>Set DS2-1, DS2-2 and DS2-3 to ON.</p>	
HEAT PUMP(12HP) RXYQ12PY1	 <p>Set DS2-1 and DS2-4 to ON.</p>	
HEAT PUMP(14HP) RXYQ14PY1	 <p>Set DS2-1, DS2-2 and DS2-4 to ON.</p>	
HEAT PUMP(16HP) RXYQ16PY1	 <p>Set DS2-1, DS2-3 and DS2-4 to ON.</p>	
HEAT PUMP(18HP) RXYQ18PY1	 <p>Set DS2-1, DS2-2, DS2-3, and DS2-4 to ON.</p>	

■ **Setting by pushbutton switches**


The following settings are made by pushbutton switches on PC board.  
 In case of multi-outdoor unit system, various items should be set with the master unit.  
 (Setting with the slave unit is disabled.)

The master unit and slave unit can be discriminated with the LED display as shown below.

LED display

	MODE H1P	TEST H2P	COOL/HEAT select			Low noise H6P	Demand H7P	Multi; H8P
			IND H3P	MASTER H4P	SLAVE H5P			
Single-outdoor-unit system	●	●	○	●	●	●	●	●
Outdoor-multi system	Master	●	○	●	●	●	●	○
	Slave 1	●	●	●	●	●	●	◐
	Slave 2	●	●	●	●	●	●	●

(Factory setting)

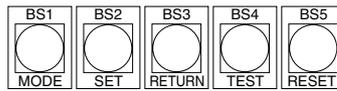

(V2760)

There are the following three setting modes.

① **Setting mode 1 (H1P off)**

Initial status (when normal) : Used to select the cool/heat setting. Also indicates during “abnormal”, “low noise control” and “demand control”.


② **Setting mode 2 (H1P on)**

Used to modify the operating status and to set program addresses, etc. Usually used in servicing the system.


③ **Monitor mode (H1P blinks)**

Used to check the program made in Setting mode 2.

■ **Mode changing procedure 1**

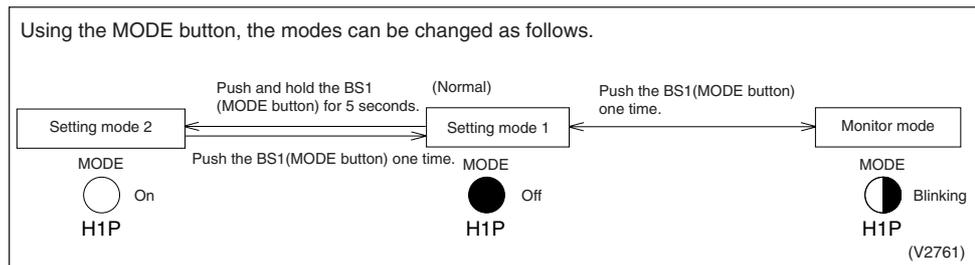

■ **Mode changing procedure 2**

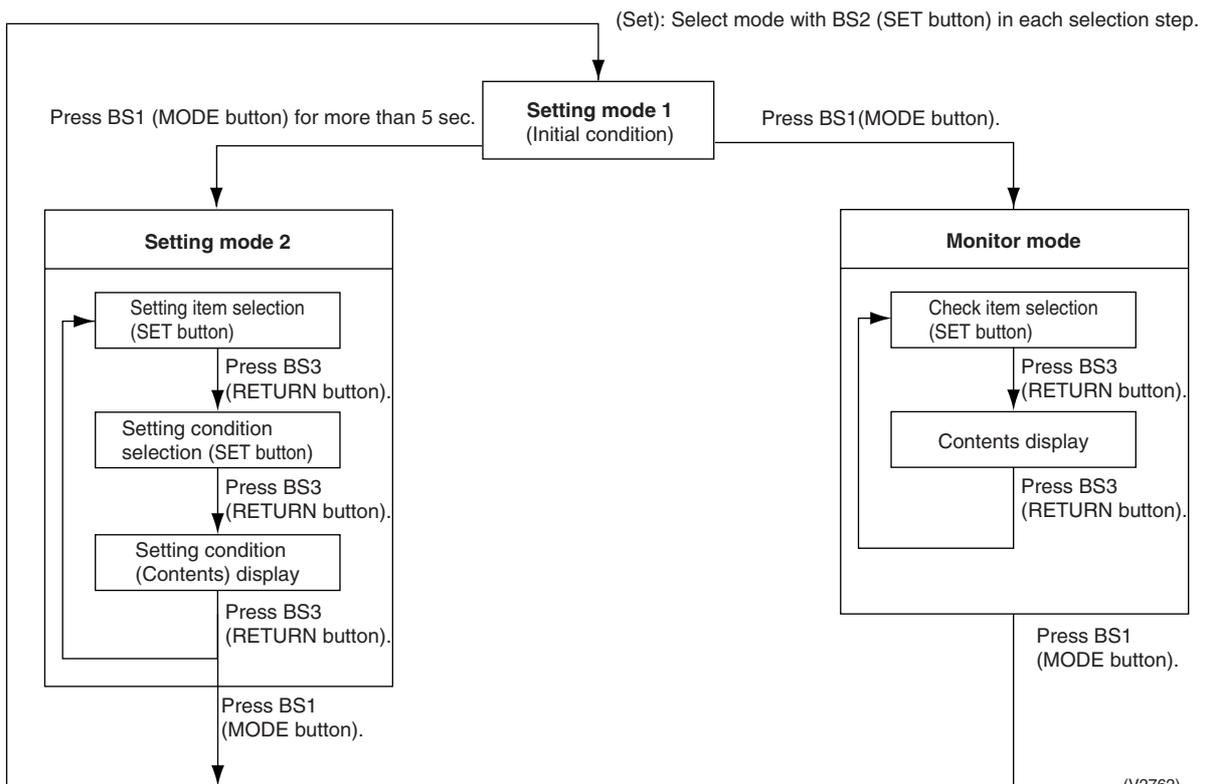


**a. "Setting mode 1"**


This mode is used to set and check the following items.

1. Set items ..... In order to make COOL/HEAT selection in a batch of outdoor unit group, change the setting.
  - COOL/HEAT selection (IND) ..... Used to select COOL or HEAT by individual outdoor unit (factory set).
  - COOL/HEAT selection (MASTER) ..... Used to select COOL or HEAT by outdoor unit group with the master unit.
  - COOL/HEAT selection (SLAVE) ..... Used to select COOL or HEAT by outdoor unit group with the slave unit.
2. Check items ..... The following items can be checked.
  - (1) Current operating conditions (Normal / Abnormal / In check operation)
  - (2) Setting conditions of COOL/HEAT selection (Individual / Batch master / Batch slave)
  - (3) Low noise operating conditions (In normal operation / In low noise operation)
  - (4) Demand operating conditions (In normal operation / In demand operation)

**Procedure for changing COOL/HEAT selection setting**

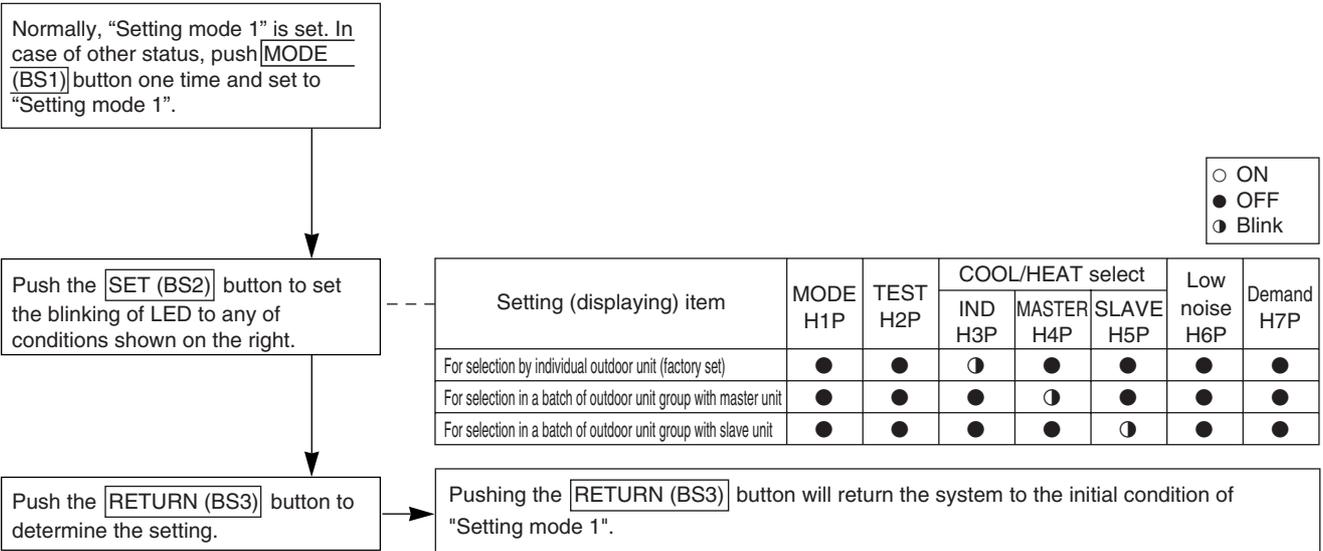

**Procedure for checking check items**

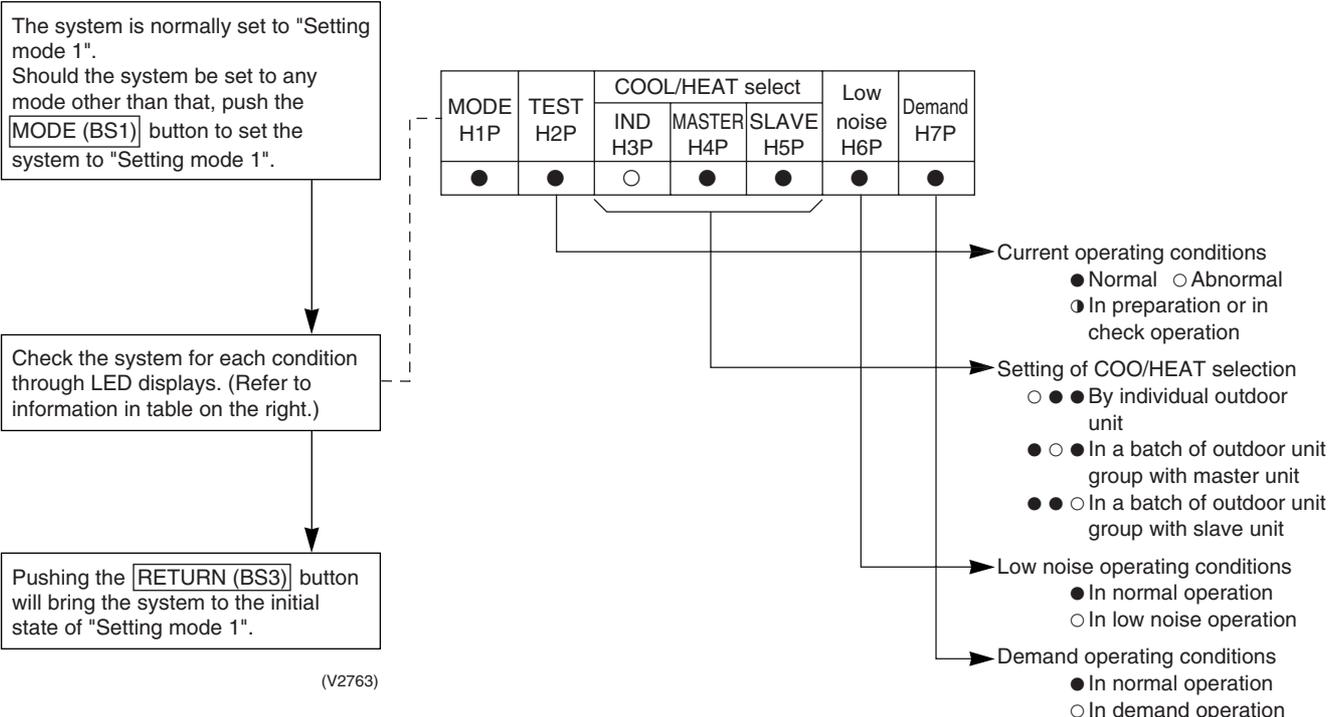

**b. “Setting mode 2”**

Push and hold the **MODE (BS1)** button for 5 seconds and set to “Setting mode 2”.

**<Selection of setting items>**

Push the **SET (BS2)** button and set the LED display to a setting item shown in the table on the right.  
 ↓  
 Push the **RETURN (BS3)** button and decide the item. (The present setting condition is blinked.)

**<Selection of setting conditions>**

Push the **SET (BS2)** button and set to the setting condition you want.  
 ↓  
 Push the **RETURN (BS3)** button and decide the condition.

Push the **RETURN (BS3)** button and set to the initial status of “Setting mode 2”.

\* If you become unsure of how to proceed, push the **MODE (BS1)** button and return to setting mode 1.

(V2764)

No.	Setting item	Description
0	Digital pressure gauge kit display	Used to make setting of contents to display on the digital pressure gauges (e.g. pressure sensors and temperature sensors)
1	Cool/heat unified address	Sets address for cool/heat unified operation.
2	Low noise/demand address	Address for low noise/demand operation
3	Test operation settings	Used to conduct test operation without making changes to the PCB and replacing the refrigerant, after the completion of maintenance.
5	Indoor unit forced fan H	Allows forced operation of indoor unit fan while unit is stopped. (H tap)
6	Indoor unit forced operation	Allows forced operation of indoor unit.
8	Te setting	Target evaporation temperature for cooling
9	Tc setting	Target condensation temperature for heating
10	Defrost changeover setting	Changes the temperature condition for defrost and sets to quick defrost or slow defrost.
11	Sequential operation setting	Sets sequential operation (Factory set to ON)
12	External low noise setting / Demand setting	Reception of external low noise or demand signal
13	AIRNET address	Set address for AIRNET.
16	Setting of hot water	Make this setting to conduct heating operation with hot water heater.
18	High static pressure setting	Make this setting in the case of operating in high static pressure mode with diffuser duct mounted. (In order to mount the diffuser duct, remove the cover from the outdoor unit fan.)
19	Emergency operation (STD compressor operation prohibited)	Used to operate system only with inverter compressor when STD compressor malfunctions. This is a temporary operation extremely impairing comfortable environment. Therefore, prompt replacement of the compressor is required. (This operation, however, is not set with RXYQ5, 8P.)
20	Additional refrigerant charge operation setting	Carries out additional refrigerant charge operation.
21	Refrigerant recovery/vacuumping mode setting	Sets to refrigerant recovery or vacuumping mode.
22	Night-time low noise setting	Sets automatic nighttime low noise operation in a simple way. The operating time is based on “Starting set” and “Ending set”.
24	ENECUT test operation	Used to forcedly turn ON the ENECUT. (Be noted that the ENECUT is only functional with outdoor unit in the stopped state - Japanese domestic model only.)
25	Setting of external low noise level	Sets low noise level when the low noise signal is input from outside.
26	Night-time low noise operation start setting	Sets starting time of nighttime low noise operation. (Night-time low noise setting is also required.)
27	Night-time low noise operation end setting	Sets ending time of nighttime low noise operation. (Night-time low noise setting is also required.)
28	Power transistor check mode *Check after disconnection of compressor wires	Used for trouble diagnosis of DC compressor. Since the waveform of inverter is output without wiring to the compressor, it is convenient to probe whether the trouble comes from the compressor or PC board.
29	Capacity precedence setting	If the capacity control is required, the low noise control is automatically released by this setting during carrying out low noise operation and nighttime low noise operation.
30	Demand setting 1	Changes target value of power consumption when demand control 1 is input.
32	Normal demand setting	Normally enables demand control 1 without external input. (Effective to prevent a problem that circuit breaker of small capacity is shut down due to large load.)

No.	Setting item	Description
35	Setting of difference in elevation for the outdoor unit	Make the setting when the outdoor unit is installed 40 m or more below the indoor unit.
38	Emergency operation (Setting for the master unit operation prohibition in multi-outdoor-unit system)	Used to temporarily prohibit the applicable outdoor unit from operating should there be any faulty part in multi-outdoor-unit system. Since the comfortable environment is extremely impaired, prompt replacement of the part is required.
39	Emergency operation (Setting for the slave unit 1 operation prohibition in multi-outdoor-unit system)	
40	Emergency operation (Setting for the slave unit 2 operation prohibition in multi-outdoor-unit system)	
42	Emergency operation (prohibition of INV compressor operation)	If the INV compressor has a failure, used to run the system only with STD compressor(s). This is a temporary running of the system until the compressor is replaced, thus making comfort extremely worse. Therefore, it is recommended to replace the compressor as soon as possible. (Be noted this setting is not available on model RXYQ5, 8PY1.)

No.	Setting item display								Setting condition display	
	Setting item	MODE H1P	TEST H2P	C/H selection			Low noise H6P	Demand H7P		
				IND H3P	Master H4P	Slave H5P				
0	Digital pressure gauge kit display	<input type="radio"/>	<input checked="" type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/>					
									Binary number 1	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(4 digits) ~	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									15	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
1	Cool / Heat Unified address	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> *				
									Binary number 1	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									31	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
2	Low noise/demand address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> *
									Binary number 1	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									31	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
3	Test operation (Refer to the description on page 180)	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Test operation: ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Test operation: OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
5	Indoor forced fan H	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Normal operation	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Indoor forced fan H	<input type="radio"/> <input checked="" type="radio"/>
6	Indoor forced operation	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Normal operation	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Indoor forced operation	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
8	Te setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	High	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Low	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
9	Tc setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	High	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Low	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
10	Defrost changeover setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Quick defrost	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Normal (factory setting)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Slow defrost	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
11	Sequential operation setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
12	External low noise/demand setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	External low noise/demand: NO	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									External low noise/demand: YES	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
13	Airnet address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> *
									Binary number 1	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									(6 digits) ~	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
									63	<input type="radio"/>
16	Setting of hot water heater	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
18	High static pressure setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	High static pressure setting: OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									High static pressure setting: ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
19	Emergency operation (STD compressor is inhibited to operate.)	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> *
									STD 1, 2 operation: Inhibited	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
									STD 2 operation: Inhibited	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
20	Additional refrigerant charging operation setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Refrigerant charging: OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Refrigerant charging: ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
21	Refrigerant recovery/vacuumping mode setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Refrigerant recovery / vacuumping: OFF	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Refrigerant recovery / vacuumping: ON	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
22	Night-time low noise setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> *
									Level 1 (outdoor fan with 6 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
									Level 2 (outdoor fan with 5 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
									Level 3 (outdoor fan with 4 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>



### c. Monitor mode

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

**<Selection of setting item>**

Push the **SET (BS2)** button and set the LED display to a setting item.

**<Confirmation on setting contents>**

Push the **RETURN (BS3)** button to display different data of set items.

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

\* Push the **MODE (BS1)** button and returns to "Setting mode 1".

(V2765)

No.	Setting item	LED display							Data display
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	
0	Various settings	●	●	●	●	●	●	●	Lower 4 digits
1	C/H unified address	●	●	●	●	●	●	○	Lower 6 digits
2	Low noise/demand address	●	●	●	●	●	○	●	
3	Not used	●	●	●	●	●	○	○	
4	Airnet address	●	●	●	●	○	●	●	
5	Number of connected indoor units	●	●	●	●	○	●	○	
6	Number of connected BS units	●	●	●	●	○	○	●	
7	Number of connected zone units (excluding outdoor and BS unit)	●	●	●	●	○	○	○	Lower 4 digits: upper
8	Number of outdoor units	●	●	●	○	●	●	●	
9	Number of connected BS units	●	●	●	○	●	●	○	Lower 4 digits: lower
10	Number of connected BS units	●	●	●	○	●	○	●	Lower 6 digits
11	Number of zone units (excluding outdoor and BS unit)	●	●	●	○	●	○	○	Lower 4 digits: upper
12	Number of terminal blocks	●	●	●	○	○	●	●	Lower 4 digits: lower
13	Number of terminal blocks	●	●	●	○	○	●	○	Malfunction code table Refer page 216.
14	Contents of malfunction (the latest)	●	●	●	○	○	○	●	
15	Contents of malfunction (1 cycle before)	●	●	●	○	○	○	○	
16	Contents of malfunction (2 cycle before)	●	●	○	●	●	●	●	
20	Contents of retry (the latest)	●	●	○	●	○	●	●	Lower 6 digits
21	Contents of retry (1 cycle before)	●	●	○	●	○	●	○	
22	Contents of retry (2 cycle before)	●	●	○	●	○	○	●	
25	Number of multi connection outdoor units	●	●	○	○	●	●	○	


The numbers in the "No." column represent the number of times to press the SET (BS2) button.

#### Setting item 0 Display contents of "Number of units for various settings"

EMG operation / backup operation setting	ON	●	●	●	○	●	●	●
	OFF	●	●	●	●	●	●	●
Defrost select setting	Short	●	●	●	●	○	●	●
	Medium	●	●	●	●	●	●	●
	Long	●	●	●	●	●	●	●
Te setting	H	●	●	●	●	●	○	●
	M	●	●	●	●	●	●	●
	L	●	●	●	●	●	●	●
Tc setting	H	●	●	●	●	●	●	○
	M	●	●	●	●	●	●	●
	L	●	●	●	●	●	●	●


Push the SET button and match with the LEDs No. 1 - 15, push the RETURN button, and confirm the data for each setting.

★ Data such as addresses and number of units is expressed as binary numbers; the two ways of expressing are as follows:

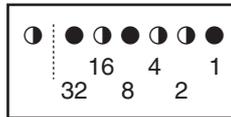

The No. 1 cool/heat unified address is expressed as a binary number consisting of the lower 6 digits. (0 - 63)

In ① the address is 010110 (binary number), which translates to  $16 + 4 + 2 = 22$  (base 10 number). In other words, the address is 22.

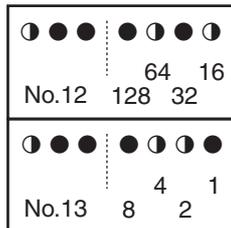

The number of terminal blocks for No. 12 and 13 is expressed as an 8-digit binary number, which is the combination of four upper, and four lower digits for No. 12 and 13 respectively. (0 - 128)

In ② the address for No. 12 is 0101, the address for No. 13 is 0110, and the combination of the two is 01010110 (binary number), which translates to  $64 + 16 + 4 + 2 = 86$  (base 10 number). In other words, the number of terminal block is 86.

★ See the preceding page for a list of data, etc. for No. 0 - 25.


## 3.2.2 Cool / Heat Mode Switching

There are the following 4 cool/heat switching modes.

- ① Set cool/heat separately for each outdoor unit system by indoor unit remote controller.
- ② Set cool/heat separately for each outdoor unit system by cool/heat selector.
- ③ Set cool/heat for more than one outdoor unit system simultaneously in accordance with unified master outdoor unit by indoor unit remote controller.
- ④ Set cool/heat for more than one outdoor unit system simultaneously in accordance with unified master outdoor unit by cool/heat switching remote controller.

### ① Set Cool / Heat Separately for Each Outdoor Unit System by Indoor Unit Remote Controller

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PC board DS1-1 to IN (factory set).
- ◆ Set cool/heat switching to IND (individual) for “Setting mode 1” (factory set).
- ◆ Set the master unit (= indoor unit having the right to select the cooling/heating operation mode).

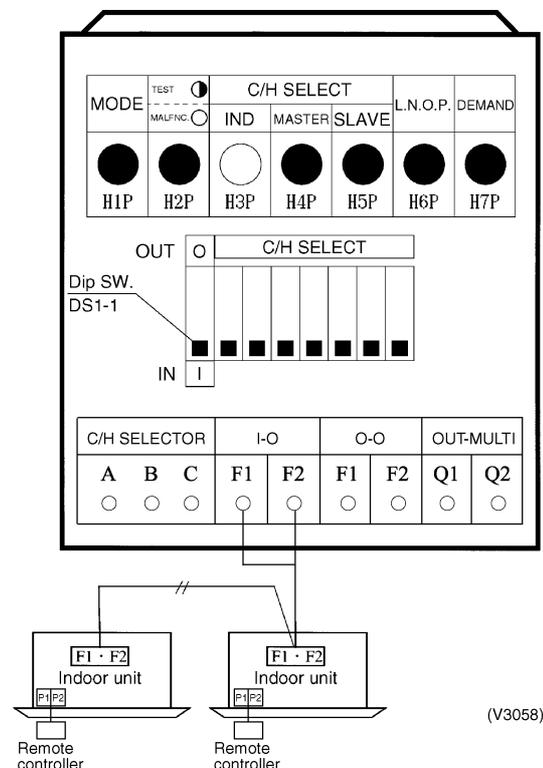

<Set the master unit (= indoor unit having the right to select the cooling/heating operation mode).>

#### In the case of wired remote controllers

- After the check operation, “**CHANGEOVER UNDER CONTROL**” is flashing in all connected remote controllers.
- Select an indoor unit to be used as the master unit in accordance with the request from the customer. (It is recommended to select an indoor unit which will be used most often as the master unit.)
- Press the operation mode selector button in the remote controller of the indoor unit selected as the master unit.
- In that remote controller, “**CHANGEOVER UNDER CONTROL**” disappears. That remote controller will control changeover of the cooling/heating operation mode.
- In other remote controllers, “**CHANGEOVER UNDER CONTROL**” lights.


For the details, refer to the installation manual supplied together with the indoor unit.

#### In the case of wireless remote controllers

- After the check operation, the timer lamp is flashing in all connected indoor units.
- Select an indoor unit to be used as the master unit in accordance with the request from the customer. (It is recommended to select an indoor unit which will be used most often as the master unit.)
- Press the operation selector mode button in the remote controller of the indoor unit selected as the master unit. A “peep” sound is emitted, and the timer lamp turns off in all indoor units.
- That indoor unit will control changeover of the cooling/heating operation mode.


② Set Cool / Heat Separately for Each Outdoor Unit System by Cool / Heat Selector

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PC board DS1-1 to OUT (factory set).
- ◆ Set cool/heat switching to IND (individual) for "Setting mode 1" (factory set).

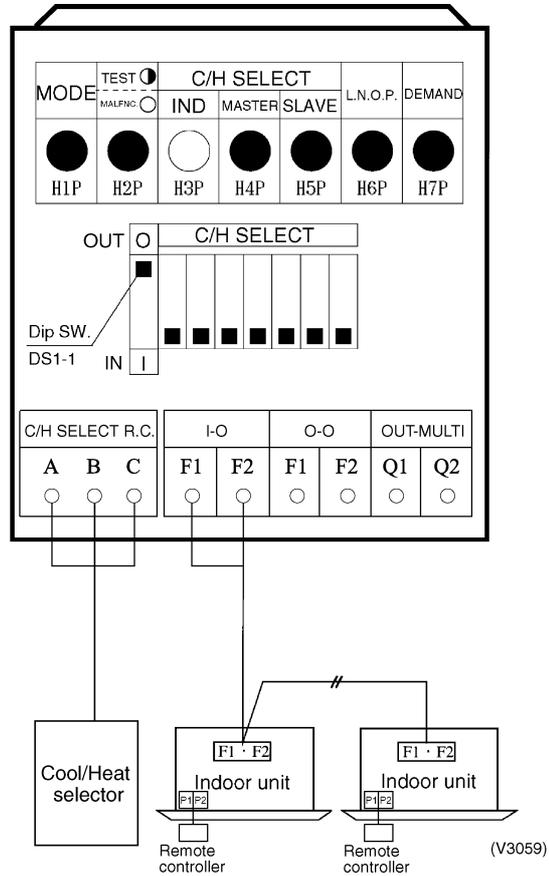

③ Set Cool / Heat for More Than One Outdoor Unit System Simultaneously in Accordance with Unified Master Outdoor Unit by Indoor Unit Remote Controller


- ◆ Install the external control adaptor for outdoor unit on either the outdoor-outdoor, indoor-outdoor transmission line.
- ◆ Set outdoor unit PC board DS1-1 to IN (factory set).
- ◆ In setting mode 1, set the outdoor unit you want to give cool/heat selection permission to as the group master, and set the other outdoor units as group slave units.
- ◆ Set the outdoor unit external control adapter SS1 to BOTH (factory set) or C/H, and SS2 to OFF (factory set).

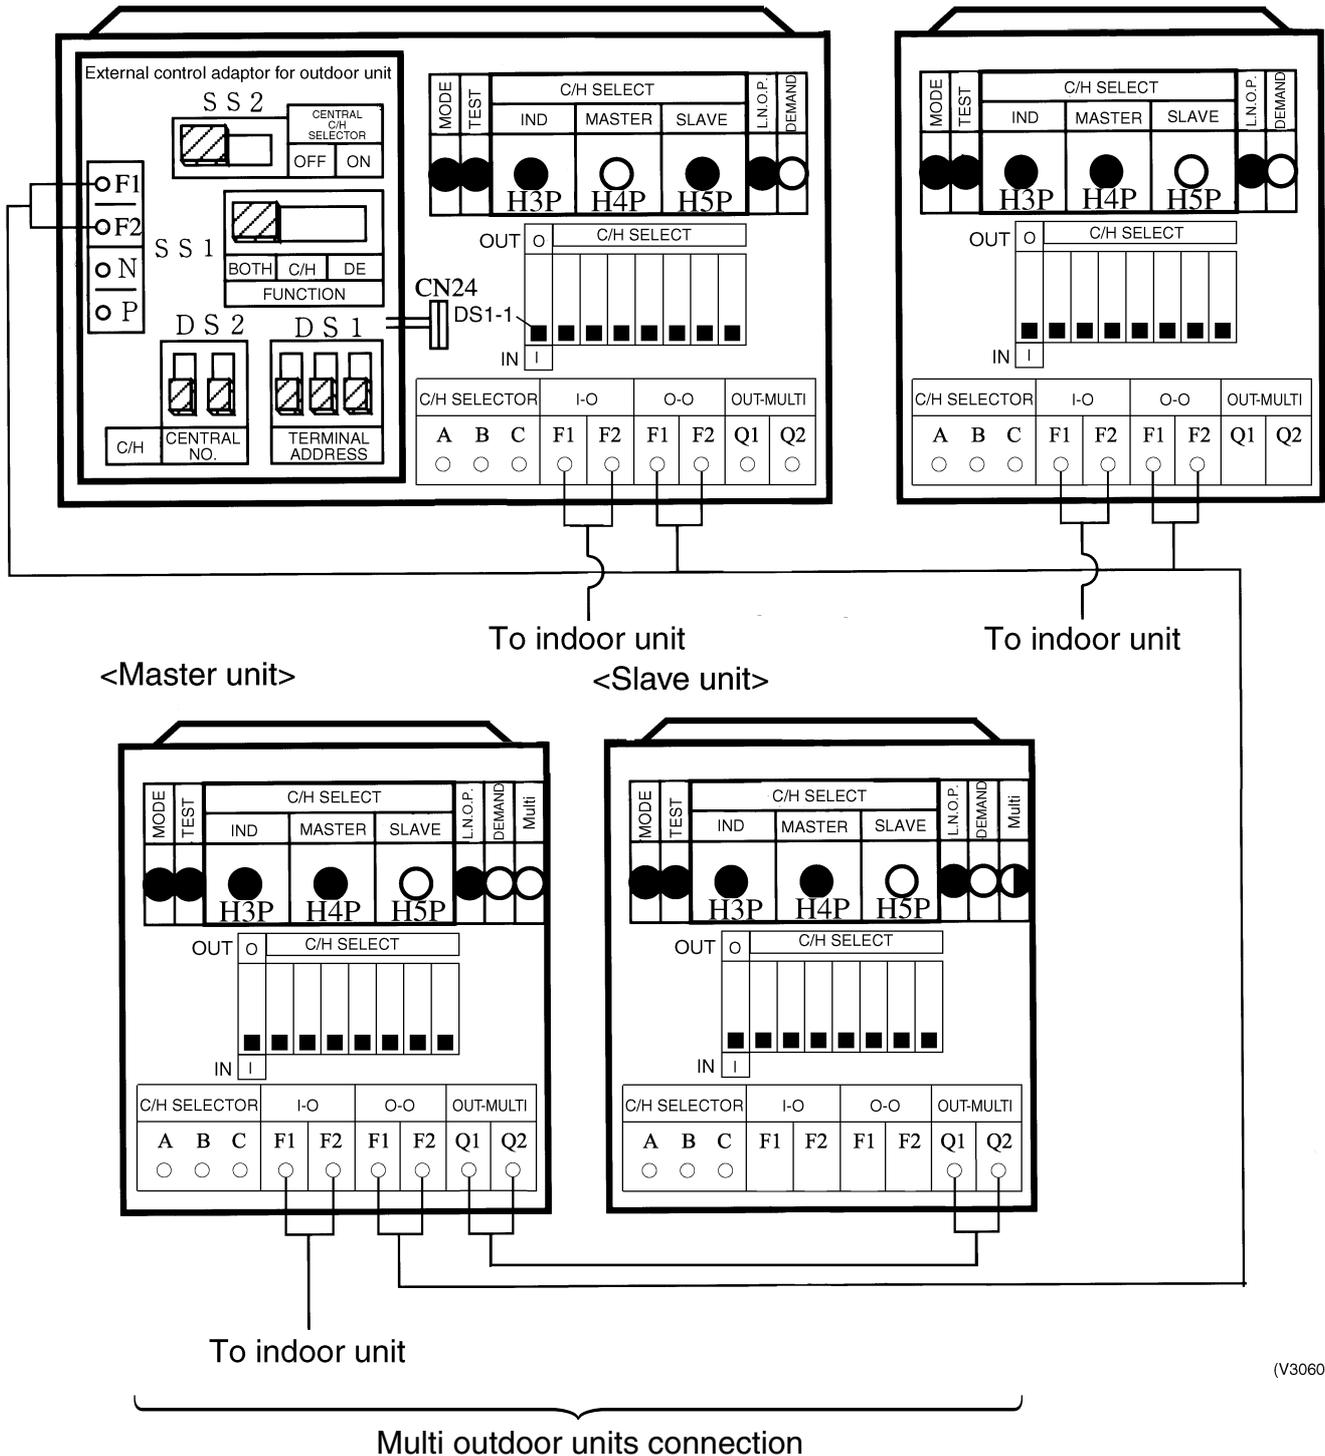

(V3060)


④ Set Cool / Heat for More Than One Outdoor Unit System Simultaneously in Accordance with Unified Master Outdoor Unit by Cool / Heat Selector

- ◆ Install the external control adapter for outdoor unit on either the outdoor-outdoor, indoor-outdoor transmission line.
- ◆ Mount the COOL/HEAT selector to the master outdoor unit for the unified control.
- ◆ Set the DS1-1 on the PC board of master outdoor unit to OUT.
- ◆ In setting mode 1, set the outdoor unit you want to give cool/heat selection permission to as the group master, and set the other outdoor units as group slave units.
- ◆ Set the outdoor unit external control adapter SS1 to BOTH (factory set) or C/H, and SS2 to OFF (factory set).

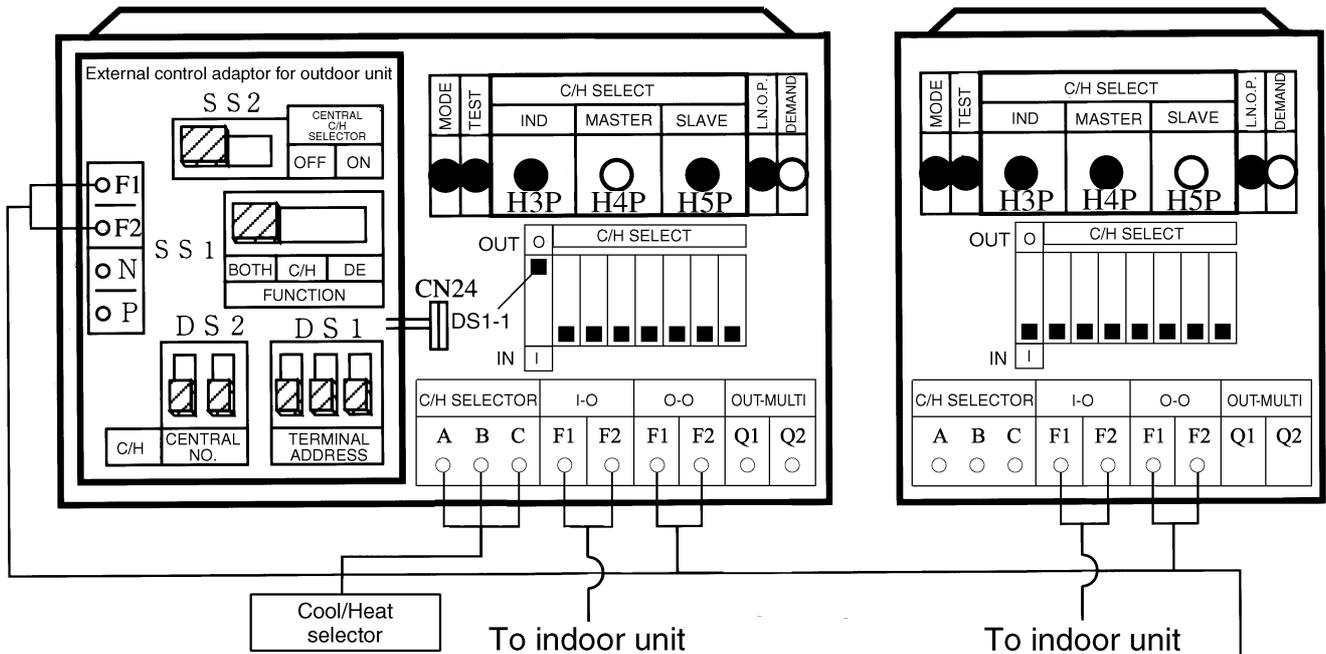

<Master unit>

<Slave unit>

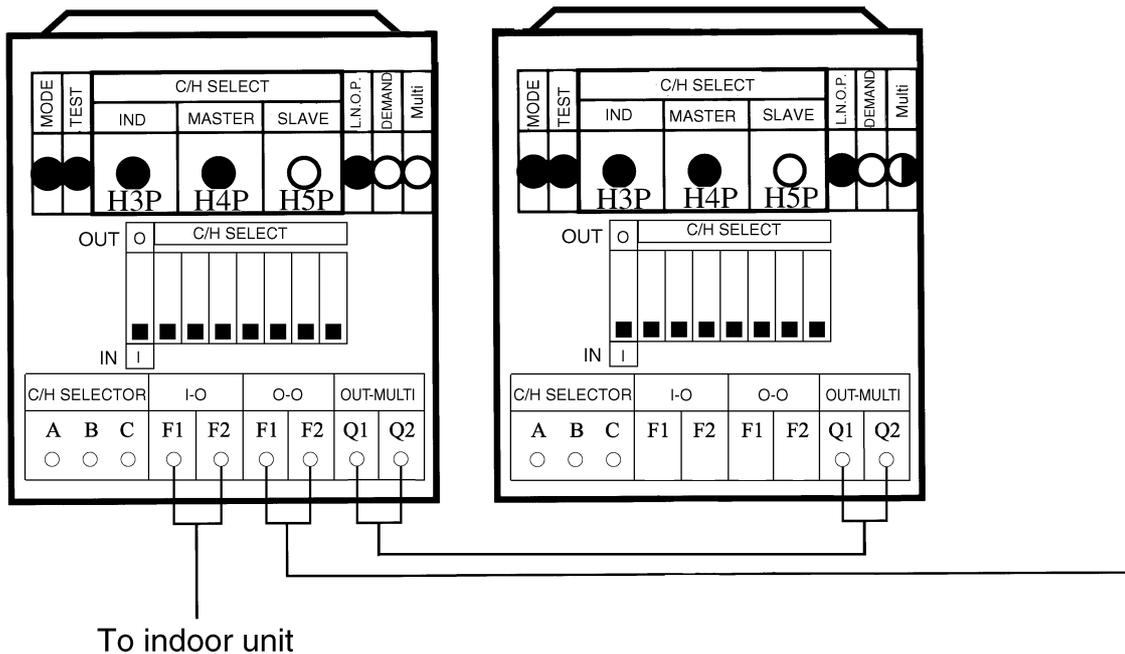


To indoor unit

Multi outdoor units connection

(V3060-1)

**Supplementation on ③ and ④.**

When switching cool/heat for each adapter PC board with the use of more than one adapter PC board, set the address of the external control adaptor for outdoor unit PC board DS1 and DS2 so that it matches the unified cool/heat address of outdoor unit main PC board.

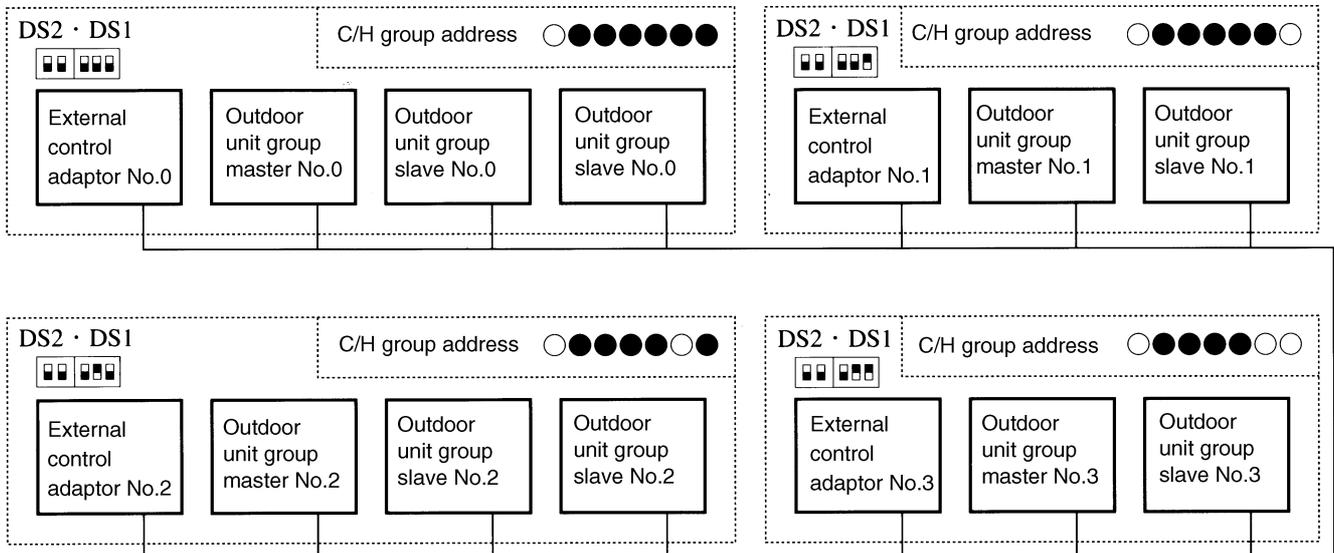

(V2723)

**Address setting for ③ and ④ (Set lower 5 digits with binary number.) [No.0 to No.31]**

Address No.	Outdoor unit PC board LED Set with setting mode 2		External control adaptor for outdoor unit	
	DS2	DS1	DS2	DS1
No 0	○ ●	● ● ● ● ● 0		
No 1	○ ●	● ● ● ● ○ 1		
No 2	○ ●	● ● ● ○ ● 2		
No 3	○ ●	● ● ● ○ ○ 3		
No 4	○ ●	● ● ○ ● ● 4		
}	}	}	}	}
No 30	○ ●	○ ○ ○ ○ ● 30		
No 31	○ ●	○ ○ ○ ○ ○ 31		

○ ON    ● OFF    Upper position (ON)    lower position (OFF)  
 (The shaded part shows knob)

(V2724)

### 3.2.3 Setting of Low Noise Operation and Demand Operation

#### Setting of Low Noise Operation

By connecting the external contact input to the low noise input of the outdoor unit external control adapter (optional), you can lower operating noise by 2-3 dB.

Setting	Content
Mode 1	Set the outdoor unit fan to Step 6 or lower.
Mode 2	Set the outdoor unit fan to Step 5 or lower.
Mode 3	Set the outdoor unit fan to Step 4 or lower.


#### A. When the low noise operation is carried out by external instructions (with the use of the external control adapter for outdoor unit)

1. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/demand operation) to "YES".
2. If necessary, while in "Setting mode 2", select the setting condition (i.e., "Mode 1", "Mode 2", or "Mode 3") for set item No. 25 (Setting of external low noise level).
3. If necessary, while in "Setting mode 2", set the setting condition for the set item No. 29 (Setting of capacity precedence) to "ON".  
(If the condition is set to "ON", when the air-conditioning load reaches a high level, the low noise operation command will be ignored to put the system into normal operation mode.)

#### B. When the low noise operation is carried out automatically at night (The external control adapter for outdoor unit is not required)


1. While in "Setting mode 2", select the setting condition (i.e., "Mode 1", "Mode 2", or "Mode 3") for set item No. 22 (Setting of nighttime low noise level).
2. If necessary, while in "Setting mode 2", select the setting condition (i.e., "20:00", "22:00", or "24:00") for set item No. 26 (Setting of start time of nighttime low noise operation).  
(Use the start time as a guide since it is estimated according to outdoor temperatures.)
3. If necessary, while in "Setting mode 2", select the setting condition (i.e., "06:00", "07:00", or "08:00") for set item No. 27 (Setting of end time of nighttime low noise operation).  
(Use the end time as a guide since it is estimated according to outdoor temperatures.)
4. If necessary, while in "Setting mode 2", set the setting condition for set item No. 29 (Setting of capacity precedence) to "ON".  
(If the condition is set to "ON", when the air-conditioning load reaches a high level, the system will be put into normal operation mode even during nighttime.)

Image of operation in the case of A

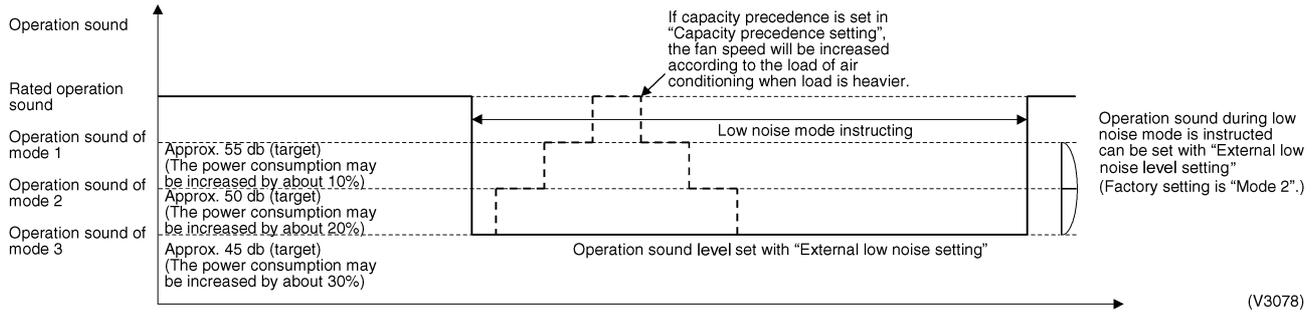


(V3078)

Image of operation in the case of B

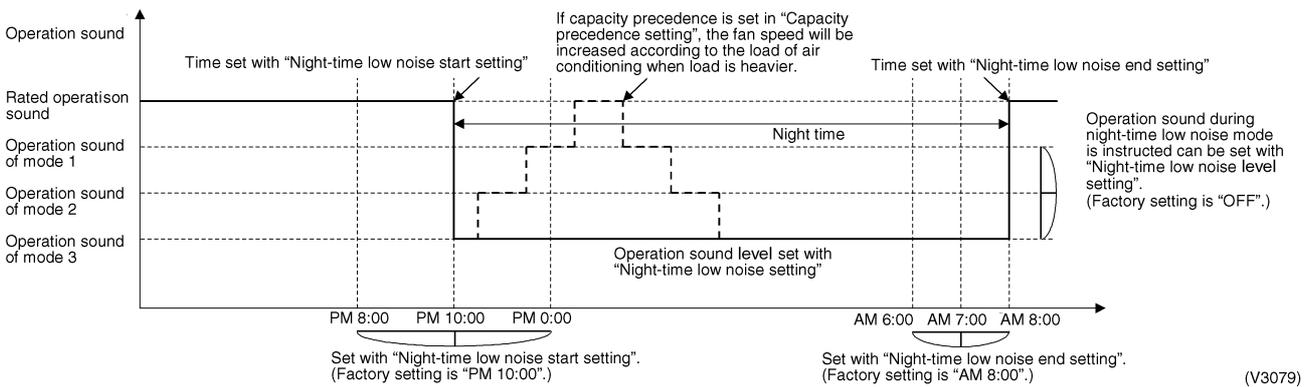

(V3079)

Image of operation in the case of A and B

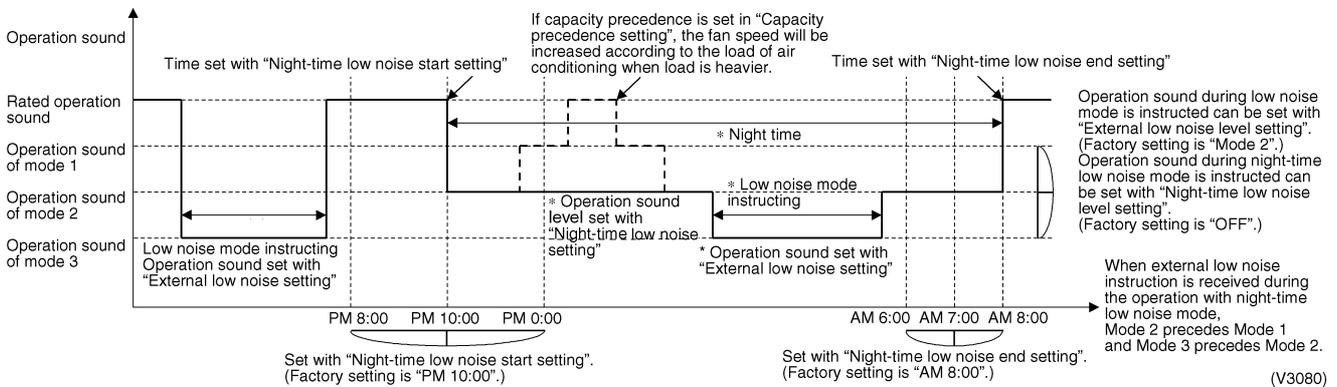

(V3080)

### Setting of Demand Operation

By connecting the external contact input to the demand input of the outdoor unit external control adapter (optional), the power consumption of unit operation can be saved suppressing the compressor operating condition.

Set item	Condition	Content
Demand 1	Mode 1	The compressor operates at approx. 60% or less of rating.
	Mode 2	The compressor operates at approx. 70% or less of rating.
	Mode 3	The compressor operates at approx. 80% or less of rating.
Demand 2	—	The compressor operates at approx. 40% or less of rating.


#### **A. When the demand operation is carried out by external instructions (with the use of the external control adapter for outdoor unit).**

1. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/demand operation) to "YES".
2. If necessary, while in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.


#### **B. When the normal demand operation is carried out. (Use of the external control adapter for outdoor unit is not required.)**

1. While in "Setting mode 2", make setting of the set item No. 32 (Setting of constant demand) to "ON".
2. While in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.


**Image of operation in the case of A**

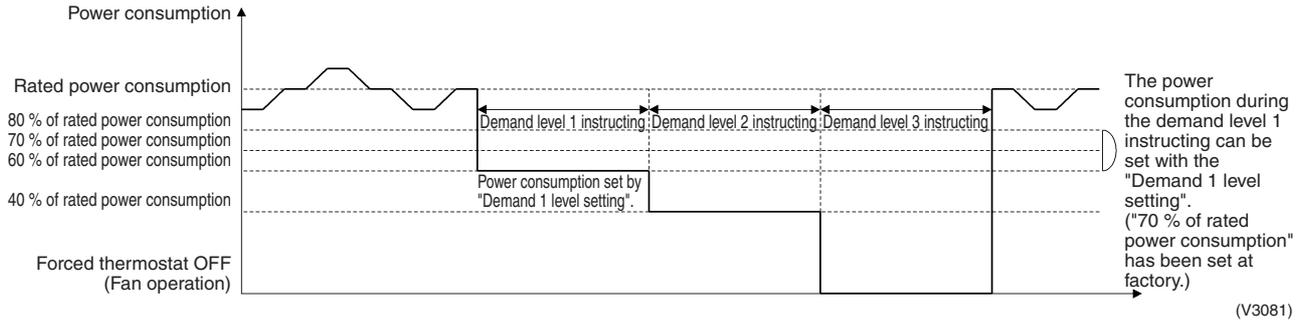

**Image of operation in the case of B**

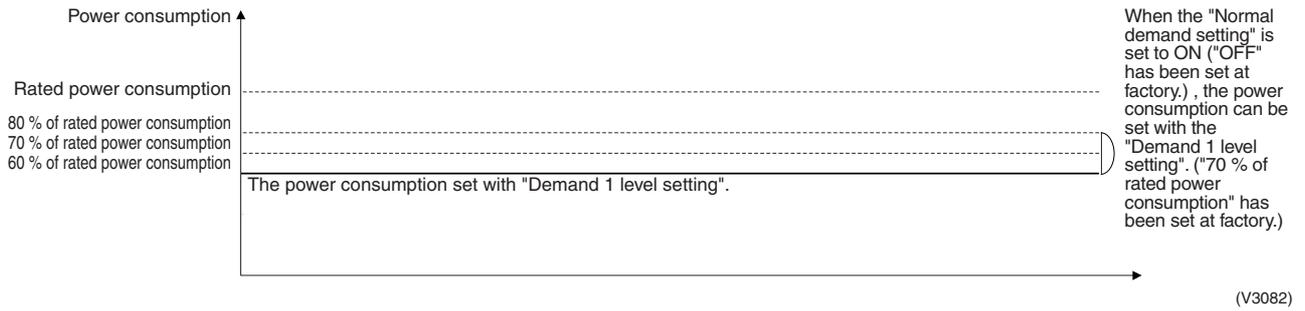

**Image of operation in the case of A and B**

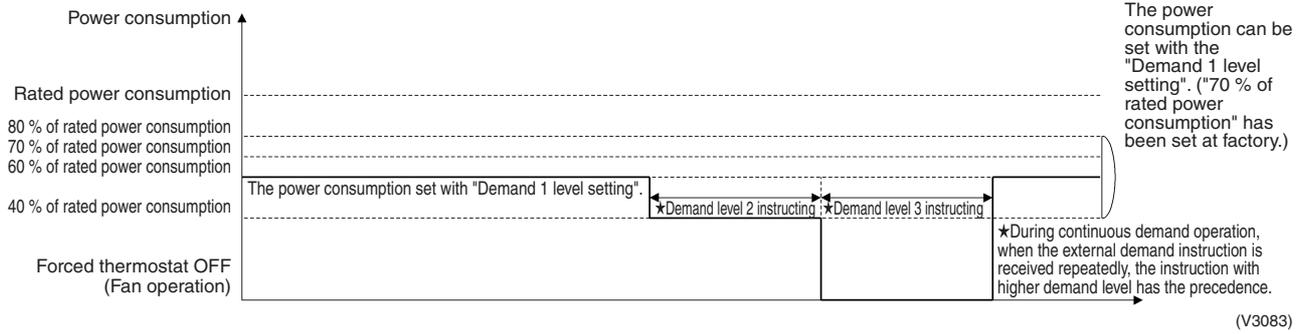

---

## Detailed Setting Procedure of Low Noise Operation and Demand Control

### 1. Setting mode 1 (H1P off)

- ① In setting mode 2, push the BS1 (MODE button) one time. → Setting mode 2 is entered and H1P lights.  
During the setting mode 1 is displayed, “In low noise operation” and “In demand control” are displayed.

### 2. Setting mode 2 (H1P on)

- ① In setting 1, push and hold the BS1 (MODE button) for more than 5 seconds. → Setting mode 2 is entered and H1P lights.
- ② Push the BS2 (SET button) several times and match the LED display with the Setting No. you want.
- ③ Push the BS3 (RETURN button) one time, and the present setting content is displayed.  
→ Push the BS2 (SET button) several times and match the LED display with the setting content (as shown below) you want.
- ④ Push the BS3 (RETURN button) two times. → Returns to ①.
- ⑤ Push the BS1 (MODE button) one time. → Returns to the setting mode 1 and turns H1P off.

○: ON ●: OFF ◐: Blink

Setting No.	Setting contents	① Setting No. indication							② Setting No. indication							Setting contents	③ Setting contents indication (Initial setting)							
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P		H1P	H2P	H3P	H4P	H5P	H6P	H7P	
		12	External low noise / Demand setting	○	●	●	●	●	●	●	○	●	●	○	○		●	●	NO (Factory setting)	○	●	●	●	●
22	Night-time low noise setting														YES	○	●	●	●	●	●	◐	●	
		OFF (Factory setting)	○	●	●	●	●	●	●	●	●	●	●	Mode 1	○	●	●	●	●	●	●	◐		
		Mode 2	○	●	●	●	●	●	●	●	●	●	●	Mode 3	○	●	●	●	●	●	●	◐		
		Mode 3	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	●	◐		
25	External low noise setting														Mode 1	○	●	●	●	●	●	●	◐	
		Mode 2 (Factory setting)	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	●	◐		
		Mode 3	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	◐	●	●	●		
26	Night-time low noise start setting														PM 8:00	○	●	●	●	●	●	●	◐	
		PM 10:00 (Factory setting)	○	●	●	●	●	●	●	●	●	●	●	PM 0:00	○	●	●	●	●	◐	●	●		
		PM 0:00	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	●	◐		
27	Night-time low noise end setting														AM 6:00	○	●	●	●	●	●	●	◐	
		AM 7:00	○	●	●	●	●	●	●	●	●	●	●	AM 8:00 (Factory setting)	○	●	●	●	●	◐	●	●		
		AM 8:00 (Factory setting)	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	●	◐		
29	Capacity precedence setting														Low noise precedence (Factory setting)	○	●	●	●	●	●	●	◐	
		Capacity precedence	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	◐	●		
30	Demand setting 1														60 % of rated power consumption	○	●	●	●	●	●	●	◐	
		70 % of rated power consumption (Factory setting)	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	◐	●		
		80 % of rated power consumption	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	◐	●	●	●		
32	Normal demand setting														OFF (Factory setting)	○	●	●	●	●	●	●	◐	
		ON	○	●	●	●	●	●	●	●	●	●	●		○	●	●	●	●	●	◐	●		

Setting mode indication section

Setting No. indication section

Set contents indication section

### 3.2.4 Setting of Refrigerant Recovery Mode

When carrying out the refrigerant collection on site, fully open the respective expansion valve of indoor and outdoor units.

All indoor and outdoor unit's operation are prohibited.

#### [Operation procedure]

- ① In **setting mode 2** with units in stop mode, set "Refrigerant Recovery / Vacuuming mode" to ON. The respective expansion valve of indoor and outdoor units are fully opened. (H2P turns to display "TEST OPERATION" (blinks), "TEST OPERATION" and "UNDER CENTRALIZED CONTROL" are displayed on the remote controller, and the all indoor / outdoor unit operation is prohibited.  
After setting, do not cancel "Setting Mode 2" until completion of refrigerant recovery operation.
- ② Collect the refrigerant using a refrigerant recovery unit. (See the instruction attached to the refrigerant recovery unit for more detail.)
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

### 3.2.5 Setting of Vacuuming Mode

In order to perform vacuuming operation at site, fully open the expansion valves of indoor and outdoor units and turn on some solenoid valves.


**[Operating procedure]**

- ① With **Setting Mode 2** while the unit stops, set "Refrigerant recovery / Vacuuming mode" to ON. The expansion valves of indoor and outdoor units fully open and some of solenoid valves open.  
(H2P blinks to indicate the test operation, and the remote controller displays "Test Operation" and "Under centralized control", thus prohibiting operation.)  
After setting, do not cancel "Setting Mode 2" until completion of Vacuuming operation.
- ② Use the vacuum pump to perform vacuuming operation.
- ③ Press Mode button "BS1" once and reset "Setting Mode 2".

### 3.2.6 Check Operation Detail

**CHECK OPERATION FUNCTION**

(Press the MODE button BS1 once and set to SETTING MODE 1 (H1P: OFF))

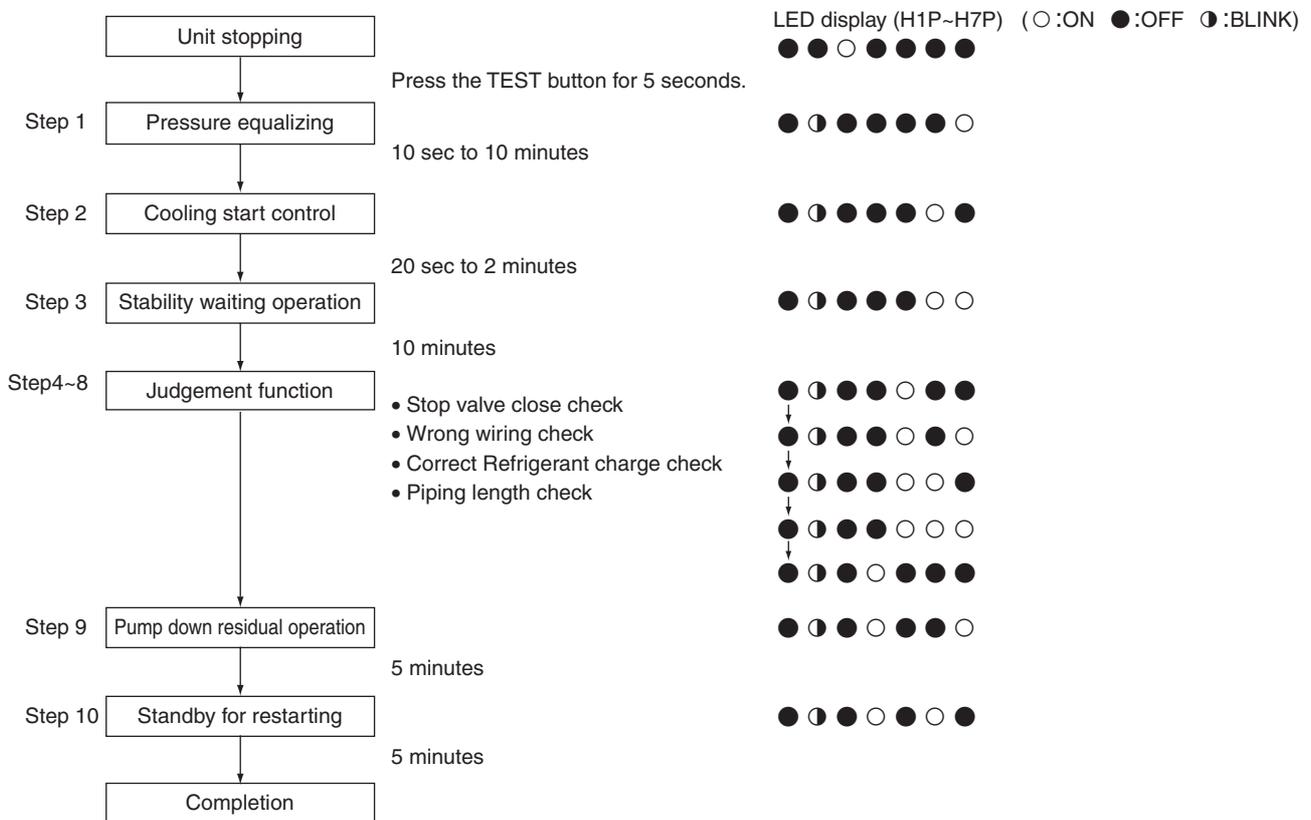


# Part 6

## Troubleshooting

1. Symptom-based Troubleshooting .....	201
2. Troubleshooting by Remote Controller .....	204
2.1 The INSPECTION / TEST Button.....	204
2.2 Self-diagnosis by Wired Remote Controller .....	205
2.3 Self-diagnosis by Wireless Remote Controller .....	206
2.4 Operation of The Remote Controller's Inspection / Test Operation Button .....	209
2.5 Remote Controller Service Mode .....	210
2.6 Remote Controller Self-Diagnosis Function .....	212
3. Troubleshooting by Indication on the Remote Controller .....	220
3.1 "R0" Indoor Unit: Error of External Protection Device .....	220
3.2 "R1" Indoor Unit: PC Board Defect.....	221
3.3 "R3" Indoor Unit: Malfunction of Drain Level Control System (S1L) .....	222
3.4 "R6" Indoor Unit: Fan Motor (M1F) Lock, Overload.....	224
3.5 "R7" Indoor Unit: Malfunction of Swing Flap Motor (M1S) .....	225
3.6 "R9" Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E).....	227
3.7 "RF" Indoor Unit: Drain Level above Limit.....	229
3.8 "RJ" Indoor Unit: Malfunction of Capacity Determination Device .....	230
3.9 "C4" Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger.....	231
3.10 "C5" Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes.....	232
3.11 "C9" Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air.....	233
3.12 "CJ" Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller .....	234
3.13 "E1" Outdoor Unit: PC Board Defect .....	235
3.14 "E3" Outdoor Unit: Actuation of High Pressure Switch .....	236
3.15 "E4" Outdoor Unit: Actuation of Low Pressure Sensor .....	238
3.16 "E5" Outdoor Unit: Inverter Compressor Motor Lock.....	240
3.17 "E6" Outdoor Unit: STD Compressor Motor Overcurrent/Lock.....	242
3.18 "E7" Outdoor Unit: Malfunction of Outdoor Unit Fan Motor .....	243
3.19 "E9" Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y2E).....	246
3.20 "F3" Outdoor Unit: Abnormal Discharge Pipe Temperature .....	248
3.21 "F6" Outdoor Unit: Refrigerant Overcharged.....	249
3.22 "H7" Outdoor Unit: Abnormal Outdoor Fan Motor Signal.....	250
3.23 "H9" Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air.....	251
3.24 "J2" Outdoor Unit: Current Sensor Malfunction .....	252
3.25 "J3" Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R3, R31~33T) .....	253
3.26 "J5" Outdoor Unit: Malfunction of Thermistor (R2T), (R7T) for Suction Pipe .....	254
3.27 "J6" Outdoor Unit: Malfunction of Thermistor (R4T) for Outdoor Unit Heat Exchanger .....	255
3.28 "J7" Outdoor Unit: Malfunction of Liquid Pipe Thermistor (R6T) .....	256

3.29	“J9” Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T) .....	257
3.30	“JR” Outdoor Unit: Malfunction of High Pressure Sensor.....	258
3.31	“JL” Outdoor Unit: Malfunction of Low Pressure Sensor.....	259
3.32	“L4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise .....	260
3.33	“L5” Outdoor Unit: Inverter Compressor Abnormal .....	262
3.34	“L8” Outdoor Unit: Inverter Current Abnormal.....	264
3.35	“L9” Outdoor Unit: Inverter Start up Error.....	266
3.36	“LC” Outdoor Unit: Malfunction of Transmission Between Inverter and Control PC Board .....	268
3.37	“P1” Outdoor Unit: Inverter Over-Ripple Protection .....	271
3.38	“P4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise Sensor .....	272
3.39	“PJ” Outdoor Unit: Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board.....	274
3.40	“UG” Outdoor Unit: Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure.....	275
3.41	“U1” Reverse Phase, Open Phase.....	276
3.42	“U2” Outdoor Unit: Power Supply Insufficient or Instantaneous Failure .....	277
3.43	“U3” Outdoor Unit: Check Operation not Executed .....	280
3.44	“U4” Malfunction of Transmission Between Indoor Units .....	281
3.45	“U5” Indoor Unit: Malfunction of Transmission Between Remote Controller and Indoor Unit.....	283
3.46	“U7” Indoor Unit: Malfunction of Transmission Between Outdoor Units .....	284
3.47	“U8” Indoor Unit: Malfunction of Transmission Between Main and Sub Remote Controllers .....	286
3.48	“U9” Indoor Unit: Malfunction of Transmission Between Indoor and Outdoor Units in the Same System .....	287
3.49	“UR” Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller.....	288
3.50	“UL” Address Duplication of Centralized Controller .....	290
3.51	“UE” Malfunction of Transmission Between Centralized Controller and Indoor Unit.....	291
3.52	“UF” System is not Set yet .....	294
3.53	“UH” Malfunction of System, Refrigerant System Address Undefined...295	
4.	Troubleshooting (OP: Central Remote Controller) .....	297
4.1	“77” PC Board Defect .....	297
4.2	“78” Malfunction of Transmission Between Optional Controllers for Centralized Control .....	298
4.3	“7R” Improper Combination of Optional Controllers for Centralized Control.....	300
4.4	“7L” Address Duplication, Improper Setting .....	302
5.	Troubleshooting (OP: Unified ON/OFF Controller) .....	305
5.1	Operation Lamp Blinks .....	305
5.2	Display “Under Centralized Control” Blinks (Repeats Single Blink) .....	307
5.3	Display “Under Centralized Control” Blinks (Repeats Double Blink) .....	310

# 1. Symptom-based Troubleshooting

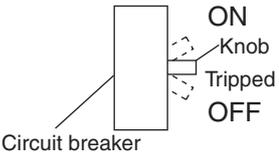	Symptom	Supposed Cause	Countermeasure	
1	The system does not start operation at all.	Blowout of fuse(s)	Turn Off the power supply and then replace the fuse(s).	
		Cutout of breaker(s)	<ul style="list-style-type: none"> <li>If the knob of any breaker is in its OFF position, turn ON the power supply.</li> <li>If the knob of any circuit breaker is in its tripped position, do not turn ON the power supply.</li> </ul>  <p>The diagram shows a rectangular circuit breaker with a knob on the right side. The knob has three positions: 'ON' at the top, 'Tripped' in the middle, and 'OFF' at the bottom. A dashed line indicates the knob's movement between these positions. The label 'Circuit breaker' is at the bottom left of the diagram.</p>	
		Power failure	After the power failure is reset, restart the system.	
2	The system starts operation but makes an immediate stop.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
		Clogged air filter(s)	Clean the air filter(s).	
3	The system does not cool or heat air well.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
		Clogged air filter(s)	Clean the air filter(s).	
		Enclosed outdoor unit(s)	Remove the enclosure.	
		Improper set temperature	Set the temperature to a proper degree.	
		Airflow rate set to "LOW"	Set it to a proper airflow rate.	
		Improper direction of air diffusion	Set it to a proper direction.	
		Open window(s) or door(s)	Shut it tightly.	
		[In cooling] Direct sunlight received	Hang curtains or shades on windows.	
		[In cooling] Too many persons staying in a room		
[In cooling] Too many heat sources (e.g. OA equipment) located in a room				
4	The system does not operate.	The system stops and immediately restarts operation.	If the OPERATION lamp on the remote controller turns ON, the system will be normal. These symptoms indicate that the system is controlled so as not to put unreasonable loads on the system.	
		Pressing the TEMP ADJUST button immediately resets the system.		
		The remote controller displays "UNDER CENTRALIZED CONTROL", which blinks for a period of several seconds when the OPERATION button is depressed.	The system is controlled with centralized controller. Blinking display indicates that the system cannot be operated using the remote controller.	Operate the system using the COOL/HEAT centralized remote controller.
		The system stops immediately after turning ON the power supply.	The system is in preparation mode of micro computer operation.	Wait for a period of approximately one minute.
5	The system makes intermittent stops.	The remote controller displays malfunction codes "U4" and "U5", and the system stops but restarts after a lapse of several minutes.	The system stops due to an interruption in communication between units caused by electrical noises coming from equipment other than air conditioners.	Remove causes of electrical noises. If these causes are removed, the system will automatically restart operation.
6	COOL-HEAT selection is disabled.	The remote controller displays "UNDER CENTRALIZED CONTROL".	This remote controller has no option to select cooling operation.	Use a remote controller with option to select cooling operation.
		The remote controller displays "UNDER CENTRALIZED CONTROL", and the COOL-HEAT selection remote controller is provided.	COOL-HEAT selection is made using the COOL-HEAT selection remote controller.	Use the COOL-HEAT selection remote controller to select cool or heat.


	Symptom		Supposed Cause	Countermeasure
7	The system conducts fan operation but not cooling or heating operation.	This symptom occurs immediately after turning ON the power supply.	The system is in preparation mode of operation.	Wait for a period of approximately 10 minutes.
8	The airflow rate is not reproduced according to the setting.	Even pressing the AIRFLOW RATE SET button makes no changes in the airflow rate.	In heating operation, when the room temperature reaches the set degree, the outdoor unit will stop while the indoor unit is brought to fan LL operation so that no one gets cold air. Furthermore, if fan operation mode is selected when other indoor unit is in heating operation, the system will be brought to fan LL operation. (The fan LL operation is also enabled while in oil return mode in cooling operation.)	Normal operation.
9	The airflow direction is not reproduced according to the setting.	The airflow direction is not corresponding to that displayed on the remote controller. The flap does not swing.	Automatic control	Normal operation.
10	A white mist comes out from the system.	<Indoor unit> In cooling operation, the ambient humidity is high. (This indoor unit is installed in a place with much oil or dust.)	Uneven temperature distribution due to heavy stain of the inside of the indoor unit	Clean the inside of the indoor unit.
		<Indoor unit> Immediately after cooling operation stopping, the ambient temperature and humidity are low.	Hot gas (refrigerant) flown in the indoor unit results to be vapor from the unit.	Normal operation.
		<Indoor and outdoor units> After the completion of defrosting operation, the system is switched to heating operation.	Defrosted moisture turns to be vapor and comes out from the units.	Normal operation.
11	The system produces sounds.	<Indoor unit> Immediately after turning ON the power supply, indoor unit produces "ringing" sounds.	These are operating sounds of the electronic expansion valve of the indoor unit.	Normal operation. This sound becomes low after a lapse of approximately one minute.
		<Indoor and outdoor units> "Hissing" sounds are continuously produced while in cooling or defrosting operation.	These sounds are produced from gas (refrigerant) flowing respectively through the indoor and outdoor units.	Normal operation.
		<Indoor and outdoor units> "Hissing" sounds are produced immediately after the startup or stop of the system, or the startup or stop of defrosting operation.	These sounds are produced when the gas (refrigerant) stops or changes flowing.	Normal operation.
		<Indoor unit> Faint sounds are continuously produced while in cooling operation or after stopping the operation.	These sounds are produced from the drain discharge device in operation.	Normal operation.
		<Indoor unit> "Creaking" sounds are produced while in heating operation or after stopping the operation.	These sounds are produced from resin parts expanding and contracting with temperature changes.	Normal operation.
		<Indoor unit> Sounds like "trickling" or the like are produced from indoor units in the stopped state.	On VRV systems, these sounds are produced when other indoor units in operation. The reason is that the system runs in order to prevent oil or refrigerant from dwelling.	Normal operation.
		<Outdoor unit> Pitch of operating sounds changes.	The reason is that the compressor changes the operating frequency.	Normal operation.

	Symptom		Supposed Cause	Countermeasure
12	Dust comes out from the system.	Dust comes out from the system when it restarts after the stop for an extended period of time.	Dust, which has deposited on the inside of indoor unit, is blown out from the system.	Normal operation.
13	Odors come out from the system.	In operation	Odors of room, cigarettes or else adsorbed to the inside of indoor unit are blown out.	The inside of the indoor unit should be cleaned.
14	Outdoor unit fan does not rotate.	In operation	The reason is that fan revolutions are controlled to put the operation to the optimum state.	Normal operation.
15	LCD display "88" appears on the remote controller.	Immediately after turning ON the power supply	The reason is that the system is checking to be sure the remote controller is normal.	Normal operation. This code is displayed for a period of approximately one minute at maximum.
16	The outdoor unit compressor or the outdoor unit fan does not stop.	After stopping operation	It stops in order to prevent oil or refrigerant from dwelling.	Normal operation. It stops after a lapse of approximately 5 to 10 minutes.
17	The outdoor gets hot.	While stopping operation	The reason is that the compressor is warmed up to provide smooth startup of the system.	Normal operation.
18	Hot air comes out from the system even though it stops.	Hot air is felt while the system stops.	On VRV systems, small quantity of refrigerant is fed to indoor units in the stopped state when other indoor units are in operation.	Normal operation.
19	The system does not cool air well.	The system is in dry operation.	The reason is that the dry operation serves not to reduce the room temperature where possible.	Change the system to cooling operation.

## 2. Troubleshooting by Remote Controller

### 2.1 The INSPECTION / TEST Button


The following modes can be selected by using the [Inspection/Test Operation] button on the remote control.

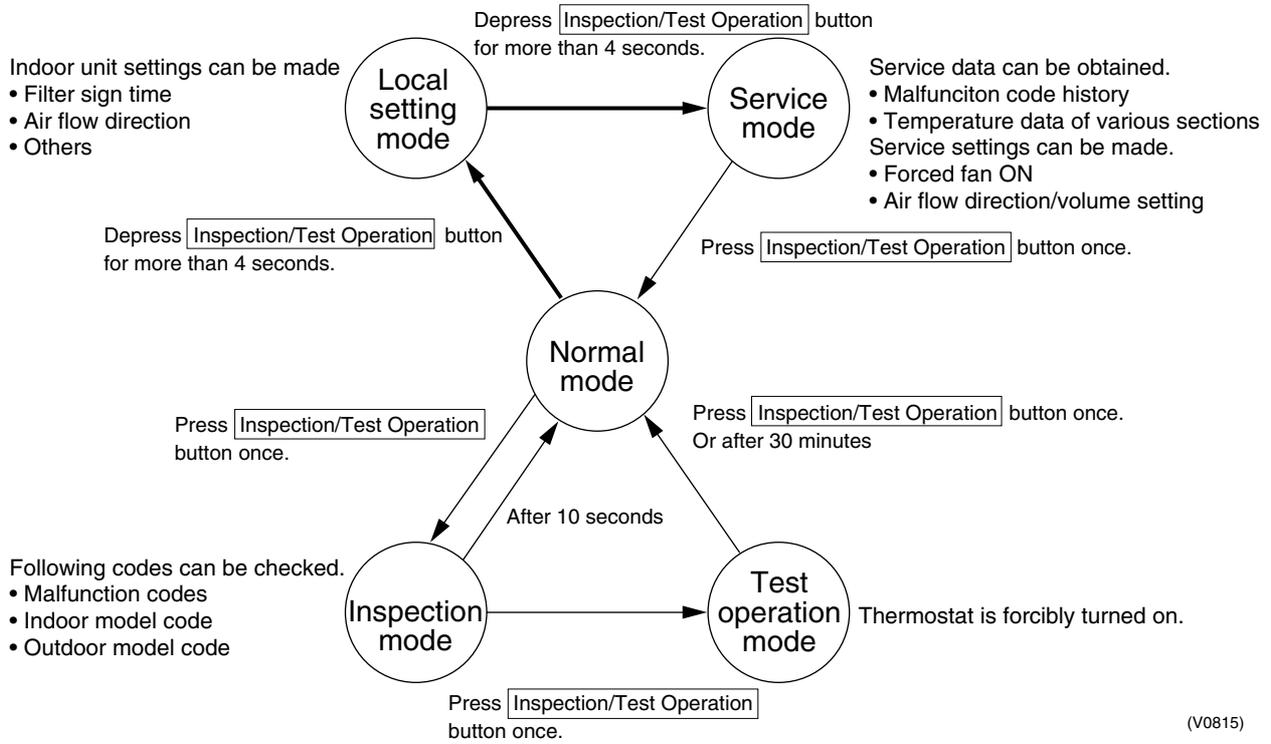

## 2.2 Self-diagnosis by Wired Remote Controller

### Explanation

If operation stops due to malfunction, the remote controller's operation LED blinks, and malfunction code is displayed. (Even if stop operation is carried out, malfunction contents are displayed when the inspection mode is entered.) The malfunction code enables you to tell what kind of malfunction caused operation to stop. See page 213 for malfunction code and malfunction contents.

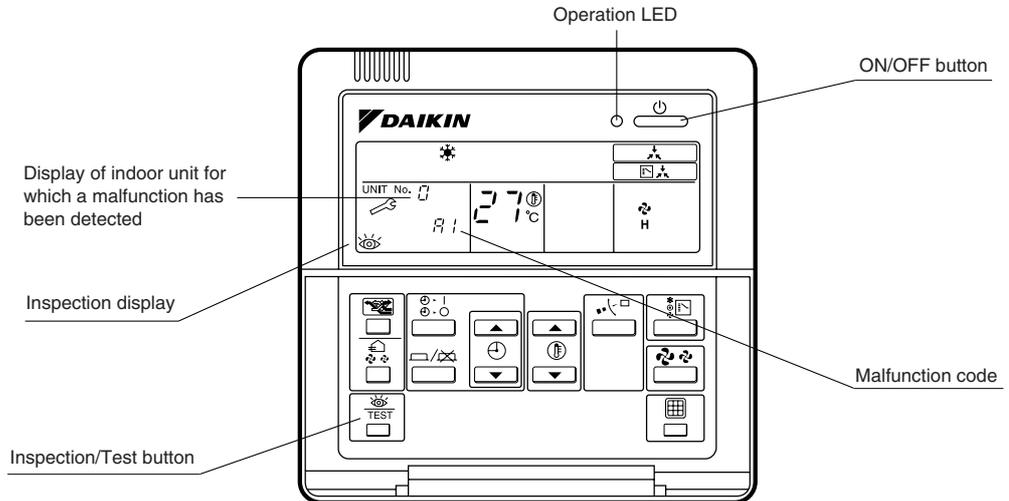

### Note:

1. Pressing the INSPECTION/TEST button will blink the check indication.
2. While in check mode, pressing and holding the ON/OFF button for a period of five seconds or more will clear the failure history indication shown above. In this case, on the codes display, the malfunction code will blink twice and then change to "00" (=Normal), the Unit No. will change to "0", and the operation mode will automatically switch from check mode to normal mode (displaying the set temperature).

## 2.3 Self-diagnosis by Wireless Remote Controller


**In the Case of  
BRC7C Type  
BRC7E Type  
BRC4C Type**

If equipment stops due to a malfunction, the operation indicating LED on the light reception section flashes.

The malfunction code can be determined by following the procedure described below. (The malfunction code is displayed when an operation error has occurred. In normal condition, the malfunction code of the last problem is displayed.)

1. Press the INSPECTION/TEST button to select "Inspection."  
The equipment enters the inspection mode. The "Unit" indication lights and the Unit No. display shows flashing "0" indication.
2. Set the Unit No.  
Press the UP or DOWN button and change the Unit No. display until the buzzer (\*1) is generated from the indoor unit.  
\*1 Number of beeps  
**3 short beeps** : Conduct all of the following operations.  
**1 short beep** : Conduct steps 3 and 4.  
Continue the operation in step 4 until a buzzer remains ON. The continuous buzzer indicates that the malfunction code is confirmed.  
**Continuous beep** : No abnormality.
3. Press the MODE selector button.  
The left "0" (upper digit) indication of the malfunction code flashes.
4. Malfunction code upper digit diagnosis  
Press the UP or DOWN button and change the malfunction code upper digit until the malfunction code matching buzzer (\*2) is generated.

- The upper digit of the code changes as shown below when the UP and DOWN buttons are pressed.

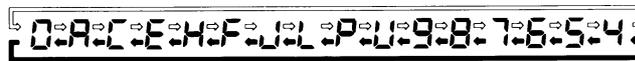


⇨ "Advance" button    ⇩ "Backward" button    (SE006)

- \*2 Number of beeps  
**Continuous beep** : Both upper and lower digits matched. (Malfunction code confirmed)  
**2 short beeps** : Upper digit matched.  
**1 short beep** : Lower digit matched.
- 5. Press the MODE selector button.  
The right "0" (lower digit) indication of the malfunction code flashes.
- 6. Malfunction code lower digit diagnosis  
Press the UP or DOWN button and change the malfunction code lower digit until the continuous malfunction code matching buzzer (\*2) is generated.

- The lower digit of the code changes as shown below when the UP and DOWN buttons are pressed.




⇒ "Advance" button    ← "Backward" button (SE007)

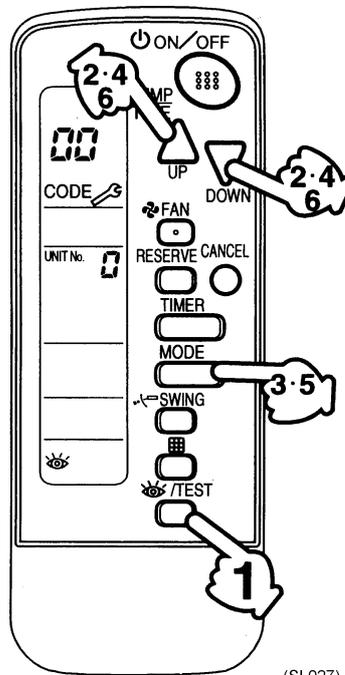


(SL027)

Normal status  
 Enters inspection mode from normal status when the INSPECTION/TEST button is pressed.

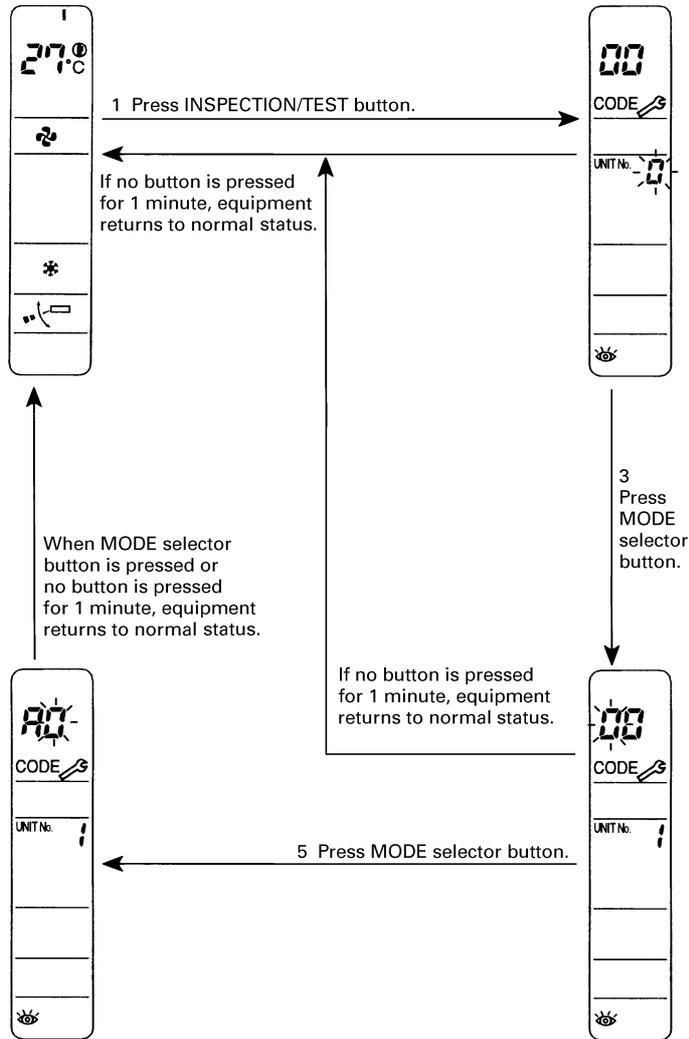

(SF008)


## 2.4 Operation of The Remote Controller's Inspection / Test Operation Button

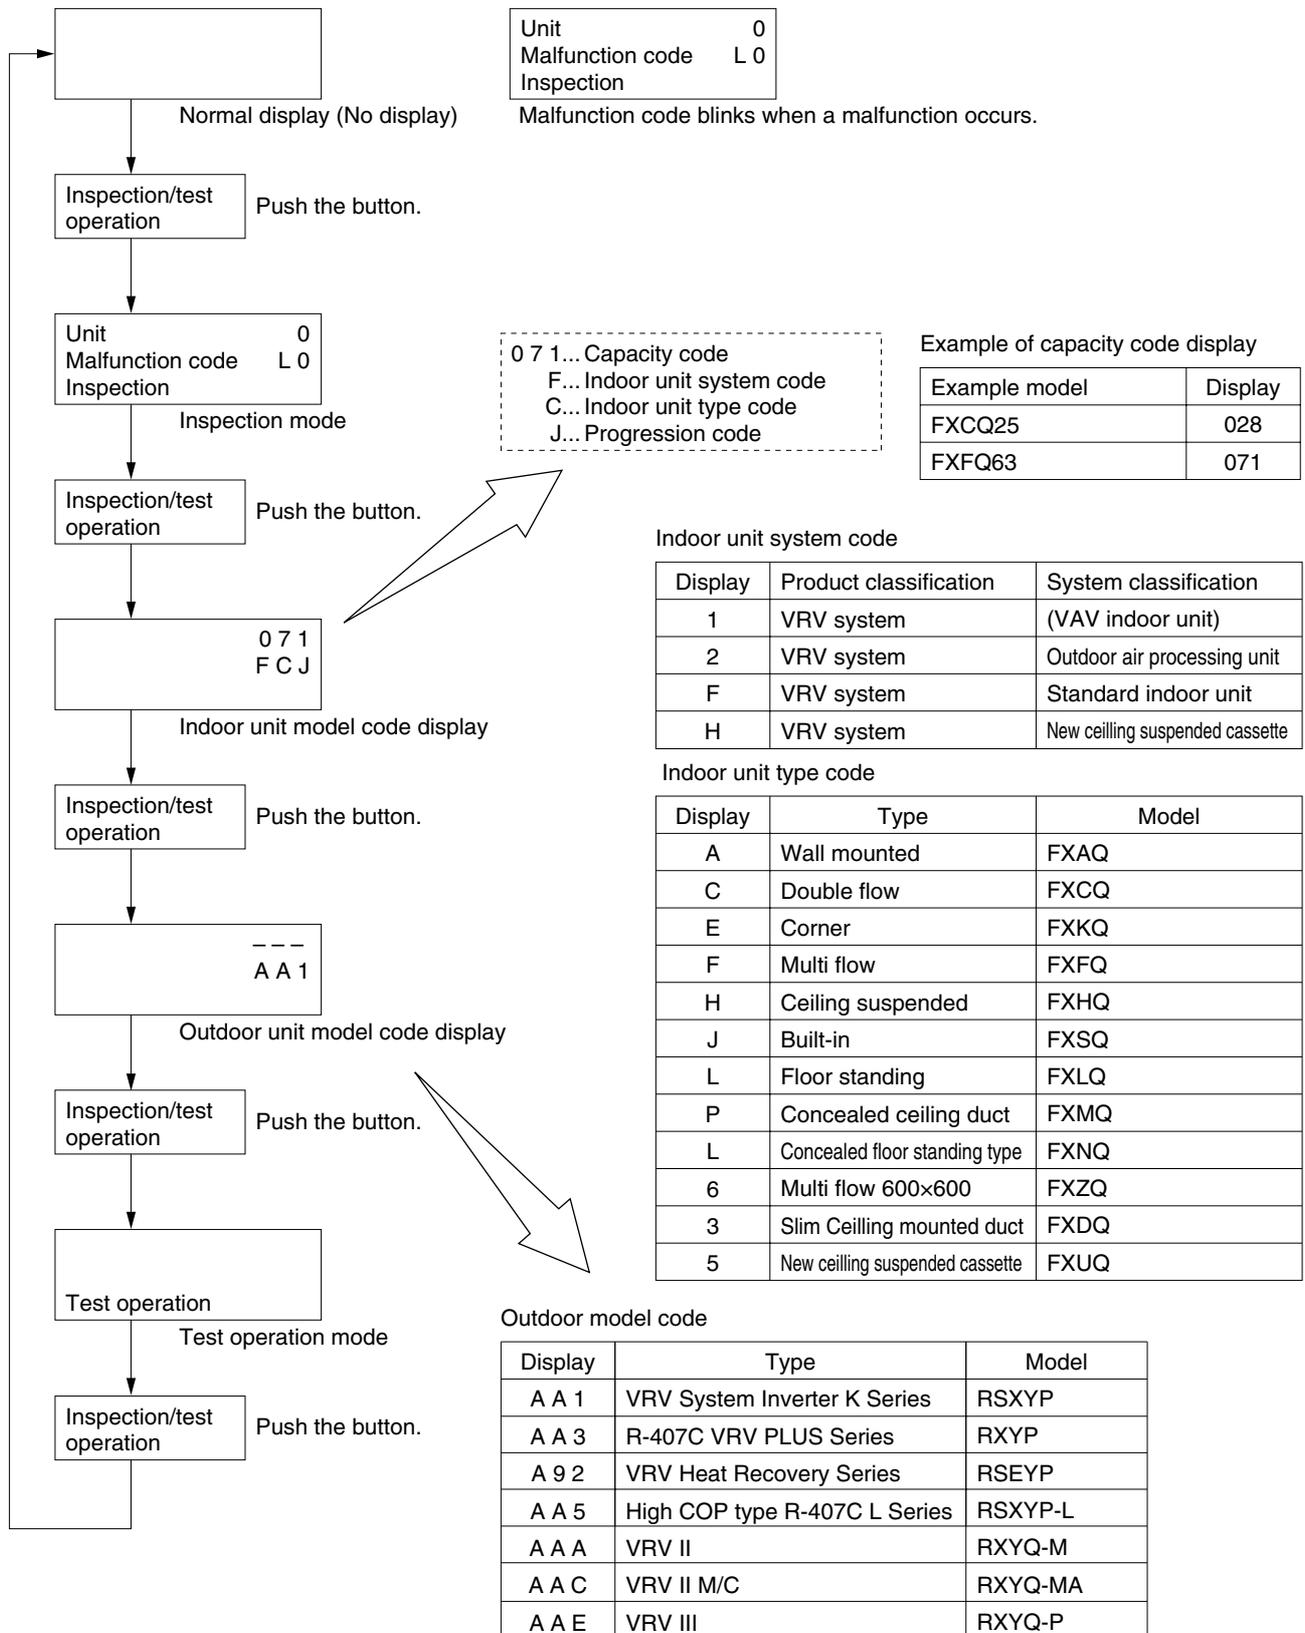

(V2775)

## 2.5 Remote Controller Service Mode

### How to Enter the Service Mode

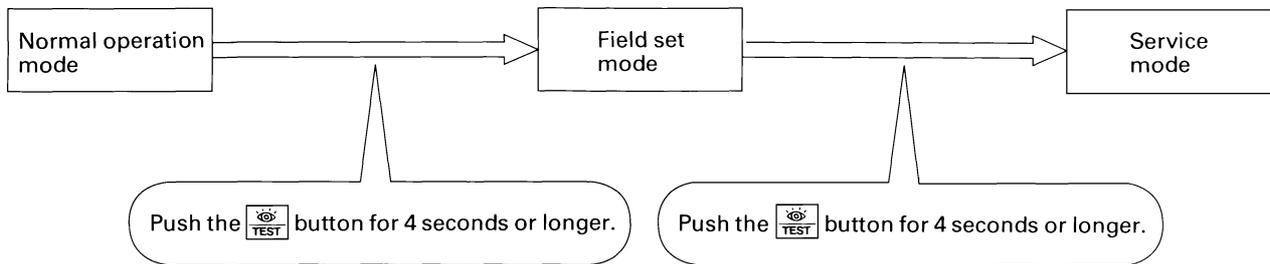

(VF020)

### Service Mode Operation Method

#### 1. Select the mode No.

Set the desired mode No. with the button.  
(For wireless remote controller, Mode 43 only can be set.)

#### 2. Select the unit No. (For group control only)

Select the indoor unit No. to be set with the time mode . (For wireless remote controller, button.)

#### 3. Make the settings required for each mode. (Modes 41, 44, 45)

In case of Mode 44, 45, push button to be able to change setting before setting work. (LCD "code" blinks.)

For details, refer to the table in next page.

#### 4. Define the setting contents. (Modes 44, 45)

Define by pushing the timer button.  
After defining, LCD "code" changes blinking to ON.

#### 5. Return to the normal operation mode.


Push the button one time.

Mode No	Function	Contents and operation method	Remote controller display example
40	Malfunction hysteresis display	<p>Display malfunction hysteresis.</p> <p>The history No. can be changed with the  button.</p>	<p>Unit 1 Malfunction code <b>40</b></p> <p>2-U4 Malfunction code</p> <p>History No: 1 - 9 1: Latest</p> <p>(VE007)</p>
41	Display of sensor and address data	<p>Display various types of data.</p> <p>Select the data to be displayed with the  button. Sensor data 0: Thermostat sensor in remote controller. 1: Suction 2: Liquid pipe 3: Gas pipe</p> <p>Address data 4: Indoor unit address 5: Outdoor unit address 6: BS unit address 7: Zone control address 8: Cool/heat group address 9: Demand / low noise address</p>	<p>Sensor data display</p> <p>Unit No. Sensor type</p> <p>1 1 2 7 <b>41</b></p> <p>Temperature °C</p> <p>Address display</p> <p>Unit No. Address type</p> <p>1 8 1 <b>41</b></p> <p>Address</p> <p>(VE008)</p>
43	Forced fan ON	<p>Manually turn the fan ON by each unit. (When you want to search for the unit No.)</p> <p>By selecting the unit No. with the  button, you can turn the fan of each indoor unit on (forced ON) individually.</p>	<p>Unit 1 <b>43</b></p> <p>(VE009)</p>
44	Individual setting	<p>Set the fan speed and air flow direction by each unit</p> <p>Select the unit No. with the time mode  button. Set the fan speed with the  button.</p> <p>Set the air flow direction with the  button.</p>	<p>Unit 1 Code <b>44</b></p> <p>1 3 Fan speed 1: Low 3: High Air flow direction P0 - P4</p> <p>(VE010)</p>
45	Unit No. transfer	<p>Transfer unit No.</p> <p>Select the unit No. with the  button. Set the unit No. after transfer with the  button.</p>	<p>Present unit No.</p> <p>Unit 1 Code <b>45</b></p> <p>0 2 Unit No. after transfer</p> <p>(VE011)</p>
46	This function is not used by VRV II R-410A Heat Pump 50Hz.		
47			

## 2.6 Remote Controller Self-Diagnosis Function

The remote controller switches are equipped with a self diagnosis function so that more appropriate maintenance can be carried out. If a malfunction occurs during operation, the operation lamp, malfunction code and display of malfunctioning unit No. let you know the contents and location of the malfunction.

When there is a stop due to malfunction, the contents of the malfunction given below can be diagnosed by a combination of operation lamp, INSPECTION display of the liquid crystal display and display of malfunction code. It also lets you know the unit No. during group control.

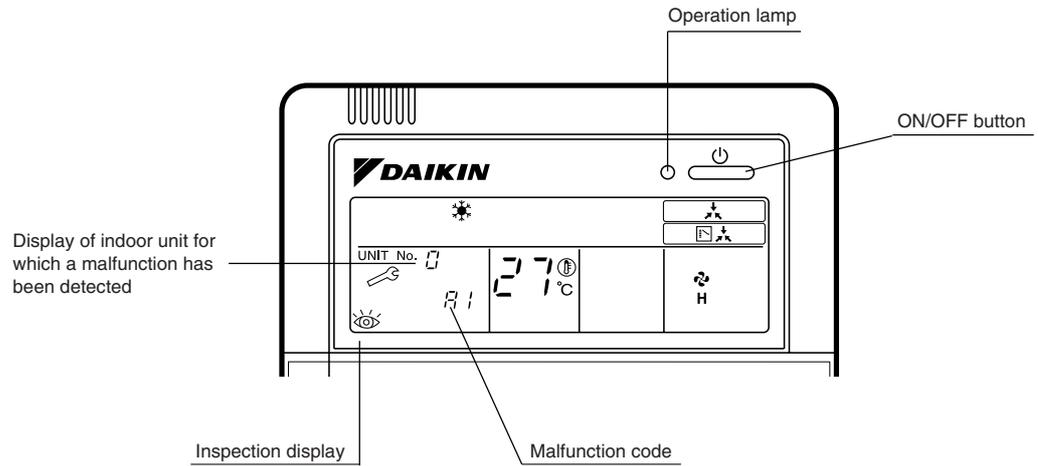

(VL050)

○ : ON ● : OFF ◐ : Blink

	Malfunction code	Operation lamp	Inspection display	Unit No.	Malfunction contents	Page Referred
Indoor Unit	A0	◐	◐	◐	Error of external protection device	220
	A1	◐	◐	◐	PC board defect, E <sup>2</sup> PROM defect	221
	A3	◐	◐	◐	Malfunction of drain level control system (S1L)	222
	A6	◐	◐	◐	Fan motor (M1F) lock, overload	224
	A7	○	●	◐	Malfunction of swing flap motor (MA)	225
	A9	◐	◐	◐	Malfunction of moving part of electronic expansion valve (20E)	227
	AF	○	●	◐	Drain level about limit	229
	AH	○	●	◐	Malfunction of air filter maintenance	—
	AJ	◐	◐	◐	Malfunction of capacity setting	230
	C4	◐	◐	◐	Malfunction of thermistor (R2T) for heat exchange (loose connection, disconnection, short circuit, failure)	231
	C5	◐	◐	◐	Malfunction of thermistor (R3T) for gas pipes (loose connection, disconnection, short circuit, failure)	232
	C9	◐	◐	◐	Malfunction of thermistor (R1T) for air inlet (loose connection, disconnection, short circuit, failure)	233
	CJ	○	○	○	Malfunction of thermostat sensor in remote controller	234
	Outdoor Unit	E1	◐	◐	◐	PC board defect
E3		◐	◐	◐	Actuation of high pressure switch	236
E4		◐	◐	◐	Actuation of low pressure sensor	238
E5		◐	◐	◐	Compressor motor lock	240
E6		◐	◐	◐	Standard compressor lock or over current	242
E7		◐	◐	◐	Malfunction of outdoor unit fan motor	243
E9		◐	◐	◐	Malfunction of moving part of electronic expansion valve (Y1E, Y2E)	246
F3		◐	◐	◐	Abnormal discharge pipe temperature	248
F6		◐	◐	◐	Refrigerant overcharged	249
H7		◐	◐	◐	Abnormal outdoor fan motor signal	250
H9		◐	◐	◐	Malfunction of thermistor (R1T) for outdoor air (loose connection, disconnection, short circuit, failure)	251
J2		◐	◐	◐	Current sensor malfunction	252
J3		◐	◐	◐	Malfunction of discharge pipe thermistor (R31~33T) (loose connection, disconnection, short circuit, failure)	253
J5		◐	◐	◐	Malfunction of thermistor (R2T) for suction pipe (loose connection, disconnection, short circuit, failure)	254
J6		◐	◐	◐	Malfunction of thermistor (R4T) for heat exchanger (loose connection, disconnection, short circuit, failure)	255
J7		◐	◐	◐	Malfunction of receiver outlet liquid pipe thermistor (R6T)	256
J9		◐	◐	◐	Malfunction of subcooling heat exchanger gas pipe thermistor (R5T)	257
JA		◐	◐	◐	Malfunction of discharge pipe pressure sensor	258
JC		◐	◐	◐	Malfunction of suction pipe pressure sensor	259
L0		◐	◐	◐	Inverter system error	—
L4		◐	◐	◐	Malfunction of inverter radiating fin temperature rise	260
L5	◐	◐	◐	DC output overcurrent of inverter compressor	262	
L8	◐	◐	◐	Inverter current abnormal	264	
L9	◐	◐	◐	Inverter start up error	266	

○: ON ●: OFF ◐: Blink

	Malfunction code	Operation lamp	Inspection display	Unit No.	Malfunction contents	Page Referred
Outdoor Unit	LA	◐	◐	◐	Malfunction of power unit	—
	LC	◐	◐	◐	Malfunction of transmission between inverter and control PC board	268
	P1	◐	◐	◐	Inverter over-ripple protection	271
	P4	◐	◐	◐	Malfunction of inverter radiating fin temperature rise sensor	272
	PJ	◐	◐	◐	Faulty field setting after replacing main PC board or faulty combination of PC board	274
System	U0	○	●	◐	Low pressure drop due to refrigerant shortage or electronic expansion valve failure	275
	U1	◐	◐	◐	Reverse phase / open phase	276
	U2	◐	◐	◐	Power supply insufficient or instantaneous failure	277
	U3	◐	◐	◐	Check operation is not completed.	280
	U4	◐	◐	◐	Malfunction of transmission between indoor and outdoor units	281
	U5	◐	◐	◐	Malfunction of transmission between remote controller and indoor unit	283
	U5	●	○	●	Failure of remote controller PC board or setting during control by remote controller	283
	U7	◐	◐	◐	Malfunction of transmission between outdoor units	284
	U8	◐	◐	●	Malfunction of transmission between main and sub remote controllers (malfunction of sub remote controller)	286
	U9	◐	◐	◐	Malfunction of transmission between indoor unit and outdoor unit in the same system	287
	UA	◐	◐	◐	Improper combination of indoor and outdoor units, indoor units and remote controller	288
	UC	○	○	○	Address duplication of central remote controller	290
	UE	◐	◐	◐	Malfunction of transmission between central remote controller and indoor unit	291
	UF	◐	◐	◐	Refrigerant system not set, incompatible wiring / piping	294
UH	◐	◐	◐	Malfunction of system, refrigerant system address undefined	295	
Central Remote Controller and Schedule Timer	M1	○ or ●	◐	◐	Central remote controller PC board defect Schedule timer PC board defect	297
	M8	○ or ●	◐	◐	Malfunction of transmission between optional controllers for centralized control	298
	MA	○ or ●	◐	◐	Improper combination of optional controllers for centralized control	300
	MC	○ or ●	◐	◐	Address duplication, improper setting	302
Heat Reclaim Ventilation	64	○	●	◐	Indoor unit's air thermistor error	—
	65	○	●	◐	Outside air thermistor error	—
	6A	○	●	◐	Damper system alarm	—
	6A	◐	◐	◐	Damper system + thermistor error	—
	6F	○	●	◐	Malfunction of simple remote controller	—
	6H	○	●	◐	Malfunction of door switch or connector	—
	94	◐	◐	◐	Internal transmission error	—

 The system operates for malfunction codes indicated in black squares, however, be sure to check and repair.



**Malfunction code indication by outdoor unit PC board**

**<Monitor mode>**

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

\* Refer to P.184 for Monitor mode.

**<Selection of setting item>**

Push the **SET (BS2)** button and set the LED display to a setting item.

\* Refer to P.184 for Monitor mode.

**<Confirmation of malfunction 1>**

Push the **RETURN (BS3)** button once to display "First digit" of malfunction code.

**<Confirmation of malfunction 2>**

Push the **SET (BS2)** button once to display "Second digit" of malfunction code.

**<Confirmation of malfunction 3>**

Push the **SET (BS2)** button once to display "malfunction location".

**<Confirmation of malfunction 4>**

Push the **SET (BS2)** button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

\* Push the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Contents of malfunction		Malfunction code
Abnormal discharge pressure	HPS activated	E3
Abnormal suction pressure	Abnormal Pe	E4
Compressor lock	Detection of INV compressor lock	E5
Activation of OC	Detection of STD1 compressor lock	E6
	Detection of STD2 compressor lock	
Over load, over current, abnormal lock of outdoor unit fan motor	Instantaneous over current of DC fan 1 motor	E7
	Detection of DC fan 1 motor lock	
	Instantaneous over current of DC fan 2 motor	
	Detection of DC fan 2 motor lock	
Malfunction of electronic expansion valve	EV1	E9
	EV2	
	EV3	
Abnormal position signal of outdoor unit fan motor	Abnormal position signal of DC fan 1 motor	H7
	Abnormal position signal of DC fan 2 motor	
Faulty sensor of outdoor air temperature	Faulty Ta sensor (short)	H9
	Faulty Ta sensor (open)	
Abnormal discharge pipe temperature	Abnormal Td	F3
Abnormal heat exchanger temperature	Refrigerant over charge	F6
Faulty current sensor	Faulty CT1 sensor	J2
	Faulty CT2 sensor	
Faulty sensor of discharge pipe temperature	Faulty Tdi sensor (short)	J3
	Faulty Tds1 sensor (short)	
	Faulty Tds2 sensor (short)	
	Faulty Tdi sensor (open)	
	Faulty Tds1 sensor (open)	
	Faulty Tds2 sensor (open)	
Faulty sensor of suction pipe temperature	Faulty Ts1 sensor (short)	J5
	Faulty Ts1 sensor (open)	
	Faulty Ts2 sensor (short)	
	Faulty Ts2 sensor (open)	
Faulty sensor of heat exchanger temperature	Faulty Tb sensor (short)	J6
	Faulty Tb sensor (open)	
Malfunction of the liquid pipe temperature sensor	Faulty TI sensor (short)	J7
	Faulty TI sensor (open)	
Faulty sensor of subcool heat exchanger temperature	Faulty Tsh sensor (short)	J9
	Faulty Tsh sensor (open)	
Faulty sensor of discharge pressure	Faulty Pc sensor (short)	JA
	Faulty Pc sensor (open)	
Faulty sensor of suction pressure	Faulty Pe sensor (short)	JC
	Faulty Pe sensor (open)	
Instantaneous power failure	*NO display on remote controller (Judge during compressor operation)	(L2)
Inverter radiation fin temperature rising	Over heating of inverter radiation fin temperature	L4
DC output over current	Inverter instantaneous over current	L5
	IGBT malfunction	
Electronic thermal	Electronic thermal switch 1	L8
	Electronic thermal switch 2	
	Out-of-step	
	Speed down after startup	
	Lightening detection	
Stall prevention (Limit time)	Stall prevention (Current increasing)	L9
	Stall prevention (Faulty start up)	
	Abnormal wave form in startup	
	Out-of-step	
Transmission error between inverter and outdoor unit	Inverter transmission error	LC

○: ON ●: OFF ◐: Blink

Malfunction code	Confirmation of malfunction 1							Confirmation of malfunction 2							Confirmation of malfunction 3							Confirmation of malfunction 4						
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P
E3	○			●	●	○	○	○			●	●	○	○	○			●	●	●	●	○			●	●		
E4								○			●	○	●	●	○			●	●	●	●	○			●	●		
E5								○			●	○	●	○	○			●	●	●	●	○			●	●		
E6								○			●	○	○	●	○			●	●	●	●	○			●	●		
E7								○			●	○	○	○	○			●	●	●	●	○			●	●		
E9								○			○	●	●	○	○			●	●	●	●	○			●	●		
H7	○			●	○	●	●	○			●	○	○	○	○			●	●	●	○	○			●	●		
H9								○			○	●	●	○	○			●	●	●	○	○			●	●		
F3	○			●	○	●	○	○			●	●	○	○	○			●	●	●	○	○			●	●		
F6								○			●	○	○	●	○			●	●	●	○	○			●	●	○	○
J2	○			●	○	○	●	○			●	●	○	●	○			●	●	●	○	○			●	●		
J3								○			●	●	○	○	○			●	●	●	○	○			●	●		
J5								○			●	○	●	○	○			●	●	●	○	○			●	●		
J6								○			●	○	○	●	○			●	●	●	○	○			●	●		
J7								○			●	○	○	○	○			●	●	●	○	○			●	●		
J9								○			○	●	●	○	○			●	●	●	○	○			●	●		
JA								○			○	●	○	●	○			●	●	●	○	○			●	●		
JC								○			○	○	●	●	○			●	●	●	○	○			●	●		
(L2)	○			●	○	○	○	○			●	●	○	●	○			●	●	●	○	○			●	●		
L4								○			●	○	●	●	○			●	●	●	○	○			●	●		
L5								○			●	○	●	○	○			●	●	●	○	○			●	●		
L8								○			○	●	●	●	○			●	●	●	○	○			●	●		
L9								○			○	●	●	○	○			●	●	●	○	○			●	●		
LC								○			○	○	●	●	○			●	●	●	○	○			●	○		

Display of contents of malfunction (first digit)

Display of contents of malfunction (second digit)

Display 1 of malfunction in detail

Display 2 of malfunction in detail

- \*1
- ● Master
  - ○ Slave1
  - ● Slave2
  - ○ System

<Monitor mode>

To enter the monitor mode, push the **MODE (BS1)** button when in "Setting mode 1".

\* Refer to P.184 for Monitor mode.

<Selection of setting item>

Push the **SET (BS2)** button and set the LED display to a setting item.

\* Refer to P.184 for Monitor mode.

<Confirmation of malfunction 1>

Push the **RETURN (BS3)** button once to display "First digit" of malfunction code.

<Confirmation of malfunction 2>

Push the **SET (BS2)** button once to display "Second digit" of malfunction code.

<Confirmation of malfunction 3>

Push the **SET (BS2)** button once to display "malfunction location".

<Confirmation of malfunction 4>

Push the **SET (BS2)** button once to display "master or slave 1 or slave 2" and "malfunction location".

Push the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

\* Push the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Contents of malfunction		Malfunction code
Open phase/Power supply imbalance	Imbalance of inverter power supply voltage	P1
Faulty temperature sensor inside switch box	Faulty thermistor of inverter box	P3
Faulty temperature sensor of inverter radiation fin	Faulty thermistor of inverter fin	P4
Incorrect combination of Inverter and fan driver	Incorrect combination of inverter	PJ
	Incorrect combination of fan driver 1	
	Incorrect combination of fan driver 2	
Gas shortage	Gas shortage alarm	U0
Reverse phase	Reverse phase error	U1
Abnormal power supply voltage	Insufficient Inverter voltage	U2
	Inverter open phase (phase T)	
	Charging error of capacitor in inverter main circuit	
No implementation of test-run		U3
Transmission error between indoor and outdoor unit	I/O transmission error	U4
	I/O transmission error	
Transmission error between outdoor units, transmission error between thermal storage units, duplication of IC address	Sequential startup ADP alarm	U7
	Sequential startup ADP malfunction	U7
	Malfunction of transmission between multi units (Multi 1)	
	Malfunction of transmission between multi units (Multi 2)	
	Abnormal multi horsepower setting	
	Abnormal multi address setting	
	Excessive multi connections	
	Multi system malfunction	
Transmission error of other system	Indoor unit system abnormal in other system or other indoor unit system abnormal in own system	U9
Erroneous field setting	System transmission malfunction	UA
	Overconnection malfunction of indoor units	
	Malfunction of field setting	
	Refrigerant abnormal	
	Multi-ID abnormal	
	Alarm of TSS field setting	UA
Alarm of CT address setting		
Faulty system malfunction	Wiring error (Auto-address error)	UH
Transmission error in accessory devices	Malfunction of multi-level connection	UJ
	Alarm of multi-level connection	UJ
Conflict in wiring and piping, no setting for system	Conflict in wiring and piping	UF

○: ON ●: OFF ◐: Blink

Malfunction code	Confirmation of malfunction 1							Confirmation of malfunction 2							Confirmation of malfunction 3							Confirmation of malfunction 4						
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P
P1	◐			◐	●	●	●	◐			●	●	●	◐	◐			●	●	●	●	◐			●	●		
P3								◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●		
P4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●		
PJ								◐			◐	◐	●	◐	◐			●	●	●	●	◐			●	●		
														◐			●	●	●	●	◐			●	●			
														◐			●	●	●	●	◐			●	●			
														◐			●	●	●	●	◐			◐	◐			
U0	◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●	●	●	◐			●	●	◐	◐
U1								◐			●	●	●	◐	◐			●	●	●	●	◐			●	●		
U2								◐			●	●	◐	●	◐			●	●	●	●	◐			●	●		
														◐			●	●	●	●	◐			●	◐			
U3								◐			●	●	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐
														◐			●	●	●	●	◐			●	◐			
U4								◐			●	◐	●	●	◐			●	●	●	●	◐			●	●	◐	◐
														◐			●	●	●	●	◐			●	◐			
U7								◐			●	◐	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐
U7														◐			●	●	●	●	◐			●	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
U9								◐			◐	●	●	◐	◐			●	●	●	●	◐			●	●	◐	◐
UA								◐			◐	●	◐	●	◐			●	●	●	●	◐			●	●	◐	◐
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
UA														◐			●	●	●	●	◐			◐	●	◐	◐	
														◐			●	●	●	●	◐			◐	●	◐	◐	
UH								◐			◐	●	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐
UJ								◐			◐	◐	●	◐	◐			●	●	●	●	◐			●	●		
UJ														◐			●	●	●	●	◐			●	◐			
UF								◐			◐	◐	◐	◐	◐			●	●	●	●	◐			●	●	◐	◐

Display of contents of malfunction (first digit)

Display of contents of malfunction (second digit)

Display 1 of malfunction in detail

Display 2 of malfunction in detail

\*1

●	●	Master
●	◐	Slave1
◐	●	Slave2
◐	◐	System

# 3. Troubleshooting by Indication on the Remote Controller

## 3.1 "AO" Indoor Unit: Error of External Protection Device


<b>Remote Controller Display</b>	AO
<b>Applicable Models</b>	All indoor unit models
<b>Method of Malfunction Detection</b>	Detect open or short circuit between external input terminals in indoor unit.
<b>Malfunction Decision Conditions</b>	When an open circuit occurs between external input terminals with the remote controller set to "external ON/OFF terminal".
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Actuation of external protection device</li> <li>■ Improper field set</li> <li>■ Defect of indoor unit PC board</li> </ul>

### Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

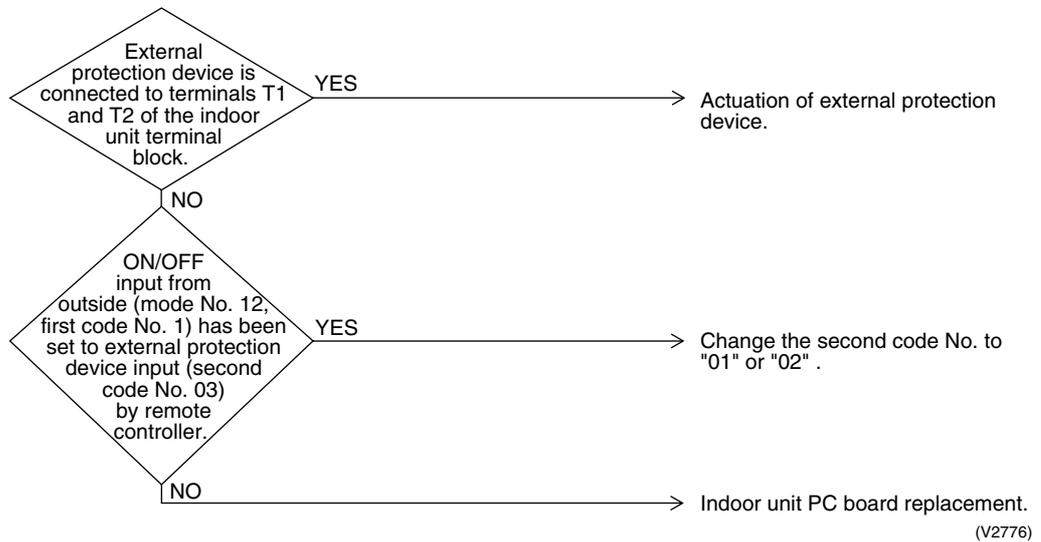

## 3.2 “A1” Indoor Unit: PC Board Defect

Remote  
Controller  
Display

A1

Applicable  
Models

All indoor unit models

Method of  
Malfunction  
Detection

Check data from E<sup>2</sup>PROM.

Malfunction  
Decision  
Conditions

When data could not be correctly received from the E<sup>2</sup>PROM  
E<sup>2</sup>PROM : Type of nonvolatile memory. Maintains memory contents even when the power supply is turned off.

Supposed  
Causes


- Defect of indoor unit PC board

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

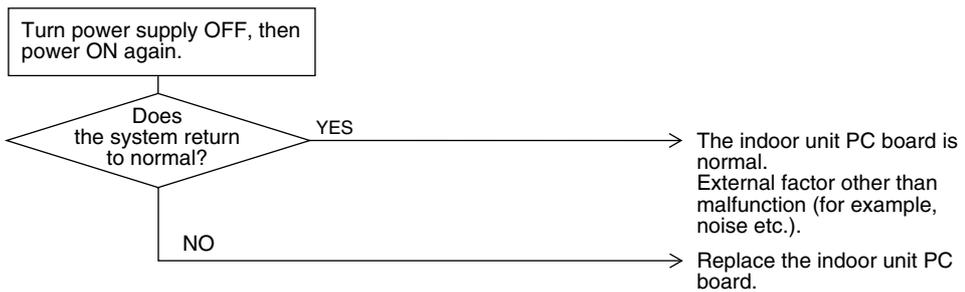

(V2777)

### 3.3 “A3” Indoor Unit: Malfunction of Drain Level Control System (S1L)


<b>Remote Controller Display</b>	A3
<b>Applicable Models</b>	FXCQ, FXFQ, FXSQ, FXKQ, FXDQ, FXMQ, FXUQ, FXHQ (Option), FXMQ200,250M (Option), FXAQ (Option), FXMQ-MF (Option)
<b>Method of Malfunction Detection</b>	By float switch OFF detection
<b>Malfunction Decision Conditions</b>	When rise of water level is not a condition and the float switch goes OFF.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ 220~240V power supply is not provided</li> <li>■ Defect of float switch or short circuit connector</li> <li>■ Defect of drain pump</li> <li>■ Drain clogging, upward slope, etc.</li> <li>■ Defect of indoor unit PC board</li> <li>■ Loose connection of connector</li> </ul>

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

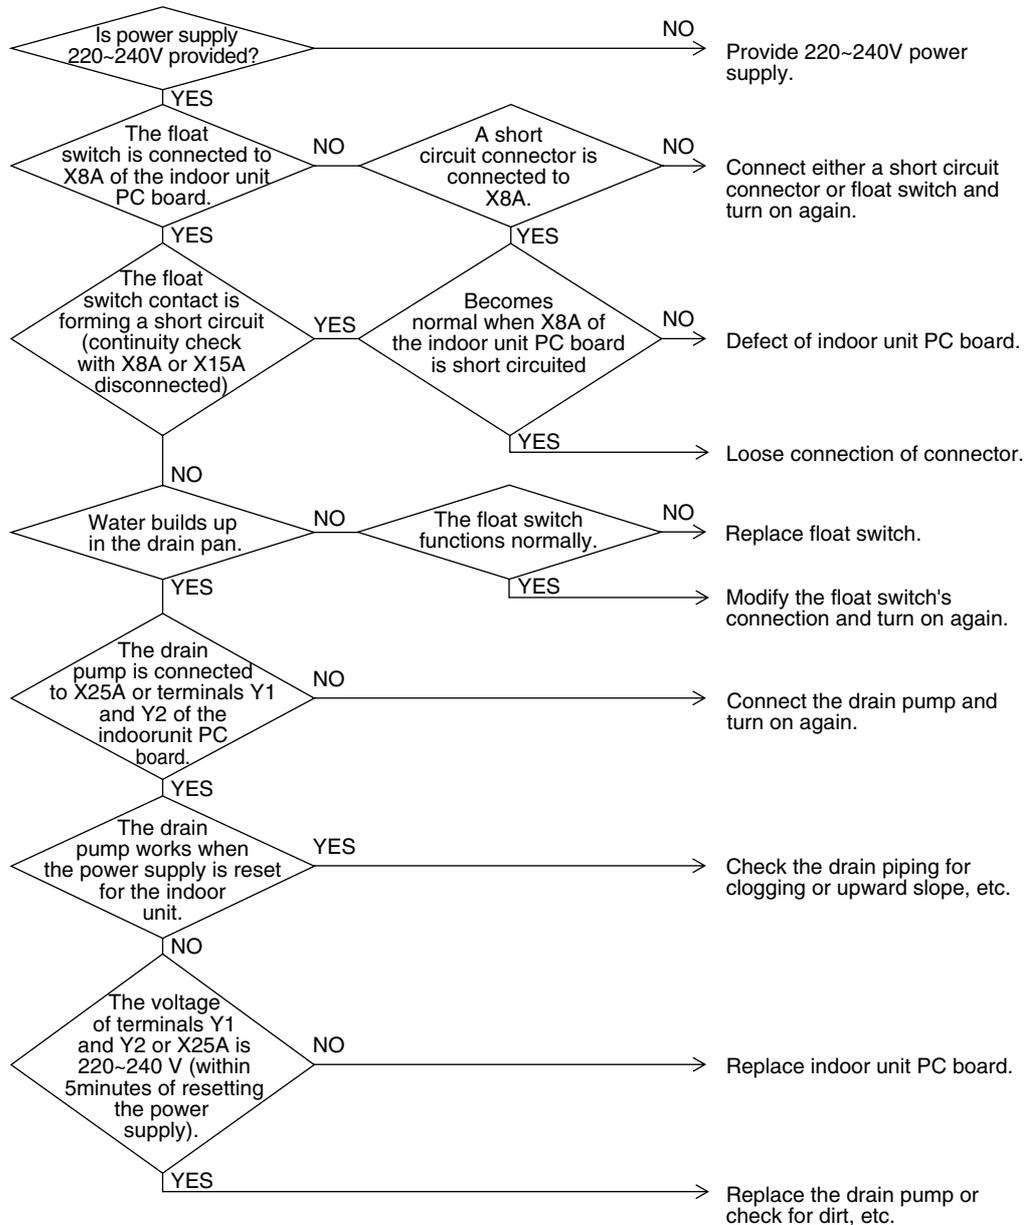

(V2778)

### 3.4 “A6” Indoor Unit: Fan Motor (M1F) Lock, Overload


<b>Remote Controller Display</b>	A6
<b>Applicable Models</b>	All indoor units
<b>Method of Malfunction Detection</b>	Detection by failure of signal for detecting number of turns to come from the fan motor
<b>Malfunction Decision Conditions</b>	When number of turns can't be detected even when output voltage to the fan is maximum
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Fan motor lock</li> <li>■ Disconnected or faulty wiring between fan motor and PC board</li> </ul>

**Troubleshooting**



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

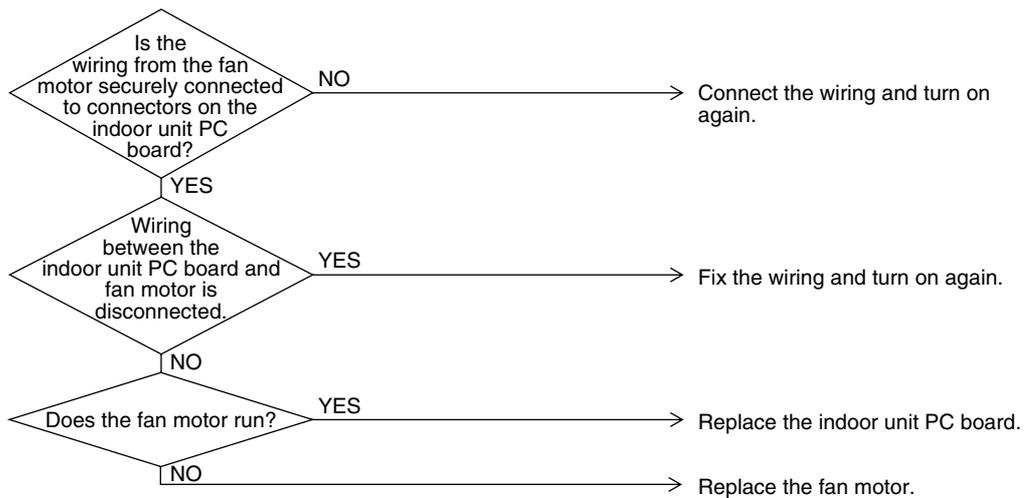

(V2779)

### 3.5 “A7” Indoor Unit: Malfunction of Swing Flap Motor (M1S)

Remote  
Controller  
Display

A7

Applicable  
Models

FXCQ, FXHQ, FXKQ

Method of  
Malfunction  
Detection

Utilizes ON/OFF of the limit switch when the motor turns.

Malfunction  
Decision  
Conditions

When ON/OFF of the microswitch for positioning cannot be reversed even though the swing flap motor is energized for a specified amount of time (about 30 seconds).


Supposed  
Causes

- Defect of swing motor
- Defect of connection cable (power supply and limit switch)
- Defect of air flow direction adjusting flap-cam
- Defect of indoor unit PC board

Troubleshooting



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

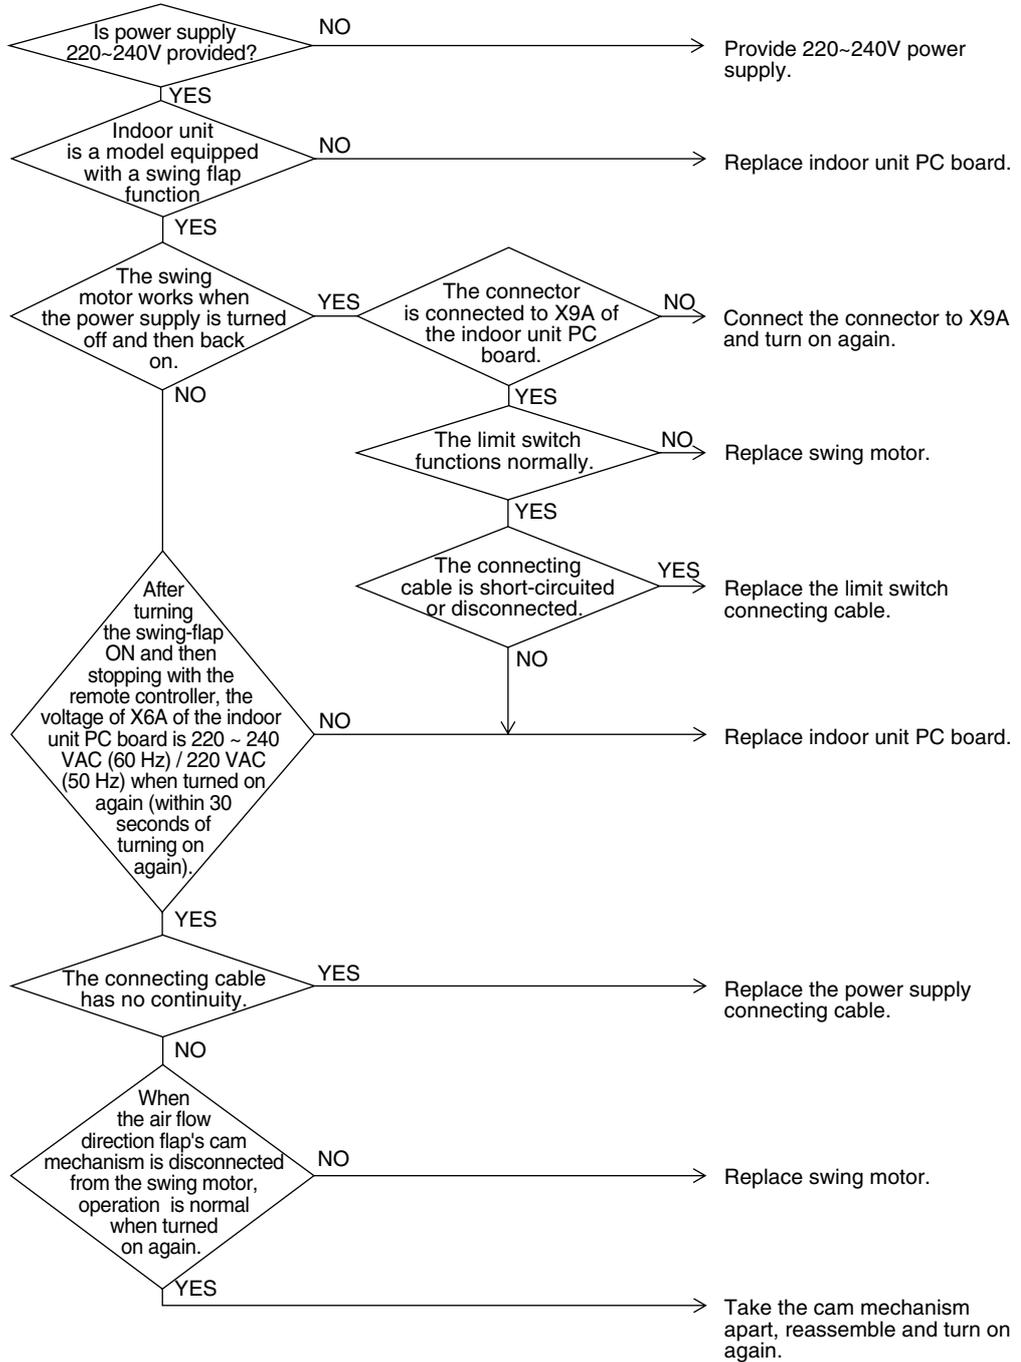

(V2780)

### 3.6 “R9” Indoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E)

Remote  
Controller  
Display

R9

Applicable  
Models

All indoor unit models

Method of  
Malfunction  
Detection

Use a microcomputer to check the electronic expansion valve for coil conditions.

Malfunction  
Decision  
Conditions

When the pin input of the electronic expansion valve is not normal while in the initialization of the microcomputer.

Supposed  
Causes


- Malfunction of moving part of electronic expansion valve
- Defect of indoor unit PC board
- Defect of connecting cable

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

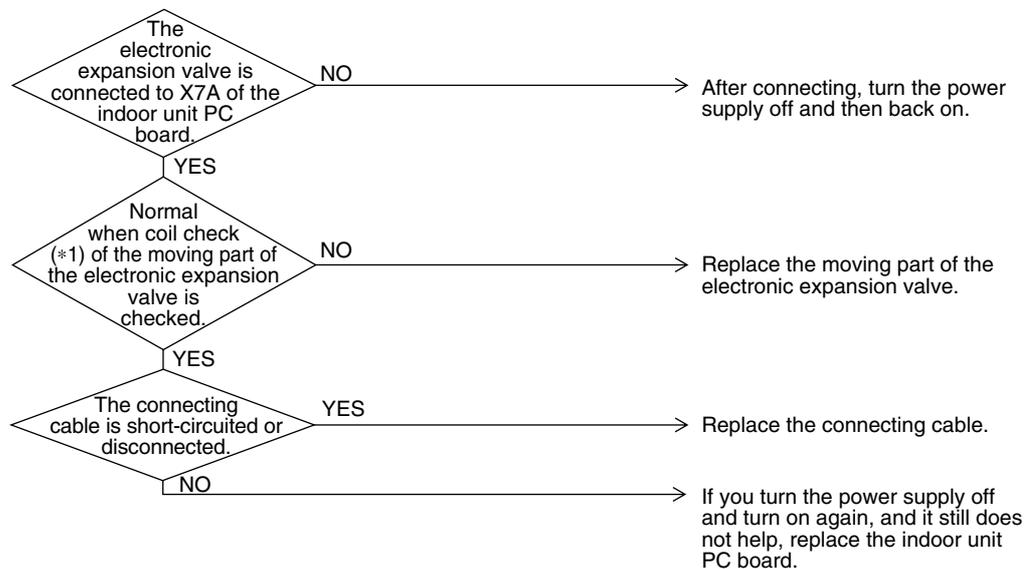

(V2781)

\*1: Coil check method for the moving part of the electronic expansion valve  
 Disconnect the electronic expansion valve from the PC board and check the continuity between the connector pins.

(Normal)

Pin No.	1. White	2. Yellow	3. Orange	4. Blue	5. Red	6. Brown
1. White		x	○ Approx. 300Ω	x	○ Approx. 150Ω	x
2. Yellow			x	○ Approx. 300Ω	x	○ Approx. 150Ω
3. Orange				x	○ Approx. 150Ω	x
4. Blue					x	○ Approx. 150Ω
5. Red						x
6. Brown						

○: Continuity

x: No continuity

### 3.7 “AF” Indoor Unit: Drain Level above Limit

Remote  
Controller  
Display

AF

Applicable  
Models

FXCQ, FXFQ, FXSQ, FXKQ, FXMQ, FXDQ, FXMQ-MF, FXUQ

Method of  
Malfunction  
Detection

Water leakage is detected based on float switch ON/OFF operation while the compressor is in non-operation.

Malfunction  
Decision  
Conditions

When the float switch changes from ON to OFF while the compressor is in non-operation.

Supposed  
Causes


- Humidifier unit (optional accessory) leaking
- Defect of drain pipe (upward slope, etc.)
- Defect of indoor unit PC board

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

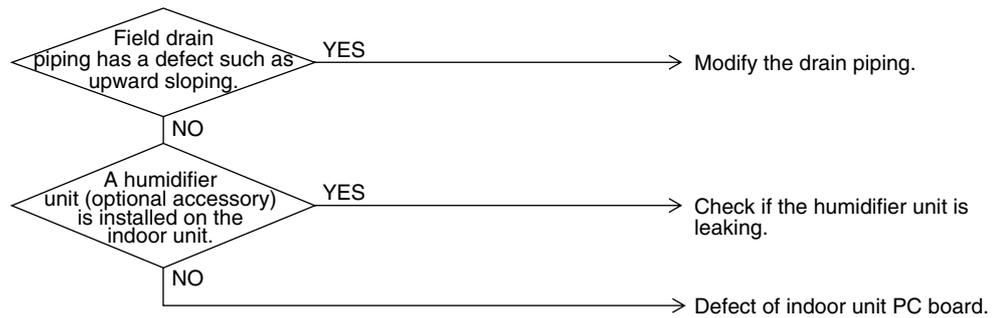


(V2782)

### 3.8 “RJ” Indoor Unit: Malfunction of Capacity Determination Device

<b>Remote controller display</b>	RJ
<b>Applicable Models</b>	All indoor unit models
<b>Method of Malfunction Detection</b>	Capacity is determined according to resistance of the capacity setting adaptor and the memory inside the IC memory on the indoor unit PC board, and whether the value is normal or abnormal is determined.
<b>Malfunction Decision Conditions</b>	Operation and: When the capacity code is not contained in the PC board's memory, and the capacity setting adaptor is not connected.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ You have forgotten to install the capacity setting adaptor.</li> <li>■ Defect of indoor unit PC board</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

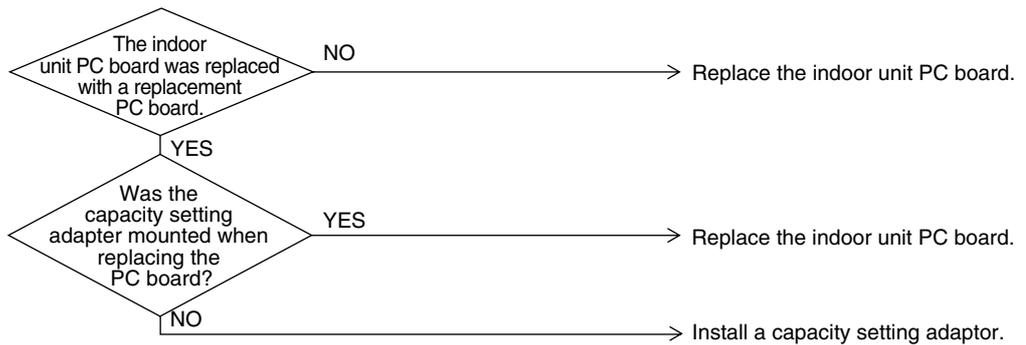

(V2783)


### 3.9 “E4” Indoor Unit: Malfunction of Thermistor (R2T) for Heat Exchanger

Remote Controller Display	E4
Applicable Models	All indoor unit models
Method of Malfunction Detection	Malfunction detection is carried out by temperature detected by heat exchanger thermistor.
Malfunction Decision Conditions	When the heat exchanger thermistor becomes disconnected or shorted while the unit is running.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Defect of thermistor (R2T) for liquid pipe</li> <li>■ Defect of indoor unit PC board</li> </ul>

#### Troubleshooting


**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

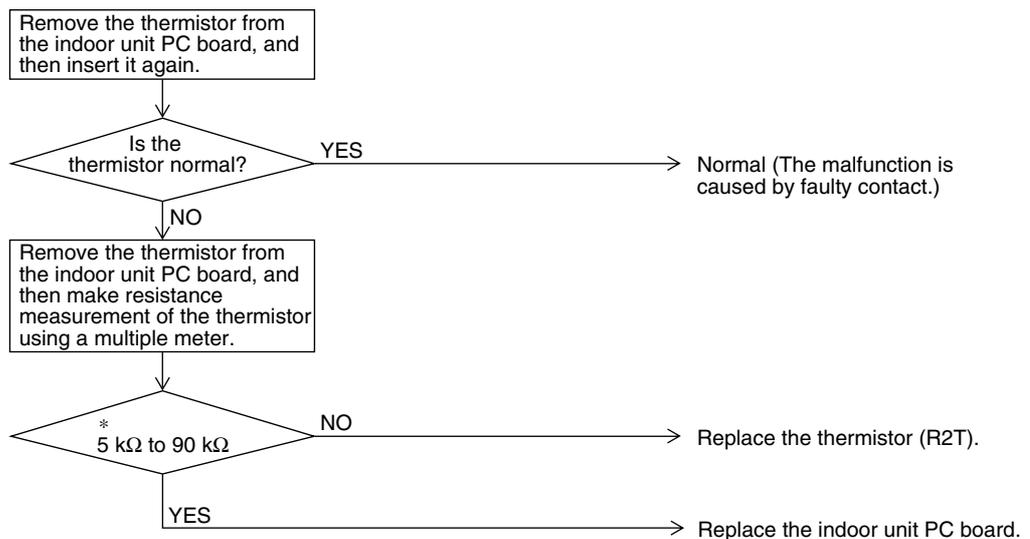

\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.


### 3.10 “E5” Indoor Unit: Malfunction of Thermistor (R3T) for Gas Pipes

<b>Remote Controller Display</b>	E5
<b>Applicable Models</b>	All indoor unit models
<b>Method of Malfunction Detection</b>	Malfunction detection is carried out by temperature detected by gas pipe thermistor.
<b>Malfunction Decision Conditions</b>	When the gas pipe thermistor becomes disconnected or shorted while the unit is running.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of indoor unit thermistor (R3T) for gas pipe</li> <li>■ Defect of indoor unit PC board</li> </ul>

**Troubleshooting**



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

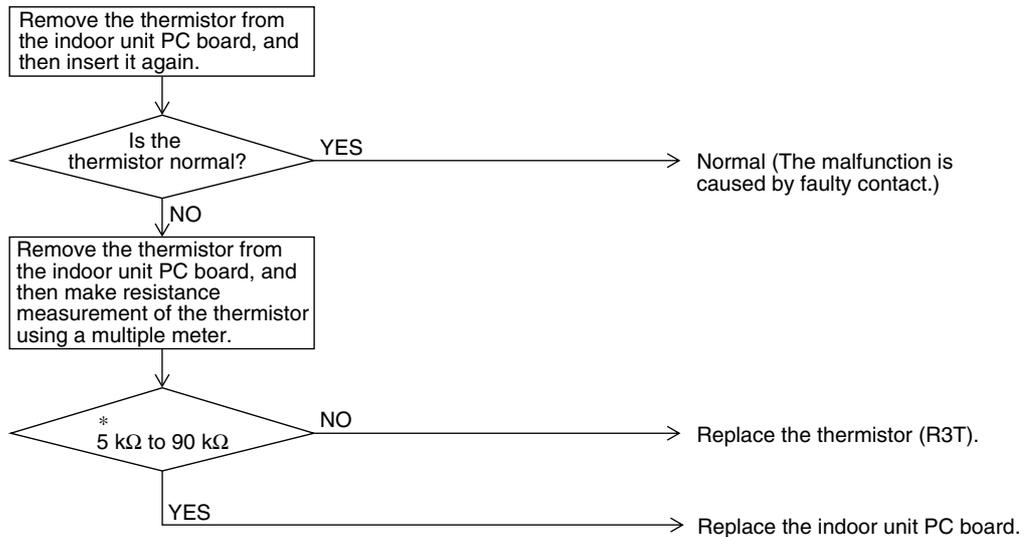

\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.11 “[9]” Indoor Unit: Malfunction of Thermistor (R1T) for Suction Air

Remote  
Controller  
Display

[9]

Applicable  
Models

All indoor unit models

Method of  
Malfunction  
Detection

Malfunction detection is carried out by temperature detected by suction air temperature thermistor.

Malfunction  
Decision  
Conditions

When the suction air temperature thermistor becomes disconnected or shorted while the unit is running.

Supposed  
Causes


- Defect of indoor unit thermistor (R1T) for air inlet
- Defect of indoor unit PC board

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

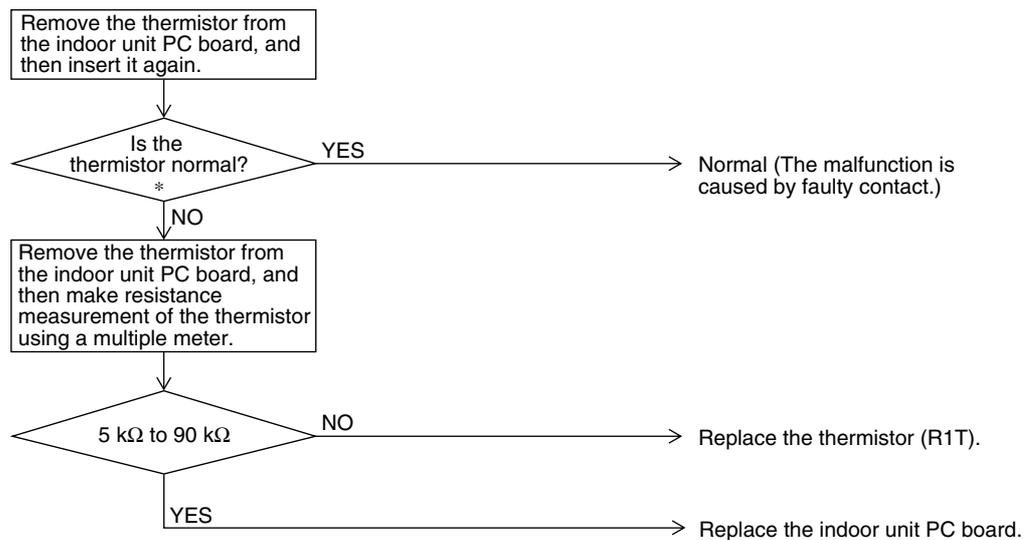


\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.12 “CJ” Indoor Unit: Malfunction of Thermostat Sensor in Remote Controller

<b>Remote Controller Display</b>	CJ
<b>Applicable Models</b>	All indoor unit models
<b>Method of Malfunction Detection</b>	Malfunction detection is carried out by temperature detected by remote controller air temperature thermistor. (Note:)
<b>Malfunction Decision Conditions</b>	When the remote controller air temperature thermistor becomes disconnected or shorted while the unit is running.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of remote controller thermistor</li> <li>■ Defect of remote controller PC board</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

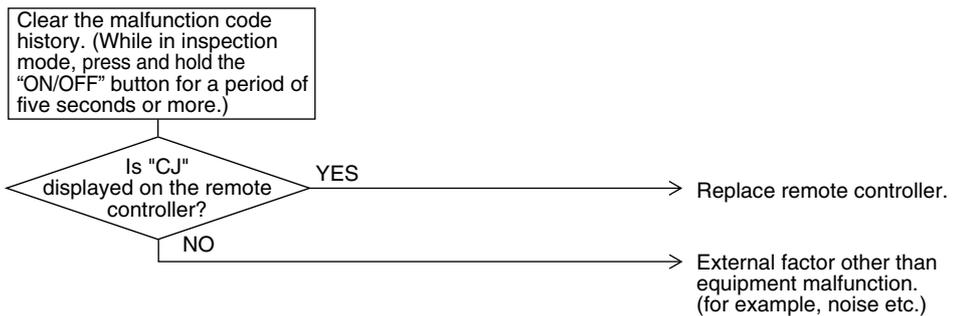

(V2787)

 **Note:** In case of remote controller thermistor malfunction, unit is still operable by suction air thermistor on indoor unit.

 \* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.13 “E1” Outdoor Unit: PC Board Defect

Remote  
Controller  
Display

E1

Applicable  
Models

RXYQ5P~54P

Method of  
Malfunction  
Detection

Check data from E<sup>2</sup>PROM

Malfunction  
Decision  
Conditions

When data could not be correctly received from the E<sup>2</sup>PROM  
E<sup>2</sup>PROM : Type of nonvolatile memory. Maintains memory contents even when the power supply is turned off.

Supposed  
Causes


- Defect of outdoor unit PC board (A1P)

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

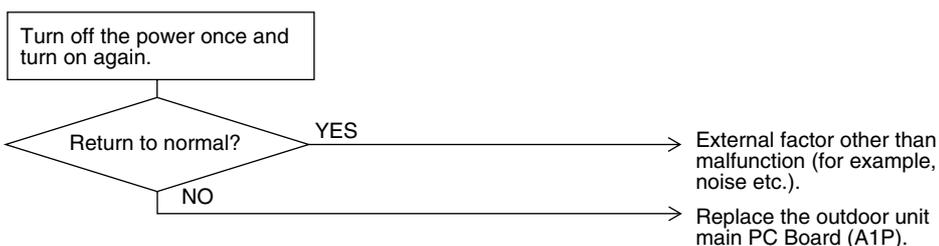

(V3064)

### 3.14 “E3” Outdoor Unit: Actuation of High Pressure Switch

<p><b>Remote Controller Display</b></p>	<p>E3</p>
<p><b>Applicable Models</b></p>	<p>RXYQ5P~54P</p>
<p><b>Method of Malfunction Detection</b></p>	<p>Abnormality is detected when the contact of the high pressure protection switch opens.</p>
<p><b>Malfunction Decision Conditions</b></p>	<p>Error is generated when the HPS activation count reaches the number specific to the operation mode.                  (Reference) Operating pressure of high pressure switch                  Operating pressure: 4.0MPa                  Reset pressure: 2.85MPa</p>
<p><b>Supposed Causes</b></p>	<ul style="list-style-type: none"> <li>■ Actuation of outdoor unit high pressure switch</li> <li>■ Defect of High pressure switch</li> <li>■ Defect of outdoor unit PC board</li> <li>■ Instantaneous power failure</li> <li>■ Faulty high pressure sensor</li> </ul>

Troubleshooting

**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Check for the points shown below.  
 ① Is the stop valve open?  
 ② Is the HPS connector properly connected to the main PCB?  
 ③ Does the high pressure switch have continuity?

Are the three points above OK?  
 NO → Rectify defective points, if any.  
 YES

· Mount a pressure gauge on the high-pressure service port.  
 · Connect the Service Checker.  
 · Reset the operation using the remote controller, and then restart the operation.


Does the stop due to malfunction (E3) recur?  
 YES → Is the HPS operating value normal (i.e., 4.0MPa)?  
 NO → Replace the HPS.  
 YES

Are the characteristics of the high pressure sensor normal? (See \*1.)  
 NO → Replace the high pressure sensor.  
 YES

Is the pressure detected with the PCB normal? (See \*2.)  
 NO → Replace the main PCB.  
 YES

· The high pressure sensor is normal, and the pressure detected with the PCB is also normal.  
 · The high pressure has really become high.  
**CHECK 3** Referring to information on page 312, remove the causes by which the high pressure has become high.

- \*1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge.  
 (As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on page 367.)
- \*2: Make a comparison between the high pressure value checked with the Service Checker and the voltage of the pressure sensor (see \*1).
- \*3: Make measurement of voltage of the pressure sensor.

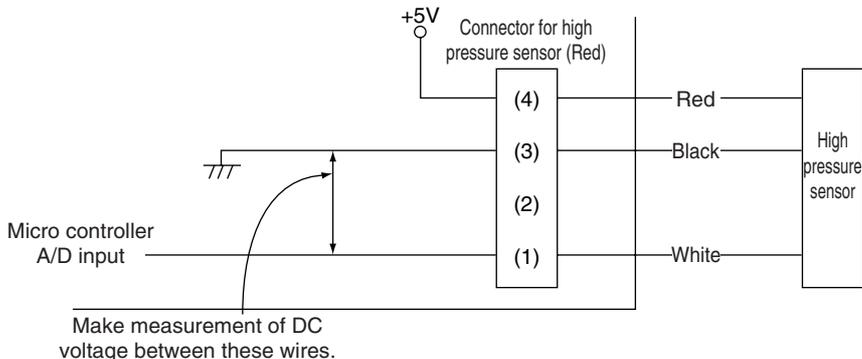

### 3.15 “E4” Outdoor Unit: Actuation of Low Pressure Sensor

Remote  
Controller  
Display

E4

Applicable  
Models

RXYQ5P~54P

Method of  
Malfunction  
Detection

Abnormality is detected by the pressure value with the low pressure sensor.

Malfunction  
Decision  
Conditions

Error is generated when the low pressure is dropped under specific pressure.  
Operating pressure:0.07MPa


Supposed  
Causes

- Abnormal drop of low pressure (Lower than 0.07MPa)
- Defect of low pressure sensor
- Defect of outdoor unit PC board
- Stop valve is not opened.

Troubleshooting



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

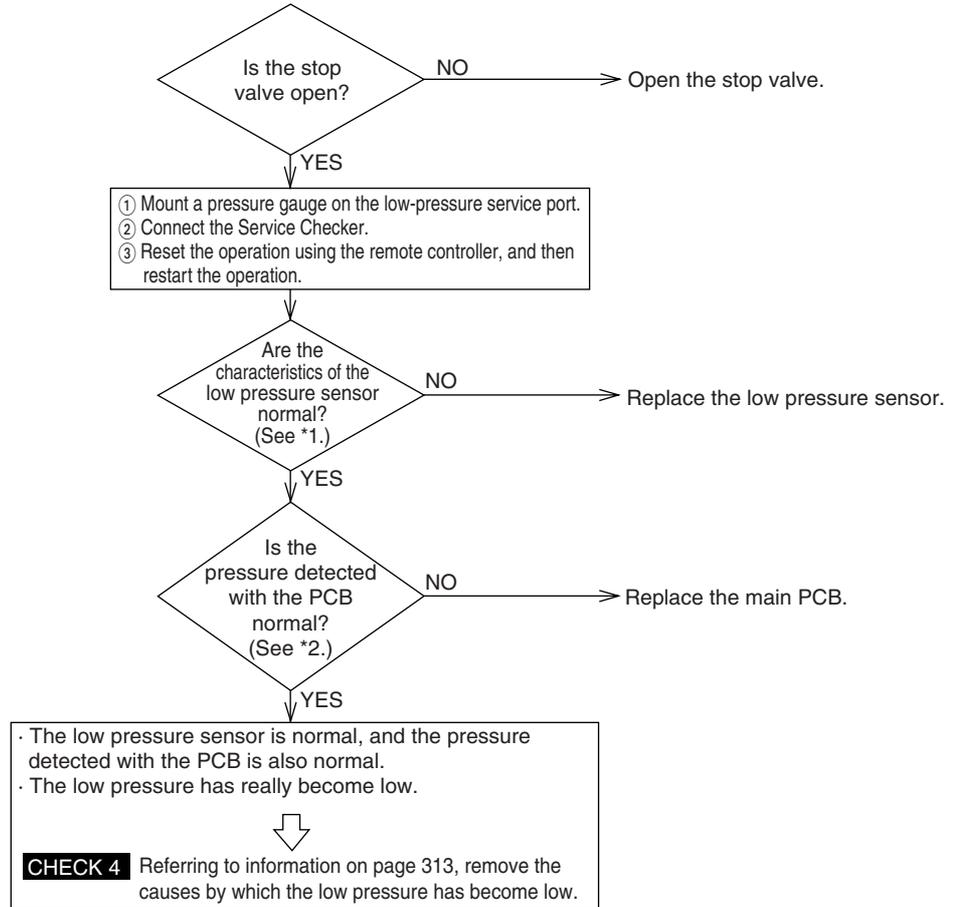


\*1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge.

(As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure according to information on page 367.)

\*2: Make a comparison between the low pressure value checked with the Service Checker and the voltage of the pressure sensor (see \*1).

\*3: Make measurement of voltage of the pressure sensor.

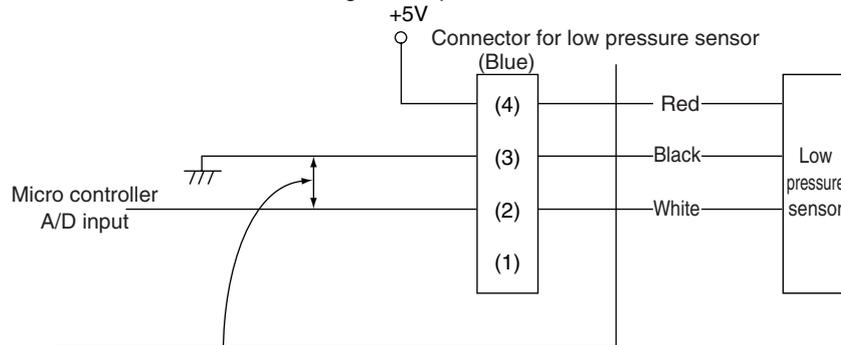

Make measurement of DC voltage between these wires.


### 3.16 “E5” Outdoor Unit: Inverter Compressor Motor Lock

<p><b>Remote Controller Display</b></p>	<p>E5</p>
<p><b>Applicable Models</b></p>	<p>RXYQ5P~54P</p>
<p><b>Method of Malfunction Detection</b></p>	<p>Inverter PC board takes the position signal from UVW line connected between the inverter and compressor, and the malfunction is detected when any abnormality is observed in the phase-current waveform.</p>
<p><b>Malfunction Decision Conditions</b></p>	<p>This malfunction will be output when the inverter compressor motor does not start up even in forced startup mode.</p>
<p><b>Supposed Causes</b></p>	<ul style="list-style-type: none"> <li>■ Inverter compressor lock</li> <li>■ High differential pressure (0.5MPa or more)</li> <li>■ Incorrect UVW wiring</li> <li>■ Faulty inverter PC board</li> <li>■ Stop valve is left in closed.</li> </ul>

Troubleshooting



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

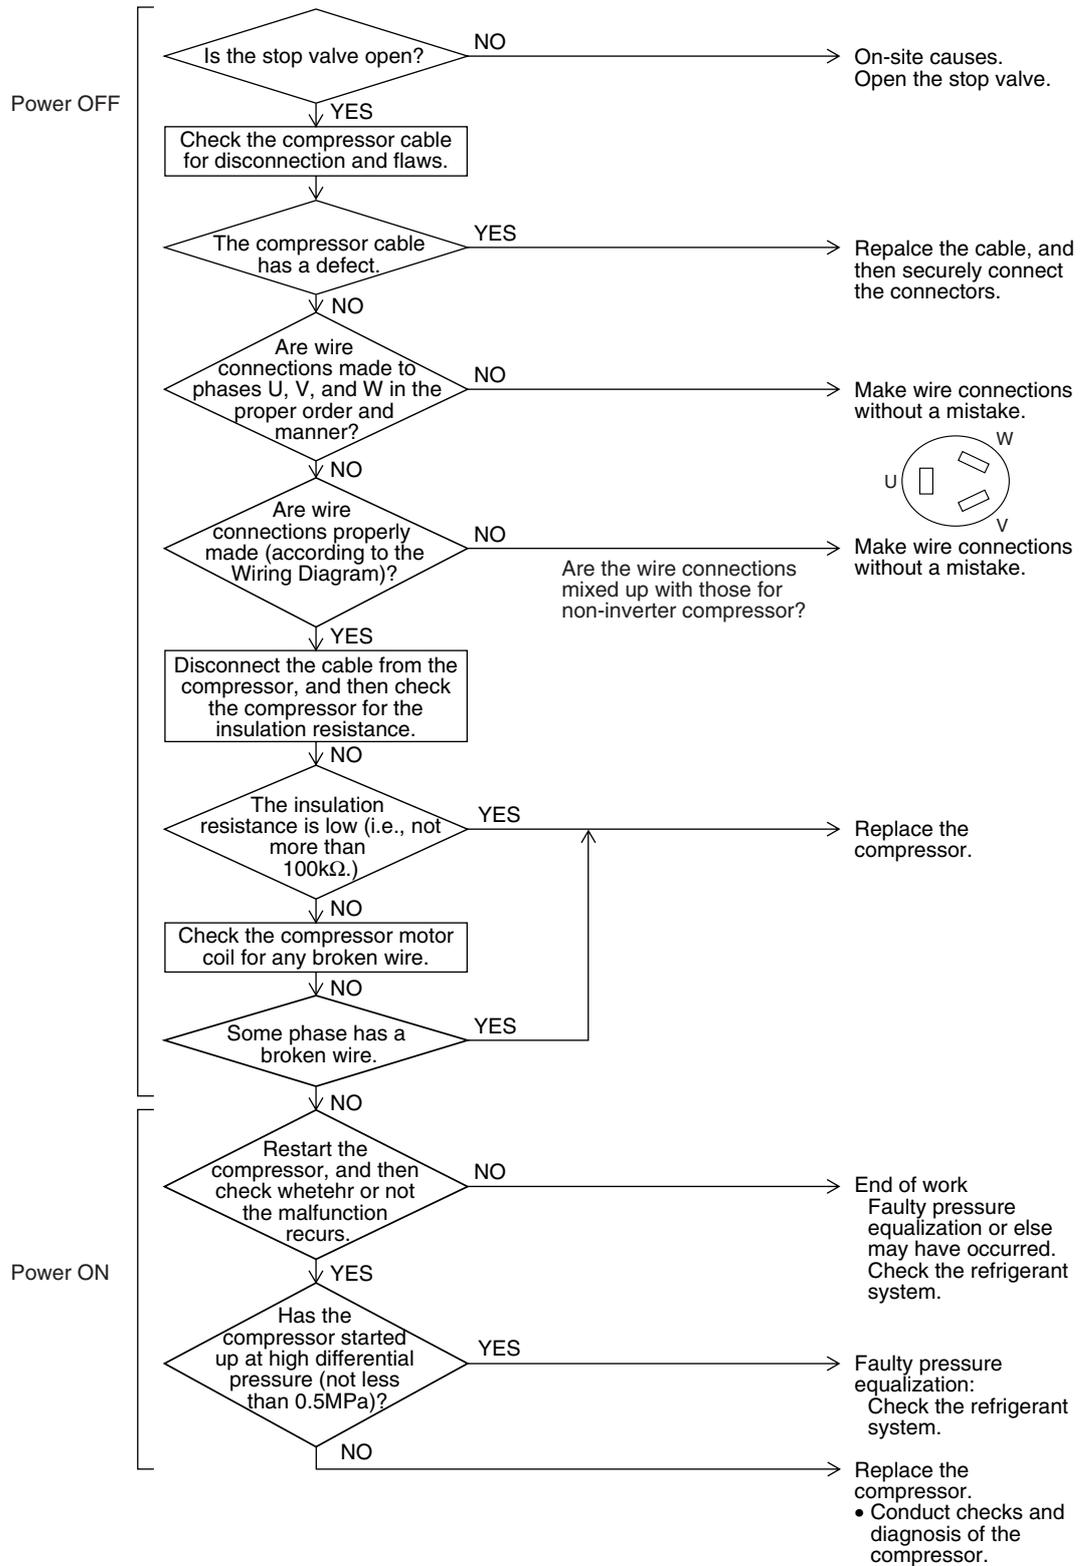


### 3.17 “E6” Outdoor Unit: STD Compressor Motor Overcurrent/ Lock

<b>Remote Controller Display</b>	E6
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Detects the overcurrent with current sensor (CT).
<b>Malfunction Decision Conditions</b>	Malfunction is decided when the detected current value exceeds the below mentioned value for 2 seconds. <ul style="list-style-type: none"> <li>■ 400 V unit : 15.0 A</li> </ul>
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Closed stop valve</li> <li>■ Obstacles at the air outlet</li> <li>■ Improper power voltage</li> <li>■ Faulty magnetic switch</li> <li>■ Faulty compressor</li> <li>■ Faulty current sensor (A6P, A7P)</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

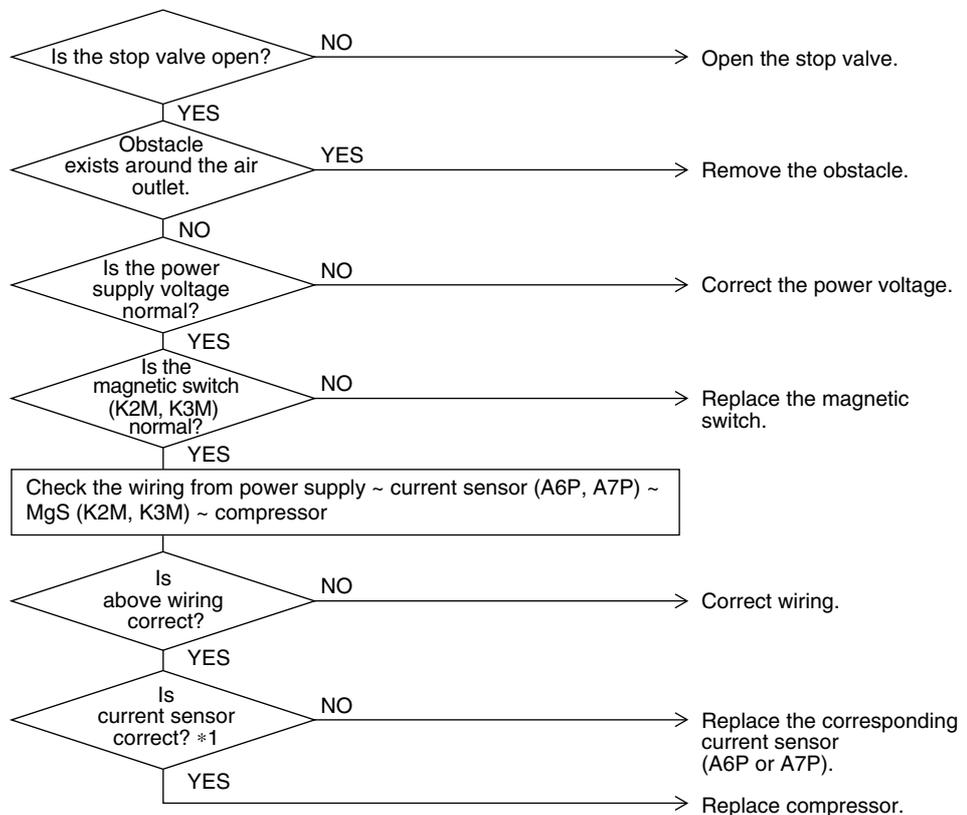

(V3051)



**Note:** \*1 Abnormal case

- The current sensor value is 0 during STD compressor operation.
- The current sensor value is more than 15.0A during STD compressor stop.

### 3.18 “E7” Outdoor Unit: Malfunction of Outdoor Unit Fan Motor

Remote  
Controller  
Display

E7

Applicable  
Models

RXYQ5P~54P

Method of  
Malfunction  
Detection

Malfunction of fan motor system is detected according to the fan speed detected by hall IC when the fan motor runs.

Malfunction  
Decision  
Conditions

- When the fan runs with speed less than a specified one for 6 seconds or more when the fan motor running conditions are met
- When connector detecting fan speed is disconnected
- When malfunction is generated 4 times, the system shuts down.

Supposed  
Causes


- Malfunction of fan motor
- The harness connector between fan motor and PC board is left in disconnected, or faulty connector
- Fan does not run due to foreign matters tangled
- Clearing condition: Operate for 5 minutes (normal)

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

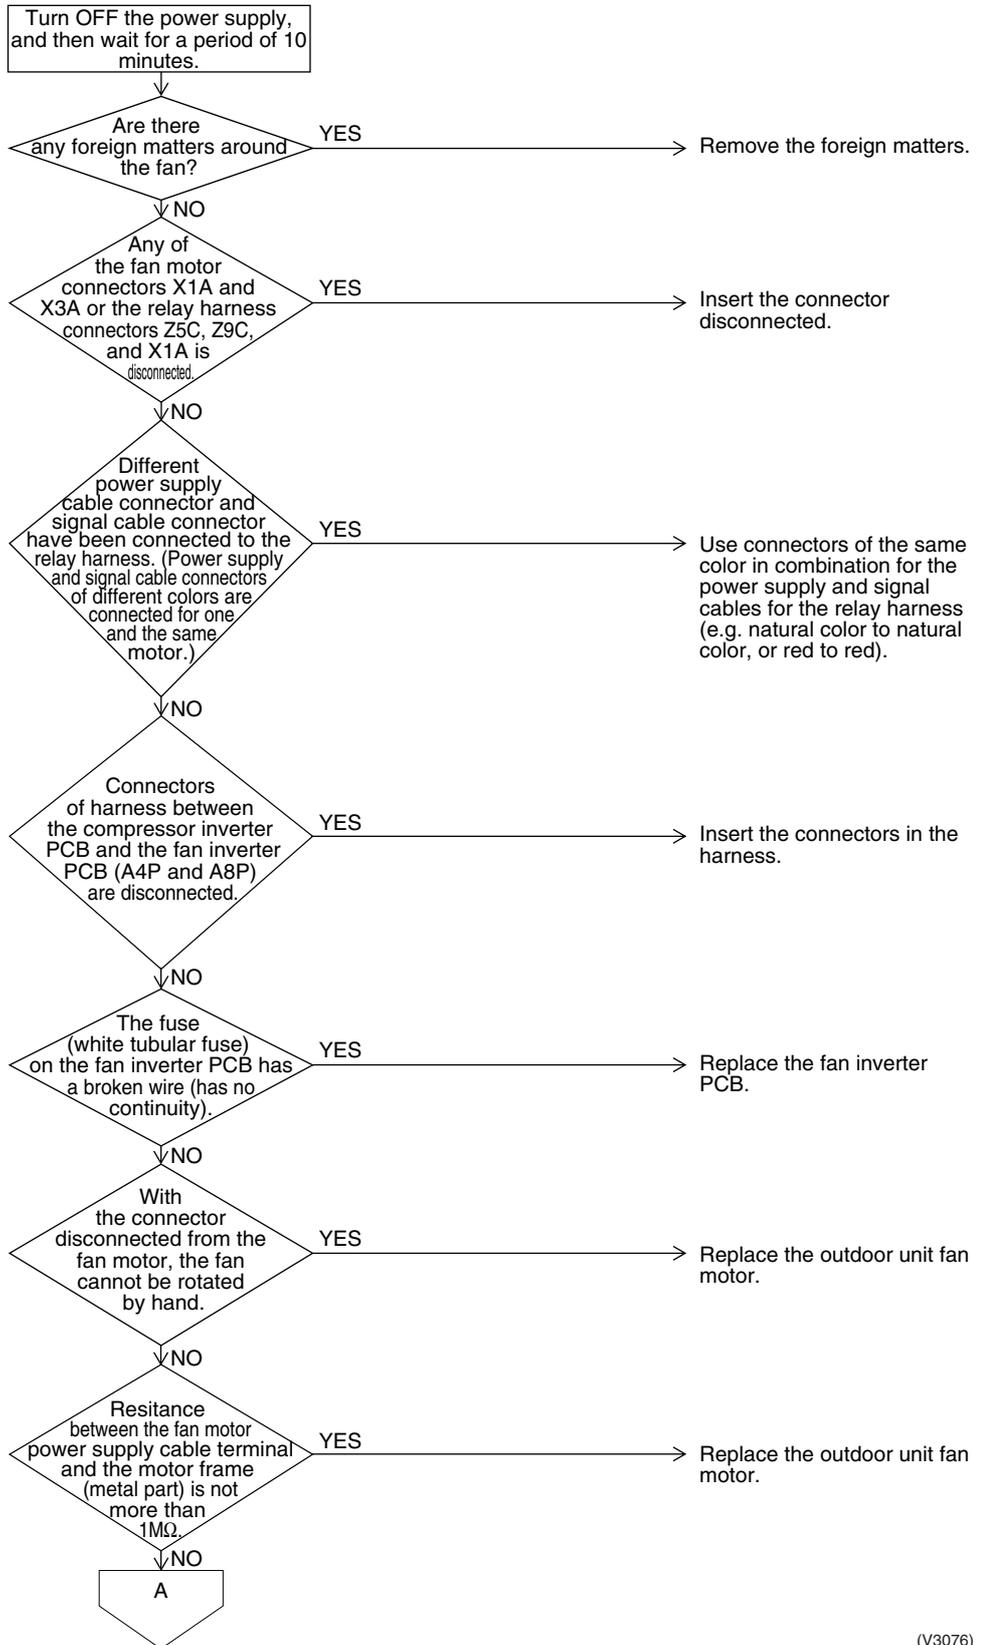

(V3076)

## Troubleshooting

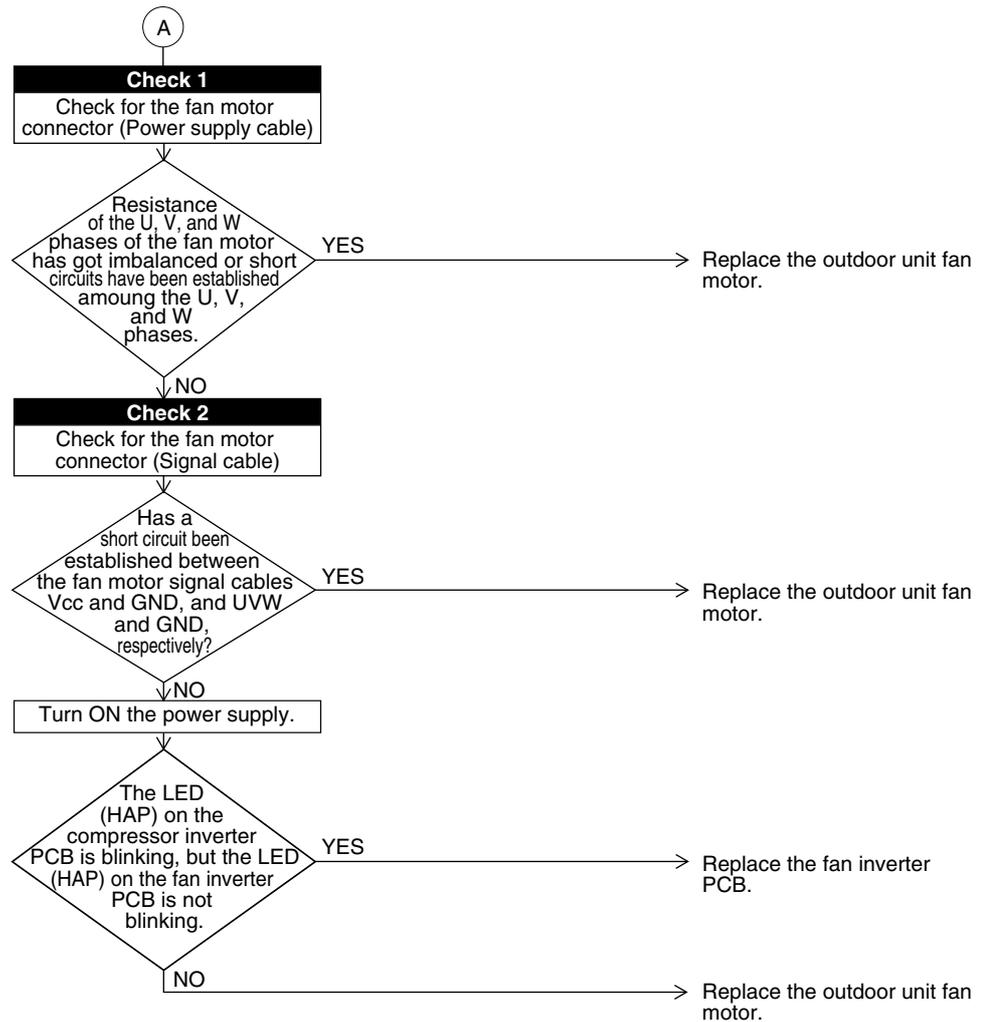

**i** **Note:** Refer check 1 and 2 to P.311.

### 3.19 “E9” Outdoor Unit: Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y2E)


<b>Remote Controller Display</b>	E9
<b>Applicable Models</b>	RXYQ5P~54PY1
<b>Method of Malfunction Detection</b>	<p>Check disconnection of connector</p> <p>Check continuity of expansion valve coil</p>
<b>Malfunction Decision Conditions</b>	Error is generated under no common power supply when the power is on.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of moving part of electronic expansion valve</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of connecting cable</li> </ul>

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

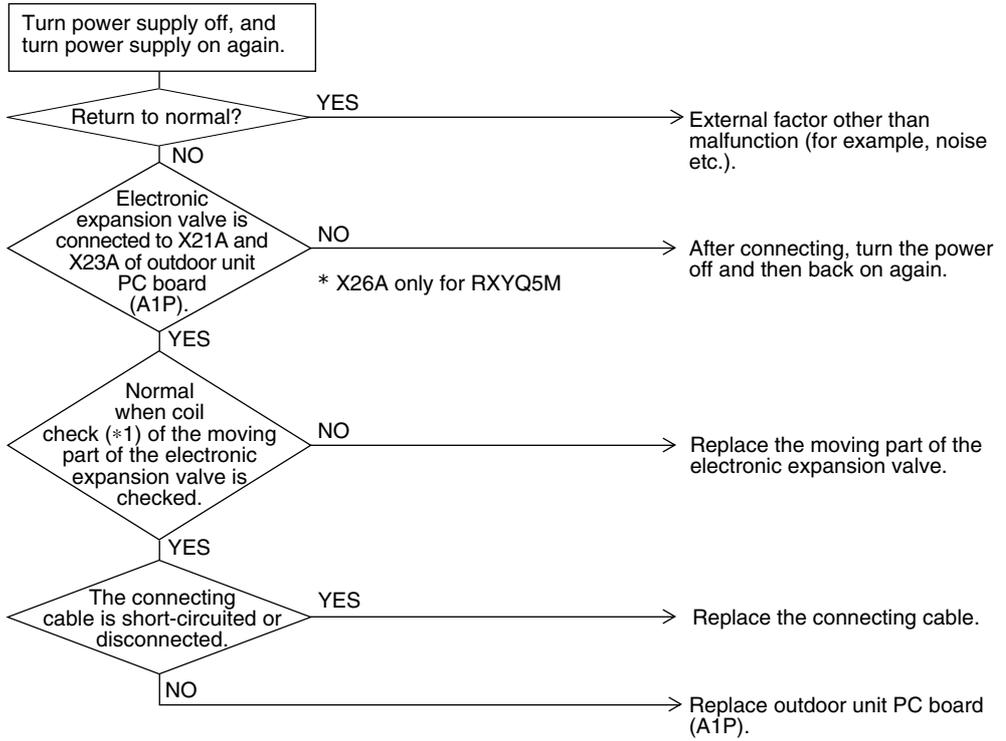

(V3067)

\*Make measurement of resistance between the connector pins, and then make sure the resistance falls in the range of 40 to 50Ω.

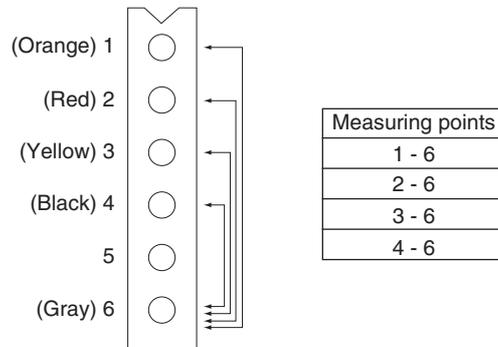

(V3067)

## 3.20 “F3” Outdoor Unit: Abnormal Discharge Pipe Temperature


<b>Remote Controller Display</b>	F3
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Abnormality is detected according to the temperature detected by the discharge pipe temperature sensor.
<b>Malfunction Decision Conditions</b>	When the discharge pipe temperature rises to an abnormally high level When the discharge pipe temperature rises suddenly
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Faulty discharge pipe temperature sensor</li> <li>■ Faulty connection of discharge pipe temperature sensor</li> <li>■ Faulty outdoor unit PC board</li> </ul>

**Troubleshooting**



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

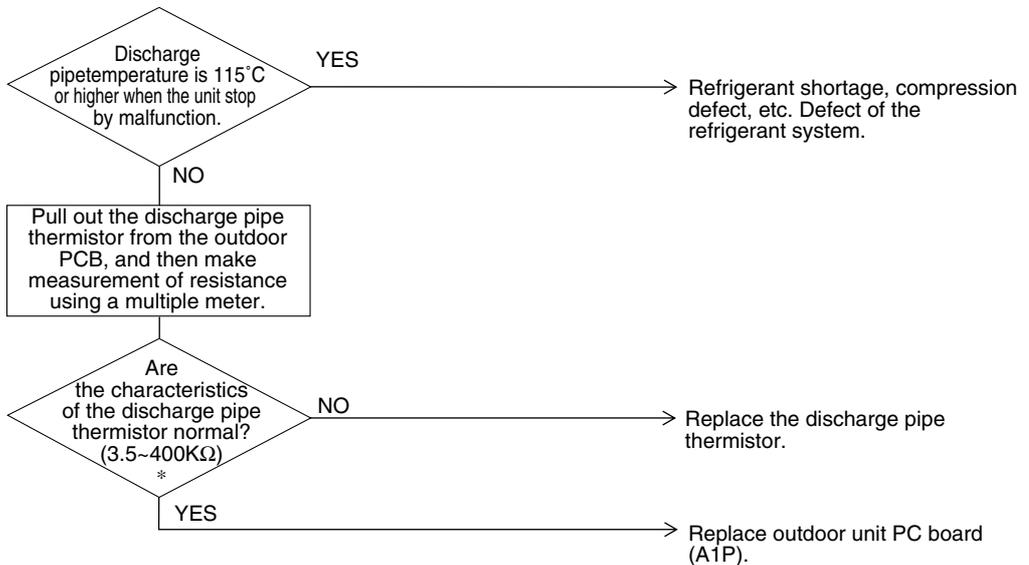

(V3068)



\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P366.

### 3.21 “F6” Outdoor Unit: Refrigerant Overcharged

Remote Controller Display

F6

Applicable Models

RXYQ5P~54P

Method of Malfunction Detection

Excessive charging of refrigerant is detected by using the outside air temperature, heat exchanging deicer temperature and liquid pipe temperature during a check run.

Malfunction Decision Conditions

When the amount of refrigerant, which is calculated by using the outside air temperature, heat exchanging deicer temperature and liquid pipe temperature during a check run, exceeds the standard.

Supposed Causes


- Refrigerant overcharge
- Misalignment of the outside air thermistor
- Misalignment of the heat exchanging deicer thermistor
- Misalignment of the liquid pipe thermistor

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

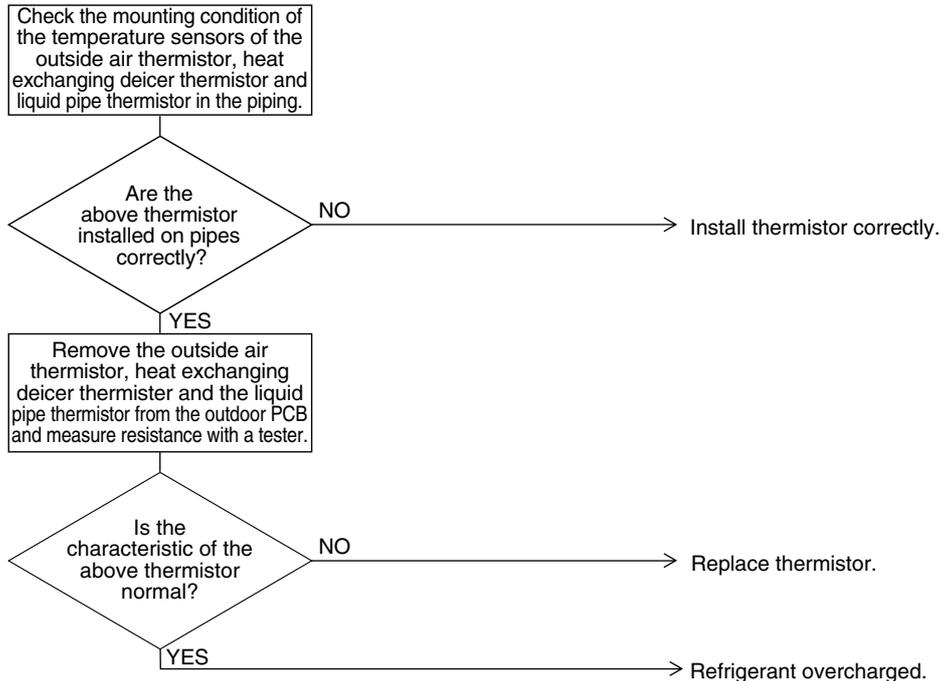

(V2797)




\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.22 “H7” Outdoor Unit: Abnormal Outdoor Fan Motor Signal

Remote Controller Display	H7
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Detection of abnormal signal from fan motor.
Malfunction Decision Conditions	In case of detection of abnormal signal at starting fan motor.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Abnormal fan motor signal (circuit malfunction)</li> <li>■ Broken, short or disconnection connector of fan motor connection cable</li> <li>■ Fan Inverter PC board malfunction</li> </ul>


**Troubleshooting**

**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

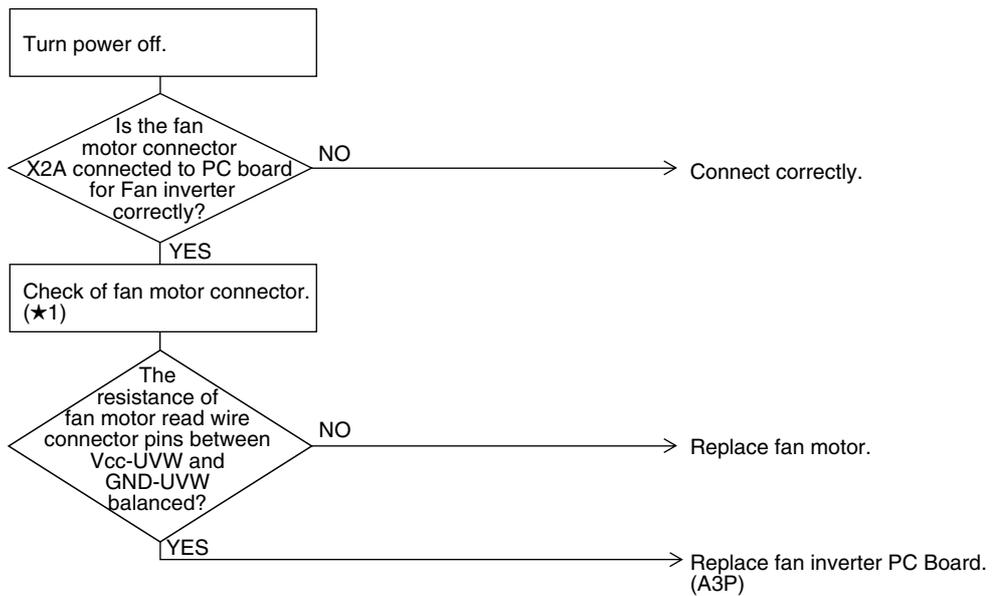

(V3069)

★1: Disconnect connector (X2A) and measure the following resistance.

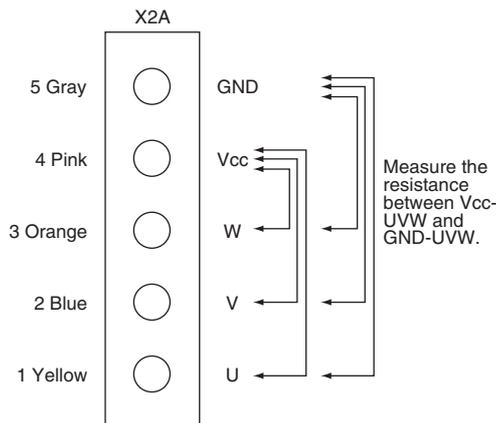

(V2799)

### 3.23 “H9” Outdoor Unit: Malfunction of Thermistor (R1T) for Outdoor Air

Remote  
Controller  
Display

H9

Applicable  
Models

RXYQ5P~54P

Method of  
Malfunction  
Detection

Malfunction is detected from the temperature detected by the outdoor air thermistor.

Malfunction  
Decision  
Conditions

When the outside air temperature thermistor has short circuit or open circuit.

Supposed  
Causes


- Defect of thermistor (R1T) for outdoor air
- Defect of outdoor unit PC board (A1P)

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

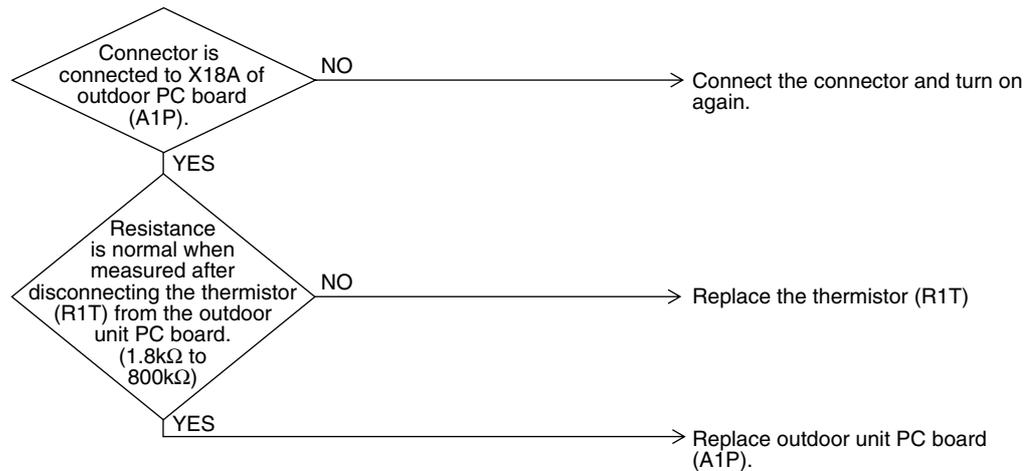

(V3070)



\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.24 “J2” Outdoor Unit: Current Sensor Malfunction

Remote Controller Display



Applicable Models

RXYQ5P~54P

Method of Malfunction Detection

Malfunction is detected according to the current value detected by current sensor.

Malfunction Decision Conditions

When the current value detected by current sensor becomes 5A or lower, or 40A or more during standard compressor operation.

Supposed Causes


- Faulty current sensor (A6P, A7P)
- Faulty outdoor unit PC board

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

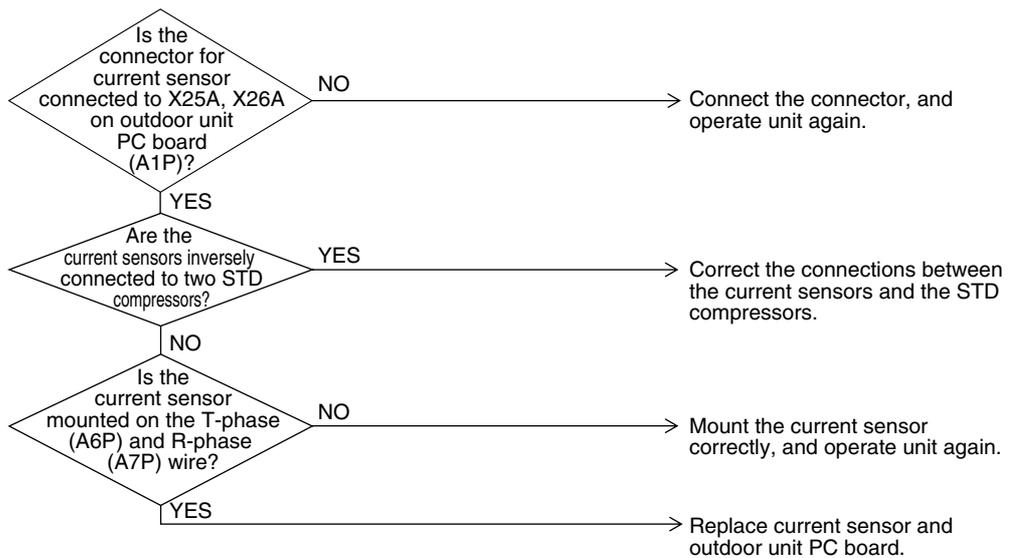


(V3071)

### 3.25 “J3” Outdoor Unit: Malfunction of Discharge Pipe Thermistor (R3, R31~33T)

Remote Controller Display	J3
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Malfunction is detected from the temperature detected by discharge pipe temperature thermistor.
Malfunction Decision Conditions	When a short circuit or an open circuit in the discharge pipe temperature thermistor is detected.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Defect of thermistor (R31T, R32T or R33T) for outdoor unit discharge pipe</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of thermistor connection</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

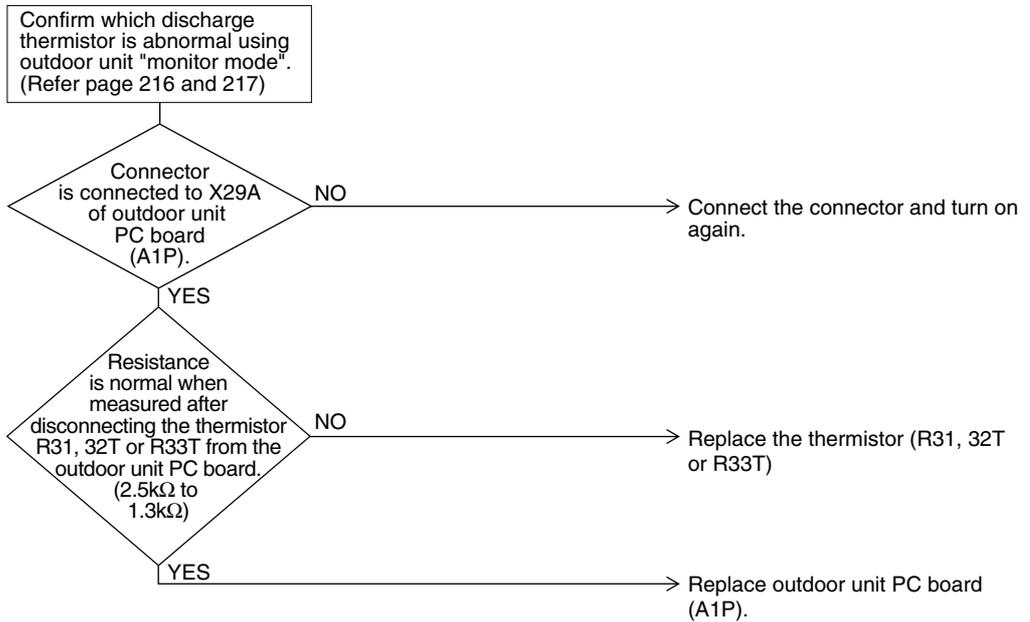

The alarm indicator is displayed when the fan is being used also.

 **Note:** 5 HP class ... R3T  
 8~12 HP class ... R31T, R32T  
 14, 16Hp class ... R31T, R32T and R33T


 \* Refer to “Thermistor Resistance / Temperature Characteristics” table on P366.

### 3.26 “J5” Outdoor Unit: Malfunction of Thermistor (R2T), (R7T) for Suction Pipe

Remote Controller Display	J5
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Malfunction is detected from the temperature detected by the suction pipe temperature thermistor.
Malfunction Decision Conditions	When a short circuit or an open circuit in the suction pipe temperature thermistor is detected.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Defect of thermistor (R2T), (R7T) for outdoor unit suction pipe</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of thermistor connection</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

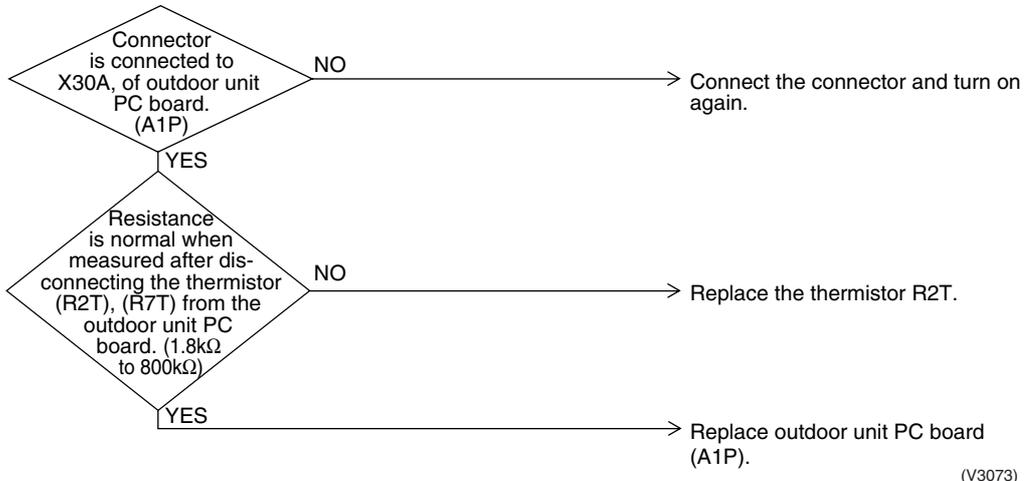

(V3073)




\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

## 3.27 “J6” Outdoor Unit: Malfunction of Thermistor (R4T) for Outdoor Unit Heat Exchanger

Remote Controller Display	J6
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Malfunction is detected from the temperature detected by the heat exchanger thermistor.
Malfunction Decision Conditions	When a short circuit or an open circuit in the heat exchange thermistor is detected.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Defect of thermistor (R4T) for outdoor unit coil</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of thermistor connection</li> </ul>
Troubleshooting	

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

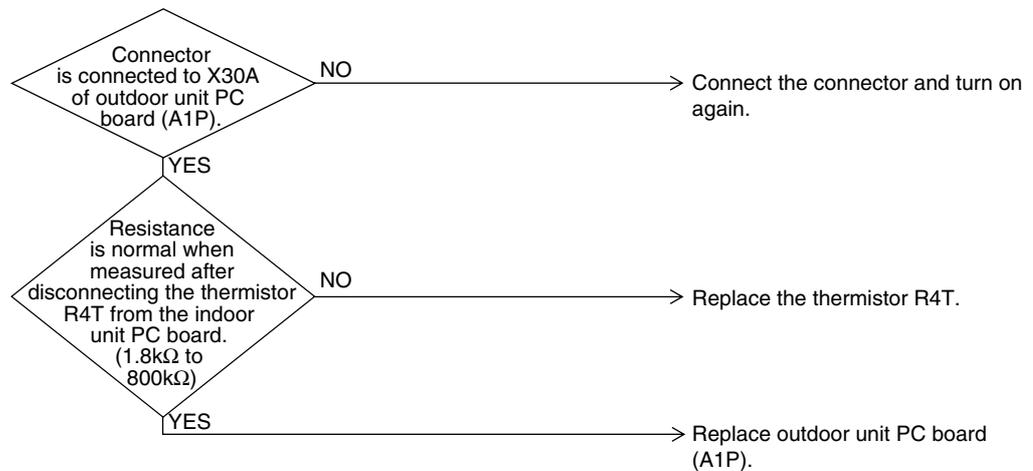


\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.28 “J7” Outdoor Unit: Malfunction of Liquid Pipe Thermistor (R6T)

Remote Controller Display	J7
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Malfunction is detected according to the temperature detected by liquid pipe thermistor.
Malfunction Decision Conditions	When the liquid pipe thermistor is short circuited or open.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Faulty liquid pipe thermistor (R6T)</li> <li>■ Faulty outdoor unit PC board</li> <li>■ Defect of thermistor connection</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

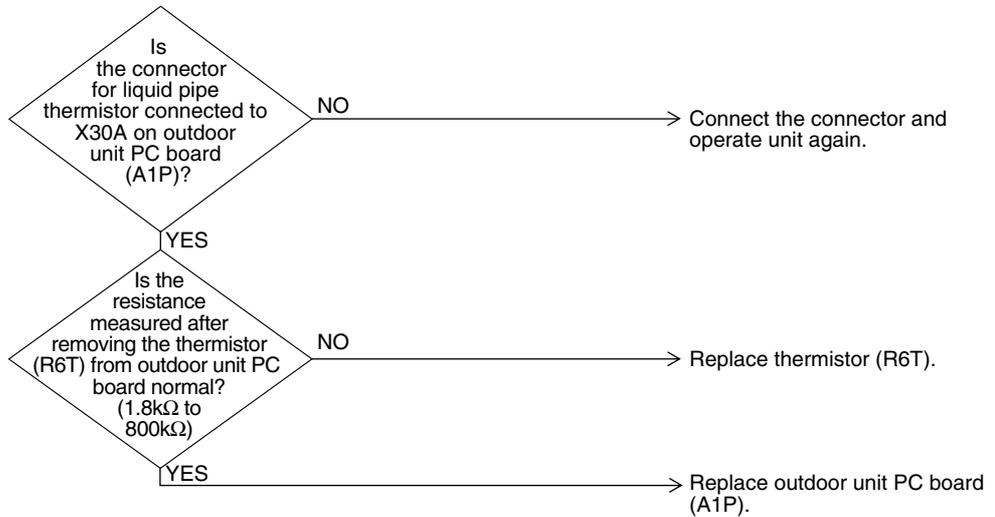

(V3075)




\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

## 3.29 “J9” Outdoor Unit: Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T)

Remote Controller Display	J9
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Malfunction is detected according to the temperature detected by subcooling heat exchanger gas pipe thermistor.
Malfunction Decision Conditions	When the subcooling heat exchanger gas pipe thermistor is short circuited or open.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Faulty subcooling heat exchanger gas pipe thermistor (R5T)</li> <li>■ Faulty outdoor unit PC board</li> </ul>
Troubleshooting	

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

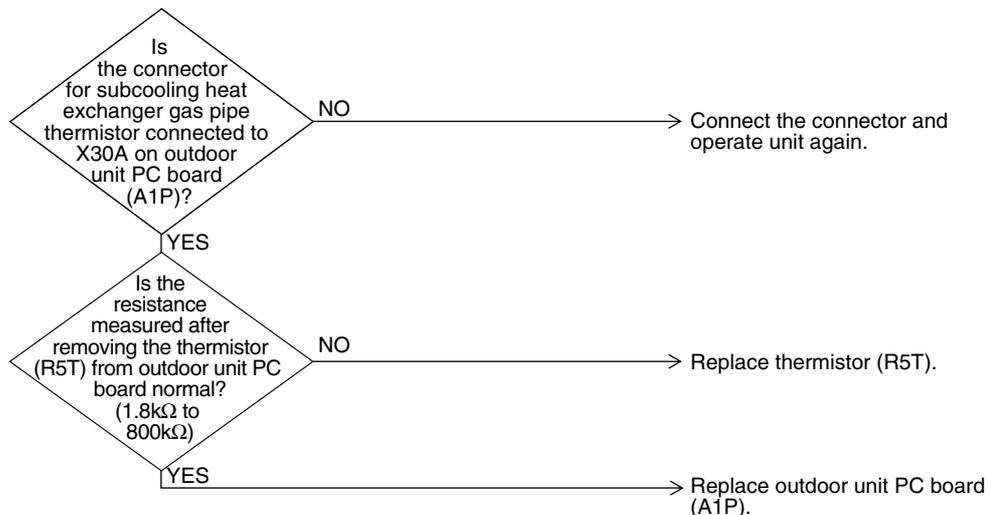

(V3075)



\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.30 “JA” Outdoor Unit: Malfunction of High Pressure Sensor

Remote Controller Display



Applicable Models

RXYQ5P~54P

Method of Malfunction Detection

Malfunction is detected from the pressure detected by the high pressure sensor.

Malfunction Decision Conditions


When the high pressure sensor is short circuit or open circuit.

Supposed Causes

- Defect of high pressure sensor system
- Connection of low pressure sensor with wrong connection.
- Defect of outdoor unit PC board.


Troubleshooting

**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

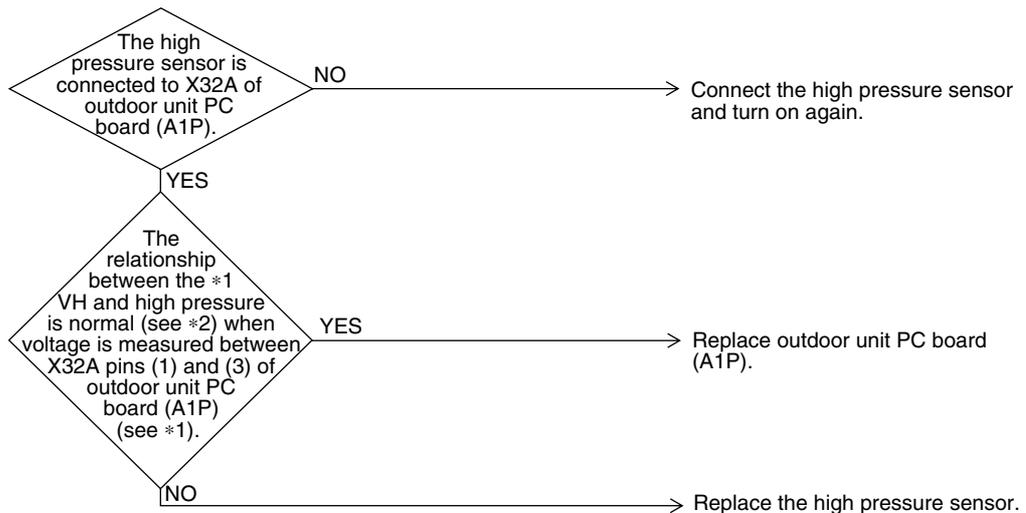

(V2806)

\*1: Voltage measurement point

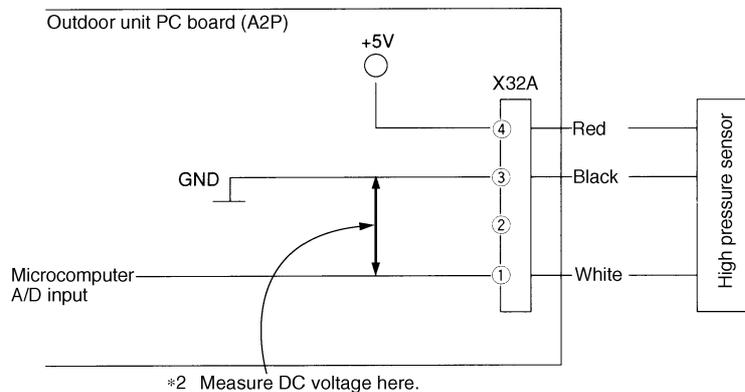

(V2807)



\*2: Refer to “Pressure Sensor, Pressure / Voltage Characteristics” table on P367.

### 3.31 “JC” Outdoor Unit: Malfunction of Low Pressure Sensor

Remote  
Controller  
Display



Applicable  
Models

RXYQ5P~54P

Method of  
Malfunction  
Detection

Malfunction is detected from pressure detected by low pressure sensor.

Malfunction  
Decision  
Conditions

When the low pressure sensor is short circuit or open circuit.

Supposed  
Causes


- Defect of low pressure sensor system
- Connection of high pressure sensor with wrong connection.
- Defect of outdoor unit PC board.

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

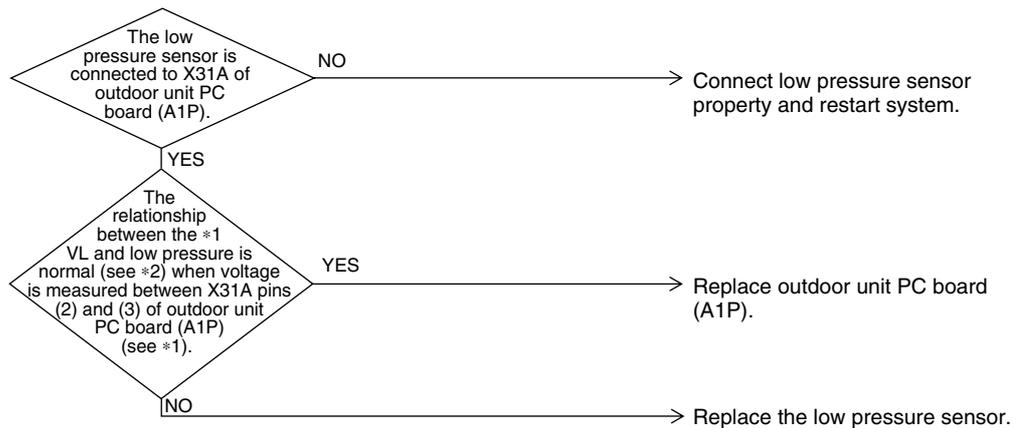

(V2808)

\*1: Voltage measurement point

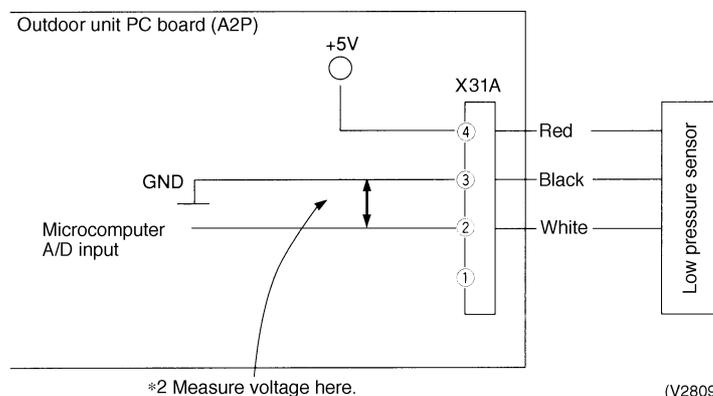

(V2809)




\*2: Refer to “Pressure Sensor, Pressure / Voltage Characteristics” table on P367.


### 3.32 “L4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise

<b>Remote Controller Display</b>	L4
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Fin temperature is detected by the thermistor of the radiation fin.
<b>Malfunction Decision Conditions</b>	When the temperature of the inverter radiation fin increases above 93°C.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Actuation of fin thermal (Actuates above 93°C)</li> <li>■ Defect of inverter PC board</li> <li>■ Defect of fin thermistor</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

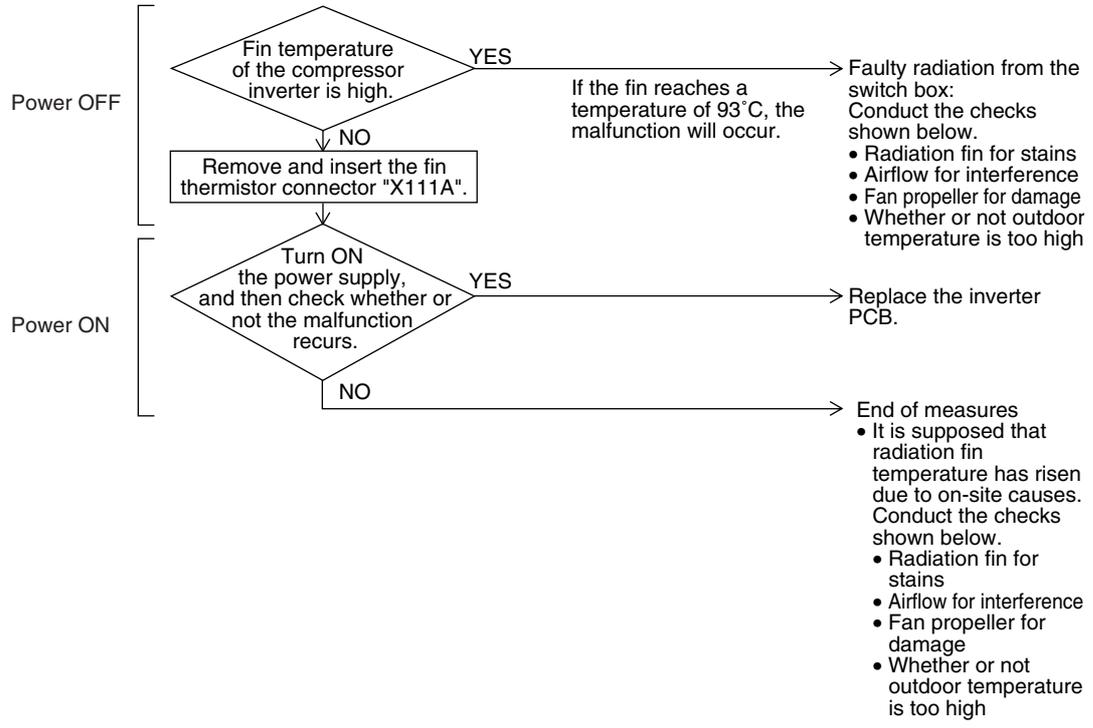

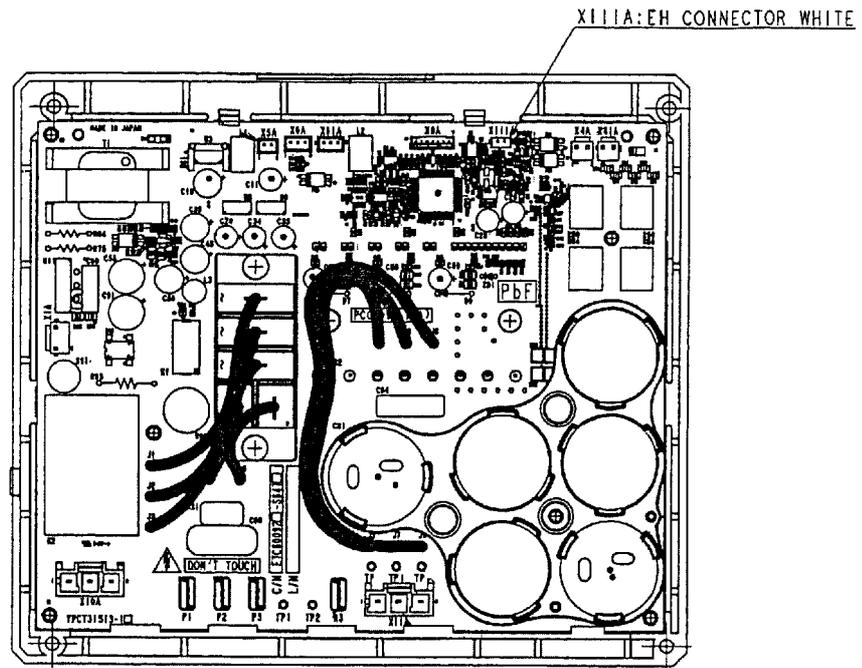

Inverter PCB for compressor



\* Refer to "Thermistor Resistance / Temperature Characteristics" table on P365.


### 3.33 “L5” Outdoor Unit: Inverter Compressor Abnormal

<b>Remote Controller Display</b>	<b>L5</b>
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Malfunction is detected from current flowing in the power transistor.
<b>Malfunction Decision Conditions</b>	When an excessive current flows in the power transistor. (Instantaneous overcurrent also causes activation.)
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of compressor coil (disconnected, defective insulation)</li> <li>■ Compressor start-up malfunction (mechanical lock)</li> <li>■ Defect of inverter PC board</li> </ul>


**Troubleshooting**

Compressor inspection

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

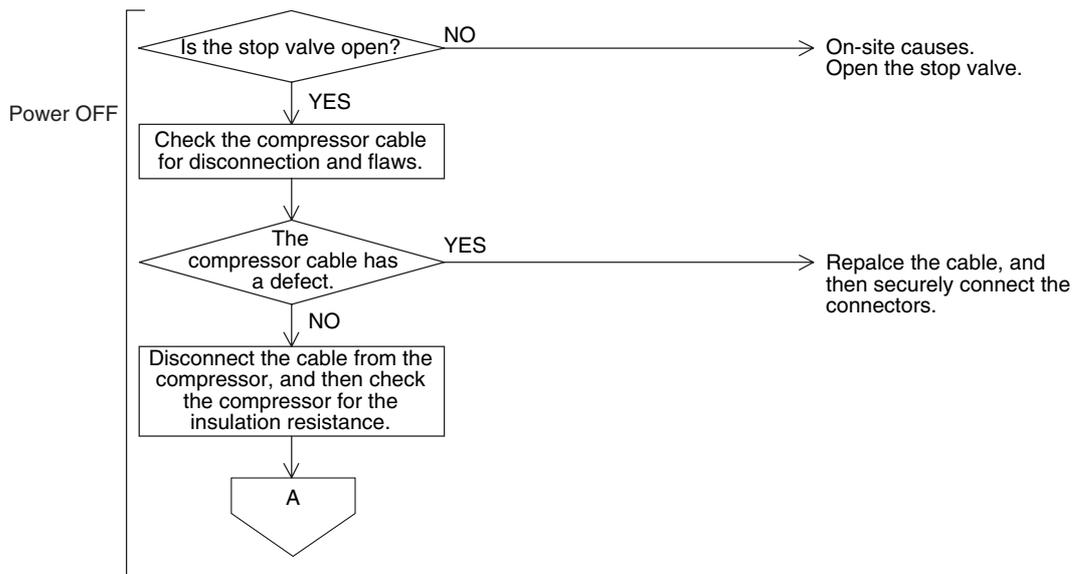

Troubleshooting

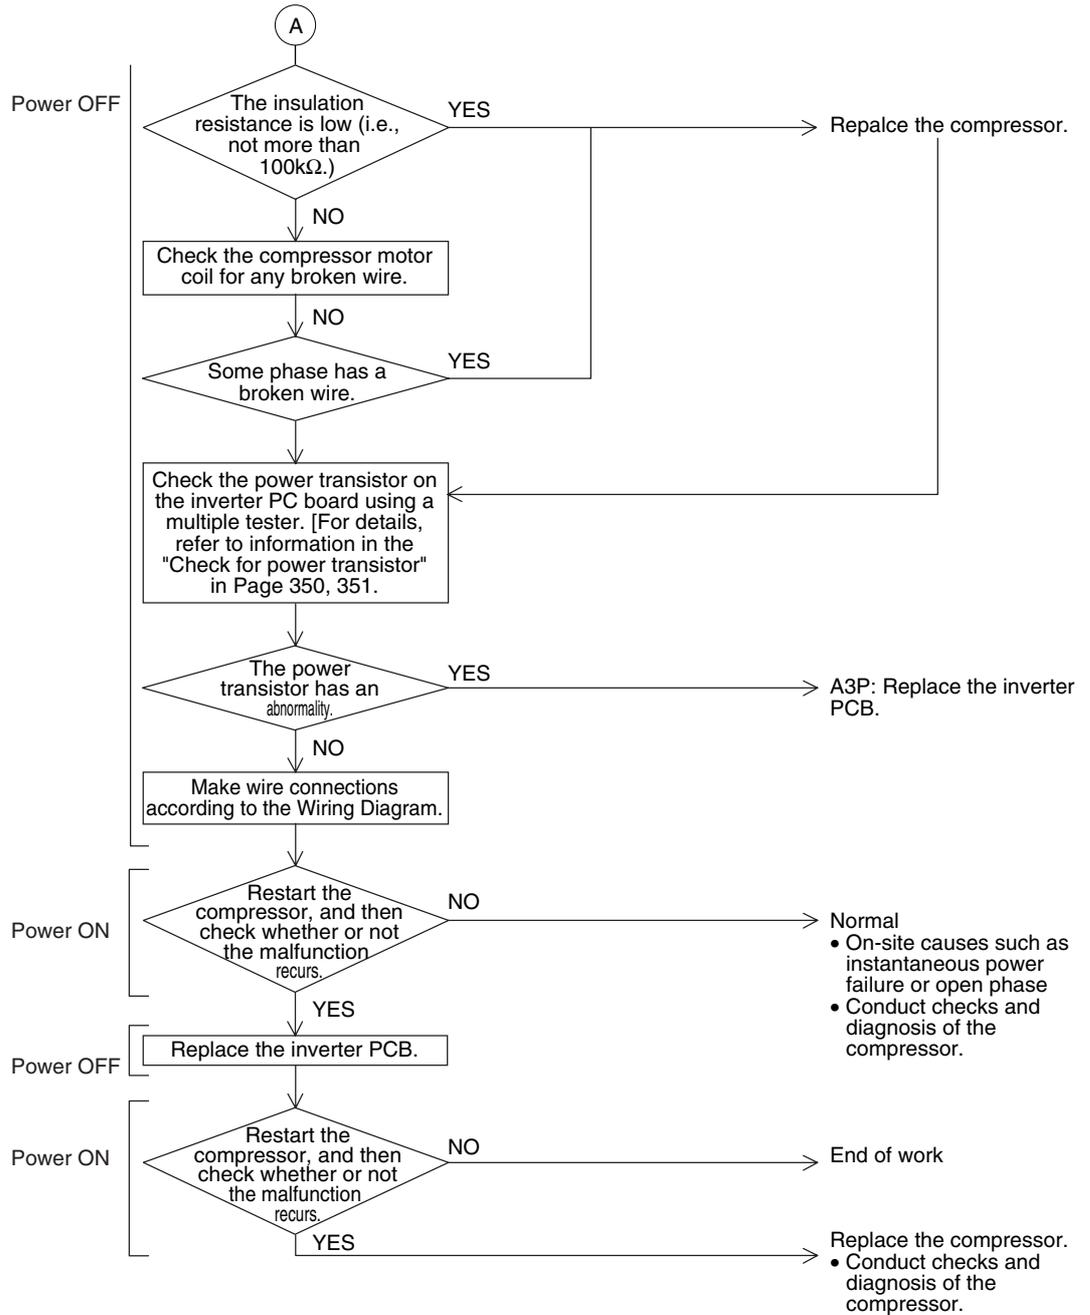

### 3.34 “L8” Outdoor Unit: Inverter Current Abnormal

Remote Controller Display

L8

Applicable Models

RXYQ5P~54P

Method of Malfunction Detection

Malfunction is detected by current flowing in the power transistor.

Malfunction Decision Conditions

When overload in the compressor is detected. (Inverter secondary current 16.1A)

Supposed Causes

- Compressor overload
- Compressor coil disconnected
- Defect of inverter PC board
- Faulty compressor


Troubleshooting

Output current check




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

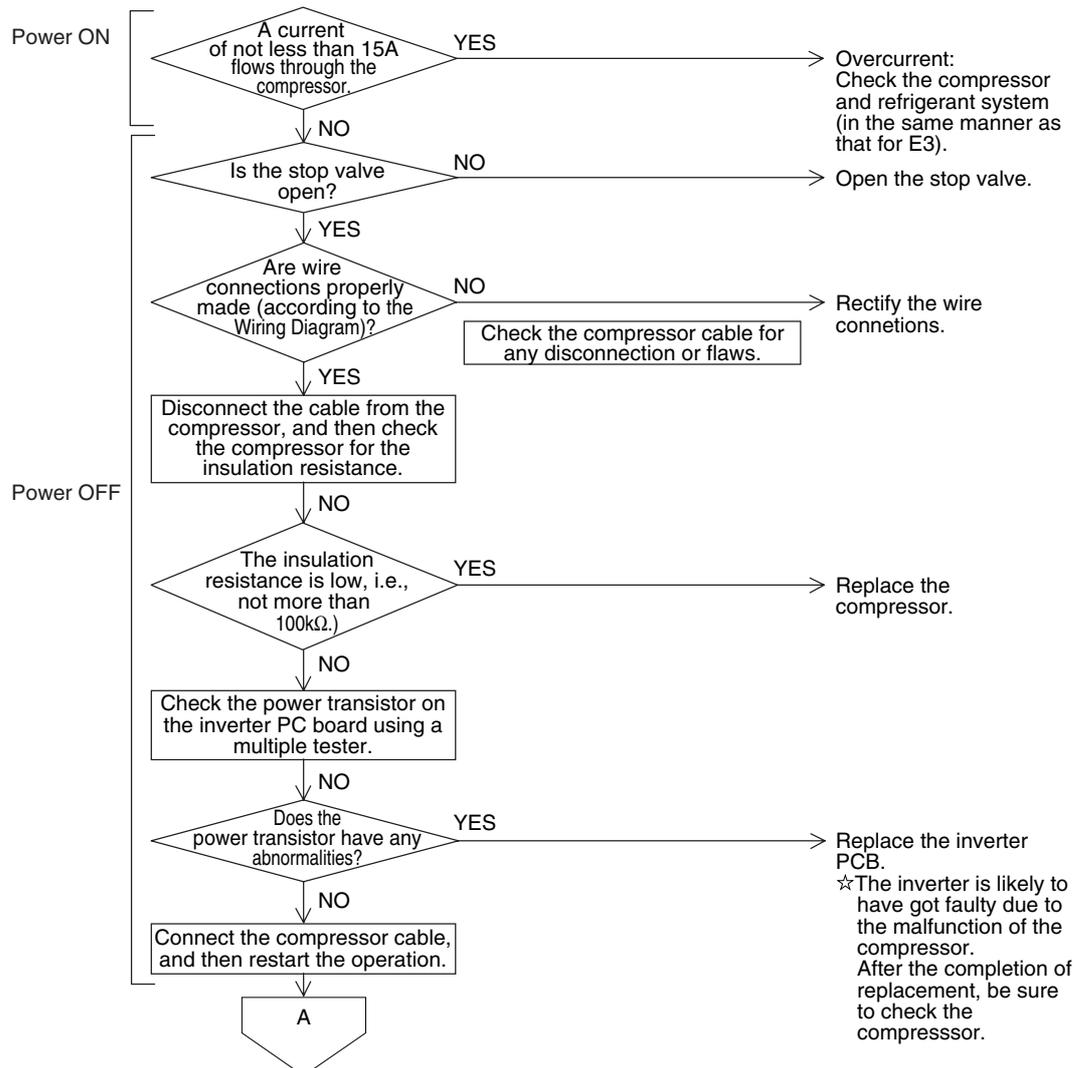


Troubleshooting

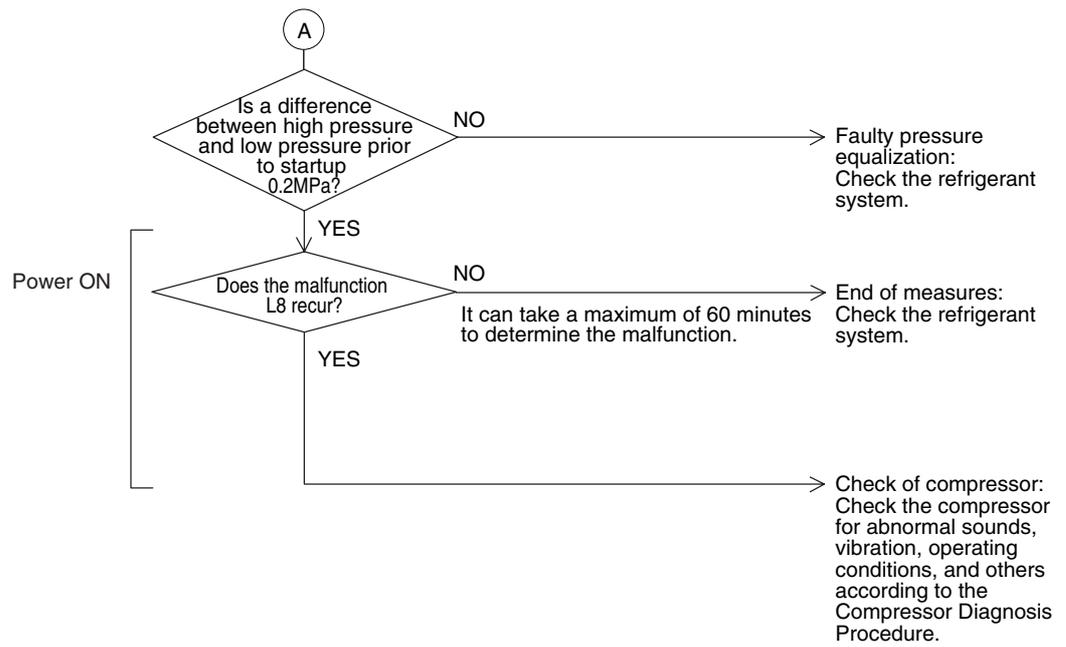


### 3.35 “L9” Outdoor Unit: Inverter Start up Error

<b>Remote Controller Display</b>	L9
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	This malfunction code will be output if overcurrent occurs at the time of startup.
<b>Malfunction Decision Conditions</b>	When the startup control is failed. When an overcurrent is passed to the inverter due to the malfunction of a compressor or electrical system.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of compressor</li> <li>■ Failure to open the stop valve</li> <li>■ Pressure differential start</li> <li>■ Faulty compressor connection</li> <li>■ Defect of inverter PC board</li> </ul>

**Troubleshooting**

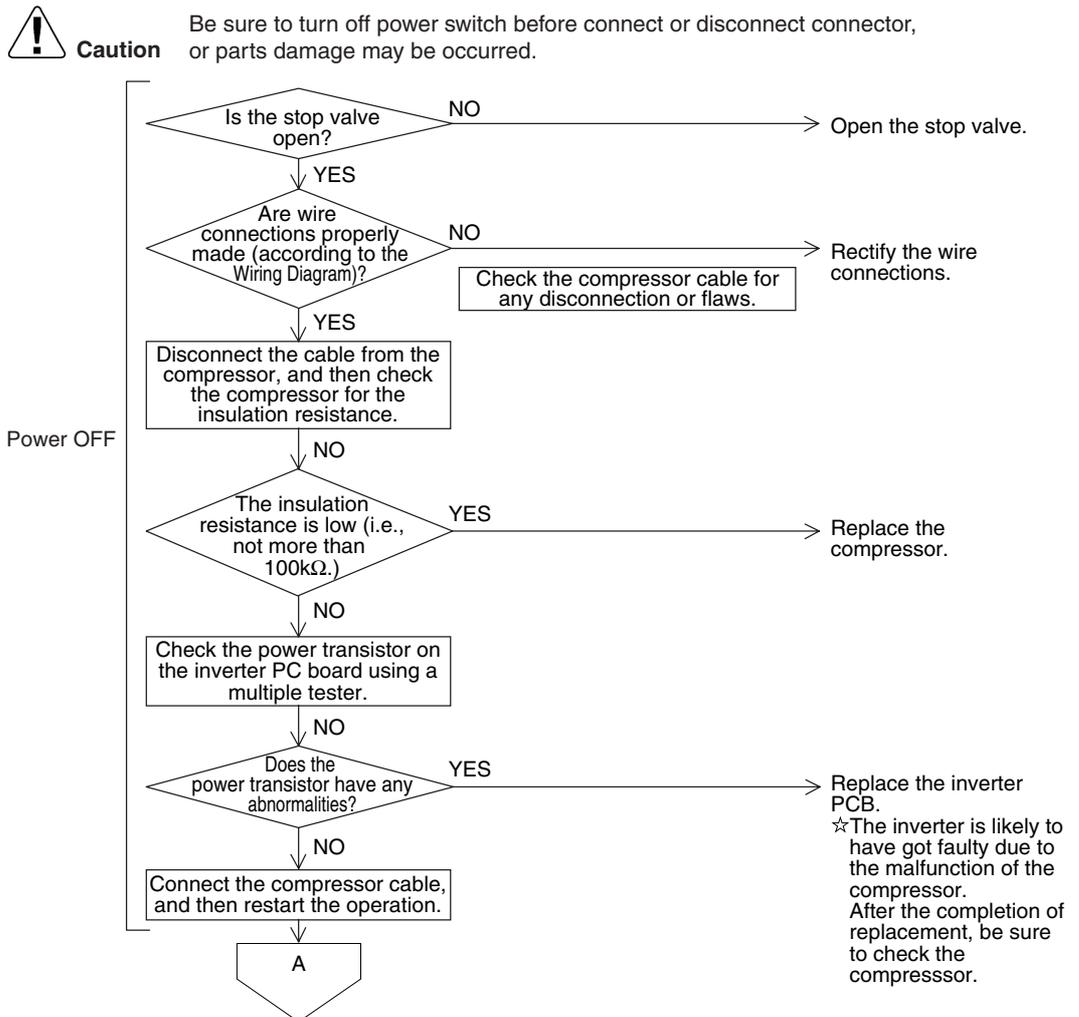

Troubleshooting

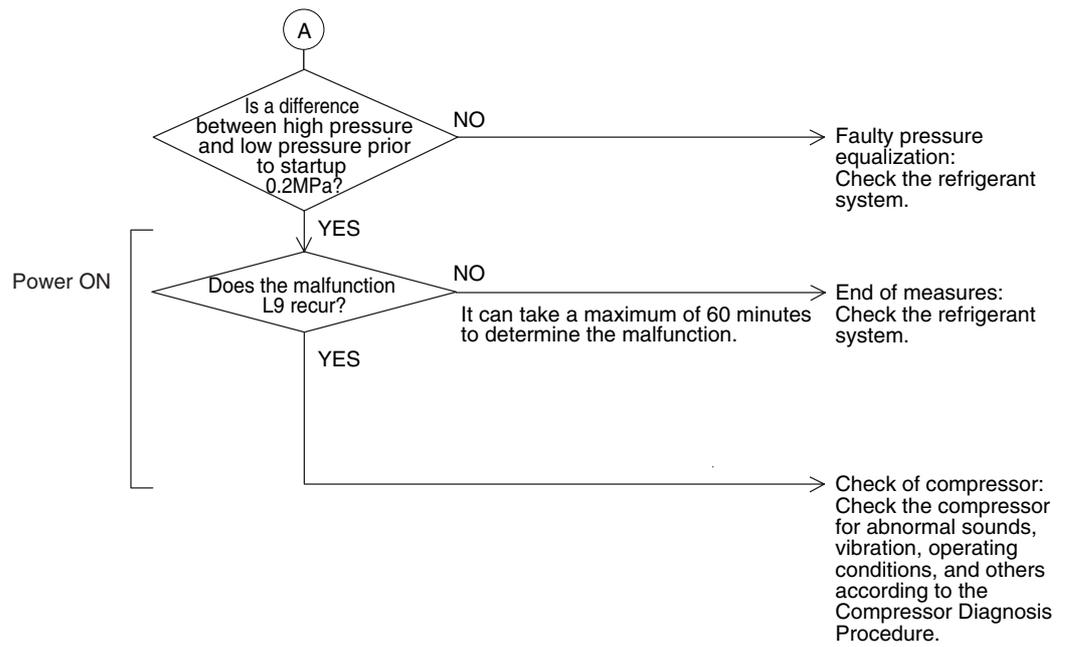

### 3.36 “LC” Outdoor Unit: Malfunction of Transmission Between Inverter and Control PC Board


<b>Remote Controller Display</b>	LC
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Check the communication state between inverter PC board and control PC board by micro-computer.
<b>Malfunction Decision Conditions</b>	When the correct communication is not conducted in certain period.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Malfunction of connection between the inverter PC board and outdoor control PC board</li> <li>■ Defect of outdoor control PC board (transmission section)</li> <li>■ Defect of inverter PC board</li> <li>■ Defect of noise filter</li> <li>■ Faulty fan inverter</li> <li>■ Incorrect type of fan inverter</li> <li>■ Faulty compressor</li> <li>■ Faulty fan motor</li> </ul>

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

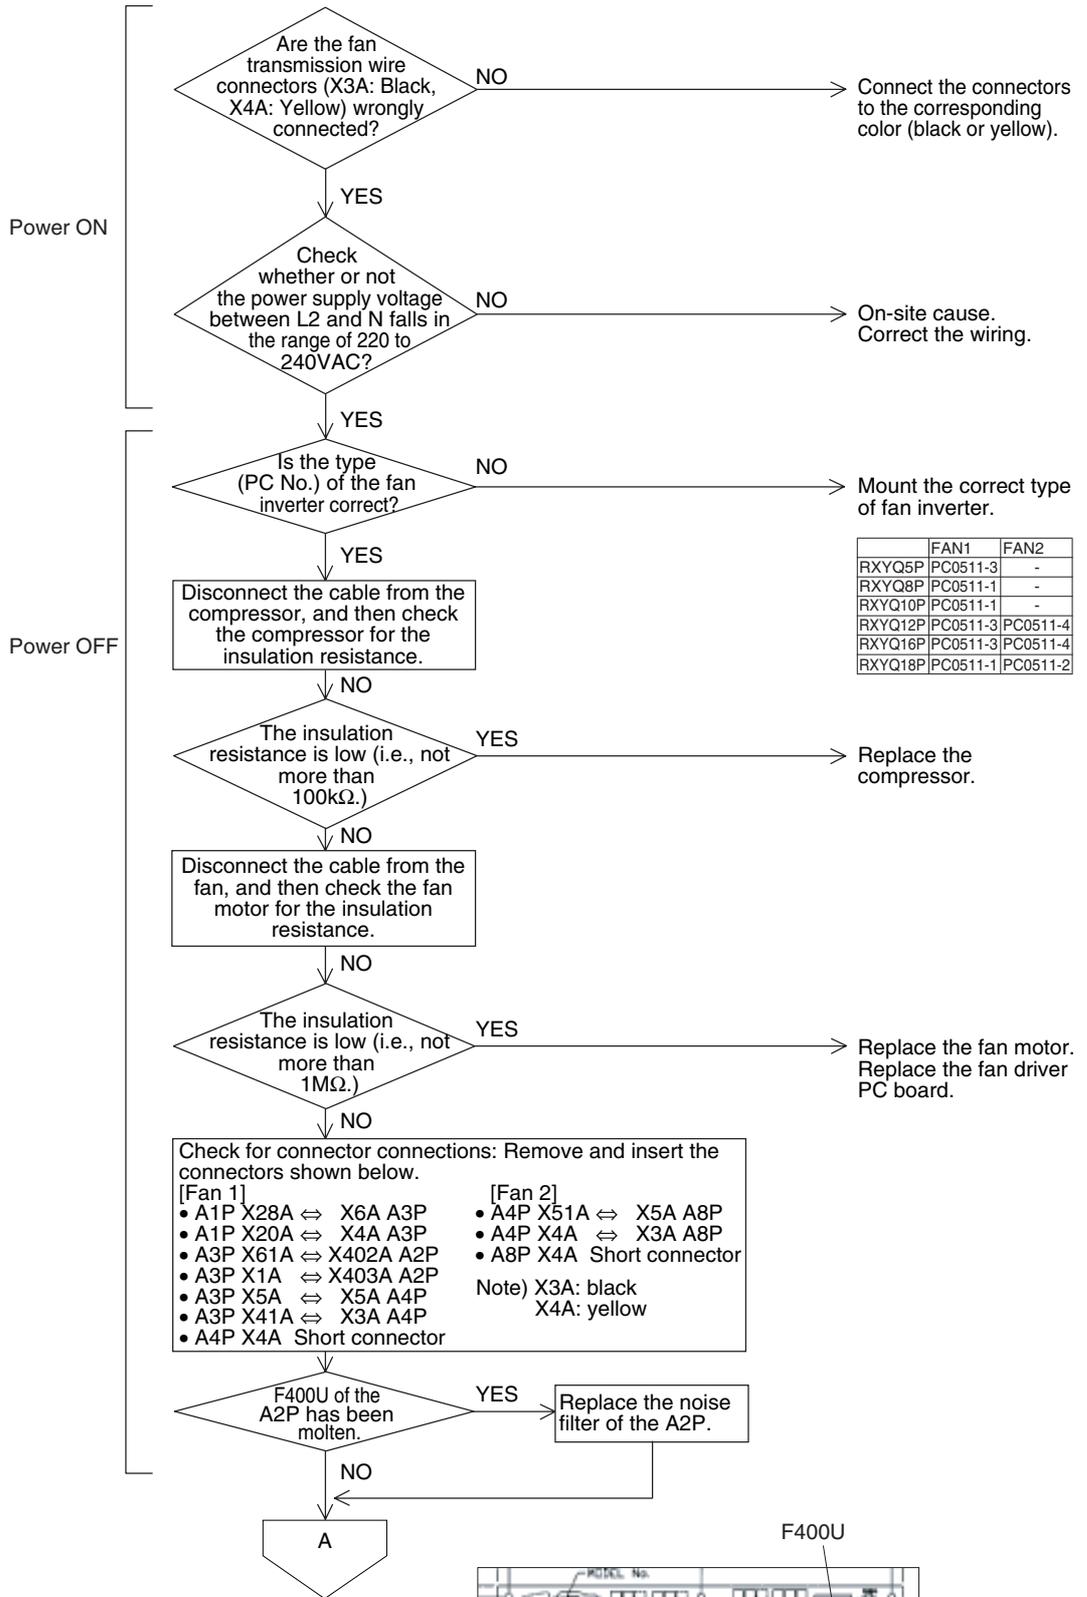


	FAN1	FAN2
RXYQ5P	PC0511-3	-
RXYQ8P	PC0511-1	-
RXYQ10P	PC0511-1	-
RXYQ12P	PC0511-3	PC0511-4
RXYQ16P	PC0511-3	PC0511-4
RXYQ18P	PC0511-1	PC0511-2

- Check for connector connections: Remove and insert the connectors shown below.
- [Fan 1]
    - A1P X28A ⇔ X6A A3P
    - A1P X20A ⇔ X4A A3P
    - A3P X61A ⇔ X402A A2P
    - A3P X1A ⇔ X403A A2P
    - A3P X5A ⇔ X5A A4P
    - A3P X41A ⇔ X3A A4P
    - A4P X4A Short connector
  - [Fan 2]
    - A4P X51A ⇔ X5A A8P
    - A4P X4A ⇔ X3A A8P
    - A8P X4A Short connector
- Note) X3A: black  
X4A: yellow

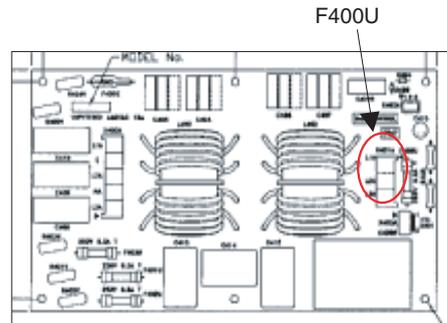


Troubleshooting

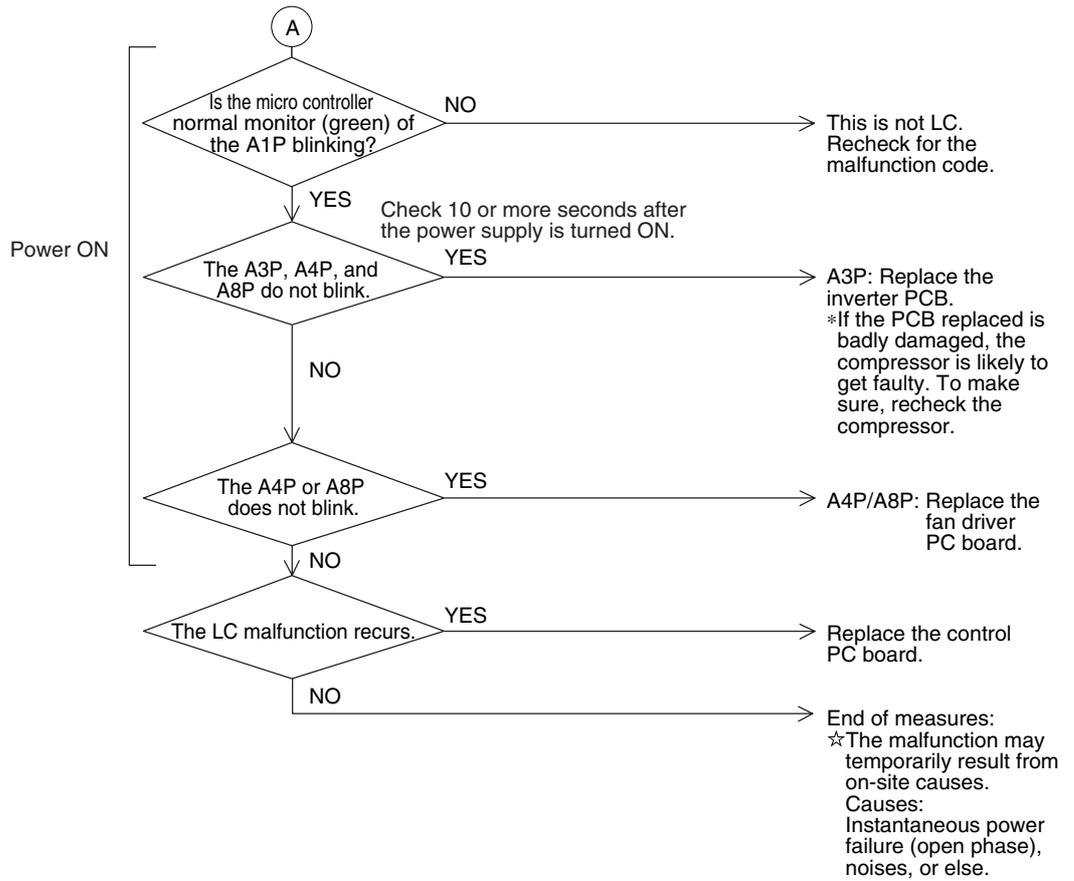

### 3.37 "P1" Outdoor Unit: Inverter Over-Ripple Protection

Remote Controller Display	P1
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Imbalance in supply voltage is detected in PC board. Imbalance in the power supply voltage causes increased ripple of voltage of the main circuit capacitor in the inverter. Consequently, the increased ripple is detected.
Malfunction Decision Conditions	When the resistance value of thermistor becomes a value equivalent to open or short circuited status. ★ Malfunction is not decided while the unit operation is continued. "P1" will be displayed by pressing the inspection button. When the amplitude of the ripple exceeding a certain value is detected for consecutive 4 minutes.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Open phase</li> <li>■ Voltage imbalance between phases</li> <li>■ Defect of main circuit capacitor</li> <li>■ Defect of inverter PC board</li> <li>■ Defect of K2 relay in inverter PC board</li> <li>■ Improper main circuit wiring</li> </ul>

**Troubleshooting**

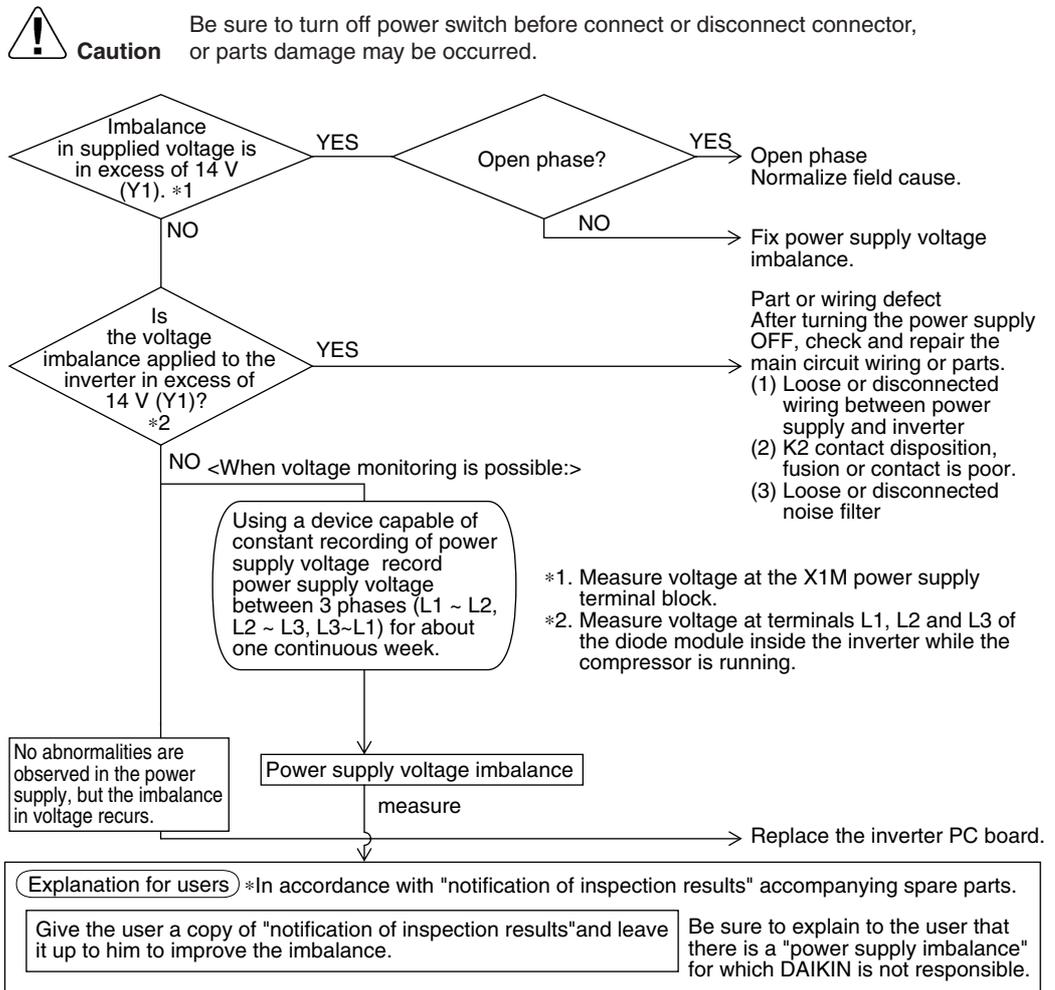

### 3.38 “P4” Outdoor Unit: Malfunction of Inverter Radiating Fin Temperature Rise Sensor


<b>Remote Controller Display</b>	P4
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Resistance of radiation fin thermistor is detected when the compressor is not operating.
<b>Malfunction Decision Conditions</b>	When the resistance value of thermistor becomes a value equivalent to open or short circuited status. ★ Malfunction is not decided while the unit operation is continued. "P4" will be displayed by pressing the inspection button.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Defect of radiator fin temperature sensor</li> <li>■ Defect of inverter PC board</li> </ul>


**Troubleshooting**



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

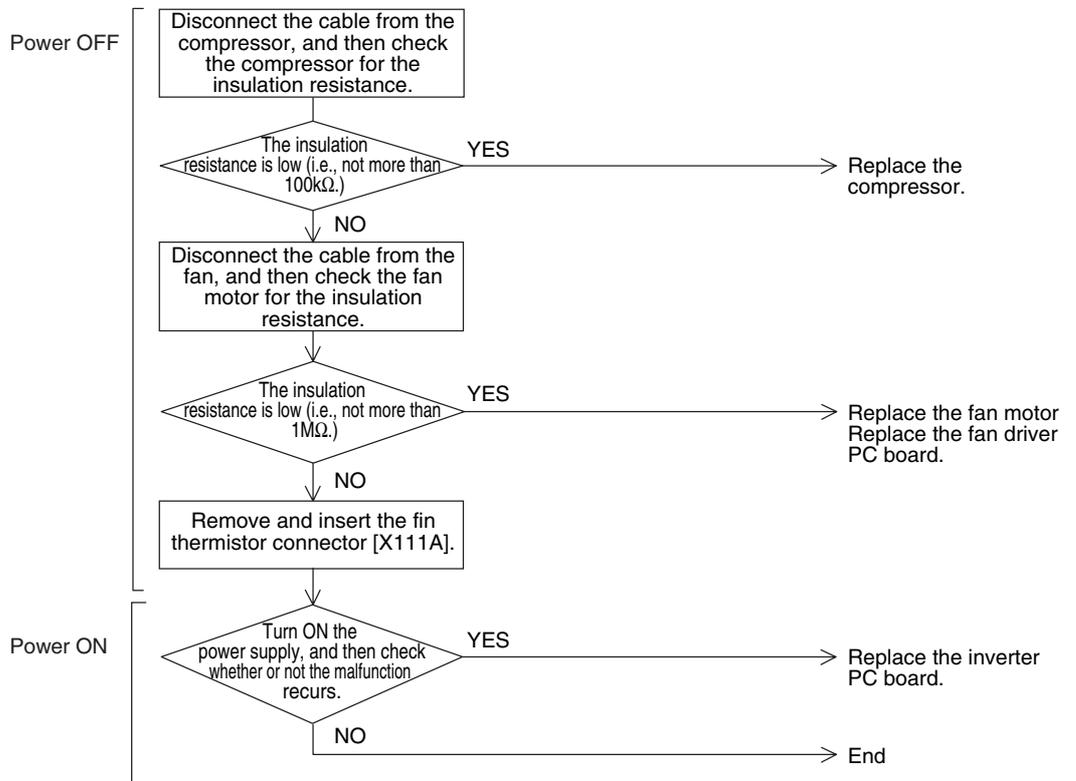

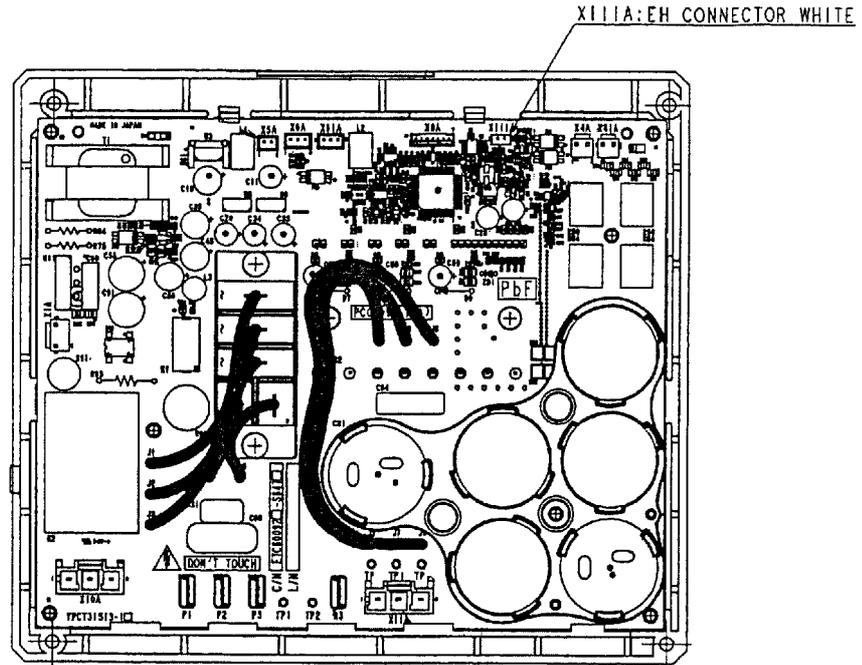

Inverter PCB for compressor




\* Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.

### 3.39 “PJ” Outdoor Unit: Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board

<b>Remote Controller Display</b>	<i>PJ</i>
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	The faulty (or no) field setting after replacing PC board or faulty PC board combination is detected through communications with the inverter.
<b>Malfunction Decision Conditions</b>	Whether or not the field setting or the type of the PC board is correct through the communication date is judged.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Faulty (or no) field setting after replacing main PC board</li> <li>■ Mismatching of type of PC board</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

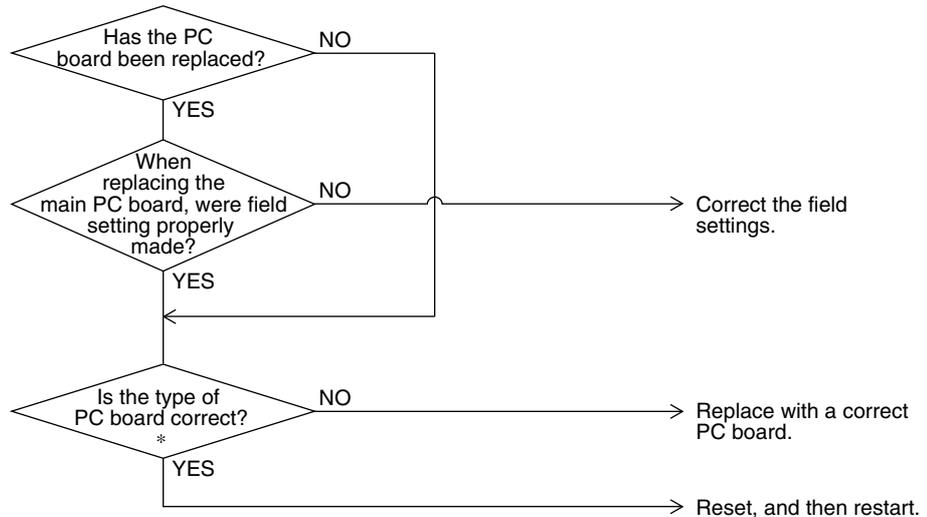


\*Note) Type of PC board mismatching includes;  
 Main PC board  
 Inverter PC board (for compressor)  
 Fan driver PC board

### 3.40 “UO” Outdoor Unit: Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure

Remote Controller Display	UO
Applicable Models	RXYQ5P~54P
Method of Malfunction Detection	Short of gas malfunction is detected by discharge pipe temperature thermistor.
Malfunction Decision Conditions	Microcomputer judge and detect if the system is short of refrigerant. ★Malfunction is not decided while the unit operation is continued.
Supposed Causes	<ul style="list-style-type: none"> <li>■ Out of gas or refrigerant system clogging (incorrect piping)</li> <li>■ Defect of pressure sensor</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of thermistor R7T or R4T</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

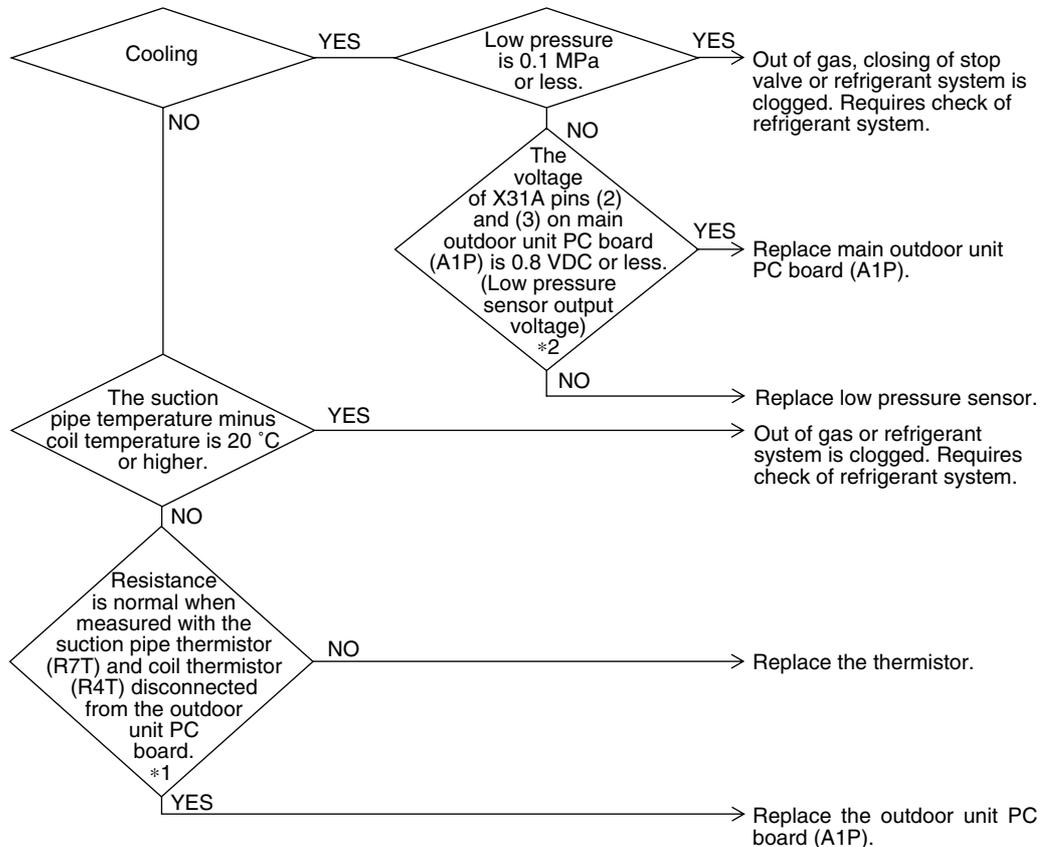

(V2819)




\*1: Refer to “Thermistor Resistance / Temperature Characteristics” table on P365.  
\*2: Refer to “Pressure Sensor, Pressure / Voltage Characteristics” table on P367.

### 3.41 “U1” Reverse Phase, Open Phase

<b>Remote Controller Display</b>	U1
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	The phase of each phase are detected by reverse phase detection circuit and right phase or reverse phase are judged.
<b>Malfunction Decision Conditions</b>	When a significant phase difference is made between phases.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Power supply reverse phase</li> <li>■ Power supply open phase</li> <li>■ Defect of outdoor PC board (A1P)</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

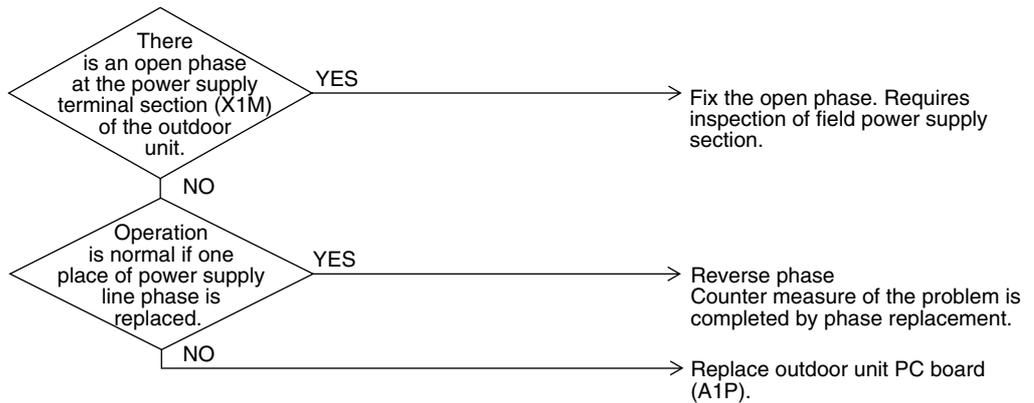

(V2820)

## 3.42 “U2” Outdoor Unit: Power Supply Insufficient or Instantaneous Failure


<b>Remote Controller Display</b>	U2
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Detection of voltage of main circuit capacitor built in the inverter and power supply voltage.
<b>Malfunction Decision Conditions</b>	When the voltage aforementioned is not less than 780V or not more than 320V, or when the current-limiting voltage does not reach 200V or more or exceeds 740V.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Power supply insufficient</li> <li>■ Instantaneous power failure</li> <li>■ Open phase</li> <li>■ Defect of inverter PC board</li> <li>■ Defect of outdoor control PC board</li> <li>■ Main circuit wiring defect</li> <li>■ Faulty compressor</li> <li>■ Faulty fan motor</li> <li>■ Faulty connection of signal cable</li> </ul>

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

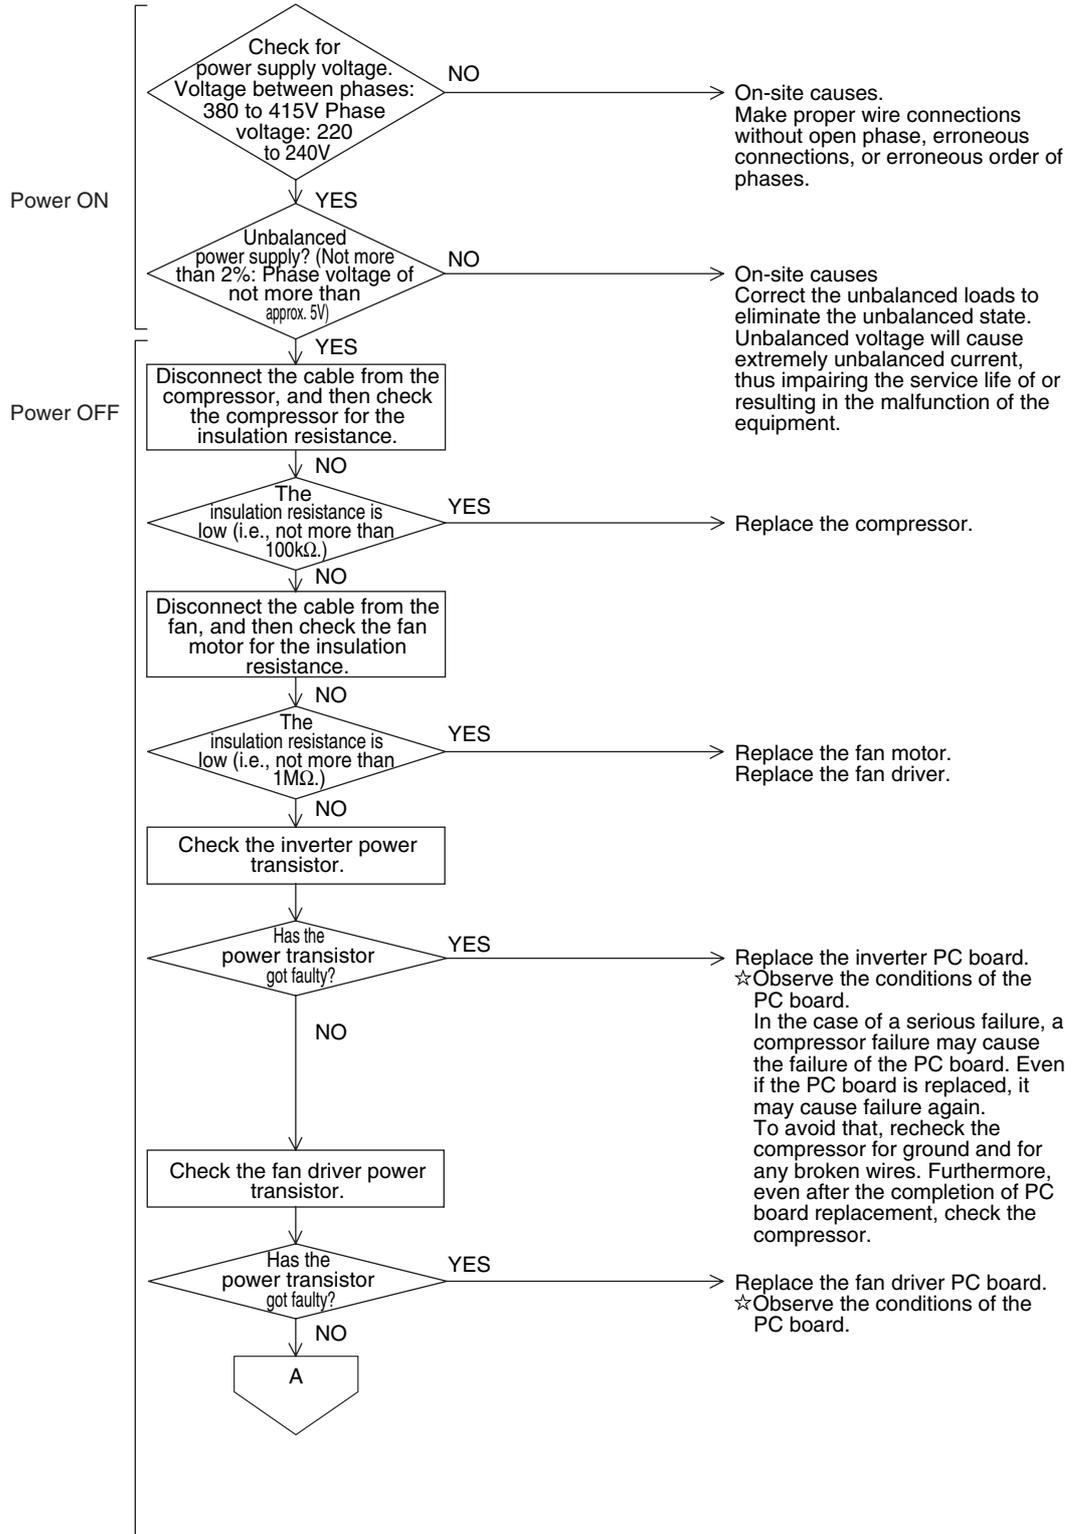


Troubleshooting

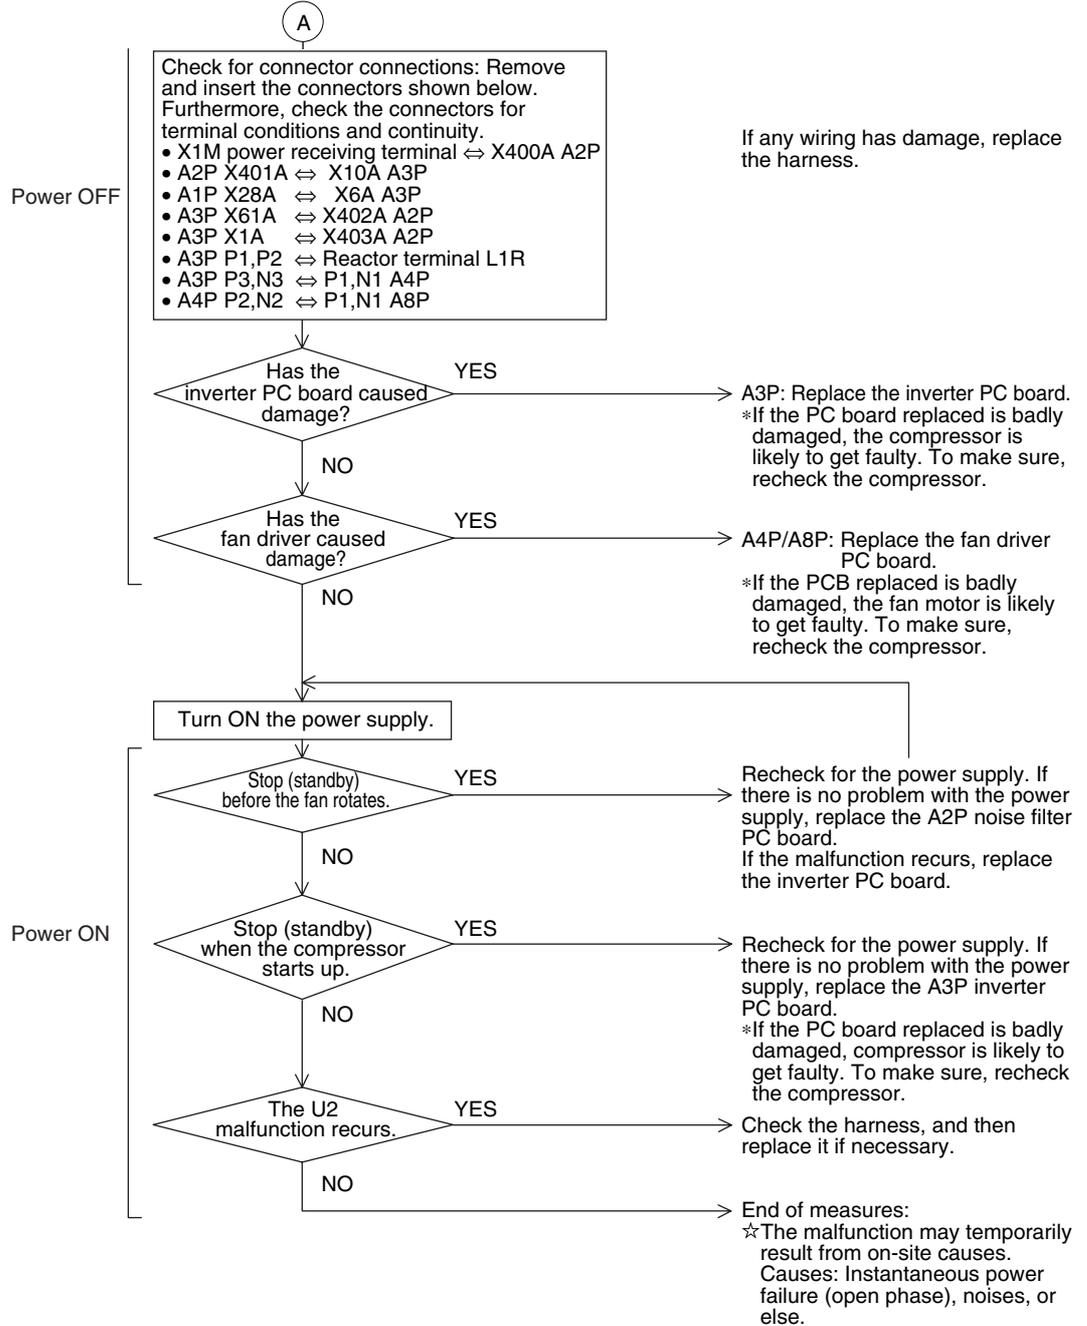

### 3.43 “U3” Outdoor Unit: Check Operation not Executed

<b>Remote Controller Display</b>	<b>U3</b>
<b>Applicable Models</b>	RXYQ5P~54P
<b>Method of Malfunction Detection</b>	Check operation is executed or not
<b>Malfunction Decision Conditions</b>	Malfunction is decided when the unit starts operation without check operation.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Check operation is not executed.</li> </ul>
<b>Troubleshooting</b>	

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

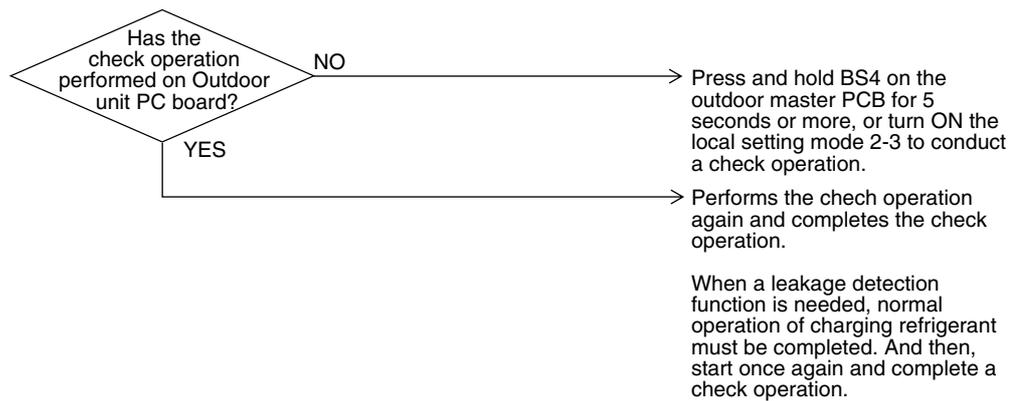

(V3052)

### 3.44 “U4” Malfunction of Transmission Between Indoor Units

Remote  
Controller  
Display

U4

Applicable  
Models

All model of indoor unit  
RXYQ5P~54P

Method of  
Malfunction  
Detection

Microcomputer checks if transmission between indoor and outdoor units is normal.

Malfunction  
Decision  
Conditions

When transmission is not carried out normally for a certain amount of time


Supposed  
Causes

- Indoor to outdoor, outdoor to outdoor transmission wiring F1, F2 disconnection, short circuit or wrong wiring
- Outdoor unit power supply is OFF
- System address doesn't match
- Defect of indoor unit PC board
- Defect of outdoor unit PC board

Troubleshooting



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

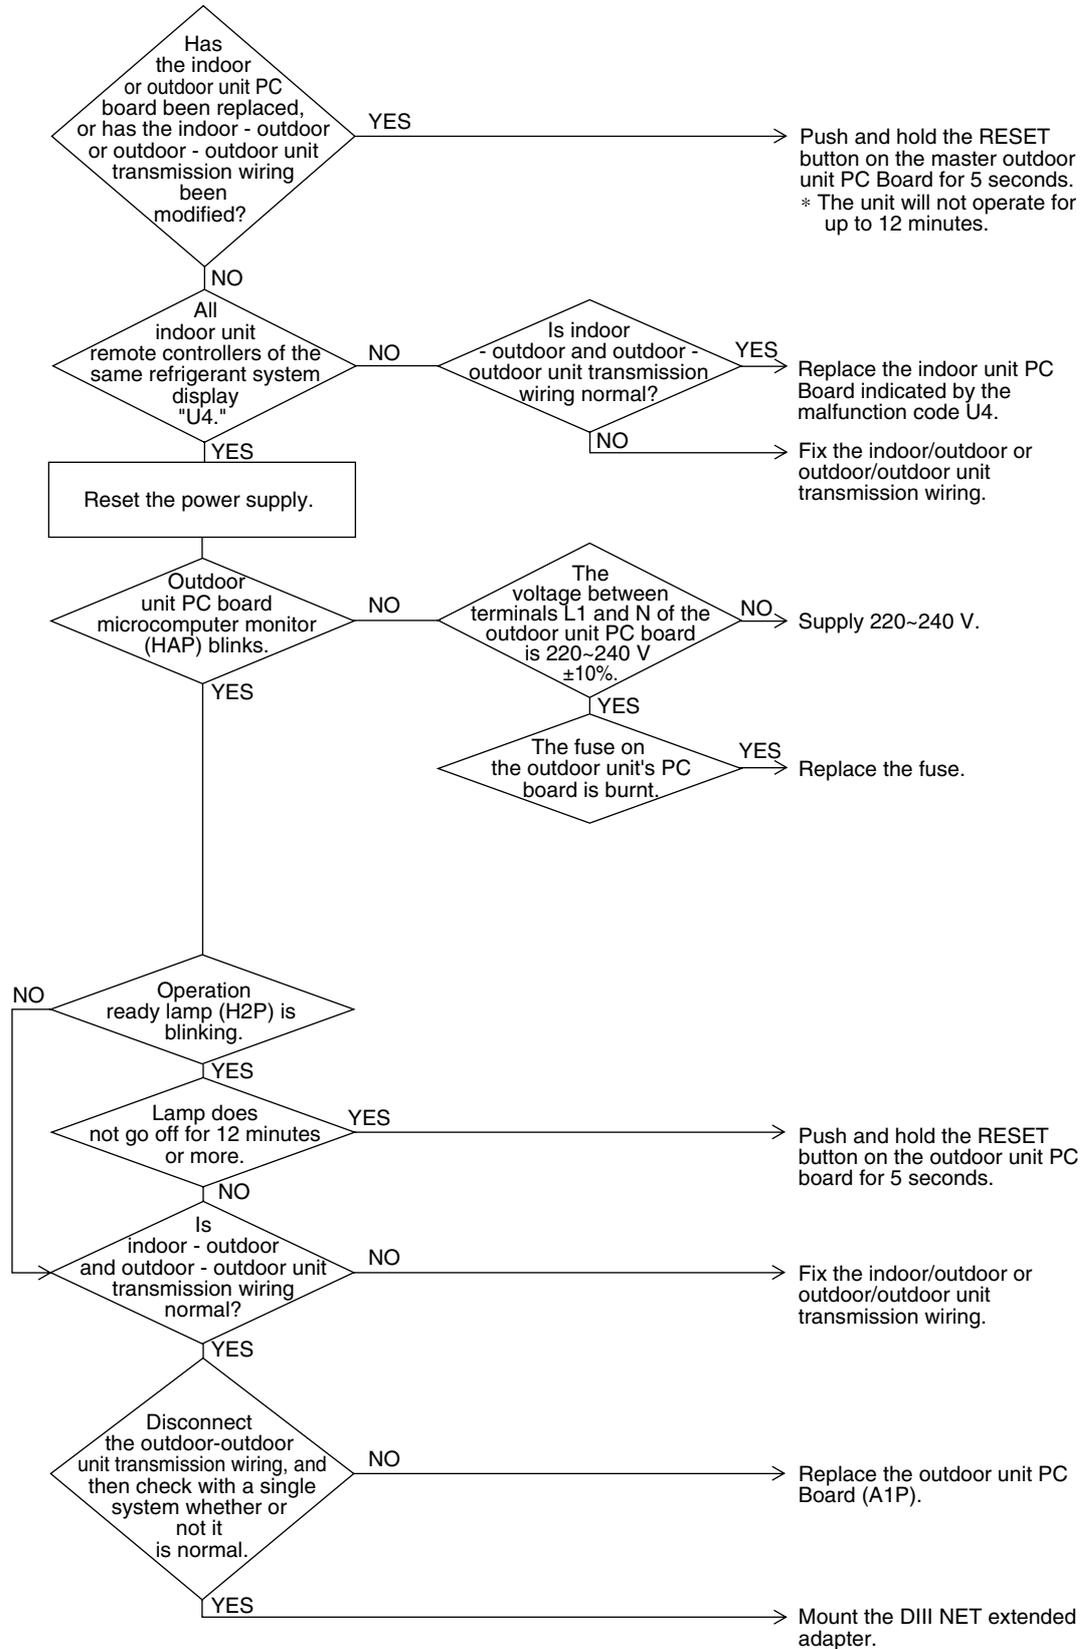

(V2822)

### 3.45 "U5" Indoor Unit: Malfunction of Transmission Between Remote Controller and Indoor Unit

Remote  
Controller  
Display

U5

Applicable  
Models

All models of indoor units

Method of  
Malfunction  
Detection

In case of controlling with 2-remote controller, check the system using microcomputer is signal transmission between indoor unit and remote controller (main and sub) is normal.

Malfunction  
Decision  
Conditions

Normal transmission does not continue for specified period.

Supposed  
Causes


- Malfunction of indoor unit remote controller transmission
- Connection of two main remote controllers (when using 2 remote controllers)
- Defect of indoor unit PC board
- Defect of remote controller PC board
- Malfunction of transmission caused by noise

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

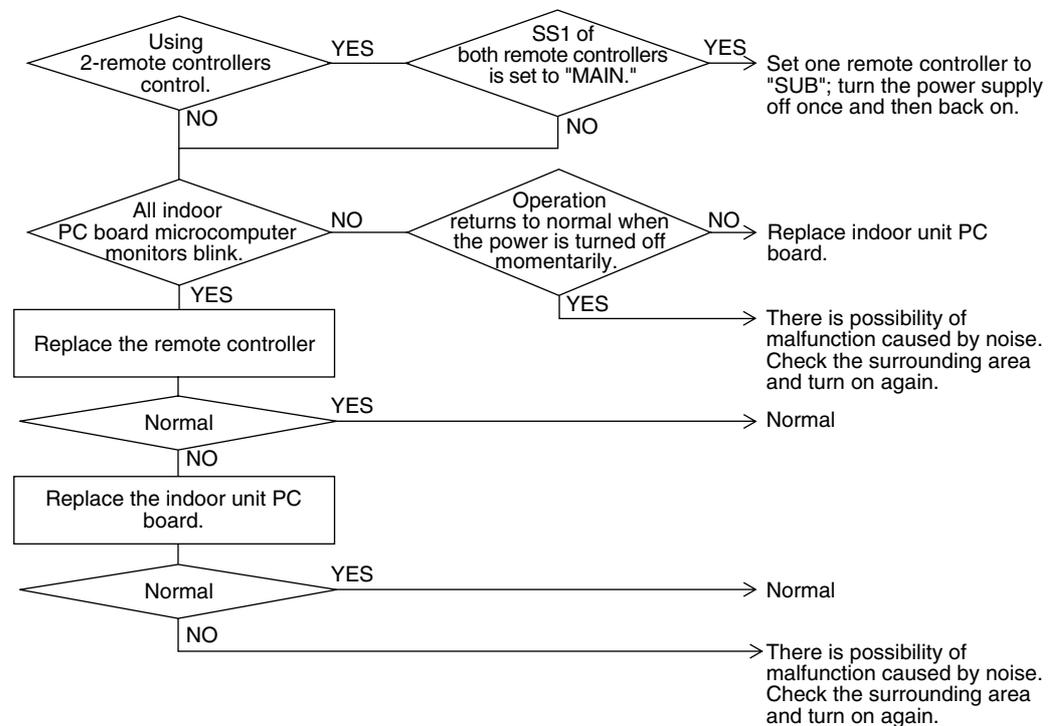

(V2823)

### 3.46 “U7” Indoor Unit: Malfunction of Transmission Between Outdoor Units


<b>Remote Controller Display</b>	U7
<b>Applicable Models</b>	All models of indoor units
<b>Method of Malfunction Detection</b>	Microcomputer checks if transmission between outdoor units.
<b>Malfunction Decision Conditions</b>	When transmission is not carried out normally for a certain amount of time
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Improper connection of transmission wiring between outdoor unit and external control adaptor for outdoor unit</li> <li>■ Improper connection of transmission wiring between outdoor units.</li> <li>■ Improper cool/heat selection</li> <li>■ Improper cool/heat unified address (outdoor unit, external control adaptor for outdoor unit)</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Defect of external control adaptor for outdoor unit</li> </ul>

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

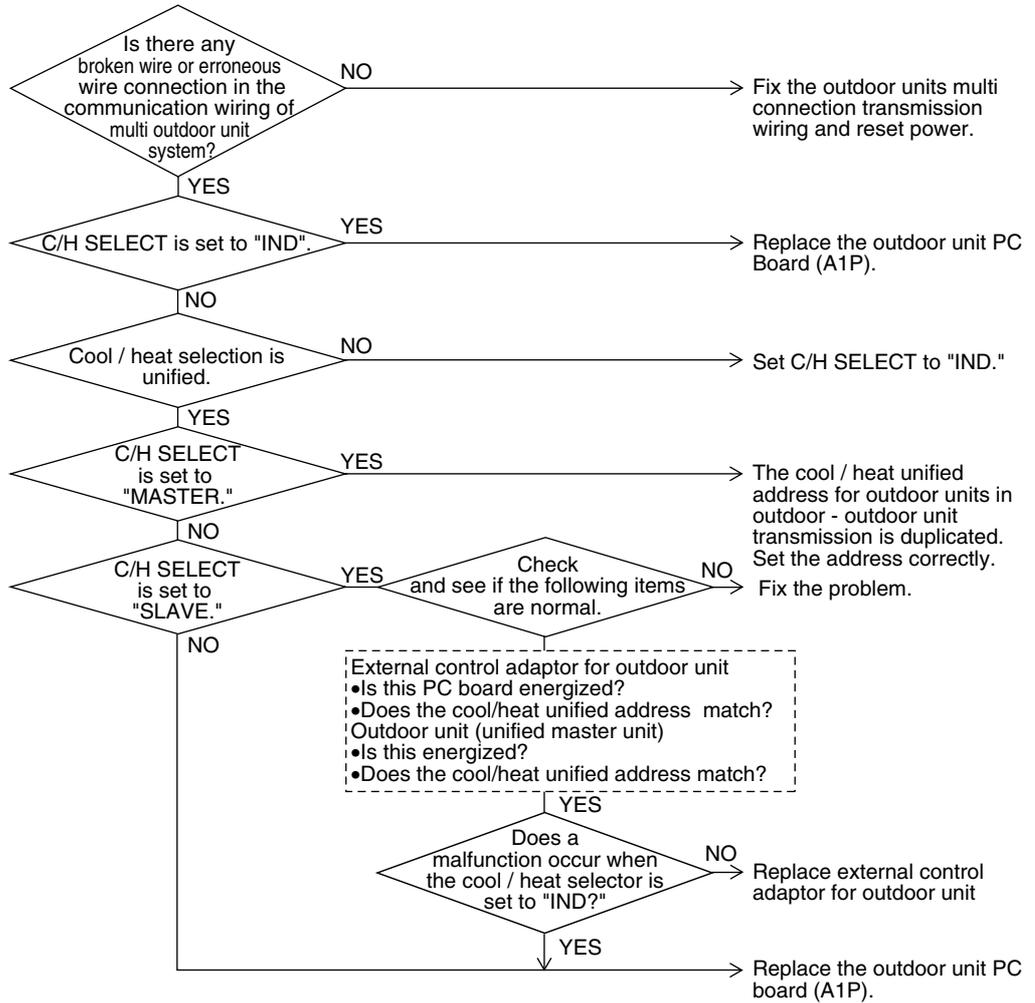


(V2824)

### 3.47 “U8” Indoor Unit: Malfunction of Transmission Between Main and Sub Remote Controllers

<b>Remote Controller Display</b>	U8
<b>Applicable Models</b>	All models of indoor units
<b>Method of Malfunction Detection</b>	In case of controlling with 2-remote controller, check the system using microcomputer if signal transmission between indoor unit and remote controller (main and sub) is normal.
<b>Malfunction Decision Conditions</b>	Normal transmission does not continue for specified period.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Malfunction of transmission between main and sub remote controller</li> <li>■ Connection between sub remote controllers</li> <li>■ Defect of remote controller PC board</li> </ul>

**Troubleshooting**

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

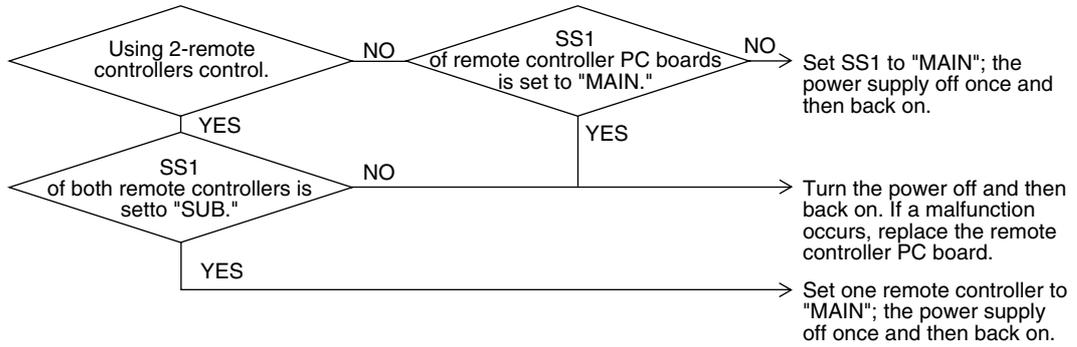

(V2825)

### 3.48 “U9” Indoor Unit: Malfunction of Transmission Between Indoor and Outdoor Units in the Same System

Remote  
Controller  
Display

U9

Applicable  
Models

All models of indoor units

Method of  
Malfunction  
Detection

Detect the malfunction signal of any other indoor unit within the system concerned.

Malfunction  
Decision  
Conditions

When the malfunction decision is made on any other indoor unit within the system concerned.

Supposed  
Causes


- Malfunction of transmission within or outside of other system
- Malfunction of electronic expansion valve in indoor unit of other system
- Defect of PC board of indoor unit in other system
- Improper connection of transmission wiring between indoor and outdoor unit

#### Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

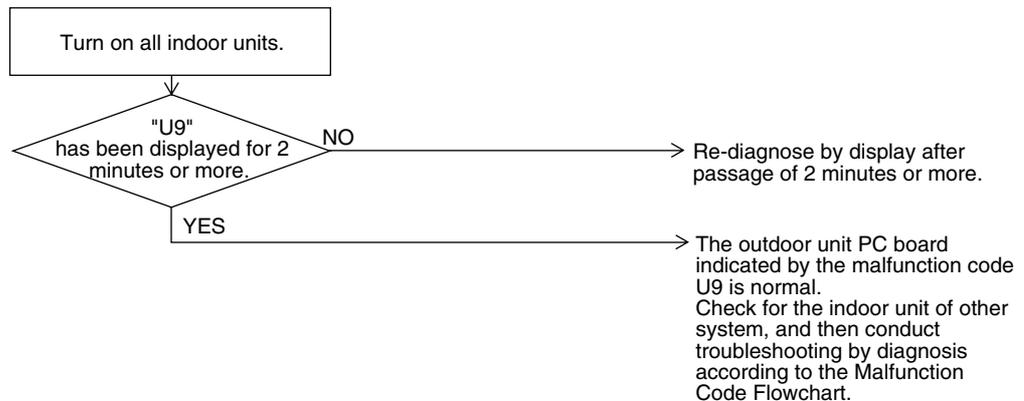


### 3.49 “UR” Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller

<b>Remote Controller Display</b>	UR
<b>Applicable Models</b>	All models of indoor unit RXYQ5P~54P
<b>Method of Malfunction Detection</b>	A difference occurs in data by the type of refrigerant between indoor and outdoor units. The number of indoor units is out of the allowable range.
<b>Malfunction Decision Conditions</b>	The malfunction decision is made as soon as either of the abnormalities aforementioned is detected.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Excess of connected indoor units</li> <li>■ Defect of outdoor unit PC board (A1P)</li> <li>■ Mismatching of the refrigerant type of indoor and outdoor unit.</li> <li>■ Setting of outdoor PC board was not conducted after replacing to spare parts PC board.</li> </ul>

## Troubleshooting



**Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

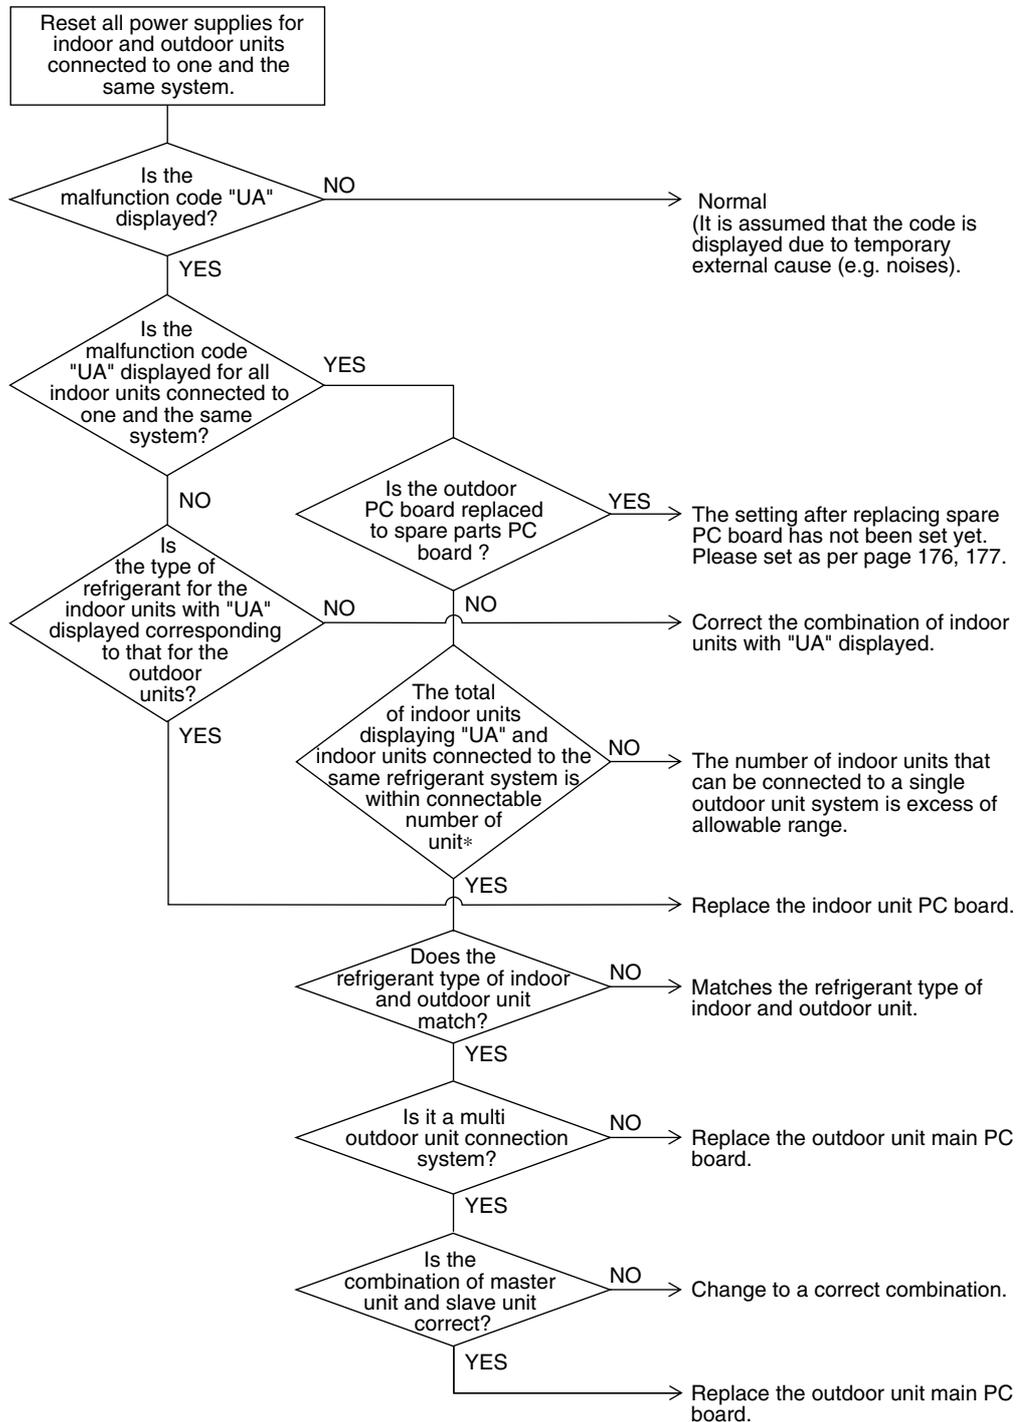

(V2827)

\* The number of indoor units that can be connected to a single outdoor unit system depends on the model of outdoor unit.

### 3.50 “UC” Address Duplication of Centralized Controller

Remote  
Controller  
Display

UC

Applicable  
Models

All models of indoor unit  
Centralized controller

Method of  
Malfunction  
Detection

The principal indoor unit detects the same address as that of its own on any other indoor unit.

Malfunction  
Decision  
Conditions

The malfunction decision is made as soon as the abnormality aforementioned is detected.

Supposed  
Causes

- Address duplication of centralized controller

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector,  
or parts damage may be occurred.

The centralized address is duplicated.



Make setting change so that  
the centralized address will  
not be duplicated.

### 3.51 “UE” Malfunction of Transmission Between Centralized Controller and Indoor Unit


<b>Remote Controller Display</b>	UE
<b>Applicable Models</b>	All models of indoor units      Intelligent Touch Controller Centralized controller Schedule timer
<b>Method of Malfunction Detection</b>	Microcomputer checks if transmission between indoor unit and centralized controller is normal.
<b>Malfunction Decision Conditions</b>	When transmission is not carried out normally for a certain amount of time
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Malfunction of transmission between optional controllers for centralized control and indoor unit</li> <li>■ Connector for setting master controller is disconnected. (or disconnection of connector for independent / combined use changeover switch.)</li> <li>■ Failure of PC board for central remote controller</li> <li>■ Defect of indoor unit PC board</li> </ul>

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

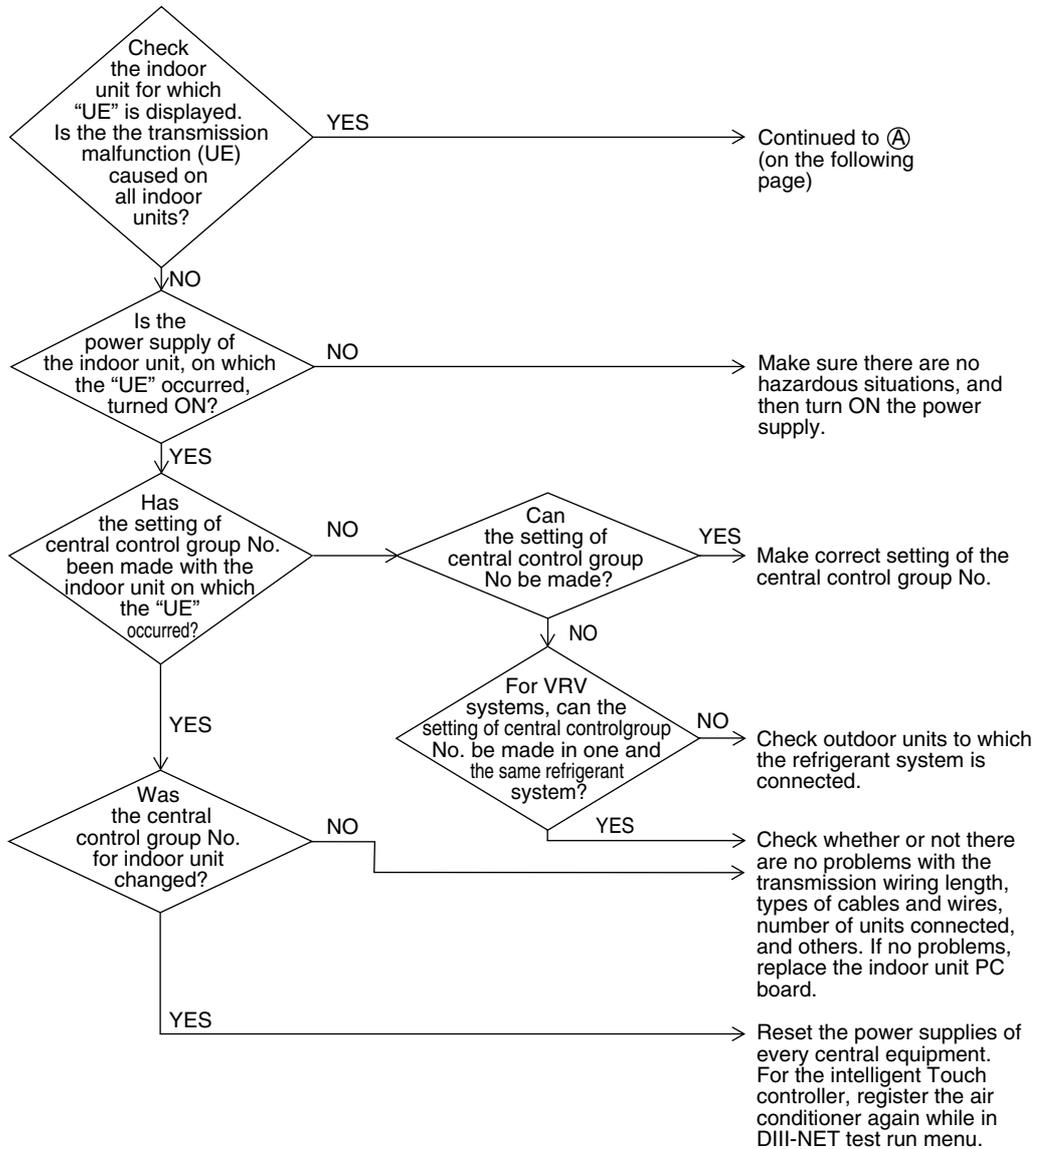

(V2822)

## Troubleshooting

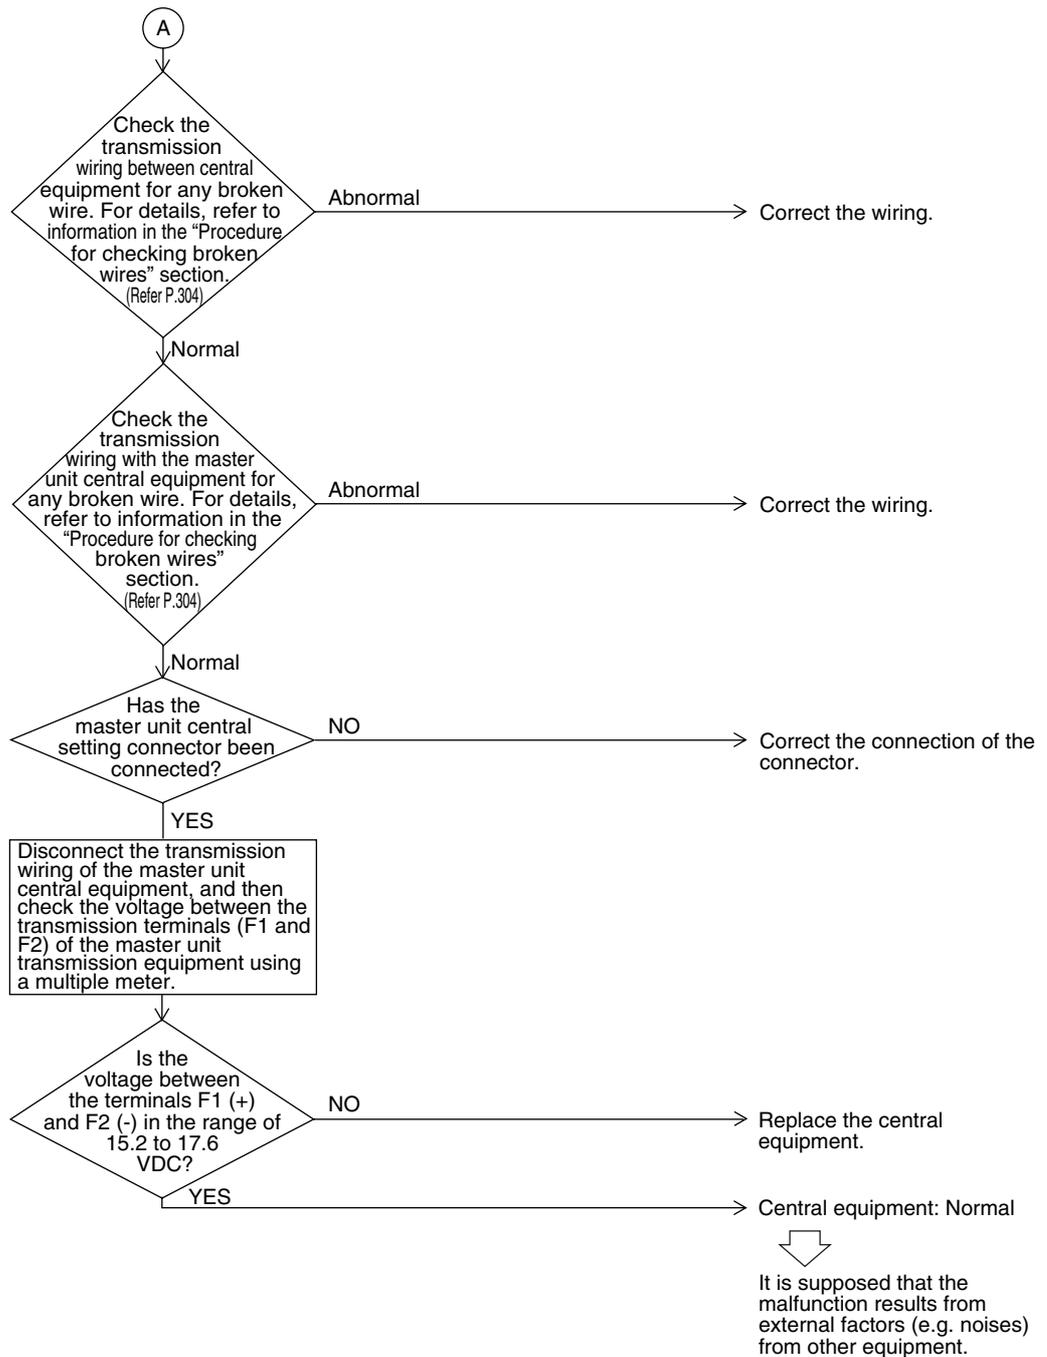

### 3.52 “UF” System is not Set yet

Remote Controller Display

UF

Applicable Models

All models of indoor units  
RXYQ5P~54P

Method of Malfunction Detection

On check operation, the number of indoor units in terms of transmission is not corresponding to that of indoor units that have made changes in temperature.

Malfunction Decision Conditions

The malfunction is determined as soon as the abnormality aforementioned is detected through checking the system for any erroneous connection of units on the check operation.

Supposed Causes


- Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units
- Failure to execute check operation
- Defect of indoor unit PC board
- Stop valve is left in closed

#### Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

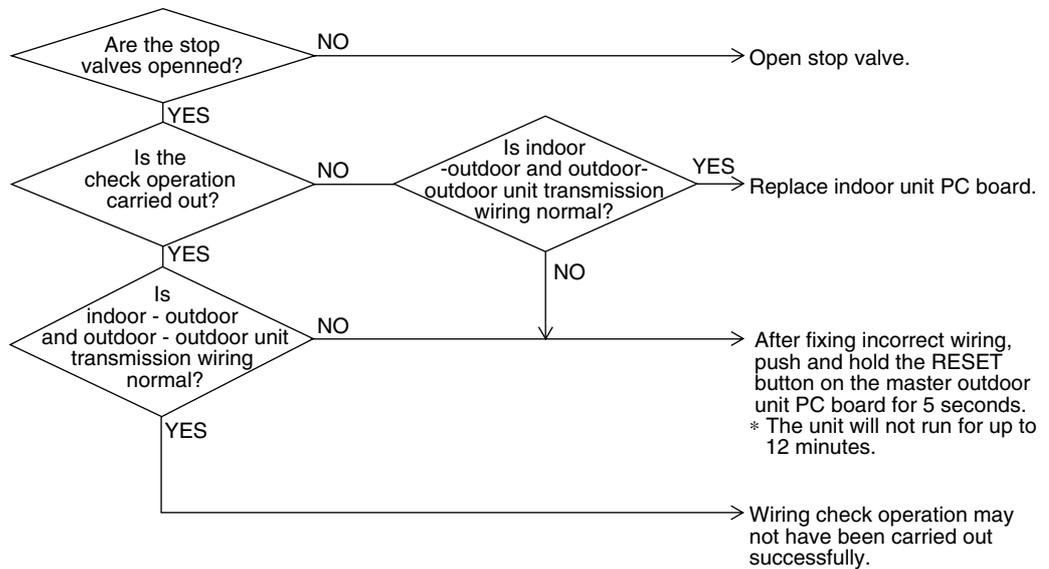

(V2830)



**Note:**

Wiring check operation may not be successful if carried out after the outdoor unit has been off for more than 12 hours, or if it is not carried out after running all connected indoor units in the fan mode for at least an hour.

### 3.53 “UH” Malfunction of System, Refrigerant System Address Undefined

Remote  
Controller  
Display

UH

Applicable  
Models

All models of indoor units  
RXYQ5P~54P

Method of  
Malfunction  
Detection

Detect an indoor unit with no address setting.

Malfunction  
Decision  
Conditions

The malfunction decision is made as soon as the abnormality aforementioned is detected.

Supposed  
Causes


- Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units
- Defect of indoor unit PC board
- Defect of outdoor unit PC board (A1P)

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

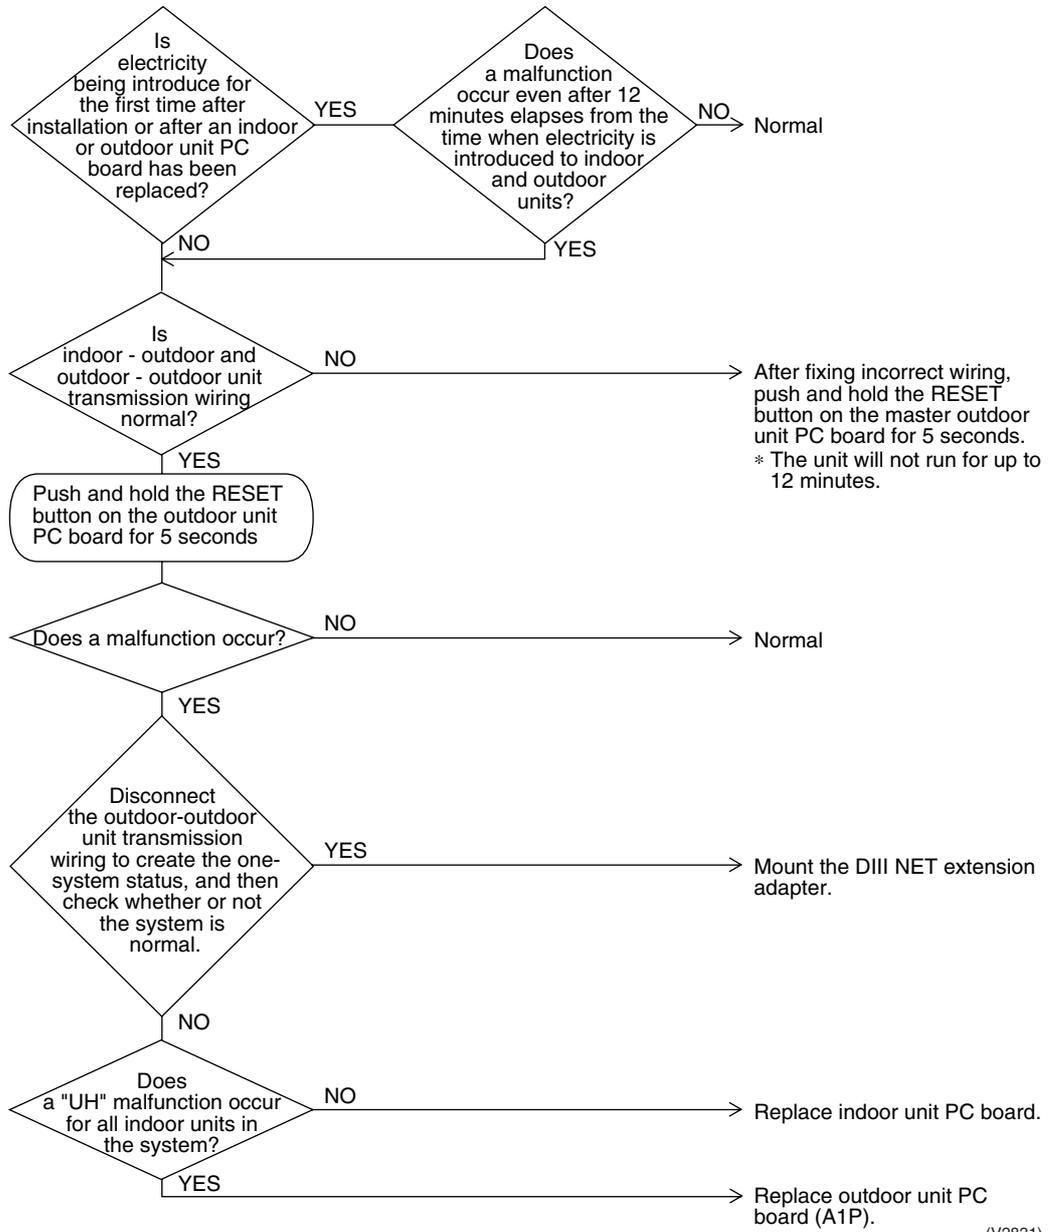

## 4. Troubleshooting (OP: Central Remote Controller)

### 4.1 “M1” PC Board Defect

Remote  
Controller  
Display



Applicable  
Models

Central remote controller  
Schedule timer

Method of  
Malfunction  
Detection

Detect an abnormality in the DIII-NET polarity circuit.

Malfunction  
Decision  
Conditions

When + polarity and - polarity are detected at the same time.

Supposed  
Causes

- Defect of central remote controller PC board
- Defect of Schedule timer PC board

Troubleshooting


Replace the central remote controller.



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Turn ON the power supply of the central equipment with M1 displayed once again.

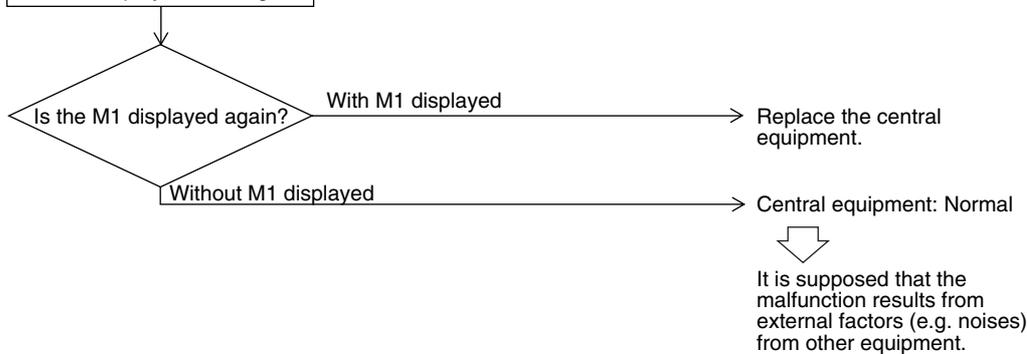

## 4.2 “M8” Malfunction of Transmission Between Optional Controllers for Centralized Control


<b>Remote Controller Display</b>	<i>M8</i>
<b>Applicable Models</b>	Central remote controller      Intelligent Touch Controller Schedule timer
<b>Method of Malfunction Detection</b>	Detect the malfunction according to DIII-NET transmission data. (The system will be automatically reset.)
<b>Malfunction Decision Conditions</b>	When no master controller is present at the time of the startup of slave controller. When the centralized controller, which was connected once, shows no response.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Malfunction of transmission between optional controllers for centralized control</li> <li>■ Defect of PC board of optional controllers for centralized control</li> </ul>

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

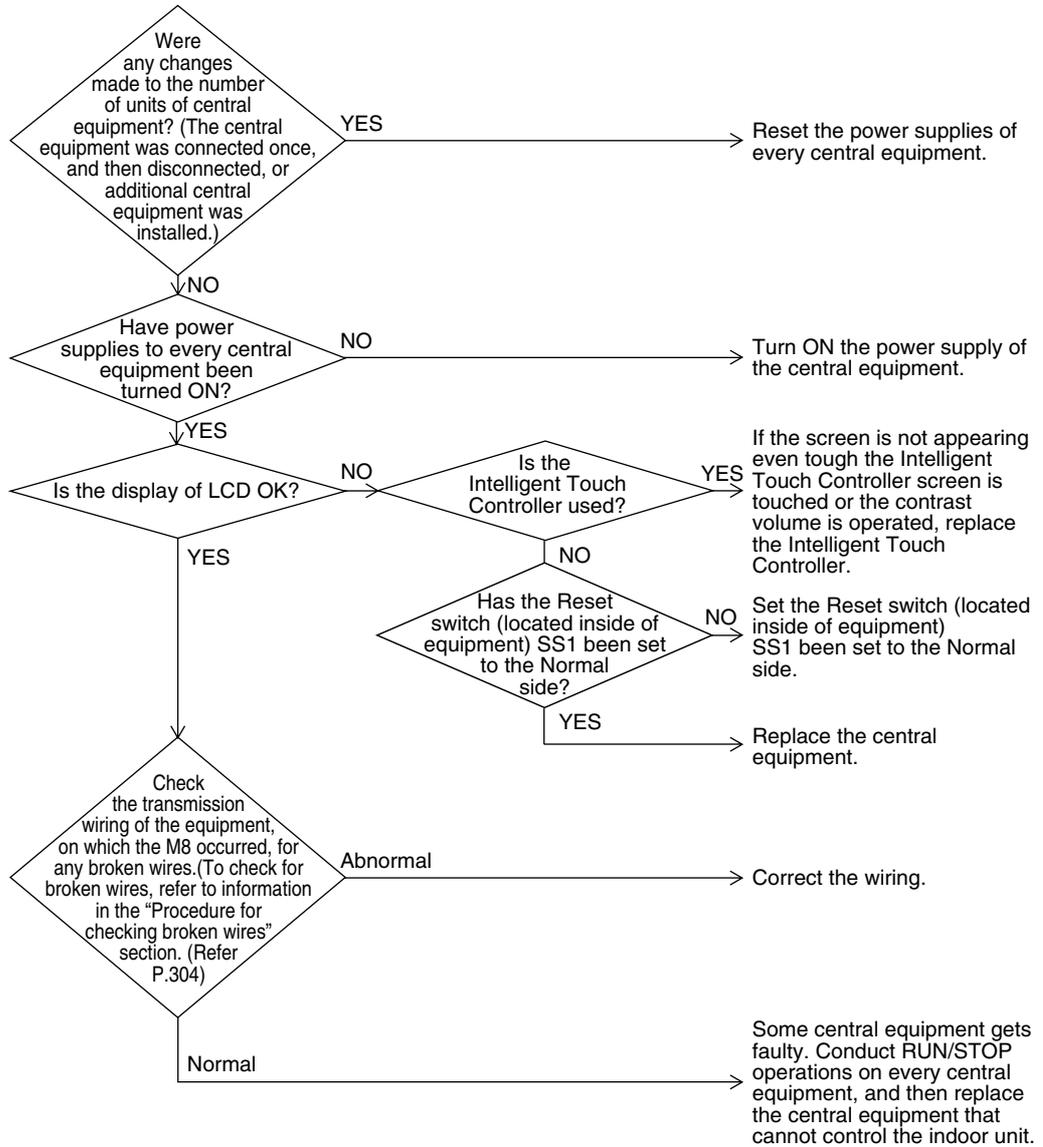

### 4.3 “MR” Improper Combination of Optional Controllers for Centralized Control


<b>Remote Controller Display</b>	<i>MR</i>
<b>Applicable Models</b>	Central remote controller      Intelligent touch controller Schedule timer
<b>Method of Malfunction Detection</b>	Detect the malfunction according to DIII-NET transmission data.
<b>Malfunction Decision Conditions</b>	When the schedule timer is set to individual use mode, other central component is present. When multiple master controller are present. When the remote control adapter is present.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Improper combination of optional controllers for centralized control</li> <li>■ More than one master controller is connected</li> <li>■ Defect of PC board of optional controller for centralized control</li> </ul>

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

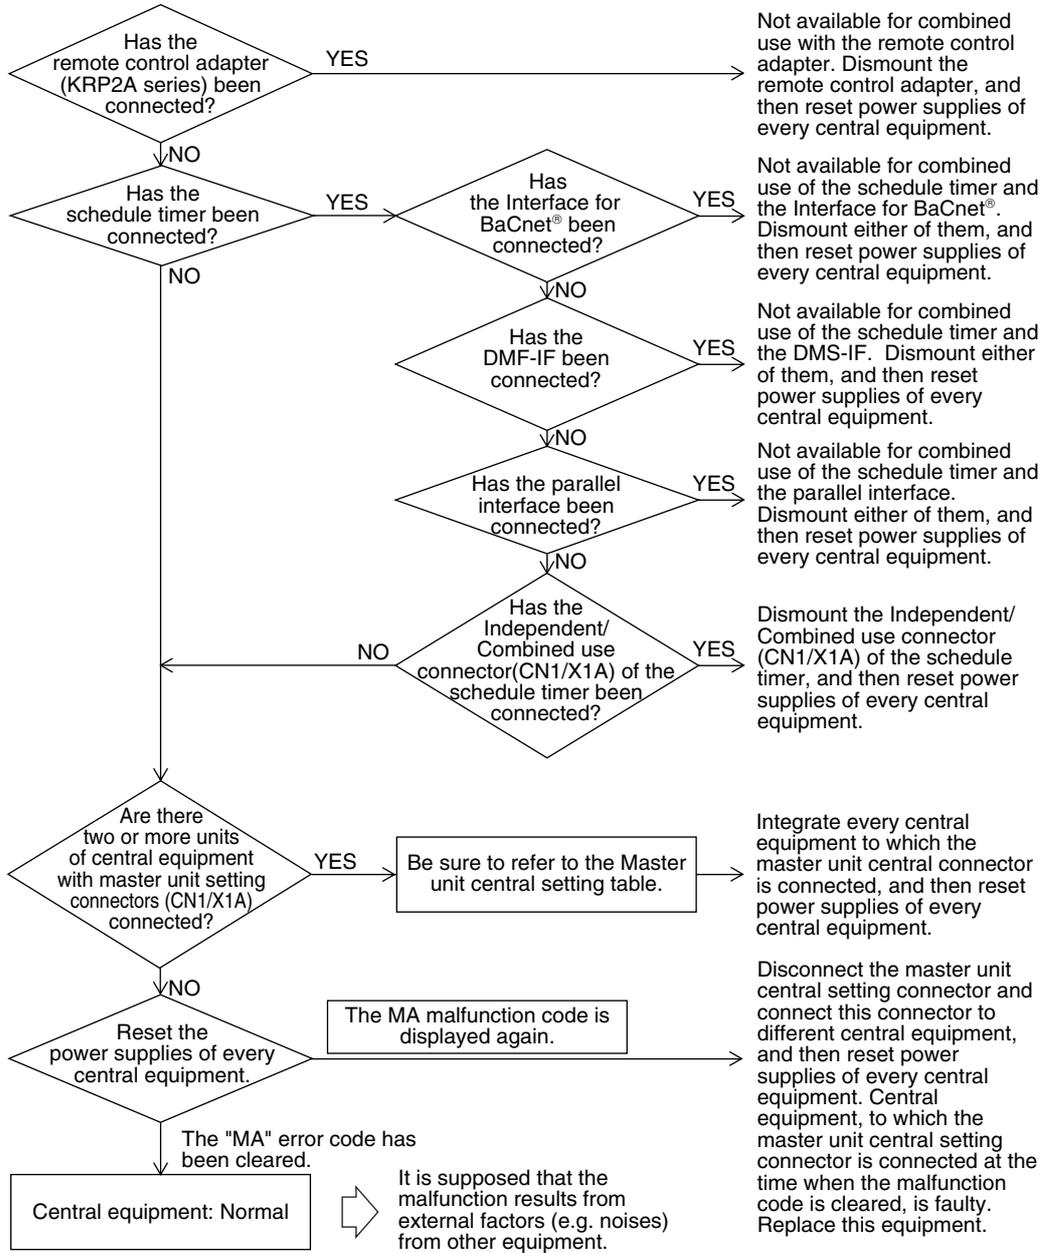

## 4.4 “MC” Address Duplication, Improper Setting

Remote Controller Display



Applicable Models

Central remote controller      Intelligent Touch Controller  
Schedule timer

Method of Malfunction Detection

Detect the malfunction according to DIII-NET transmission data.

Malfunction Decision Conditions

- Two or more units of central remote controllers and Intelligent Touch Controllers are connected, and all of them are set to master unit central setting or slave unit central setting.
- Two units of schedule timers are connected.

Supposed Causes


- Address duplication of centralized controller

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

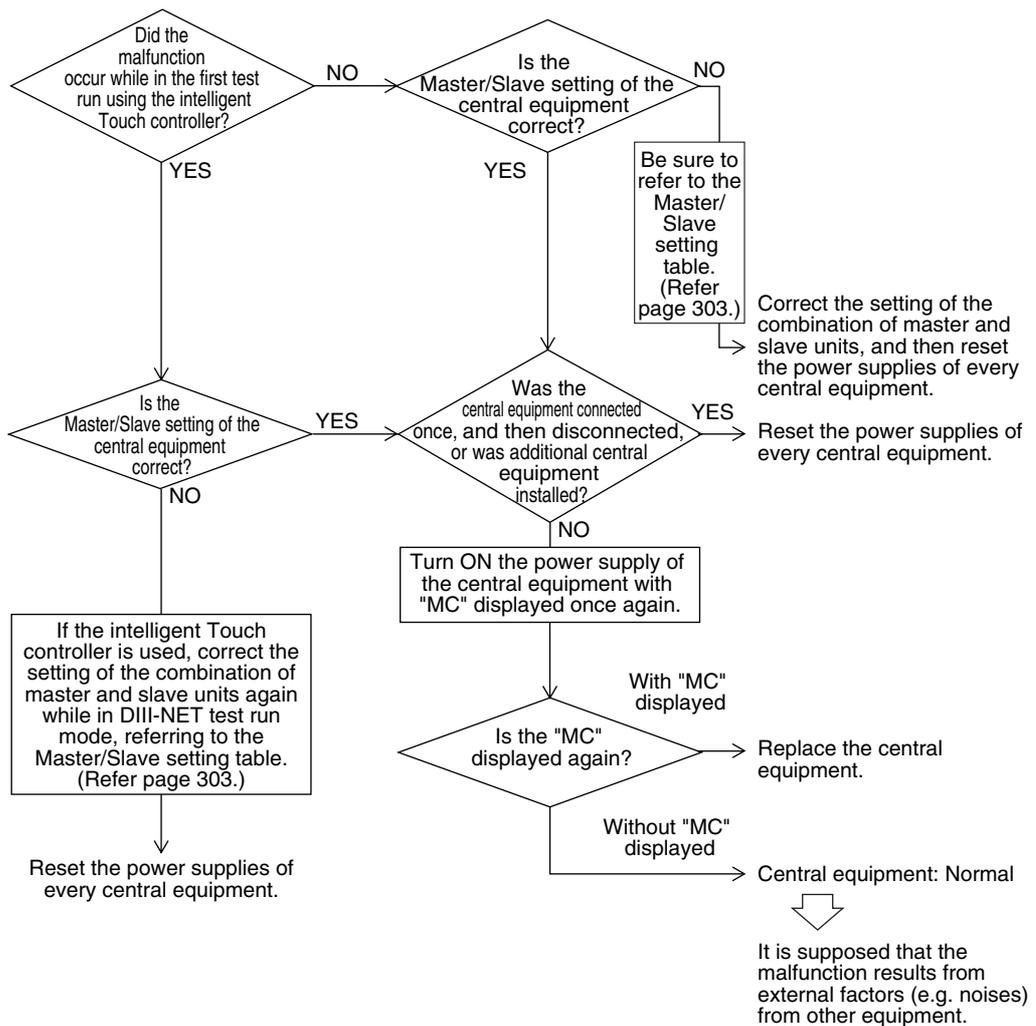

**Master-Slave Unit Setting Table**

Combination of Intelligent Touch Controller and Central Remote Controller



* Pattern	#1		#2		#3		#4	
	1-00~4-15	Master/Slave	5-00~8-15	Master/Slave	1-00~4-15	Master/Slave	5-00~8-15	Master/Slave
①	CRC	Master	CRC	Master	CRC	Slave	CRC	Slave
②	CRC	Master	—	—	CRC	Slave	—	—
③	Intelligent Touch controller	Master	—	—	Intelligent Touch controller	Slave	—	—
④	CRC	Master	—	—	Intelligent Touch controller	Slave	—	—
⑤	Intelligent Touch controller	Master	—	—	CRC	Slave	—	—
⑥	CRC	Master	—	—	—	—	—	—
⑦	Intelligent Touch controller	Master	—	—	—	—	—	—

CRC: Central remote controller <DCS302C1>

Intelligent Touch controller: <DCS601C51>

\*The patterns marked with "\*" have nothing to do with those described in the list of Setting of master unit central setting connector.

**Master Unit Central Connector Setting Table**

The master unit central setting connector (CN1/X1A) is mounted at the factory.

- To independently use a single unit of the intelligent Touch controller or a single unit of the central remote controller, do not dismount the master unit central setting connector (i.e., use the connector with the factory setting unchanged).
- To independently use the schedule timer, insert an independent-use setting connector. No independent-use setting connector has been mounted at the factory. Insert the connector, which is attached to the casing of the main unit, in the PC board (CN1/X1A). (Independent-use connector=Master unit central setting connector)
- To use two or more central equipment in combination, make settings according to the table shown below.

Pattern	Central equipment connection pattern				Setting of master unit central setting connector(*2)				
	Intelligent Touch controller	Central remote controller	Unified ON/OFF controller	Schedule timer	Intelligent Touch controller	Central remote controller	Unified ON/OFF controller	Schedule timer	
①	1 to 2 units	/	/	× (*1)	Only a single unit: "Provided", Others: "Not provided"	/	/	/	
②	1 unit	1 unit	/	× (*1)	Provided	Not provided	/	/	
③				× (*1)					
④	1 to 2 units	/	1 to 8 units	× (*1)	Only a single unit: "Provided", Others: "Not provided"	/	All "Not provided"	/	
⑤	/	1 to 4 units	/	/	Only a single unit: "Provided", Others: "Not provided"	/	All "Not provided"	/	
⑥	/			1 unit				/	Not provided
⑦	/			1 unit				/	Not provided
⑧	/			1 unit				/	Not provided
⑨	/	/	1 to 16 units	/	Only a single unit: "Provided", Others: "Not provided"	/	Only a single unit: "Provided", Others: "Not provided"	/	
⑩	/	/		1 unit				/	Not provided
⑪	/	/	/	1 unit	/	/	/	Provided	

(\*1) The intelligent Touch controller and the schedule timer are not available for combined use.

(\*2) The intelligent Touch controller, central remote controller, and the unified ON/OFF controller have been set to "Provided with the master unit central setting connector" at the factory. The schedule timer has been set to "Not provided with the master unit central setting connector" at the factory, which is attached to the casing of the main unit.

**Procedures for Detecting Broken Wires in Transmission Wiring for Control**

1. Procedure for checking outdoor-outdoor unit transmission wiring for broken wires

On the system shown below, turn OFF the power supply to all equipment, short-circuit between the outdoor-outdoor unit terminal parts F1 and F2 in the "Outdoor Unit A" that is farthest from the central remote controller, and then conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the central remote controller using a multiple meter. If there is continuity between the said terminal blocks, the outdoor-outdoor unit transmission wiring has no broken wires in it.


If there is no continuity, the transmission wiring may have broken wires. With the outdoor-outdoor unit terminal parts of the "Outdoor Unit A" short-circuited, conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the unified ON/OFF controller. If there is no continuity as well, conduct continuity checks between the outdoor-outdoor unit terminal parts of the "Outdoor Unit E", between the outdoor-outdoor unit terminal parts of the "Outdoor Unit D", between the outdoor-outdoor unit terminal parts of the "Outdoor Unit C", ... in the order described, thus identifying the place with continuity.

If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.
2. Procedure for checking indoor-outdoor unit transmission wiring for broken wires (for checking the indoor-outdoor unit transmission wiring of the "Outdoor Unit C" for broken wires)

Turn OFF the power supply to all equipment, short-circuit between the indoor-outdoor unit terminal parts F1 and F2 in the "Outdoor Unit C, and then conduct continuity checks between the transmission wirings F1 and F2 of the "Indoor Unit a" that is farthest from the "Outdoor Unit C" using a multiple meter. If there is continuity between the said transmission wirings, the indoor-outdoor unit transmission wiring has no broken wires in it.

If there is no continuity, the transmission wiring may have broken wires. With the indoor-outdoor unit terminal parts of the "Outdoor Unit C" short-circuited, identify the place with continuity in the transmission wiring of the "Indoor Unit b", transmission wiring of the "Indoor Unit c", and transmission wiring of the "Indoor Unit d" in the order described.

If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.

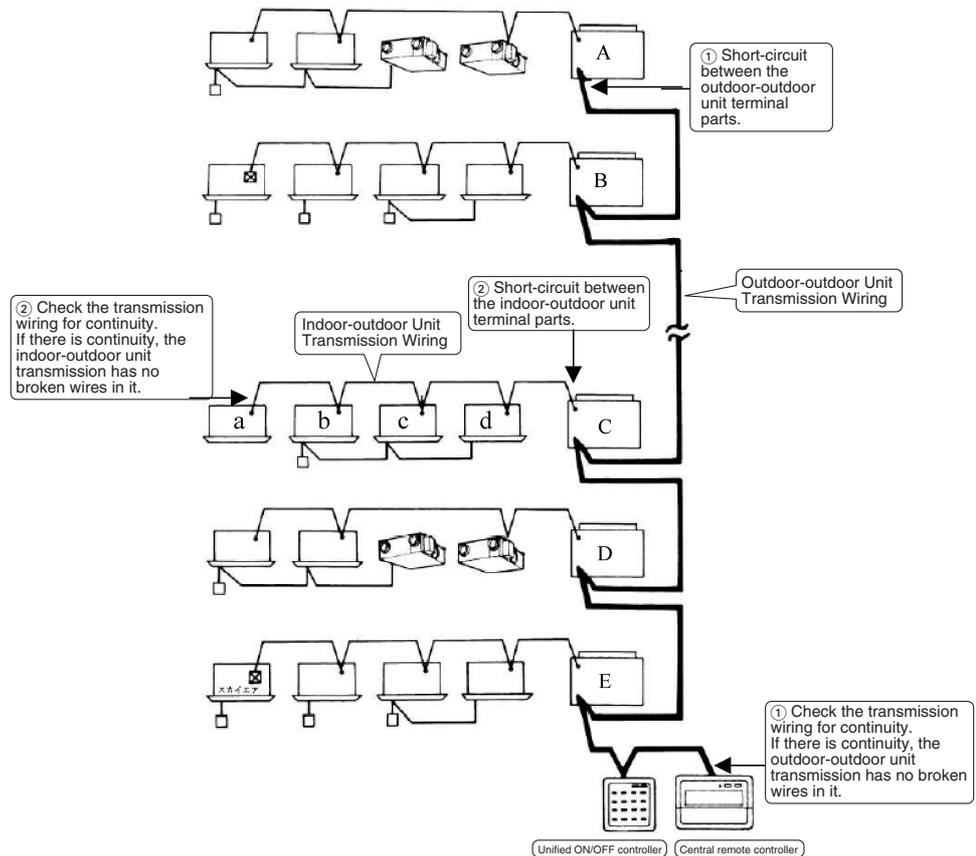

## 5. Troubleshooting (OP: Unified ON/OFF Controller)

### 5.1 Operation Lamp Blinks

#### Remote Controller Display

Operation lamp blinks

#### Applicable Models

All model of indoor units  
Unified ON/OFF controller

#### Method of Malfunction Detection

Detect the malfunction according to DIII-NET transmission data.

#### Malfunction Decision Conditions

#### Supposed Causes


- Malfunction of transmission between optional central controller and indoor unit
- Connector for setting master controller is disconnected
- Defect of unified ON/OFF controller PC board
- Defect of indoor unit PC board
- Malfunction of air conditioner

Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

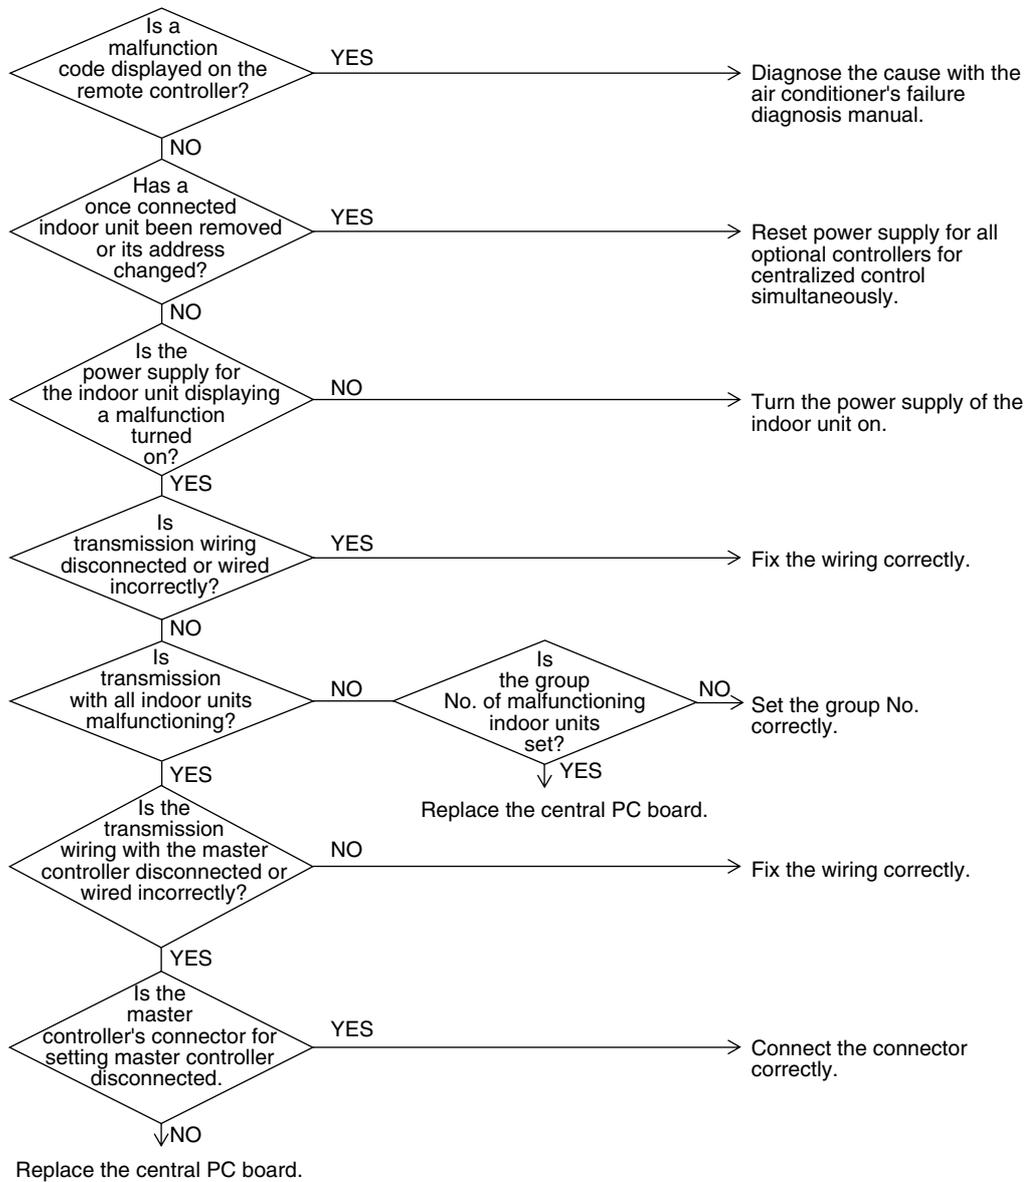

(V2841)

## 5.2 Display “Under Centralized Control” Blinks (Repeats Single Blink)

### Remote Controller Display

 “under centralized control” (Repeats single blink)

### Applicable Models

Unified ON/OFF controller  
Central remote controller, Schedule timer

### Method of Malfunction Detection

Detect the malfunction according to DIII-NET transmission data.

### Malfunction Decision Conditions

When the centralized controller, which was connected once, shows no response.  
The control ranges are overlapped.  
When multiple master central controller are present.  
When the schedule timer is set to individual use mode, other central controller is present.  
When the wiring adaptor for electrical appendices is present.

### Supposed Causes


- Address duplication of optional controllers for centralized control
- Improper combination of optional controllers for centralized control
- Connection of more than one master controller
- Malfunction of transmission between optional controllers for centralized control
- Defect of PC board of optional controllers for centralized control

Troubleshooting




**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

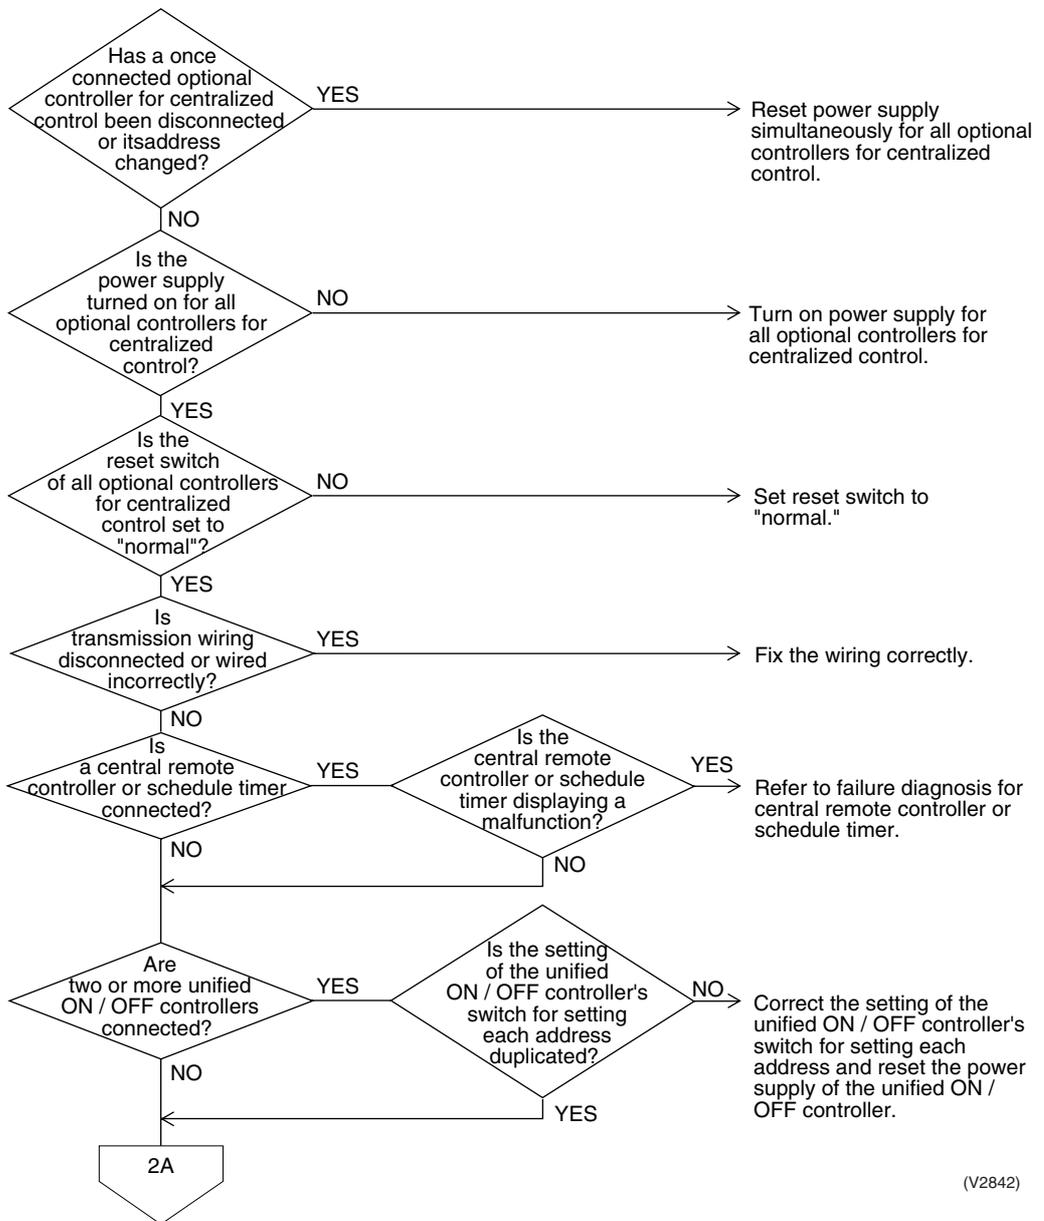

(V2842)

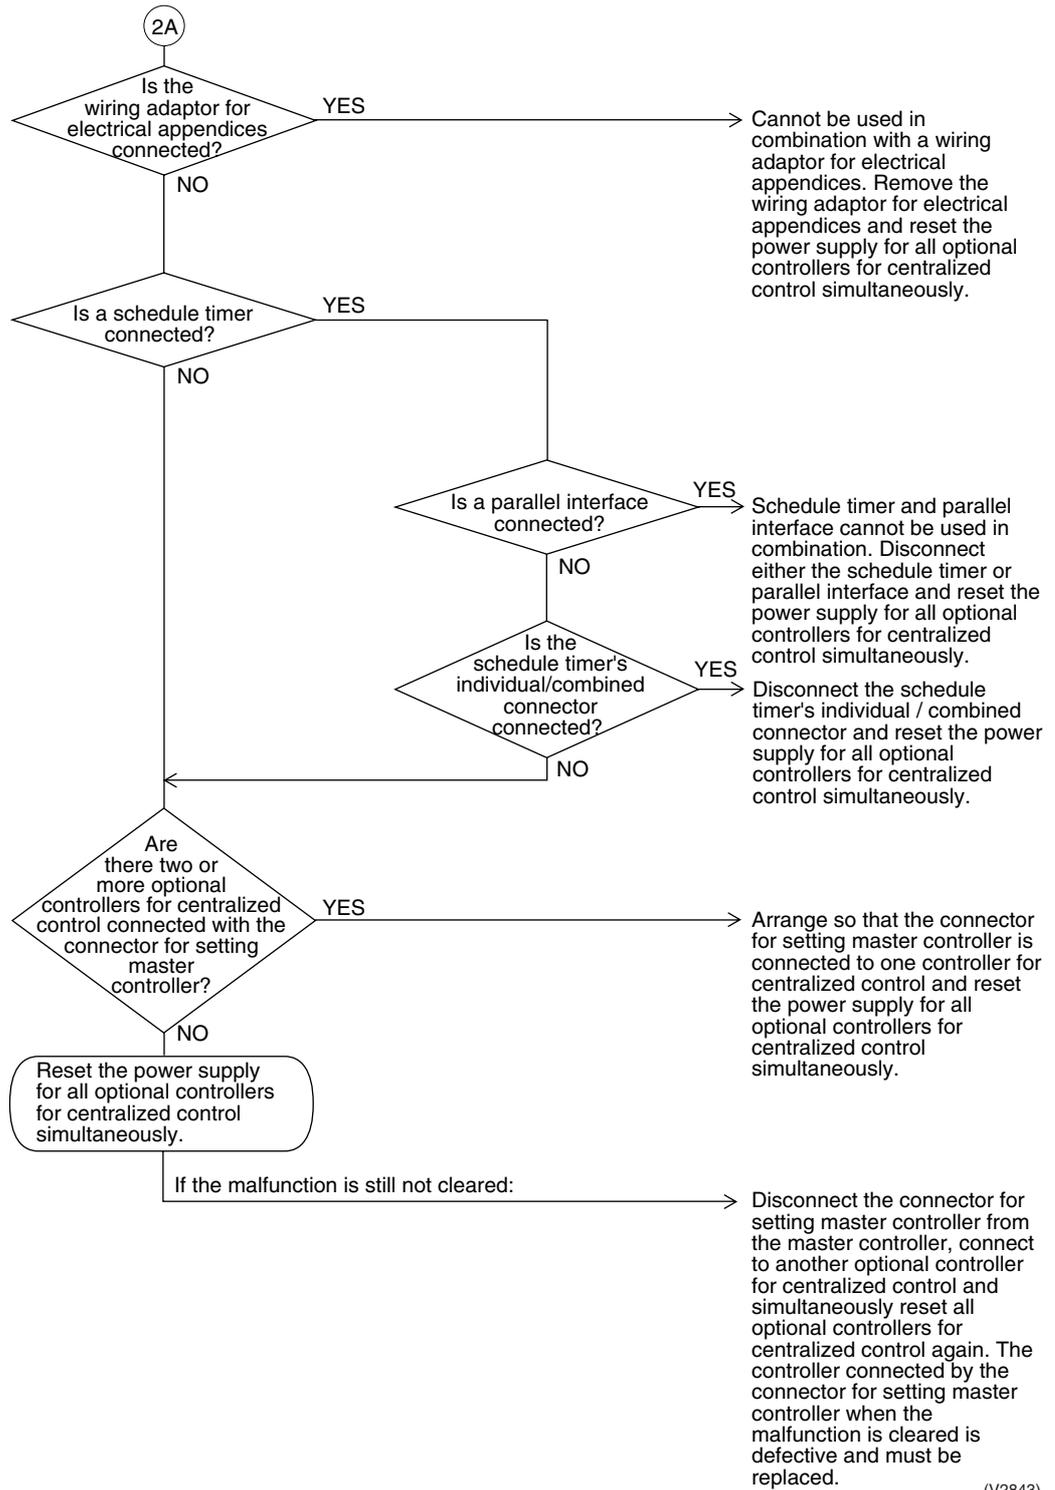

(V2843)

## 5.3 Display “Under Centralized Control” Blinks (Repeats Double Blink)

**Remote Controller Display**

 “under centralized control” (Repeats double blink)

**Applicable Models**

Unified ON/OFF controller

**Method of Malfunction Detection**

Detect the malfunction according to DIII-NET transmission data.

**Malfunction Decision Conditions**

When no central control addresses are set to indoor units.  
When no indoor units are connected within the control range.

**Supposed Causes**


- Central control address (group No.) is not set for indoor unit.
- Improper control range setting switch
- Improper wiring of transmission wiring

### Troubleshooting



**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

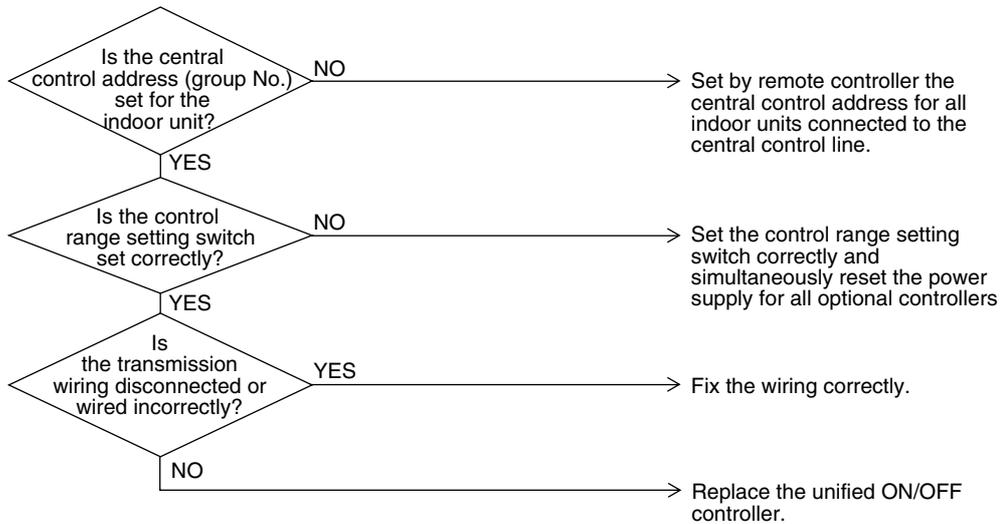


(V2844)

**Check No. 1****Check on connector of fan motor (Power supply cable)**

(1) Turn off the power supply.


Measure the resistance between phases of U,V,W at the motor side connectors (three-core wire) to check that the values are balanced and there is no short circuiting, while connector or relay connector is disconnected.

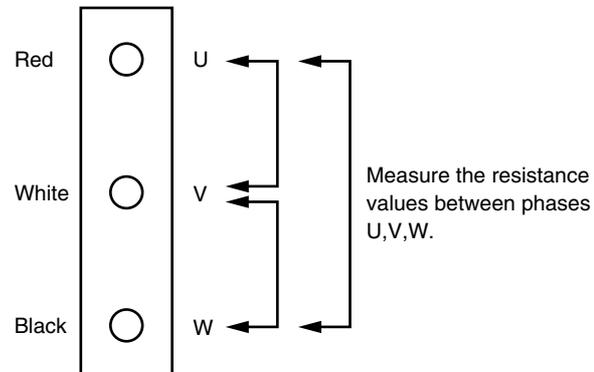**Check No. 2**

(1) Turn off the power supply.


(2) Measure the resistance between Vcc and each phase of U,V,W, and GND and each phase at the motor side connectors (five-core wire) to check that the values are balanced within the range of  $\pm 20\%$ , while connector or relay connector is disconnected.

Furthermore, to use a multiple meter for measurement, connect the probe of negative pole to Vcc and that of positive pole to GND.

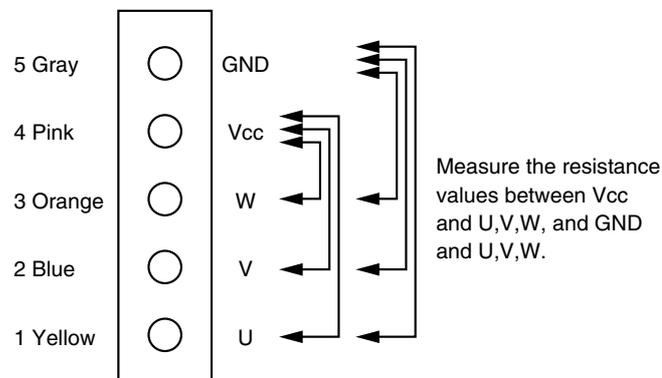

**[CHECK 3] Check for causes of rise in high pressure**


Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

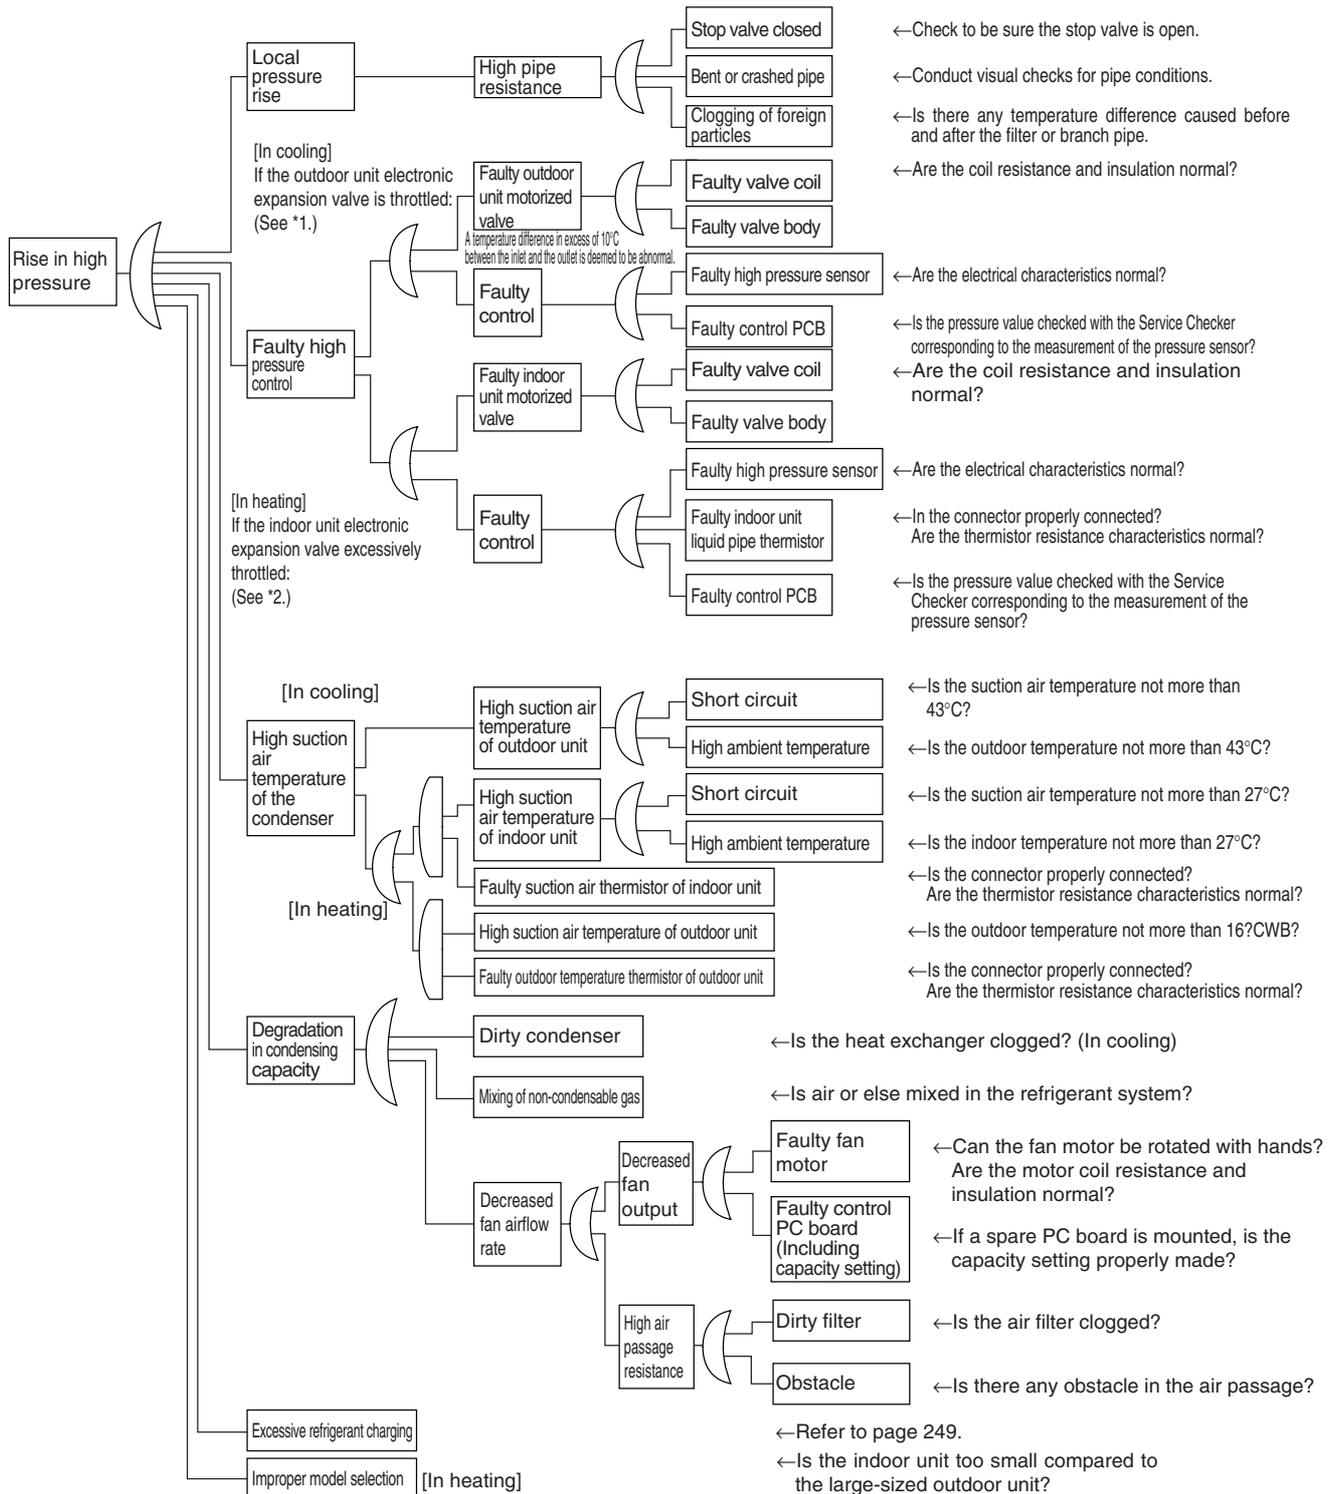

\*1: In cooling, it is normal if the outdoor unit electronic expansion valve (EV1) is fully open.  
 \*2: In heating, the indoor unit electronic expansion valve is used for "subcooled degree control".  
 (For details, refer to "Electronic Expansion Valve Control" on page 135.)

**[CHECK 4] Check for causes of drop in low pressure**

Referring to the Fault Tree Analysis (FTA) shown below, probe the faulty points.

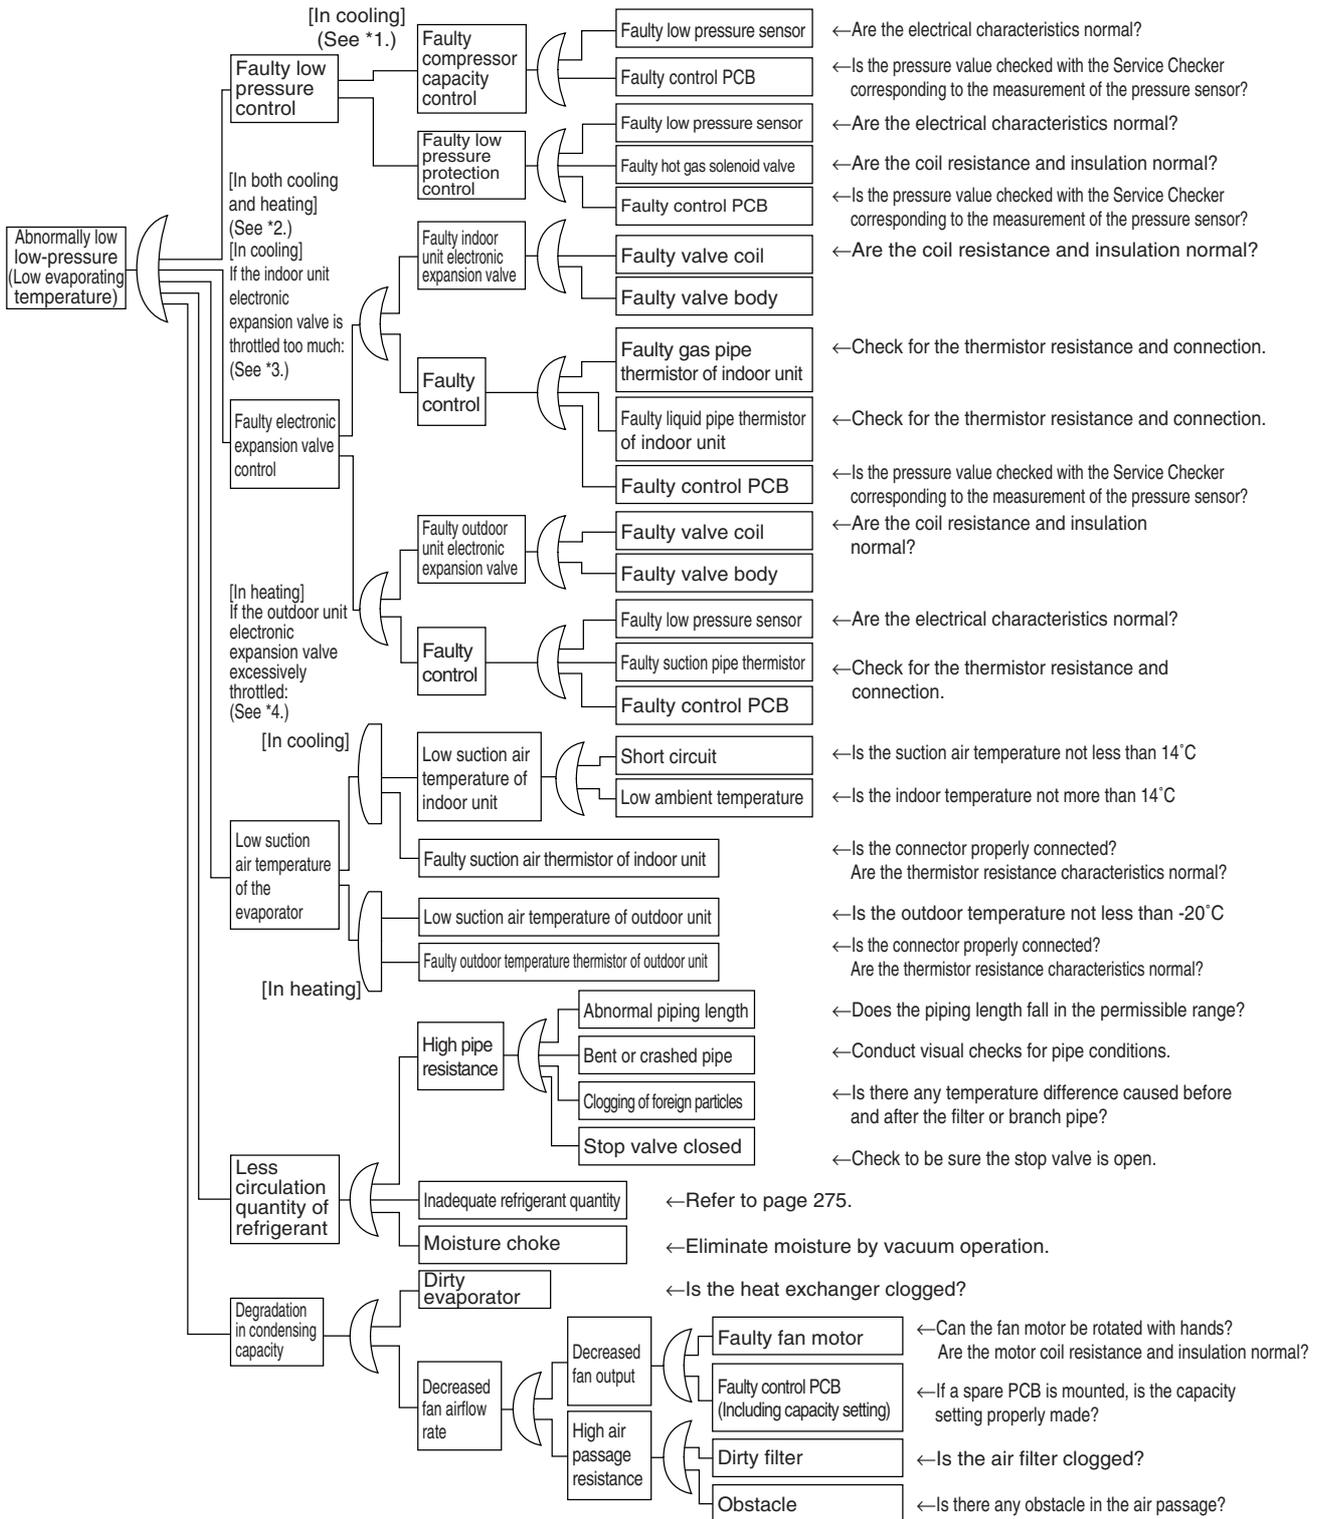

\*1: For details of the compressor capacity control while in cooling, refer to "Compressor PI Control" on page 95.  
 \*2: The "low pressure protection control" includes low pressure protection control and hot gas bypass control. For details, refer to page 119.  
 \*3: In cooling, the indoor unit electronic expansion valve is used for "superheated degree control". (For details, refer to page 135.)  
 \*4: In heating, the outdoor unit electronic expansion valve (EV1) is used for "superheated degree control of outdoor unit heat exchanger". (For details, refer to page 107.)



# Part 7


## Appendix

1. Piping Diagrams.....	316
1.1 Outdoor Unit.....	316
1.2 Indoor Unit.....	320
2. Wiring Diagrams for Reference.....	324
2.1 Outdoor Unit.....	324
2.2 Field Wiring.....	329
2.3 Indoor Unit.....	332
3. List of Electrical and Functional Parts.....	348
3.1 Outdoor Unit.....	348
3.2 Indoor Side.....	351
4. Option List.....	357
4.1 Option List of Controllers.....	357
4.2 Option Lists (Outdoor Unit).....	359
5. Piping Installation Point.....	361
5.1 Piping Installation Point.....	361
5.2 The Example of A Wrong Pattern.....	362
6. Example of connection (R-410A Type).....	363
7. Thermistor Resistance / Temperature Characteristics.....	365
8. Pressure Sensor.....	367
9. Method of Checking The Inverter's Power Transistors and Diode Modules.....	368

# 1. Piping Diagrams


## 1.1 Outdoor Unit

RXYQ5PY1

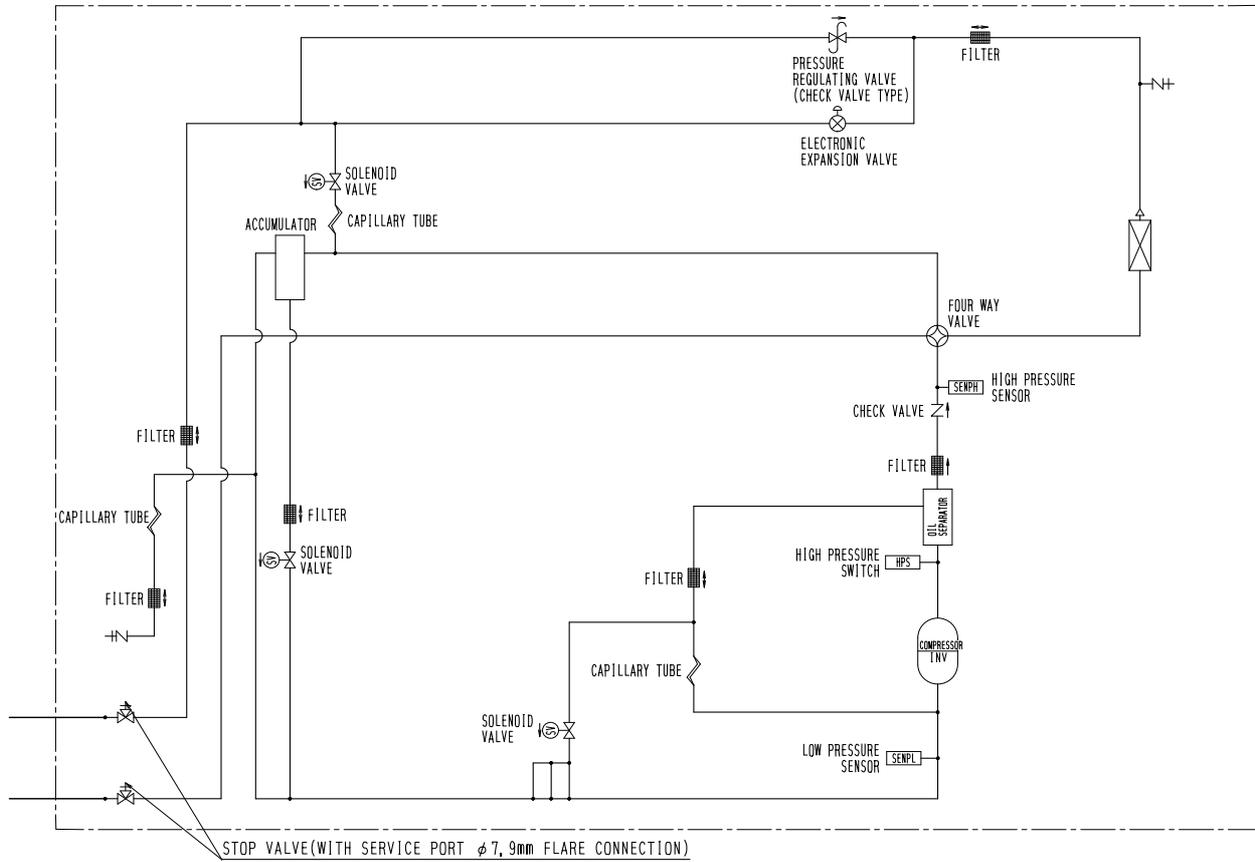


3D050782

RXYQ8P

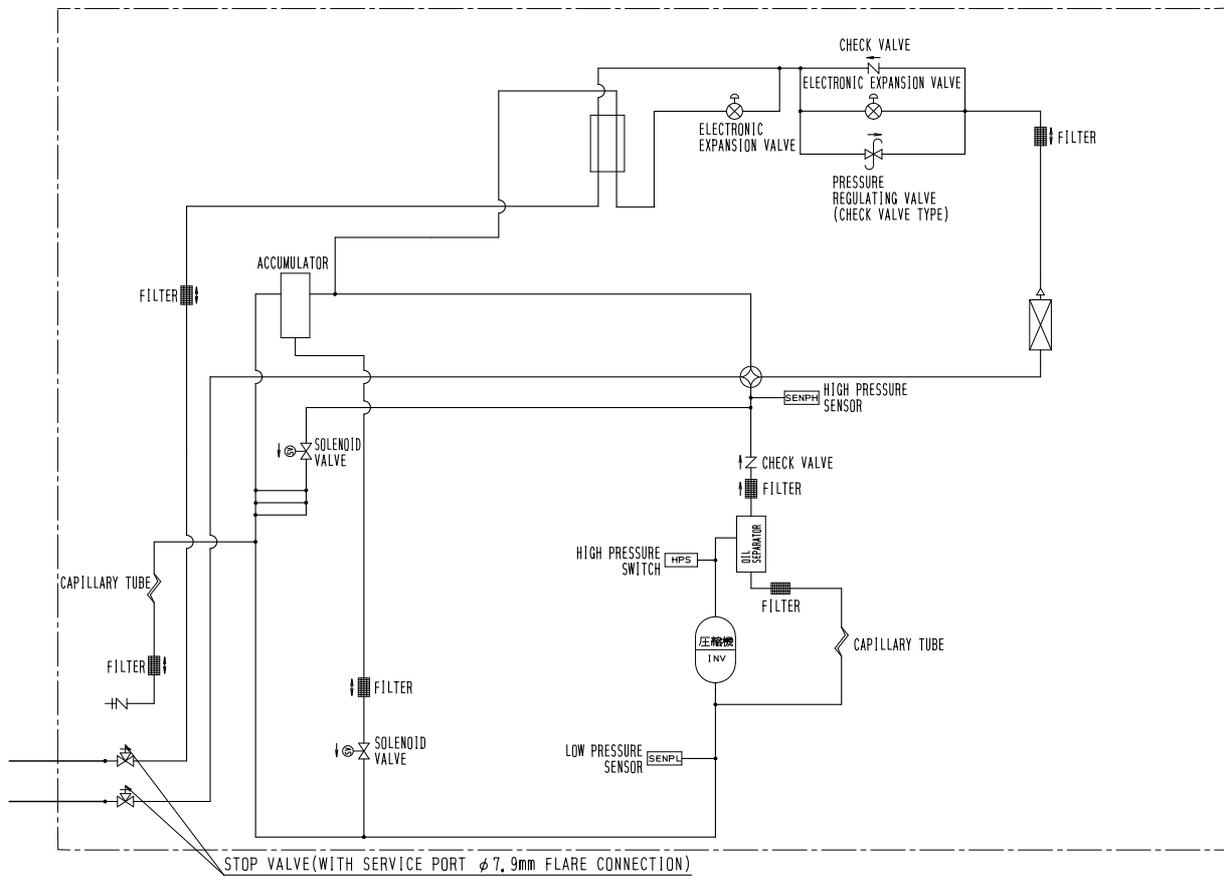


3D050783

RXYQ10P / 12PY1

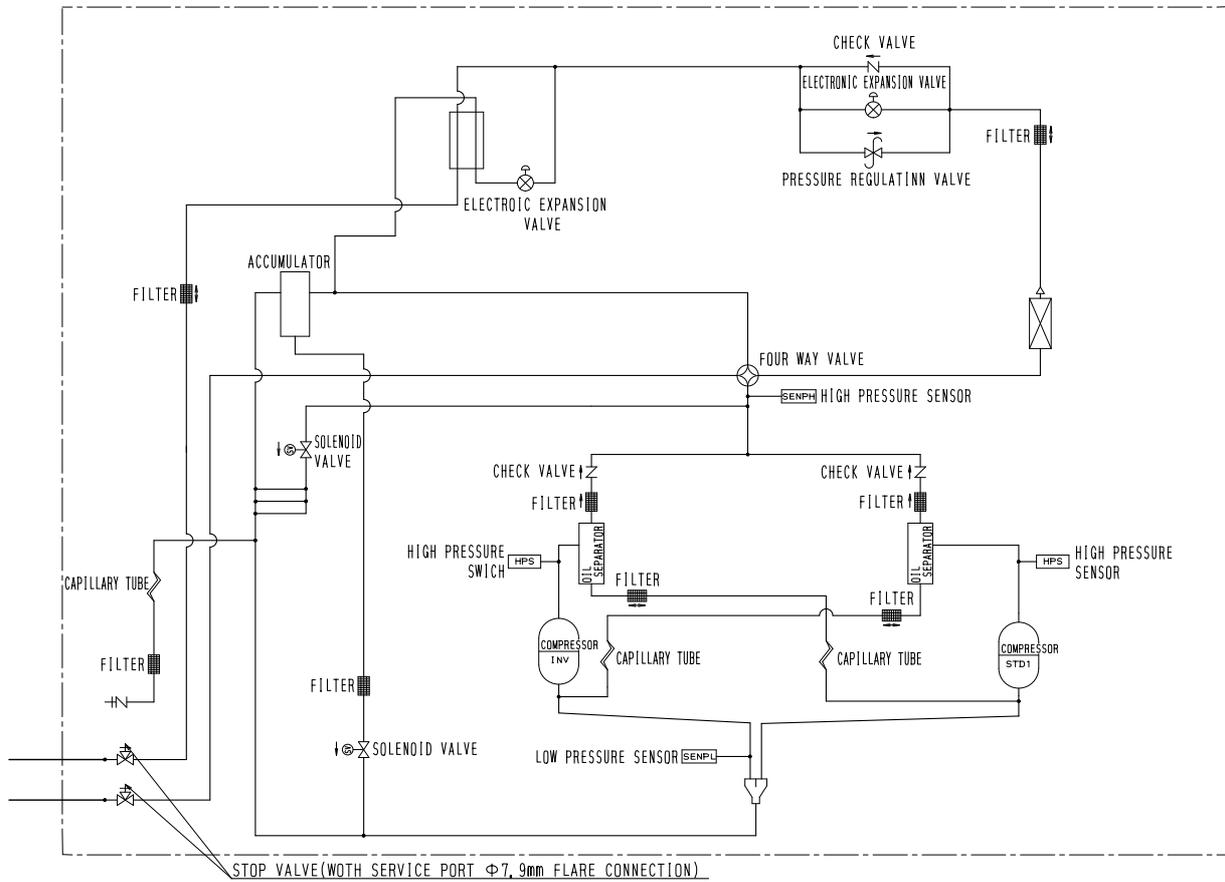

3D050784


RXYQ14P / 16P / 18PY1

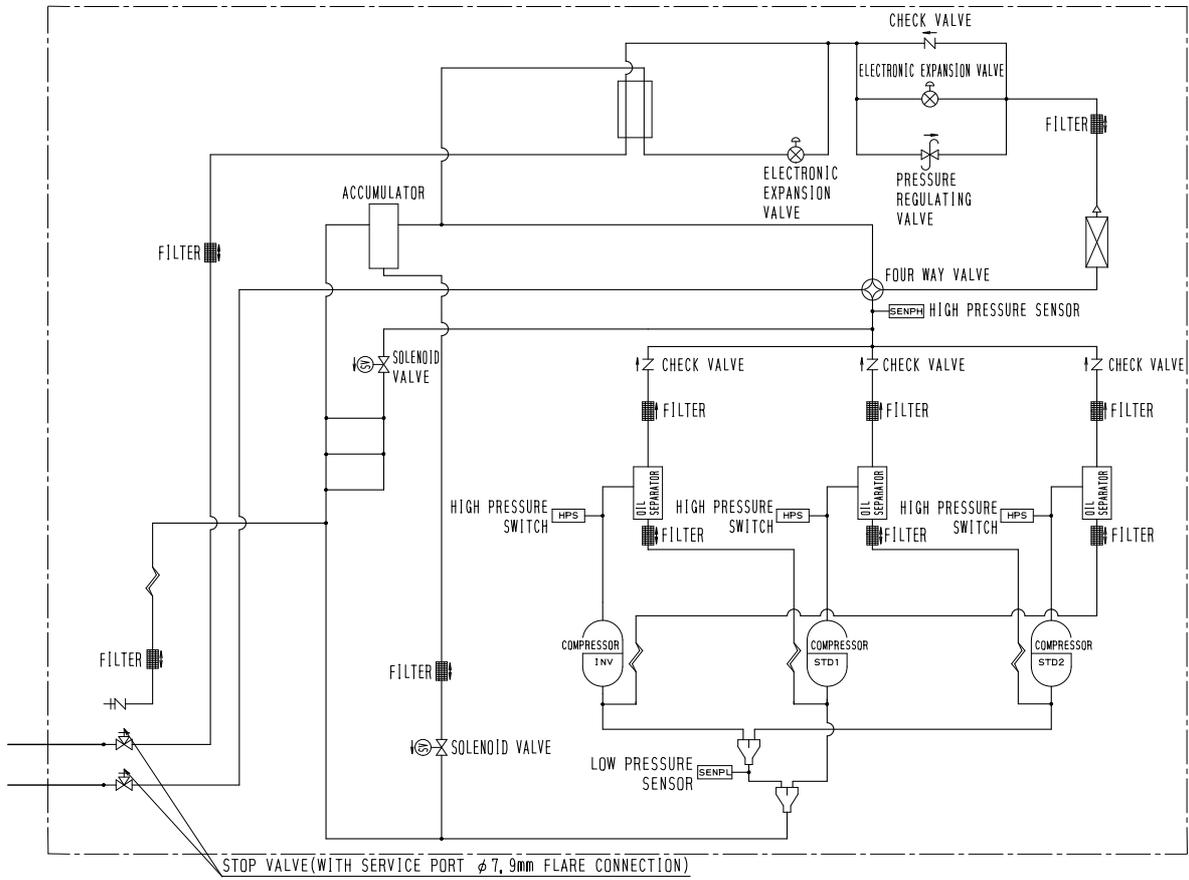

3D050785

# 1.2 Indoor Unit

FXCQ, FXFQ, FXKQ, FXSQ, FXMQ, FXHQ, FXAQ, FXLQ, FXNQ

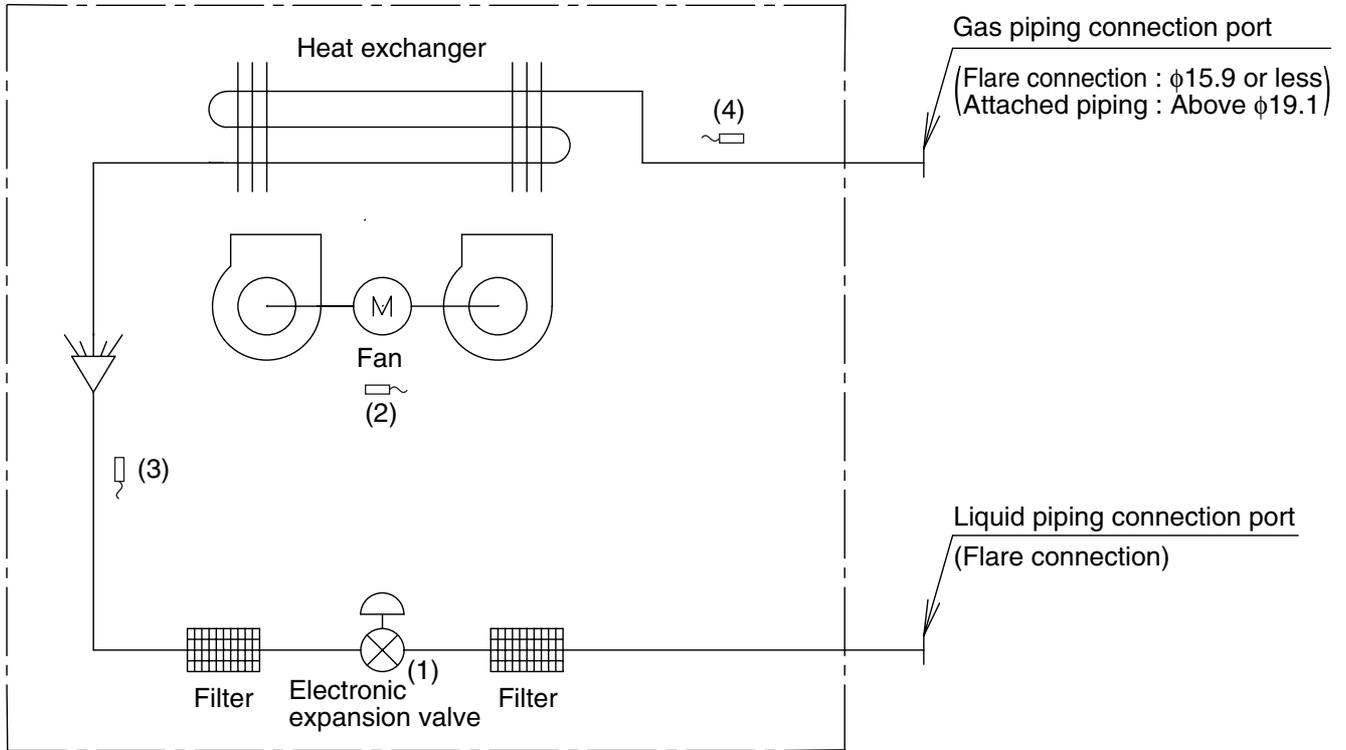


DU220-602J

Code	Name	Code	Main function
(1)	Electronic expansion valve	Y1E	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(2)	Suction air temperature thermistor	R1T	Used for thermostat control.
(3)	Liquid pipe	R2T	Used for gas superheated degree control while in cooling operation or subcooled degree control while in heating operation.
(4)	Gas pipe	R3T	Used for gas superheated degree control while in cooling operation.

(mm)

Capacity	GAS	Liquid
20 / 25 / 32 / 40 / 50M(A)	$\phi 12.7$	$\phi 6.4$
63 / 80 / 100 / 125M(A)	$\phi 15.9$	$\phi 9.5$
200M(A)	$\phi 19.1$	$\phi 9.5$
250M(A)	$\phi 22.2$	$\phi 9.5$

## FXZQ

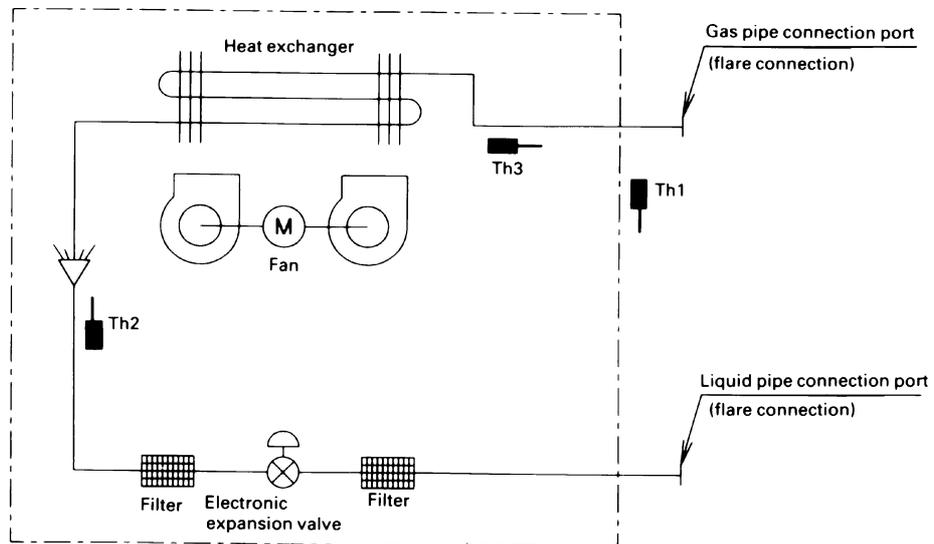

Th1: Thermister for suction air temp.

Th2: Thermister for liquid line temp.

Th3: Thermister for gas line temp.


4D040157

■ Refrigerant pipe connection port diameters

(mm)

Model	Gas	Liquid
FXZQ20M / 25M / 32M / 40M / 50M	φ12.7	φ6.4

**FXDQ**

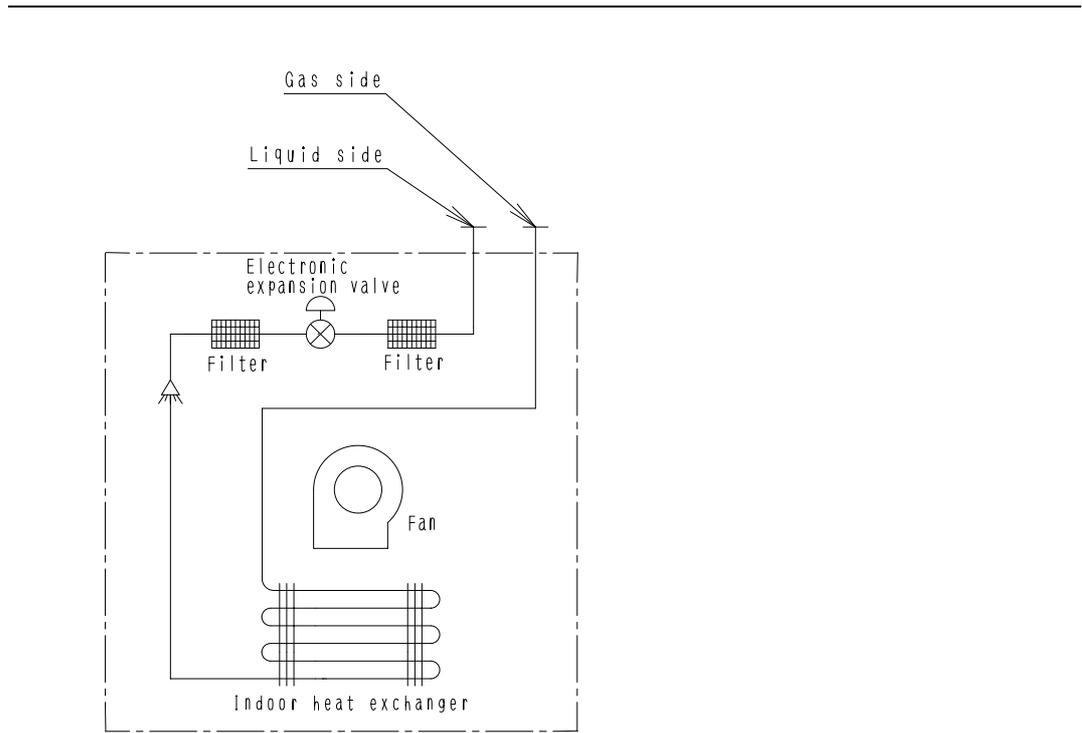


4D043864H

■ Refrigerant pipe connection port diameters

(mm)

Model	Gas	Liquid
FXDQ20N(A, P) / 25N(A, P) / 32N(A, P) / 40N(A) / 50N(A)VE(T)	φ12.7	φ6.4
FXDQ63N(A)VE(T)	φ15.9	φ9.5

**FXMQ125MF / 200MF / 250MFV1**

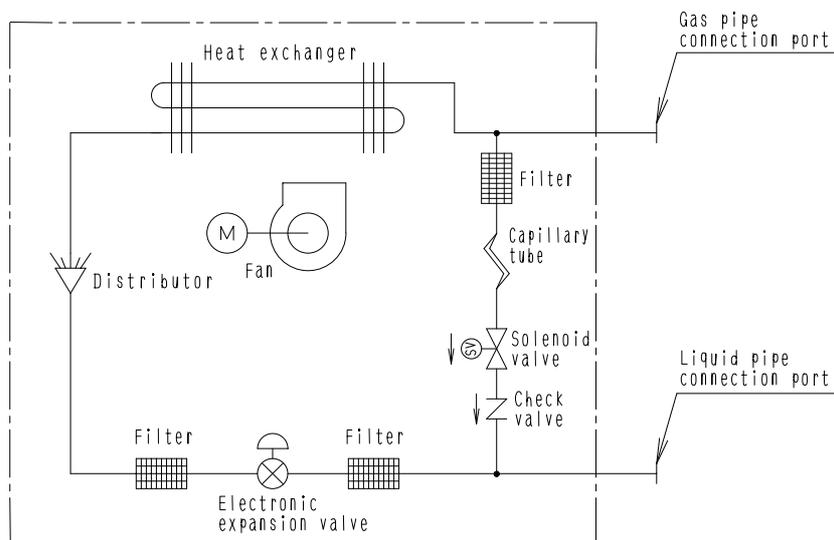

4D018650B


■ Refrigerant pipe connection port diameters

(mm)

Model	Gas	Liquid
FXMQ125MFV1	φ15.9	φ9.5
FXMQ200MFV1	φ19.1	φ9.5
FXMQ250MFV1	φ22.2	φ9.5


FXUQ + BEVQ

Indoor unit

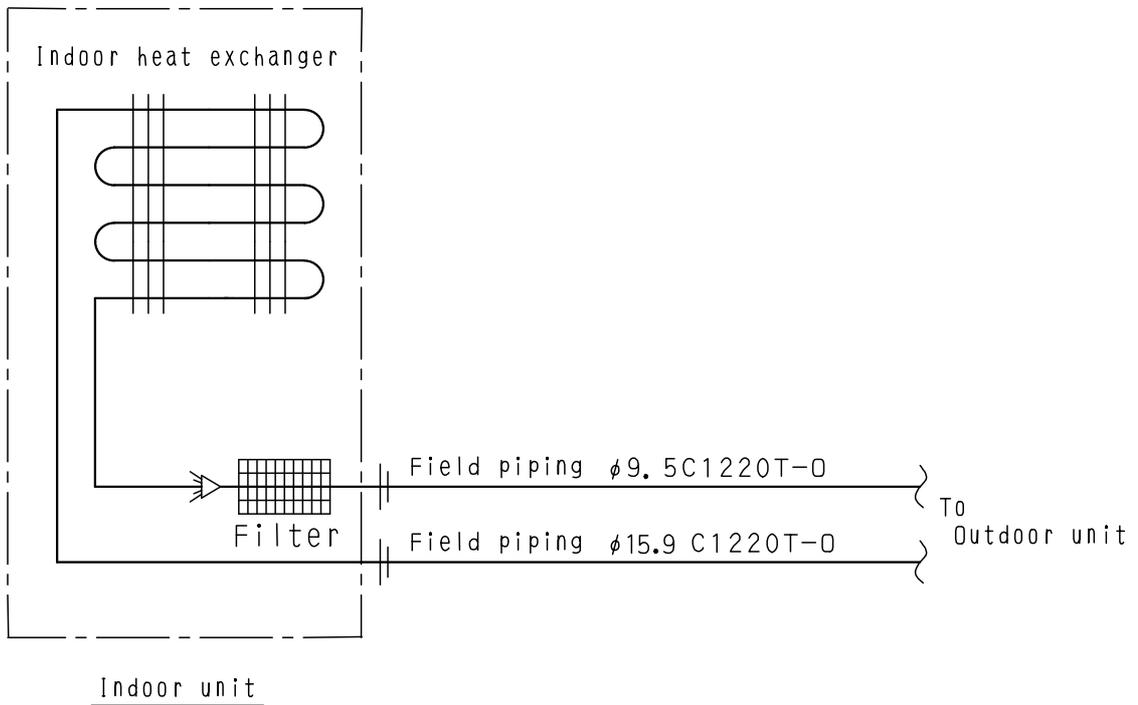

4D037995F

Connection Unit



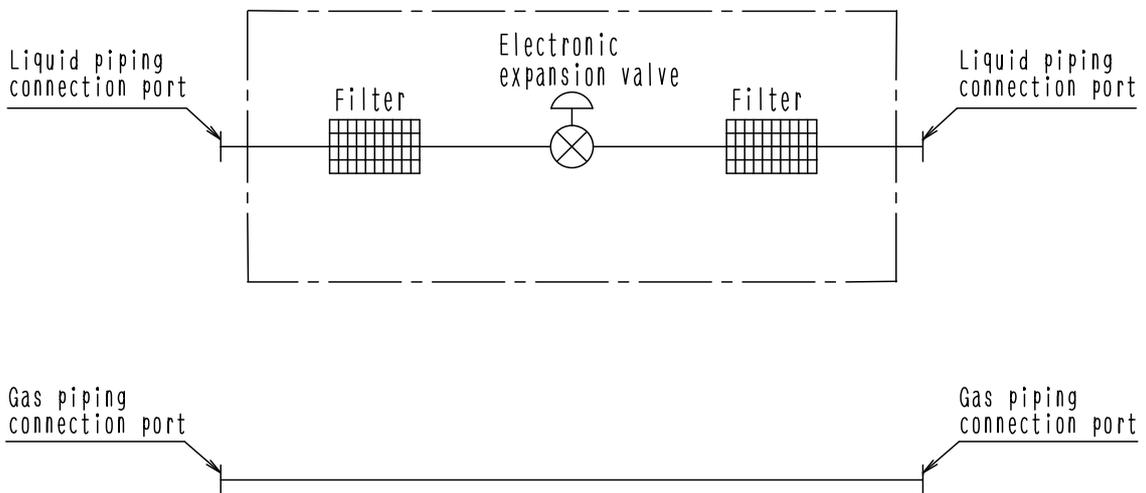


4D034127B

# 2. Wiring Diagrams for Reference

## 2.1 Outdoor Unit

RXYQ5PY1

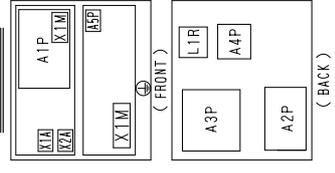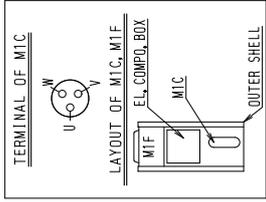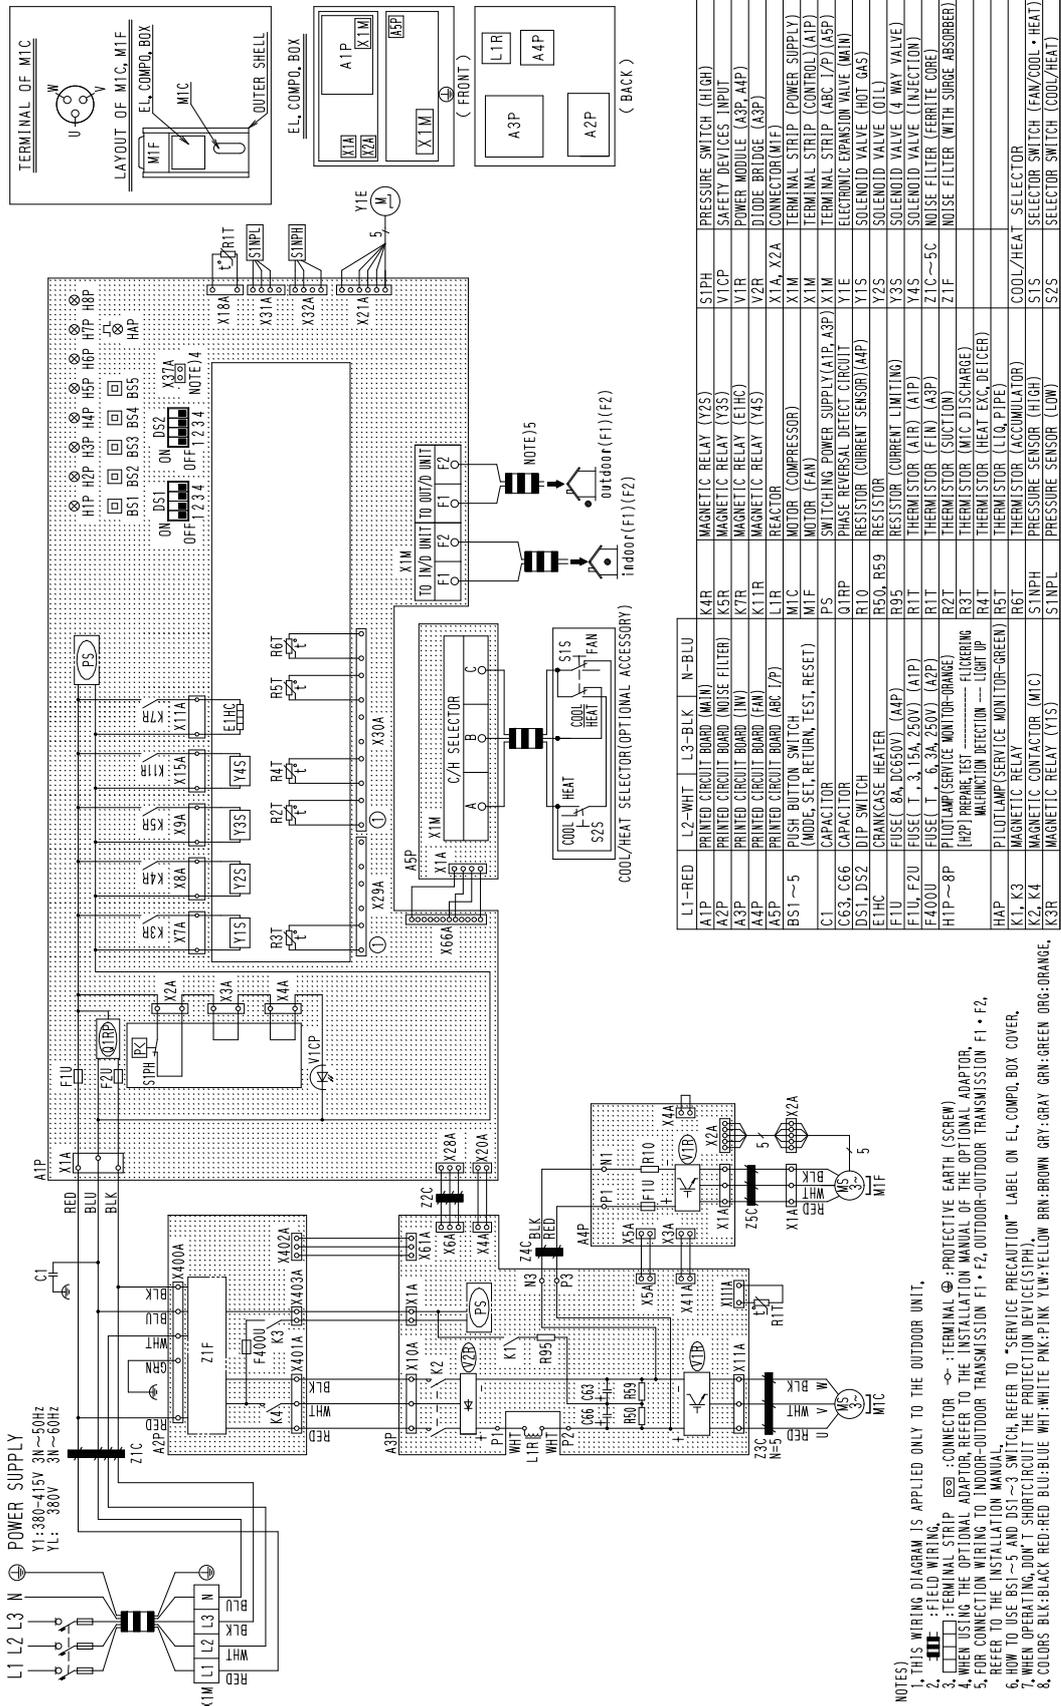

L1-RED	L2-WHT	L3-BLK	N-BLU	K4R	MAGNETIC RELAY (Y2S)	S1PH	PRESSURE SWITCH (HIGH)
A1P	PRINTED CIRCUIT BOARD (MAIN)	K5R	MAGNETIC RELAY (Y3S)	V1CP	MAGNETIC RELAY (E1HC)	V1R	SAFETY DEVICES INPUT
A2P	PRINTED CIRCUIT BOARD (NOISE FILTER)	K7R	MAGNETIC RELAY (E1HC)	V2R	DIODE BRIDGE (A3P, A4P)	X1A, X2A	CONNECTOR(M1F)
A3P	PRINTED CIRCUIT BOARD (EM)	L1R	REACTOR	X1M	TERMINAL STRIP (POWER SUPPLY)	X1M	TERMINAL STRIP (CONTROL)(A1P)
A4P	PRINTED CIRCUIT BOARD (LAMP)	M1C	MOTOR (COMPRESSOR)	PS	SWITCHING POWER SUPPLY(A1P, A3P)	X1M	TERMINAL STRIP (ABC 1/P)(A5P)
B5T~5	PUSH BUTTON SWITCH (MODE, SET, RETURN, TEST, RESET)	M1F	MOTOR (FAN)	Q1RP	PHASE REVERSAL DETECT CIRCUIT	Y1E	ELECTRONIC EXPANSION VALVE (MAIN)
C1	CAPACITOR	R10	RESISTOR	R10	RESISTOR (CURRENT SENSOR)(A4P)	Y2S	SOLENOID VALVE (HOT GAS)
C63, C66	CAPACITOR	R50, R59	RESISTOR	R50, R59	RESISTOR (CURRENT LIMITING)	Y3S	SOLENOID VALVE (OIL)
E1HC	CRANKCASE HEATER	R95	FUSE (8A, DC650V) (A4P)	R95	FUSE (T, 3, 1.5A, 250V) (A1P)	Y4S	SOLENOID VALVE (4 WAY VALVE)
F1U, F2U	FUSE (T, 6.3A, 250V) (A2P)	R11	THERMISTOR (FAN) (A3P)	R11	THERMISTOR (FAN) (A3P)	Z1C~5C	NOISE FILTER (FERRITE CORE)
F400U	FUSE (T, 6.3A, 250V) (A2P)	R21	PILOT LAMP(SERVICE MONITOR-BLANK)	R21	THERMISTOR (SUCTION)	Z1F	NOISE FILTER (WITH SURGE ABSORBER)
H1P~8P	HEAT EXCHANGER (HEAT EXCHANGER)	R22	PILOT LAMP(SERVICE MONITOR-GREEN)	R22	THERMISTOR (HEAT EXCHANGER)		
HAP	MAGNETIC CONTACTOR (M1C)	R23	PILOT LAMP(SERVICE MONITOR-RED)	R23	THERMISTOR (LIQ. PIPE)		
K1, K3	MAGNETIC CONTACTOR (M1C)	R6T	MAGNETIC RELAY	R6T	THERMISTOR (ACCUMULATOR)		
K2, K4	MAGNETIC CONTACTOR (M1C)	S1PH	PRESSURE SENSOR (HIGH)	S1PH	PRESSURE SENSOR (HIGH)		
K3R	MAGNETIC RELAY (Y1S)	S2S	PRESSURE SENSOR (LOW)	S2S	PRESSURE SENSOR (LOW)		


- (NOTES)
- THIS WIRING DIAGRAM IS APPLIED ONLY TO THE OUTDOOR UNIT.
  - FIELD WIRING: ○: TERMINAL STRIP; ⊕: PROTECTIVE EARTH (SCREEN)
  - WHEN USING THE OPTIONAL ADAPTOR REFER TO THE INSTALLATION MANUAL OF THE OPTIONAL ADAPTOR.
  - FOR CONNECTION WIRING TO INDOOR-OUTDOOR TRANSMISSION F1 • F2, OUTDOOR-OUTDOOR TRANSMISSION F1 • F2, REFER TO THE INSTALLATION MANUAL.
  - HOW TO USE B5T~5 AND DS1~3 SWITCH REFER TO "SERVICE PRECAUTION" LABEL ON EL, COMPO. BOX COVER.
  - WHEN OPERATING, DON'T SHORT-CIRCUIT THE PROTECTION DEVICES(S1PH).
  - COLORS: BLK-BLACK; RED-RED; BLU-BLUE; WHT-WHITE; Pnk-PINK; YLW-YELLOW; BRN-BROWN; GRN-GRAY; GRN-GREEN; ORG-ORANGE; K3R

9D050453G





RXYQ12PY1



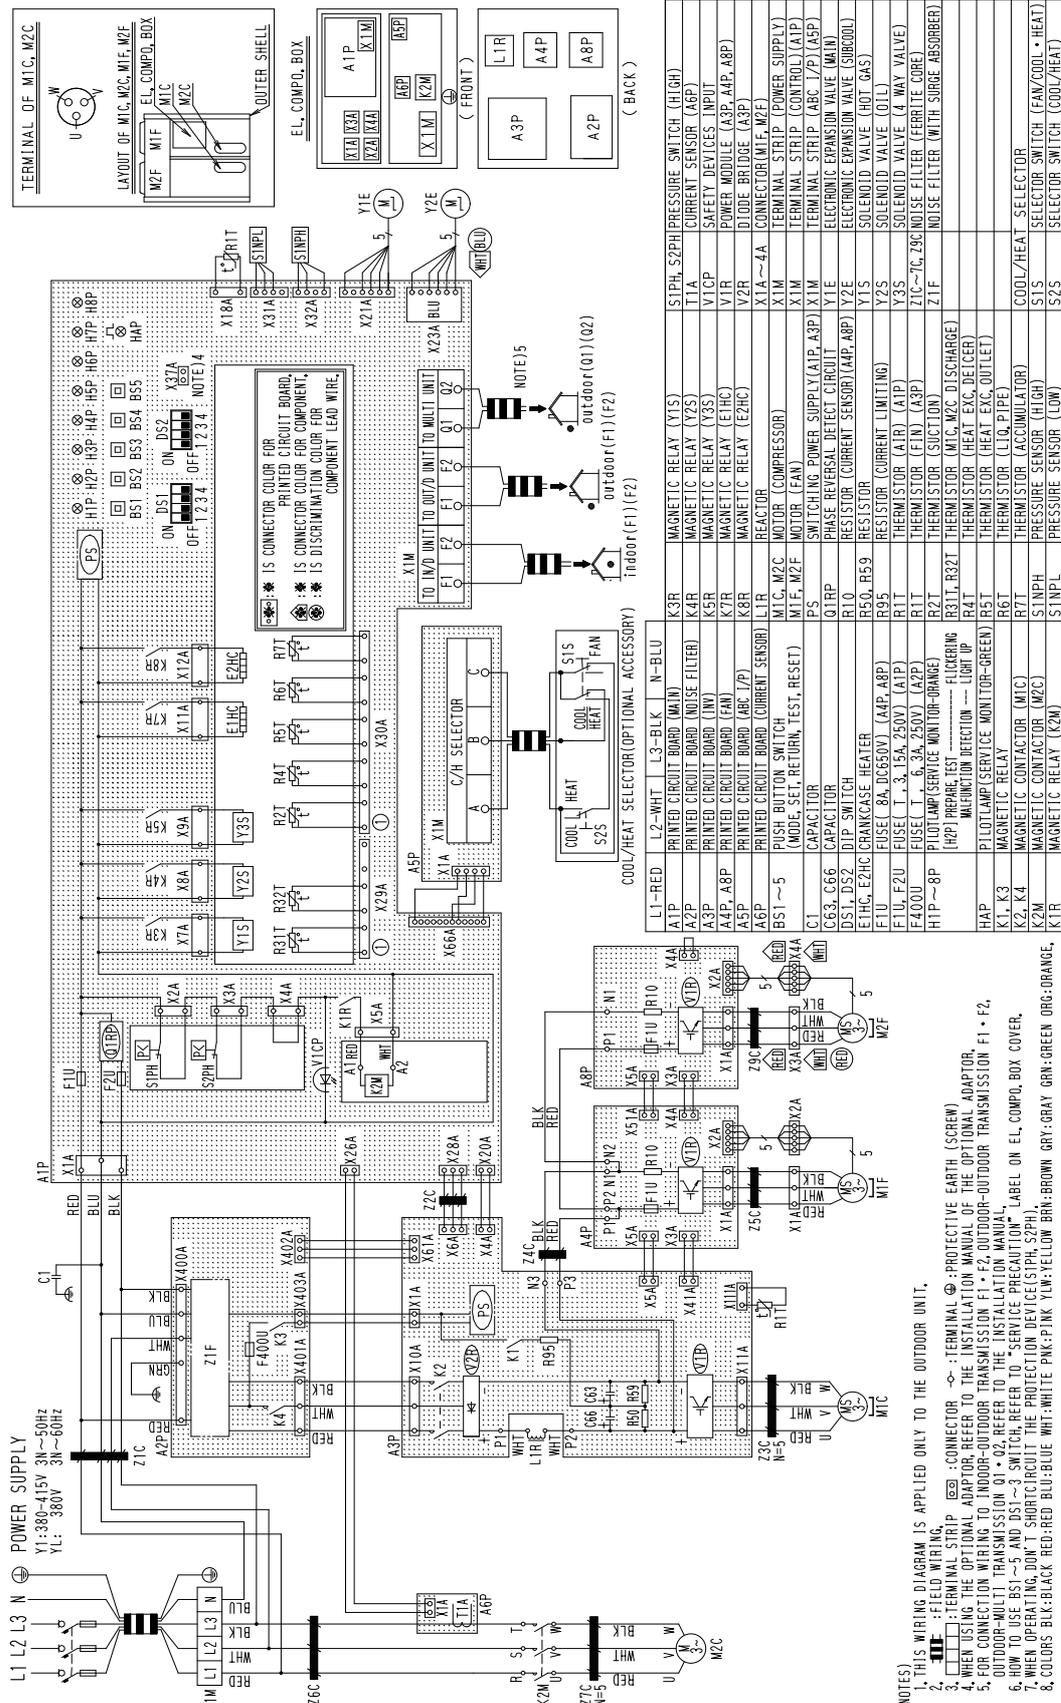


L1-RED	L2-WHT	L3-BLK	N-BLU	K3R	MAGNETIC RELAY (Y1S)	SI3PH-S2PH PRESSURE SWITCH (HIGH)	
A1P	PRINTED CIRCUIT BOARD (MAIN)	K4R	PRINTED CIRCUIT BOARD (NOISE FILTER)	K5R	MAGNETIC RELAY (Y2S)	T1A	CURRENT SENSOR (A6P)
A2P	PRINTED CIRCUIT BOARD (LV)	K6R	PRINTED CIRCUIT BOARD (FAN)	K7R	MAGNETIC RELAY (E1HC)	V1CP	SAFETY DEVICES INPUT
A3P	PRINTED CIRCUIT BOARD (FAN)	K8R	PRINTED CIRCUIT BOARD (ARC I/P)	L1R	MAGNETIC RELAY (E2HC)	V1R	POWER MODULE (A3P, A4P, A8P)
A4P	PRINTED CIRCUIT BOARD (CURRENT SENSOR)	LIR	REACTOR	MTC, M2C	MOTOR (COMPRESSOR)	X1A-4A	CONNECTOR (M1F, M2F)
A6P	PUSH BUTTON SWITCH (MODE, SET, RETURN, TEST, RESET)	PS	SWITCHING POWER SUPPLY (A1P, A3P)	X1M	TERMINAL STRIP (POWER SUPPLY)	X1M	TERMINAL STRIP (CONTROL) (A1P)
B51-5	CAPACITOR	R10	RESISTOR	M1F, M2F	MOTOR (FAN)	X1M	TERMINAL STRIP (ABC I/P) (A5P)
C1	PRINTED CIRCUIT BOARD (E2HC)	R10	RESISTOR	R10	RESISTOR (CURRENT SENSOR)	Y2E	ELECTRONIC EXPANSION VALVE (SUBCOOL)
D51, D52	DIP SWITCH	R95	FUSE (8A, DC650V) (A4P, A8P)	R95	FUSE (3A, 250V) (A1P)	Y2S	SOLENOID VALVE (OIL)
E1HC, E2HC	GRANUCASE HEATER	R11	FUSE (T, 3A, 250V) (A2P)	R11	FUSE (T, 3A, 250V) (A2P)	Y3S	SOLENOID VALVE (4 WAY VALVE)
F1U, F2U	FUSE (T, 3A, 250V) (A1P)	R12	PILOT LAMP (SERVICE MONITOR-ORANGE)	R12	PILOT LAMP (SERVICE MONITOR-ORANGE)	Z1C	7.9K NOISE FILTER (FERRITE CORE)
F400U	FUSE (T, 3A, 250V) (A2P)	R21	PILOT LAMP (SERVICE MONITOR-ORANGE)	R21	PILOT LAMP (SERVICE MONITOR-ORANGE)	Z1F	NOISE FILTER (WITH SURGE ABSORBER)
H1P-8P	PILOT LAMP (SERVICE MONITOR-ORANGE)	R31, R32T	PILOT LAMP (SERVICE MONITOR-ORANGE)	R31, R32T	PILOT LAMP (SERVICE MONITOR-ORANGE)		
HAP	PILOT LAMP (SERVICE MONITOR-ORANGE)	R41	PILOT LAMP (SERVICE MONITOR-ORANGE)	R41	PILOT LAMP (SERVICE MONITOR-ORANGE)		
K1, K3	MAGNETIC RELAY	R61	PILOT LAMP (SERVICE MONITOR-ORANGE)	R61	PILOT LAMP (SERVICE MONITOR-ORANGE)		
K2, K4	MAGNETIC RELAY	R71	PILOT LAMP (SERVICE MONITOR-ORANGE)	R71	PILOT LAMP (SERVICE MONITOR-ORANGE)		
K2M	MAGNETIC CONTACTOR (M2C)	S1NPH	MAGNETIC RELAY (HIGH)	S1NPH	MAGNETIC RELAY (HIGH)		
K1R	MAGNETIC RELAY (LOW)	S2S	PRESSURE SENSOR (LOW)	S2S	PRESSURE SENSOR (LOW)		

- (NOTES)
- THIS WIRING DIAGRAM IS APPLIED ONLY TO THE OUTDOOR UNIT.
  - FIELD WIRING.
  - TERMINAL STRIP CONNECTOR TO THE INSTALLATION MANUAL OF THE OPTIONAL ADAPTOR.
  - FOR CONNECTION WIRING TO INDOOR-OUTDOOR TRANSMISSION F1 + F2, OUTDOOR-OUTDOOR TRANSMISSION F1 + F2, OUTDOOR-OUTDOOR TRANSMISSION F1 + F2, REFER TO THE INSTALLATION MANUAL.
  - USE BS1 TO BS10 SWITCH, REFER TO "SERVICE PRECAUTION" LABEL ON EL. COMP. BOX COVER.
  - WHEN OPERATING UP, SHORTCIRCUIT THE PROJECTION DEVI (STEP, 3P).
  - COLORS: BLK:BLACK; RED:RED; BLU:BLUE; WHT:WHITE; Pnk:PINK; YLW:YELLOW; BRN: BROWN; GRN:GREEN; ORG:ORANGE.

3D051890G

RXYQ14P / 16P / 18PY1

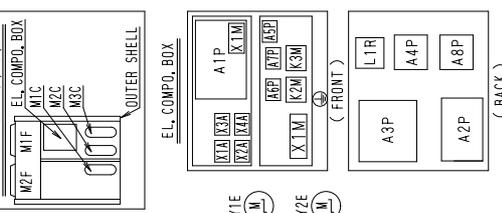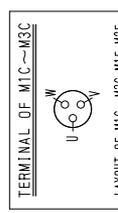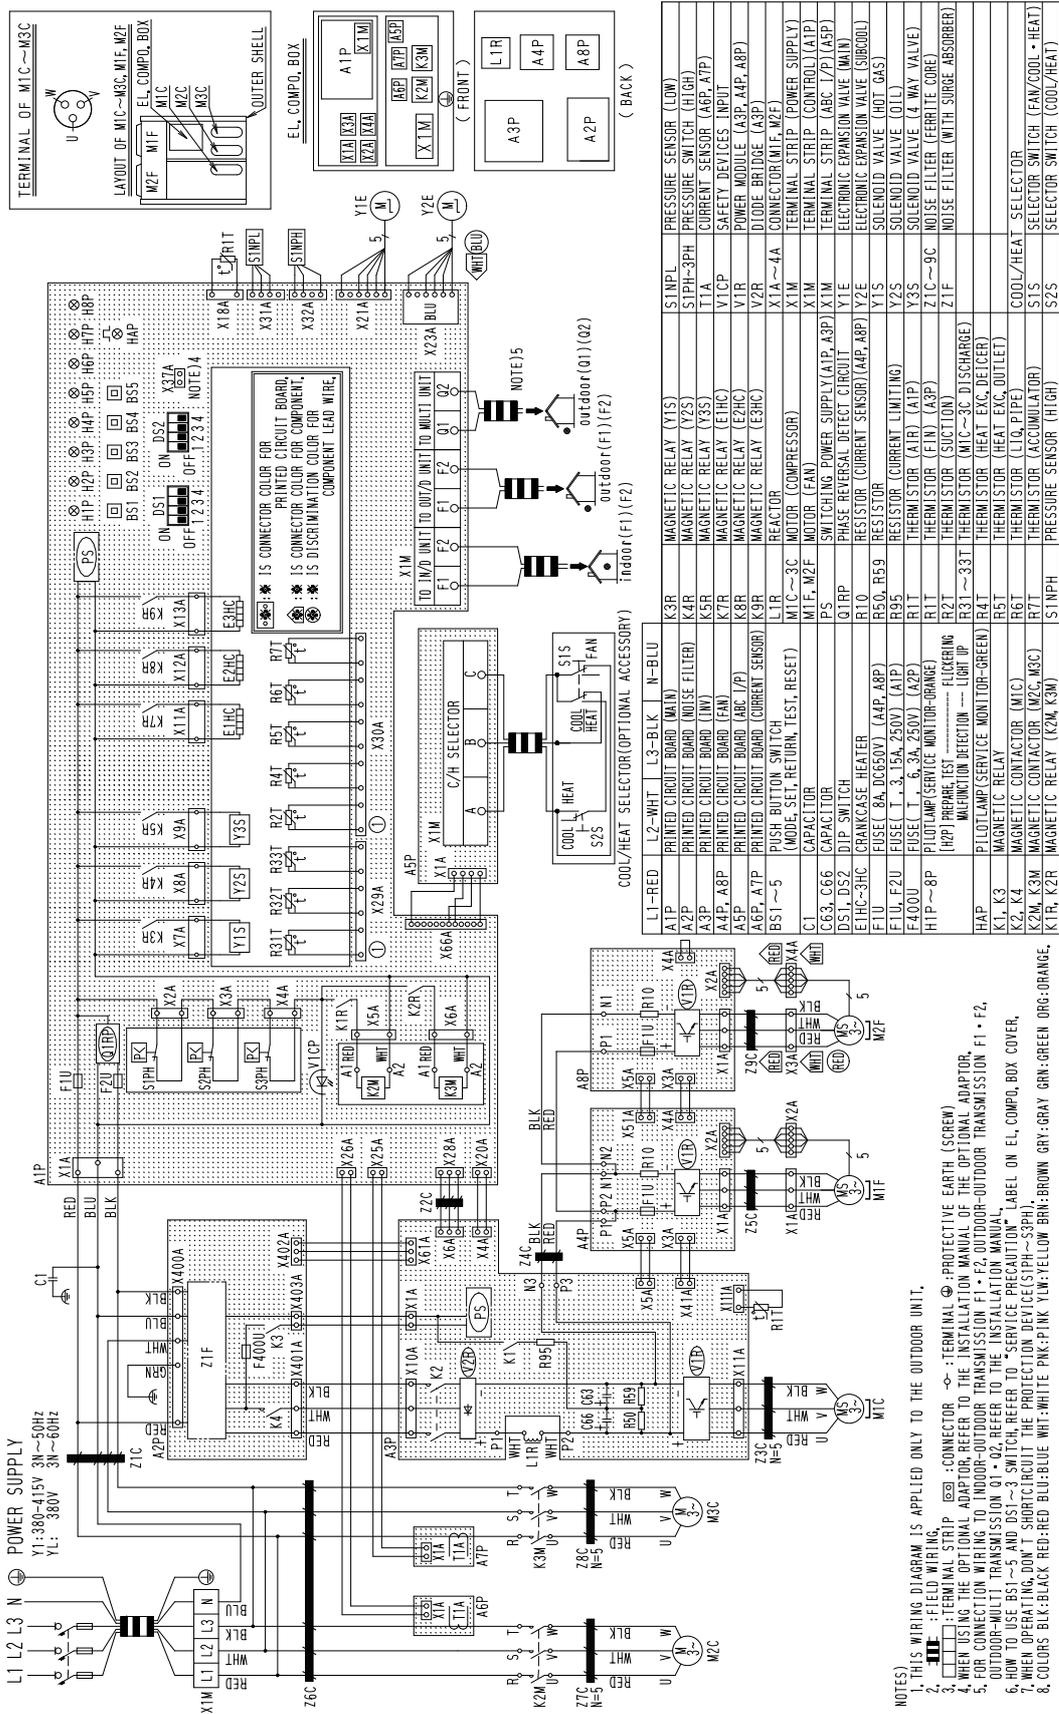

L1-RED	L2-WHT	L3-BLK	N-BLU	STNPH	PRESSURE SENSOR (LOW)
A1P	PRINTED CIRCUIT BOARD (MAIN)	K3R	MAGNETIC RELAY (Y1S)	STNPH-3PH	PRESSURE SWITCH (HIGH)
A2P	PRINTED CIRCUIT BOARD (NOISE FILTER)	K4R	MAGNETIC RELAY (Y3S)	T1A	CURRENT SENSOR (A6P, A7P)
A3P	PRINTED CIRCUIT BOARD (FM)	K5R	MAGNETIC RELAY (E1HC)	V1CP	SAFETY DEVICES INPUT
A4P, A8P	PRINTED CIRCUIT BOARD (FAN)	K7R	MAGNETIC RELAY (E2HC)	V1R	POWER MODULE (A3P, A4P, A8P)
A5P	PRINTED CIRCUIT BOARD (ARC I/P)	K8R	MAGNETIC RELAY (E3HC)	V2R	DIODE BRIDGE (A3P)
A6P, A7P	PRINTED CIRCUIT BOARD (CURRENT SENSOR)	K9R	MAGNETIC RELAY (E3NC)	X1A~4A	CONNECTOR (MIF, MZF)
B5T~5	PUSH BUTTON SWITCH (MODE, SET, RETURN, TEST, RESET)	L1R	REACTOR	X1M	TERMINAL STRIP (POWER SUPPLY)
C1	CAPACITOR	M1F, M2F	MOTOR (COMPRESSOR)	X1M	TERMINAL STRIP (CONTROL)
C63, C66	RESISTOR	PS	SWITCHING POWER SUPPLY (A1P, A3P)	X1M	TERMINAL STRIP (ABC, I/P) (ASP)
E1HC-3HC	CRANKCASE HEATER	Q1RP	PHASE REVERSAL DETECT CIRCUIT	Y1E	ELECTRONIC EXPANSION VALVE (MAIN)
F1U, F2U	FUSE ( 8A, DC650V ) (A4P, A8P)	R10	RESISTOR (CURRENT SENSOR)	Y2E	ELECTRONIC EXPANSION VALVE (SUBCOOL)
F400U	FUSE ( 3A, 250V ) (A1P)	R50, R59	RESISTOR	Y1S	SOLENOID VALVE (HOT GAS)
H1P~8P	FUSE ( 6.3A, 250V ) (A2P)	R95	RESISTOR (CURRENT LIMITING)	Y2S	SOLENOID VALVE (OIL)
HAP	PILOT LAMP (SERVICE MONITOR-GREEN)	RIT	THERMISTOR (AIR) (A1P)	Y3S	SOLENOID VALVE (4 WAY VALVE)
K1, K3	MAGNETIC CONTACTOR (MTC)	R1T	THERMISTOR (FIN) (A3P)	Z1C~9C	NOISE FILTER (FERRITE CORE)
K2M, K3M	MAGNETIC CONTACTOR (M2C, M3C)	R2T	THERMISTOR (SUCTION)	Z1F	NOISE FILTER (WITH SURGE ABSORBER)
K1R, K2R	MAGNETIC RELAY (K2M, K3M)	R31~33T	THERMISTOR (MIC~3C DISCHARGE)		
		R4T	THERMISTOR (HEAT EXC. DISCHARGE)		
		R5T	THERMISTOR (HEAT EXC. OUTLET)		
		R6T	THERMISTOR (LIQ. PIPE)		
		R7T	THERMISTOR (ACCUMULATOR)		
		S1S	SELECTOR SWITCH (FAN/COOL+HEAT)		
		S2S	SELECTOR SWITCH (COOL+HEAT)		


- NOTES)
- THIS WIRING DIAGRAM IS APPLIED ONLY TO THE OUTDOOR UNIT.
  - FIELD WIRING:
    - : TERMINAL
    - ⊕: FIELD WIRING
    - ⊗: FIELD WIRING
  - FIELD WIRING:
    - ⊕: FIELD WIRING
    - ⊗: FIELD WIRING
  - WHEN USING THE OPTIONAL ADAPTOR REFER TO THE INSTALLATION MANUAL OF THE OPTIONAL ADAPTOR.
  - FOR CONNECTION WIRING TO INDOOR-OUTDOOR TRANSMISSION F1-F2 OUTDOOR-OUTDOOR TRANSMISSION F1-F2, OUTDOOR-MULTI TRANSMISSION 01-02 REFER TO THE INSTALLATION MANUAL.
  - HOW TO USE B5T~5 AND DS1~3 SWITCH REFER TO "SERVICE PRECAUTION" LABEL ON EL. COMP. BOX COVER.
  - WHEN OPERATING DON'T SHORT-CIRCUIT THE PROTECTION DEVICE (SPH~SPH).
  - COLORS: BLK:BLACK, RED:RED, BLU:BLUE, WHT:WHITE, PK:PK, YL:YELLOW, BRN:ROWN, GR:GRAY, GRN:GREEN, ORG:ORANGE.

3D060456H

## 2.2 Field Wiring

RXYQ5P / 8P / 10P / 12P / 14P / 16P / 18PY1

- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.  
 2) Use copper conductors only.  
 3) As for details, see wiring diagram.  
 4) Install circuit breaker for safety.  
 5) All field wiring and components must be provided by licensed electrician.
- 6) Unit shall be grounded in compliance with the applicable local and national codes.  
 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.  
 8) Be sure to install the switch and the fuse to the power line of each equipment.  
 9) Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.  
 10) If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.  
 Running the product in reversed phase may break the compressor and other parts.

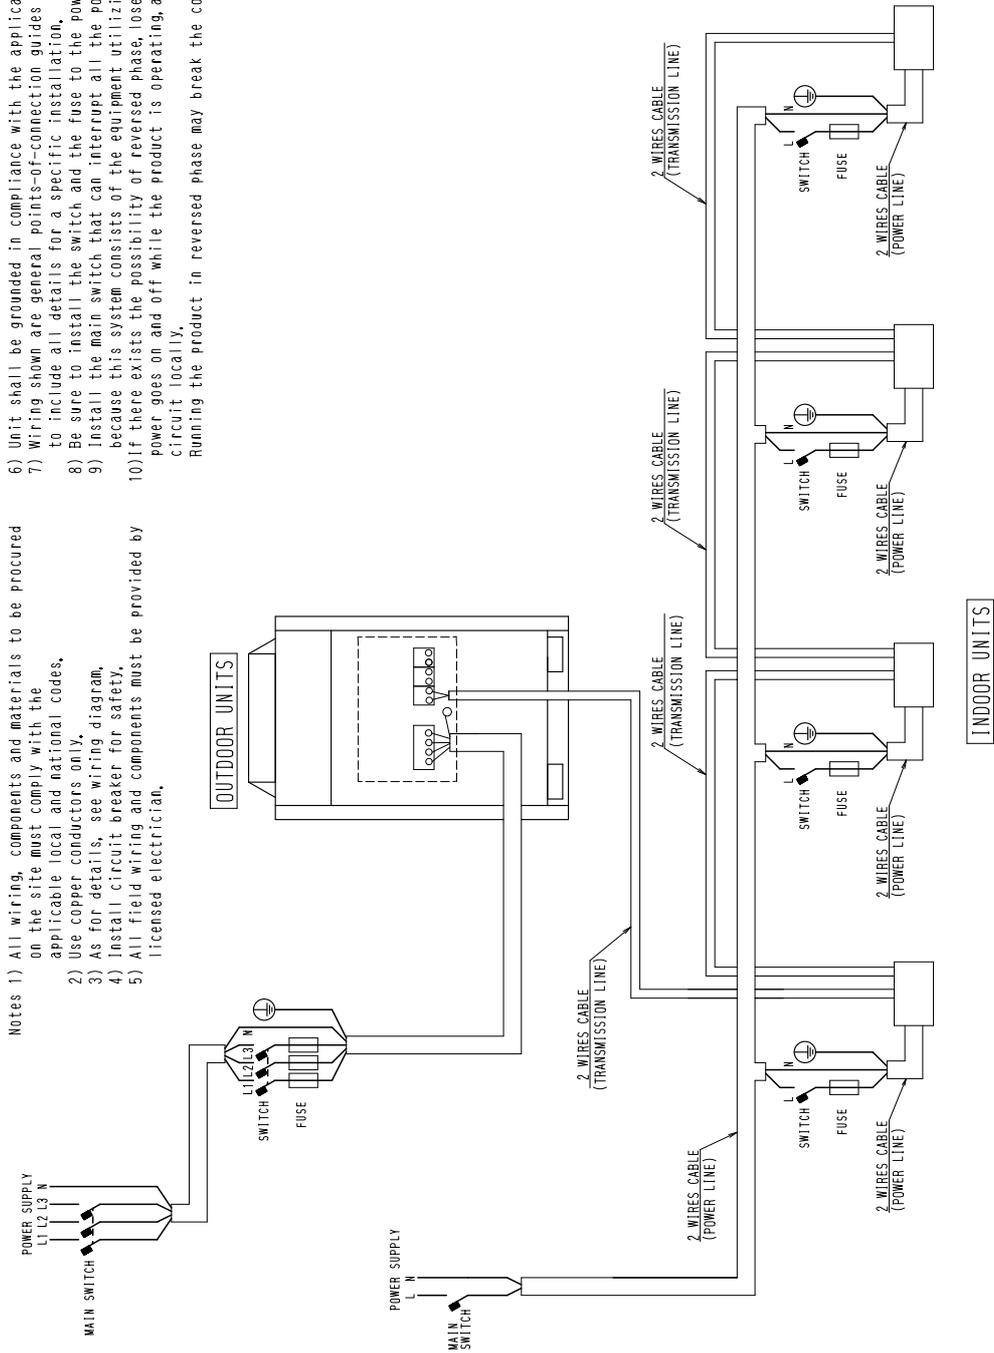

3D051462D


RXYQ20P / 22P / 24P / 26P / 28P / 30P / 32PY1

- 6) Unit shall be grounded in compliance with the applicable local and national codes.
  - 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
  - 8) Be sure to install the switch and the fuse to the power line of each equipment.
  - 9) Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
  - 10) The capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
  - 11) If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
- Running the product in reversed phase may break the compressor and other parts.

- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- 2) Use copper conductors only.
  - 3) As for details, see wiring diagram.
  - 4) Install circuit breaker for safety.
  - 5) All field wiring and components must be provided by licensed electrician.

When the power source is connected in series between the units,

When the power source is supplied to each outdoor unit individually,

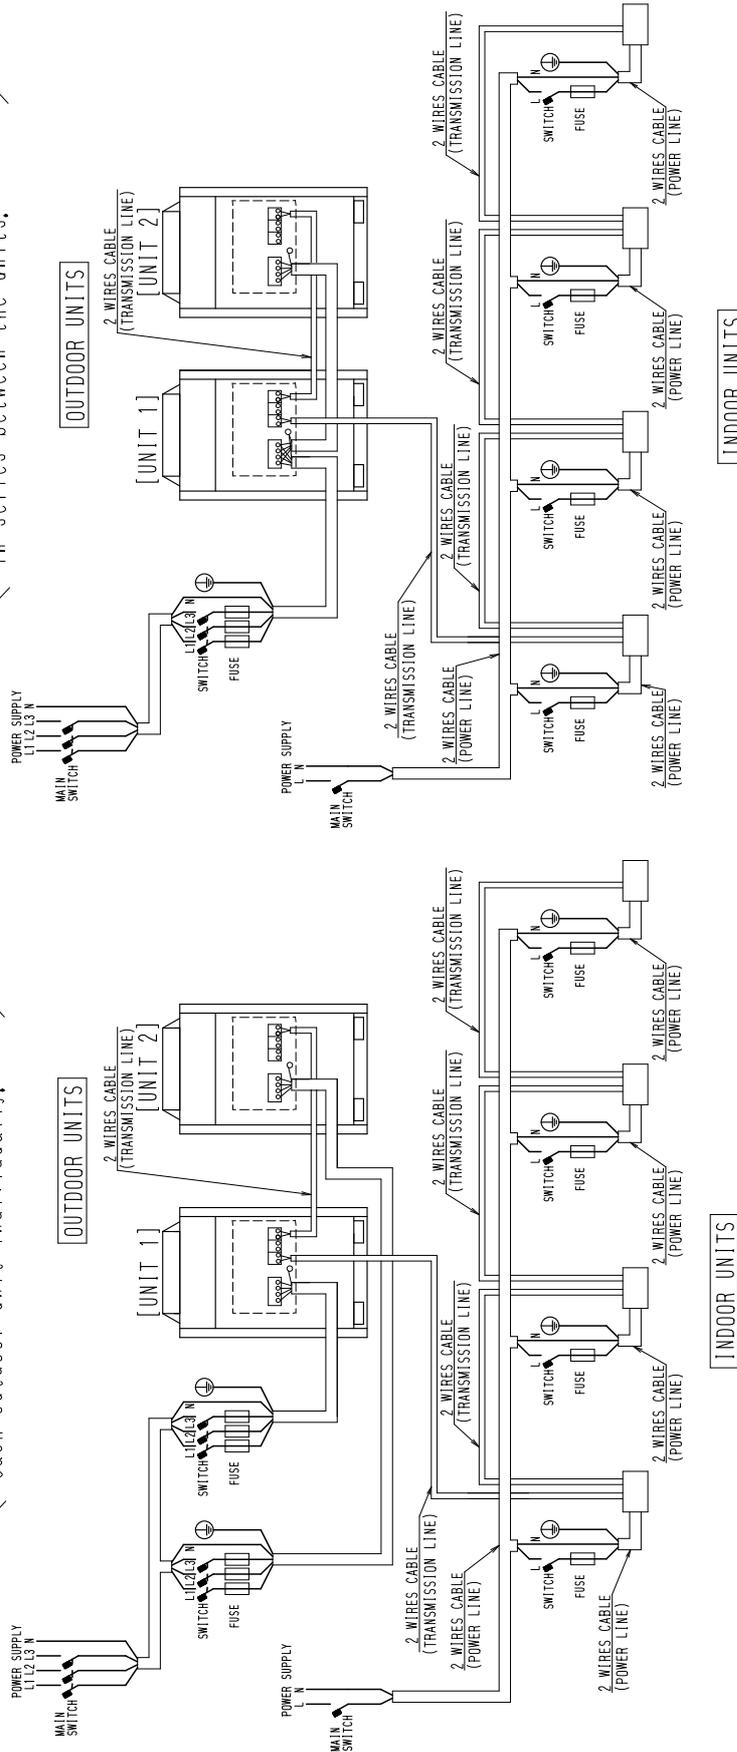


3D062261B

RXYQ34P / 36P / 38P / 40P / 42P / 44P / 46P / 48P / 50P / 52P / 54PY1


- Notes 1) All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- 2) Use copper conductors only.
  - 3) As for details, see wiring diagram.
  - 4) Install circuit breaker for safety.
  - 5) All field wiring and components must be provided by licensed electrician.

- 6) Unit shall be grounded in compliance with the applicable local and national codes.
  - 7) Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
  - 8) Be sure to install the switch and the fuse to the power line of each equipment.
  - 9) Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
  - 10) The capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
  - 11) If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
- Running the product in reversed phase may break the compressor and other parts.

When the power source is supplied to each outdoor unit individually.

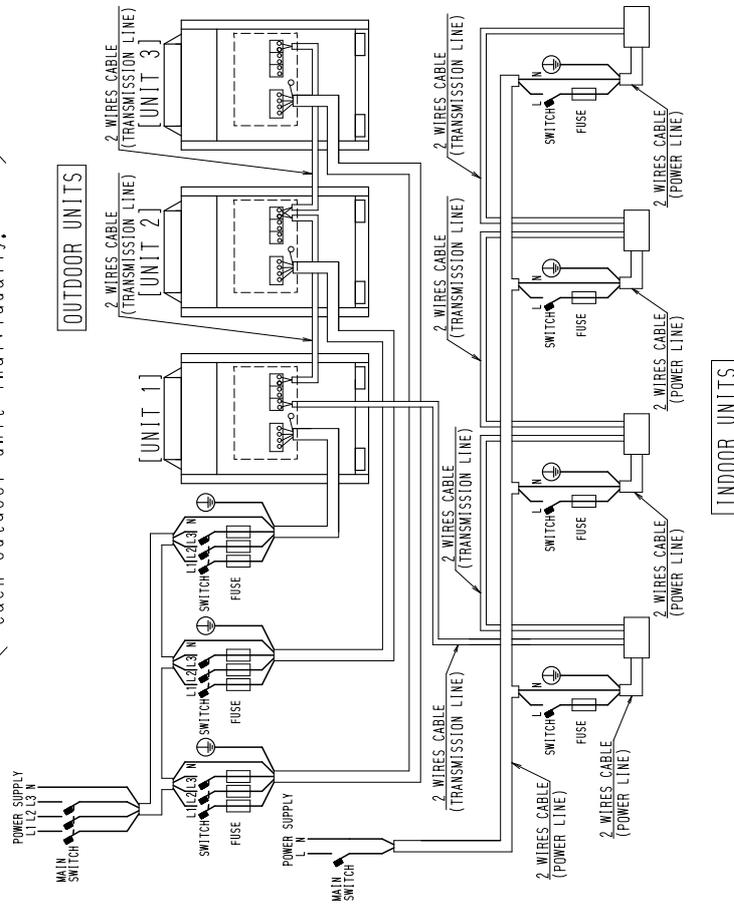


When the power source is connected in series between the units.

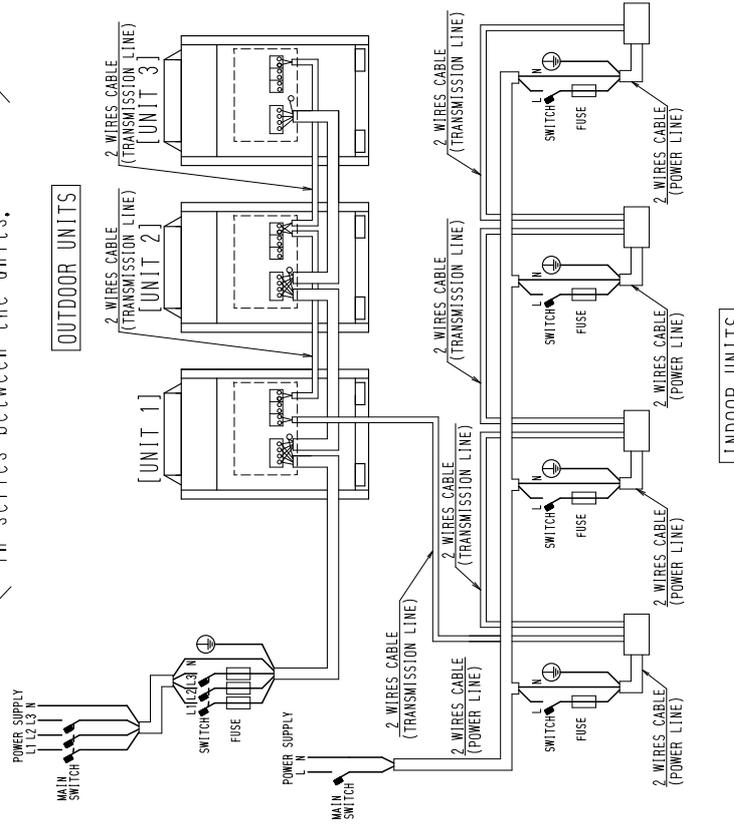

C: 3D052262B



FXCQ40M / 50M / 80M/ 125MVE

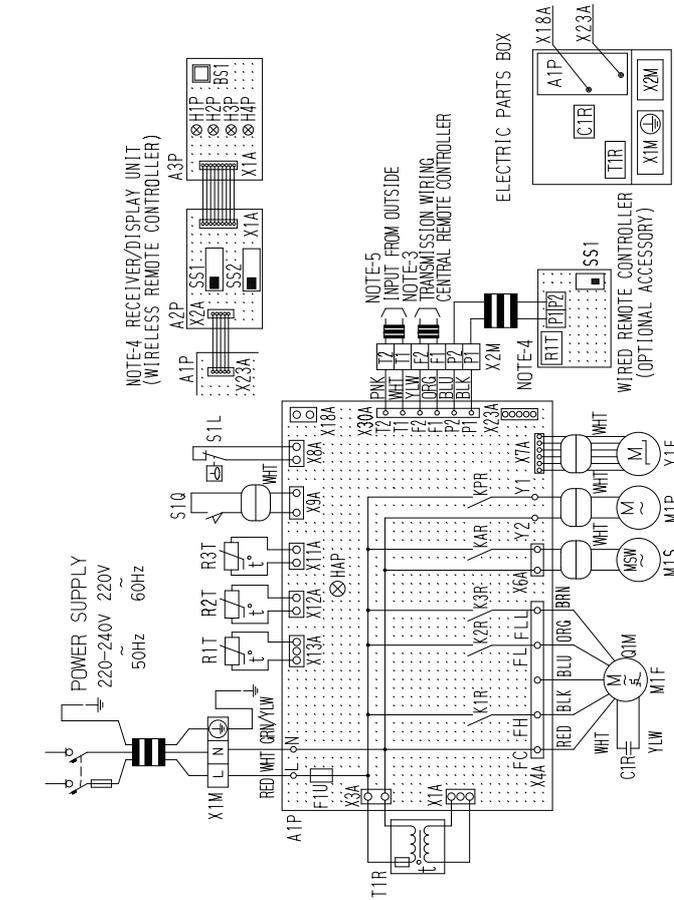


A1P	INDOOR UNIT	S1L	FLOAT SWITCH	H1P	LIGHT EMITTING DIODE (ON-RED)
C1P	PRINTED CIRCUIT BOARD	S1Q	LIMIT SWITCH (SWING FLAP)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
F1U	FUSE (①.5A, 250V)	T1R	TRANSFORMER(220-240V/22V)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
H4P	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	X1M	TERMINAL BLOCK (POWER)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
K1R-K3R	MAGNETIC RELAY (M1F)	X2M	TERMINAL BLOCK (CONTROL)	S11	SELECTOR SWITCH (MAIN/SUB)
K4R	MAGNETIC RELAY (M1S)	Y1E	ELECTRONIC EXPANSION VALVE	S22	SELECTOR SWITCH (WIRELESS ADDRESS SET)
K5R	MAGNETIC RELAY (M1P)	W1R	WIRELESS REMOTE CONTROLLER	CONNECTOR FOR OPTIONAL PARTS	
M1P	MOTOR (INDOOR FAN)	R1T	THERMISTOR (AIR)	X18A	CONNECTOR
M1S	MOTOR (SWING FLAP)	S11	SELECTOR SWITCH (MAIN/SUB)	X2P	PRINTED CIRCUIT BOARD (WIRELESS REMOTE CONTROLLER)
Q1M	THERMO SWITCH (M1F EMBEDDED)	S23	SELECTOR SWITCH (MAIN/SUB)	X23A	CONNECTOR (WIRELESS REMOTE CONTROLLER)
R1T	THERMISTOR (AIR)	RECEIVER/DISPLAY UNIT (WIRELESS REMOTE CONTROLLER)			
R2T-R3T	THERMISTOR (COLL)	A2P	PRINTED CIRCUIT BOARD	CONNECTOR FOR OPTIONAL PARTS	

- NOTES) 1. : TERMINAL BLOCK, : TERMINAL
2. : FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
4. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER.
6. SYMBOLS SHOWS AS FOLLOWS,  
 ( PINK: PINK WHT: WHITE YLW: YELLOW ORG: ORANGE  
 BLU: BLUE BLK: BLACK RED: RED BRN: BROWN GRN: GREEN )
7. USE COPPER CONDUCTORS ONLY.

3D099557A

FXFQ25M / 32M / 40M / 50M / 63M / 80M / 100M / 125MVE

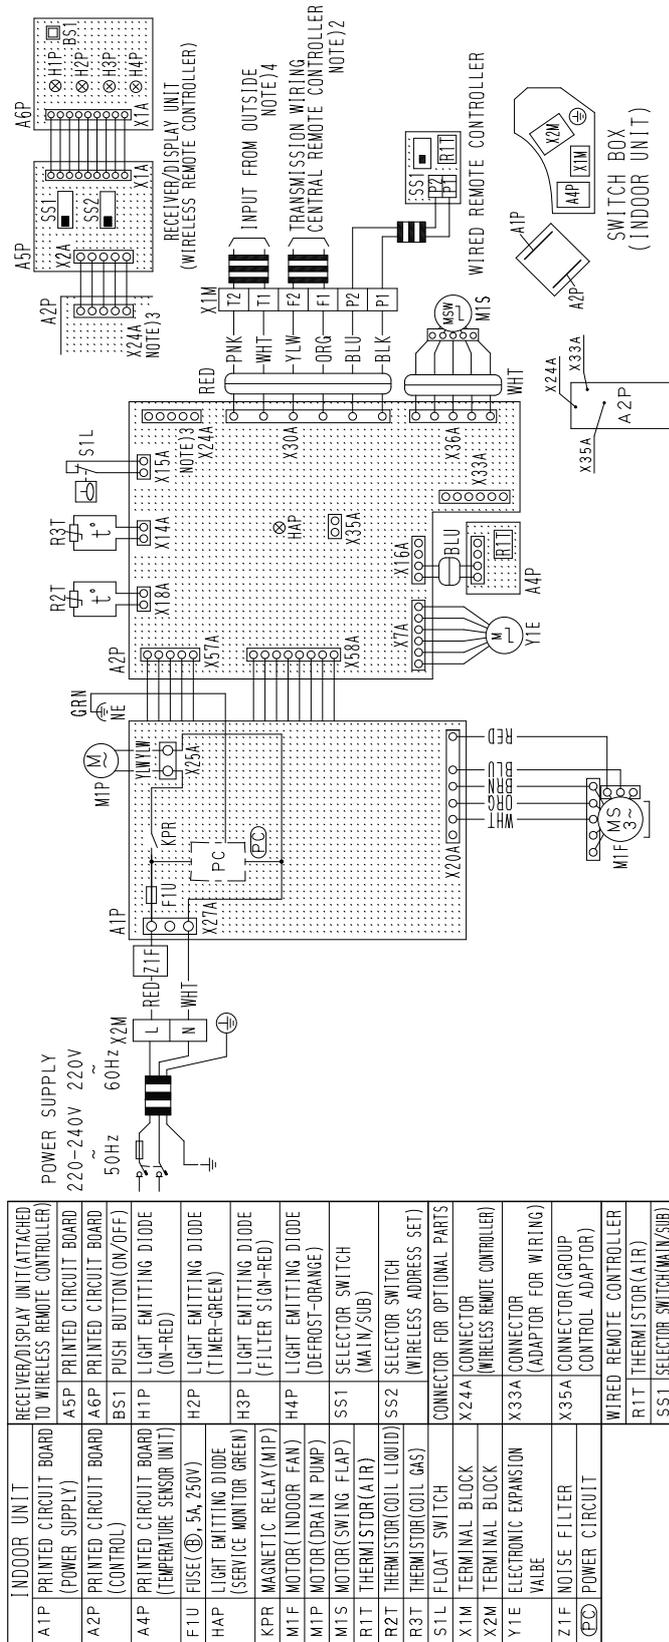


INDOOR UNIT	RECEIVER/DISPLAY UNIT (ATTACHED TO WIRELESS REMOTE CONTROLLER)
A1P PRINTED CIRCUIT BOARD (POWER SUPPLY)	A5P PRINTED CIRCUIT BOARD
A2P PRINTED CIRCUIT BOARD (CONTROL)	A6P PRINTED CIRCUIT BOARD
A4P PRINTED CIRCUIT BOARD (TEMPERATURE SENSOR UNIT)	BS1 PUSH BUTTON (ON/OFF)
F1U FUSE (5A, 250V)	H1P LIGHT EMITTING DIODE (ON-RED)
HAP LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	H2P LIGHT EMITTING DIODE (TIMER-GREEN)
KPR MAGNETIC RELAY (M1P)	H3P LIGHT EMITTING DIODE (FILTER SIGN-RED)
M1P MOTOR (INDOOR FAN)	H4P LIGHT EMITTING DIODE (DEFROST-ORANGE)
M1P MOTOR (DRAIN PUMP)	SS1 SELECTOR SWITCH (MAIN/SUB)
M1S MOTOR (SWING FLAP)	SS2 SELECTOR SWITCH (WIRELESS ADDRESS SET)
R1T THERMISTOR (AIR)	CONNECTOR FOR OPTIONAL PARTS
R2T THERMISTOR (COIL LIQUID)	X24A CONNECTOR (WIRELESS REMOTE CONTROLLER)
R3T THERMISTOR (COIL GAS)	X33A CONNECTOR (ADAPTOR FOR WIRING)
S1L FLOAT SWITCH	X35A CONNECTOR (GROUP CONTROL ADAPTOR)
X1M TERMINAL BLOCK	WIRED REMOTE CONTROLLER
X2M TERMINAL BLOCK (VALVE)	R1T THERMISTOR (AIR)
Y1E ELECTRONIC EXPANSION VALVE	SS1 SELECTOR SWITCH (MAIN/SUB)
Z1F NOISE FILTER	
POWER CIRCUIT	

- NOTES
1. : TERMINAL BLOCK , D- : CONNECTOR
  2. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
  3. X24A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
  4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
  5. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM, CONFIRM ENGINEERING DATA AND CATALOGS, ETC, BEFORE CONNECTING.
  6. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) OF WIRED REMOTE CONTROLLER AND WIRELESS REMOTE CONTROLLER BY INSTALLATION MANUAL AND ENGINEERING DATA, ETC.
  7. SYMBOLS SHOWS AS FOLLOWS:  
 RED:RED BLK:BLACK WHT:WHITE YLW:YELLOW GRN:GREEN  
 ORG:ORANGE BRN:BROWN PNK:PINK GRY:GRAY BLU:BLUE

3D039600A


FXZQ20M / 25M / 32M / 40M / 50M7V1B

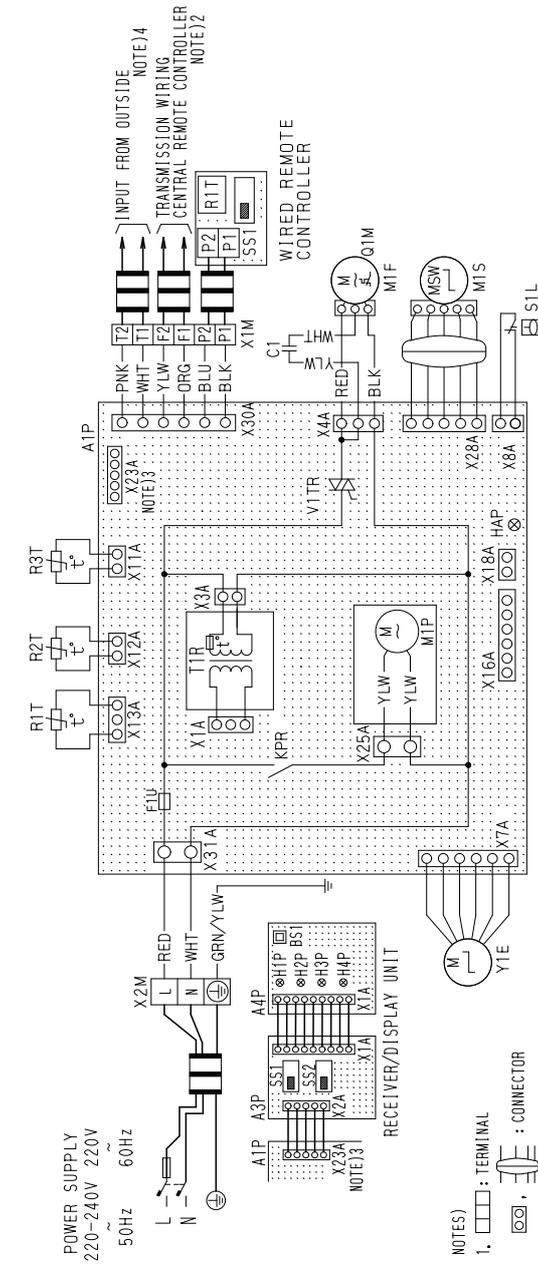

- NOTES
1. □ : TERMINAL  
 ○ : CONNECTOR  
 ≡ : FIELD WIRING
  2. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
  3. X23A IS CONNECTED WHEN THE WIRELESS REMOTE CONTROLLER KIT IS BEING USED.
  4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER.
  5. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED TO THE UNIT.
  6. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM, CONFIRM ENGINEERING MATERIALS AND CATALOGS, ETC. BEFORE CONNECTING.
  7. SYMBOLS SHOW AS FOLLOWS: RED:RED BLK:BLACK WHT:WHITE YLW:YELLOW PNK:PINK ORG:ORANGE GRN:GREEN BLU:BLUE


3D088359

A1P	PRINTED CIRCUIT BOARD	BS1	PUSH BUTTON(ON/OFF)
C1	CAPACITOR(MIF)	H1P	LIGHT EMITTING DIODE (ON-RED)
F1U	FUSE(5A, 250V)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
KPR	MAGNETIC RELAY(M1P)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
M1F	MOTOR(INDOOR FAN)	SS1	SELECTOR SWITCH (MAIN/SUB)
M1P	MOTOR(DRAIN PUMP)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
M1S	MOTOR(SWING FLAP)	X16A	CONNECTOR FOR OPTIONAL PARTS (ADAPTOR FOR WIRING)
O1M	THERMAL PROTECTOR(MIF AMBER/RED)	X18A	CONNECTOR (WIRING ADAPTOR FOR ELECTORICAL APPENDICES)
R1T	THERMISTOR(AIR)		
R2T	THERMISTOR(COIL-LIQUID)		
R3T	THERMISTOR(COIL-GAS)		
S1L	FLOAT SWITCH		
T1R	TRANSFORMER(220-240V/22V)		
V1TR	TRIAC		
X1M	TERMINAL BLOCK		
X2M	TERMINAL BLOCK		
Y1F	ELECTRONIC EXPANSION VALVE		
	WIRED REMOTE CONTROLLER		
R1T	THERMISTOR(AIR)		
SS1	SELECTOR SWITCH(MAIN/SUB)		
	WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)		
A3P	PRINTED CIRCUIT BOARD		
A4P	PRINTED CIRCUIT BOARD		

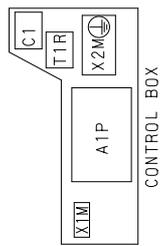

CONTROL BOX

FXKQ25MA / 32MA / 40MA / 63MAVE

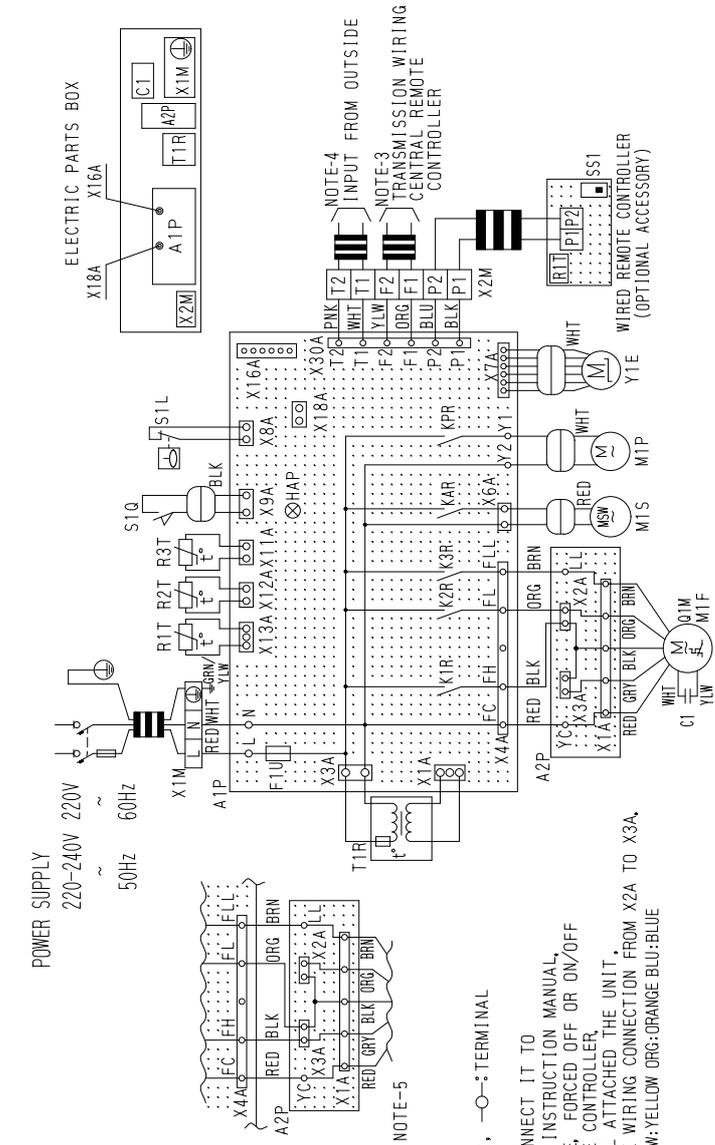

INDOOR UNIT	R1T	THERMISTOR(A.I.R)
A1P	R2T-R3T	THERMISTOR(COIL)
A2P	S1L	FLOAT SWITCH
C1	S1Q	LIMIT SWITCH(SWING FLAP)
F1U	T1R	TRANSFORMER(20-240V/22V)
HAP	X1M	TERMINAL BLOCK(POWER)
K1R-K3R	X2M	TERMINAL BLOCK(CONTROL)
M1F	Y1E	ELECTRONIC EXPANSION VALVE
M1P		WIRED REMOTE CONTROLLER
M1S		THERMISTOR(A.I.R)
Q1M		SELECTOR SWITCH(MAIN/SUB)
		CONNECTOR FOR OPTIONAL PARTS
		CONNECTOR(ADAPTOR FOR WIRING)
		CONNECTOR(WIRING ADAPTOR FOR ELECTRICAL APPENDICES)


- NOTES) 1. [Symbol]: TERMINAL BLOCK, [Symbol]: D-: CONNECTOR, -O-: TERMINAL
2. [Symbol]: FIELD WIRING
3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
5. IN CASE HIGH E.S.P. OPERATION, CHANGE OVER THE WIRING CONNECTION FROM X2A TO X3A.
6. SYMBOLS SHOW AS FOLLOWS, (PNK:PINK WHT:WHITE YLW:YELLOW ORG:ORANGE BLU:BLUE BLK:BLACK RED:RED BRN: BROWN GRY:GRAY)
7. USE COPPER CONDUCTORS ONLY.

3D039564C



**FXDQ20P / 25P / 32P**  
**FXDQ20N / 25N / 32N / 40N / 50N / 63NVET (without Drain Pump)**

A1P	PRINTED CIRCUIT BOARD
C1	CAPACITOR(M1F)
F1U	FUSE(F5A/250V)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)
M1F	MOTOR (INDOOR FAN)
Q1M	THERMAL PROTECTOR(M1F EMBEDDED)
R1T	THERMISTOR(AIR)
R2T	THERMISTOR(COIL-1)
R3T	THERMISTOR(COIL-2)
T1R	TRANSFORMER(220V/22V)
V1TR	PHASE CONTROL CIRCUIT
X1M	TERMINAL BLOCK
X2M	TERMINAL BLOCK
Y1E	ELECTRONIC EXPANSION VALVE
Z1C-Z2C	NOISE FILTER (FERRITE CORE)
WIRED REMOTE CONTROLLER	
R1T	THERMISTOR(AIR)
SS1	SELECTOR SWITCH(MAIN/SUB)
X16A	CONNECTOR FOR OPTIONAL PARTS
X18A	CONNECTOR(ADAPTOR FOR WIRING ELECTRICAL APPENDICES)


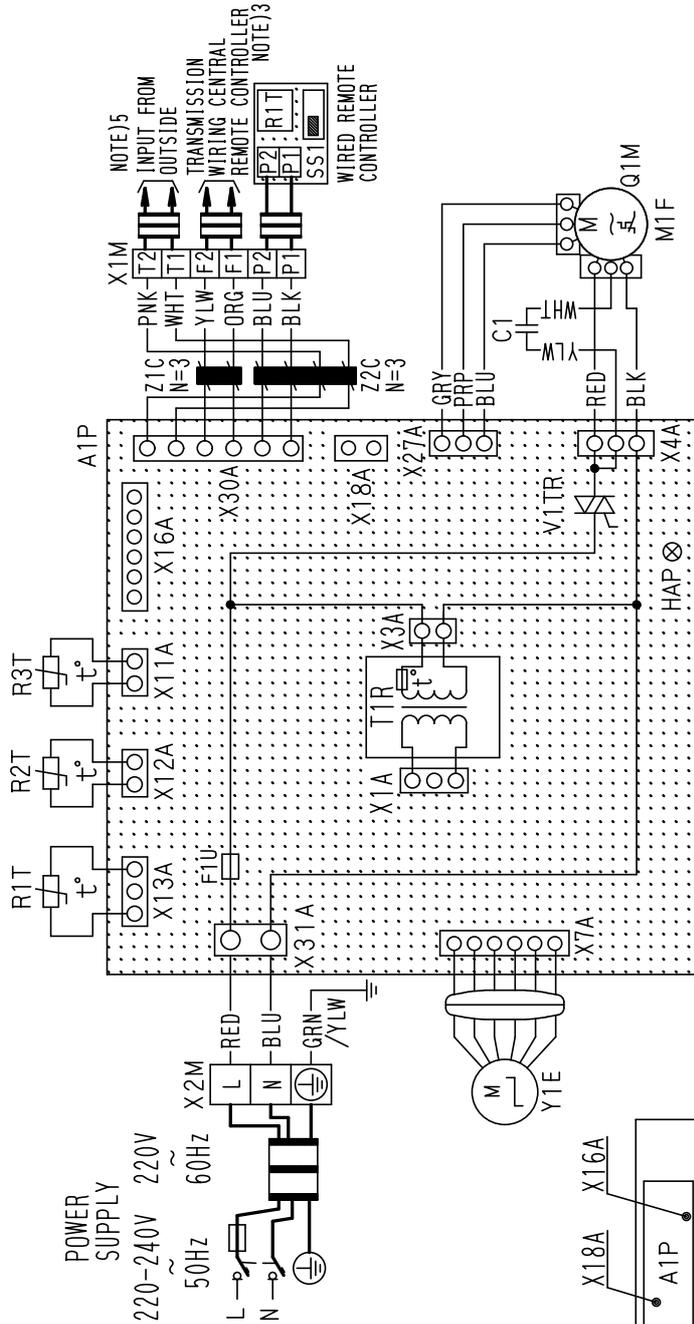


- NOTES)
1. □ □ □ □ : TERMINAL
  2. □ □ □ □ : CONNECTOR
  3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
  4. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM, CONFIRM ENGINEERING MATERIALS AND CATALOGS, ETC, BEFORE CONNECTING.
  5. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
  6. SYMBOLS SHOW AS FOLLOWS: RED:RED BLK:BLACK WHT:WHITE YLW:YELLOW PRP:PURPLE GRY:GRAY BLU:BLUE PNK:PINK ORG:ORANGE GRN:GREEN

3D049604A

FXSQ20M / 25M / 32M / 40M / 50M / 63M / 80M / 100M / 125MVE

3D039561A

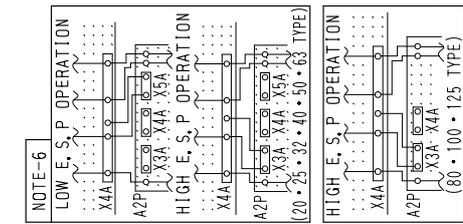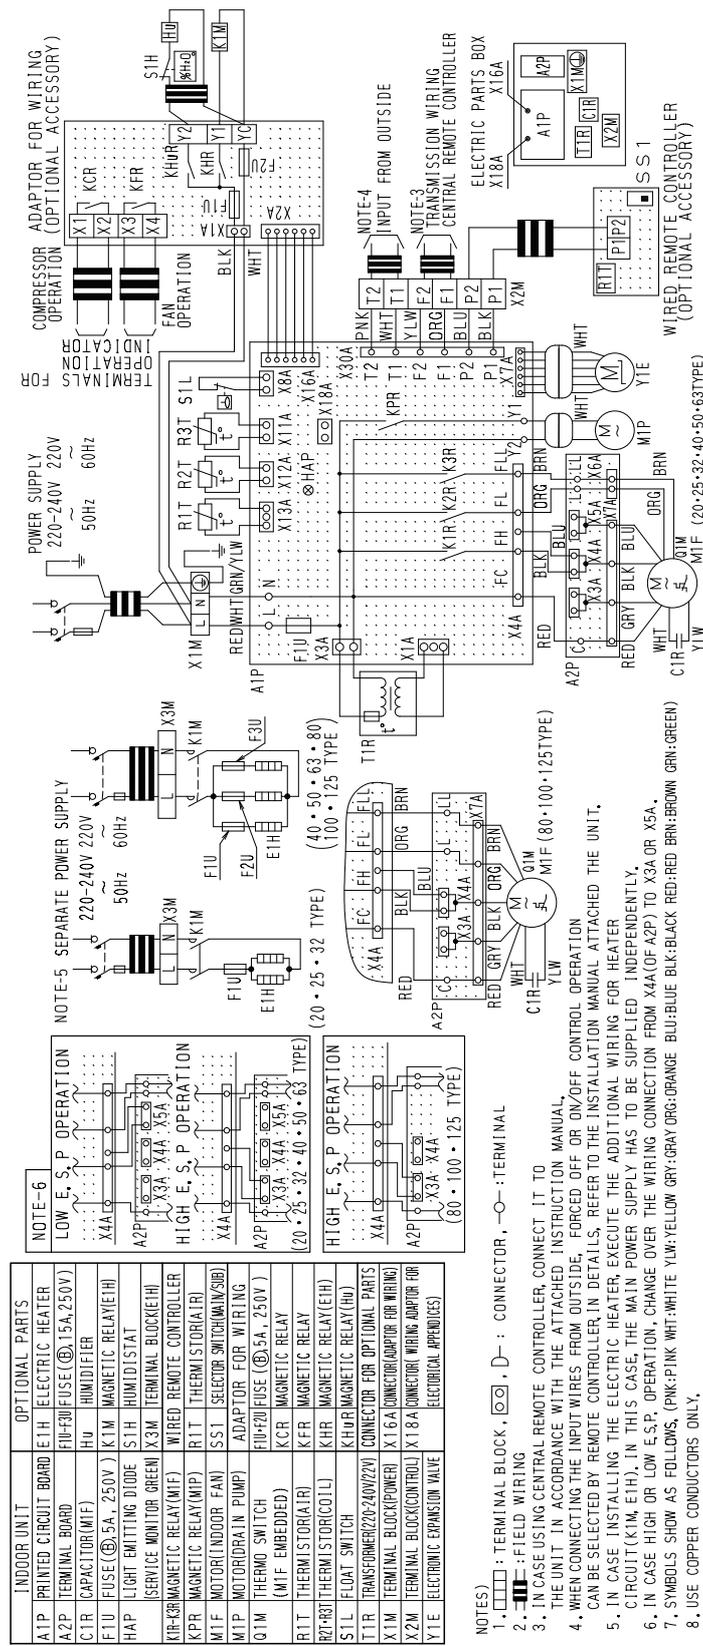


INDOOR UNIT	OPTIONAL PARTS
A2P PRINTED CIRCUIT BOARD	E1H ELECTRIC HEATER
F1U FUSE (1.5A, 250V)	Hu HUMIDIFIER
C1R CAPACITOR (M/F)	K1M MAGNETIC RELAY(E1H)
F2U FUSE (0.5A, 250V)	S1H HUMIDISTAT
HAP LIGHT-EMITTING DIODE	W1R WIRED REMOTE CONTROLLER
K1R-33R MAGNETIC RELAY(M/F)	R1T THERMISTOR(A1R)
M1F MAGNETIC RELAY(M/F)	S11 SELECTOR SWITCH(M/V2IB)
M1P MOTOR(DRAIN PUMP)	A1P ADAPTOR FOR WIRING
Q1M THERMO SWITCH	F1U+2U FUSE (0.5A, 250V)
S1L THERMO SWITCH (M/F EMBEDDED)	KCR MAGNETIC RELAY
R1T THERMISTOR(A1R)	KFR MAGNETIC RELAY
R2R-R3T THERMISTOR(COIL)	KHR MAGNETIC RELAY(E1H)
S1L FLOAT SWITCH	HuR MAGNETIC RELAY(Hu)
T1R TRANSFORMER(220-240V/22V)	CONNECTOR FOR OPTIONAL PARTS
X1M TERMINAL BLOCK(POWER)	X16A CONNECTOR(ADAPTOR FOR WIRING)
X2M TERMINAL BLOCK(CONTROL)	X18A CONNECTOR(ADAPTOR FOR WIRING)
X3M ELECTRONIC EXPANSION VALVE	ELECTRICAL APPENDICES

- NOTES
1. : TERMINAL BLOCK, : CONNECTOR, : FIELD WIRING
  2. : FIELD WIRING
  3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
  4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
  5. IN CASE INSTALLING THE ELECTRIC HEATER, EXECUTE THE ADDITIONAL WIRING FOR HEATER CIRCUIT (K1M, E1H). IN THIS CASE, THE MAIN POWER SUPPLY HAS TO BE SUPPLIED INDEPENDENTLY.
  6. IN CASE HIGH OR LOW E.S.P. OPERATION, CHANGE OVER THE WIRING CONNECTION FROM X4A(OF A2P) TO X3A OR X5A.
  7. SYMBOLS SHOW AS FOLLOWS. (PNK:PINK WHT:WHITE YLK:YELLOW GRY:GRAY ORG:ORANGE BLU:BLUE BLK:BLACK RED:RED BRN:BRN GRN:GREEN)
  8. USE COPPER CONDUCTORS ONLY.

FXMQ40MA / 50MA / 63MA / 80MA / 100MA / 125MAVE

3D039620B

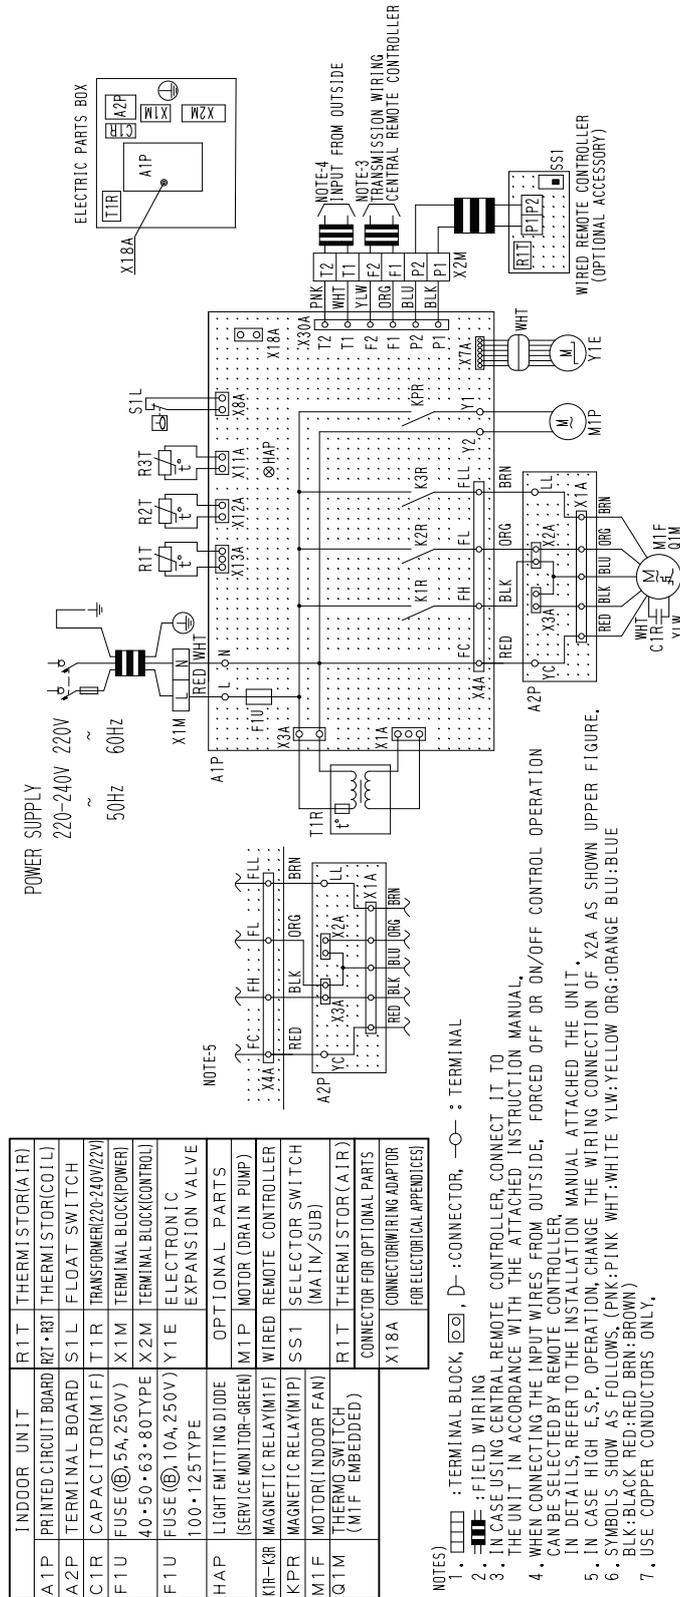


INDOOR UNIT	R1T	THERMISTOR(AIR)
A1P	PRINTED CIRCUIT BOARD	R2T·R3T THERMISTOR(COIL)
A2P	TERMINAL BOARD	S1L FLOAT SWITCH
C1R	CAPACITOR(M1F)	T1R TRANSFORMER(220-240V/22V)
F1U	FUSE(⑤, 5A, 250V)	X1M TERMINAL BLOCK(POWER)
F1U	FUSE(⑥, 10A, 250V)	X2M TERMINAL BLOCK(CONTROL)
HAP	100·125TYPE	Y1E ELECTRONIC EXPANSION VALVE
KIR-K3R	MAGNETIC RELAY(M1P)	M1P MOTOR (DRAIN PUMP)
KPR	MAGNETIC RELAY(M2P)	SS1 WIRED REMOTE CONTROLLER
M1F	MOTOR(INDOOR FAN)	R1T THERMISTOR(AIR)
Q1M	THERMO SWITCH (M1F EMBEDDED)	CONNECTOR FOR OPTIONAL PARTS
		X18A CONNECTOR WIRING ADAPTOR FOR ELECTRICAL APPENDICES

- NOTES
1. [Symbol] : TERMINAL BLOCK, [Symbol] : CONNECTOR, [Symbol] : TERMINAL
  2. [Symbol] : FIELD WIRING
  3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
  4. WHEN CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.
  5. IN CASE HIGH E.S.P. OPERATION, CHANGE THE WIRING CONNECTION OF X2A AS SHOWN UPPER FIGURE.
  6. SYMBOLS SHOW AS FOLLOWS. (PNK:PINK WHT:WHITE YLW:YELLOW ORG:ORANGE BLU:BLUE BLK:BLACK RED:RED BRN:BROWN)
  7. USE COPPER CONDUCTORS ONLY.


FXMQ200MA / 250MAVE

3D039621B

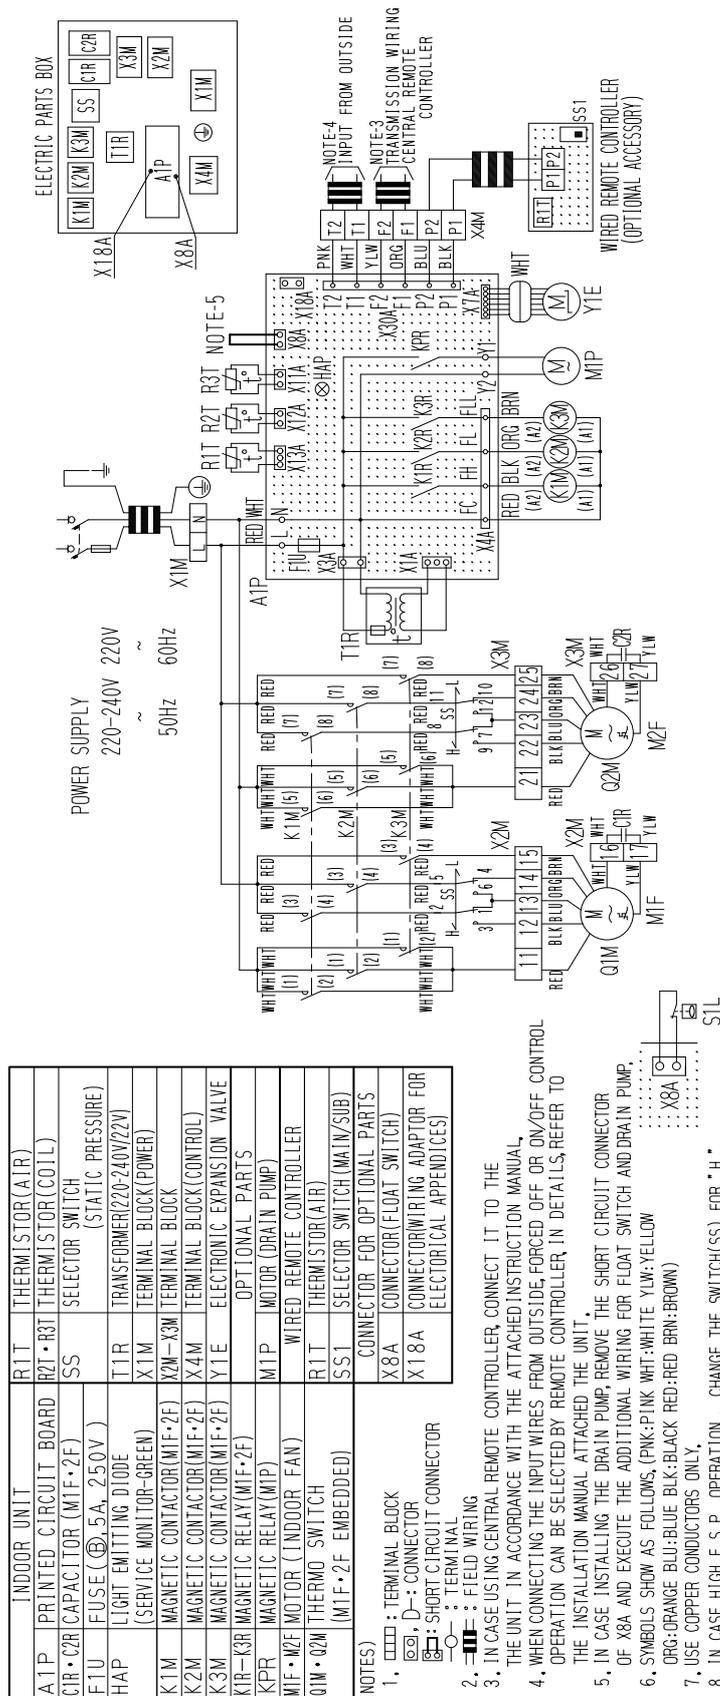

FXHQ32MA / 63MA / 100MAVE


3D039801D

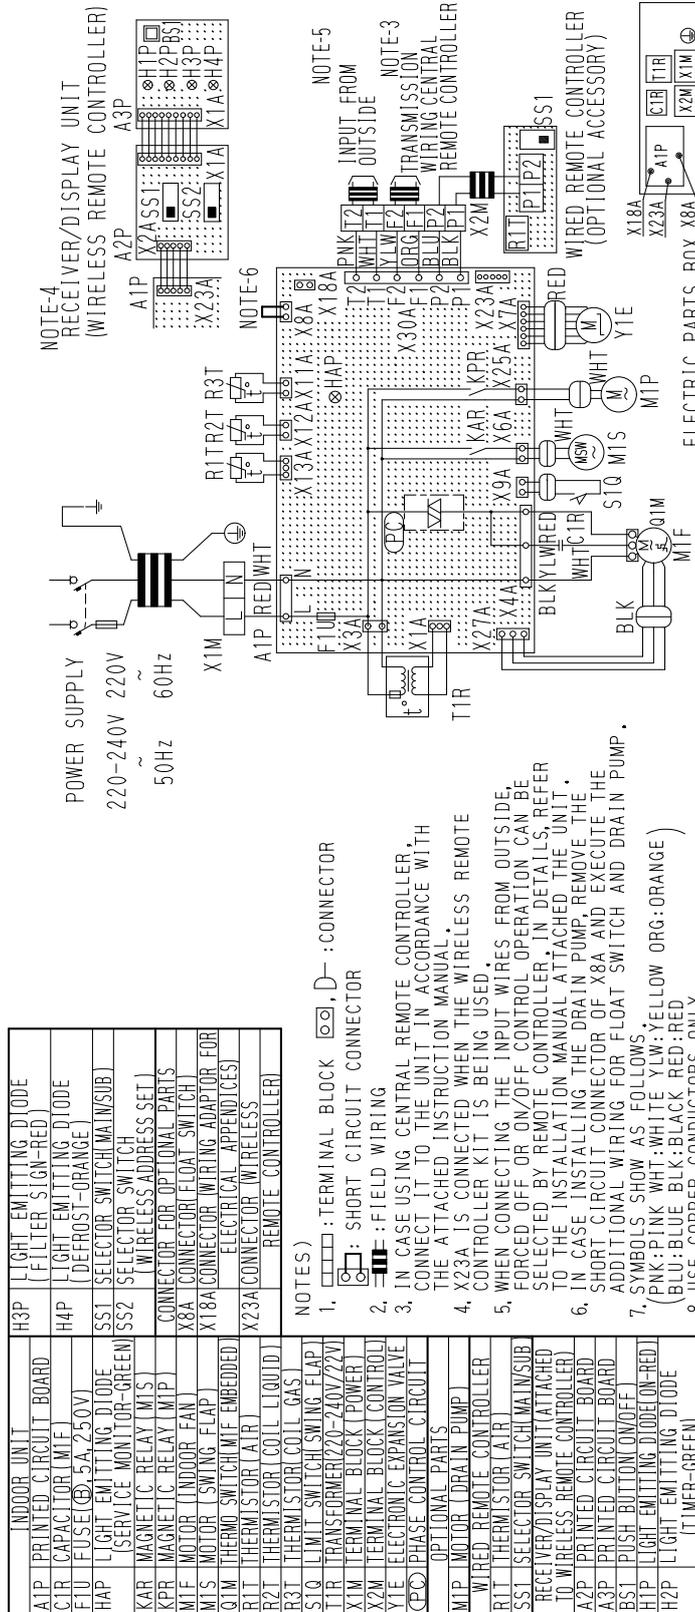





FXUQ71MA / 100MA / 125MAV1

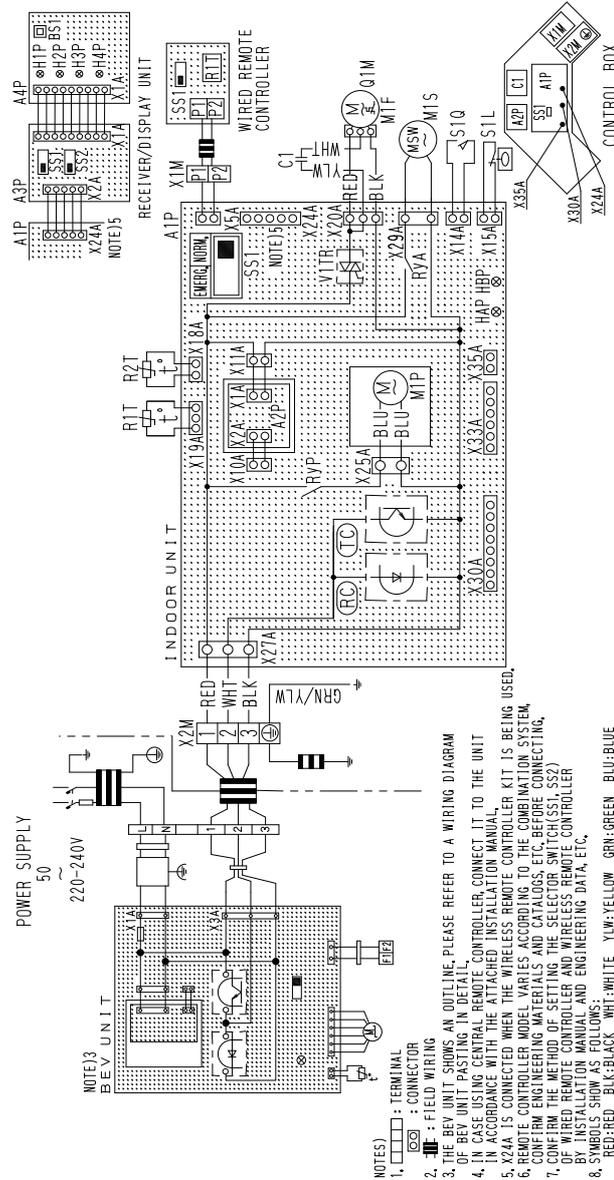


- NOTES:
1. [Symbol] : TERMINAL
  2. [Symbol] : CONNECTOR
  3. [Symbol] : FIELD WIRING
  4. THE BEV UNIT SHOWS AN OUTLINE, PLEASE REFER TO A WIRING DIAGRAM OF BEV UNIT PASTING IN DETAIL.
  5. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
  6. REMOTE CONTROLLER MODEL VARIES ACCORDING TO THE COMBINATION SYSTEM, CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) BY REFERENCE TO THE REMOTE CONTROLLER MANUAL AND ENGINEERING DATA, ETC.
  7. CONFIRM THE METHOD OF SETTING THE SELECTOR SWITCH (SS1, SS2) BY REFERENCE TO THE REMOTE CONTROLLER MANUAL AND ENGINEERING DATA, ETC.
  8. SYMBOLS SHOW AS FOLLOWS: RED-RED BLK-BLACK WHIT-WHITE YLW-YELLOW GRN-GREEN BLU-BLUE

INDOOR UNIT	WIRED REMOTE CONTROLLER
A1P PRINTED CIRCUIT BOARD	R1T THERMISTOR(AIR)
A2P PRINTED CIRCUIT BOARD	SS1 SELECTOR SWITCH(MAIN/SUB)
(TRANSFORMER 220-240V/16V)	RECEIVER/DISPLAY UNIT
C1 CAPACITOR(M1F)	(ATTACHED TO WIRELESS REMOTE CONTROLLER)
H1P LIGHT EMITTING DIODE	A3P PRINTED CIRCUIT BOARD
(SERVICE MONITOR GREEN)	A4P PRINTED CIRCUIT BOARD
H2P LIGHT EMITTING DIODE	B5.1 PUSH BUTTON(ON/OFF)
(ON-RED)	H1P LIGHT EMITTING DIODE
M1S MOTOR(SWING FLAP)	(H1P)
M1F MOTOR(INDOOR FAN)	H2P LIGHT EMITTING DIODE
M1P MOTOR(DRAIN PUMP)	(TIMER-GREEN)
Q1M THERMO SWITCH(MIF EMBEDDED)	H3P LIGHT EMITTING DIODE
R1T THERMISTOR(AIR)	(FILLER SIGN-RED)
R2T THERMISTOR(COIL)	H4P LIGHT EMITTING DIODE
R3A MAGNETIC RELAY(MTA)	(DEFROST-ORANGE)
R4P MAGNETIC RELAY(MIP)	SS1 SELECTOR SWITCH(MAIN/SUB)
S1Q LIMIT SWITCH(SWING FLAP)	SS2 SELECTOR SWITCH
S1L FLOAT SWITCH	(WIRELESS ADDRESS SET)
SS1 SELECTOR SWITCH(EMERGENCY)	CONNECTOR FOR OPTIONAL PARTS
VTR PHASE CONTROL CIRCUIT	X24A CONNECTOR(WIRELESS REMOTE CONTROLLER)
X1M TERMINAL STRIP	X30A CONNECTOR(INTERFACE ADAPTOR FOR SKY AIR SERIES)
X2M TERMINAL STRIP	
XC SIGNAL RECEIVER	
XC SIGNAL TRANSMISSION CIRCUIT	

3D044973A

FXMQ125MF / 200MF / 250MFV1

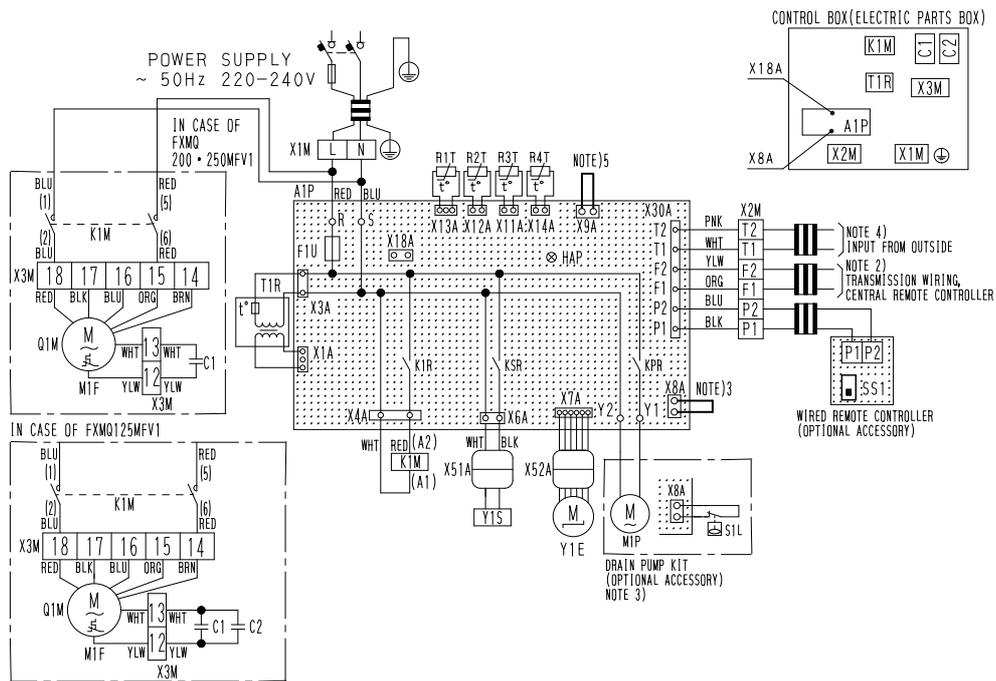

	INDOOR UNIT	X1M	TERMINAL BLOCK(POWER)
A1P	PRINTED CIRCUIT BOARD	X2M	TERMINAL BLOCK(CONTROL)
C1, C2	CAPACITOR(M1F)	X3M	TERMINAL BLOCK
F1U	FUSE(⊗, 5A, 250V)(A1P)	X51A, X52A	CONNECTOR
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GREEN)	Y1E	ELECTRIC EXPANSION VALVE
K1M	MAGNETIC RELAY(M1F)	Y1S	SOLENOID VALVE(HOT GAS)
K1R	MAGNETIC RELAY(M1F)		OPTIONAL PARTS
KPR	MAGNETIC RELAY(M1P)	M1P	MOTOR(DRAIN PUMP)
KSR	MAGNETIC RELAY(Y1S)	S1L	FLOAT SWITCH(DRAIN PUMP)
M1F	MOTOR(FAN)		WIRED REMOTE CONTROLLER
Q1M	THERMAL PROTECTOR (M1F EMBEDDED 135℃)	SS1	SELECT SWITCH(MAIN/SUB)
R1T	THERMISTOR(SUCTION AIR)		CONNECTOR FOR OPTIONAL PARTS
R2T	THERMISTOR(COIL, LIQUID)		
R3T	THERMISTOR(COIL, GAS)	X18A	CONNECTOR(WIRING ADAPTOR FOR ELECTRICAL APPENDICES)
R4T	THERMISTOR(DISCHARGE AIR)		
T1R	TRANSFORMER(220-240V/22V)		



NOTES

1. □ : TERMINAL BLOCK, ⊗, D : CONNECTOR, ○ : TERMINAL,  
⊗ : SHORT CIRCUIT CONNECTOR, ■ : FIELD WIRING.
2. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTRUCTION MANUAL.
3. IN CASE INSTALLING THE DRAIN PUMP KIT, REMOVE THE SHORT CIRCUIT CONNECTOR OF X8A AND EXECUTE THE ADDITIONAL WIRING FOR FLOAT SWITCH AND DRAIN PUMP.
4. IN CASE CONNECTING THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER.  
IN DETAILS, REFER TO THE INSTALLATION MANUAL ATTACHED TO THE UNIT.
5. DO NOT REMOVE SHORT CIRCUIT CONNECTOR OF X9A.

3D044996C

BEVQ71MA / 100MA / 125MAVE

BEV UNIT	
A1P	PRINTED CIRCUIT BOARD ASSY
A2P	POWER SUPPLY PRINTED CIRCUIT BOARD ASSY(220-240V/16V)
F1U	FUSE(ⓑ, 10A, 250V)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR-GRREN)
R3T	THERMISTOR(GAS)
SS1	SELECTOR SWITCH(M/S)
X1M	TERMINAL STRIP(POWER)
X2M	TERMINAL STRIP(TRANSMISSION)
Y1E	ELECTRONIC EXPANSION VALVE
Z1C · Z2C Z3C · Z4F	NOISE FILTER

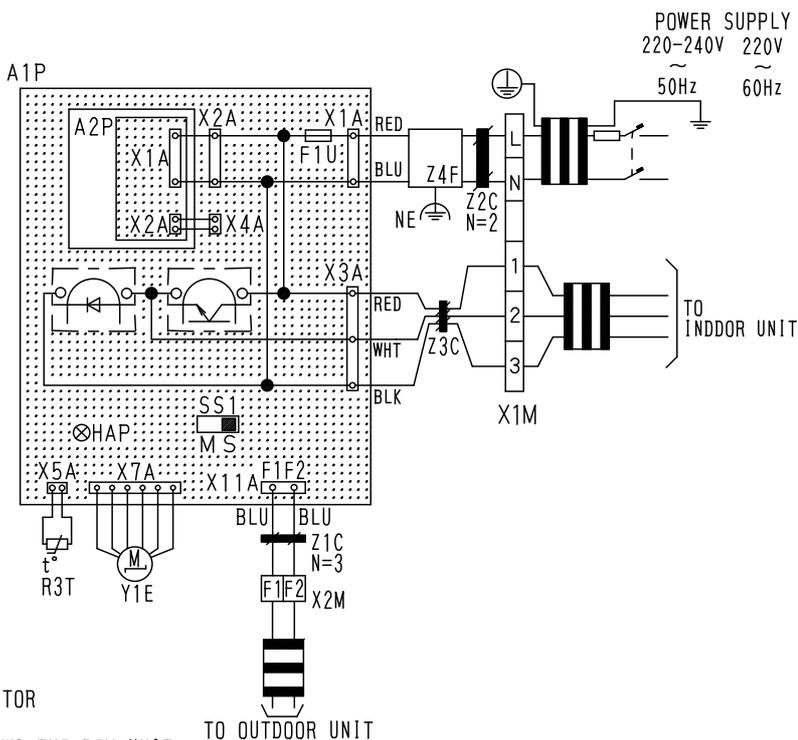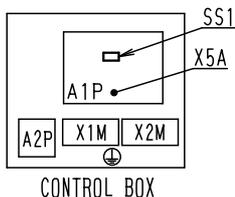

注) 1. □□□□ : TERMINAL □□□□ : CONNECTOR

2. ≡≡≡≡ : FIELD WIRING

3. THIS WIRING DIAGRAM ONLY SHOWS THE BEV UNIT, SEE THE WIRING DIAGRAMS AND INSTALLATION MANUALS FOR THE WIRING AND SETTINGS FOR THE INDOOR, OUTDOOR, AND BS UNITS.

4. SEE THE INDOOR UNIT'S WIRING DIAGRAM WHEN INSTALLING OPTIONAL PARTS FOR THE INDOOR UNIT.

5. ONLY ONE INDOOR UNIT MAY BE CONNECTED TO THE BEV UNIT.

6. SEE THE INDOOR UNIT'S WIRING DIAGRAM FOR WHEN CONNECTING THE REMOTE CONTROL.

7. ALWAYS USE THE SKY AIR CONNECTION ADAPTER FOR THE INDOOR UNIT WHEN USING A CENTRAL CONTROL UNIT. REFER TO THE MANUAL ATTACHED THE UNIT WHEN CONNECTING.

8. COOL/HEAT CHANGEOVER OF INDOOR UNITS CONNECTED TO BEV UNIT CANNOT BE CARRIED OUT UNLESS THEY ARE CONNECTED TO BS UNIT.

IN CASE OF A SYSTEM WITH BEV UNIT ONLY, COOL/HEAT SELECTOR IS REQUIRED.

9. SET THE SS1 TO " M " ONLY FOR THE BEV UNIT CONNECTED TO THE INDOOR UNIT WHICH IS TO HAVE COOL/HEAT SWITCHING CAPABILITY, WHEN CONNECTING THE BS UNIT.

THE " M/S " ON THE SS1 STANDS FOR " MAIN/SUB ".

THIS IS SET TO " S " WHEN SHIPPED FROM THE FACTORY.

10. CONNECT THE ATTACHED THERMISTOR TO THE R3T.

10. SYMBOLS SHOW AS FOLLOWS,  
( BLU:BLUE RED:RED WHT:WHITE BLK:BLACK )

3D044901B

## 3. List of Electrical and Functional Parts

### 3.1 Outdoor Unit

#### 3.1.1 RXYQ5PY1~8PY1

Item	Name		Symbol	Model	
				RXYQ5PY1	RXYQ8PY1
Compressor	Inverter	Type	M1C	JT1GCVDKYR@S	
		OC protection device		14.7A	
	STD 1	Type	M2C	—	
		OC protection device		—	
	STD 2	Type	M3C	—	
		OC protection device		—	
Fan motor		OC protection device	M1F	1.15A	3A
Electronic expansion valve (Main)			Y1E	Fully closed: 0pls	Fully open: 480pls
Electronic expansion valve (Subcool)			Y2E	—	Fully closed: 0pls Fully open: 480pls
Pressure protection	High pressure switch	For M1C	S1PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0 \pm 0.15$ MPa	
		For M2C	S2PH	—	
		For M3C	S3PH	—	
	Low pressure sensor		SLNPL	OFF: 0.07MPa	
Temperature protection	Discharge gas temperature protection (Discharge pipe thermistor)		R3T	OFF: 135°C	
	Inverter fin temperature protection (Radiator fin thermistor)		R1T	OFF: 93°C	
Others	Fuse	For main PC board	F1U	250V AC 10A Class B Time-lag 3.15A AC 250V	
			F2U	250V AC 10A Class B Time-lag 3.15A AC 250V	
		For Noise filter PC board	F1U	250V AC 5A Class B	

## 3.1.2 RXYQ10PY1~12PY1

Item	Name		Symbol	Model	
				RXYQ10PY1	RXYQ12PY1
Compressor	Inverter	Type	M1C	JT1GCVDKYR@S	
		OC protection device		14.7A	
	STD 1	Type	M2C	JT170G-KYE@T	
		OC protection device		15.0A	
	STD 2	Type	M3C	—	
		OC protection device			
Fan motor		OC protection device	M1F	3A	3A (for General overseas : 1.14A)
Electronic expansion valve (Main)			Y1E	Fully closed: 0pls	Fully open: 480pls
Electronic expansion valve (Subcool)			Y2E	Fully closed: 0pls	Fully open: 480pls
Pressure protection	High pressure switch	For M1C	S1PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0 \pm 0.15$ MPa	
		For M2C	S2PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0 \pm 0.15$ MPa	
		For M3C	S3PH	—	
	Low pressure sensor		SLNPL	OFF: 0.07MPa	
Temperature protection	Discharge gas temperature protection (Discharge pipe thermistor)		R3T	OFF: 135°C	
	Inverter fin temperature protection (Radiator fin thermistor)		R1T	OFF: 93°C	
Others	Fuse	For main PC board	F1U	250V AC 10A Class B Time-lag 3.15A AC 250V	
			F2U	250V AC 10A Class B Time-lag 3.15A AC 250V	
		For Noise filter PC board	F1U	250V AC 5A Class B	

Item	Name		Symbol	Model		
				RXYQ14PY1	RXYQ16PY1	RXYQ18PY1
Compressor	Inverter	Type	M1C	JT1GCVDKYR@S		
		OC protection device		14.7A		
	STD 1	Type	M2C	JT170G-KYE@T		
		OC protection device		15.0A		
	STD 2	Type	M3C	JT170G-KYE@T		
		OC protection device		15.0A		
Fan motor		OC protection device	M1F	1.14A		3A
Electronic expansion valve (Main)			Y1E	Fully closed: 0pls Fully open: 480pls		
Electronic expansion valve (Subcool)			Y2E	Fully closed: 0pls Fully open: 480pls		
Pressure protection	High pressure switch	For M1C	S1PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0\pm 0.15$ MPa		
		For M2C	S2PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0\pm 0.15$ MPa		
		For M3C	S3PH	OFF: $4.0^{+0}_{-0.12}$ MPa ON: $3.0\pm 0.15$ MPa		
	Low pressure sensor		SLNPL	OFF: 0.07MPa		
Temperature protection	Discharge gas temperature protection (Discharge pipe thermistor)		R3T	OFF: 135°C		
	Inverter fin temperature protection (Radiator fin thermistor)		R1T	OFF: 93°C		
Others	Fuse	For main PC board	F1U	250V AC 10A Class B Time-lag 3.15A AC 250V		
			F2U	250V AC 10A Class B Time-lag 3.15A AC 250V		
		For Noise filter PC board	F1U	250V AC 5A Class B		

## 3.2 Indoor Side

### 3.2.1 Indoor Unit

Parts Name		Symbol	Model							Remark
			FXFQ25 MVE	FXFQ32 MVE	FXFQ40 MVE	FXFQ50 MVE	FXFQ63 MVE	FXFQ80 MVE	FXFQ100 MVE	
Remote Controller	Wired Remote Controller		BRC1C62							Option
	Wireless Remote Controller		BRC7E61W							
Motors	Fan Motor	M1F	DC380V 30W 8P				DC 380V 120W 8P			
	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C							
	Swing Motor	M1S	MP35HCA[3P007482-1] Stepping Motor DC16V							
Thermistors	Thermistor (Suction Air)	R1T	In PC board A4P or wired remote controller							
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-5 φ8 L1000 20kΩ (25°C)							
	Thermistor (Heat Exchanger)	R2T	ST8602A-5 φ6 L1000 20kΩ (25°C)							
Others	Float Switch	S1L	FS-0211B							
	Fuse	F1U	250V 5A φ5.2							
	Thermal Fuse	TFu	—							
	Transformer	T1R	—							

Parts Name		Symbol	Model							Remark
			FXCQ 20MVE	FXCQ 25MVE	FXCQ 32MVE	FXCQ 40MVE	FXCQ 50MVE	FXCQ 63MVE	FXCQ 80MVE	
Remote Controller	Wired Remote Controller		BRC1C62							Option
	Wireless Remote Controller		BRC7C62							
Motors	Fan Motor	M1F	AC 220~240V 50Hz							
			1φ10W	1φ15W	1φ20W	1φ30W	1φ50W	1φ85W		
			Thermal Fuse 152°C			—	Thermal protector 135°C : OFF 87°C : ON			
Motors	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PLD-12230DM Thermal Fuse 145°C							
	Swing Motor	M1S	MT8-L[3PA07509-1] AC200~240V							
	Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)						
Thermistor (for Heat Exchanger High Temp.)		R3T	ST8605-6 φ8 L1250 20kΩ (25°C)							
Thermistor (Heat Exchanger)		R2T	ST8602A-5 φ6 L1000 20kΩ (25°C)							
Others	Float Switch	S1L	FS-0211B							
	Fuse	F1U	250V 5A φ5.2							
	Transformer	T1R	TR22H21R8							

Parts Name		Symbol	Model				Remark
			FXKQ 25MAVE	FXKQ 32MAVE	FXKQ 40MAVE	FXKQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1C62				Option
	Wireless Remote Controller		BRC4C61				
Motors	Fan Motor	M1F	AC 220~240V 50Hz				
			1φ15W 4P		1φ20W 4P	1φ45W 4P	
			Thermal Fuse 146°C		Thermal protector 120°C : OFF 105°C : ON		
	Drain Pump	M1P	AC 220-240V (50Hz) PLD-12200DM Thermal Fuse 145°C				
Swing Motor	M1S	MP35HCA [3P080801-1] AC200~240V					
Thermistors	Thermistor (Suction Air)	R1T	ST8601-13 φ4 L630 20kΩ (25°C)				
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-7 φ8 L1600 20kΩ (25°C)				
	Thermistor (Heat Exchanger)	R2T	ST8602A-7 φ6 L1600 20kΩ (25°C)				
Others	Float Switch	S1L	FS-0211B				
	Fuse	F1U	250V 5A φ5.2				
	Transformer	T1R	TR22H21R8				

Parts Name		Symbol	Model						Remark
			FXDQ 20N(A)VE(T), PVE(T)	FXDQ 25N(A)VE(T), PVE(T)	FXDQ 32N(A)VE(T), PVE(T)	FXDQ 40N(A)VE(T)	FXDQ 50N(A)VE(T)	FXDQ 63N(A)VE(T)	
Remote Controller	Wired Remote Controller		BRC1C62						Option
	Wireless Remote Controller		BRC4C62						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ62W			1φ130W			
	Drain Pump	M1P	Thermal protector 130°C: OFF, 83°C: ON AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C						*
Thermistors	Thermistor (Suction Air)	R1T	ST8601-1 φ4 L=250 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-4 φ8 L=800 20kΩ (25°C)						
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L=800 20kΩ (25°C)						
Others	Float Switch	S1L	FS-0211E						*
	Fuse	F1U	250V 5A φ5.2						
	Transformer	T1R	TR22H21R8						

\*only for FXDQ20~63N(A)VE, FXDQ20~32PVE (with Drain Pump Type)

Parts Name		Symbol	Model									Remark
			FXSQ 20MVE	FXSQ 25MVE	FXSQ 32MVE	FXSQ 40MVE	FXSQ 50MVE	FXSQ 63MVE	FXSQ 80MVE	FXSQ 100MVE	FXSQ 125MVE	
Remote Controller	Wired Remote Controller		BRC1C62									Option
	Wireless Remote Controller		BRC4C62									
Motors	Fan Motor	M1F	AC 220~240V 50Hz									
			1φ50W			1φ65W	1φ85W	1φ125W	1φ225W			
	Thermal Fuse 152°C						Thermal protector 135°C : OFF 87°C : ON					
	Drain Pump	M1P	AC220-240V (50Hz) PLD-12230DM Thermal Fuse 145°C									
Thermistors	Thermistor (Suction Air)	R1T	ST8601-4 φ4 L800 20kΩ (25°C)									
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-7 φ8 L1600 20kΩ (25°C)									
	Thermistor (Heat Exchanger)	R2T	ST8602A-6 φ6 L1250 20kΩ (25°C)									
Others	Float Switch	S1L	FS-0211B									
	Fuse	F1U	250V 5A φ5.2									
	Transformer	T1R	TR22H21R8									

Parts Name		Symbol	Model							Remark
			FXMQ 40MAVE	FXMQ 50MAVE	FXMQ 63MAVE	FXMQ 80MAVE	FXMQ 100MAVE	FXMQ 125MAVE	FXMQ 200MAVE	
Remote Controller	Wired Remote Controller		BRC1C62							Option
	Wireless Remote Controller		BRC4C62							
Motors	Fan Motor	M1F	AC 220~240V 50Hz							
			1φ100W		1φ160W	1φ270W	1φ430W	1φ380W×2		
	Thermal protector 135°C : OFF 87°C : ON									
	Capacitor for Fan Motor	C1R	5μ F-400V		7μ F 400V	10μ F 400V	8μ F 400V	10μ F 400V	12μ F 400V	
Thermistors	Thermistor (Suction Air)	R1T	ST8601A-5 φ4 L1000 20kΩ (25°C)					ST8601A-13 φ4 L630		
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605A-4 φ8 L800 20kΩ (25°C)					ST8605A-5 φ8 L1000		
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L800 20kΩ (25°C)					ST8602A-6 φ6 L1250		
Others	Float switch	S1L	FS-0211							
	Fuse	F1U	250V 5A φ5.2		250V 10A φ5.2		250V 10A			
	Transformer	T1R	TR22H21R8							

Parts Name		Symbol	Model			Remark	
			FXHQ 32MAVE	FXHQ 63MAVE	FXHQ 100MAVE		
Remote Controller	Wired Remote Controller		BRC1C62			Option	
	Wireless Controller		BRC7E63W				
Motors	Fan Motor	M1F	AC 220~240V/220V 50Hz/60Hz				
			1φ63W		1φ130W		
			Thermal protector 130°C : OFF 80°C : ON				
	Capacitor for Fan Motor	C1R	3.0μF-400V		9.0μF-400V		
Swing Motor	M1S	MT8-L[3P058751-1] AC200~240V					
Thermistors	Thermistor (Suction Air)	R1T	ST8601A-1 φ4 L250 20kΩ (25°C)				
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-6 φ8 L = 1250 20kΩ (25°C)		ST8605-6 φ8 L = 1250 20kΩ (25°C)		
	Thermistor (Heat Exchanger)	R2T	ST8602A-6 φ6 L = 1250 20kΩ (25°C)		ST8602A-6 φ6 L = 1250 20kΩ (25°C)		
Others	Fuse	F1U	250V 5A φ5.2				
	Transformer	T1R	TR22H21R8				

Parts Name		Symbol	Model						Remark
			FXAQ 20MAVE	FXAQ 25MAVE	FXAQ 32MAVE	FXAQ 40MAVE	FXAQ 50MAVE	FXAQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1C62						Option
	Wireless Remote Controller		BRC7E618						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ40W			1φ43W			
			Thermal protector 130°C : OFF 80°C : ON						
Swing Motor	M1S	MP24 [3SB40333-1] AC200~240V			MSFBC20C21 [3SB40550-1] AC200~240V				
Thermistors	Thermistor (Suction Air)	R1T	ST8601-2 φ4 L400 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-2 φ8 L400 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602-2 φ6 L400 20kΩ (25°C)						
Others	Float Switch	S1L	OPTION						
	Fuse	F1U	250V 5A φ5.2						

Parts Name		Symbol	Model						Remark
			FXLQ 20MAVE	FXLQ 25MAVE	FXLQ 32MAVE	FXLQ 40MAVE	FXLQ 50MAVE	FXLQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1C62						Option
	Wireless Remote Controller		BRC4C62						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ15W	1φ25W		1φ35W			
	Capacitor for Fan Motor	C1R	1.0μF-400V		0.5μF-400V	1.0μF-400V	1.5μF-400V	2.0μF-400V	
Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-9 φ8 L2500 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602A-9 φ6 L2500 20kΩ (25°C)						
Others	Fuse	F1U	AC250V 5A						
	Transformer	T1R	TR22H21R8						

Parts Name		Symbol	Model						Remark
			FXNQ 20MAVE	FXNQ 25MAVE	FXNQ 32MAVE	FXNQ 40MAVE	FXNQ 50MAVE	FXNQ 63MAVE	
Remote Controller	Wired Remote Controller		BRC1C62						Option
	Wireless Remote Controller		BRC4C62						
Motors	Fan Motor	M1F	AC 220~240V 50Hz						
			1φ15W	1φ25W		1φ35W			
	Capacitor for Fan Motor	C1R	1.0μF-400V		0.5μF-400V	1.0μF-400V	1.5μF-400V	2.0μF-400V	
Thermistors	Thermistor (Suction Air)	R1T	ST8601-6 φ4 L1250 20kΩ (25°C)						
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-9 φ8 L2500 20kΩ (25°C)						
	Thermistor (for Heat Exchanger)	R2T	ST8602A-9 φ6 L2500 20kΩ (25°C)						
Others	Fuse	F1U	AC250V 5A						
	Transformer	T1R	TR22H21R8						

Parts Name		Symbol	Model			Remark
			FXUQ71MAV1	FXUQ100MAV1	FXUQ125MAV1	
Remote Controller	Wired Remote Controller		BRC1C62			Option
	Wireless Remote Controller		BRC7C528W			
Motors	Fan Motor	M1F	AC 220~240V 50Hz			
			1φ45W	1φ90W		
			Thermal protector 130°C	Thermal protector 130°C : OFF 83°C : ON		
	Drain Pump	M1P	AC220-240V (50Hz) AC220V (60Hz) PJV-1426			
Swing Motor	M1S	MT8-L[3PA07572-1] AC200~240V				
Thermistors	Thermistor (Suction Air)	R1T	ST8601-1 φ4 L=250 20kΩ (25°C)			
	Thermistor (Heat Exchanger)	R2T	ST8602A-4 φ6 L=800 20kΩ (25°C)			
Others	Float Switch	S1L	FS-0211B			

Parts Name		Symbol	Model			Remark
			FXMQ125MFV1	FXMQ200MFV1	FXMQ250MFV1	
Remote Controller	Wired Remote Controller		BRC1C62			Option
	Wireless Remote Controller		—			
Motors	Fan Motor	M1F	AC200~240V 50Hz			
			1φ380W			
			Thermal protector 135°C : OFF 87°C : ON			
Capacitor for Fan Motor	C1R	10μ F 400V×2	10μ F 400V	16μ F 400V		
Solenoid valve	Solenoid valve (Hot gas)	Y1S	Body: VPV-603D Coil: NEV-MOAJ532C1 AC220-240V			
Thermistors	Thermistor (Suction Air)	R1T	ST8601-13 φ4 L=630 20kΩ (25°C)			
	Thermistor (for Heat Exchanger High Temp.)	R3T	ST8605-6 φ8 L=1250 20kΩ (25°C)			
	Thermistor (Heat Exchanger)	R2T	ST8602A-2 φ6 L=1250 20kΩ (25°C)			
	Thermistor (for discharge air)	R4T	ST8605-8 L=2000 20kΩ (25°C)			
Others	Float switch	S1L	Option			
	Fuse	F1U	250V 5A φ5.2			
	Transformer	T1R	TR22H21R8			

## 4. Option List

### 4.1 Option List of Controllers

#### Operation Control System Optional Accessories

No.	Item	Type	FXCQ-M	FXFQ-M	FXKQ-MA	FXDQ-N(A) FXDQ-P	FXUQ-M	FXSQ-M	FXMQ-MA	FXHQ-MA	FXAQ-MA	FXLQ-MA FXNQ-MA
1	Remote controller	Wireless	BRC7C62	BRC7E61W	BRC4C61	BRC4C62	BRC7C528W	BRC4C62	BRC7E63W	BRC7E618	BRC4C62	
		Wired	BRC1C62									
2	Wired remote controller with weekly schedule timer		BRC1D61									
3	Simplified remote controller		—			Note 8 BRC2C51	—	Note 8 BRC2C51	—		Note 8 BRC2C51	
4	Remote controller for hotel use		—			BRC3A61	—	BRC3A61	—		BRC3A61	
5	Adaptor for wiring		★KRP1B61	★KRP1B59	KRP1B61	★KRP1B56	—	KRP1B61	KRP1C3	—	KRP1B61	
6-1	Wiring adaptor for electrical appendices (1)		★KRP2A61	★KRP2A62	KRP2A61	★KRP2A53	★KRP2A62	KRP2A61	★KRP2A62	★KRP2A61	KRP2A61	
6-2	Wiring adaptor for electrical appendices (2)		★KRP4A51	★KRP4A53	KRP4A51	★KRP4A54	★KRP4A53	KRP4A51	★KRP4A52	★KRP4A51	KRP4A51	
7	Remote sensor		KRCS01-1	—	KRCS01-1							
8	Installation box for adaptor PC board		Note 2, 3 KRP1B96	Note 2, 3 KRP1D98	—	Note 4, 6 KRP1B101	KRP1B97	Note 5 KRP4A91	—	Note 3 KRP1C93	Note 2, 3 KRP4A93	—
9	Central remote controller		DCS302CA61									
9-1	Electrical box with earth terminal (3 blocks)		KJB311A									
10	Unified on/off controller		DCS301BA61									
10-1	Electrical box with earth terminal (2 blocks)		KJB212A									
10-2	Noise filter (for electromagnetic interface use only)		KEK26-1									
11	Schedule timer		DST301B(A)61									
12	External control adaptor for outdoor unit (Must be installed on indoor units)		★DTA104A61	★DTA104A62	DTA104A61	★DTA104A53	—	DTA104A61	★DTA104A62	★DTA104A61	DTA104A61	
13	Interface adaptor for SkyAir-series		—	—	—	—	Note 7 DTA102A52	—	—	—	—	—

#### Note:

1. Installation box (No.8) is necessary for each adaptor marked ★.
2. Up to 2 adaptors can be fixed for each installation box.
3. Only one installation box can be installed for each indoor unit.
4. Up to 2 installation boxes can be installed for each indoor unit.
5. Installation box (No. 8) is necessary for second adaptor.
6. Installation box (No. 8) is necessary for each adaptor.
7. This adaptor is required when connecting with optional controller for centralized control.
8. BRC2A51 is also available.

#### Various PC Boards

No.	Part name	Model No.	Function
1	Adaptor for wiring	KRP1B56 KRP1B57 KRP1B59 KRP1B61 KRP1C3	■ PC board when equipped with auxiliary electric heater in the indoor unit.
2	DIII-NET Expander Adaptor	DTA109A51	■ Up to 1024 units can be centrally controlled in 64 different groups. ■ Wiring restrictions (max. length: 1000m, total wiring length: 2000m, max. number of branches: 16) apply to each adaptor.

#### System Configuration

No.	Part name	Model No.	Function
1	Central remote controller	DCS302CA61	■ Up to 64 groups of indoor units (128 units) can be connected, and ON/OFF, temperature setting and monitoring can be accomplished individually or simultaneously. Connectable up to "2" controllers in one system.
2	Unified ON/OFF controller	DCS301BA61	■ Up to 16 groups of indoor units (128 units) can be turned, ON/OFF individually or simultaneously, and operation and malfunction can be displayed. Can be used in combination with up to 8 controllers.
3	Schedule timer	DST301BA61	■ Programmed time weekly schedule can be controlled by unified control for up to 64 groups of indoor units (128 units). Can turn units ON/OFF twice per day.
4	Unification adaptor for computerized control	★DCS302A52	■ Interface between the central monitoring board and central control units
5	Interface adaptor for SkyAir-series	★DTA102A52	■ Adaptors required to connect products other than those of the VRV System to the high-speed DIII-NET communication system adopted for the VRV System. ■ To use any of the above optional controllers, an appropriate adaptor must be installed on the product unit to be controlled.
6	Central control adaptor kit	★DTA107A55	
7	Wiring adaptor for other air-conditioner	★DTA103A51	
8	DIII-NET Expander adaptor	DTA109A51	■ Up to 1,024 units can be centrally controlled in 64 different groups. ■ Wiring restrictions (max. length: 1,000m, total wiring length: 2,000m, max. number of branches: 16) apply to each adaptor.
9	Mounting plate	KRP4A92	■ Fixing plate for DTA109A51

#### Note:

Installation box for ★ adaptor must be procured on site.

## Building management system

No.	Part name			Model No.	Function	
1	intelligent Touch Controller	basic	Hardware	intelligent Touch Controller	DCS601C51	• Air-Conditioning management system that can be controlled by a compact all-in-one unit.
1-1		Option	Hardware	DIII-NET plus adaptor	DCS601A52	• Additional 64 groups (10 outdoor units) is possible.
1-2			Software	P.P.D.	DCS002C51	• P.P.D.: Power Proportional Distribution function
1-3				Web	DCS004A51	• Monitors and controls the air conditioning system using the Internet and Web browser application on a PC.
1-4	Electrical box with earth terminal (4blocks)			KJB411A	• Wall embedded switch box.	
2	intelligent Manager III	Number of units to be connected	128 units	DAM602B52	Air conditioner management system (featuring minimized engineering) that can be controlled by personal computers.	
			256 units	DAM602B51		
			512 units	DAM602B51x2		
			768 units	DAM602B51x3		
			1024 units	DAM602B51x4		
2-1	intelligent Manager III	Option	Software	P.P.D	DAM002A51	• P.P.D.: Power Proportional Distribution function.
				ECO.	DAM003A51	Software for energy-saving control.
2-2	Communication Line	Optional DIII Ai unit		DAM101A51	Analog input for "sliding temperature" function (to reduce cold shock) for intelligent Manager III.	
3		★2 Interface for use in BACnet®		DMS502A51	Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through BACnet® communications.	
3-1		Optional DIII board		DAM411A1	Expansion kit, installed on DMS502A51, to provide 3 more DIII-NET communication ports. Not usable independently.	
3-2		Optional Di board		DAM412A1	Expansion kit, installed on DMS502A51, to provide 16 more wattmeter pulse input points. Not usable independently.	
4		★3 Interface for use in LON WORKS®		DMS504B51	Interface unit to allow communications between VRV and BMS. Operation and monitoring of air-conditioning systems through LON WORKS® communication.	
5		Contact/Analog signal	Parallel interface	Basic unit	DPF201A51	Enables ON/OFF command, operation and display of malfunction; can be used in combination with up to 4 units.
6	Temperature measurement units			DPF201A52	Enables temperature measurement output for 4 groups; 0-5VDC.	
7	Temperature setting units			DPF201A53	Enables temperature setting input for 16 groups; 0-5VDC.	
8	Unification adaptor for computerized control		DCS302A52	Interface between the central monitoring board and central control units		
9-1	Wiring adaptor for electrical appendices (1)		KRP2A53, 61, 62	Simultaneously controls air-conditioning control computer and up to 64 groups of indoor units.		
9-2	Wiring adaptor for electrical appendices (2)		KRP4A51-54	To control the group of indoor units collectively, which are connected by the transmission wiring of remote controller.		
13	External control adaptor for outdoor unit (Must be installed on indoor units.)		DTA104A53, 61, 62	Cooling/Heating mode change over. Demand control and Low noise control are available between the plural outdoor units.		

**Notes:**

- \*1. PPD does not support Connection Unit Series.
- \*2. BACnet® is a registered trademark of American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE).
- \*3. LON WORKS® is a registered trade mark of Echelon Corporation.

Please refer to Option Handbook etc. for detail.

## 4.2 Option Lists (Outdoor Unit)

### RXYQ5 ~ 18PY1

Optional accessories		RXYQ5PY1	RXYQ5PY1E	RXYQ8PY1 RXYQ10PY1	RXYQ8PY1E RXYQ10PY1E	RXYQ12PY1 RXYQ14PY1 RXYQ16PY1 RXYQ18PY1	RXYQ12PY1E RXYQ14PY1E RXYQ16PY1E RXYQ18PY1E
Cool/Heat Selector		KRC19-26A					
Cool/Heat Selector	Fixing box	KJB111A					
Distributive Piping	Refnet header	KHRP26M22H (Max. 4 branch)	KHRP26M22H, (Max. 4 branch) KHRP26M33H (Max. 8 branch)		KHRP26M22H, KHRP26M33H, (Max. 4 branch) (Max. 8 branch) KHRP26M72H (Max. 8 branch)		
	Refnet joint	KHRP26A22T	KHRP26A22T, KHRP26A33T		KHRP26A22T, KHRP26A33T, KHRP26A72T		
Central drain pan kit		KWC26C160	★KWC26C160E	KWC26C280	★KWC26C280E	KWC26C450	★KWC26C450E
Digital Pressure Gauge Kit		BHGP26A1(E)					

C:3D053052A

### RXYQ20 ~ 36PY1

Optional accessories		RXYQ20PY1 RXYQ22PY1	RXYQ20PY1E RXYQ22PY1E	RXYQ24PY1 RXYQ26PY1 RXYQ28PY1	RXYQ24PY1E RXYQ26PY1E RXYQ28PY1E	RXYQ30PY1 RXYQ32PY1 RXYQ34PY1 RXYQ36PY1	RXYQ30PY1E RXYQ32PY1E RXYQ34PY1E RXYQ36PY1E
Cool/Heat Selector		KRC19-26A					
Cool/Heat Selector	Fixing box	KJB111A					
Distributive Piping	Refnet header	KHRP26M22H (Max. 4 branch), KHRP26M33H (Max. 8 branch), KHRP26M72H (Max. 8 branch)	KHRP26M22H, KHRP26M33H, KHRP26M72H, KHRP26M73H (Max. 4 branch) (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)				
	Refnet joint	KHRP26A22T, KHRP26A33T, KHRP26A72T	KHRP26A22T, KHRP26A33T, KHRP26A72T, KHRP26A73T				
Outdoor unit multi connection piping kit		BHFP22P100					
Pipe size reducer		—		KHRP26M73TP, KHRP26M73HP			
Central drain pan kit		KWC26C280 KWC26C450	★KWC26C280E ★KWC26C450E	KWC26C280 KWC26C450	★KWC26C280E ★KWC26C450E	KWC26C450 × 2	★KWC26C450E × 2
Digital Pressure Gauge Kit		BHGP26A1(E)					

C:3D053052A

### RXYQ38 ~ 54PY1

Optional accessories		RXYQ38PY1 RXYQ40PY1 RXYQ42PY1 RXYQ44PY1 RXYQ46PY1	RXYQ38PY1E RXYQ40PY1E RXYQ42PY1E RXYQ44PY1E RXYQ46PY1E	RXYQ48PY1 RXYQ50PY1 RXYQ52PY1 RXYQ54PY1	RXYQ48PY1E RXYQ50PY1E RXYQ52PY1E RXYQ54PY1E
Cool/Heat Selector		KRC19-26A			
Cool/Heat Selector	Fixing box	KJB111A			
Distributive Piping	Refnet header	KHRP26M22H, KHRP26M33H, KHRP26M72H, KHRP26M73H (Max. 4 branch) (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)			
	Refnet joint	KHRP26A22T, KHRP26A33T, KHRP26A72T, KHRP26A73T			
Outdoor unit multi connection piping kit		BHFP22P151			
Pipe size reducer		KHRP26M73TP, KHRP26M73HP			
Central drain pan kit		KWC26C280 KWC26C450 × 2	★KWC26C280E ★KWC26C450E × 2	KWC26C450 × 3	★KWC26C450E × 3
Digital Pressure Gauge Kit		BHGP26A1(E)			

C:3D053052A

**Note**★: Order products

## RXYQ16 ~ 18PHY1

Optional accessories		RXYQ16PHY1 RXYQ18PHY1	RXYQ16PHY1E RXYQ18PHY1E
Cool/Heat Selector		KRC19-26A	
Cool/Heat Selector	Fixing box	KJB111A	
Distributive Piping	Refnet header	KHRP26M22H, KHRP26M33H, (Max. 4 branch) (Max. 8 branch) KHRP26M72H (Max. 8 branch)	
	Refnet joint	KHRP26A22T, KHRP26A33T, KHRP26A72T	
Outdoor unit multi connection piping kit		BHFP22P100	
Central drain pan kit		KWC26C280 × 2	★KWC26C280E × 2
Digital Pressure Gauge Kit		BHGP26A1(E)	

C:3D053053A

## RXYQ24 ~ 30PHY1

Optional accessories		RXYQ24PHY1 RXYQ26PHY1	RXYQ24PHY1E RXYQ26PHY1E	RXYQ28PHY1 RXYQ30PHY1	RXYQ28PHY1E RXYQ30PHY1E
Cool/Heat Selector		KRC19-26A			
Cool/Heat Selector	Fixing box	KJB111A			
Distributive Piping	Refnet header	KHRP26M22H, KHRP26M33H, KHRP26M72H, KHRP26M73H (Max. 4 branch) (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)			
	Refnet joint	KHRP26A22T, KHRP26A33T, KHRP26A72T, KHRP26A73T			
Outdoor unit multi connection piping kit		BHFP22P151			
Pipe size reducer		KHRP26M73TP, KHRP26M73HP			
Central drain pan kit		KWC26C280 × 3	★KWC26C280E × 3	KWC26C280 × 2 KWC26C450	★KWC26C280E × 2 ★KWC26C450E
Digital Pressure Gauge Kit		BHGP26A1(E)			

C:3D053053A

## RXYQ32 ~ 50PHY1


Optional accessories		RXYQ32PHY1 RXYQ34PHY1	RXYQ32PHY1E RXYQ34PHY1E	RXYQ36PHY1 RXYQ44PHY1 RXYQ38PHY1 RXYQ46PHY1 RXYQ40PHY1 RXYQ48PHY1 RXYQ42PHY1 RXYQ50PHY1	RXYQ36PHY1E RXYQ44PHY1E RXYQ38PHY1E RXYQ46PHY1E RXYQ40PHY1E RXYQ48PHY1E RXYQ42PHY1E RXYQ50PHY1E
Cool/Heat Selector		KRC19-26A			
Cool/Heat Selector	Fixing box	KJB111A			
Distributive Piping	Refnet header	KHRP26M22H, KHRP26M33H, KHRP26M72H, KHRP26M73H (Max. 4 branch) (Max. 8 branch) (Max. 8 branch) (Max. 8 branch)			
	Refnet joint	KHRP26A22T, KHRP26A33T, KHRP26A72T, KHRP26A73T			
Outdoor unit multi connection piping kit		BHFP22P151			
Pipe size reducer		KHRP26M73TP, KHRP26M73HP			
Central drain pan kit		KWC26C280 KWC26C450 × 2	★KWC26C280E ★KWC26C450E × 2	KWC26C450 × 3	★KWC26C450E × 3
Digital Pressure Gauge Kit		BHGP26A1(E)			

C:3D053053A

**Note**★: Order products

# 5. Piping Installation Point

## 5.1 Piping Installation Point

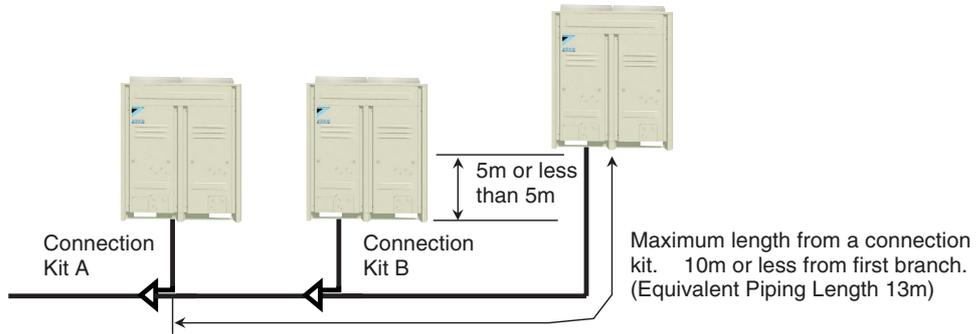


Since there is a possibility that oil may be collected on a stop machine side, install piping between outdoor units to go to level or go up to an outdoor unit, and to make a slope.

(V3036)

The projection part between multi connection piping kits



When the piping length between the multi connection kits or between multi connection kit and outdoor unit is 2m or more, prepare a vertical projection part (200mm or more as shown below) only on the gas pipe line location less than 2m from multi connection kit.

In the case of 2m or less

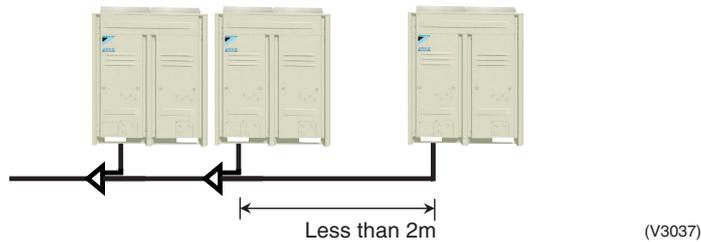

(V3037)


In the case of 2m or more

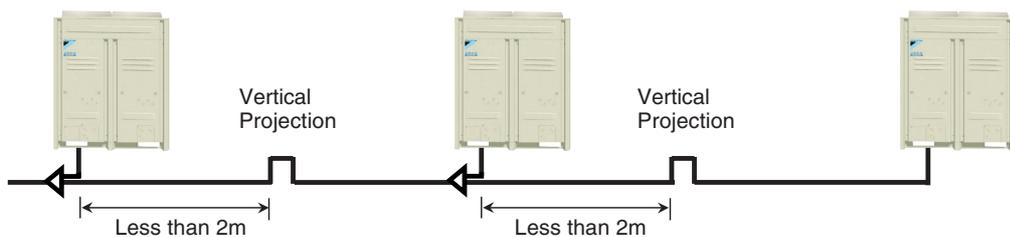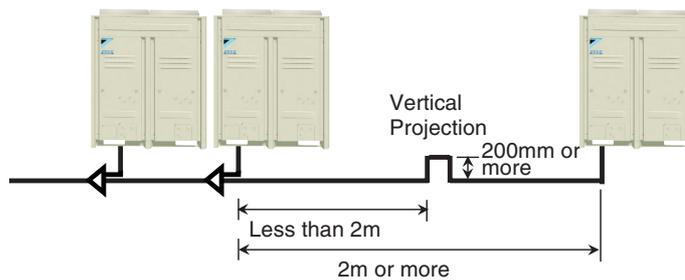

(V3038)

## 5.2 The Example of A Wrong Pattern


Wrong

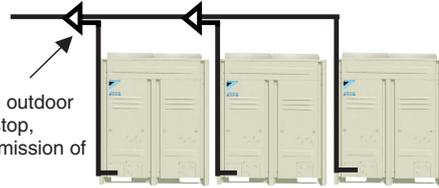


Oil is collected to the outdoor unit at the time of a stop, because of bottom omission of piping.

(V3039)

Wrong

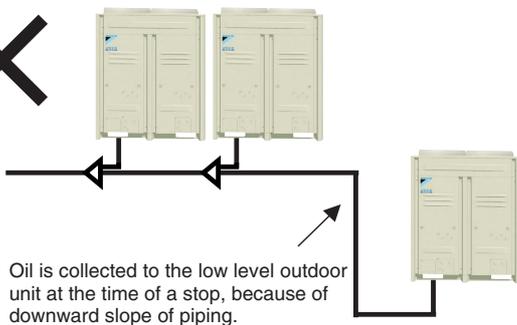


Oil is collected to the low level outdoor unit at the time of a stop, because of downward slope of piping.

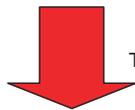


The example of installation on which oil is not collected.

Good

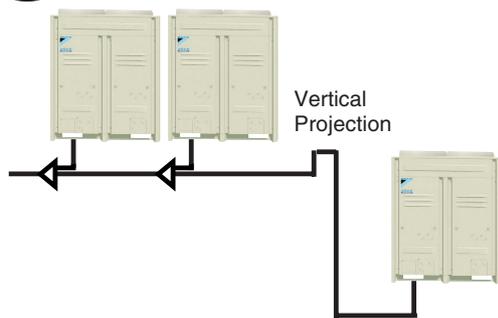

Vertical Projection

Good

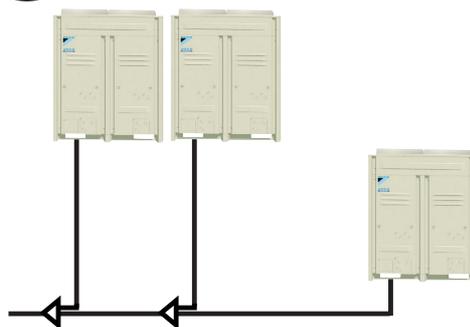

(V3040)

Max. allowable Piping Length	Outdoor Unit - Multi Connection Piping Kit	Actual piping length 10m or less, equivalent length 13m or less
	Multi Connection Piping Kit - Indoor Unit	Actual piping length 165m or less, equivalent length 190m or less, the total extension 1000m or less
	REFNET Joint - Indoor Unit	Actual piping length 40m or less (Refer to Page 363, 364 Note 2 in case of up to 90m)
Allowable Level Difference	Outdoor Unit - Outdoor Unit	5m or less
	Outdoor Unit - Indoor Unit	50m or less ★90m or less (when an outdoor unit is lower than indoor units: 40m or less in case of RXYQ5P)
	Indoor Unit - Indoor Unit	15m or less

**Note)★:** Available on request if the outdoor unit is above.

# 6. Example of connection (R-410A Type)

**Example of connection**  
(Connection of 8 indoor units)

(\*1) "←" indicate the Outdoor unit multi connection piping kit

(\*2) In case of multi outdoor system, re-read to the first Outdoor unit multi connection piping kit as seen from the indoor unit.


	Single outdoor system	Multi outdoor system	Example refrigerant branch using REFNET joint	Example refrigerant branch using REFNET joint and REFNET header	Example refrigerant branch using REFNET header																																																																							
Maximum allowable length	Between outdoor (*2) and indoor units	Actual pipe length Example unit ⑧ : a + b + c + d + e + f + g + p ≤ 165m	Pipe length between outdoor (*2) and indoor units ≤ 165m Example unit ⑧ : a + b + c + d + e + f + g + p ≤ 165m	Pipe length between outdoor unit and indoor units ≤ 165m, unit ⑧ : a + i + k ≤ 165m	Pipe length between outdoor unit and indoor units ≤ 165m, unit ⑧ : a + i ≤ 165m																																																																							
	Between outdoor unit and Outdoor unit multi connection piping kit (Only for multi system)	Equivalent length Total extension length	Equivalent pipe length between outdoor (*2) and indoor units ≤ 190m (assume equivalent pipe length of REFNET joint to be 0.5m, that of REFNET header to be 1m, calculation purposes) (See Note 1 - Next page)	Equivalent pipe length between outdoor unit and Outdoor unit multi connection piping kit ≤ 13m	Equivalent pipe length between outdoor unit and Outdoor unit multi connection piping kit ≤ 13m																																																																							
	Between outdoor and indoor units	Actual pipe length Equivalent length	Pipe length between outdoor unit and Outdoor unit multi connection piping kit ≤ 10m, Equivalent length between outdoor unit and Outdoor unit multi connection piping kit ≤ 13m																																																																									
Allowable height length	Between outdoor and indoor units	Difference in height	Difference in height between outdoor and indoor units (H1) ≤ 50m (Max 40m if the outdoor unit is below in case of 5HP type) (≤ 90m if the outdoor unit is below in case of 8-54Hp type)																																																																									
	Between indoor and indoor units	Difference in height	Difference in height between indoor units (H2) ≤ 15m																																																																									
	Between outdoor and outdoor units	Difference in height	Difference in height between outdoor unit (H3) ≤ 5m																																																																									
Allowable length after the branch	Actual pipe length	Pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m (See Note 2 - Next page) Example unit ⑧ : b + c + d + e + f + g + p ≤ 40m	Pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m (See Note 2 - Next page) Example unit ⑧ : b + c + d + e + f + g + p ≤ 40m	Pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m (See Note 2 - Next page) Example unit ⑧ : i + k ≤ 40m	Pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m (See Note 2 - Next page) Example unit ⑧ : i ≤ 40m																																																																							
<b>Refrigerant branch kit selection</b>		<p>How to select the REFNET joint</p> <ul style="list-style-type: none"> <li>When using REFNET joint at the first branch counted from the outdoor unit side. Choose from the following table in accordance with the outdoor unit capacity type. (Example: REFNET joint A)</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Outdoor unit capacity type</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>5HP type</td> <td>KHRP26A22T</td> </tr> <tr> <td>8, 10HP type</td> <td>KHRP26A33T</td> </tr> <tr> <td>12-22HP type</td> <td>KHRP26A72T</td> </tr> <tr> <td>24HP type~</td> <td>KHRP26A73T + KHRP26M73TP</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>Choose the REFNET joints other than that for the first branch from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET joint.</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Indoor unit total capacity index</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>&lt; 200</td> <td>KHRP26A22T</td> </tr> <tr> <td>200 ≤ x &lt; 290</td> <td>KHRP26A33T</td> </tr> <tr> <td>290 ≤ x &lt; 640</td> <td>KHRP26A72T</td> </tr> <tr> <td>640 ≤</td> <td>KHRP26A73T + KHRP26M73TP</td> </tr> </tbody> </table>		Outdoor unit capacity type	Refrigerant branch kit name	5HP type	KHRP26A22T	8, 10HP type	KHRP26A33T	12-22HP type	KHRP26A72T	24HP type~	KHRP26A73T + KHRP26M73TP	Indoor unit total capacity index	Refrigerant branch kit name	< 200	KHRP26A22T	200 ≤ x < 290	KHRP26A33T	290 ≤ x < 640	KHRP26A72T	640 ≤	KHRP26A73T + KHRP26M73TP	<p>How to select the REFNET header</p> <ul style="list-style-type: none"> <li>Choose from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET header.</li> <li>Note: 250 type indoor unit cannot be connected below the REFNET header.</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Indoor unit total capacity index</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>&lt; 200</td> <td>KHRP26M22H (Max. 4 branch)</td> </tr> <tr> <td>200 ≤ x &lt; 290</td> <td>KHRP26M33H (Max. 8 branch)</td> </tr> <tr> <td>290 ≤ x &lt; 640</td> <td>KHRP26M72H (Max. 8 branch) (See Note 3 - Next page)</td> </tr> <tr> <td>640 ≤</td> <td>KHRP26M73H (Max. 8 branch) + KHRP26M73HP</td> </tr> </tbody> </table> <p>How to select the Outdoor unit multi connection piping kit (This is required when the system is multi outdoor unit system.)</p> <ul style="list-style-type: none"> <li>Choose from the following table in accordance with the number of outdoor units.</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Number of outdoor units</th> <th>Connection piping kit name</th> </tr> </thead> <tbody> <tr> <td>2 units</td> <td>BHFP22P100</td> </tr> <tr> <td>3 units</td> <td>BHFP22P151</td> </tr> </tbody> </table>		Indoor unit total capacity index	Refrigerant branch kit name	< 200	KHRP26M22H (Max. 4 branch)	200 ≤ x < 290	KHRP26M33H (Max. 8 branch)	290 ≤ x < 640	KHRP26M72H (Max. 8 branch) (See Note 3 - Next page)	640 ≤	KHRP26M73H (Max. 8 branch) + KHRP26M73HP	Number of outdoor units	Connection piping kit name	2 units	BHFP22P100	3 units	BHFP22P151																																			
Outdoor unit capacity type	Refrigerant branch kit name																																																																											
5HP type	KHRP26A22T																																																																											
8, 10HP type	KHRP26A33T																																																																											
12-22HP type	KHRP26A72T																																																																											
24HP type~	KHRP26A73T + KHRP26M73TP																																																																											
Indoor unit total capacity index	Refrigerant branch kit name																																																																											
< 200	KHRP26A22T																																																																											
200 ≤ x < 290	KHRP26A33T																																																																											
290 ≤ x < 640	KHRP26A72T																																																																											
640 ≤	KHRP26A73T + KHRP26M73TP																																																																											
Indoor unit total capacity index	Refrigerant branch kit name																																																																											
< 200	KHRP26M22H (Max. 4 branch)																																																																											
200 ≤ x < 290	KHRP26M33H (Max. 8 branch)																																																																											
290 ≤ x < 640	KHRP26M72H (Max. 8 branch) (See Note 3 - Next page)																																																																											
640 ≤	KHRP26M73H (Max. 8 branch) + KHRP26M73HP																																																																											
Number of outdoor units	Connection piping kit name																																																																											
2 units	BHFP22P100																																																																											
3 units	BHFP22P151																																																																											
Example for indoor units connected downstream		Example REFNET joint C: indoor units ③+④+⑤+⑥+⑦+⑧	Example REFNET joint B: indoor units ⑦+⑧	Example REFNET header: indoor units ①+②+③+④+⑤+⑥	Example REFNET header: indoor units ①+②+③+④+⑤+⑥+⑦+⑧																																																																							
<b>Pipe size selection</b>		<p>Temper grade and wall thickness for pipes. (Temper grade, O type and 1/2H type indicate the material types specified in JIS H 3300.) (Unit:mm)</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Copper tube O.D.</th> <th>Copper tube W.T. (Minimum requirement)</th> <th>Temper grade</th> </tr> </thead> <tbody> <tr><td>φ6.4</td><td>0.80</td><td rowspan="4">O type</td></tr> <tr><td>φ9.5</td><td>0.80</td></tr> <tr><td>φ12.7</td><td>0.80</td></tr> <tr><td>φ15.9</td><td>0.99</td></tr> <tr><td>φ19.1</td><td>0.80</td><td rowspan="8">1/2H type</td></tr> <tr><td>φ22.2</td><td>0.80</td></tr> <tr><td>φ25.4</td><td>0.88</td></tr> <tr><td>φ28.6</td><td>0.99</td></tr> <tr><td>φ31.8</td><td>1.10</td></tr> <tr><td>φ34.9</td><td>1.21</td></tr> <tr><td>φ38.1</td><td>1.32</td></tr> <tr><td>φ41.3</td><td>1.43</td></tr> </tbody> </table>		Copper tube O.D.	Copper tube W.T. (Minimum requirement)	Temper grade	φ6.4	0.80	O type	φ9.5	0.80	φ12.7	0.80	φ15.9	0.99	φ19.1	0.80	1/2H type	φ22.2	0.80	φ25.4	0.88	φ28.6	0.99	φ31.8	1.10	φ34.9	1.21	φ38.1	1.32	φ41.3	1.43	<p>Piping between Outdoor unit and first refrigerant branch kit. Piping between first Outdoor unit multi connection piping kit and first refrigerant branch kit. (Part A)</p> <ul style="list-style-type: none"> <li>Choose from the following table in accordance with the outdoor unit capacity type.</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Outdoor unit capacity type</th> <th colspan="2">Piping size (O.D.)</th> </tr> <tr> <th>Gas pipe</th> <th>Liquid pipe</th> </tr> </thead> <tbody> <tr><td>5HP type</td><td>φ15.9</td><td rowspan="8">φ9.5</td></tr> <tr><td>8HP type</td><td>φ19.1</td></tr> <tr><td>10HP type</td><td>φ22.2</td></tr> <tr><td>12-16HP type</td><td>φ28.6</td></tr> <tr><td>18-22HP type</td><td>φ12.7</td></tr> <tr><td>24HP type</td><td>φ15.9</td></tr> <tr><td>26-34HP type</td><td>φ34.9</td></tr> <tr><td>36-54HP type</td><td>φ41.3</td></tr> </tbody> </table> <p>Piping between outdoor unit and Outdoor unit multi connection piping kit. (Part C)</p> <ul style="list-style-type: none"> <li>Choose from the following table in accordance with the total capacity type of all the outdoor units connected above Outdoor unit multi connection piping kit. (Unit:mm)</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Indoor unit total capacity index</th> <th colspan="2">Piping size (O.D.)</th> </tr> <tr> <th>Gas pipe</th> <th>Liquid pipe</th> </tr> </thead> <tbody> <tr><td>&lt; 150</td><td>φ15.9</td><td rowspan="8">φ9.5</td></tr> <tr><td>150 ≤ x &lt; 200</td><td>φ19.1</td></tr> <tr><td>200 ≤ x &lt; 290</td><td>φ22.2</td></tr> <tr><td>290 ≤ x &lt; 420</td><td>φ28.6</td></tr> <tr><td>420 ≤ x &lt; 640</td><td>φ34.9</td></tr> <tr><td>640 ≤ x &lt; 920</td><td>φ41.3</td></tr> <tr><td>920 ≤</td><td>φ41.3</td></tr> </tbody> </table>		Outdoor unit capacity type	Piping size (O.D.)		Gas pipe	Liquid pipe	5HP type	φ15.9	φ9.5	8HP type	φ19.1	10HP type	φ22.2	12-16HP type	φ28.6	18-22HP type	φ12.7	24HP type	φ15.9	26-34HP type	φ34.9	36-54HP type	φ41.3	Indoor unit total capacity index	Piping size (O.D.)		Gas pipe	Liquid pipe	< 150	φ15.9	φ9.5	150 ≤ x < 200	φ19.1	200 ≤ x < 290	φ22.2	290 ≤ x < 420	φ28.6	420 ≤ x < 640	φ34.9	640 ≤ x < 920	φ41.3	920 ≤	φ41.3
Copper tube O.D.	Copper tube W.T. (Minimum requirement)	Temper grade																																																																										
φ6.4	0.80	O type																																																																										
φ9.5	0.80																																																																											
φ12.7	0.80																																																																											
φ15.9	0.99																																																																											
φ19.1	0.80	1/2H type																																																																										
φ22.2	0.80																																																																											
φ25.4	0.88																																																																											
φ28.6	0.99																																																																											
φ31.8	1.10																																																																											
φ34.9	1.21																																																																											
φ38.1	1.32																																																																											
φ41.3	1.43																																																																											
Outdoor unit capacity type	Piping size (O.D.)																																																																											
	Gas pipe	Liquid pipe																																																																										
5HP type	φ15.9	φ9.5																																																																										
8HP type	φ19.1																																																																											
10HP type	φ22.2																																																																											
12-16HP type	φ28.6																																																																											
18-22HP type	φ12.7																																																																											
24HP type	φ15.9																																																																											
26-34HP type	φ34.9																																																																											
36-54HP type	φ41.3																																																																											
Indoor unit total capacity index	Piping size (O.D.)																																																																											
	Gas pipe	Liquid pipe																																																																										
< 150	φ15.9	φ9.5																																																																										
150 ≤ x < 200	φ19.1																																																																											
200 ≤ x < 290	φ22.2																																																																											
290 ≤ x < 420	φ28.6																																																																											
420 ≤ x < 640	φ34.9																																																																											
640 ≤ x < 920	φ41.3																																																																											
920 ≤	φ41.3																																																																											
<p><b>How to calculate the additional refrigerant to be charged</b></p> <p>Additional refrigerant to be charged R (kg) (R should be rounded off in units of 0.1Kg.)</p> $R = \left( \frac{\text{Total length (m) of liquid piping size at } \phi 22.2}{\text{Total length (m) of liquid piping size at } \phi 19.1} \right) \times 0.37 + \left( \frac{\text{Total length (m) of liquid piping size at } \phi 15.9}{\text{Total length (m) of liquid piping size at } \phi 12.7} \right) \times 0.26 + \left( \frac{\text{Total length (m) of liquid piping size at } \phi 12.7}{\text{Total length (m) of liquid piping size at } \phi 9.5} \right) \times 0.18 + \left( \frac{\text{Total length (m) of liquid piping size at } \phi 9.5}{\text{Total length (m) of liquid piping size at } \phi 6.4} \right) \times 0.12 + \left( \frac{\text{Total length (m) of liquid piping size at } \phi 6.4}{\text{Total length (m) of liquid piping size at } \phi 6.4} \right) \times 0.022$			<p>Example for refrigerant branch using REFNET joint and REFNET header</p> <p>In case the outdoor unit is RXYQ34 type and the piping lengths are as at right</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>a: φ19.1 × 30m</td> <td>d: φ9.5 × 10m</td> <td>g: φ 6.4 × 10m</td> <td>j: φ 6.4 × 10m</td> </tr> <tr> <td>b: φ15.9 × 10m</td> <td>e: φ9.5 × 10m</td> <td>h: φ 6.4 × 20m</td> <td>k: φ 6.4 × 9m</td> </tr> <tr> <td>c: φ 9.5 × 10m</td> <td>f: φ9.5 × 10m</td> <td>i: φ12.7 × 10m</td> <td></td> </tr> </table> $R = \frac{30 \times 0.26}{10 \times 0.18} + \frac{10 \times 0.12}{10 \times 0.12} + \frac{40 \times 0.059}{49 \times 0.022} + 14.238 = 14.238 \text{ kg}$		a: φ19.1 × 30m	d: φ9.5 × 10m	g: φ 6.4 × 10m	j: φ 6.4 × 10m	b: φ15.9 × 10m	e: φ9.5 × 10m	h: φ 6.4 × 20m	k: φ 6.4 × 9m	c: φ 9.5 × 10m	f: φ9.5 × 10m	i: φ12.7 × 10m																																																													
a: φ19.1 × 30m	d: φ9.5 × 10m	g: φ 6.4 × 10m	j: φ 6.4 × 10m																																																																									
b: φ15.9 × 10m	e: φ9.5 × 10m	h: φ 6.4 × 20m	k: φ 6.4 × 9m																																																																									
c: φ 9.5 × 10m	f: φ9.5 × 10m	i: φ12.7 × 10m																																																																										

Appendix

363

**\*Note 1**

When the equivalent pipe length between outdoor and indoor units is 90m or more, the size of main pipes (both gas-side and liquid-side) must be increased. Depending on the length of the piping, the capacity may drop, but even in such case it is able to increase the size of main pipes.

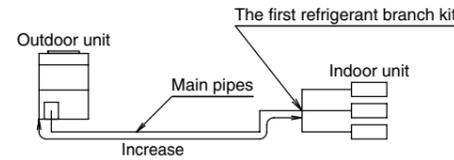

**■ Diameter of above case**

Model	Gas	Liquid
RXYQ5 Type	φ19.1	Not Increased
RXYQ8 Type	φ22.2	φ12.7
RXYQ10 Type	φ25.4*	φ12.7
RXYQ12 Type	Not Increased	φ15.9
RXYQ14 Type	Not Increased	φ15.9
RXYQ16 Type	φ31.8*	φ15.9
RXYQ18 Type	φ31.8*	φ19.1

Model	Gas	Liquid
RXYQ20 Type	φ31.8*	φ19.1
RXYQ22 Type	φ31.8*	φ19.1
RXYQ24 Type	Not Increased	φ19.1
RXYQ26 Type	φ38.1*	φ22.2
RXYQ28 Type	φ38.1*	φ22.2
RXYQ30 Type	φ38.1*	φ22.2
RXYQ32 Type	φ38.1*	φ22.2

Model	Gas	Liquid
RXYQ34 Type	φ38.1*	φ22.2
RXYQ36 Type	Not Increased	φ22.2
RXYQ38 Type	Not Increased	φ22.2
RXYQ40 Type	Not Increased	φ22.2
RXYQ42 Type	Not Increased	φ22.2
RXYQ44 Type	Not Increased	φ22.2
RXYQ46 Type	Not Increased	φ22.2

Model	Gas	Liquid
RXYQ48 Type	Not Increased	φ22.2
RXYQ50 Type	Not Increased	φ22.2
RXYQ52 Type	Not Increased	φ22.2
RXYQ54 Type	Not Increased	φ22.2

\*If available on the site, use this size. Otherwise, it can not be increased.

**\*Note 2**

Allowable length after the first refrigerant branch kit to indoor units is 40 m or less, however it can be extended up to **90 m** if all the following conditions are satisfied. (In case of “ **Branch with REFNET joint** ” )

Required Conditions	Example Drawings	
1. It is necessary to increase the pipe size between the first branch kit and the final branch kit. (Reducers must be procured on site)	$\text{⑧ } b+c+d+e+f+g+p \leq 90 \text{ m}$ increase the pipe size of b, c, d, e, f, g $\phi 9.5 \rightarrow \phi 12.7 \quad \phi 15.9 \rightarrow \phi 19.1 \quad \phi 22.2 \rightarrow \phi 25.4^* \quad \phi 34.9 \rightarrow \phi 38.1^*$ $\phi 12.7 \rightarrow \phi 15.9 \quad \phi 19.1 \rightarrow \phi 22.2 \quad \phi 28.6 \rightarrow \phi 31.8^*$	
2. For calculation of Total extension length, the actual length of above pipes must be doubled. (except main pipe and the pipes that are not increased)		
3. Indoor unit to the nearest branch kit ≤ 40 m		$h, i, j, \dots, p \leq 40 \text{ m}$
4. The difference between [Outdoor unit to the farthest indoor unit] and [Outdoor unit to the nearest indoor unit]		The farthest indoor unit $\text{⑧}$ The nearest indoor unit $\text{①}$ $(a+b+c+d+e+f+g+p) - (a+h) \leq 40 \text{ m}$
≤ 40 m		

\*If available on the site, use this size. Otherwise it can not be increased.

**\*Note 3**

If the pipe size above the REFNET header is φ34.9 or more, KHRP26M73HP is required.

## 7. Thermistor Resistance / Temperature Characteristics

Indoor unit For air suction R1T  
For liquid pipe R2T  
For gas pipe R3T

Outdoor unit for fin thermistor R1T

Outdoor unit For outdoor air R1T  
For coil R2T  
For suction pipe R4T  
For Receiver gas pipe R5T  
For Receiver outlet liquid pipe R6T

(kΩ)

T°C	0.0
-10	-
-8	-
-6	88.0
-4	79.1
-2	71.1
0	64.1
2	57.8
4	52.3
6	47.3
8	42.9
10	38.9
12	35.3
14	32.1
16	29.2
18	26.6
20	24.3
22	22.2
24	20.3
26	18.5
28	17.0
30	15.6
32	14.2
34	13.1
36	12.0
38	11.1
40	10.3
42	9.5
44	8.8
46	8.2
48	7.6
50	7.0
52	6.7
54	6.0
56	5.5
58	5.2
60	4.79
62	4.46
64	4.15
66	3.87
68	3.61
70	3.37
72	3.15
74	2.94
76	2.75
78	2.51
80	2.41
82	2.26
84	2.12
86	1.99
88	1.87
90	1.76
92	1.65
94	1.55
96	1.46
98	1.38

T°C	0.0	0.5
-20	197.81	192.08
-19	186.53	181.16
-18	175.97	170.94
-17	166.07	161.36
-16	156.80	152.38
-15	148.10	143.96
-14	139.94	136.05
-13	132.28	128.63
-12	125.09	121.66
-11	118.34	115.12
-10	111.99	108.96
-9	106.03	103.18
-8	100.41	97.73
-7	95.14	92.61
-6	90.17	87.79
-5	85.49	83.25
-4	81.08	78.97
-3	76.93	74.94
-2	73.01	71.14
-1	69.32	67.56
0	65.84	64.17
1	62.54	60.96
2	59.43	57.94
3	56.49	55.08
4	53.71	52.38
5	51.09	49.83
6	48.61	47.42
7	46.26	45.14
8	44.05	42.98
9	41.95	40.94
10	39.96	39.01
11	38.08	37.18
12	36.30	35.45
13	34.62	33.81
14	33.02	32.25
15	31.50	30.77
16	30.06	29.37
17	28.70	28.05
18	27.41	26.78
19	26.18	25.59
20	25.01	24.45
21	23.91	23.37
22	22.85	22.35
23	21.85	21.37
24	20.90	20.45
25	20.00	19.56
26	19.14	18.73
27	18.32	17.93
28	17.54	17.17
29	16.80	16.45
30	16.10	15.76

T°C	0.0	0.5
30	16.10	15.76
31	15.43	15.10
32	14.79	14.48
33	14.18	13.88
34	13.59	13.31
35	13.04	12.77
36	12.51	12.25
37	12.01	11.76
38	11.52	11.29
39	11.06	10.84
40	10.63	10.41
41	10.21	10.00
42	9.81	9.61
43	9.42	9.24
44	9.06	8.88
45	8.71	8.54
46	8.37	8.21
47	8.05	7.90
48	7.75	7.60
49	7.46	7.31
50	7.18	7.04
51	6.91	6.78
52	6.65	6.53
53	6.41	6.53
54	6.65	6.53
55	6.41	6.53
56	6.18	6.06
57	5.95	5.84
58	5.74	5.43
59	5.14	5.05
60	4.96	4.87
61	4.79	4.70
62	4.62	4.54
63	4.46	4.38
64	4.30	4.23
65	4.16	4.08
66	4.01	3.94
67	3.88	3.81
68	3.75	3.68
69	3.62	3.56
70	3.50	3.44
71	3.38	3.32
72	3.27	3.21
73	3.16	3.11
74	3.06	3.01
75	2.96	2.91
76	2.86	2.82
77	2.77	2.72
78	2.68	2.64
79	2.60	2.55
80	2.51	2.47

**Outdoor Unit  
Thermistors for  
Discharge Pipe  
(R3T, R31~33T)**

						(kΩ)		
T°C	0.0	0.5	T°C	0.0	0.5	T°C	0.0	0.5
0	640.44	624.65	50	72.32	70.96	100	13.35	13.15
1	609.31	594.43	51	69.64	68.34	101	12.95	12.76
2	579.96	565.78	52	67.06	65.82	102	12.57	12.38
3	552.00	538.63	53	64.60	63.41	103	12.20	12.01
4	525.63	512.97	54	62.24	61.09	104	11.84	11.66
5	500.66	488.67	55	59.97	58.87	105	11.49	11.32
6	477.01	465.65	56	57.80	56.75	106	11.15	10.99
7	454.60	443.84	57	55.72	54.70	107	10.83	10.67
8	433.37	423.17	58	53.72	52.84	108	10.52	10.36
9	413.24	403.57	59	51.98	50.96	109	10.21	10.06
10	394.16	384.98	60	49.96	49.06	110	9.92	9.78
11	376.05	367.35	61	48.19	47.33	111	9.64	9.50
12	358.88	350.62	62	46.49	45.67	112	9.36	9.23
13	342.58	334.74	63	44.86	44.07	113	9.10	8.97
14	327.10	319.66	64	43.30	42.54	114	8.84	8.71
15	312.41	305.33	65	41.79	41.06	115	8.59	8.47
16	298.45	291.73	66	40.35	39.65	116	8.35	8.23
17	285.18	278.80	67	38.96	38.29	117	8.12	8.01
18	272.58	266.51	68	37.63	36.98	118	7.89	7.78
19	260.60	254.72	69	36.34	35.72	119	7.68	7.57
20	249.00	243.61	70	35.11	34.51	120	7.47	7.36
21	238.36	233.14	71	33.92	33.35	121	7.26	7.16
22	228.05	223.08	72	32.78	32.23	122	7.06	6.97
23	218.24	213.51	73	31.69	31.15	123	6.87	6.78
24	208.90	204.39	74	30.63	30.12	124	6.69	6.59
25	200.00	195.71	75	29.61	29.12	125	6.51	6.42
26	191.53	187.44	76	28.64	28.16	126	6.33	6.25
27	183.46	179.57	77	27.69	27.24	127	6.16	6.08
28	175.77	172.06	78	26.79	26.35	128	6.00	5.92
29	168.44	164.90	79	25.91	25.49	129	5.84	5.76
30	161.45	158.08	80	25.07	24.66	130	5.69	5.61
31	154.79	151.57	81	24.26	23.87	131	5.54	5.46
32	148.43	145.37	82	23.48	23.10	132	5.39	5.32
33	142.37	139.44	83	22.73	22.36	133	5.25	5.18
34	136.59	133.79	84	22.01	21.65	134	5.12	5.05
35	131.06	128.39	85	21.31	20.97	135	4.98	4.92
36	125.79	123.24	86	20.63	20.31	136	4.86	4.79
37	120.76	118.32	87	19.98	19.67	137	4.73	4.67
38	115.95	113.62	88	19.36	19.05	138	4.61	4.55
39	111.35	109.13	89	18.75	18.46	139	4.49	4.44
40	106.96	104.84	90	18.17	17.89	140	4.38	4.32
41	102.76	100.73	91	17.61	17.34	141	4.27	4.22
42	98.75	96.81	92	17.07	16.80	142	4.16	4.11
43	94.92	93.06	93	16.54	16.29	143	4.06	4.01
44	91.25	89.47	94	16.04	15.79	144	3.96	3.91
45	87.74	86.04	95	15.55	15.31	145	3.86	3.81
46	84.38	82.75	96	15.08	14.85	146	3.76	3.72
47	81.16	79.61	97	14.62	14.40	147	3.67	3.62
48	78.09	76.60	98	14.18	13.97	148	3.58	3.54
49	75.14	73.71	99	13.76	13.55	149	3.49	3.45
50	72.32	70.96	100	13.35	13.15	150	3.41	3.37

# 8. Pressure Sensor

$$P_H = 1.38V - 0.69$$

$$P_L = 0.57V - 0.28$$

$P_H$  : High pressure (MPa)

$V_L$  : Low pressure (MPa)

$V$  : Voltage (V)

$P_H$  : Detected Pressure [High Side] MPa


$P_L$  : Detected Pressure [Low Side] MPa

$V_H$  : Output Voltage [High Side]  $V_{DC}$

$V_L$  : Output Voltage [Low Side]  $V_{DC}$

Detected Pressure

$P_H, P_L$   
(kg/cm<sup>2</sup>) MPa

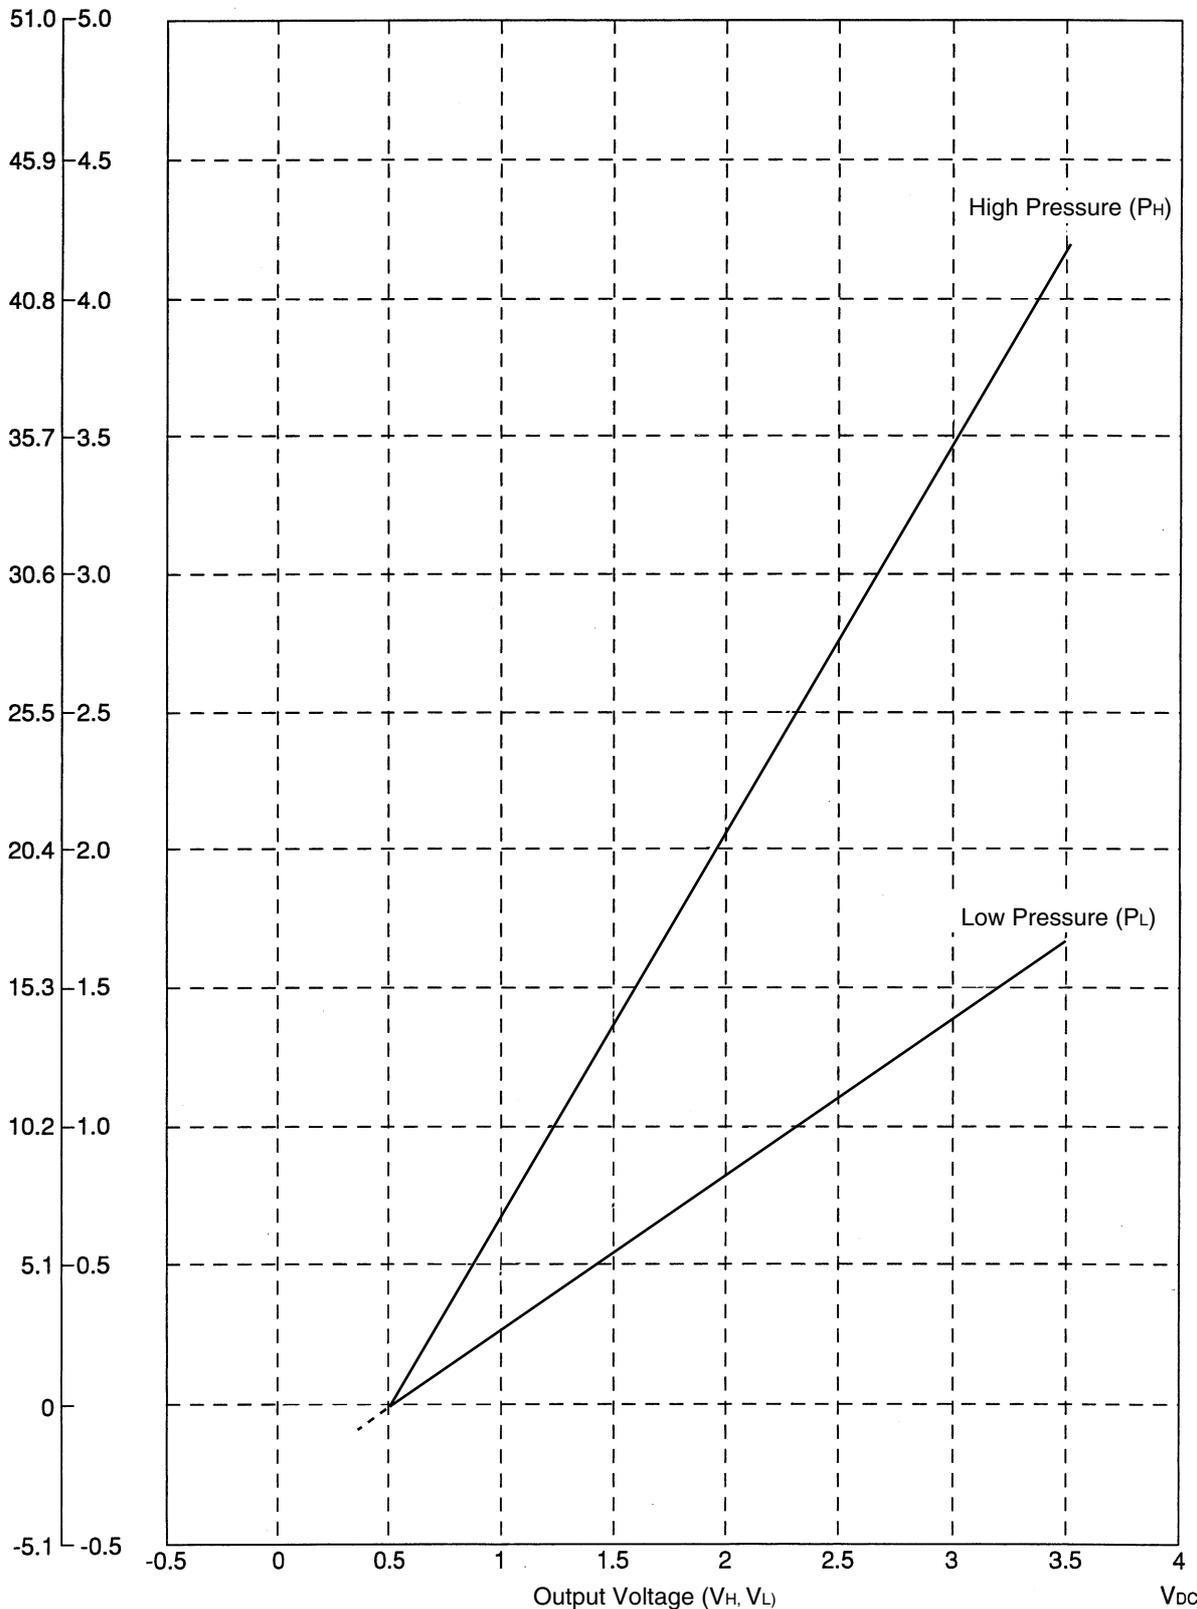

(V3053)

# 9. Method of Checking The Inverter's Power Transistors and Diode Modules

## 9.1 Method of Checking The Inverter's Power Transistors and Diode Modules

### Checking failures in power semiconductors mounted on inverter PC board

Check the power semiconductors mounted on the inverter PC board by the use of a multiple tester.

#### <Items to be prepared>

- Multiple tester : Prepare the analog type of multiple tester.  
For the digital type of multiple tester, those with diode check function are available for the checking.


#### <Test points>

- Turn OFF the power supply. Then, after a lapse of 10 minutes or more, make measurement of resistance.


#### <Preparation>

- To make measurement, disconnect all connectors and terminals.

### Inverter PC board

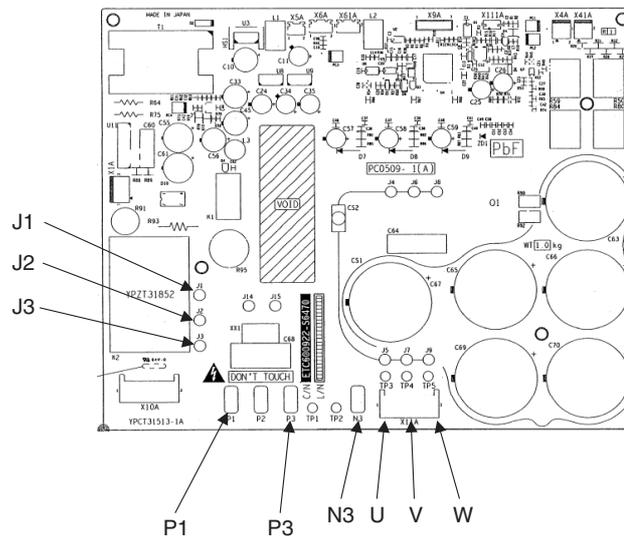

### Electronic circuit

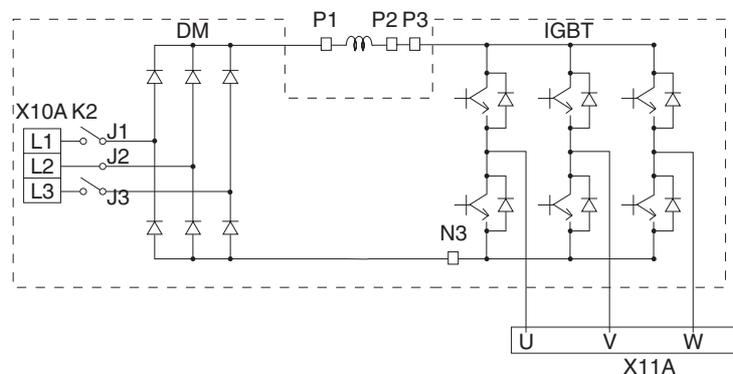

(V2895)

- According to the checking aforementioned, it is probed that the malfunction results from the faulty inverter. The following section describes supposed causes of the faulty inverter.
    - Faulty compressor (ground leakage)
    - Faulty fan motor (ground leakage)
    - Entry of conductive foreign particles
    - Abnormal voltage (e.g. overvoltage, surge (thunder), or unbalanced voltage)
- In order to replace the faulty inverter, be sure to check for the points aforementioned.

### 1. Power module checking

When using the analog type of multiple tester, make measurement in resistance measurement mode in the x1k $\Omega$  range.

No.	Measuring point		Criterion	Remark
	+	-		
1	P3	U	2 to 15k $\Omega$	It may take time to determine the resistance due to capacitor charge or else.
2	P3	V		
3	P3	W		
4	U	P3	Not less than 15k $\Omega$ (including)	
5	V	P3		
6	W	P3		
7	N3	U		
8	N3	V		
9	N3	W		
10	U	N3	2 to 15k $\Omega$	
11	V	N3		
12	W	N3		

When using the digital type of multiple tester, make measurement in diode check mode (  $\rightarrow|$  ).

No.	Measuring point		Criterion	Remark
	+	-		
1	P3	U	Not less than 1.2V (including)	It may take time to determine the voltage due to capacitor charge or else.
2	P3	V		
3	P3	W		
4	U	P3	0.3 to 0.7V	
5	V	P3		
6	W	P3		
7	N3	U		
8	N3	V		
9	N3	W		
10	U	N3	Not less than 1.2V (including)	
11	V	N3		
12	W	N3		

### 2. Diode module checking

When using the analog type of multiple tester, make measurement in resistance measurement mode in the x1k $\Omega$  range.

No.	Measuring point		Criterion	Remark
	+	-		
1	P1	J1	2 to 15k $\Omega$	It may take time to determine the resistance due to capacitor charge or else.
2	P1	J2		
3	P1	J3		
4	J1	P1	Not less than 15k $\Omega$ (including)	
5	J2	P1		
6	J3	P1		
7	N3	J1		
8	N3	J2		
9	N3	J3		
10	J1	N3	2 to 15k $\Omega$	
11	J2	N3		
12	J3	N3		

When using the digital type of multiple tester, make measurement in diode check mode (  $\rightarrow|$  ).

No.	Measuring point		Criterion	Remark
	+	-		
1	P1	J1	Not less than 1.2V (including)	It may take time to determine the voltage due to capacitor charge or else.
2	P1	J2		
3	P1	J3		
4	J1	P1	0.3 to 0.7V	
5	J2	P1		
6	J3	P1		
7	N3	J1		
8	N3	J2		
9	N3	J3		
10	J1	N3	Not less than 1.2V (including)	
11	J2	N3		
12	J3	N3		



# Part 8

## Precautions for New Refrigerant (R-410A)

1. Precautions for New Refrigerant (R-410A) .....	372
1.1 Outline .....	372
1.2 Refrigerant Cylinders.....	374
1.3 Service Tools.....	375

# 1. Precautions for New Refrigerant (R-410A)


## 1.1 Outline

### 1.1.1 About Refrigerant R-410A

- Characteristics of new refrigerant, R-410A
  1. Performance  
Almost the same performance as R-22 and R-407C
  2. Pressure  
Working pressure is approx. 1.4 times more than R-22 and R-407C.
  3. Refrigerant composition  
Few problems in composition control, since it is a Quasi-azeotropic mixture refrigerant.

	HFC units (Units using new refrigerants)		HCFC units
Refrigerant name	R-407C	R-410A	R-22
Composing substances	Non-azeotropic mixture of HFC32, HFC125 and HFC134a (*1)	Quasi-azeotropic mixture of HFC32 and JFC125 (*1)	Single-component refrigerant
Design pressure	3.2 MPa (gauge pressure) = 32.6 kgf/cm <sup>2</sup>	4.0 MPa (gauge pressure) = 40.8 kgf/cm <sup>2</sup>	2.75MPa (gauge pressure) = 28.0 kgf/cm <sup>2</sup>
Refrigerant oil	Synthetic oil (Ether)		Mineral oil (Suniso)
Ozone destruction factor (ODP)	0	0	0.05
Combustibility	None	None	None
Toxicity	None	None	None

- ★1. Non-azeotropic mixture refrigerant: mixture of two or more refrigerants having different boiling points.
- ★2. Quasi-azeotropic mixture refrigerant: mixture of two or more refrigerants having similar boiling points.
- ★3. The design pressure is different at each product. Please refer to the installation manual for each product.  
(Reference) 1 MPa ≒ 10.19716 kgf / cm<sup>2</sup>

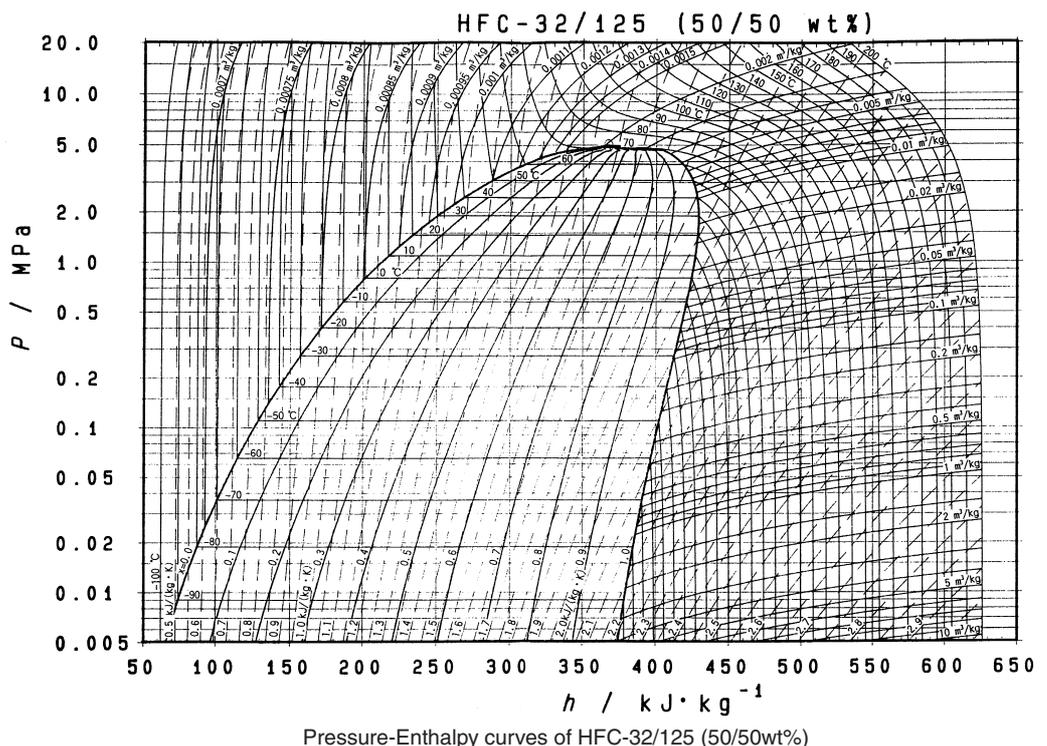


■ Thermodynamic characteristic of R-410A

DAIREP ver2.0

Temperature (°C)	Steam pressure (kPa)		Density (kg/m <sup>3</sup> )		Specific heat at constant pressure (kJ/kgK)		Specific enthalpy (kJ/kg)		Specific entropy (kJ/KgK)	
	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor	Liquid	Vapor
-70	36.13	36.11	1410.7	1.582	1.372	0.695	100.8	390.6	0.649	2.074
-68	40.83	40.80	1404.7	1.774	1.374	0.700	103.6	391.8	0.663	2.066
-66	46.02	45.98	1398.6	1.984	1.375	0.705	106.3	393.0	0.676	2.058
-64	51.73	51.68	1392.5	2.213	1.377	0.710	109.1	394.1	0.689	2.051
-62	58.00	57.94	1386.4	2.463	1.378	0.715	111.9	395.3	0.702	2.044
-60	64.87	64.80	1380.2	2.734	1.379	0.720	114.6	396.4	0.715	2.037
-58	72.38	72.29	1374.0	3.030	1.380	0.726	117.4	397.6	0.728	2.030
-56	80.57	80.46	1367.8	3.350	1.382	0.732	120.1	398.7	0.741	2.023
-54	89.49	89.36	1361.6	3.696	1.384	0.737	122.9	399.8	0.754	2.017
-52	99.18	99.03	1355.3	4.071	1.386	0.744	125.7	400.9	0.766	2.010
-51.58	101.32	101.17	1354.0	4.153	1.386	0.745	126.3	401.1	0.769	2.009
-50	109.69	109.51	1349.0	4.474	1.388	0.750	128.5	402.0	0.779	2.004
-48	121.07	120.85	1342.7	4.909	1.391	0.756	131.2	403.1	0.791	1.998
-46	133.36	133.11	1336.3	5.377	1.394	0.763	134.0	404.1	0.803	1.992
-44	146.61	146.32	1330.0	5.880	1.397	0.770	136.8	405.2	0.816	1.987
-42	160.89	160.55	1323.5	6.419	1.401	0.777	139.6	406.2	0.828	1.981
-40	176.24	175.85	1317.0	6.996	1.405	0.785	142.4	407.3	0.840	1.976
-38	192.71	192.27	1310.5	7.614	1.409	0.792	145.3	408.3	0.852	1.970
-36	210.37	209.86	1304.0	8.275	1.414	0.800	148.1	409.3	0.864	1.965
-34	229.26	228.69	1297.3	8.980	1.419	0.809	150.9	410.2	0.875	1.960
-32	249.46	248.81	1290.6	9.732	1.424	0.817	153.8	411.2	0.887	1.955
-30	271.01	270.28	1283.9	10.53	1.430	0.826	156.6	412.1	0.899	1.950
-28	293.99	293.16	1277.1	11.39	1.436	0.835	159.5	413.1	0.911	1.946
-26	318.44	317.52	1270.2	12.29	1.442	0.844	162.4	414.0	0.922	1.941
-24	344.44	343.41	1263.3	13.26	1.448	0.854	165.3	414.9	0.934	1.936
-22	372.05	370.90	1256.3	14.28	1.455	0.864	168.2	415.7	0.945	1.932
-20	401.34	400.06	1249.2	15.37	1.461	0.875	171.1	416.6	0.957	1.927
-18	432.36	430.95	1242.0	16.52	1.468	0.886	174.1	417.4	0.968	1.923
-16	465.20	463.64	1234.8	17.74	1.476	0.897	177.0	418.2	0.980	1.919
-14	499.91	498.20	1227.5	19.04	1.483	0.909	180.0	419.0	0.991	1.914
-12	536.58	534.69	1220.0	20.41	1.491	0.921	182.9	419.8	1.003	1.910
-10	575.26	573.20	1212.5	21.86	1.499	0.933	185.9	420.5	1.014	1.906
-8	616.03	613.78	1204.9	23.39	1.507	0.947	189.0	421.2	1.025	1.902
-6	658.97	656.52	1197.2	25.01	1.516	0.960	192.0	421.9	1.036	1.898
-4	704.15	701.49	1189.4	26.72	1.524	0.975	195.0	422.6	1.048	1.894
-2	751.64	748.76	1181.4	28.53	1.533	0.990	198.1	423.2	1.059	1.890
0	801.52	798.41	1173.4	30.44	1.543	1.005	201.2	423.8	1.070	1.886
2	853.87	850.52	1165.3	32.46	1.552	1.022	204.3	424.4	1.081	1.882
4	908.77	905.16	1157.0	34.59	1.563	1.039	207.4	424.9	1.092	1.878
6	966.29	962.42	1148.6	36.83	1.573	1.057	210.5	425.5	1.103	1.874
8	1026.5	1022.4	1140.0	39.21	1.584	1.076	213.7	425.9	1.114	1.870
10	1089.5	1085.1	1131.3	41.71	1.596	1.096	216.8	426.4	1.125	1.866
12	1155.4	1150.7	1122.5	44.35	1.608	1.117	220.0	426.8	1.136	1.862
14	1224.3	1219.2	1113.5	47.14	1.621	1.139	223.2	427.2	1.147	1.859
16	1296.2	1290.8	1104.4	50.09	1.635	1.163	226.5	427.5	1.158	1.855
18	1371.2	1365.5	1095.1	53.20	1.650	1.188	229.7	427.8	1.169	1.851
20	1449.4	1443.4	1085.6	56.48	1.666	1.215	233.0	428.1	1.180	1.847
22	1530.9	1524.6	1075.9	59.96	1.683	1.243	236.4	428.3	1.191	1.843
24	1615.8	1609.2	1066.0	63.63	1.701	1.273	239.7	428.4	1.202	1.839
26	1704.2	1697.2	1055.9	67.51	1.721	1.306	243.1	428.6	1.214	1.834
28	1796.2	1788.9	1045.5	71.62	1.743	1.341	246.5	428.6	1.225	1.830
30	1891.9	1884.2	1034.9	75.97	1.767	1.379	249.9	428.6	1.236	1.826
32	1991.3	1983.2	1024.1	80.58	1.793	1.420	253.4	428.6	1.247	1.822
34	2094.5	2086.2	1012.9	85.48	1.822	1.465	256.9	428.4	1.258	1.817
36	2201.7	2193.1	1001.4	90.68	1.855	1.514	260.5	428.3	1.269	1.813
38	2313.0	2304.0	989.5	96.22	1.891	1.569	264.1	428.0	1.281	1.808
40	2428.4	2419.2	977.3	102.1	1.932	1.629	267.8	427.7	1.292	1.803
42	2548.1	2538.6	964.6	108.4	1.979	1.696	271.5	427.2	1.303	1.798
44	2672.2	2662.4	951.4	115.2	2.033	1.771	275.3	426.7	1.315	1.793
46	2800.7	2790.7	937.7	122.4	2.095	1.857	279.2	426.1	1.327	1.788
48	2933.7	2923.6	923.3	130.2	2.168	1.955	283.2	425.4	1.339	1.782
50	3071.5	3061.2	908.2	138.6	2.256	2.069	287.3	424.5	1.351	1.776
52	3214.0	3203.6	892.2	147.7	2.362	2.203	291.5	423.5	1.363	1.770
54	3361.4	3351.0	875.1	157.6	2.493	2.363	295.8	422.4	1.376	1.764
56	3513.8	3503.5	856.8	168.4	2.661	2.557	300.3	421.0	1.389	1.757
58	3671.3	3661.2	836.9	180.4	2.883	2.799	305.0	419.4	1.403	1.749
60	3834.1	3824.2	814.9	193.7	3.191	3.106	310.0	417.6	1.417	1.741
62	4002.1	3992.7	790.1	208.6	3.650	3.511	315.3	415.5	1.433	1.732
64	4175.7	4166.8	761.0	225.6	4.415	4.064	321.2	413.0	1.450	1.722

## 1.2 Refrigerant Cylinders

- Cylinder specifications
  - The cylinder is painted refrigerant color (pink).
  - The cylinder valve is equipped with a siphon tube.

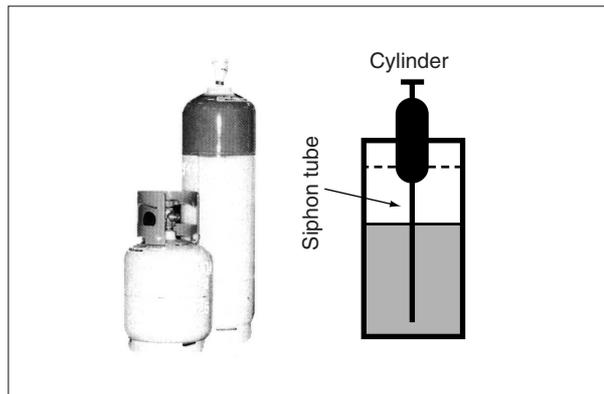

Refrigerant can be charged in liquid state with cylinder in upright position.

**Caution:** Do not lay cylinder on its side during charging, since it cause refrigerant in gas state to enter the system.

- Handling of cylinders
  - (1) Laws and regulations
 

R-410A is liquefied gas, and the High-Pressure Gas Safety Law must be observed in handling them. Before using, refer to the High-Pressure Gas Safety Law.

The Law stipulates standards and regulations that must be followed to prevent accidents with high-pressure gases. Be sure to follow the regulations.
  - (2) Handling of vessels
 

Since R-410A is high-pressure gas, it is contained in high-pressure vessels.

Although those vessels are durable and strong, careless handling can cause damage that can lead to unexpected accidents. Do not drop vessels, let them fall, apply impact or roll them on the ground.
  - (3) Storage
 

Although R-410A is not flammable, it must be stored in a well-ventilated, cool, and dark place in the same way as any other high-pressure gases.

It should also be noted that high-pressure vessels are equipped with safety devices that releases gas when the ambient temperature reaches more than a certain level (fusible plug melts) and when the pressure exceeds a certain level (spring-type safety valve operates).

## 1.3 Service Tools

R-410A is used under higher working pressure, compared to previous refrigerants (R-22,R-407C). Furthermore, the refrigerating machine oil has been changed from Suniso oil to Ether oil, and if oil mixing is occurred, sludge results in the refrigerants and causes other problems. Therefore, gauge manifolds and charge hoses that are used with a previous refrigerant (R-22,R-407C) can not be used for products that use new refrigerants.

Be sure to use dedicated tools and devices.

### ■ Tool compatibility

Tool	Compatibility			Reasons for change
	HFC		HCFC	
	R-410A	R-407C	R-22	
Gauge manifold Charge hose	×			<ul style="list-style-type: none"> <li>Do not use the same tools for R-22 and R-410A.</li> <li>Thread specification differs for R-410A and R-407C.</li> </ul>
Charging cylinder	×		○	<ul style="list-style-type: none"> <li>Weighting instrument used for HFCs.</li> </ul>
Gas detector	○		×	<ul style="list-style-type: none"> <li>The same tool can be used for HFCs.</li> </ul>
Vacuum pump (pump with reverse flow preventive function)		○		<ul style="list-style-type: none"> <li>To use existing pump for HFCs, vacuum pump adaptor must be installed.</li> </ul>
Weighting instrument		○		
Charge mouthpiece		×		<ul style="list-style-type: none"> <li>Seal material is different between R-22 and HFCs.</li> <li>Thread specification is different between R-410A and others.</li> </ul>
Flaring tool (Clutch type)		○		<ul style="list-style-type: none"> <li>For R-410A, flare gauge is necessary.</li> </ul>
Torque wrench		○		<ul style="list-style-type: none"> <li>Torque-up for 1/2 and 5/8</li> </ul>
Pipe cutter		○		
Pipe expander		○		
Pipe bender		○		
Pipe assembling oil		×		<ul style="list-style-type: none"> <li>Due to refrigerating machine oil change. (No Suniso oil can be used.)</li> </ul>
Refrigerant recovery device	Check your recovery device.			
Refrigerant piping	See the chart below.			<ul style="list-style-type: none"> <li>Only φ19.1 is changed to 1/2H material while the previous material is "O".</li> </ul>


As for the charge mouthpiece and packing, 1/2UNF20 is necessary for mouthpiece size of charge hose.

### ■ Copper tube material and thickness

Pipe size	Ve-up		Ve-upII	
	R-407C		R-410A	
	Material	Thickness t (mm)	Material	Thickness t (mm)
φ6.4	O	0.8	O	0.8
φ9.5	O	0.8	O	0.8
φ12.7	O	0.8	O	0.8
φ15.9	O	1.0	O	1.0
φ19.1	O	1.0	1/2H	1.0
φ22.2	1/2H	1.0	1/2H	1.0
φ25.4	1/2H	1.0	1/2H	1.0
φ28.6	1/2H	1.0	1/2H	1.0
φ31.8	1/2H	1.2	1/2H	1.1
φ38.1	1/2H	1.4	1/2H	1.4
φ44.5	1/2H	1.6	1/2H	1.6

\* O: Soft (Annealed)  
H: Hard (Drawn)

1. Flaring tool

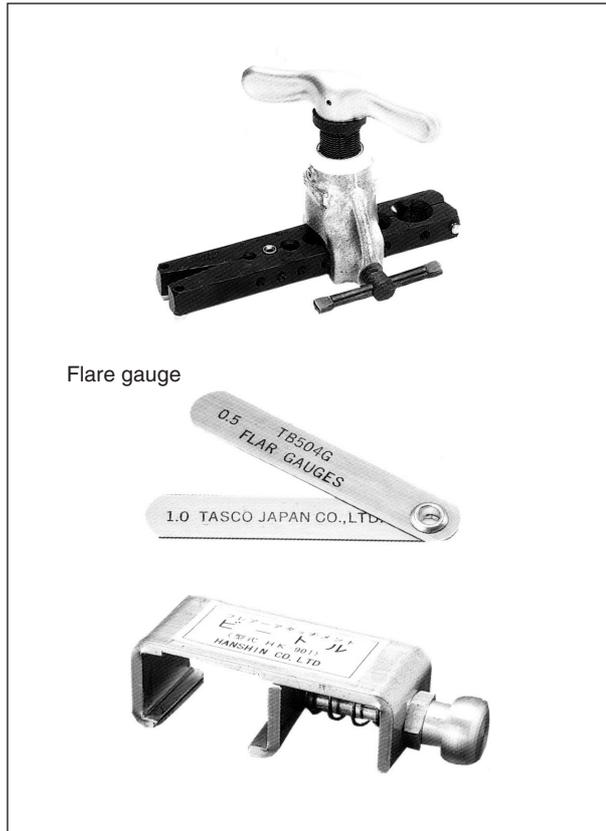

■ Specifications


- Dimension A

Unit:mm

Nominal size	Tube O.D. Do	A <sup>+0</sup> <sub>-0.4</sub>	
		Class-2 (R-410A)	Class-1 (Conventional)
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	24.0	23.3

■ Differences

- Change of dimension A

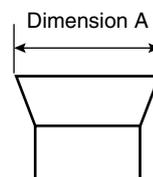

For class-1: R-407C  
For class-2: R-410A

Conventional flaring tools can be used when the work process is changed.

(change of work process)

Previously, a pipe extension margin of 0 to 0.5mm was provided for flaring. For R-410A air conditioners, perform pipe flaring with a pipe extension margin of 1.0 to 1.5mm.

(For clutch type only)

Conventional tool with pipe extension margin adjustment can be used.

## 2. Torque wrench



### ■ Specifications

- Dimension B

Unit:mm


Nominal size	Class-1	Class-2	Previous
1/2	24	26	24
5/8	27	29	27

No change in tightening torque

No change in pipes of other sizes


### ■ Differences

- Change of dimension B  
Only 1/2", 5/8" are extended

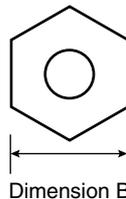

For class-1: R-407C  
For class-2: R-410A

## 3. Vacuum pump with check valve

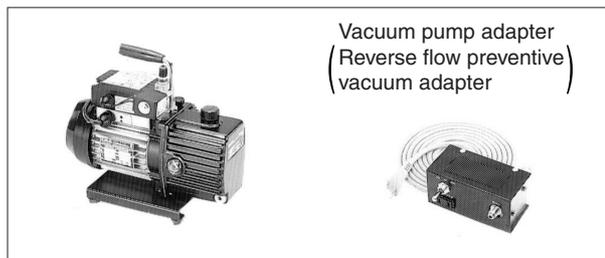

### ■ Specifications

- Discharge speed  
50 l/min (50Hz)  
60 l/min (60Hz)
- Suction port UNF7/16-20(1/4 Flare)  
UNF1/2-20(5/16 Flare) with adapter
- Maximum degree of vacuum  
Select a vacuum pump which is able to keep the vacuum degree of the system in excess of -100.7 kPa (5 torr - 755 mmHg).

### ■ Differences

- Equipped with function to prevent reverse oil flow
- Previous vacuum pump can be used by installing adapter.

#### 4. Leak tester




- Specifications
  - Hydrogen detecting type, etc.
  - Applicable refrigerants  
R-410A, R-407C, R-404A, R-507A, R-134a, etc.
- Differences
  - Previous testers detected chlorine. Since HFCs do not contain chlorine, new tester detects hydrogen.

#### 5. Refrigerant oil (Air compal)



- Specifications
  - Contains synthetic oil, therefore it can be used for piping work of every refrigerant cycle.
  - Offers high rust resistance and stability over long period of time.
- Differences
  - Can be used for R-410A and R-22 units.


#### 6. Gauge manifold for R-410A

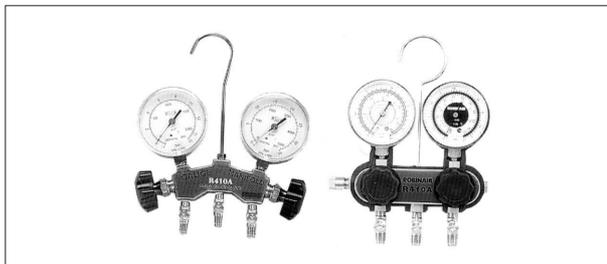

- Specifications
  - High pressure gauge  
- 0.1 to 5.3 MPa (-76 cmHg to 53 kg/cm<sup>2</sup>)
  - Low pressure gauge  
- 0.1 to 3.8 MPa (-76 cmHg to 38 kg/cm<sup>2</sup>)
  - 1/4" → 5/16" (2min → 2.5min)
  - No oil is used in pressure test of gauges.  
→ For prevention of contamination


- Temperature scale indicates the relationship between pressure and temperature in gas saturated state.
- Differences
  - Change in pressure
  - Change in service port diameter

### 7. Charge hose for R-410A

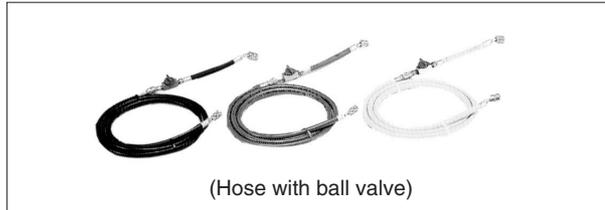

- Specifications
  - Working pressure 5.08 MPa (51.8 kg/cm<sup>2</sup>)
  - Rupture pressure 25.4 MPa (259 kg/cm<sup>2</sup>)
  - Available with and without hand-operate valve that prevents refrigerant from outflow.
- Differences
  - Pressure proof hose
  - Change in service port diameter
  - Use of nylon coated material for HFC resistance

### 8. Charging cylinder

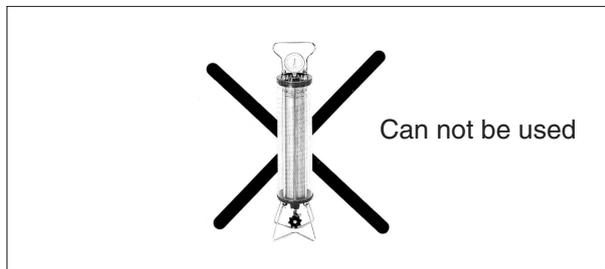

- Specifications
  - Use weigher for refrigerant charge listed below to charge directly from refrigerant cylinder.
- Differences
  - The cylinder can not be used for mixed refrigerant since mixing ratio is changed during charging.

When R-410A is charged in liquid state using charging cylinder, foaming phenomenon is generated inside charging cylinder.

### 9. Weigher for refrigerant charge



- Specifications
  - High accuracy
    - TA101A (for 10-kg cylinder) =  $\pm 2\text{g}$
    - TA101B (for 20-kg cylinder) =  $\pm 5\text{g}$
  - Equipped with pressure-resistant sight glass to check liquid refrigerant charging.
  - A manifold with separate ports for HFCs and previous refrigerants is equipped as standard accessories.
- Differences
  - Measurement is based on weight to prevent change of mixing ratio during charging.

### 10. Charge mouthpiece



- Specifications
  - For R-410A, 1/4" → 5/16" (2min → 2.5min)
  - Material is changed from CR to H-NBR.
- Differences
  - Change of thread specification on hose connection side (For the R-410A use)
  - Change of sealer material for the HFCs use.

# Index

<b>A</b>		
A0	220	
A1	221	
A3	222	
A6	224	
A7	225	
A9	227	
Abnormal Discharge Pipe Temperature	248	
Abnormal Outdoor Fan Motor Signal	250	
About Refrigerant R-410A	372	
Actuation of High Pressure Switch	236	
Actuation of Low Pressure Sensor	238	
Address Duplication of Centralized Controller	290	
Address Duplication, Improper Setting	302	
AF	229	
AJ	230	
Applicable range of Field setting	165	
Auto Restart after Power Failure Reset	167	
<b>B</b>		
Basic Control	94	
<b>C</b>		
C4	231	
C5	232	
C9	233	
Centralized Control Group No. Setting	170	
Check No. 2	311	
Check Operation not executed	280	
CJ	234	
Compressor Motor Overcurrent/Lock	242	
Compressor PI Control	95	
Contents of Control Modes	172	
Cool / Heat Mode Switching	186	
Current Sensor Malfunction	252	
<b>D</b>		
Defrosting Operation	113	
Demand Operation	128	
Detailed Explanation of Setting Modes	166	
Discharge Pipe Protection Control	120	
Display "Under Centralized Control" Blinks (Repeats Double Blink)	310	
Display "Under Centralized Control" Blinks (Repeats Single Blink)	307	
Drain Level above Limit	229	
Drain Pump Control	129	
<b>E</b>		
E1	235	
E3	236	
E4	238	
E5	240	
E6	242	
E7	243	
E9	246	
Electronic Expansion Valve PI Control	107	
Emergency Operation	124	
Error of External Protection Device	220	
<b>F</b>		
F3	248	
F6	249	
Fan Motor (M1F) Lock, Overload	224	
Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board	274	
Field Setting	161	
Field Setting from Outdoor Unit	174	
List of Field Setting Items	174	
Setting by pushbutton switches	178	
Field Setting from Remote Controller	161	
Filter Sign Setting	166	
Freeze Prevention	136	
Functional Parts Layout	69	
RXYQ10P, 12P	71	
RXYQ14P, 16P, 18P	73	
RXYQ5P	69	
RXYQ8P	70	
<b>H</b>		
H7	250	
H9	251	
Heating Operation Prohibition	128	
High Pressure Protection Control	118	
<b>I</b>		
Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller	288	
Improper Combination of Optional Controllers for Centralized Control	300	
Injection Control (only for RXYQ5P)	122	
Inverter Compressor Abnormal	262	
Inverter Compressor Motor Lock	240	
Inverter Current Abnormal	264	
Inverter Over-Ripple Protection	271	
Inverter Protection Control	121	
Inverter Start up Error	266	
<b>J</b>		
J2	252	
J3	253	
J5	254	
J6	255	
J7	256	
J9	257	
JA	258	
JC	259	
<b>L</b>		
L4	260	

L5 .....	262
L8 .....	264
L9 .....	266
LC .....	268
List of Electrical and Functional Parts .....	348
Indoor Unit .....	351
Outdoor Unit .....	348
Louver Control for Preventing Ceiling Dirt .....	131
Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure .....	275
Low Pressure Protection Control .....	119
<b>M</b>	
M1 .....	297
M8 .....	298
MA .....	300
Malfunction code indication by outdoor unit PC board .....	216
Malfunction of Capacity Determination Device .....	230
Malfunction of Discharge Pipe Thermistor (R3, R31~33T) .....	253
Malfunction of Drain Level Control System (S1L) .....	222
Malfunction of High Pressure Sensor .....	258
Malfunction of Inverter Radiating Fin Temperature Rise .....	260
Malfunction of Inverter Radiating Fin Temperature Rise Sensor .....	272
Malfunction of Liquid Pipe Thermistor (R6T) .....	256
Malfunction of Low Pressure Sensor .....	259
Malfunction of Moving Part of Electronic Expansion Valve (Y1E) .....	227
Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y2E) .....	246
Malfunction of Outdoor Unit Fan Motor .....	243
Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T) .....	257
Malfunction of Swing Flap Motor (M1S) .....	225
Malfunction of System, Refrigerant System Address Undefined .....	295
Malfunction of Thermistor (R1T) for Suction Air .....	233
Malfunction of Thermistor (R2T) for Heat Exchanger .....	231
Malfunction of Thermistor (R2T), (R7T) for Suction Pipe .....	254
Malfunction of Thermistor (R3T) for Gas Pipes .....	232
Malfunction of Thermistor (R4T) for Outdoor Unit Heat Exchanger .....	255
Malfunction of Thermostat Sensor in Remote Controller .....	234
Malfunction of Transmission Between Centralized Controller and Indoor Unit .....	291
Malfunction of Transmission Between Indoor and Outdoor Units in the Same System .....	287
Malfunction of Transmission Between Indoor Units .....	281
Malfunction of Transmission Between Inverter and Control PC Board .....	268
Malfunction of Transmission Between Main and Sub Remote Controllers .....	286
Malfunction of Transmission Between Optional Controllers for Centralized Control .....	298
Malfunction of Transmission Between Outdoor Units .....	284
Malfunction of Transmission Between Remote Controller and Indoor Unit .....	283
MC .....	302
Method of Checking The Inverter's Power Transistors and Diode Modules .....	368
<b>O</b>	
Oil Return Operation .....	111
Operation Lamp Blinks .....	305
Operation Mode .....	93
Operation When Power is Turned On .....	159
Option List .....	357
Other Control .....	123
Outdoor Air Processing Unit-Field Setting .....	169
Outdoor Unit Fan Control in Cooling Operation .....	108
Outdoor Unit PC Board Layout .....	160
Outdoor Unit Rotation .....	123
Outdoor Unit Thermistors for Discharge Pipe .....	366
<b>P</b>	
P1 .....	271
P4 .....	272
PC Board Defect .....	221, 235, 297
Piping Installation Point .....	361
The Example of A Wrong Pattern .....	362
PJ .....	274
Power Supply Insufficient or Instantaneous Failure .....	277
Precautions for New Refrigerant (R-410A) .....	372
Pressure Sensor .....	367
Procedure and Outline .....	145
Protection Control .....	118
Pump-down Residual Operation .....	114
<b>R</b>	
Refrigerant Circuit .....	60
FXMQ125MFV1~250MFV1 .....	68
RXYQ10P, 12P .....	64
RXYQ14P, 16P, 18P .....	66
RXYQ5P .....	60
RXYQ8P .....	62
Refrigerant Cylinders .....	374
Refrigerant Flow for Each Operation Mode .....	74
RXYQ10P, 12P .....	82
RXYQ14P, 16P, 18P .....	86
RXYQ5P .....	74
RXYQ8P .....	78
Refrigerant Overcharged .....	249
Restart Standby .....	115
Reverse Phase, Open Phase .....	276
<b>S</b>	
Selection of Pipe Size, Joints and Header .....	363
Service Tools .....	375
Setting by pushbutton switches .....	178
Setting Contents and Code No. .....	164

---

Setting of Low Noise Operation and Demand	
Operation .....	191
Special Control .....	109
Specifications .....	12
Indoor Units .....	33
Outdoor Units .....	12
Standby .....	115
Startup Control .....	109
STD Compressor Overload Protection .....	122
Step Control of Outdoor Unit Fans .....	107
Stopping Operation .....	116
Symptom-based Troubleshooting .....	201
System is not Set yet .....	294

**T**

Test Operation .....	144
Procedure and Outline .....	145
The Example of A Wrong Pattern .....	362
Thermistor Resistance /	
Temperature Characteristics .....	365
Thermostat Sensor in Remote Controller .....	132
Troubleshooting	
(OP: Central Remote Controller) .....	297
Troubleshooting	
(OP: Unified ON/OFF Controller) .....	305

**U**

U0 .....	275
U1 .....	276
U2 .....	277
U3 .....	280
U4 .....	281
U5 .....	283
U7 .....	284
U8 .....	286
U9 .....	287
UA .....	288
UC .....	290
UE .....	291
UF .....	294
UH .....	295



# Drawings & Flow Charts

<b>A</b>			
Abnormal Discharge Pipe Temperature .....	248	Field Setting from Outdoor Unit .....	174
Abnormal Outdoor Fan Motor Signal .....	250	Mode changing procedure .....	178
Actuation of High Pressure Switch .....	236	Setting by dip switches .....	176
Actuation of Low Pressure Sensor .....	238	Freeze Prevention .....	136
Address Duplication of Centralized Controller .....	290	Functional Parts Layout .....	69
Address Duplication, Improper Setting .....	302		
<b>C</b>		<b>I</b>	
Centralized Control Group No. Setting .....	170	Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller .....	288
BRC1A Type .....	170	Improper Combination of Optional Controllers for Centralized Control .....	300
BRC4C Type .....	171	Inverter Compressor Abnormal .....	262
BRC7C Type .....	171	Inverter Compressor Motor Lock .....	240
BRC7E Type .....	171	Inverter Current Abnormal .....	264
Group No. Setting Example .....	171	Inverter Over-Ripple Protection .....	271
Check No. 1 .....	311	Inverter Start up Error .....	266
Check No. 2 .....	311		
Check Operation not executed .....	280	<b>L</b>	
Compressor Motor Overcurrent/Lock .....	242	Louver Control for Preventing Ceiling Dirt .....	131
Contents of Control Modes .....	172	Low Pressure Drop Due to Refrigerant Shortage or Electronic Expansion Valve Failure .....	275
How to Select Operation Mode .....	173		
Control of Outdoor Air Processing Unit (Unique Control for Outdoor Air Processing Unit) .....	138	<b>M</b>	
Discharge Air Temperature Control .....	139	Malfunction of Capacity Determination Device ...	230
Selection of Operation Mode (by suction air thermostat) .....	138	Malfunction of Discharge Pipe Thermistor (R3, R31~33T) .....	253
Current Sensor Malfunction .....	252	Malfunction of Drain Level Control System (S1L) .....	222
<b>D</b>		Malfunction of High Pressure Sensor .....	258
Display "Under Centralized Control" Blinks (Repeats Double Blink) .....	310	Malfunction of Inverter Radiating Fin Temperature Rise .....	260
Display "Under Centralized Control" Blinks (Repeats Single Blink) .....	307	Malfunction of Inverter Radiating Fin Temperature Rise Sensor .....	272
Display of sensor and address data .....	211	Malfunction of Liquid Pipe Thermistor (R6T) .....	256
Drain Level above Limit .....	229	Malfunction of Low Pressure Sensor .....	259
Drain Pump Control .....	129	Malfunction of Moving Part of Electronic Expansion Valve (Y1E) .....	227
When the Float Switch is Tripped and "AF" is Displayed on the Remote Controller .....	130	Malfunction of Moving Part of Electronic Expansion Valve (Y1E, Y2E) .....	246
When the Float Switch is Tripped During Heating Operation .....	130	Malfunction of Outdoor Unit Fan Motor .....	243
When the Float Switch is Tripped while the Cooling Thermostat is OFF.....	129	Malfunction of Subcooling Heat Exchanger Gas Pipe Thermistor (R5T) .....	257
When the Float Switch is Tripped While the Cooling Thermostat is ON .....	129	Malfunction of Swing Flap Motor (M1S) .....	225
<b>E</b>		Malfunction of System, Refrigerant System Address Undefined .....	295
Error of External Protection Device .....	220	Malfunction of Thermistor (R1T) for Outdoor Air .....	251
Example of connection (R-410A Type) .....	363	Malfunction of Thermistor (R1T) for Suction Air .....	233
<b>F</b>		Malfunction of Thermistor (R2T) for Heat Exchanger .....	231
Fan Motor (M1F) Lock, Overload .....	224	Malfunction of Thermistor (R2T), (R7T) for Suction Pipe .....	254
Faulty Field Setting after Replacing Main PC Board or Faulty Combination of PC Board .....	274	Malfunction of Thermistor (R3T) for Gas Pipes .....	232

Malfunction of Thermistor (R4T) for Outdoor Unit Heat Exchanger .....	255	Simplified Remote Controller .....	163
Malfunction of Thermostat Sensor in Remote Controller .....	234	BRC2A51, BRC2C51 .....	163
Malfunction of Transmission Between Centralized Controller and Indoor Unit .....	291	System is not Set yet .....	294
Malfunction of Transmission Between Indoor and Outdoor Units in the Same System .....	287	<b>T</b>	
Malfunction of Transmission Between Indoor Units .....	281	Test Operation .....	144
Malfunction of Transmission Between Inverter and Control PC Board .....	268	Thermostat Sensor in Remote Controller .....	132
Malfunction of Transmission Between Main and Sub Remote Controllers .....	286	Cooling .....	132
Malfunction of Transmission Between Optional Controllers for Centralized Control .....	298	Heating .....	133
Malfunction of Transmission Between Outdoor Units .....	284	Torque wrench .....	377
Malfunction of Transmission Between Remote Controller and Indoor Unit .....	283	Troubleshooting (OP: Central Remote Controller) .....	297
Method of Checking The Inverter's Power Transistors and Diode Modules .....	368	Troubleshooting (OP: Unified ON/OFF Controller) .....	305
<b>O</b>		Troubleshooting by Remote Controller .....	204
Operation Lamp Blinks .....	305	<b>W</b>	
Operation of The Remote Controller's Inspection / Test Operation Button .....	209	Weigher for refrigerant charge .....	380
Outdoor Unit PC Board Layout .....	160	Wired Remote Controller .....	161
<b>P</b>		Wireless Remote Controller - Indoor Unit .....	162
PC Board Defect .....	221, 235, 297	BRC4C type .....	162
Piping Diagrams .....	316	BRC7C type .....	162
Indoor Unit .....	320	BRC7E type .....	162
Outdoor Unit .....	316	Wiring Diagrams for Reference .....	324
Piping Installation Point .....	361	Field Wiring .....	329
The Example of A Wrong Pattern .....	362	Indoor Unit .....	332
Power Supply Insufficient or Instantaneous Failure .....	277	Outdoor Unit .....	324
Pressure Sensor .....	367		
<b>R</b>			
Refrigerant Flow for Each Operation Mode .....	74		
Refrigerant Overcharged .....	249		
Remote Controller Self-Diagnosis Function .....	212		
Remote Controller Service Mode .....	210		
Reverse Phase, Open Phase .....	276		
RXYQ10P, 12P .....	71		
RXYQ14P, 16P, 18P .....	73		
RXYQ5P .....	69		
RXYQ8P .....	70		
<b>S</b>			
Self-diagnosis by Wired Remote Controller .....	205		
Self-diagnosis by Wireless Remote Controller .....	206		
Setting of Low Noise Operation and Demand Operation .....	191		
Image of operation in the case of A .....	192, 194		
Image of operation in the case of A and B .....	192, 194		
Image of operation in the case of B .....	192, 194		

**Warning**



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

### Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107



JQA-1452

#### About ISO 9001

ISO 9001 is a plant certification system defined by the International Organization for Standardization (ISO) relating to quality assurance. ISO 9001 certification covers quality assurance aspects related to the "design, development, manufacture, installation, and supplementary service" of products manufactured at the plant.



EC99J2044

#### About ISO 14001

ISO 14001 is the standard defined by the International Organization for Standardization (ISO) relating to environmental management systems. Our group has been acknowledged by an internationally accredited compliance organisation as having an appropriate programme of environmental protection procedures and activities to meet the requirements of ISO 14001.

### Dealer

#### **DAIKIN INDUSTRIES, LTD.**

Head Office:  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:  
JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan

[http://www.daikin.com/global\\_ac/](http://www.daikin.com/global_ac/)

©All rights reserved